
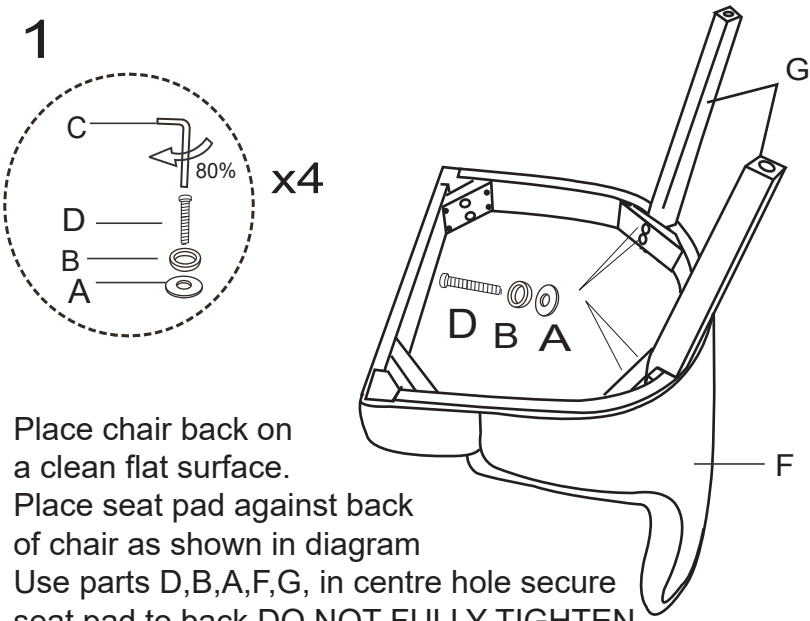
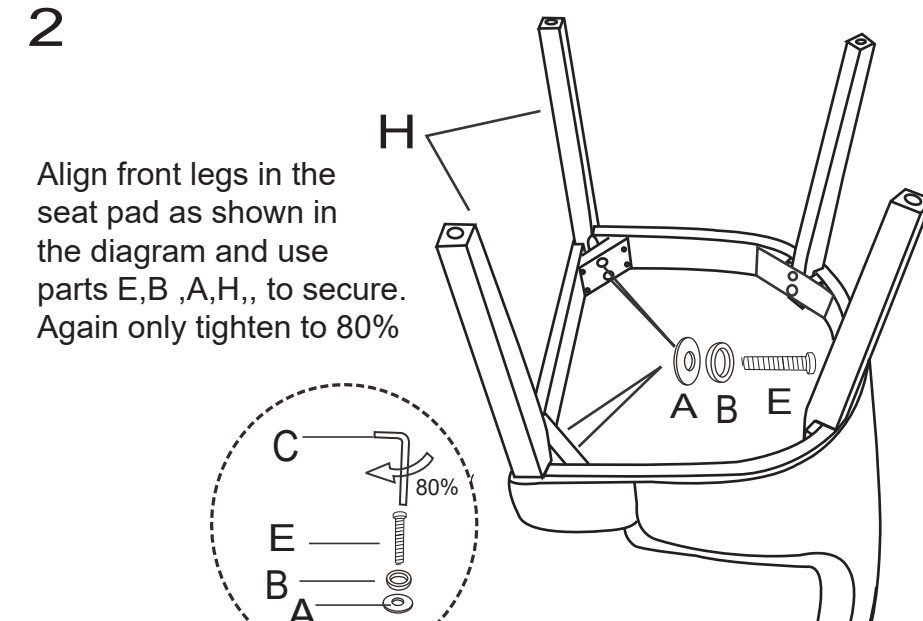




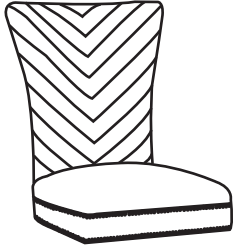
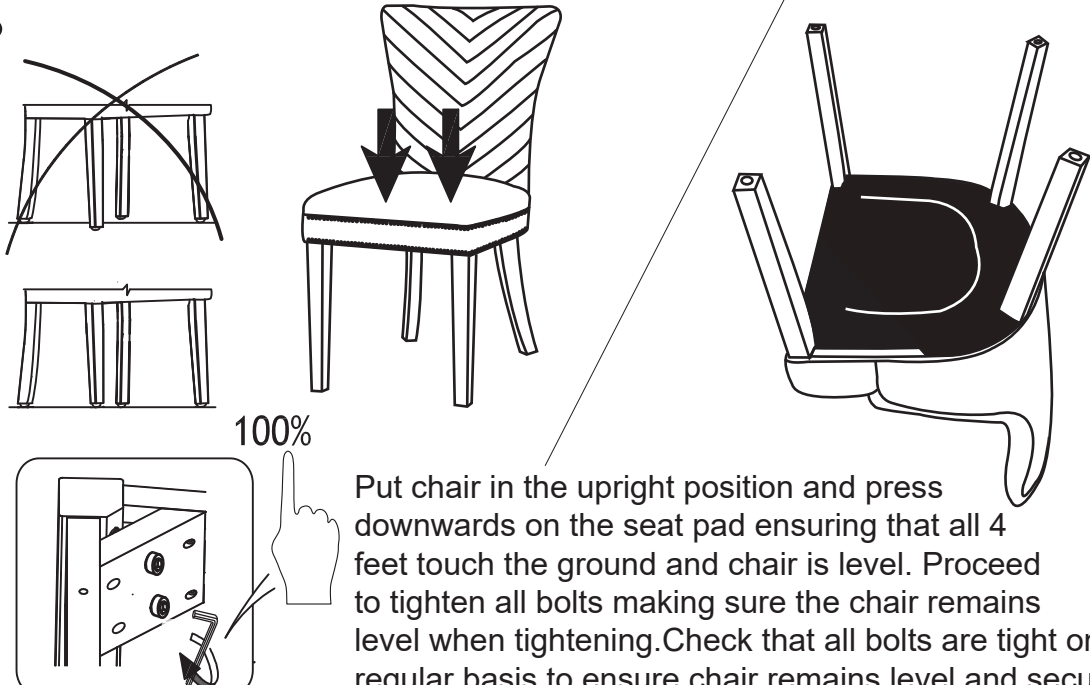






ASSEMBLY INSTRUCTION

Ax8	 $\Phi 8$	<p>1</p>  <p>Place chair back on a clean flat surface. Place seat pad against back of chair as shown in diagram. Use parts D,B,A,F,G, in centre hole secure seat pad to back DO NOT FULLY TIGHTEN, Only to 80% at this stage.</p>	<p>2</p>  <p>Align front legs in the seat pad as shown in the diagram and use parts E,B ,A,H,, to secure. Again only tighten to 80%</p>
Bx8	 $\Phi 8$		
Cx1	 M8		
Dx4	 M8x55MM		
Ex4	 M8x60MM		
Fx1		<p>3</p>  <p>Put chair in the upright position and press downwards on the seat pad ensuring that all 4 feet touch the ground and chair is level. Proceed to tighten all bolts making sure the chair remains level when tightening. Check that all bolts are tight on a regular basis to ensure chair remains level and secure</p>	
Gx2	 		
Hx2	 		
			<p>4</p> 