


Assembly Instructions

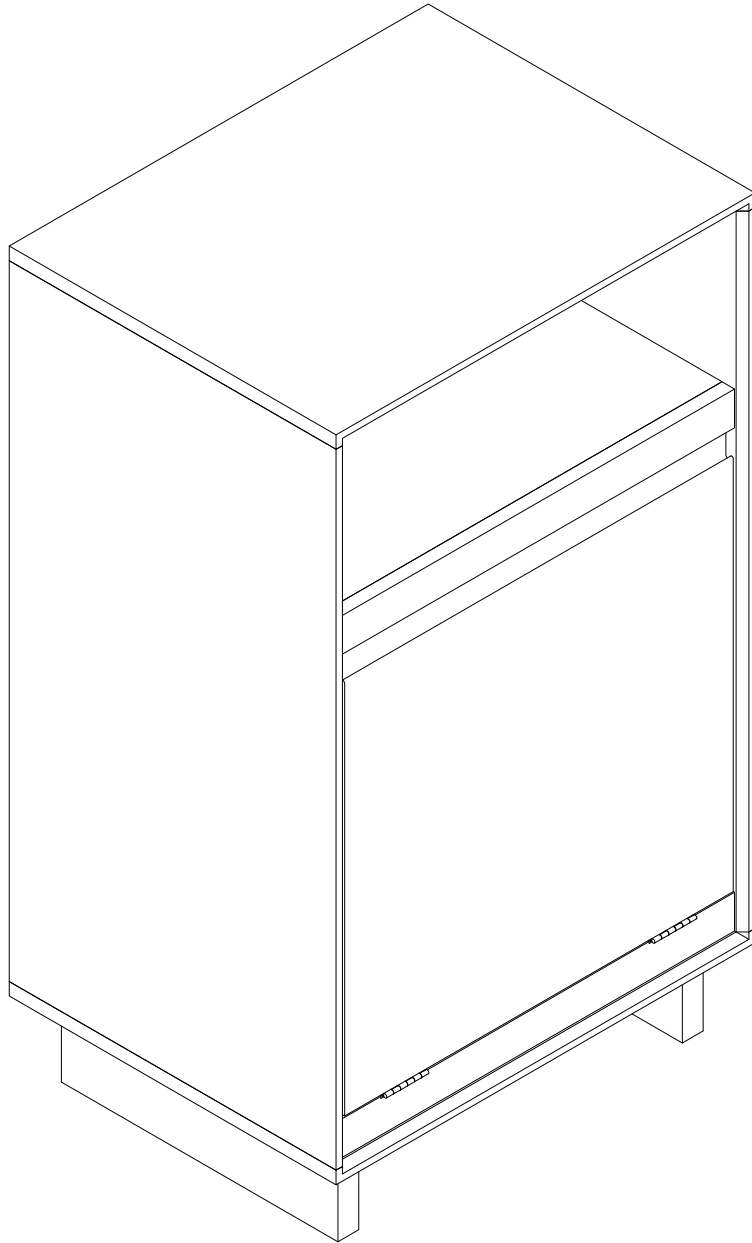

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

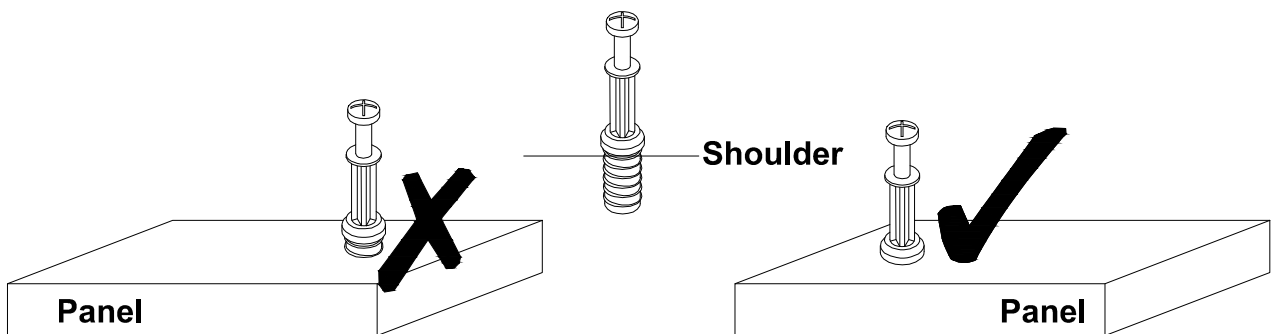


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

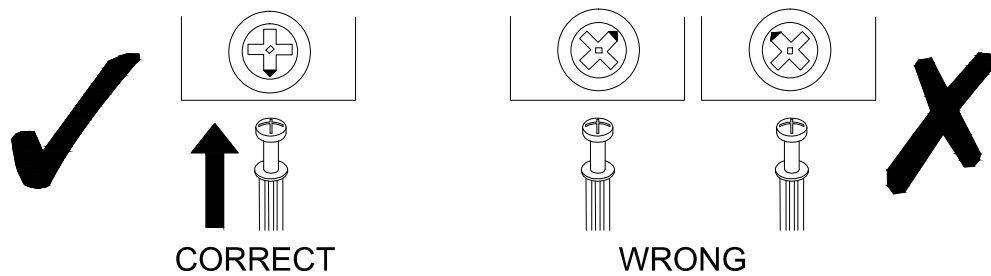


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

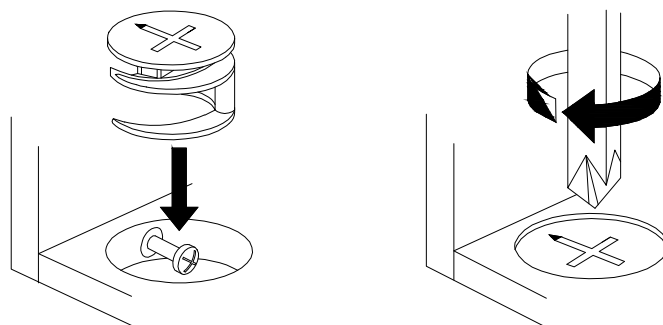

Turn cam lock clockwise to tighten.

Product structure

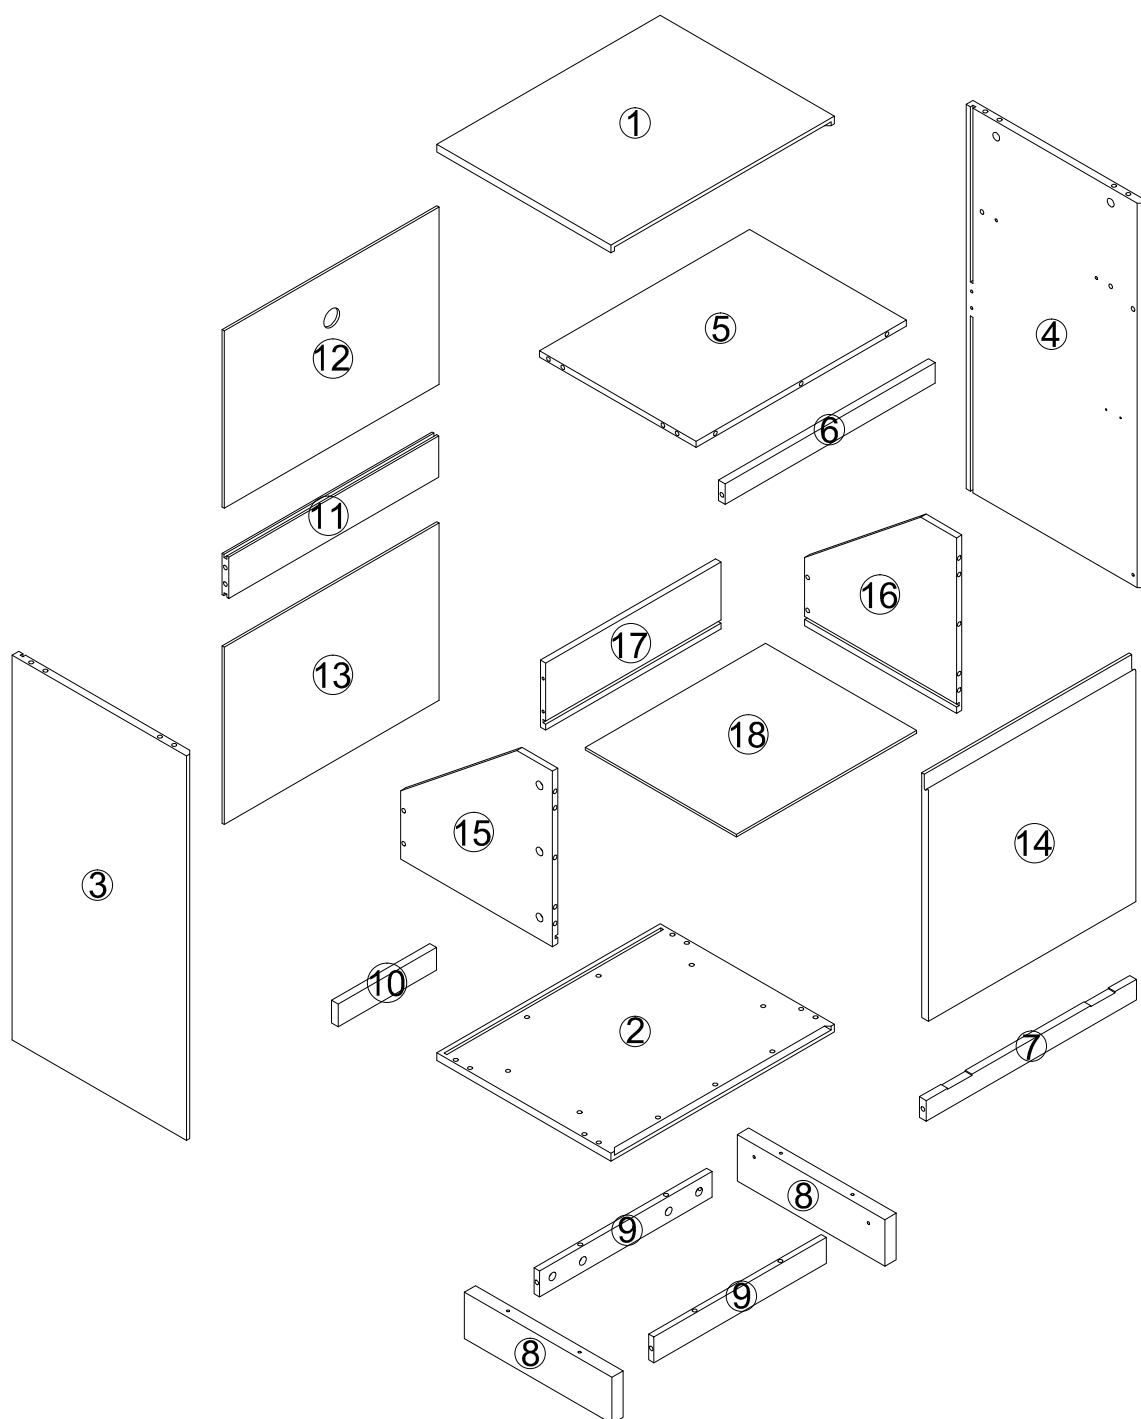

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A

Quantity: 30 Pcs
Cam Lock Dowel
8*28mm

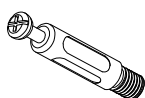

No. B

Quantity: 30 Pcs
Cam
φ15




No. C

Quantity: 30 Pcs
Sticker
Ø20




No. D

Quantity: 20 Pcs
Dowel
8*30mm



No. E

Quantity: 1 Sets

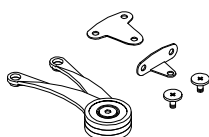

No. F

Quantity: 14 Pcs
Screw
M3.5*14mm




No. G

Quantity: 16 Pcs
Screw
M6*40mm



No. H

Quantity: 2 Pcs

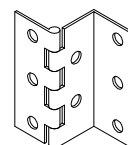


No. I

Quantity: 4 Pcs
Foot Pad
Ø15




No. J

Quantity: 1 Pc
Allen Key
4#



No. K

Quantity: 8 Sets
Plastic Wedge




No. L

Quantity: 1 Sets
Anti-falling Parts




No. M

Quantity: 1 Sets
Cabinet Door Rebounder

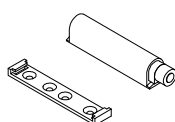

STEP 1

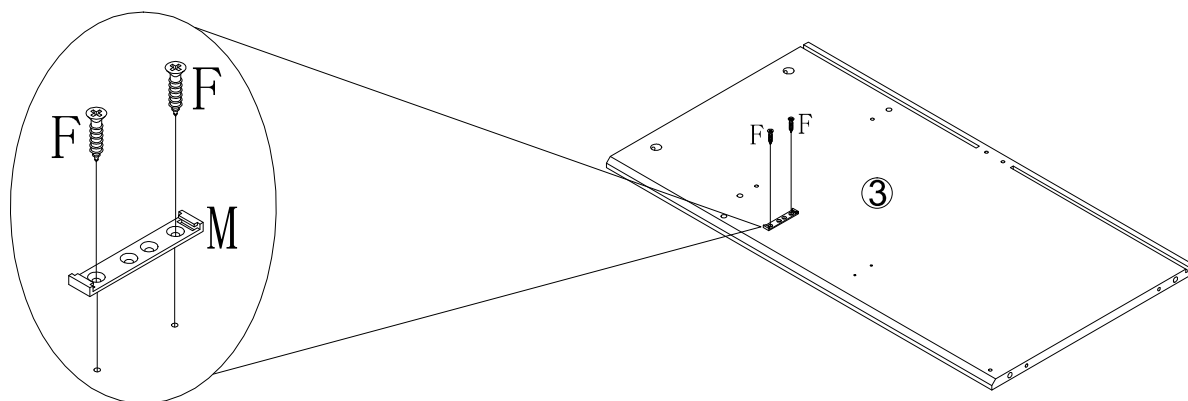


Note: Please distinguish the numbering of the screws.


No. F
Quantity: 2 Pcs
M3.5*14mm



No. M
Quantity: 1 Pc




STEP 2


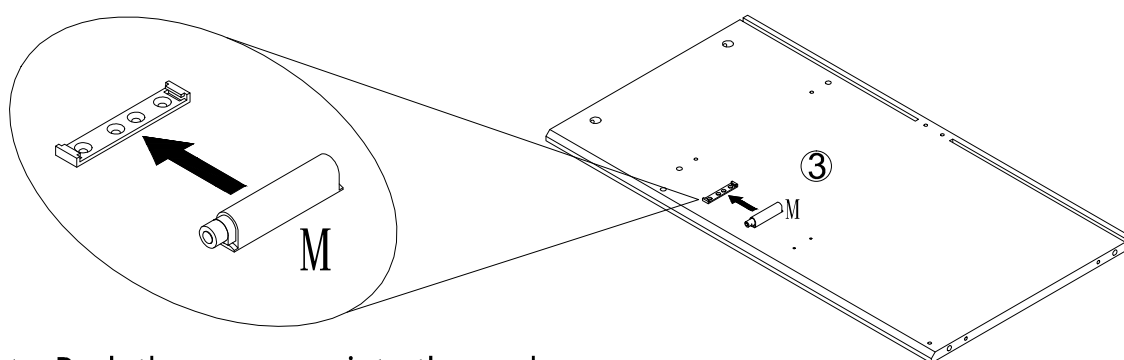


Note: Push the accessory into the card slot to complete the installation.

No. M
Quantity: 1 Pc




STEP 3

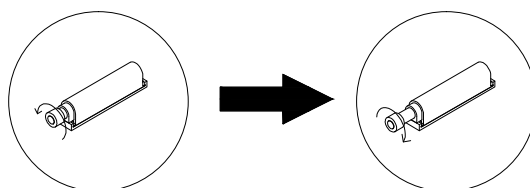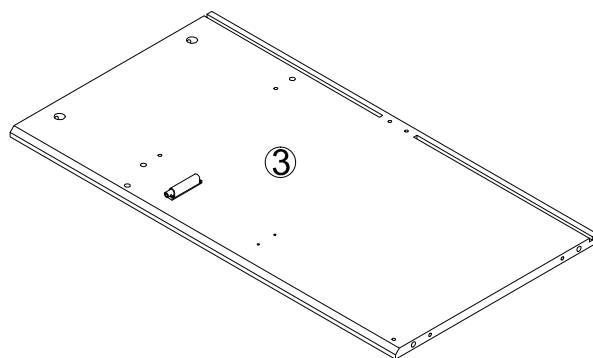


Note: The hardware can be rotated to adjust the length here. If the cabinet body is assembled and the door panel is recessed or protruding, it be adjusted by turning.

STEP 4

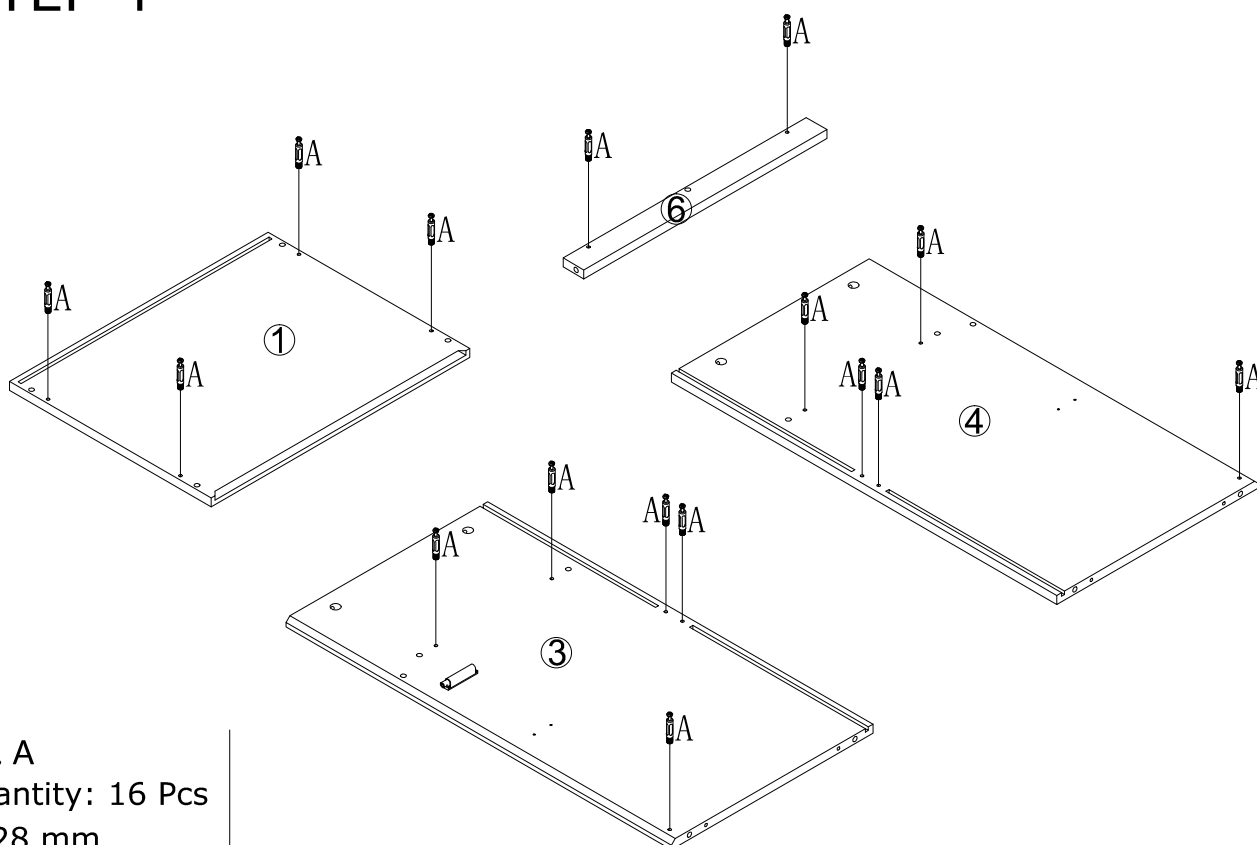

No. A
Quantity: 16 Pcs
8*28 mm



STEP 5



No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20



No. D
Quantity: 1 Pc
8*30mm

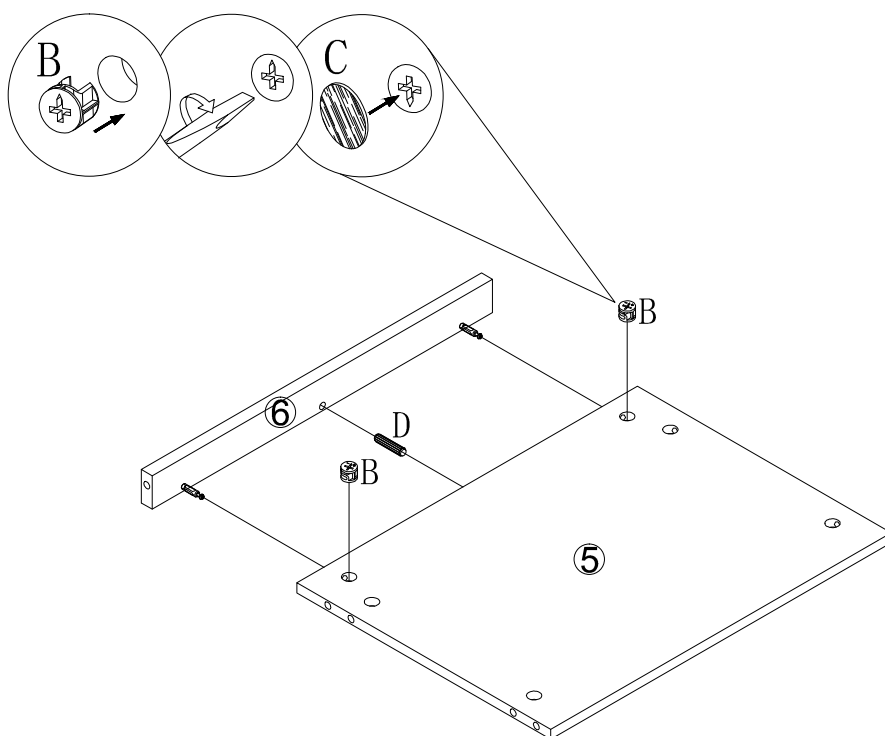

STEP 6



No. B
Quantity: 5 Pcs
Ø15



No. C
Quantity: 5 Pcs
Ø20



No. D
Quantity: 3 Pcs
8*30mm

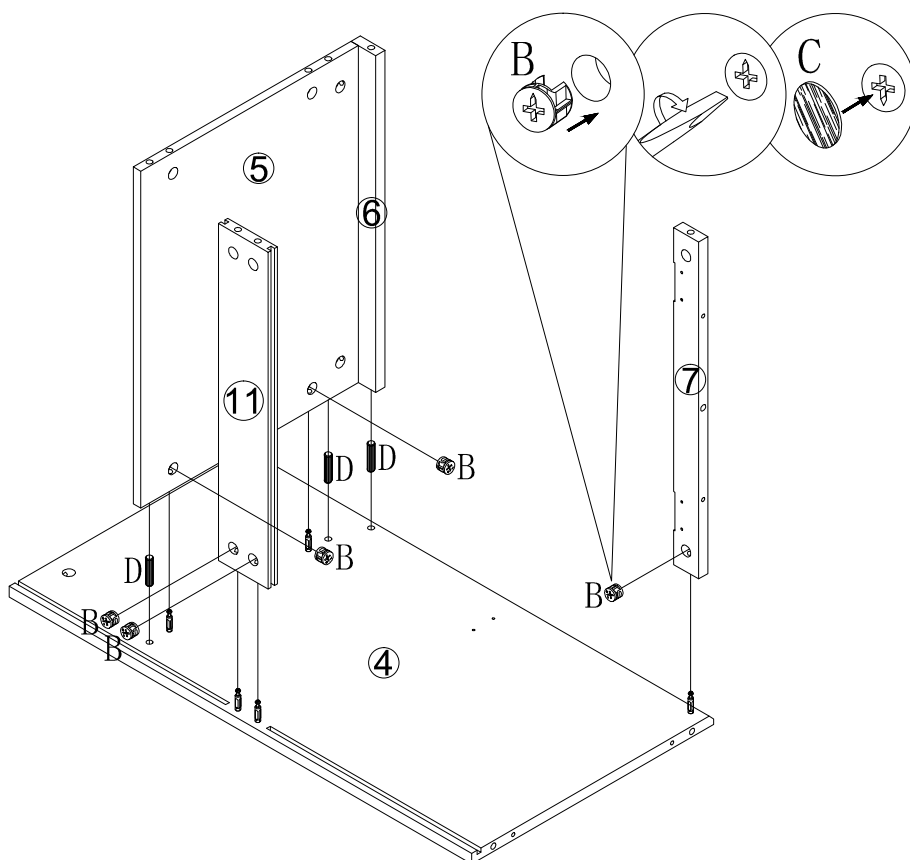

STEP 7



No. B
Quantity: 5 Pcs
Ø15




No. C
Quantity: 5 Pcs
Ø20



No. D
Quantity: 3 Pcs
8*30mm

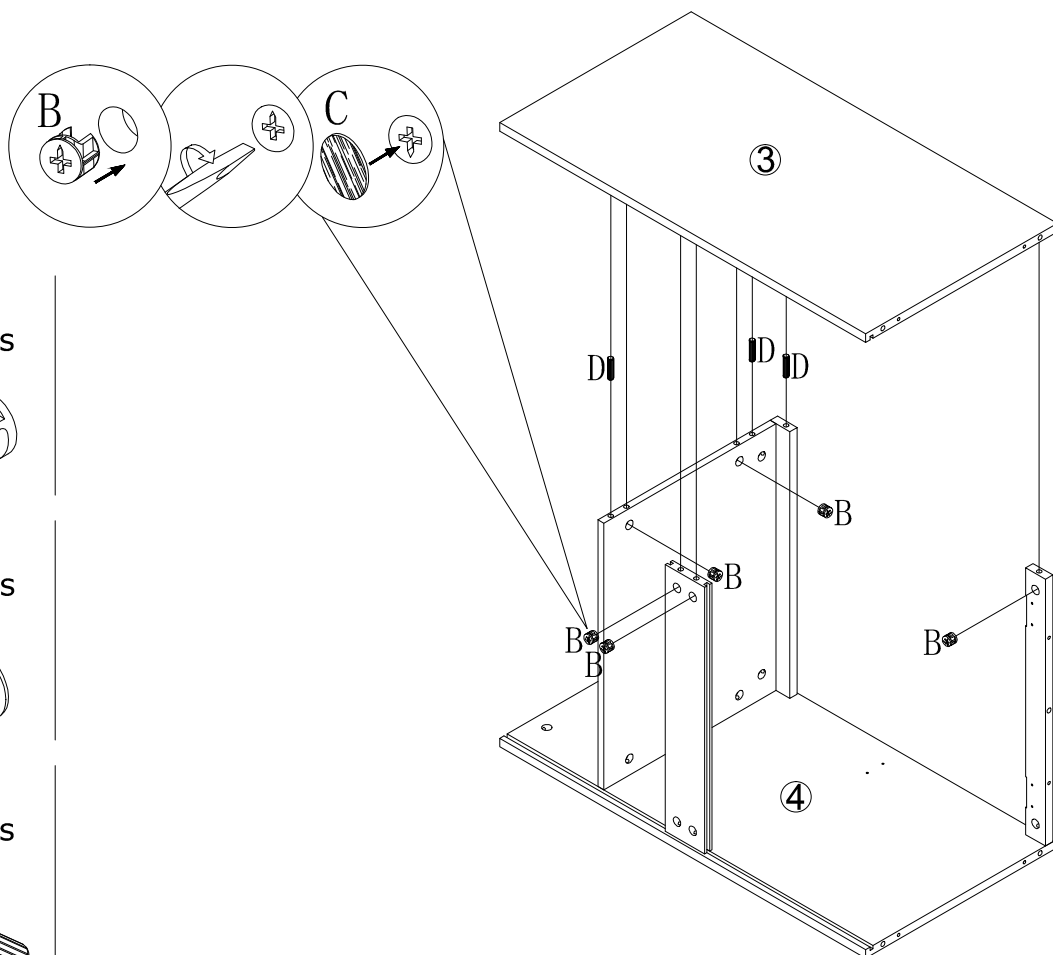

STEP 8

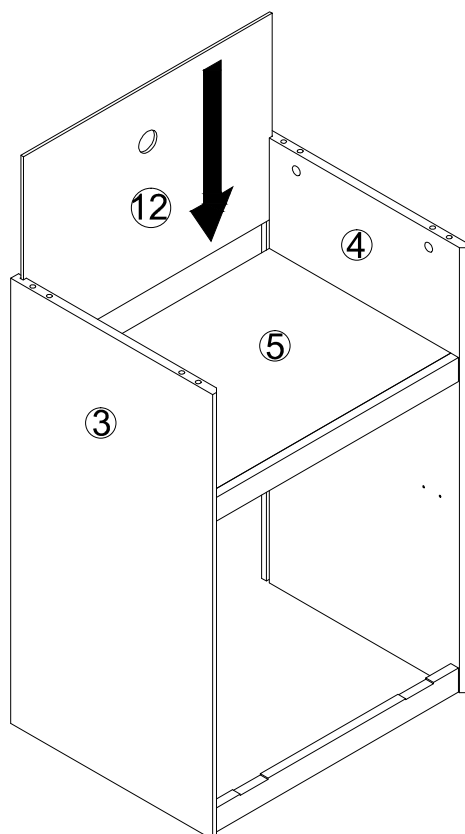

STEP 9



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm

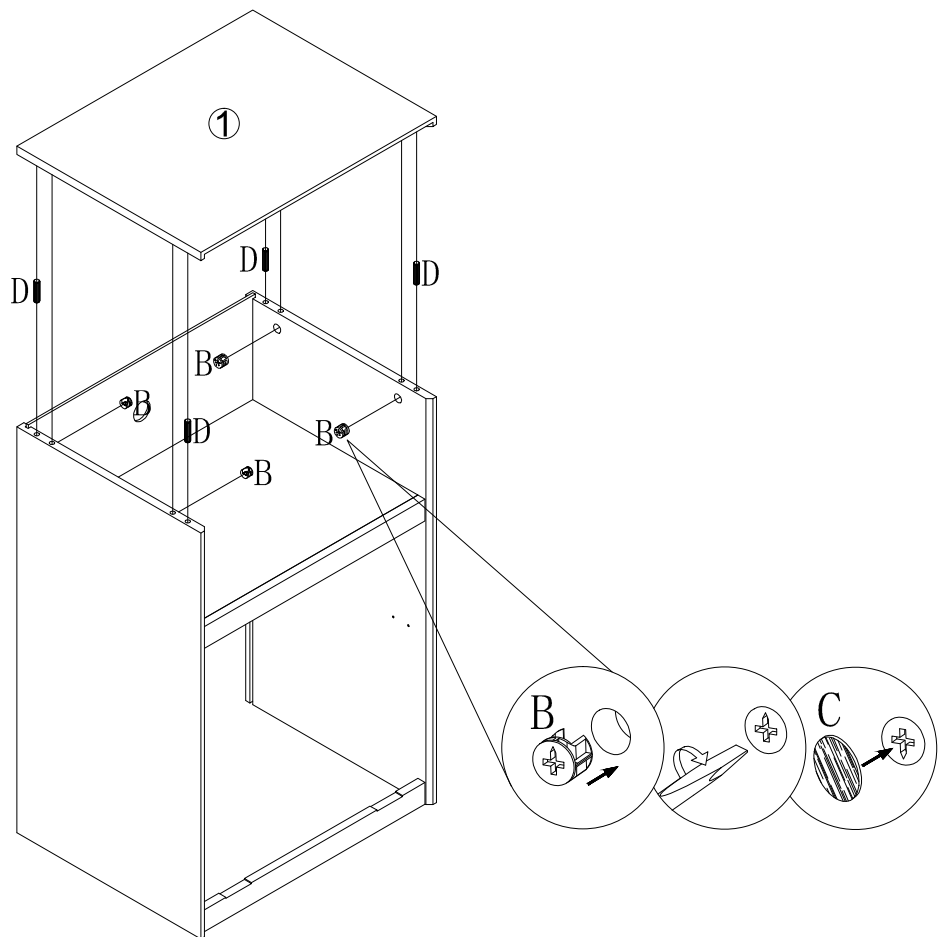

STEP 10

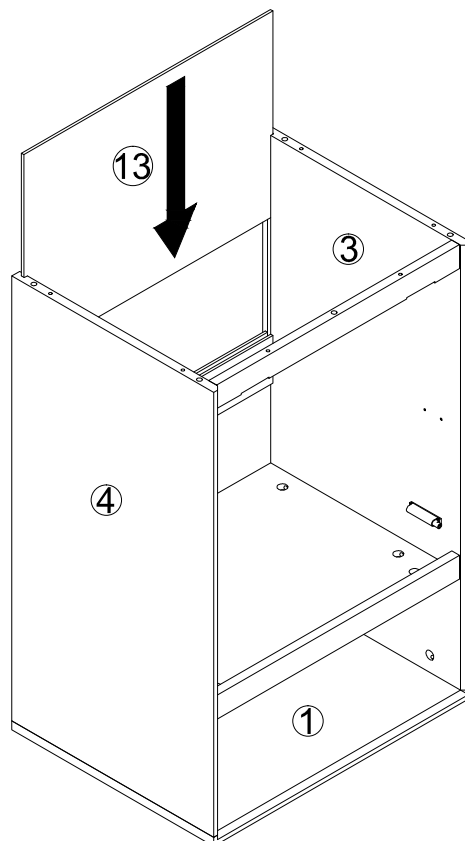


STEP 11

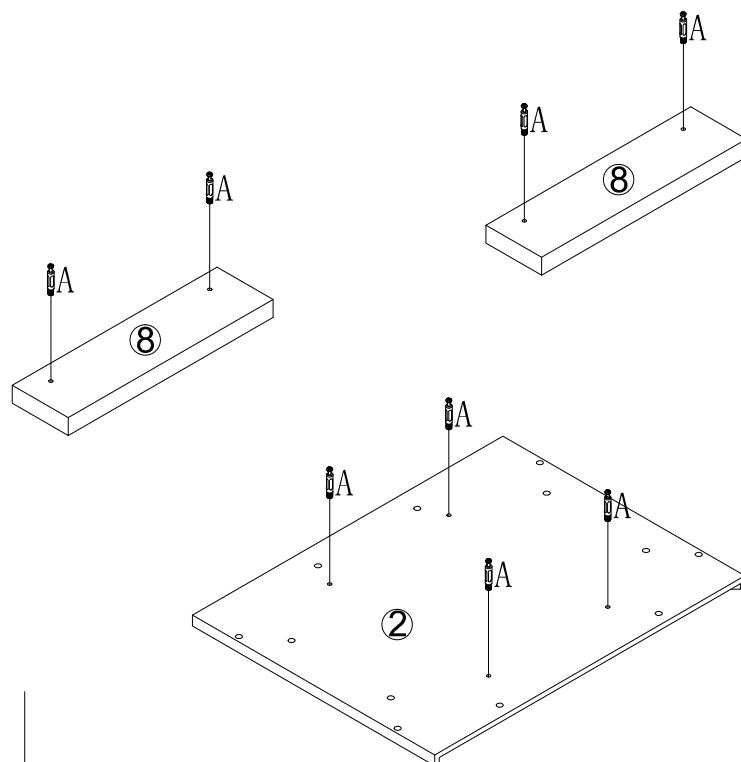

No. A
Quantity: 8 Pcs
8*28 mm



STEP 12

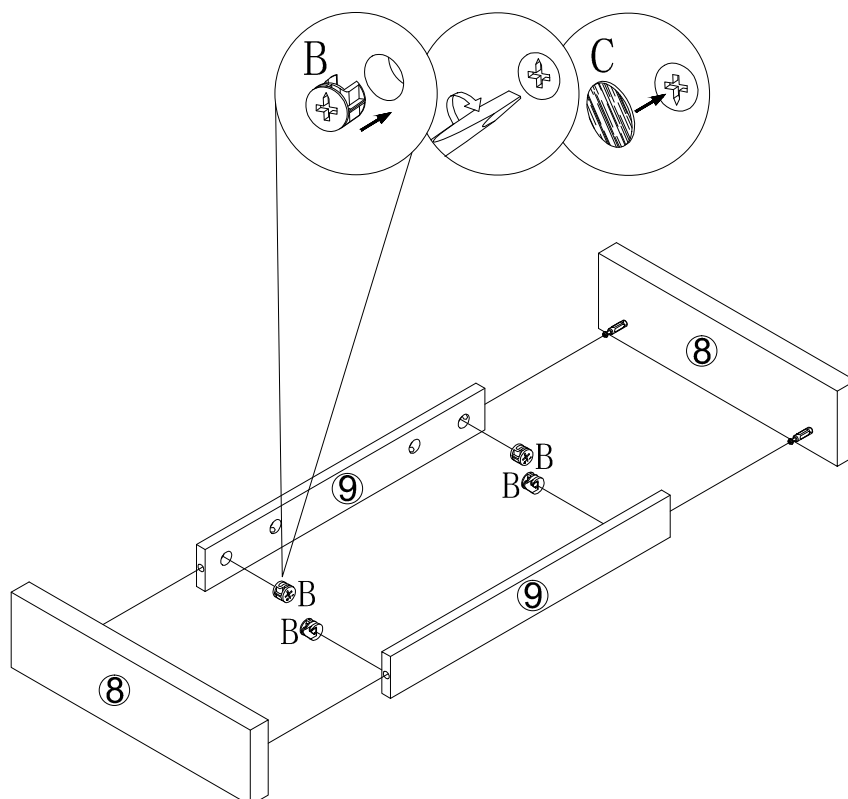


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 13

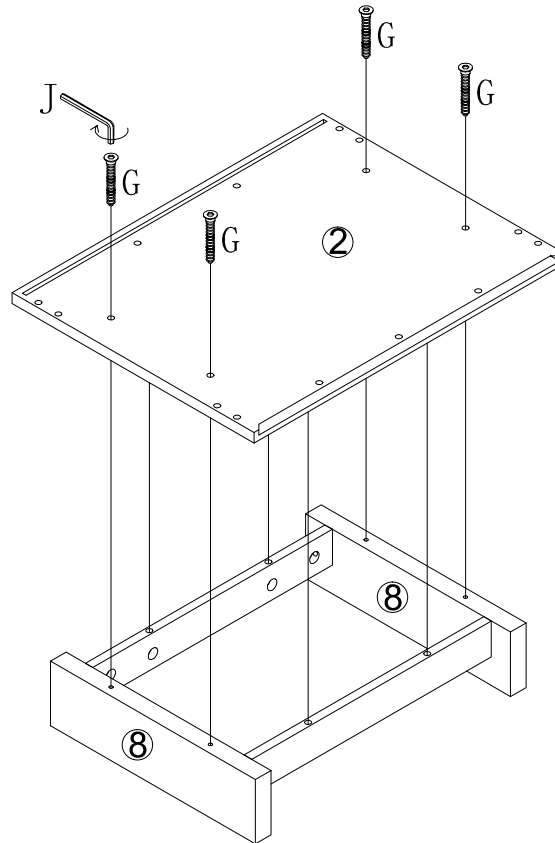


No. G
Quantity: 4 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#



STEP 14

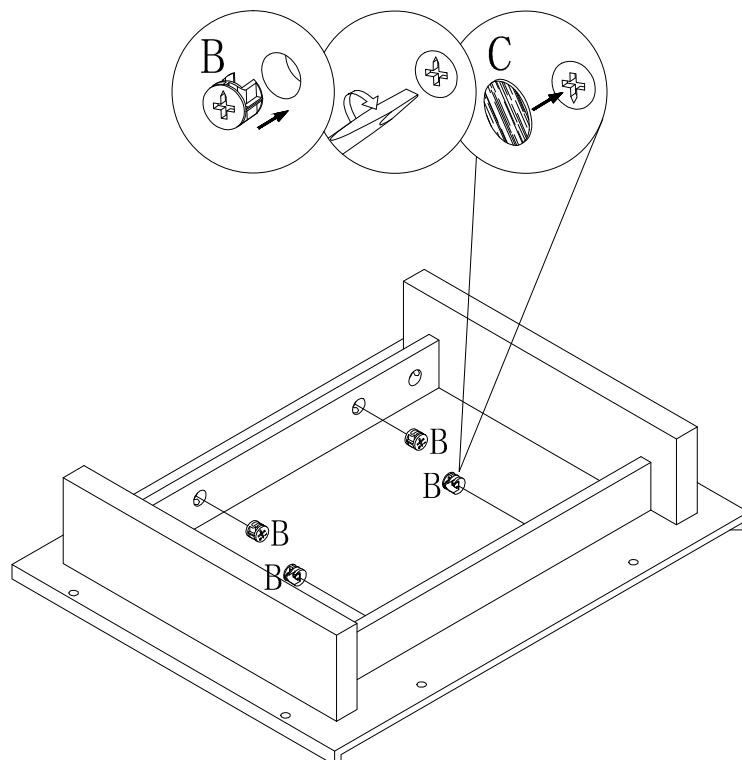

No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20





STEP 15

No. G
Quantity: 2 Pcs
M6*40mm




No. J
Quantity: 1 Pc
4#

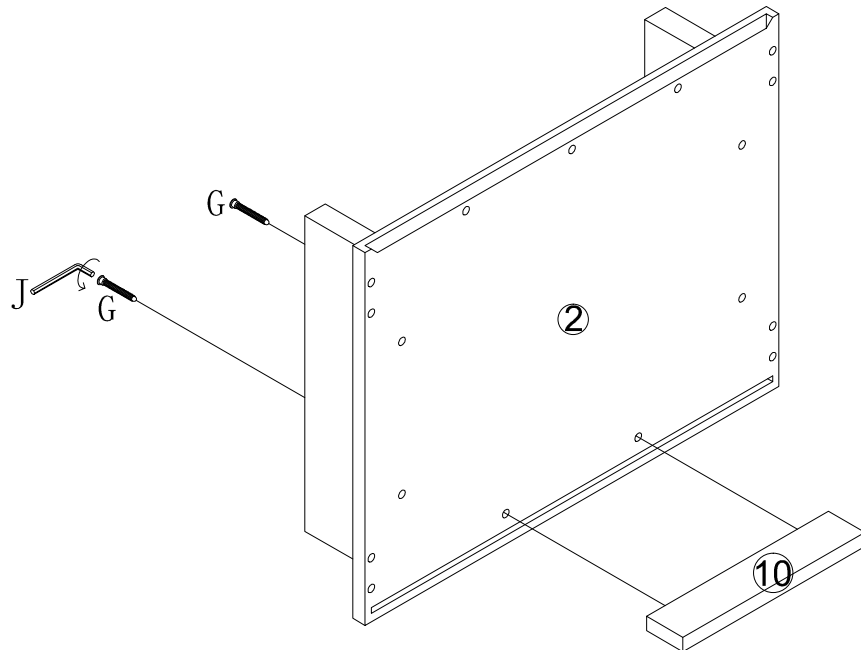

STEP 16


No. D
Quantity: 5 Pcs
8*30mm




No. G
Quantity: 6 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#

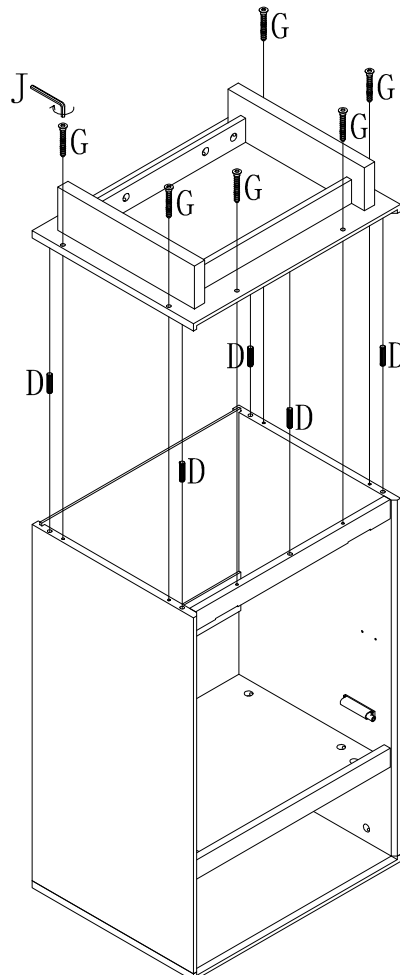

STEP 17

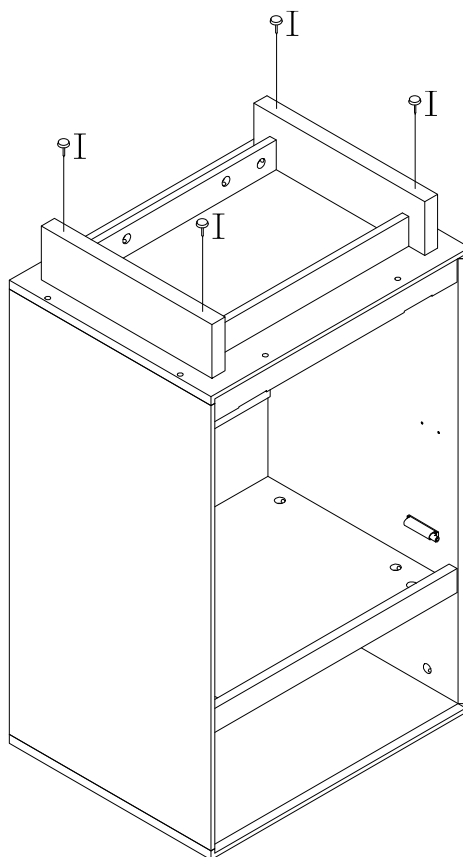

No. I
Quantity: 4 Pcs
Ø15



STEP 18



No. A
Quantity: 6 Pcs
8*28 mm




No. F
Quantity: 4 Pcs
M3.5*14mm



No. H
Quantity: 2 Pcs

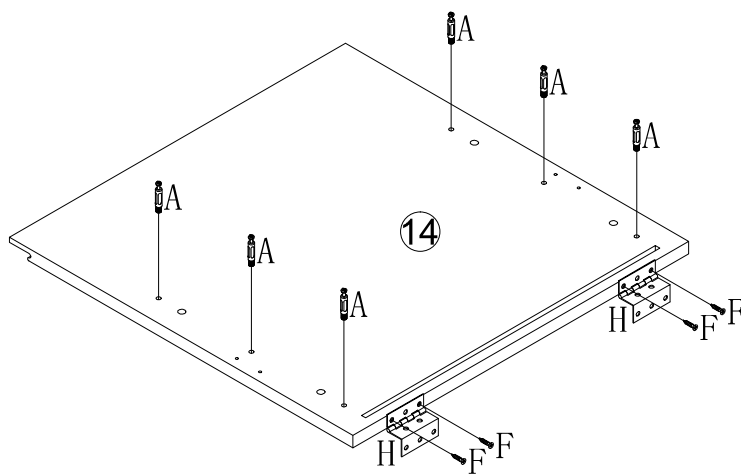


STEP 19

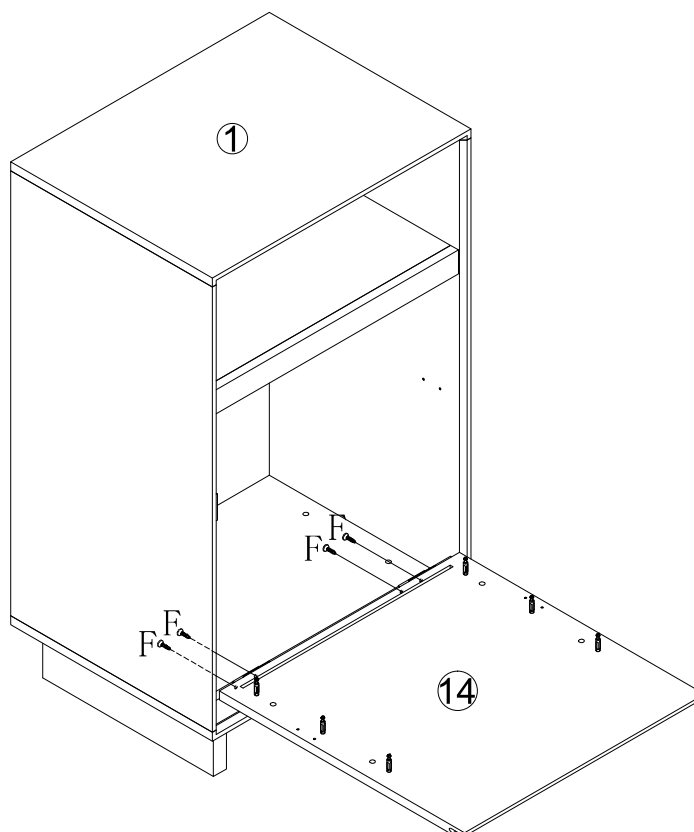

No. F
Quantity: 4 Pcs
M3.5*14mm



STEP 20

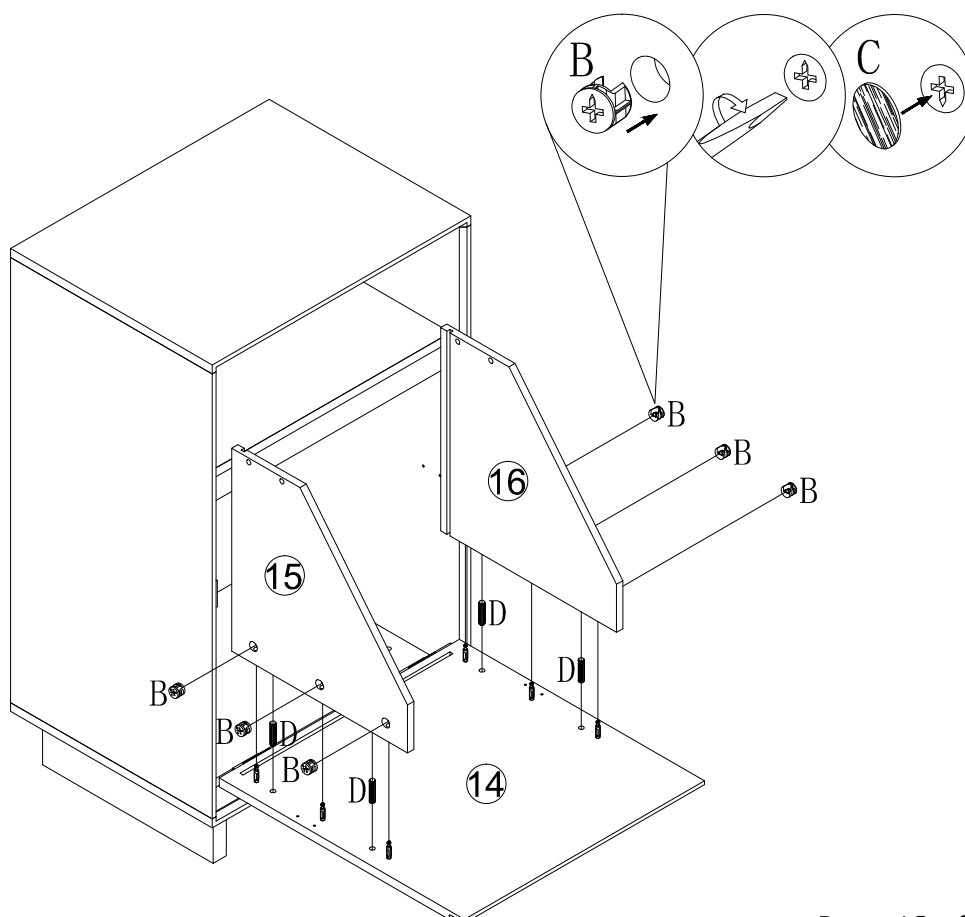


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm



STEP 21

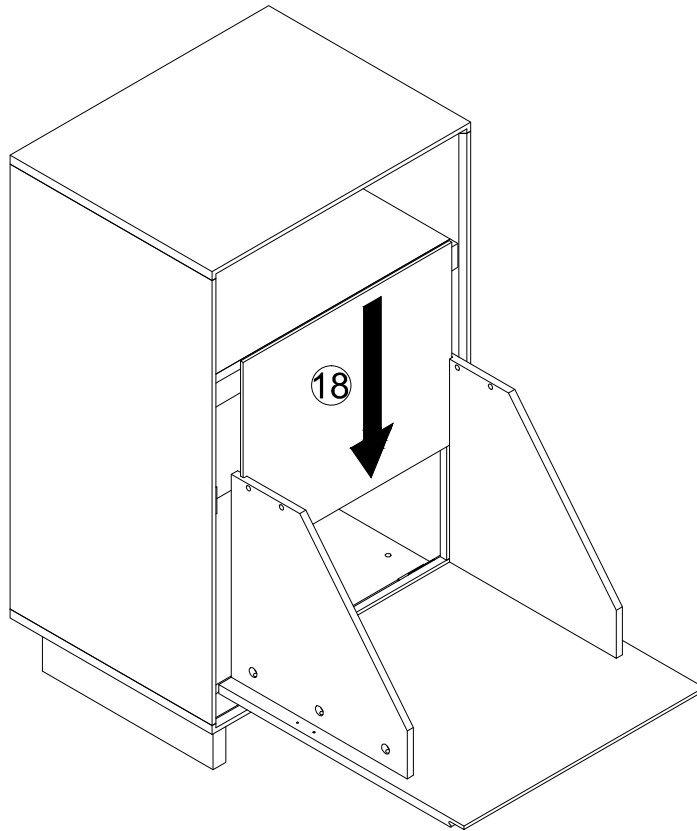

STEP 22

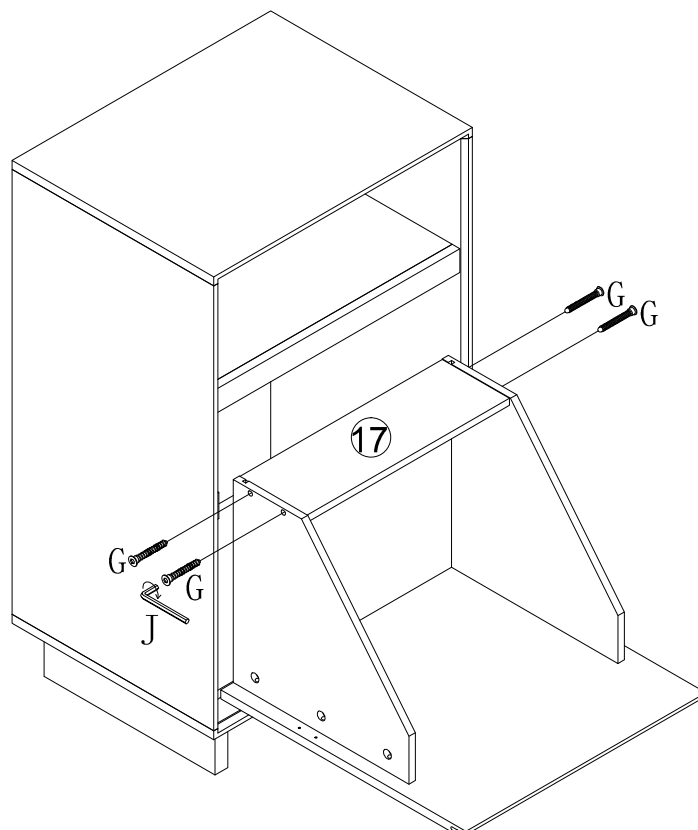



No. G
Quantity: 4 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#




STEP 23

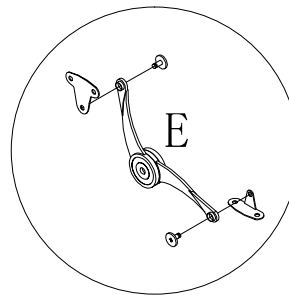
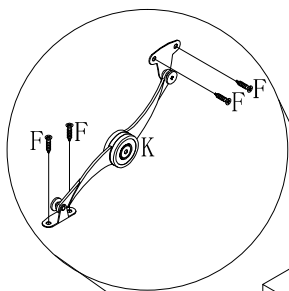


Please first open the hardware 'E' for assembly, and assemble according to the enlarged diagram. Please pay attention to the installation direction.

No. E
Quantity: 1 Sets



No. F
Quantity: 4 Pcs
M3.5*14mm

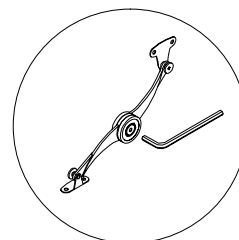
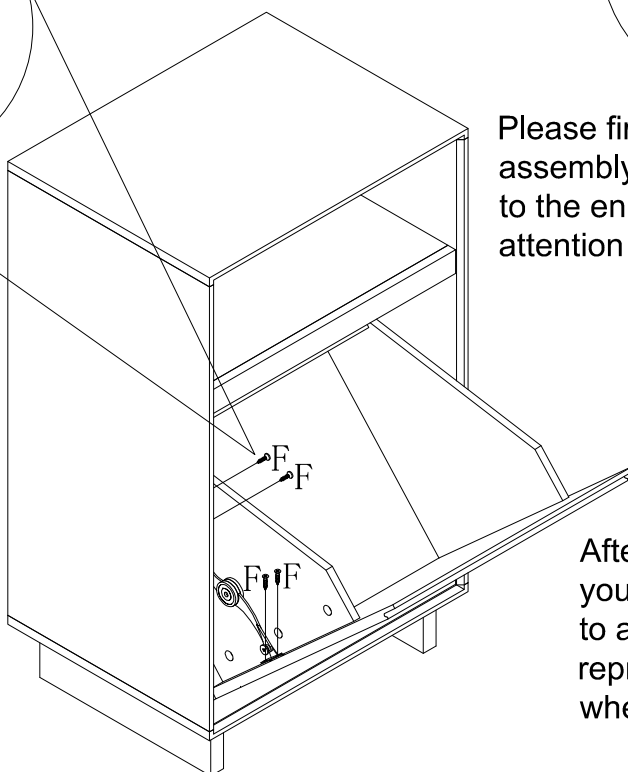


After the installation is complete, you can use the built-in wrench to adjust its tightness, which represents the force and speed when the door panel opens.

STEP 24



“DO NOT skip Step 24. The Plastic Wedges (K) are crucial for the stability of the cabinet.”

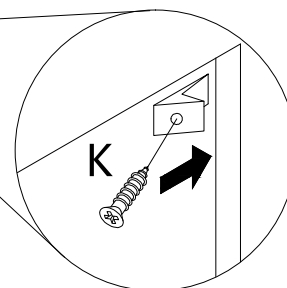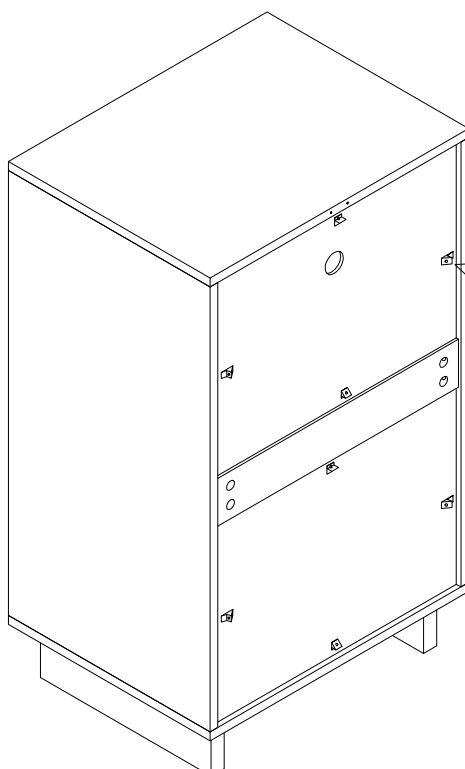

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. K
Quantity: 8 Sets




STEP 25









WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

WALL

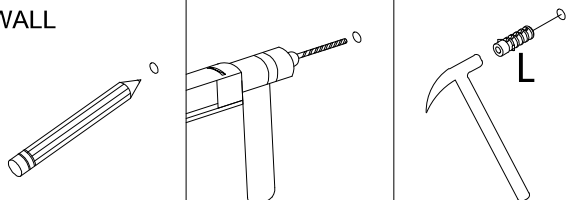


1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

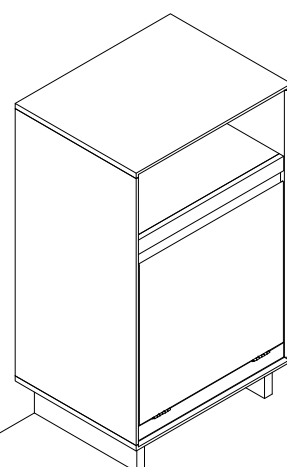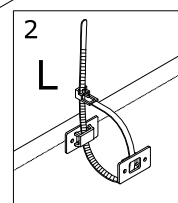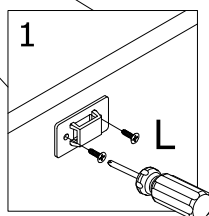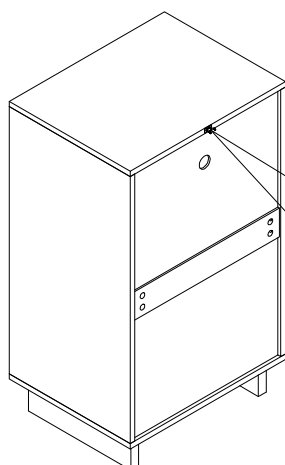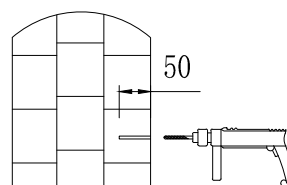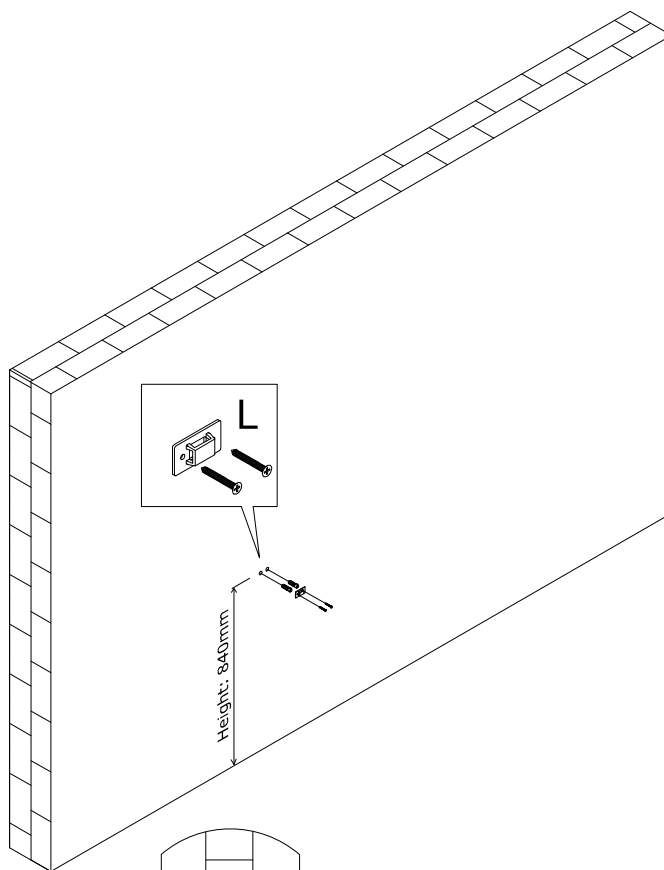

No. L

Quantity: 1 Sets

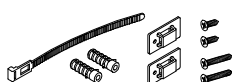

Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.