
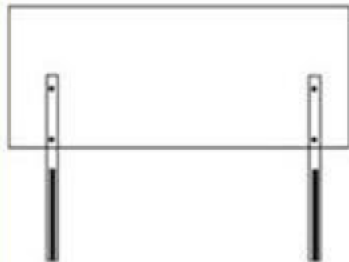


# HEADBOARD ASSEMBLING INSTRUCTIONS

Remove Headboard From Box  
Unpack Polythene Cover

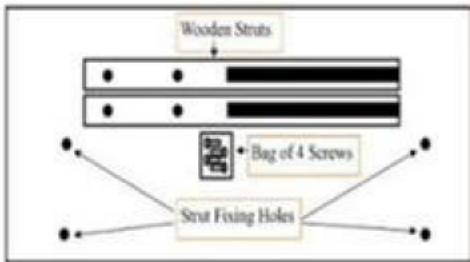

Locate Two Screw Holes On The End Of The Bed  
Fix Assembled Headboard To The Bed With Screws  
Provided By Your Bed Supplier

Align Strut fixing Holes Over  
Headboard Fixing Holes  
Insert Screws Provided Tighten  
First by Hand And Then By  
Screwdriver

