

Barber Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork

Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

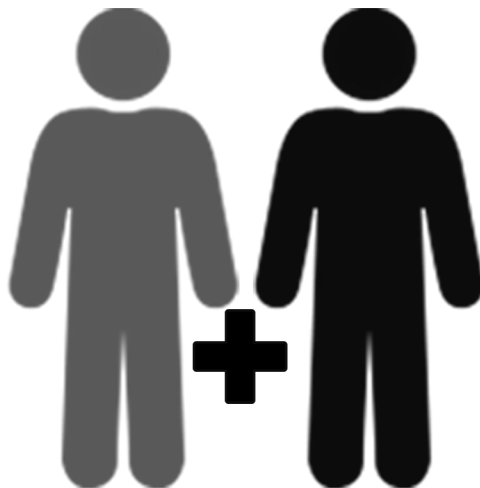


Components

Step 1

Check all parts you received.


Part List

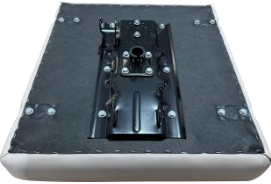				
Ax1	Bx2		Cx1	Dx1
				
Ex6	Fx4	Gx1	Hx1	Ix1
				
Jx1	Kx1	Mx1		

Assembly Instructions


Step 2

Insert threaded bolts on bottom of pump "K" into the holes on top of base "G". Tighten and lock the 6 nuts onto the threaded bolts

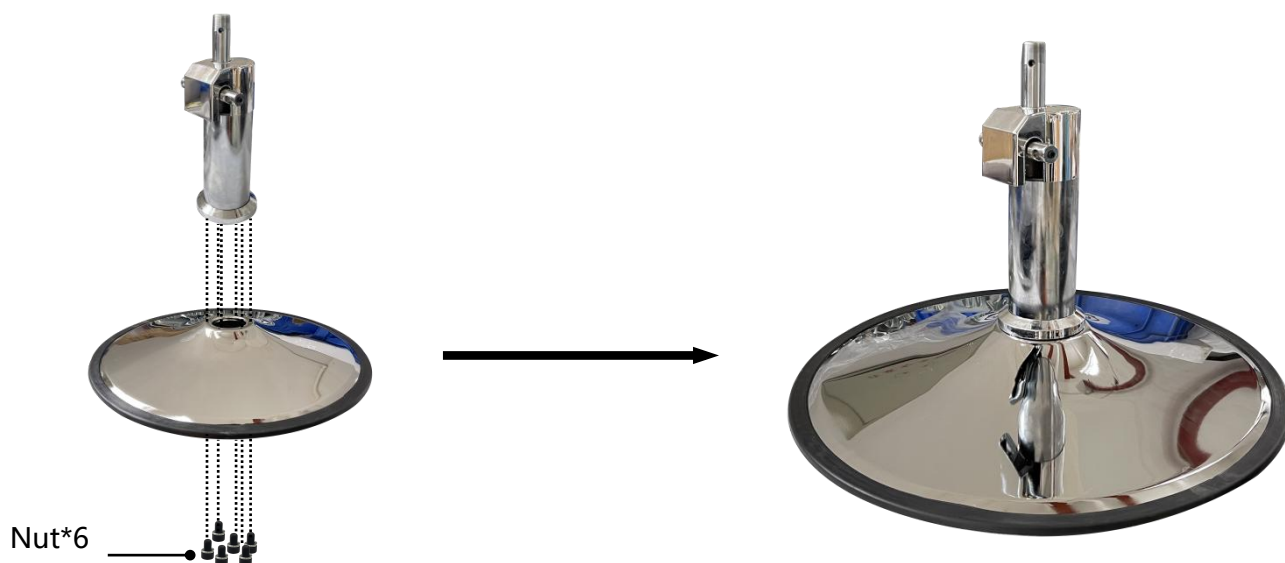

Step 3

Insert foot bar "J" into the assembled hydraulic pump "K", tighten the black set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)

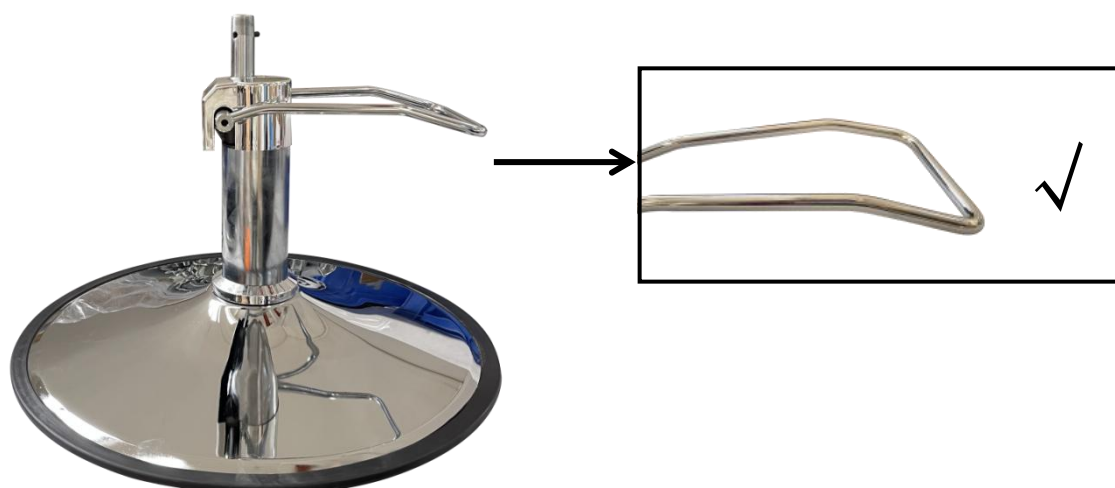

Assembly Instructions


Step 4

Unscrew the screws on both sides of the armrests "B", assemble connecting iron "F" to armrests using these screws. Tighten the screws securely. Tighten.(Noted: The direction of connecting iron)



Step 5

Unscrew the screws on the seat cushion "A", assemble the armrests "B" to seat cushion by those screws, and tighten them securely. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)

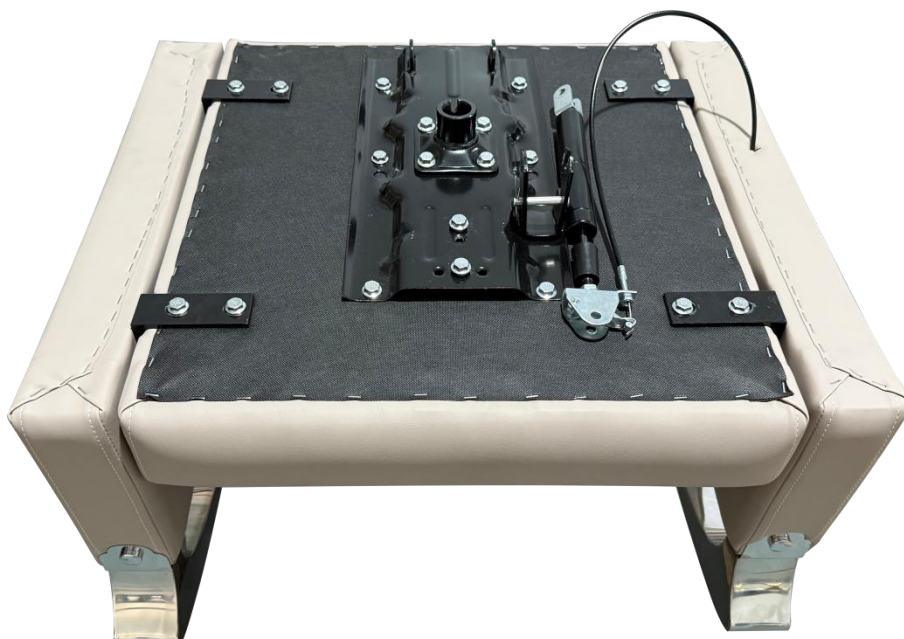

Assembly Instructions


Step 6

Firstly: Loosen the 2 embedded silver screws on the both sides of the round tube under the bottom of the backrest iron "M". Photo ① for reference.

Secondly: Attach the backrest iron to the assembled chair seat, then tighten it using the 2 silver screws from the previous step. (Note: Also tighten the two screws in the middle of the round tube.) Refer to Photos ① and ②.

Finally: Loosen the nut and bolt on the backrest iron, then connect the gas pump to the backrest iron with the aforementioned nut and bolt as shown in Photo ③.

The first step is to tighten the screws on both sides. Step two tighten the two screws on the top.

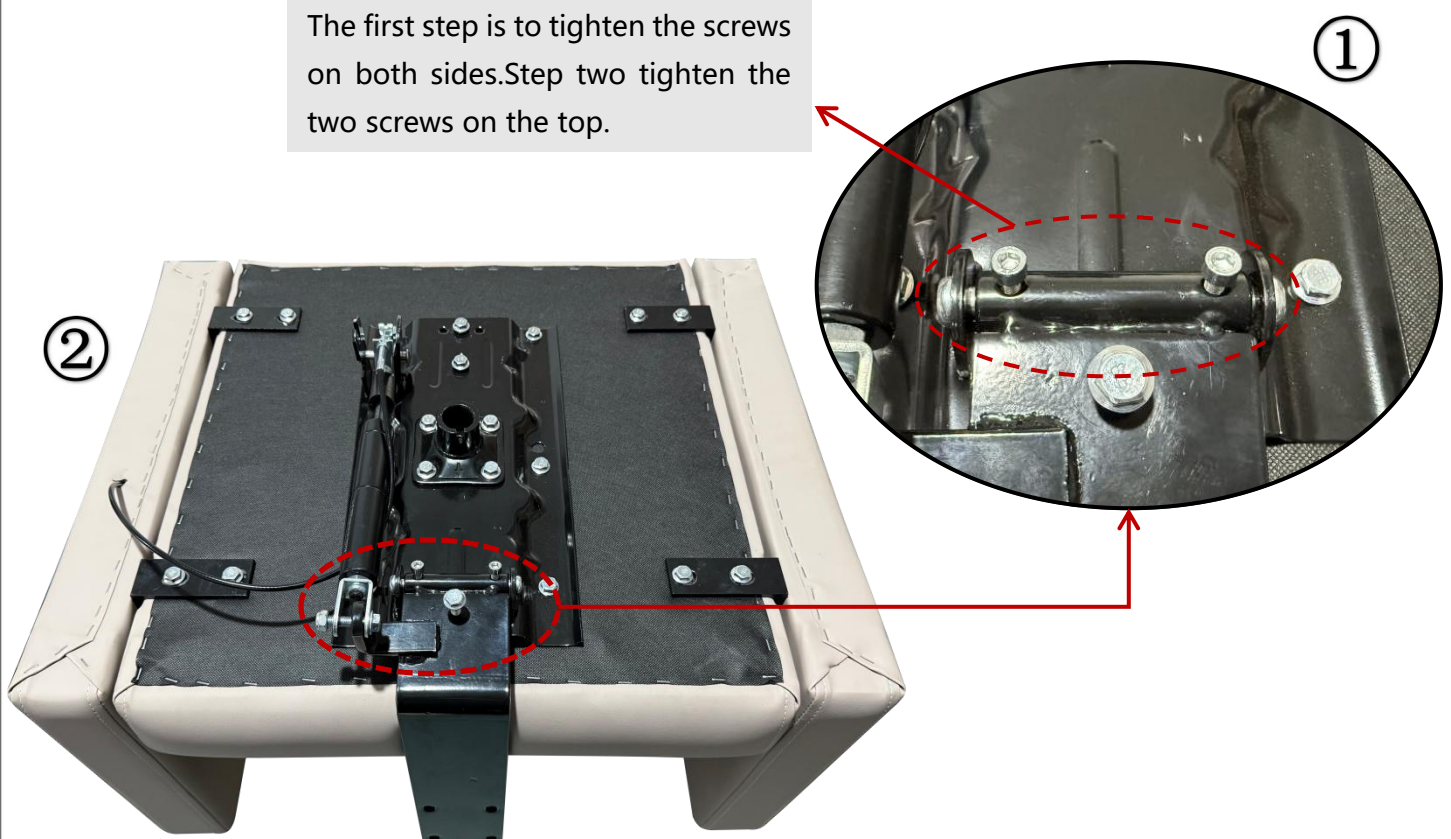


Assembly Instructions




Unscrew the bolt on the black metal of the seat cushion "A" , assemble the one side of gas pump as picture by the bolt, and bend one end of the dowel.

③

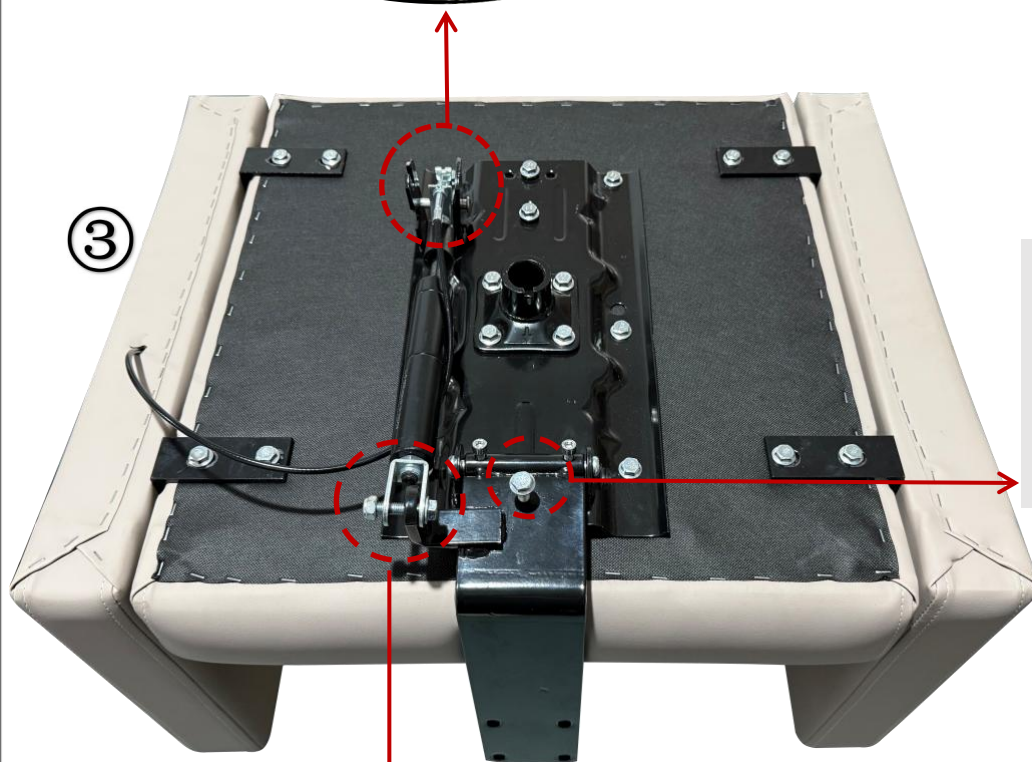

Note: Tighten these screws after assembling the gas pump. It controls the angle of the backrest "M" (i.e., the backrest angle).

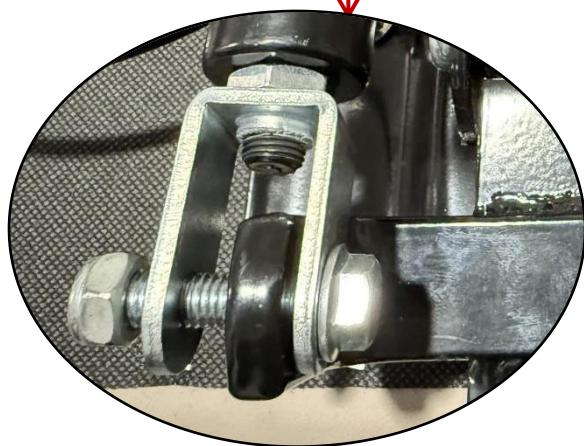


Unscrew nut and bolt on backrest iron "M" ,assemble the other side of gas pump to backrest iron "M" ,tighten the nut to one-third of the screw.

Assembly Instructions


Step 7

Unscrew 2 screws previously assembled on the footrest "I", Attach the pedal "H" to footrest "I" using these screws and tighten them securely. Refer to the picture.

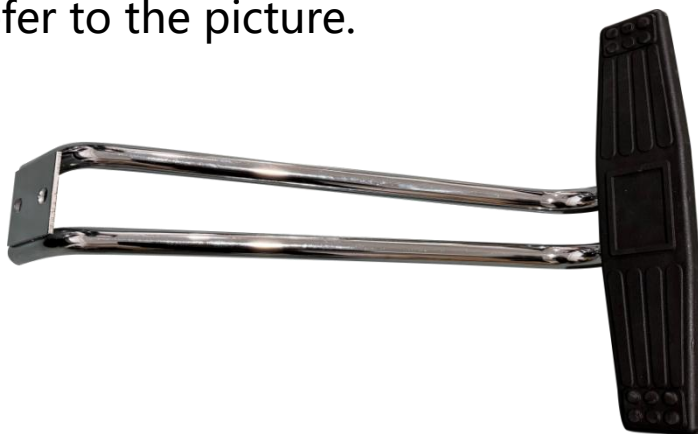

Step 8

First, loosen the 2 screws previously assembled on the seat cushion "A". Then attach the footrest to the seat cushion using these screws and tighten them securely. Refer to the picture.

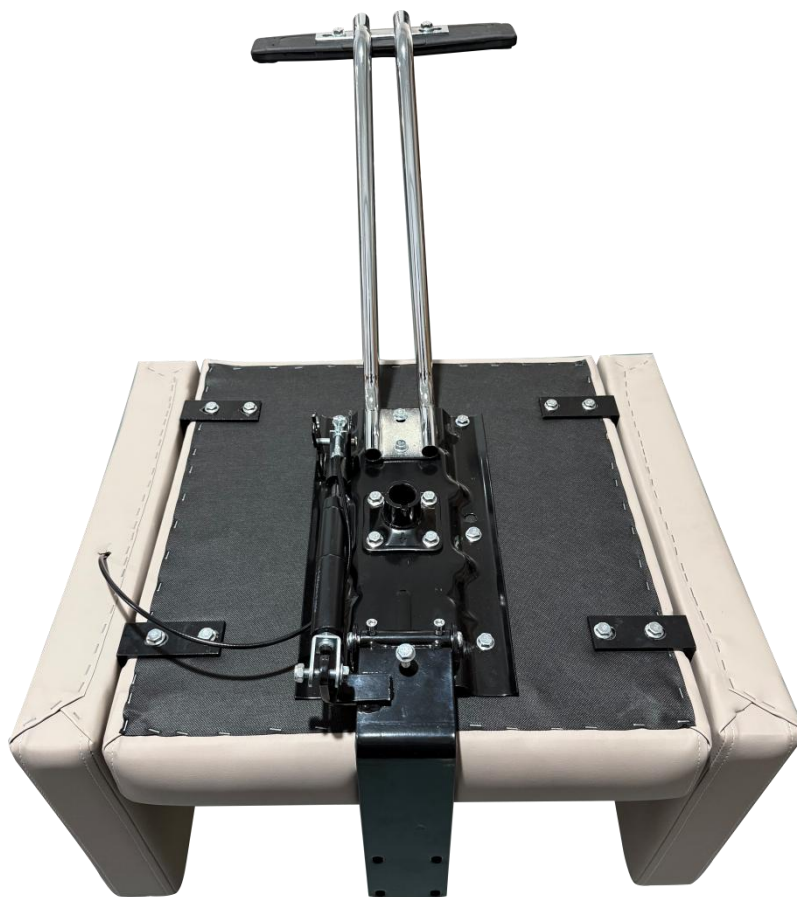

Assembly Instructions

Step 9


Put the assembled seat to the hydraulic pump.



Noted: the tray on the set plate must be aligned with the black pin of hydraulic pump.

Step 10

First, unscrew the 4 screws previously assembled on the backrest "C". Then assemble the backrest "C" to the assembled seat and tighten the screws securely as shown in the picture.

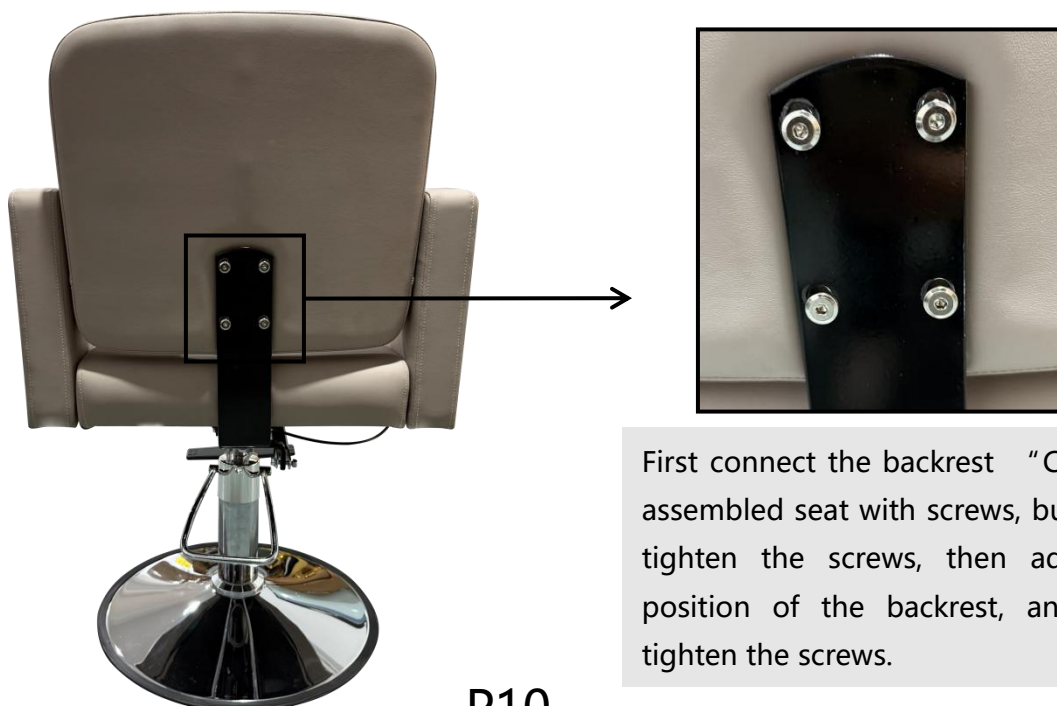

First connect the backrest "C" to the assembled seat with screws, but do not tighten the screws, then adjust the position of the backrest, and finally tighten the screws.

Assembly Instructions

Step 11

Insert headrest "D" into the backrest "C" .

