




ASSEMBLY INSTRUCTIONS


SRWSE100112002A
SRWSE100112003A

Note:


Prepare the installation tools

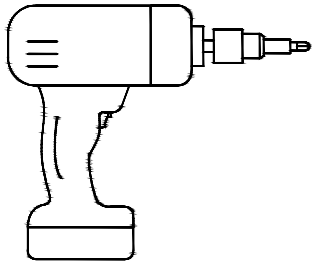

OR



Should be assembled on flat ground to keep balance.

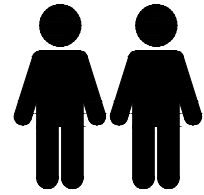


It needs at least two people to install

2


Hours



Before starting the assembly, you must read the whole manual and follow the instructions.

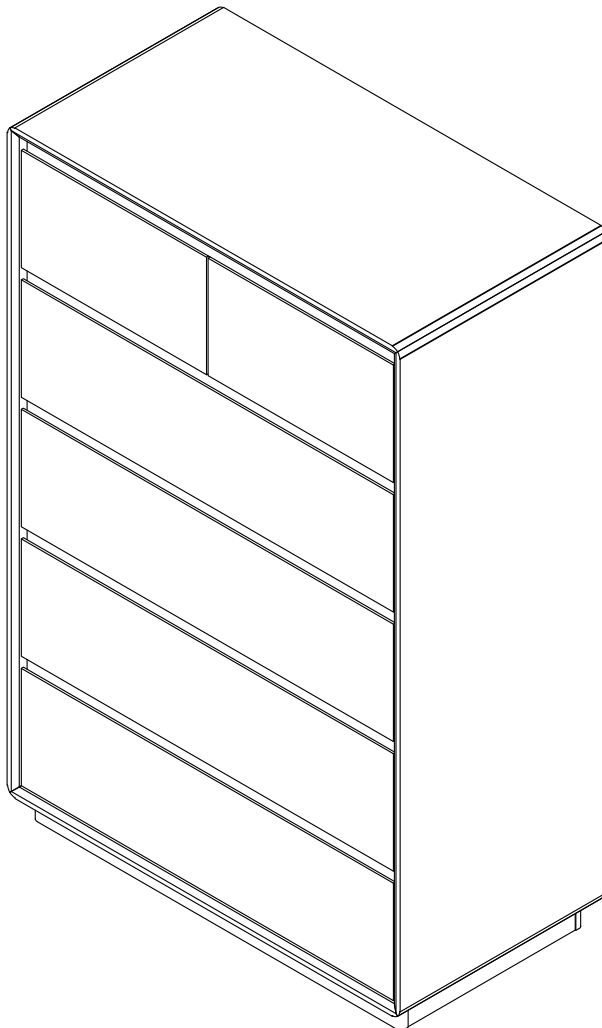

Installation parts




A
x71
Ø6*24mm




B
x71
Ø12*10mm




C
x21
Ø8*30mm



D
x36
M4 *16mm



E
x30
M5*35mm



F
x8



G
x24
M6*16mm



H1x2



H2x2



H3




H4




H5


H
x2

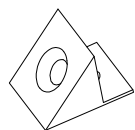

I
x16




J
x16
M3*16mm




K
x10



N
x1




L
x6
350mm




R
x6
350mm

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

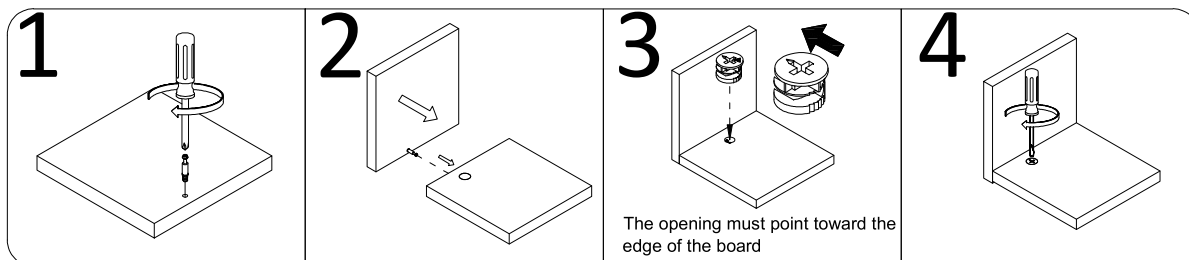


Mounting Frame

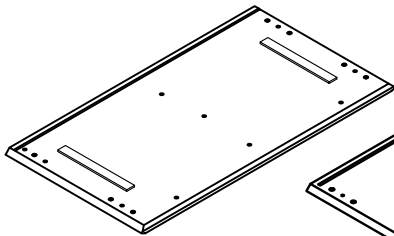


1
x1

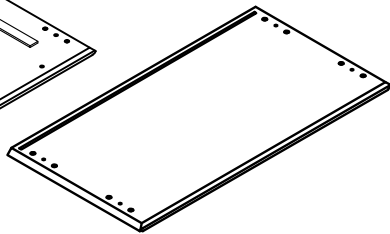


2
x1

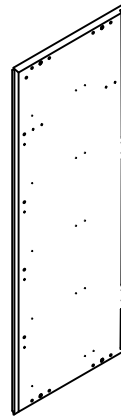


3
x1

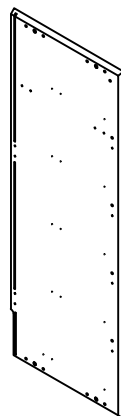


4
x1

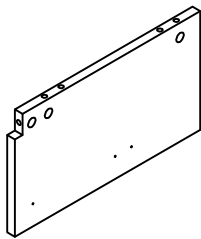


5
x1

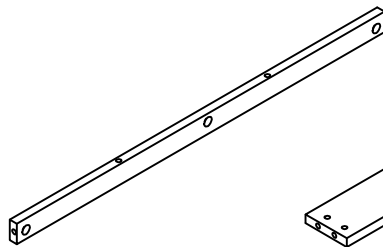


6
x1

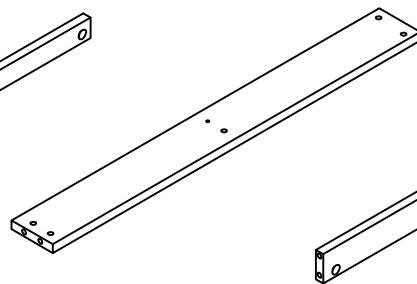


7
x2

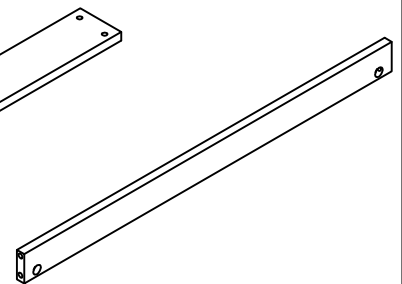


8
x4

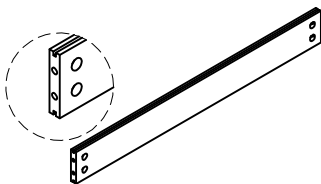


9
x2

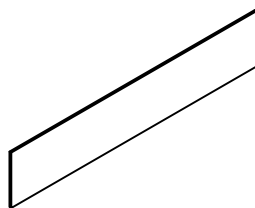

10
x1

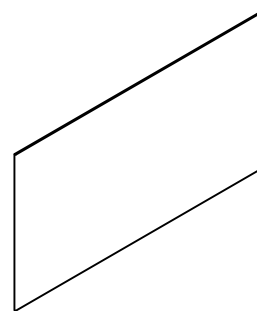


11
x2

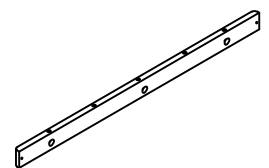


12
x2

Mounting Frame

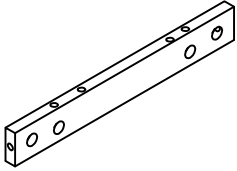


13

x2

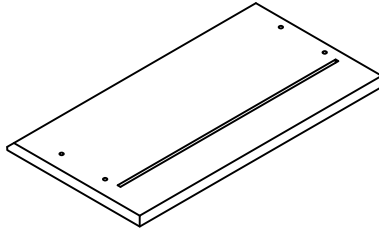


14

x1

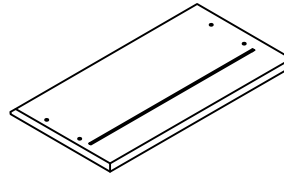


15

x1

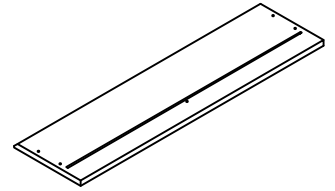


16

x4

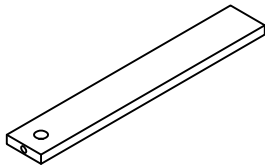


17

x4

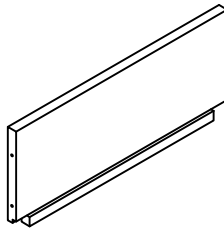


18

x2

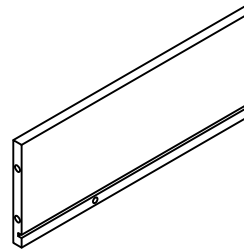


19

x6

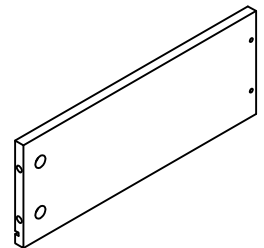


20

x6

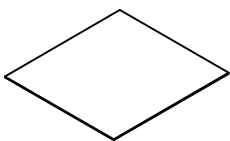


21

x2

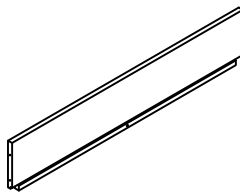

22


x4

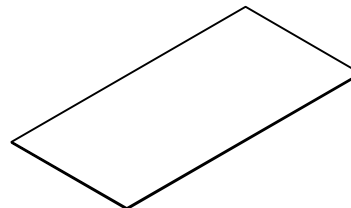

23

x4


Exploded-view

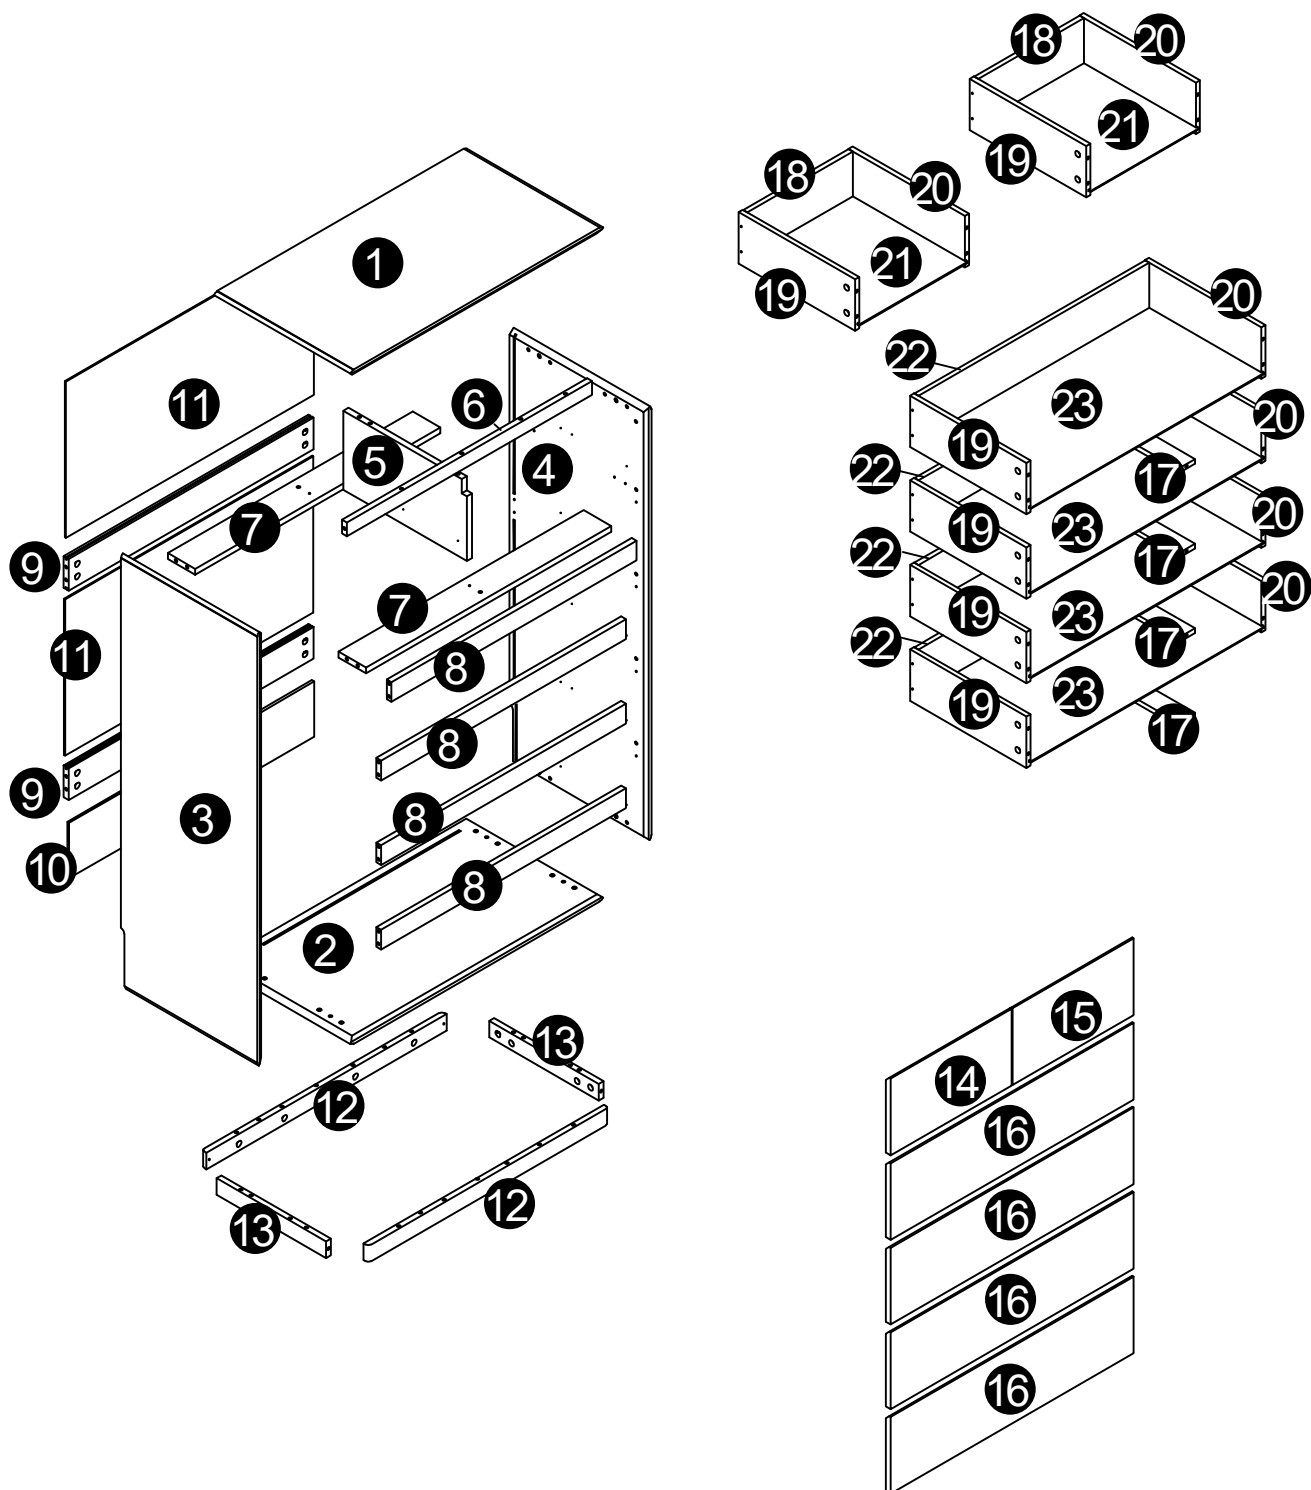

1

A


X26

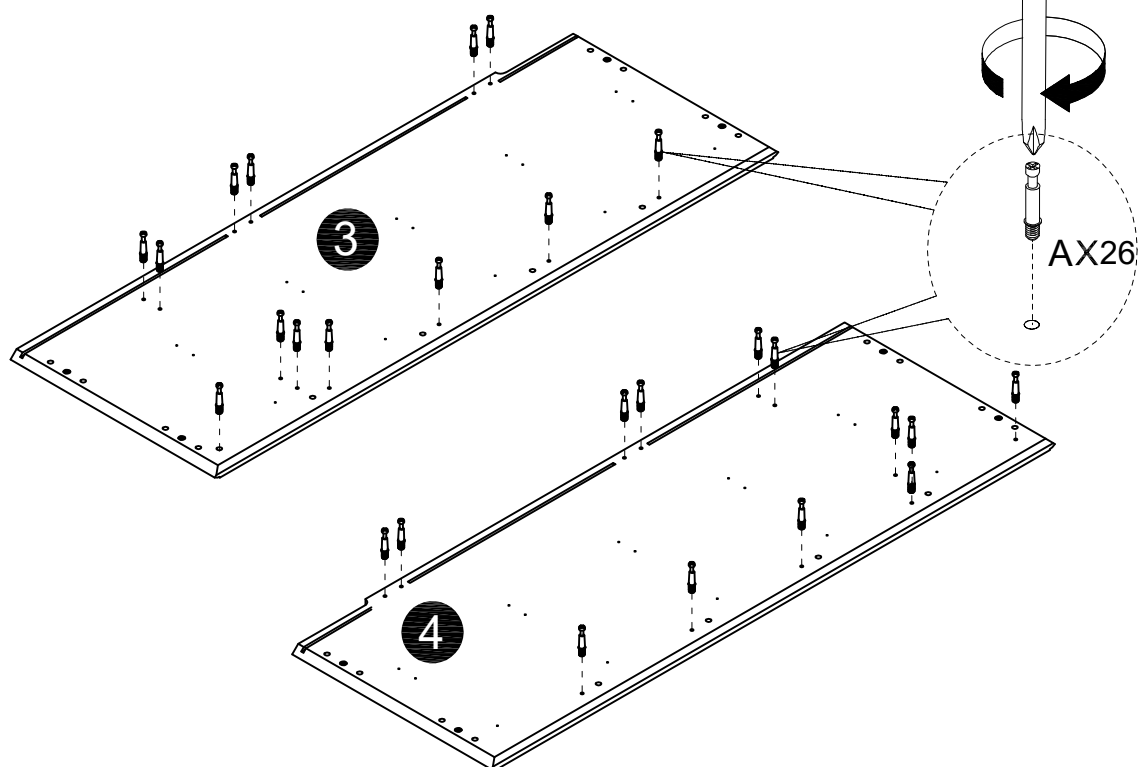

2


F

X8



G

X8

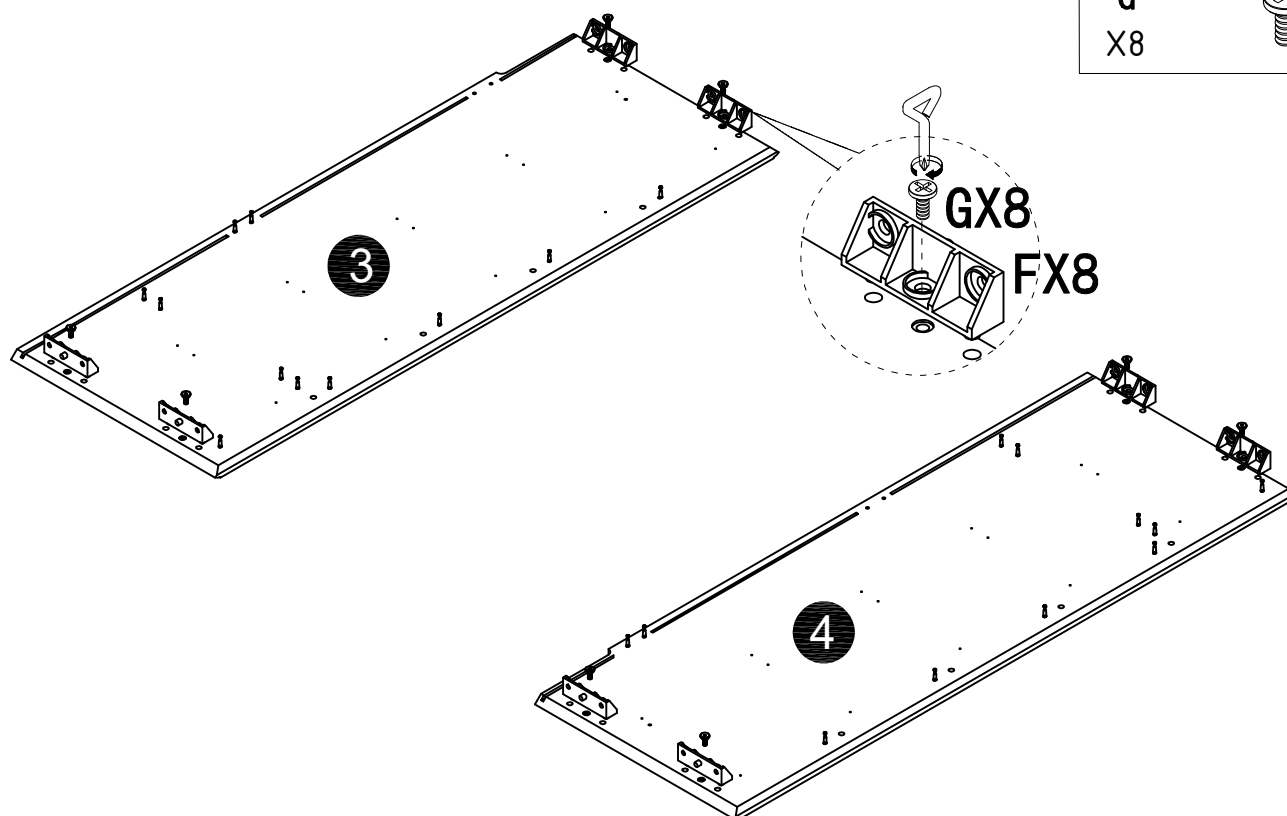

3

D

X24




L

X4




R


X4

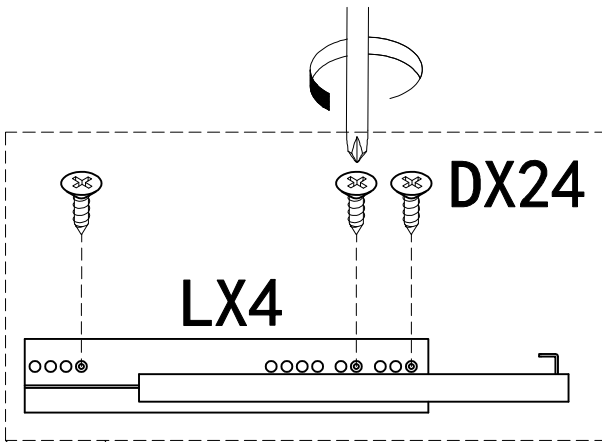

For proper installation,
please do not install this
guide rail at this time.
(Install them in step20)

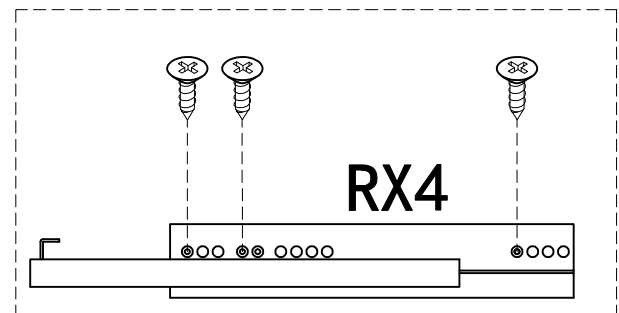

For proper installation,
please do not install this
guide rail at this time.
(Install them in step20)

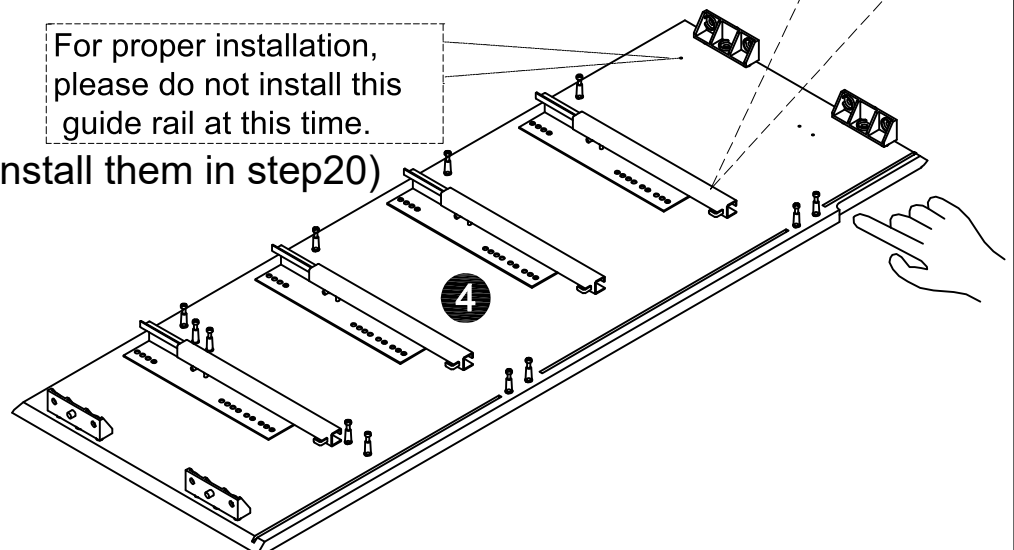

4

D

X6








L

X1




R

X1

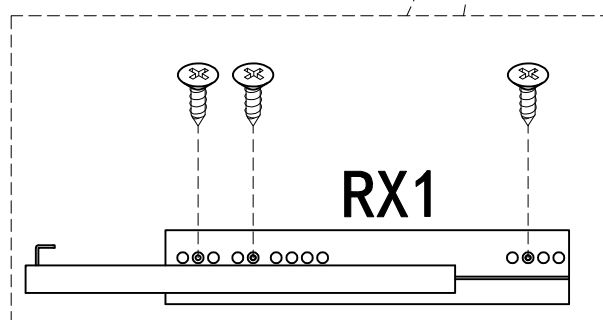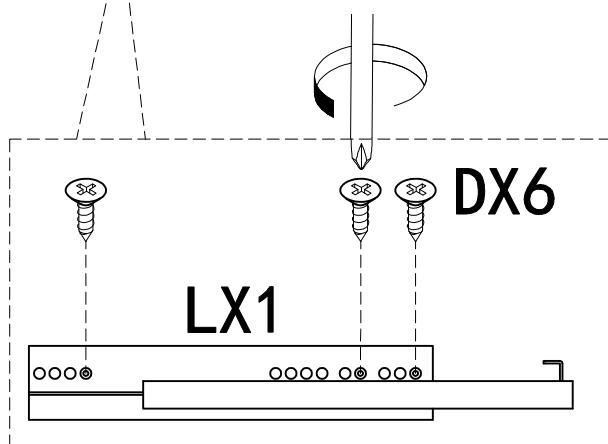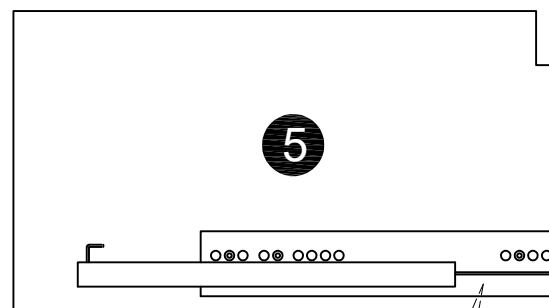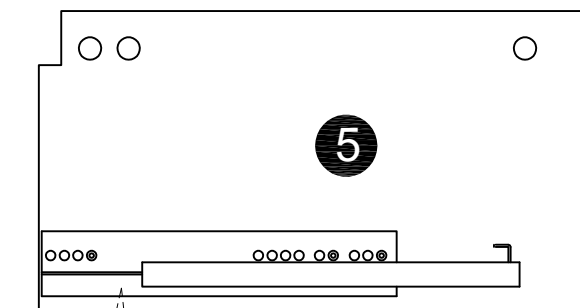

A

X1

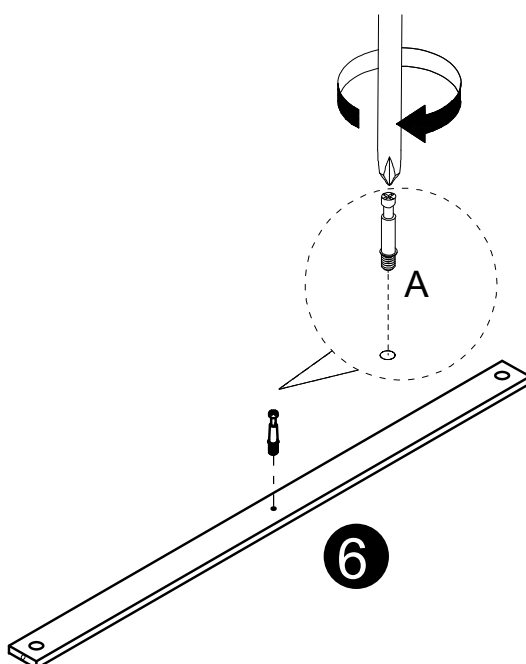

5


C

X2



E

X2



B

X1



EX2

C

x2

7


7

5

6

B

6

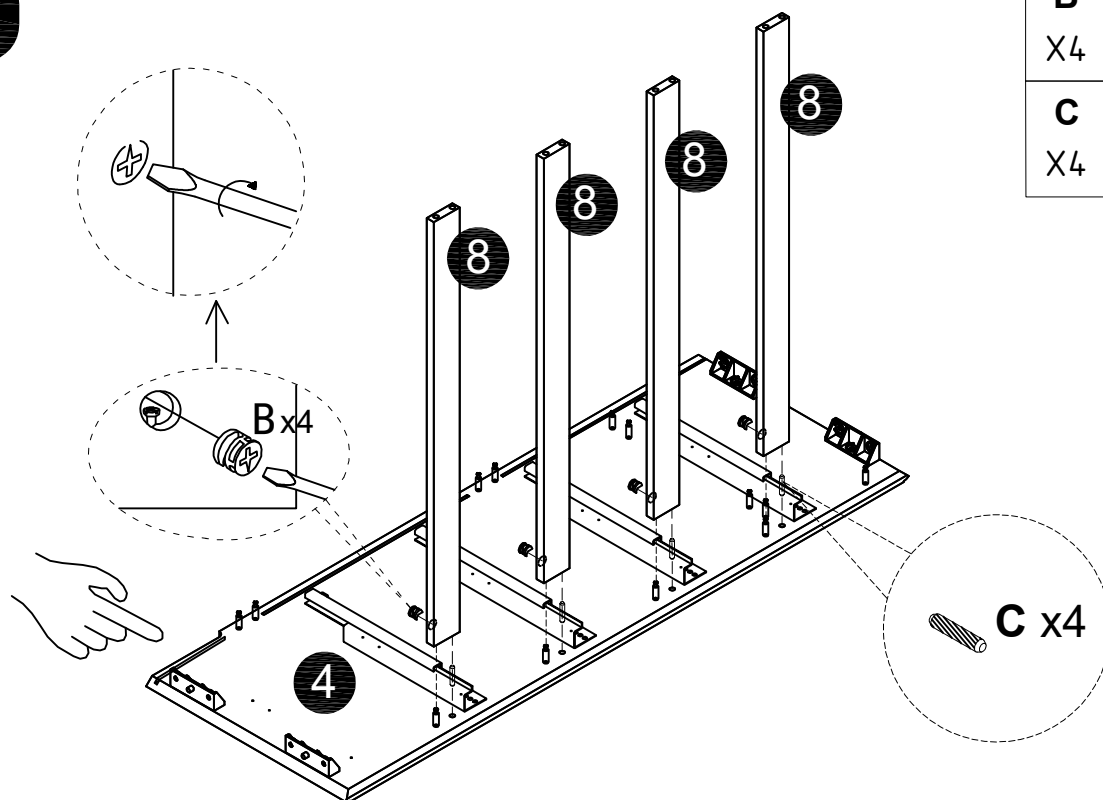**B**


X4

**C**

X4

**C x4**


7

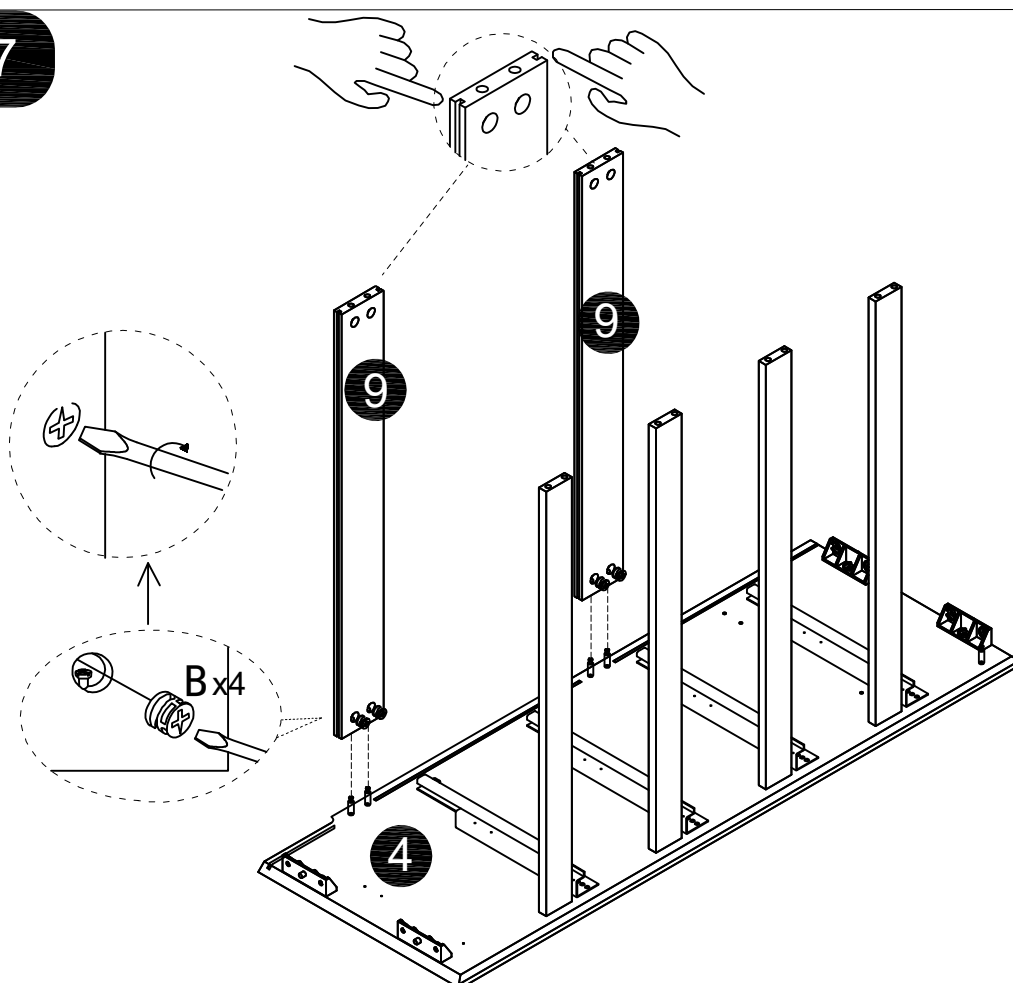**B**


X4



8

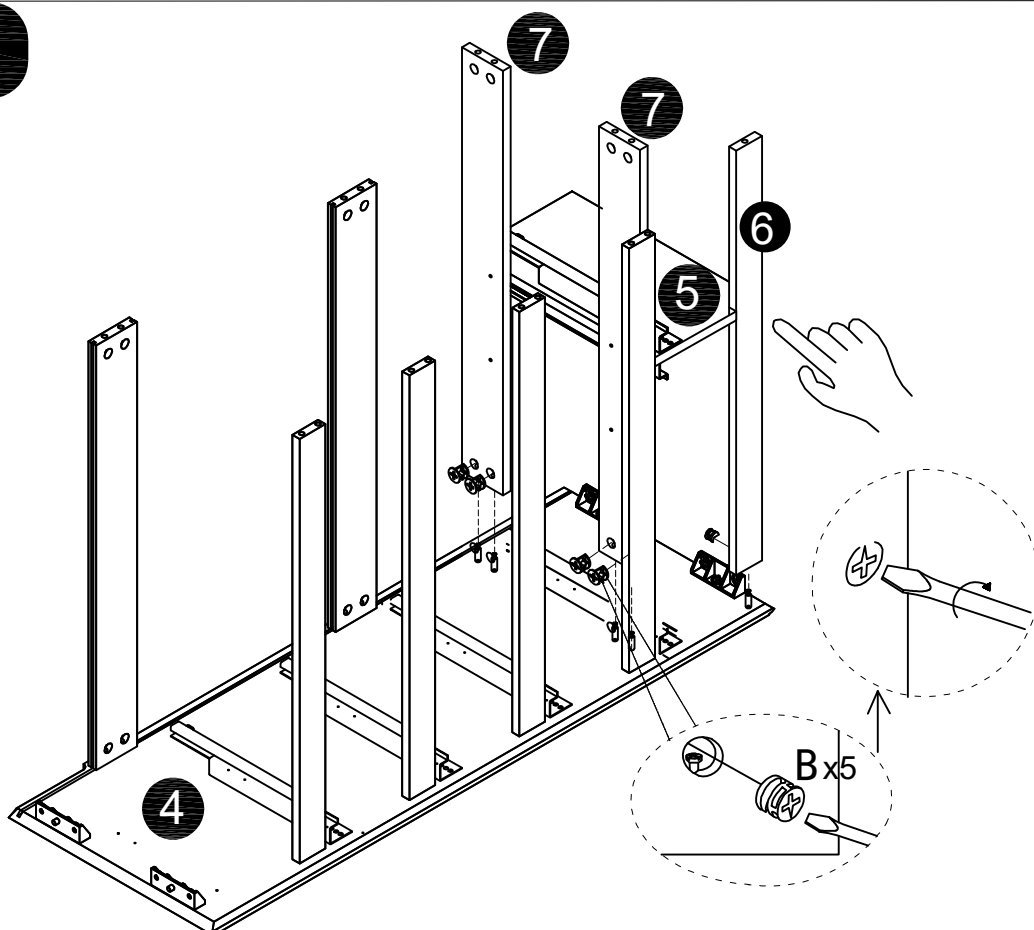
B
X5

9

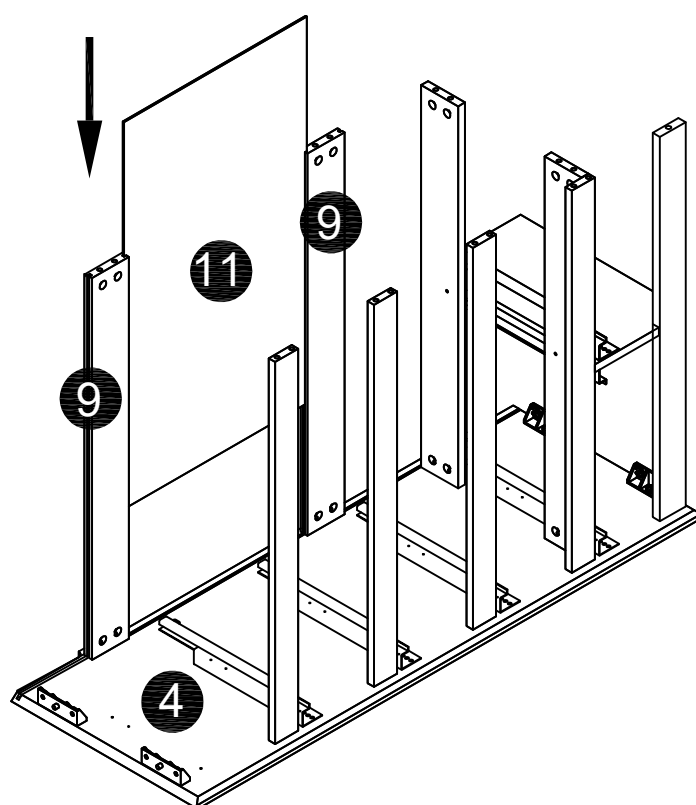

10


C
X4

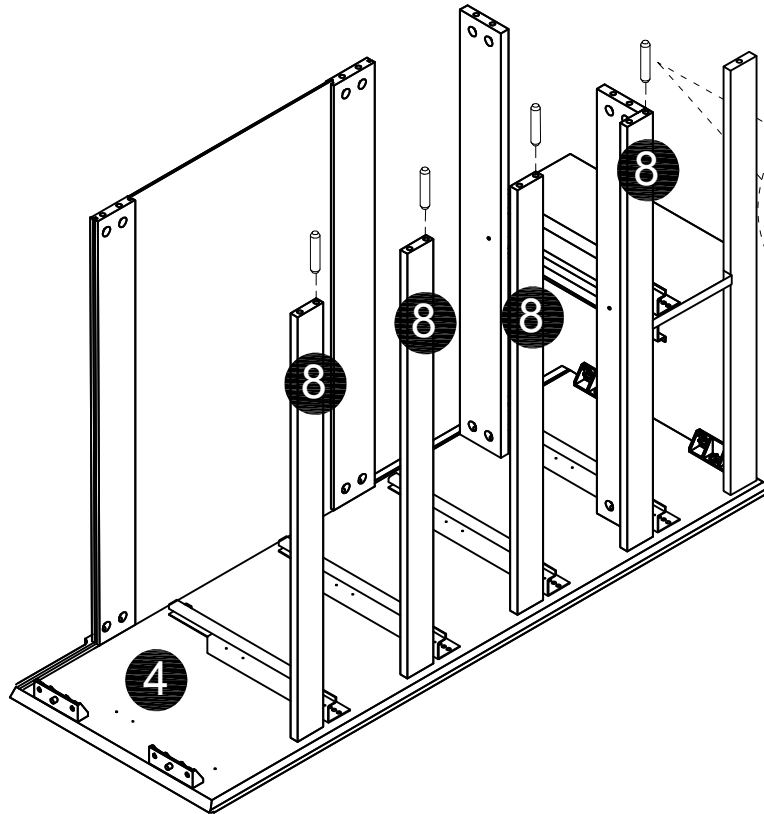

C x4


11

B
X13

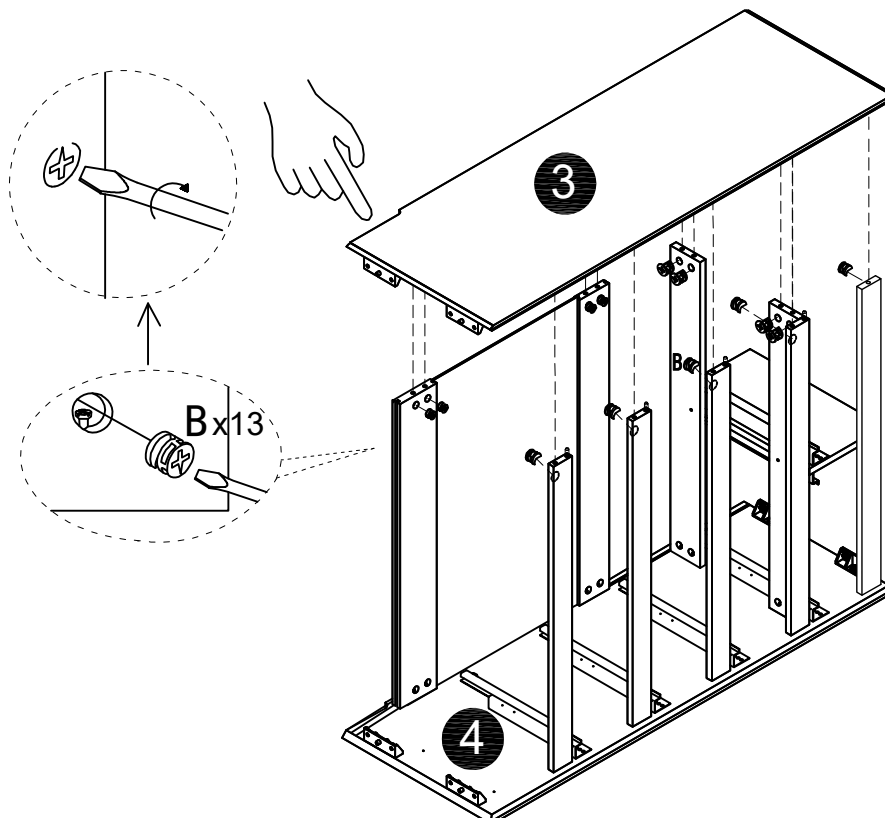

12


A
X4

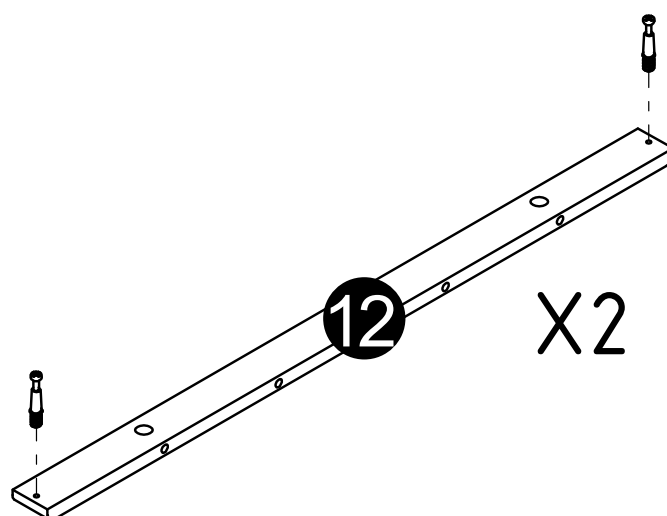

X2

13


B
X4

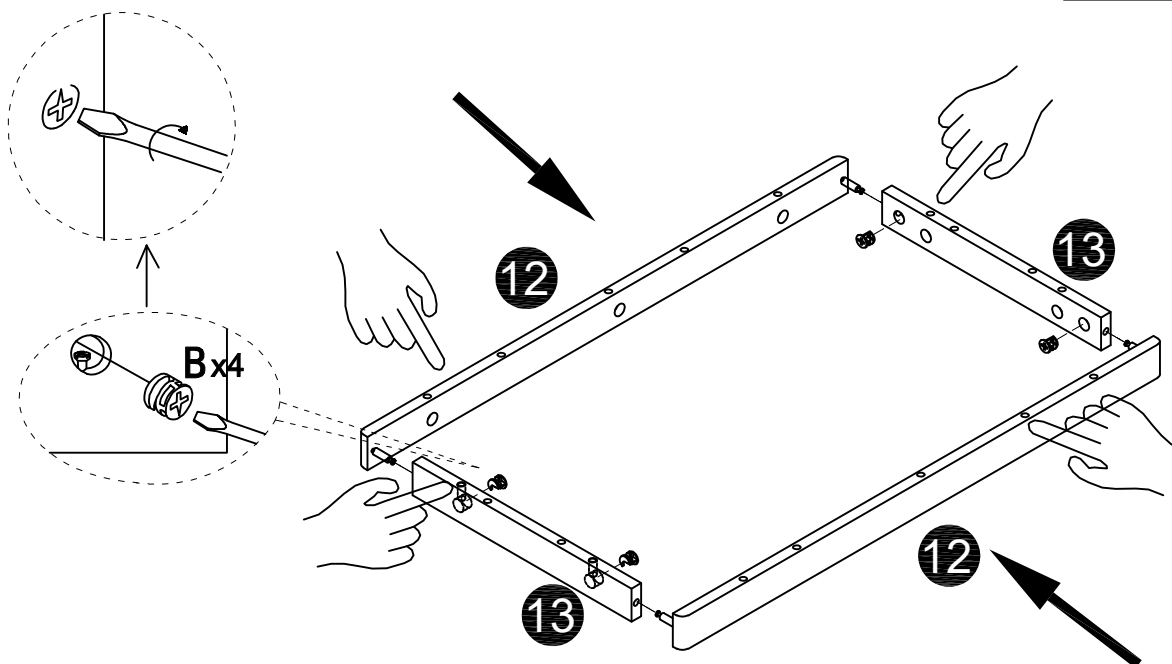

14

A

X10

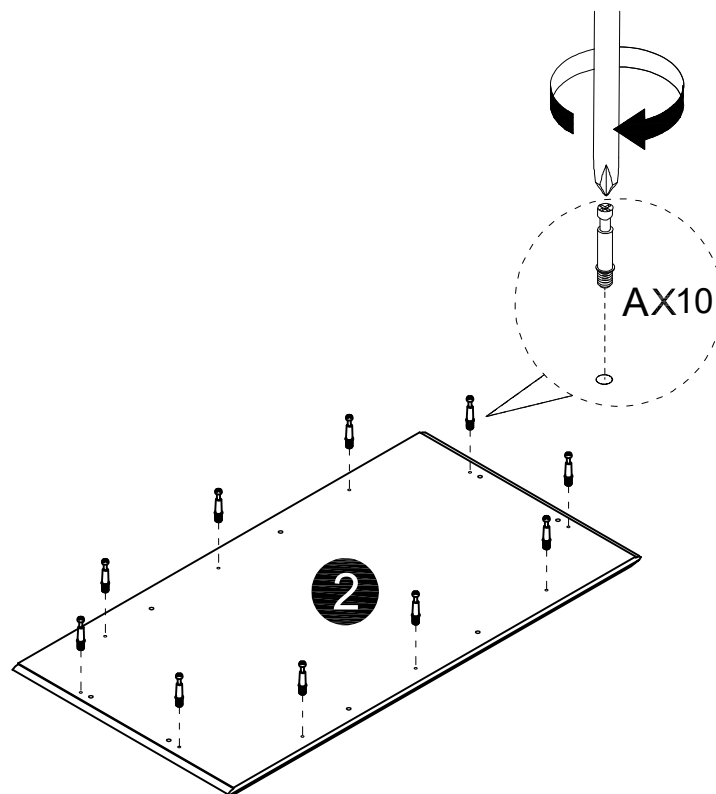

15


B

X10




C

X8

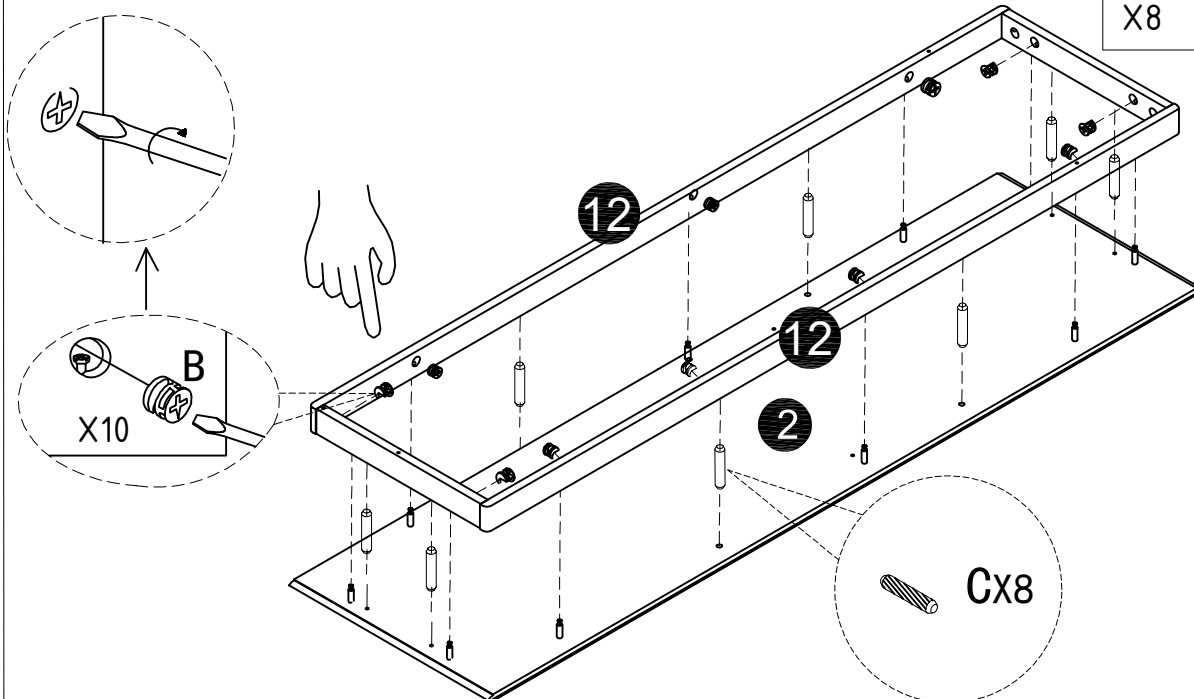


16

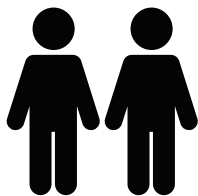


It needs at least two people to install

Please insert board No. 10 first then install board NO.2.

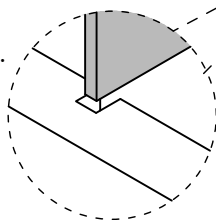

10

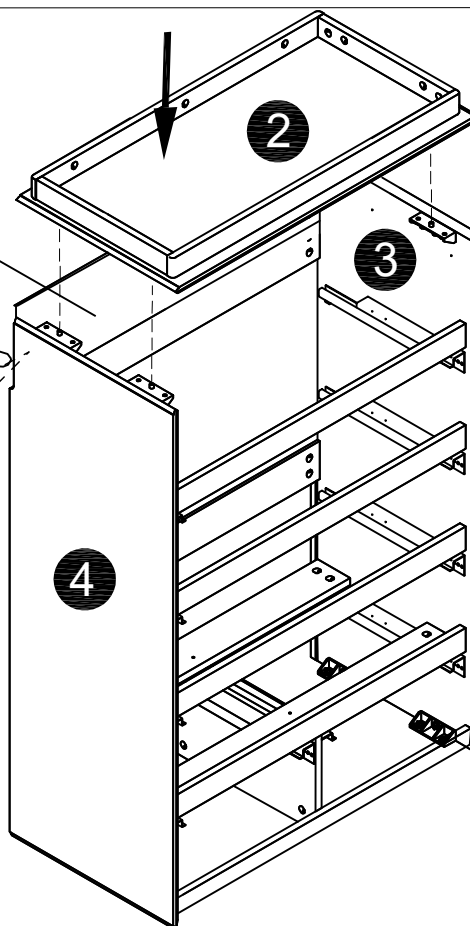


2

3

4

17


G
X8

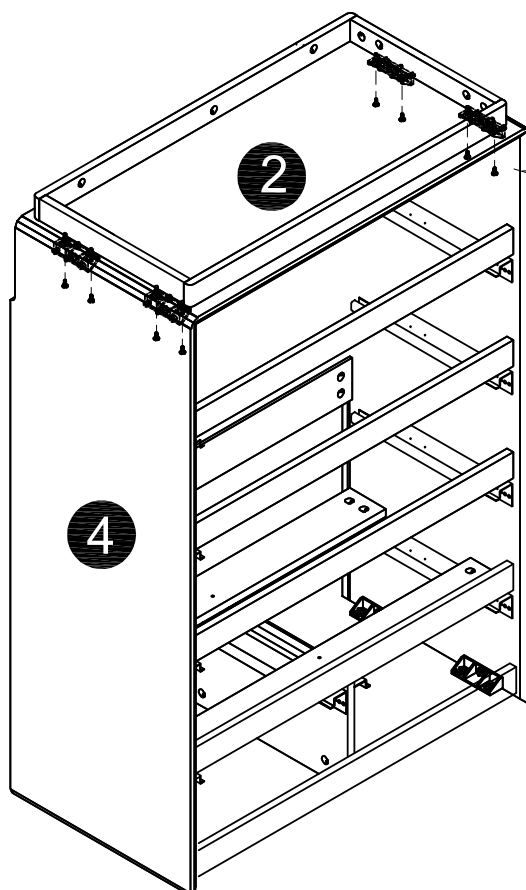


2

3

4

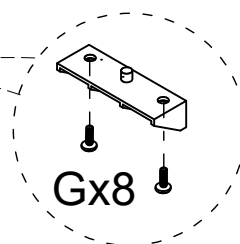


Gx8

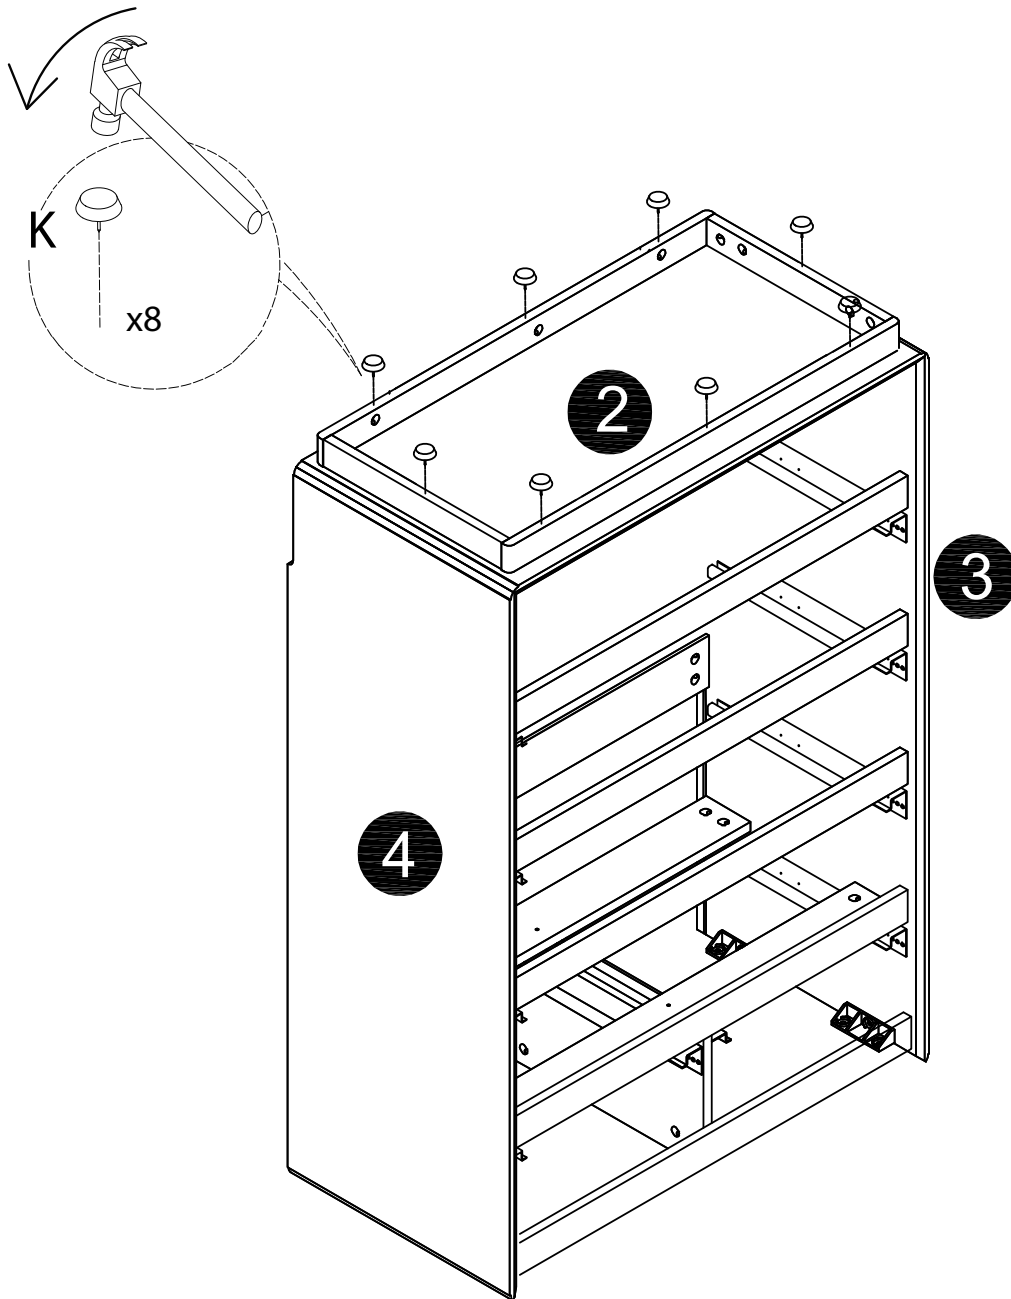



19



Note the flipping.

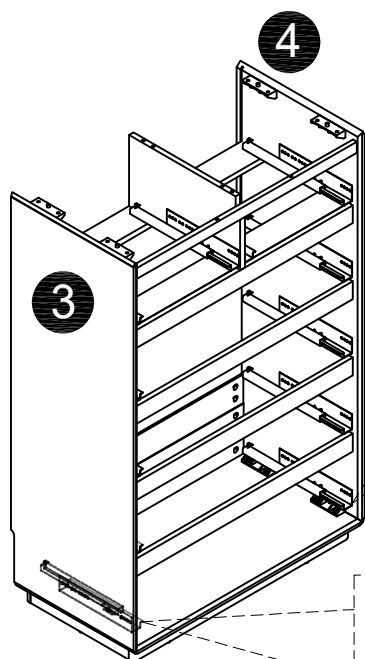

Now install the bottom guide rails on both sides.

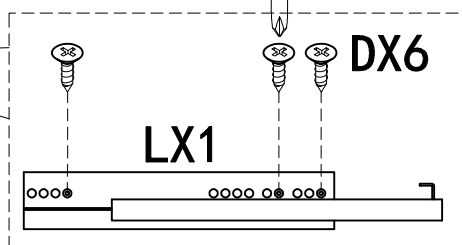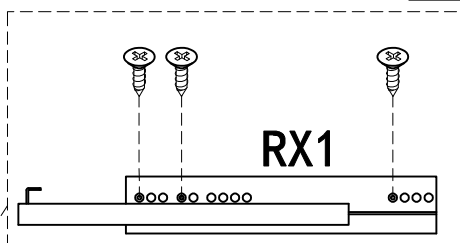


D

X6




L

X1






R


X1



20

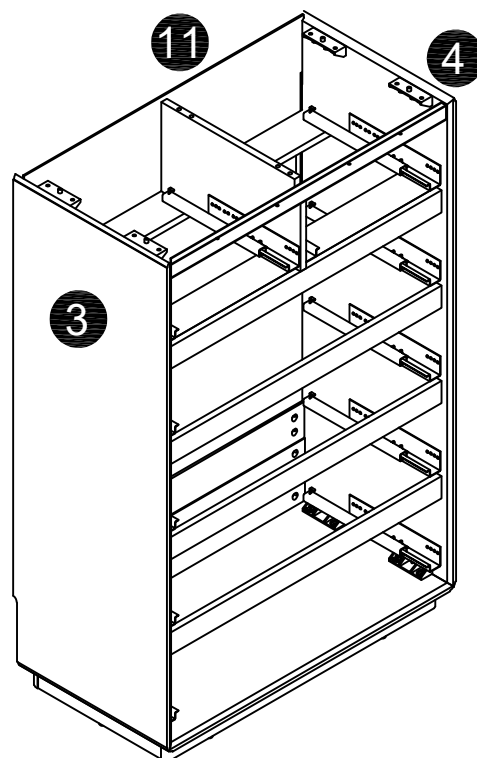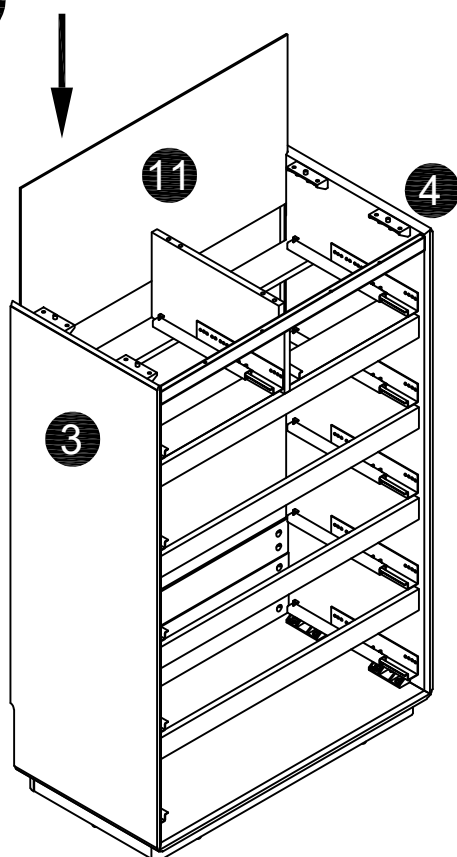


21

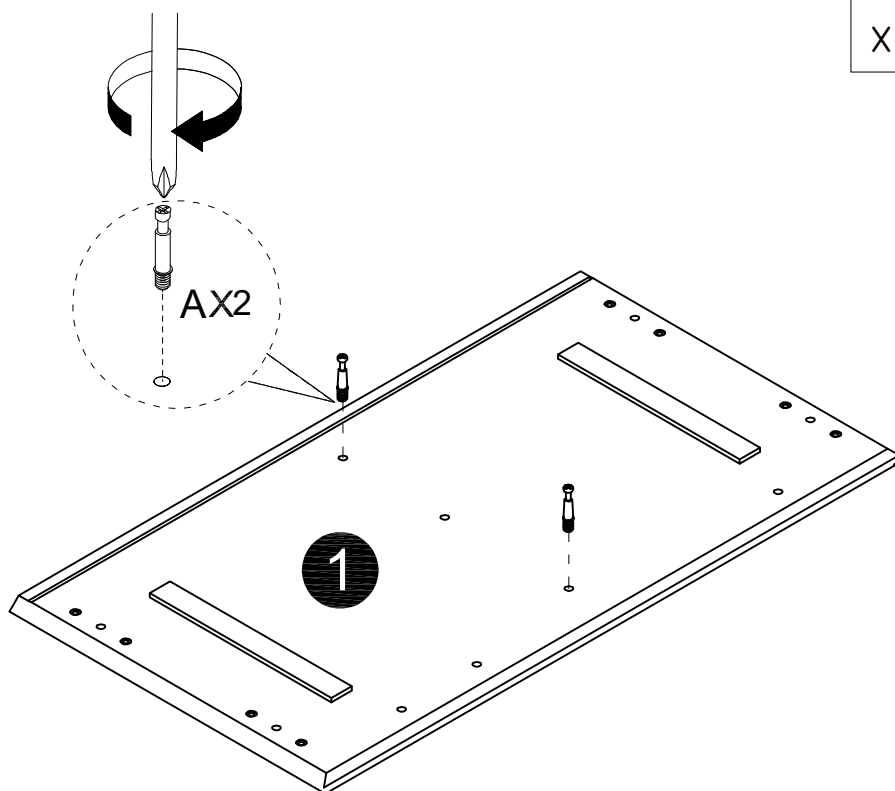

A
X2



22

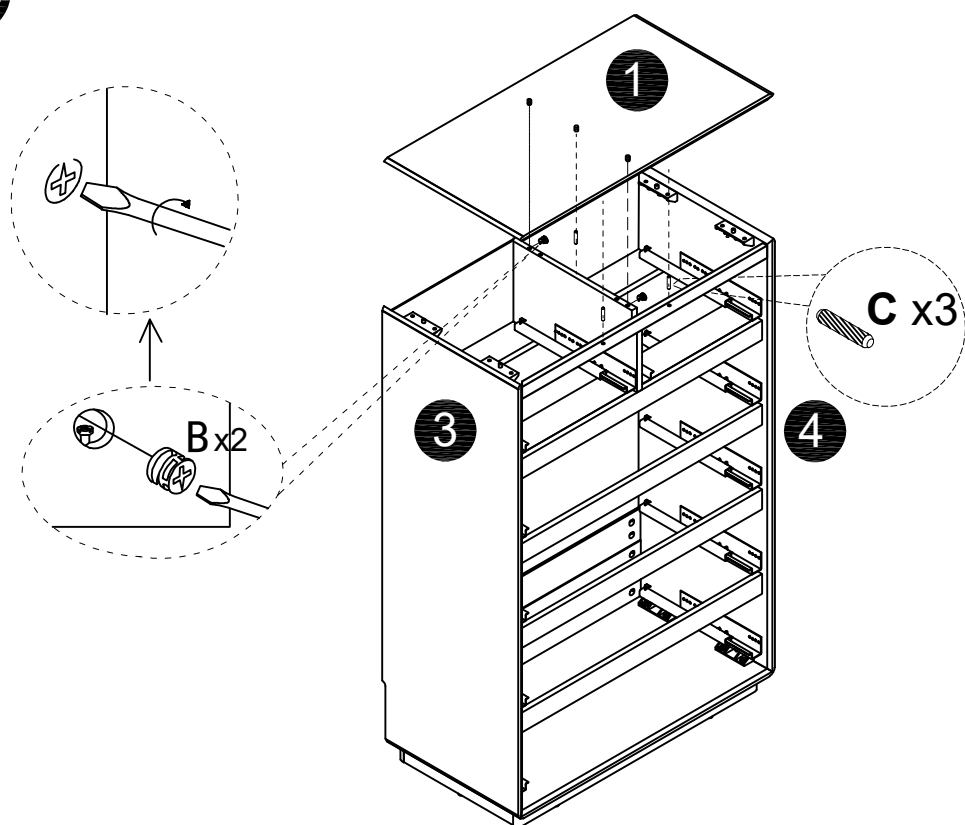

B
X2




C
X3



23

G
X8

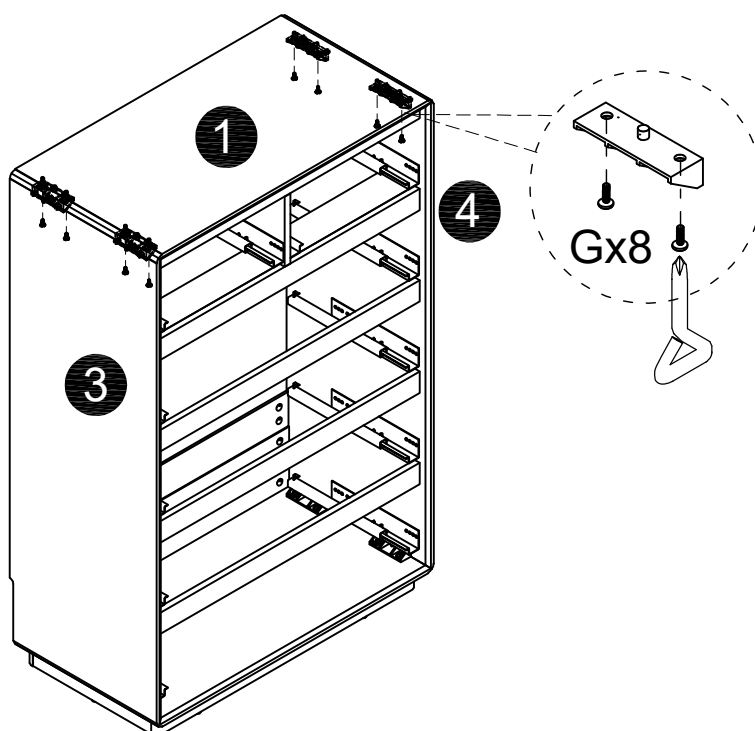

24

I
X16




J
X16




H1
x2



H2
x4

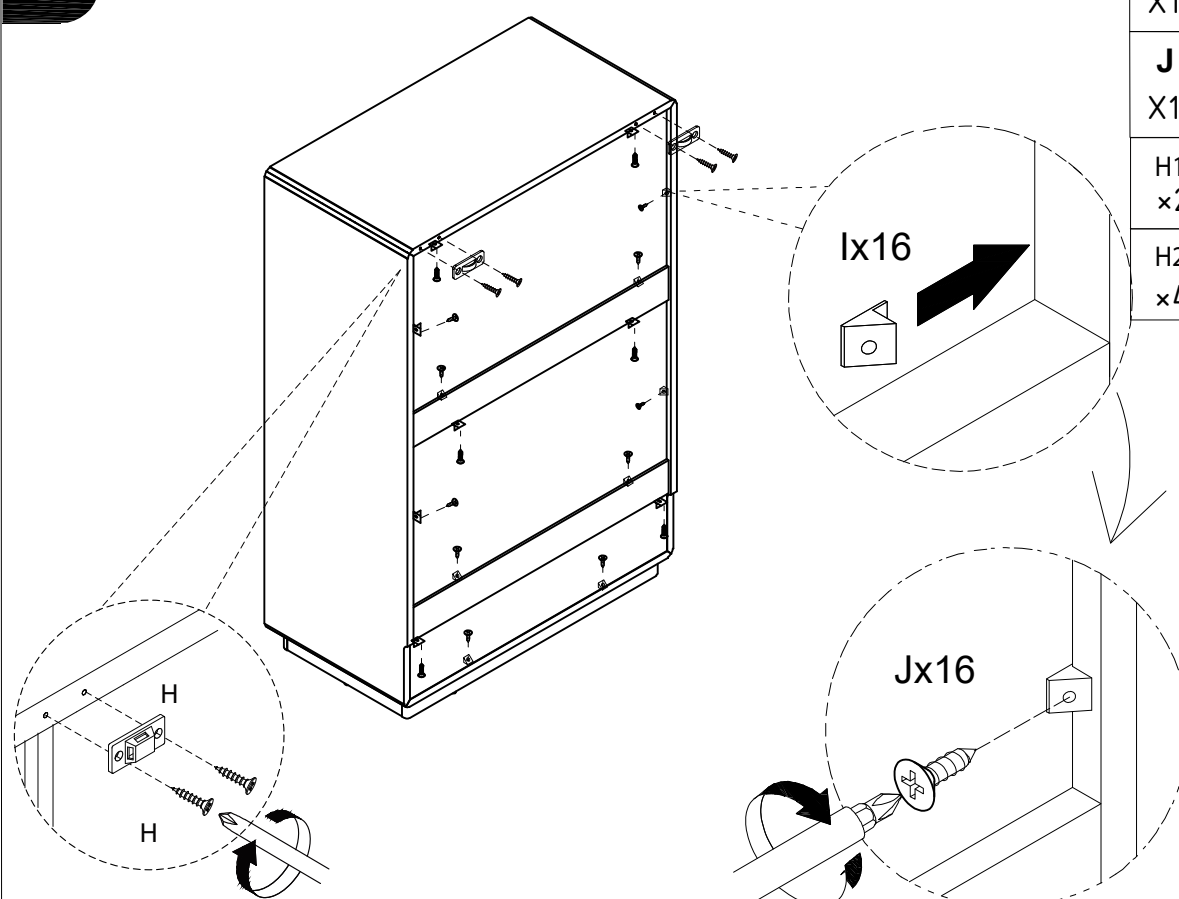


25

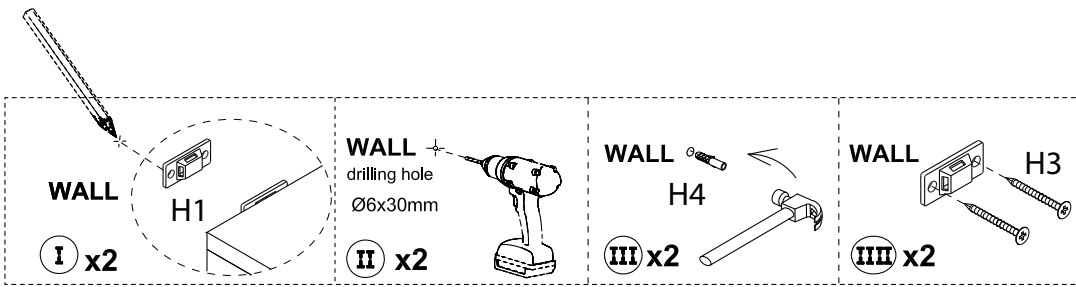


H	H1	x2
	H3	x2
	H4	x2
	H5	x2

Note: When drilling holes in the wall, please avoid destroying the hidden works such as electric wires, signal wires, water pipes, etc. inside the wall.

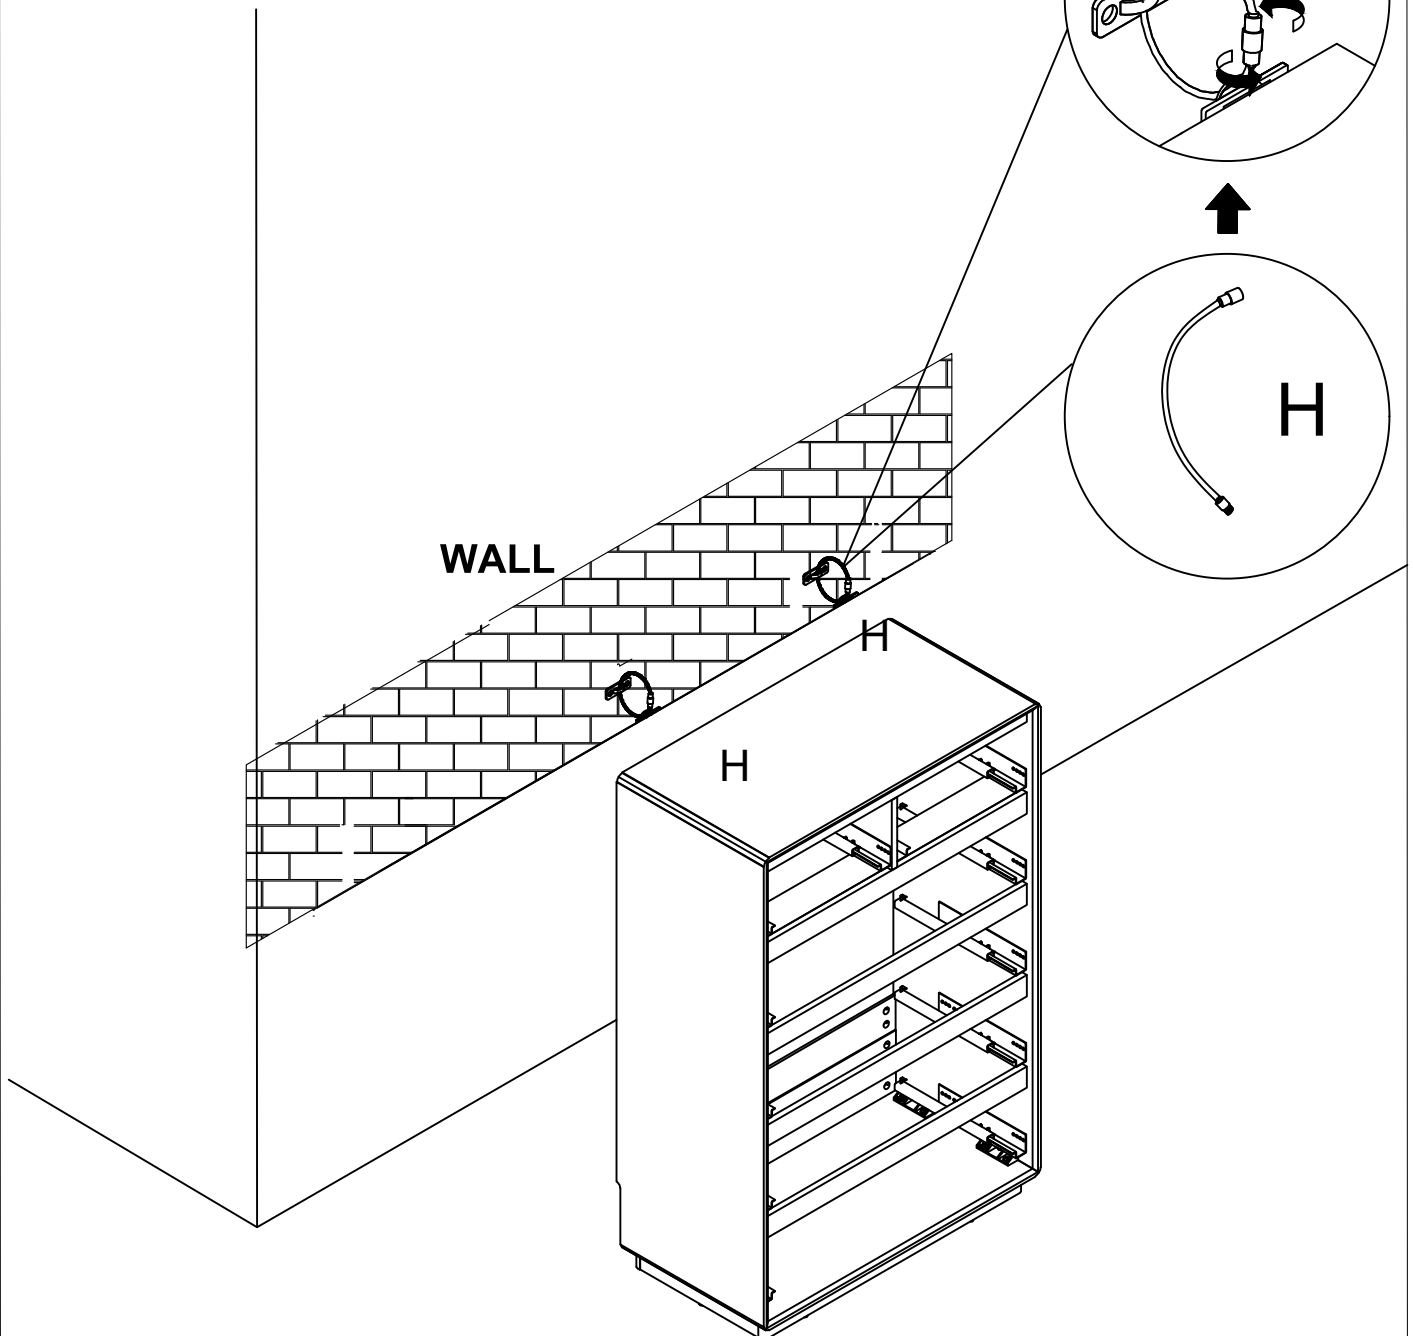


26

E
X20

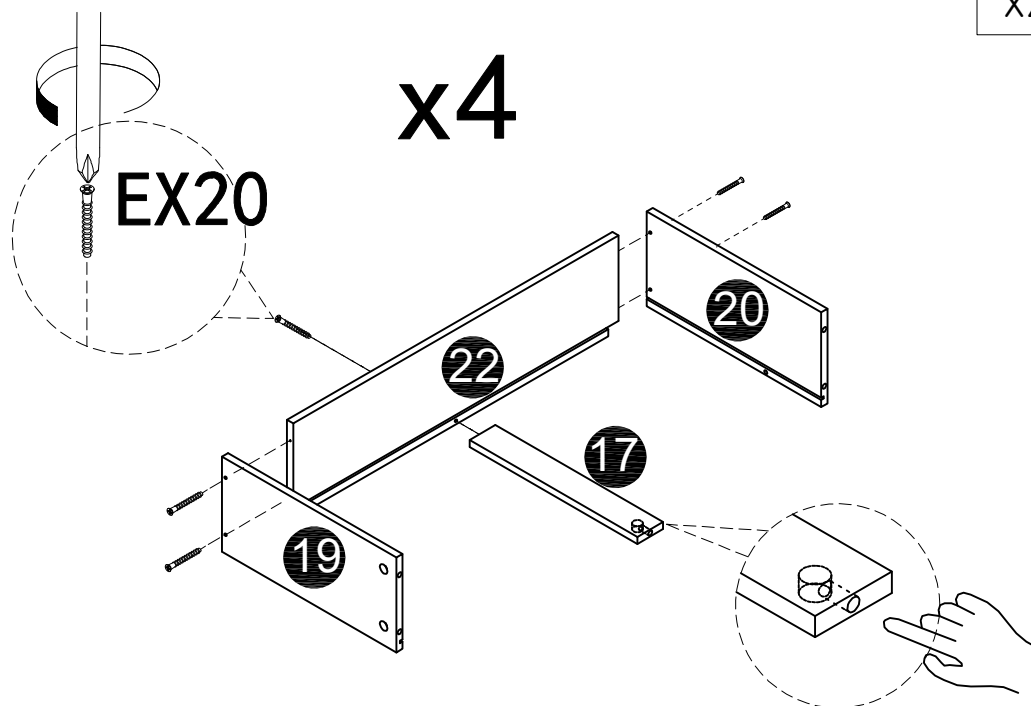

27

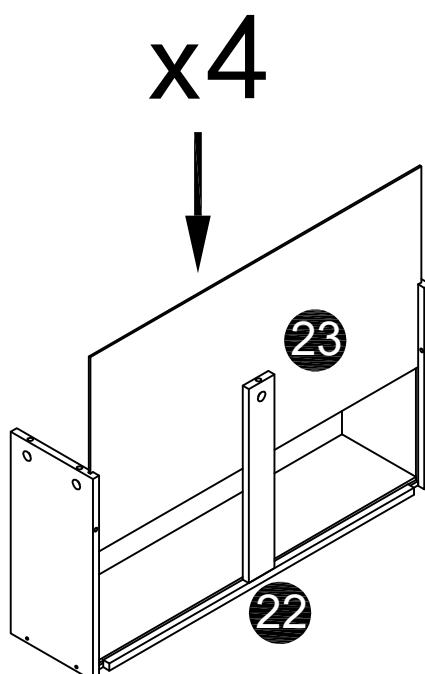


28

A
X20



x4

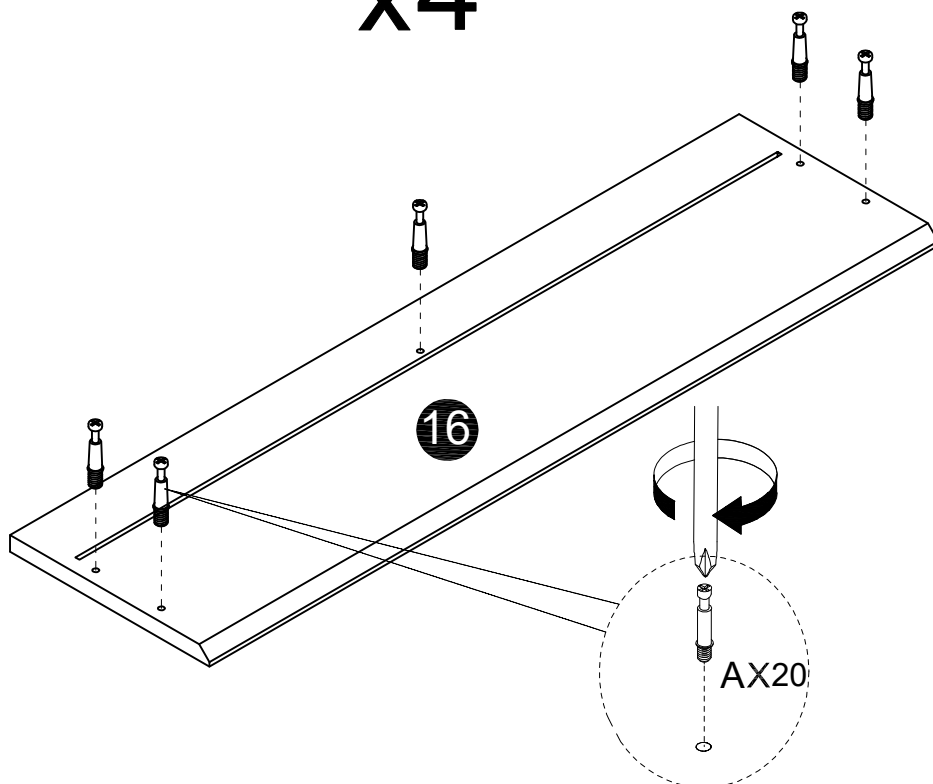


29

B
X20




x4

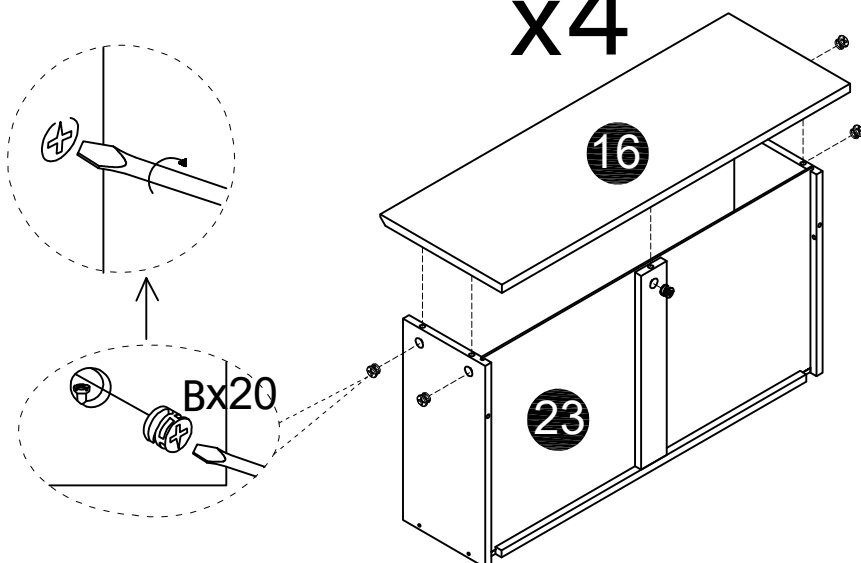


30

E
X8




x2

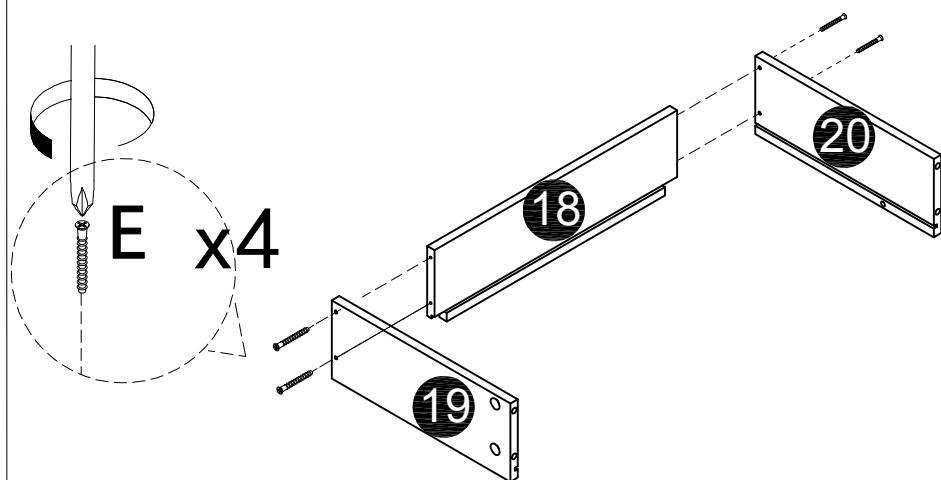


31

x2

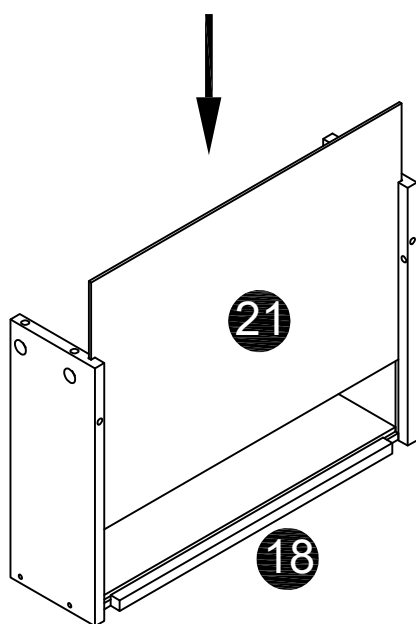


32

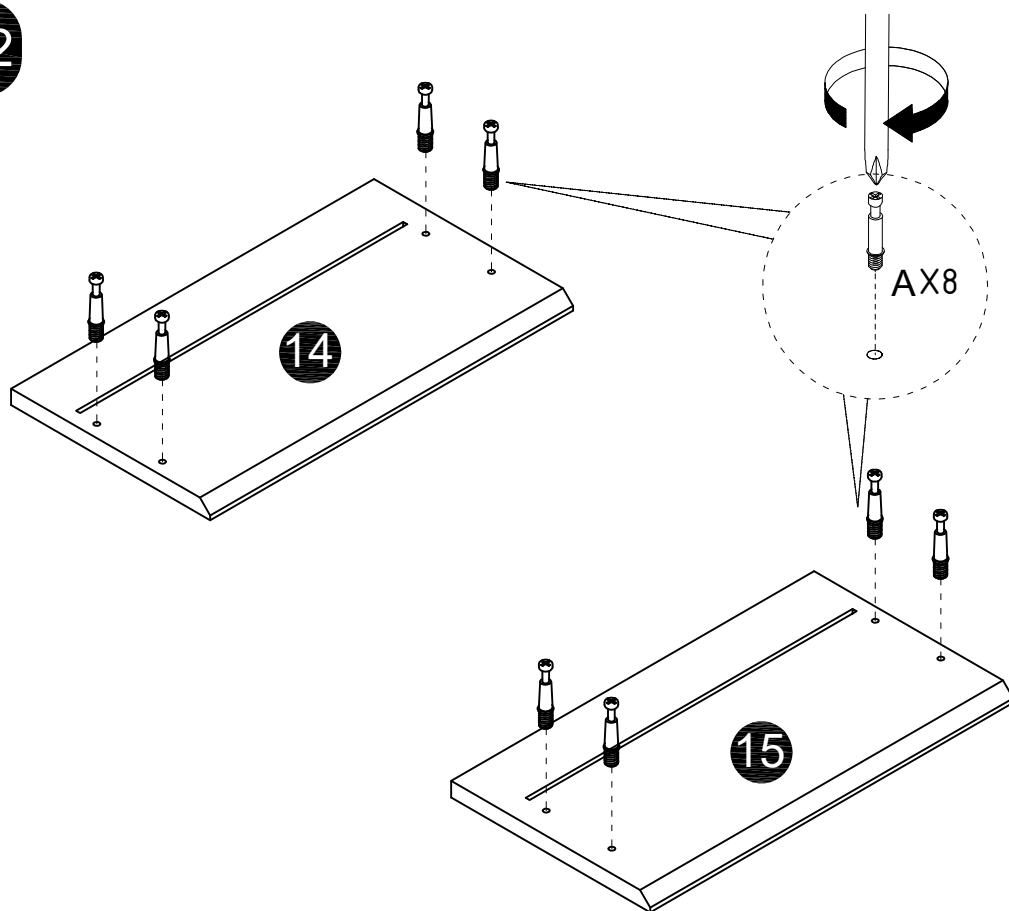

A
X8




33

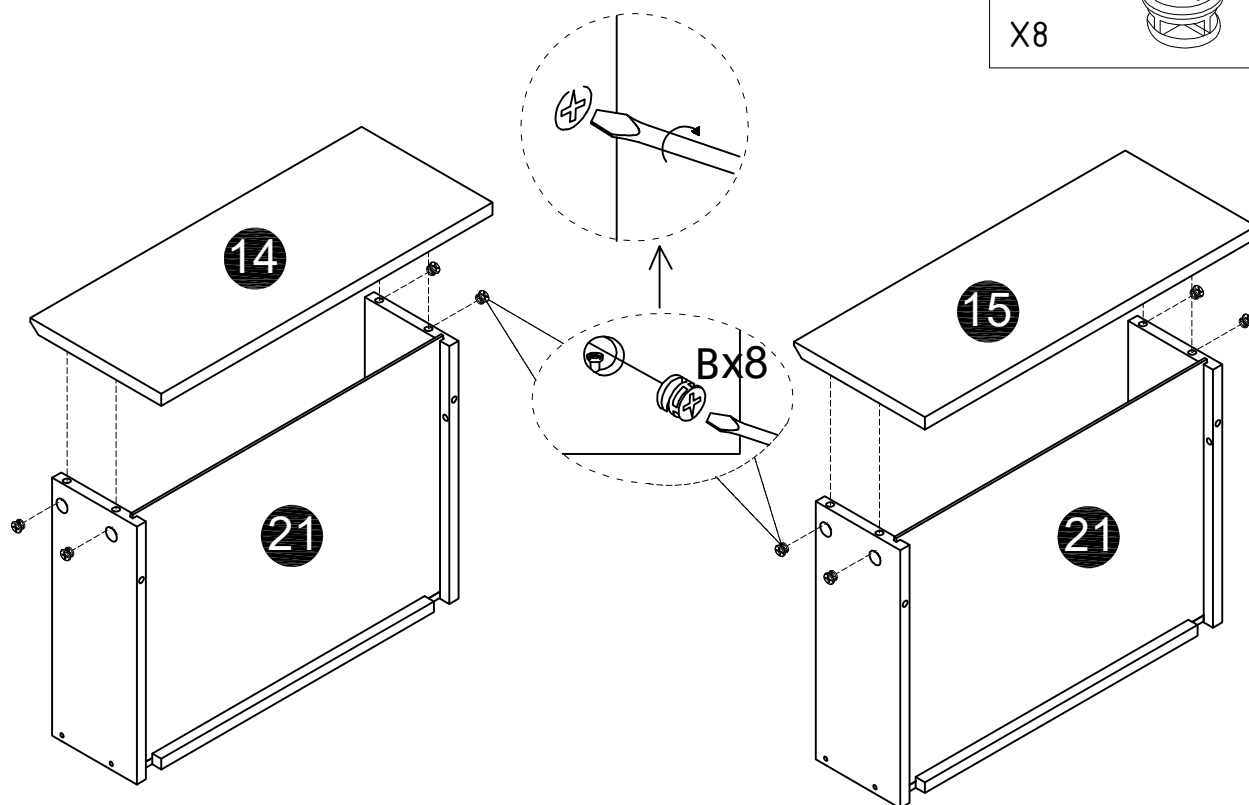

B
X8



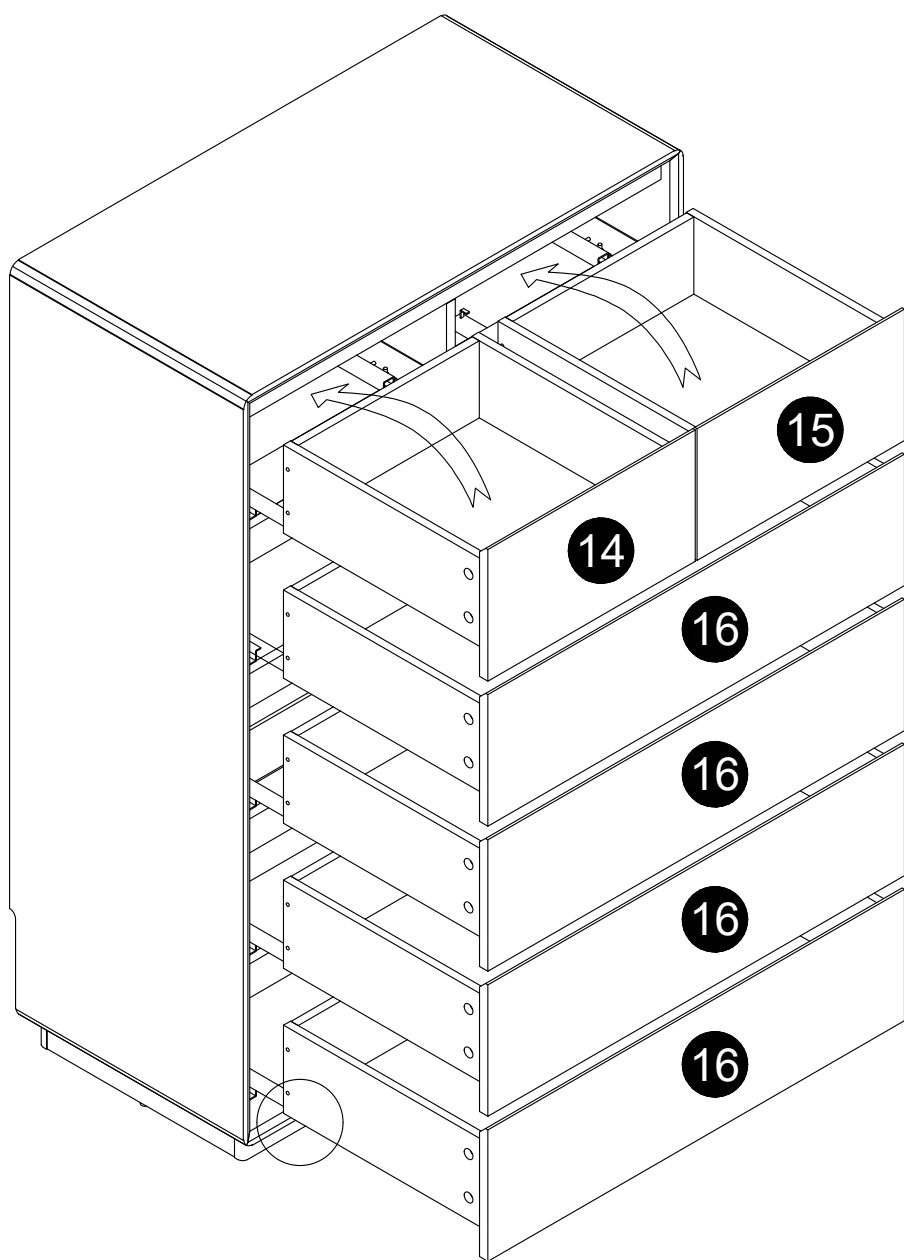

Place diagonally into the drawer

35

