


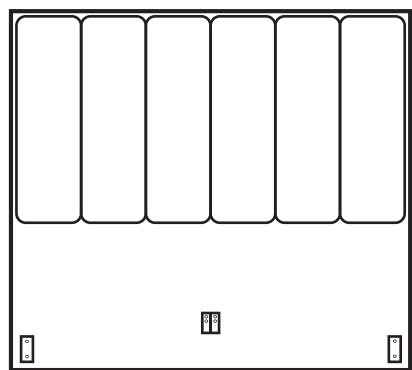


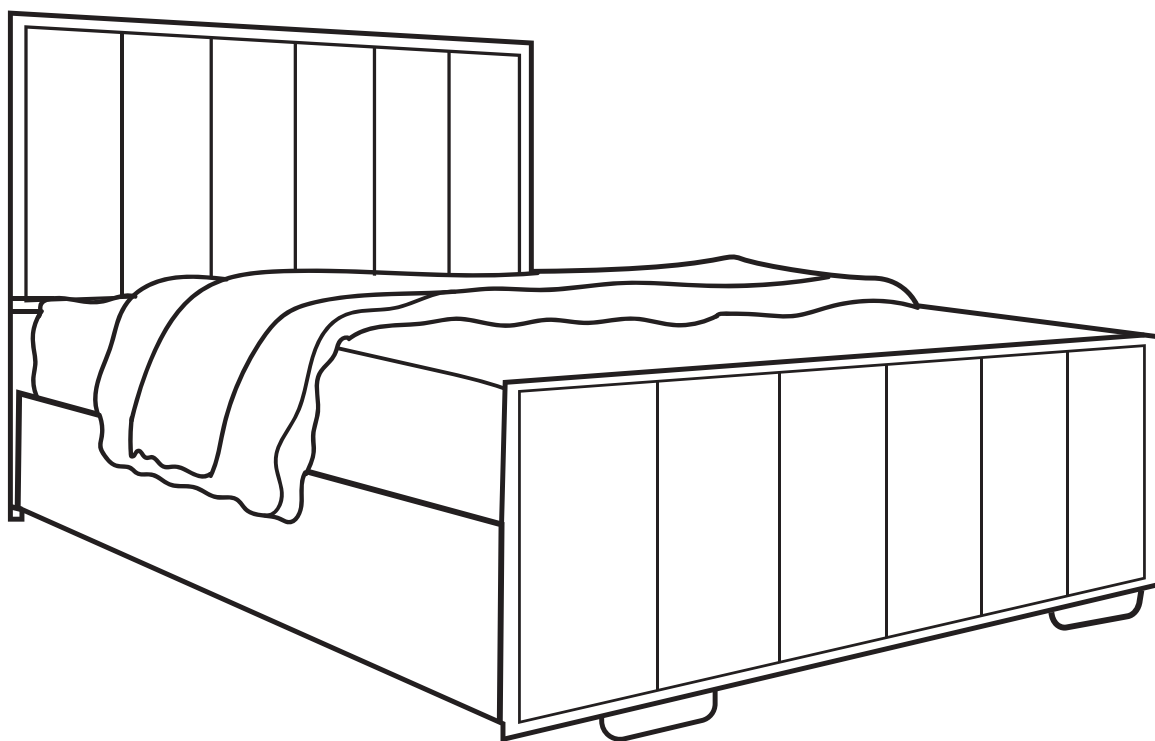


HEADBOARD

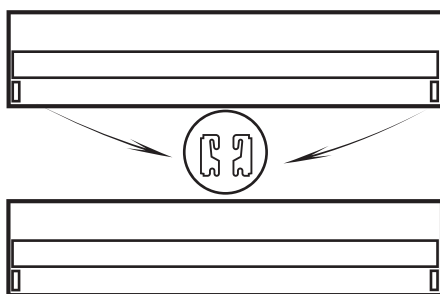

SIDE RAILS

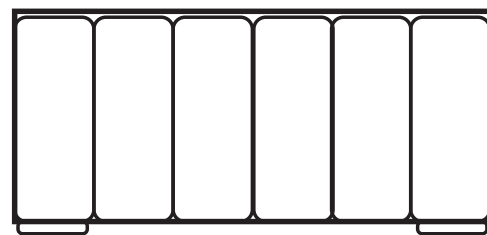


FOOTBOARD
(FRONT)

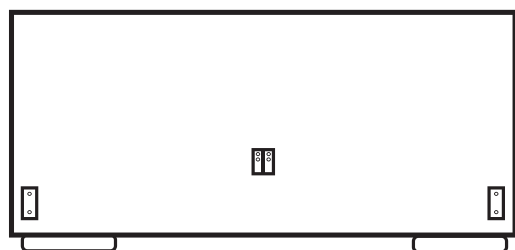

FOOTBOARD
(BACK)



MIDDLE
SUPPORT BAR

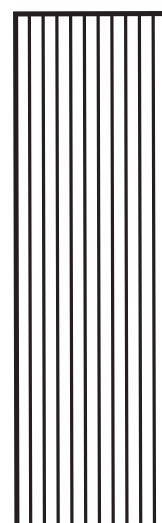

SLATS

Step by Step Guide:

- 1. Lay out all the parts.**
- 2. Unscrew the bolts that are already in place on the fittings of the headboard and footboard.**
- 3. Place the side rail onto the fitting.**
- 4. Tighten the bolts again to secure the side rails in place.**
- 5. Insert the middle support bar onto the fitting in the middle of the headboard and footboard.**
- 6. Double-check all connections to ensure they are tight and secure.**
- 7. Place the support slats evenly across on the side rails.**
- 8. Finally, place the mattress on the bed frame and enjoy your new upholstered bed!**