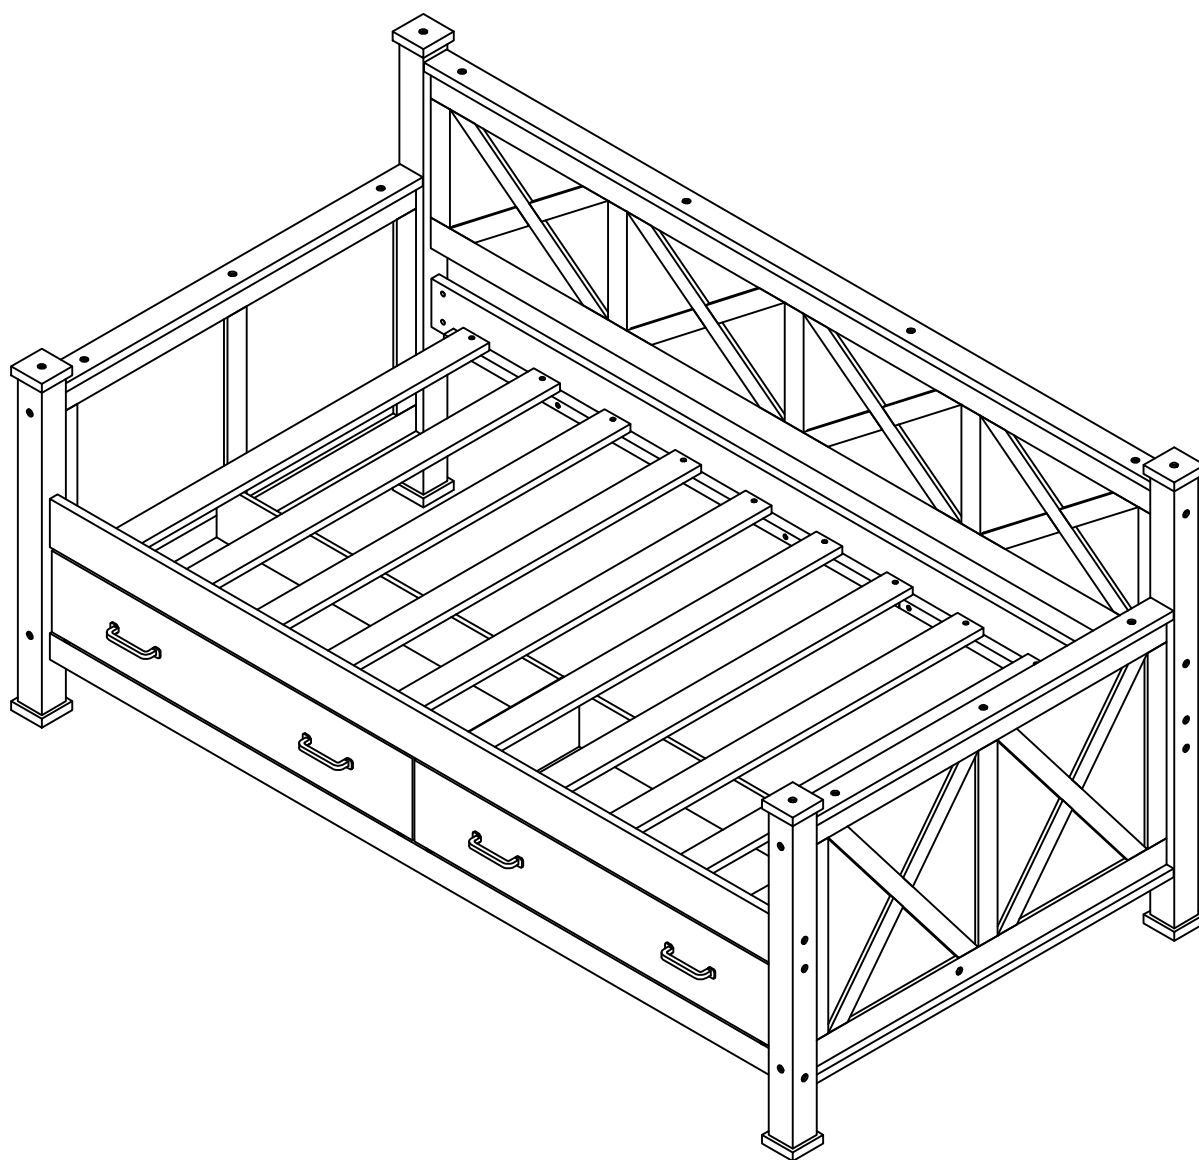
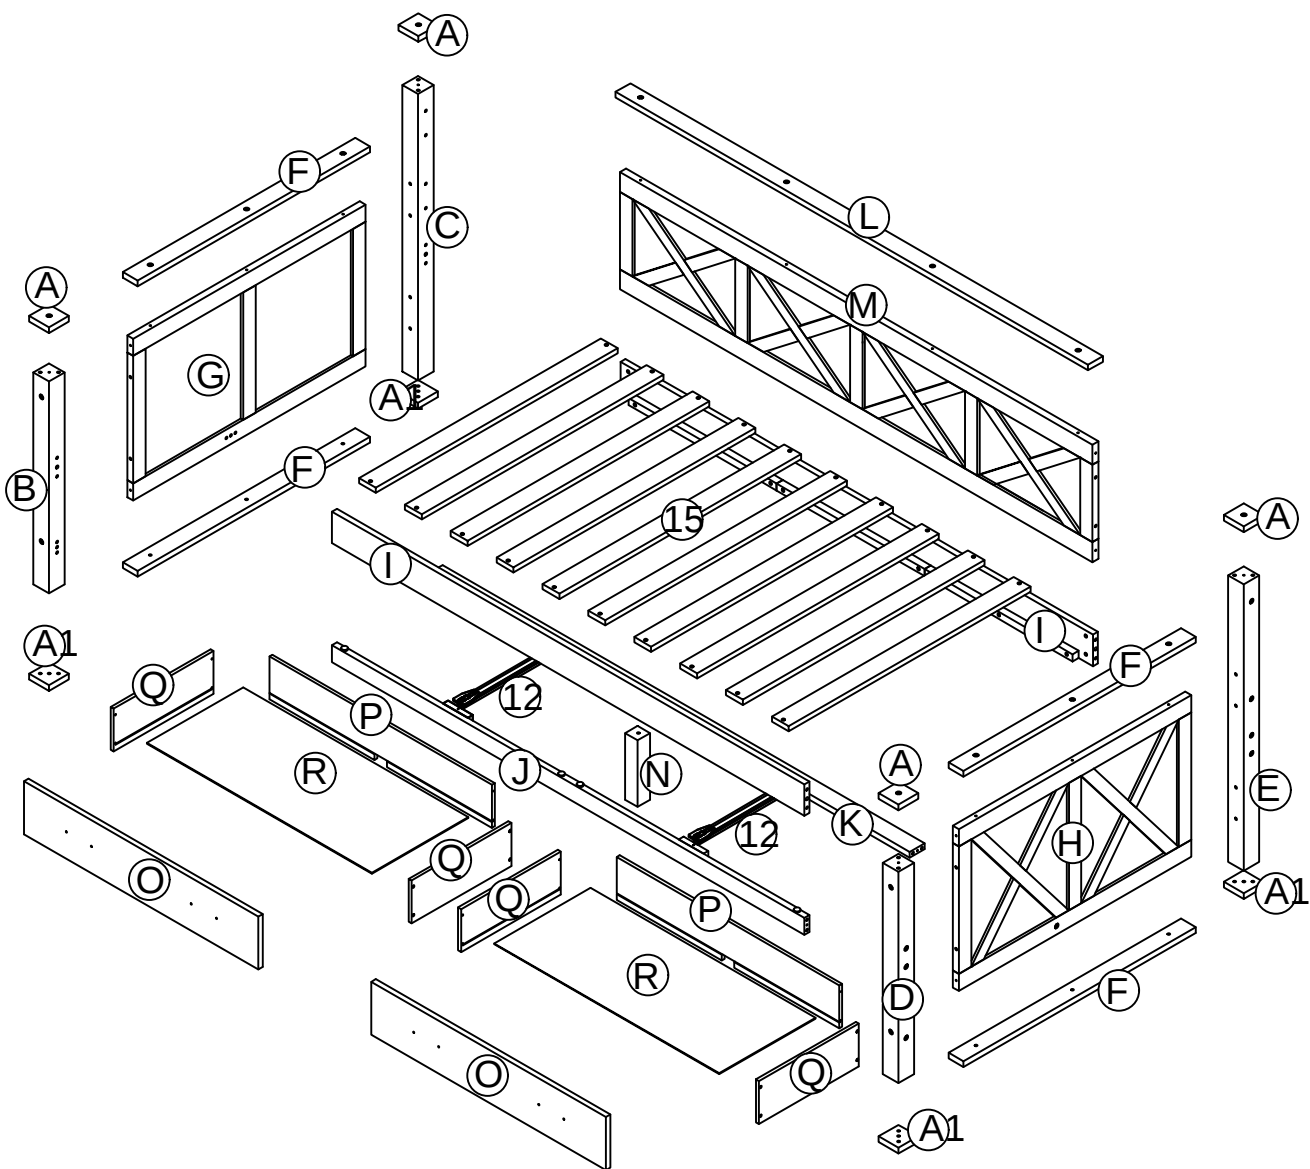







ASSEMBLY INSTRUCTIONS










Detail View









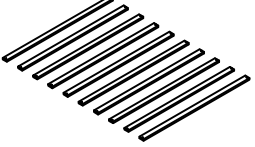Part List


G 	H 	O 
Left frame- 1pc	Right frame- 1pc	Drawer front- 2pcs
P 	Q 	R 
Drawer back- 2pcs	Drawer side- 4pcs	Drawer bottom- 2pcs
15 		
Slats -10pcs		

Part List

A-A1 	B 	C 
Leg block- 8pcs	Front leg (left)-1pc	Back leg (left)- 1pc
D 	E 	F 
Front leg (right)- 1pc	Back leg (right)- 1pc	Horizontal side bar- 4pcs
J 	K 	I 
Horizontal front bar- 1pc	Horizontal middle bar- 1pc	Rail- 2pcs
M 	N 	L 
Back frame- 1pc	Support leg- 1pc	Horizontal back bar- 1pc


1  Ø10 x 30mm Wood dowel (40pcs)	2  (Ø15)1/4" x 100mm Bolts (8pcs)	3  (Ø13)1/4" x 25mm Bolts (1pc)
4  5/32" x 20mm Bolts (8pcs)	5  Ø1/4" x 100mm Hex-Head bolts (14pcs)	6  Ø1/4" x 50mm Hex-Head bolts (26pcs)
7  1/4"*15 (9.5mm) Horizontal-Hole bolts(8pcs)	8  4*58mm Allen key (1pcs)	9  Ø3.3 x 12mm Wood screws (8pcs)
10  Ø4 x 25mm Wood screws (18pcs)	11  Ø4 x 30mm Wood screws 20pcs)	12  Kenlin glide (+) (2 pcs)
13  Kenlin glide (-) (2 pcs)	14  Handles (4pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

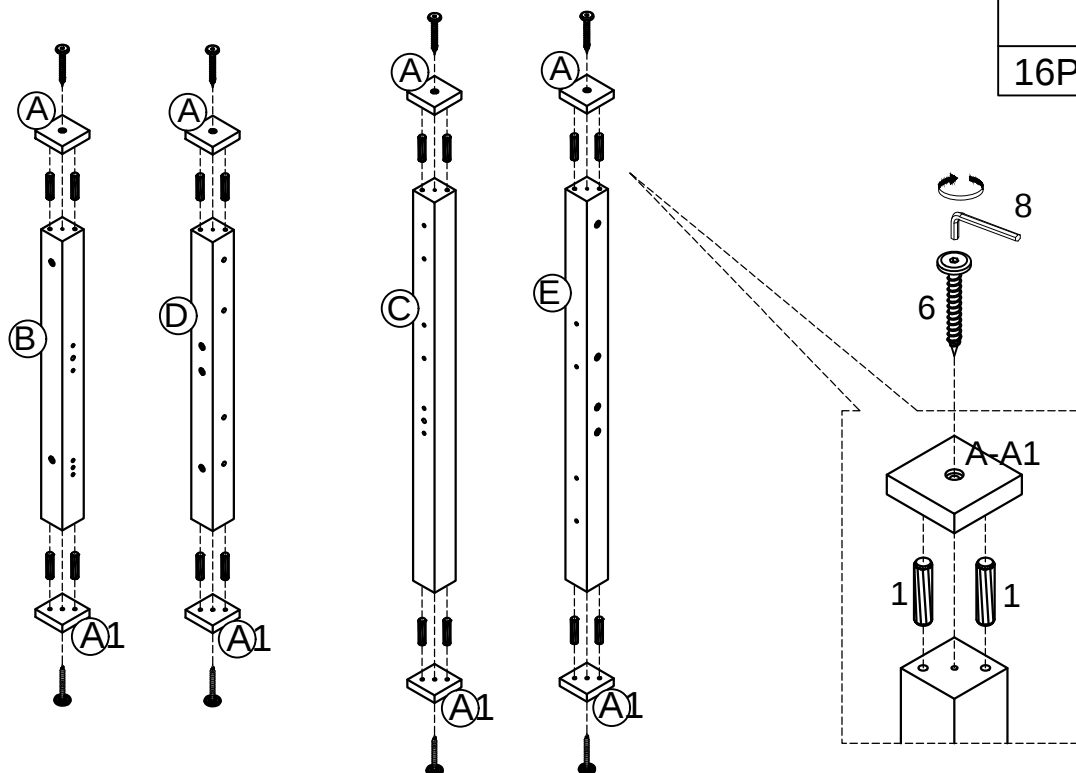STEP 1:





1		6	
16PCS		8PCS	

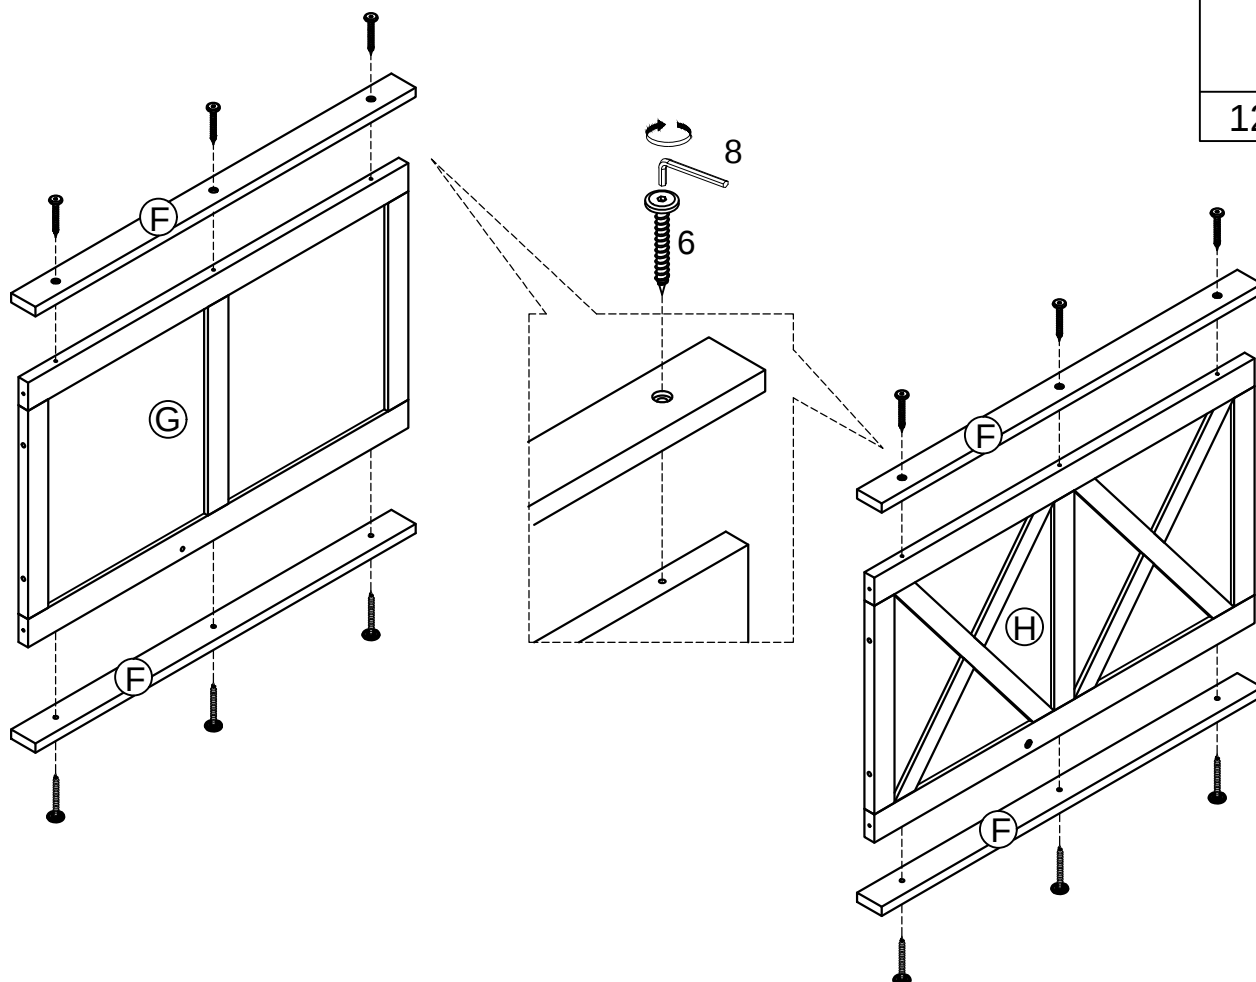STEP 2:





6	
12PCS	

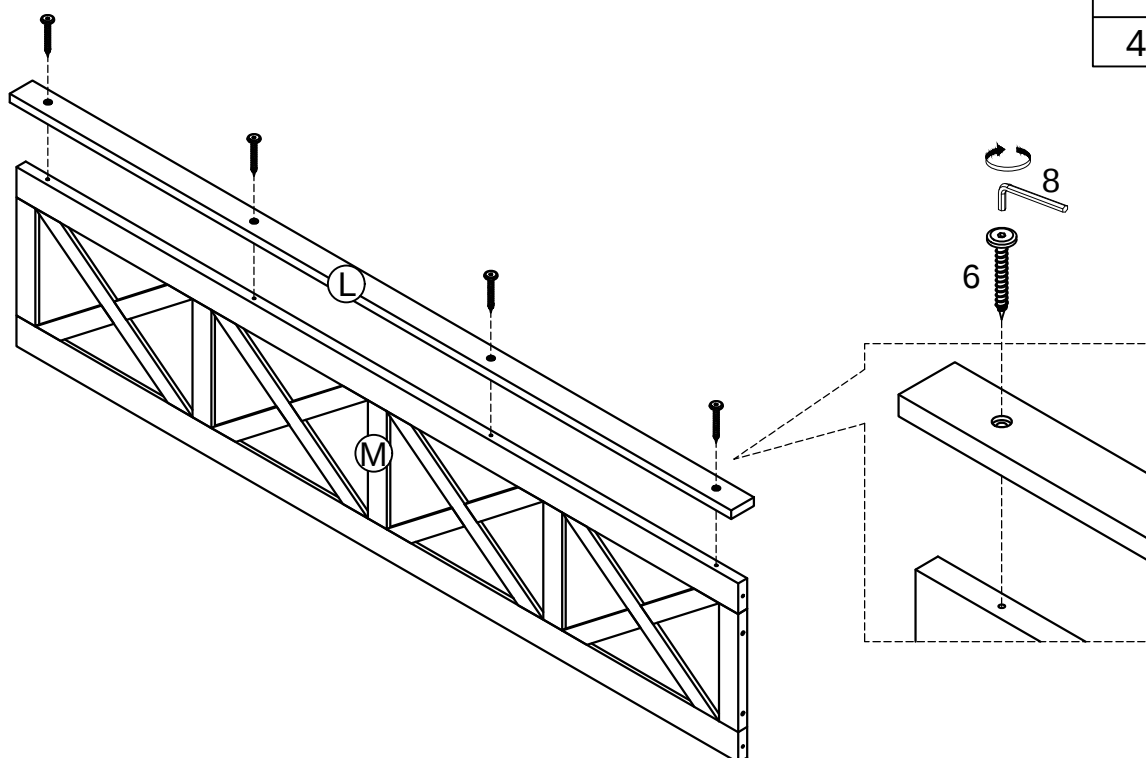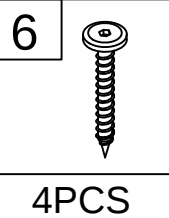
STEP 3:



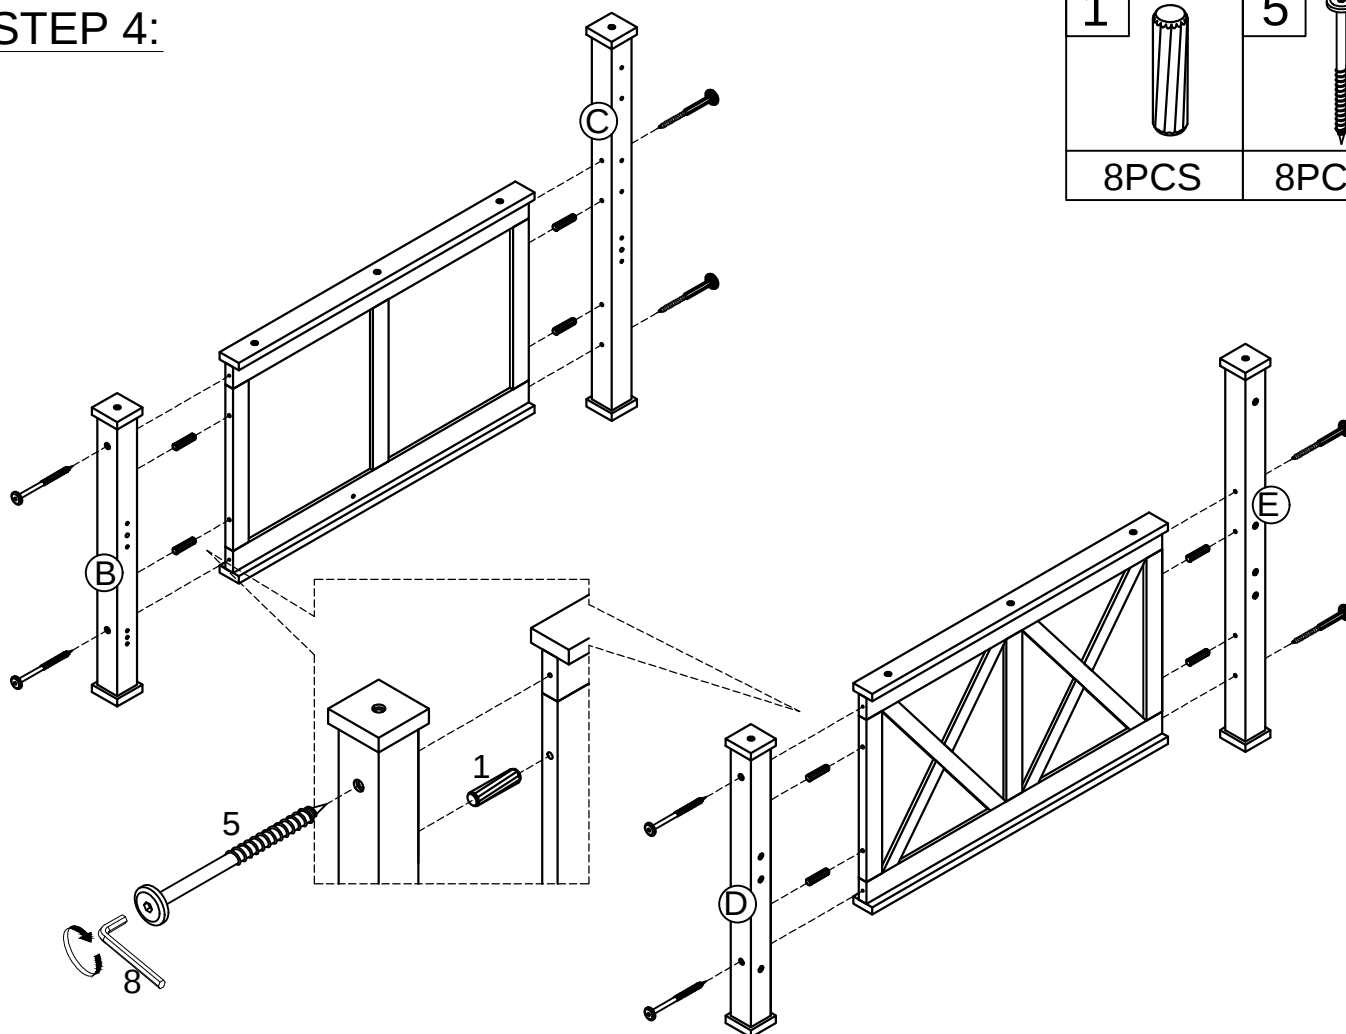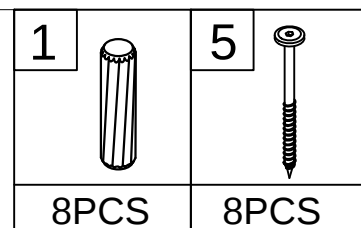STEP 4:



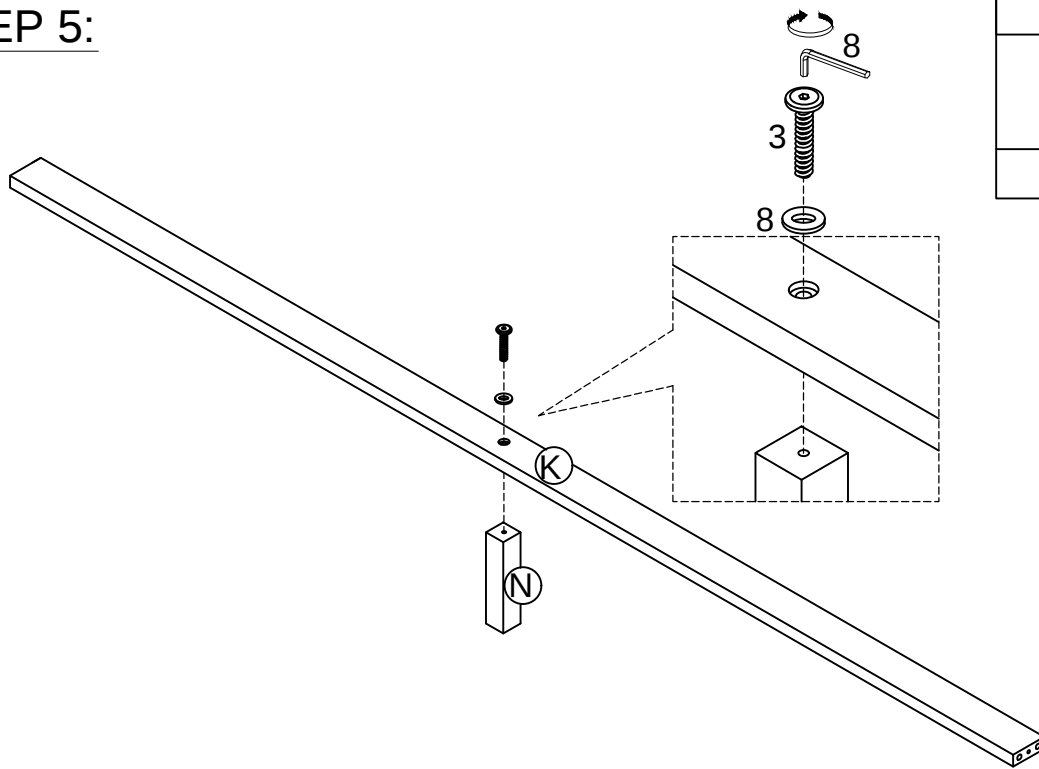
STEP 5:




	3
	1PC

STEP 6:


1	7	2	5	6
16PCS	8PCS	8PCS	6PCS	2PCS

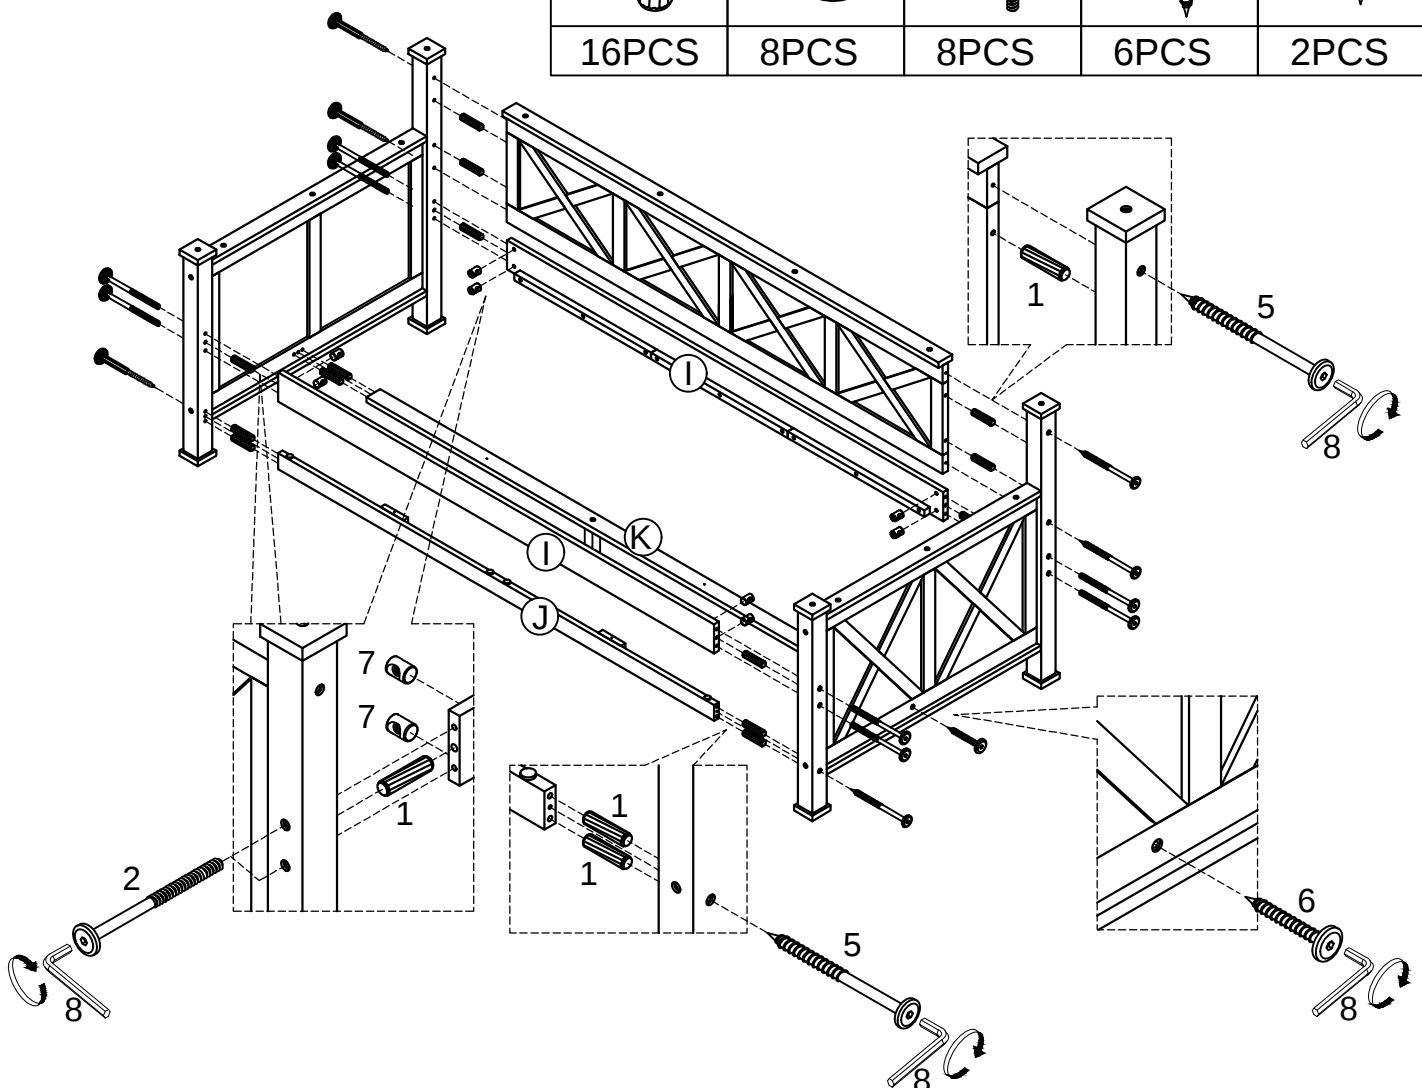

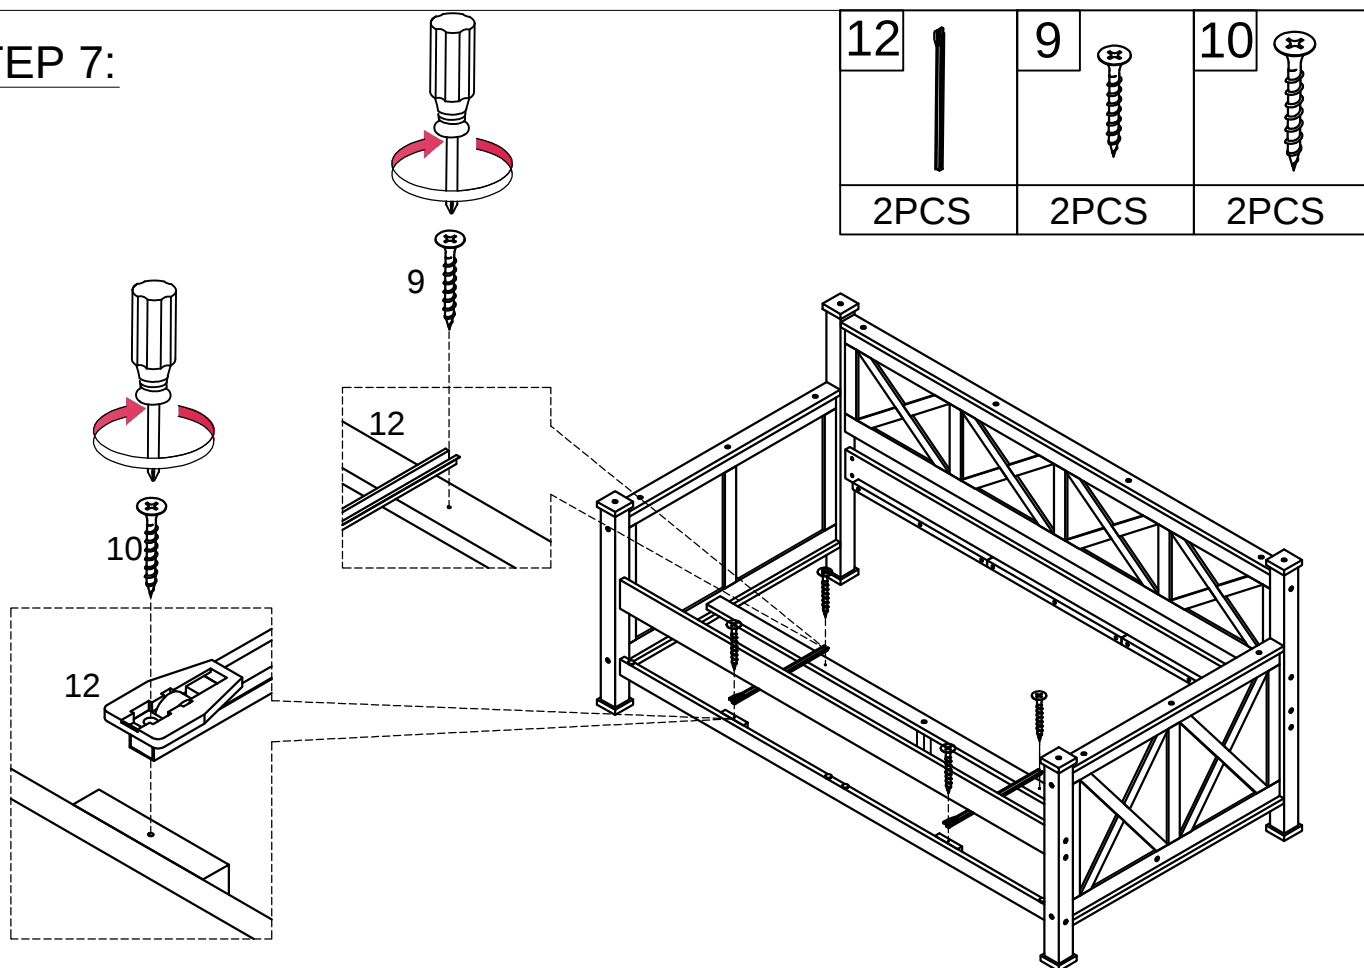
STEP 7:



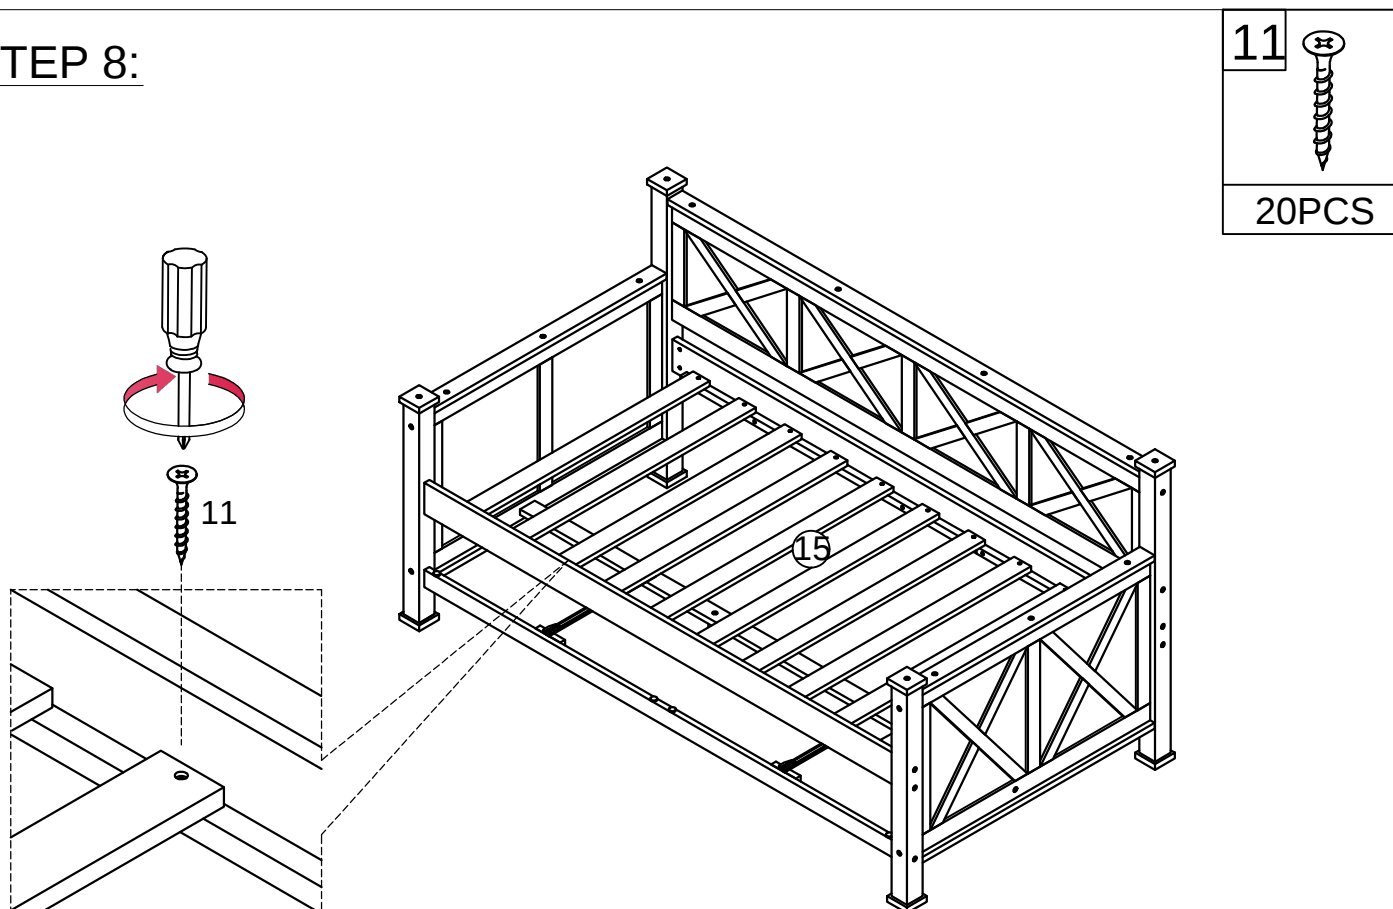
STEP 8:



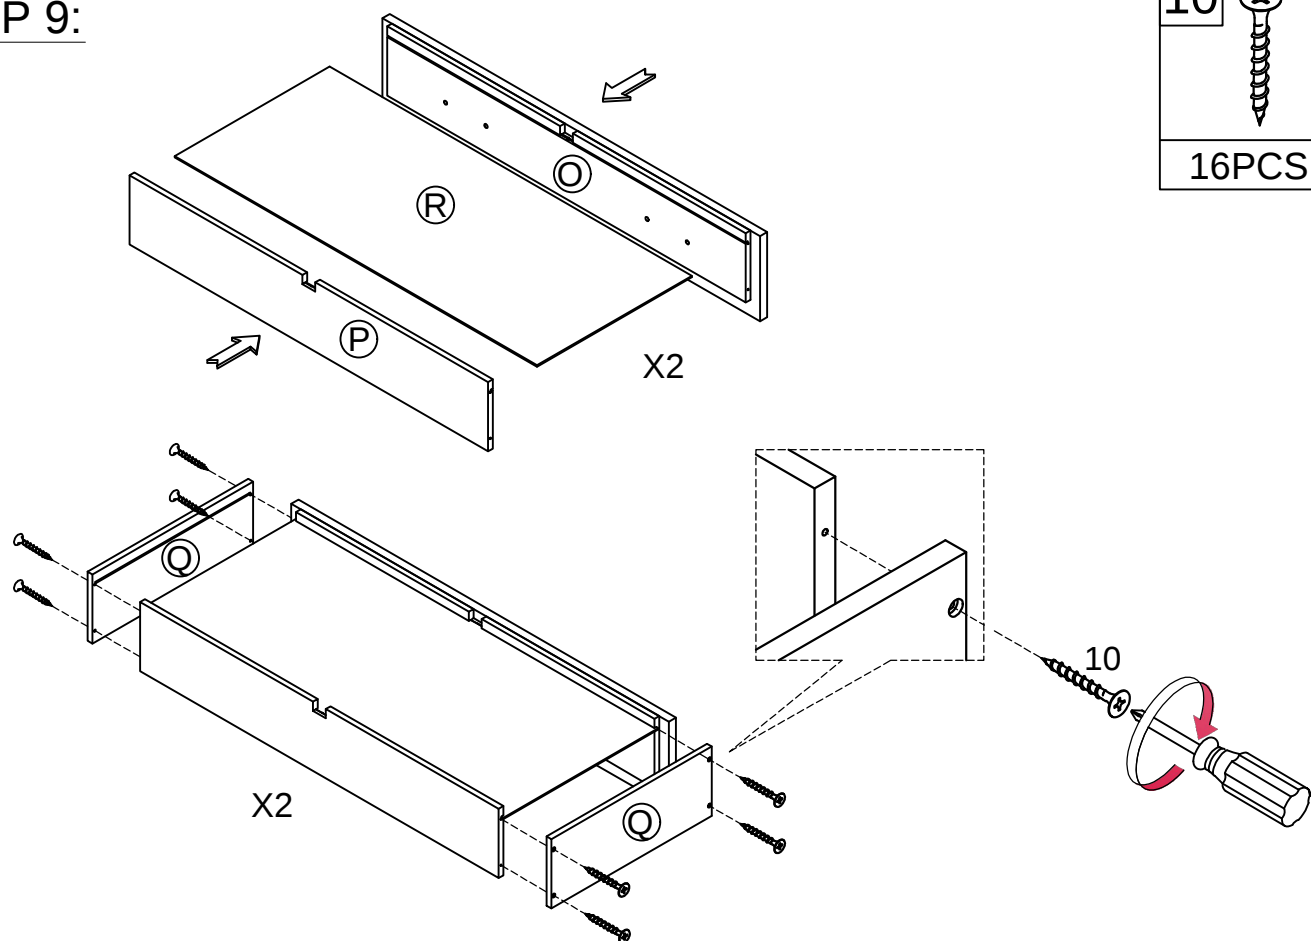
STEP 9:



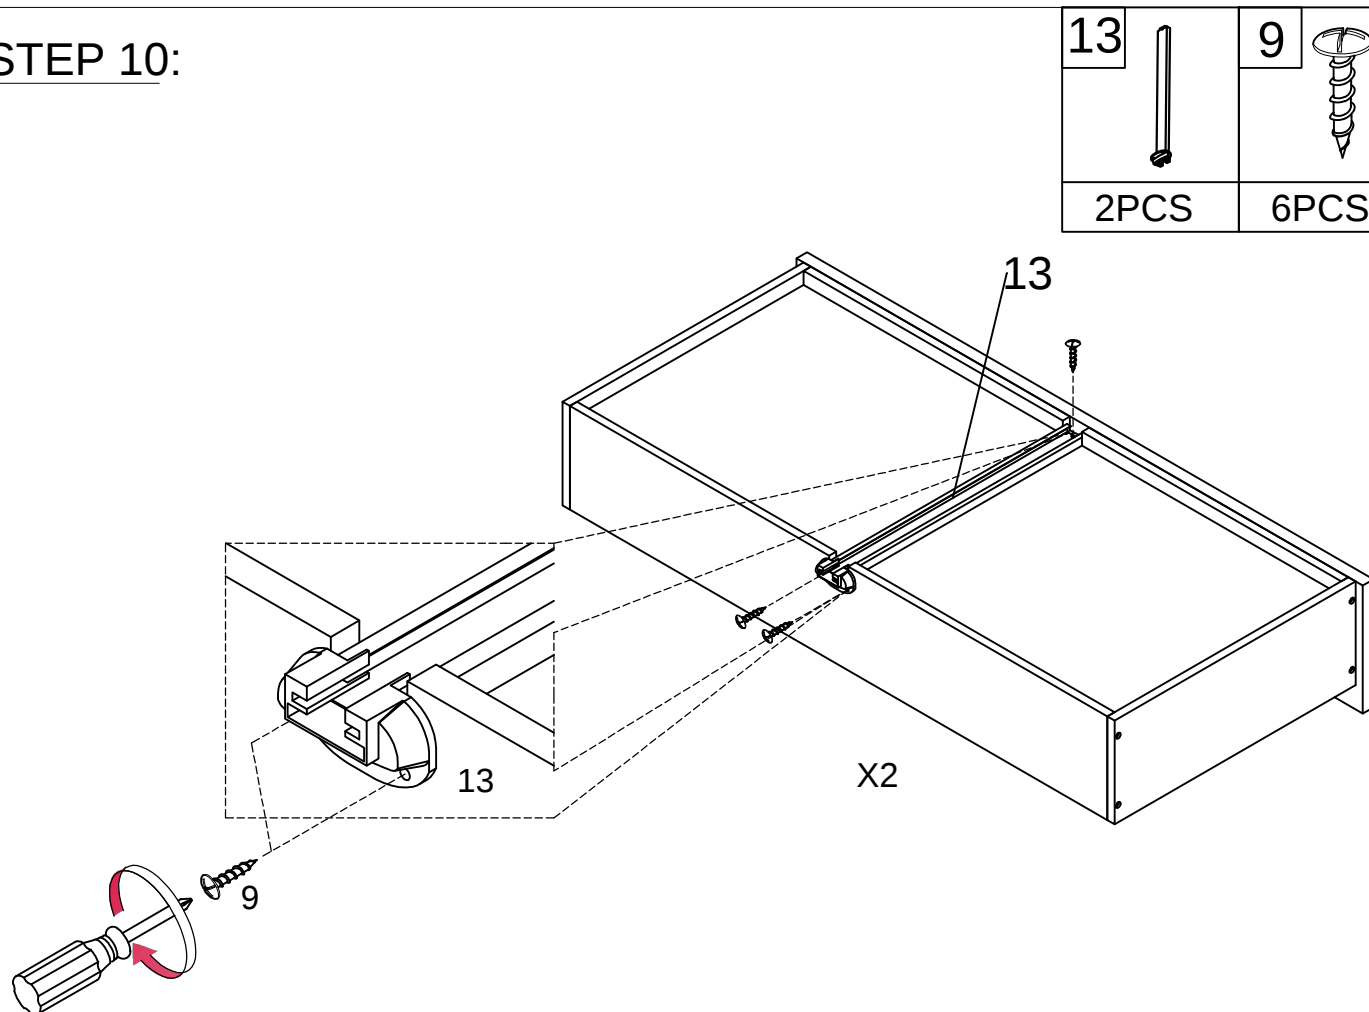STEP 10:



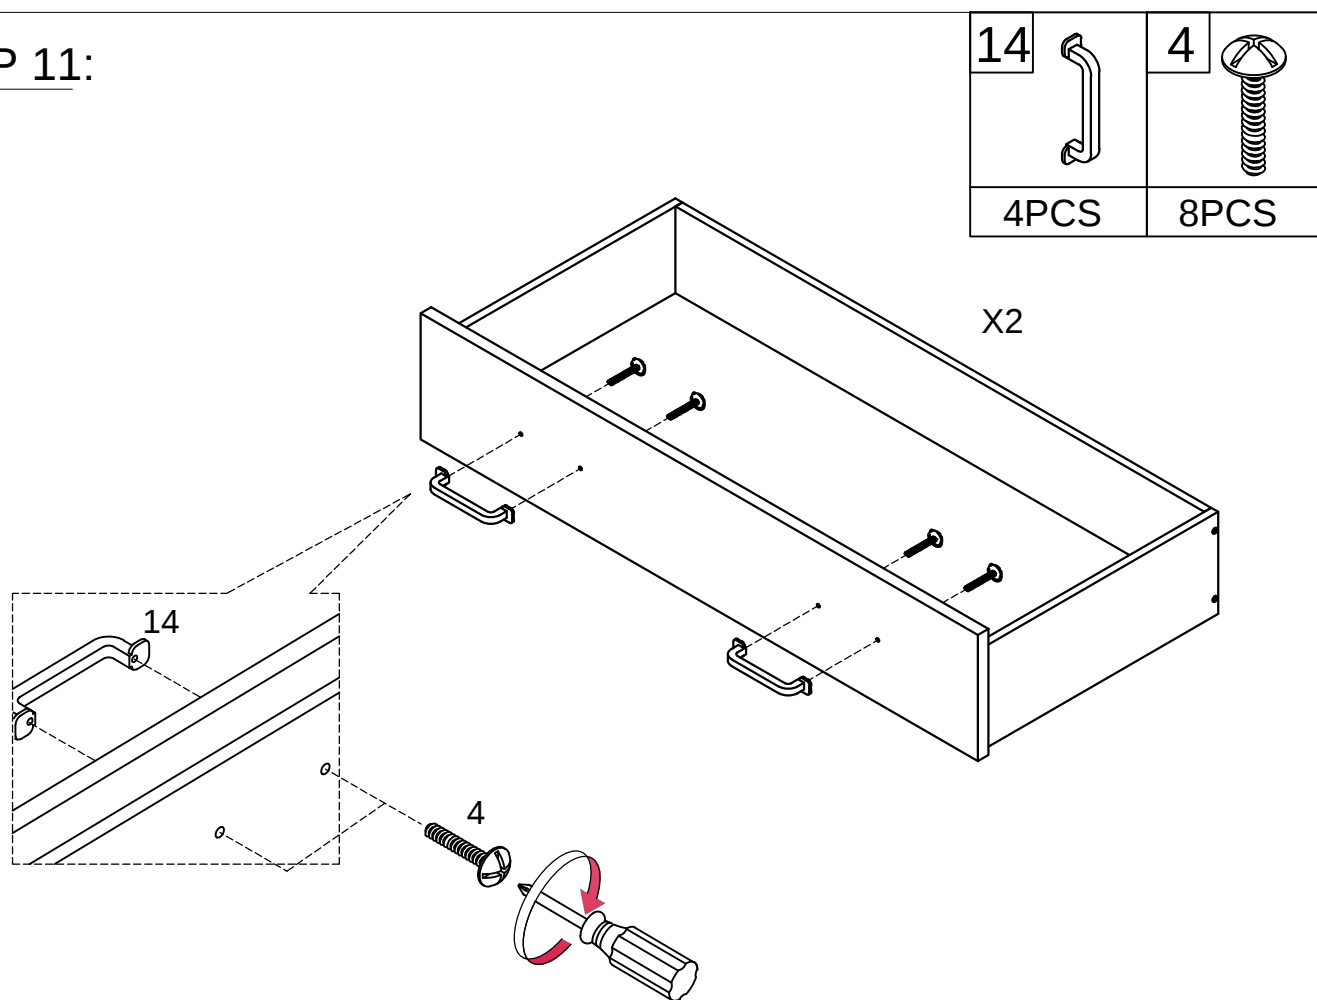STEP 11:



STEP 12:

