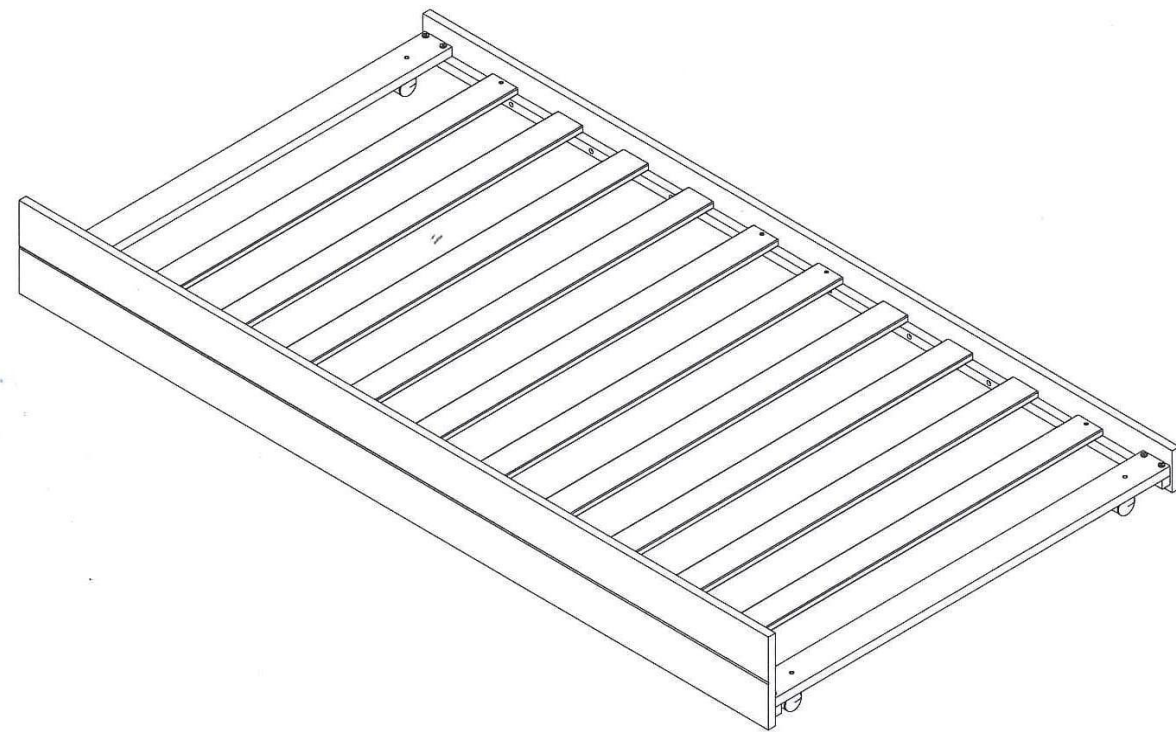


STEP 3






Attach and secure **Wooden Slat** onto previous assembly and insert **(B)** to tighten it up by using Crosshead Screw Driver. Go on to complete the assembly.

ASSEMBLY INSTRUCTION

TRUNDLE BED (1000 x 1885)MM



HARDWARE LIST

A  JCBC BOLT (M6 x 35MM) 8 PCS	B  CSK C/B SCREW (M4 x 32MM) 8 PCS	C  SOCKET 4 PCS
D  CASTOR 40SA-C 4 PCS	E  ALLEN KEY (M4 x 60MM) 1 PC	Tool Required : Crosshead Screw Driver

PART LIST

