


chest

Product ID. QN726

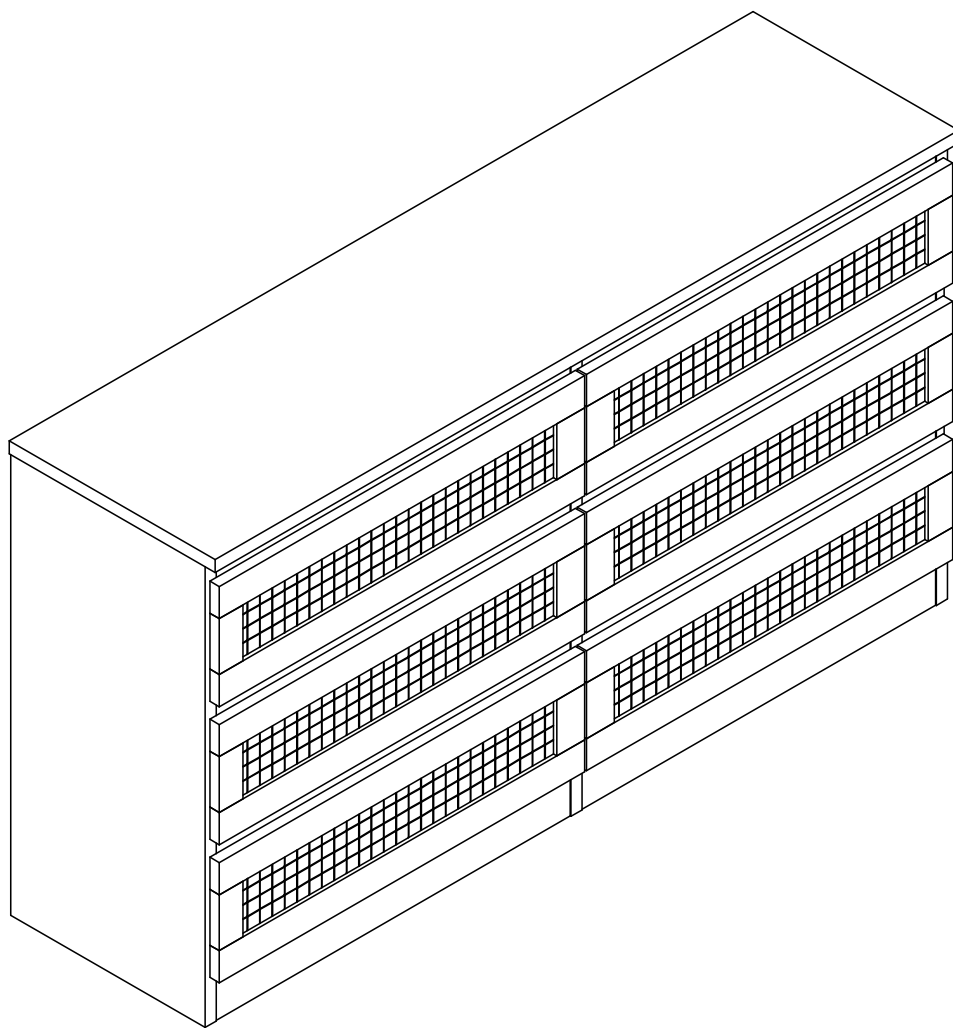


Scan for Support
support@garvee.com

















Distributed by
GARVEE.com

V2508287SQ2


BOARD IDENTIFICATION

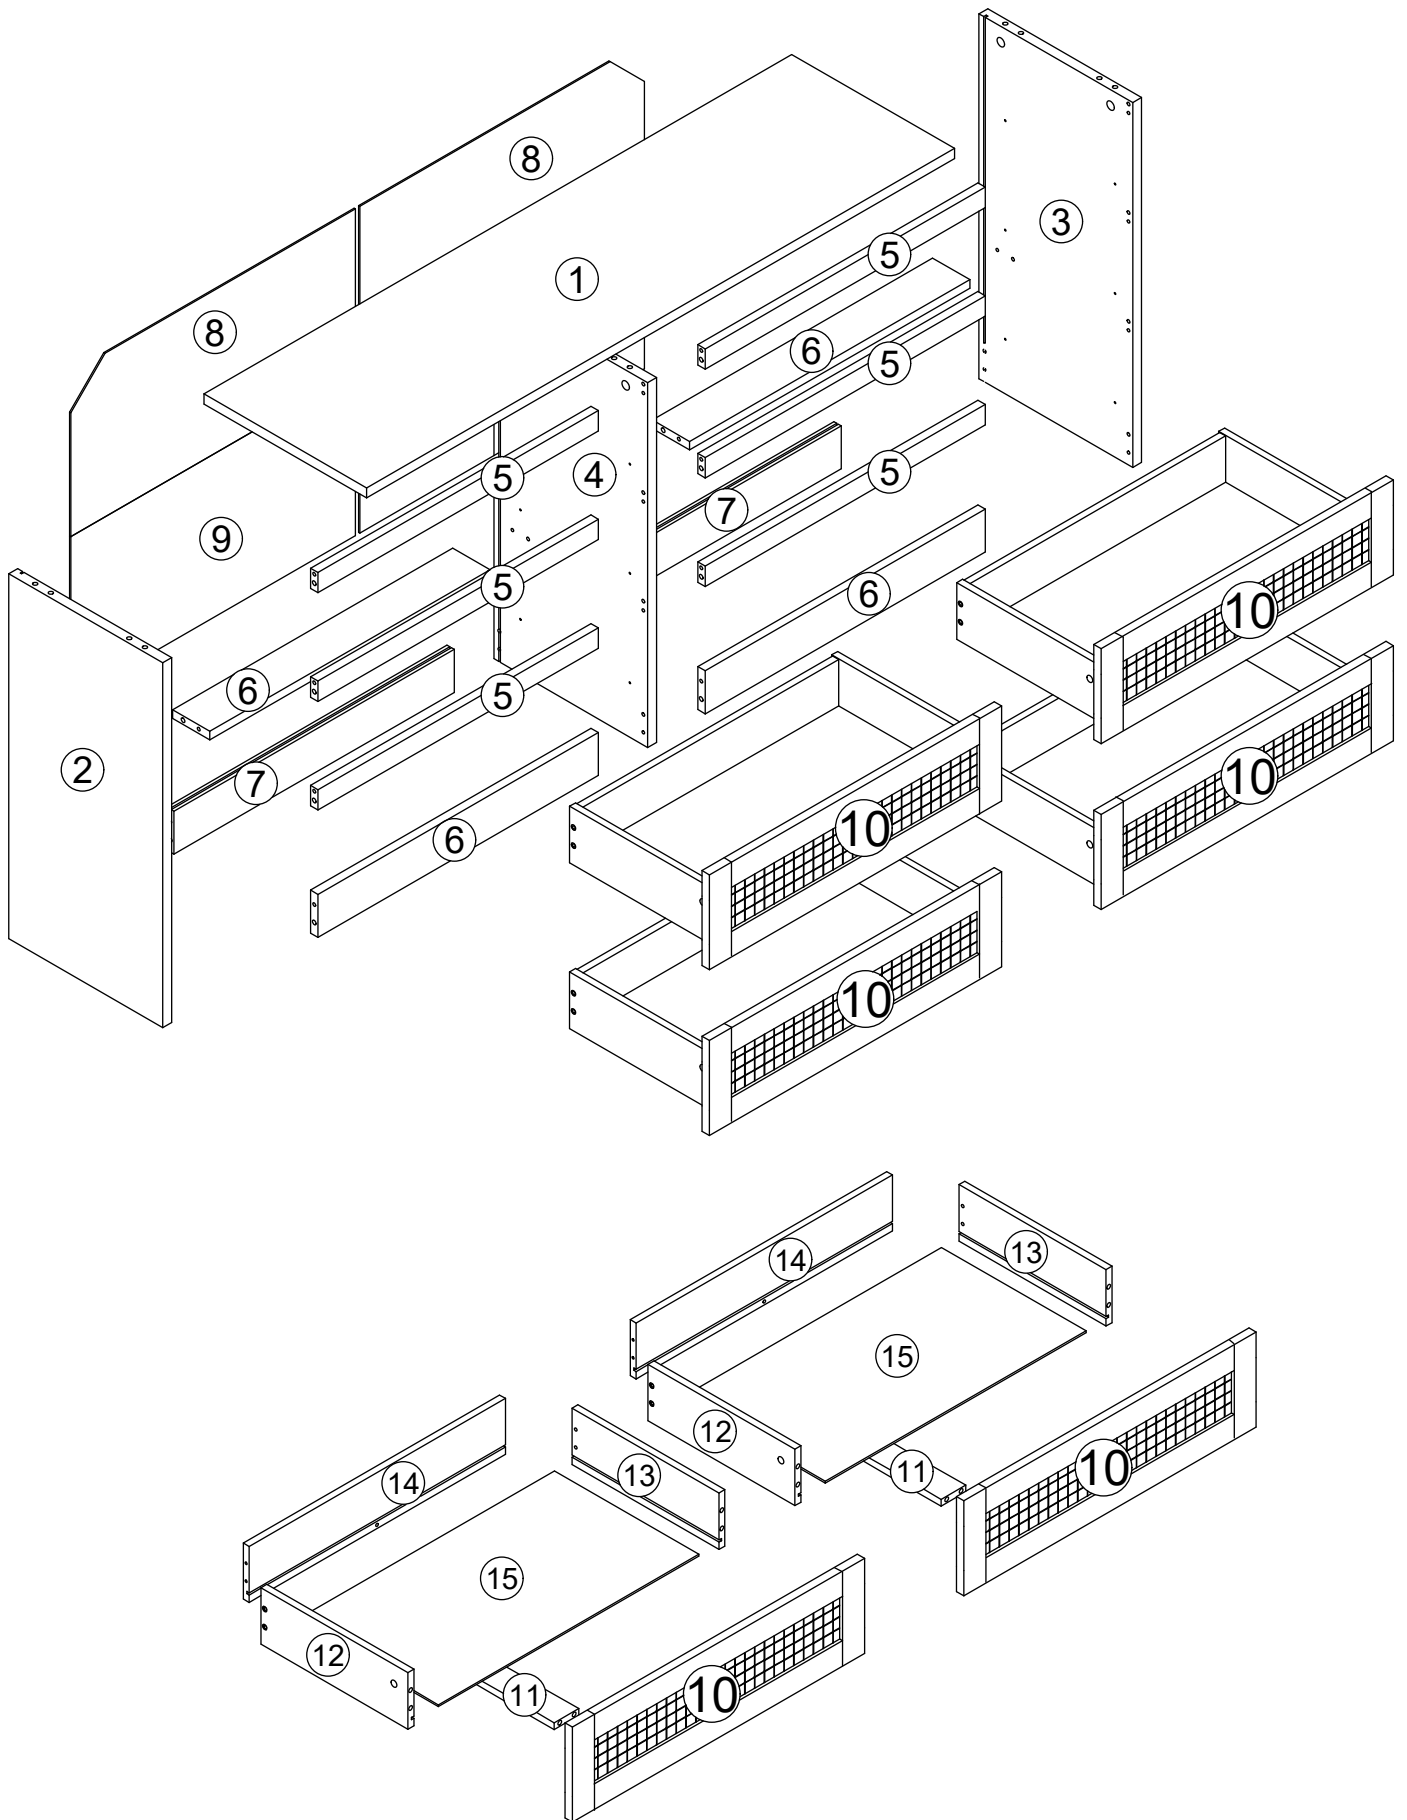


BOARD IDENTIFICATION

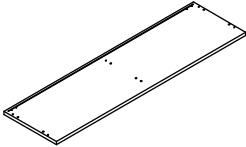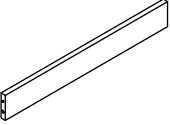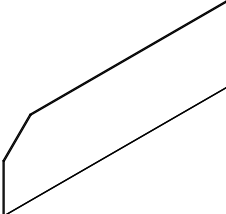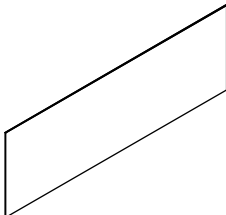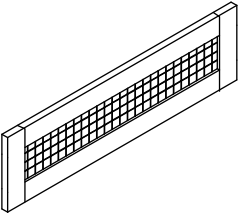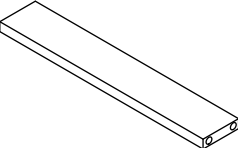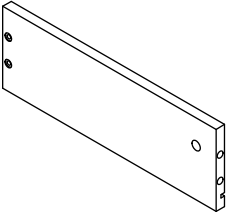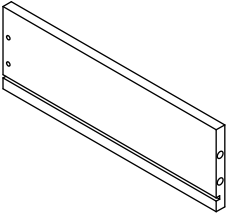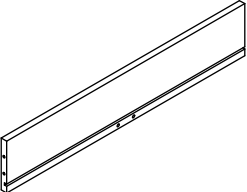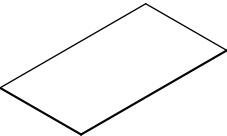				
① 1X	② 1X	③ 1X	④ 1X	⑤ 6X
				
⑥ 4X	⑦ 2X	⑧ 2X	⑨ 2X	⑩ 6X
				
⑪ 6X	⑫ 6X	⑬ 6X	⑭ 6X	⑮ 6X


BOARD IDENTIFICATION

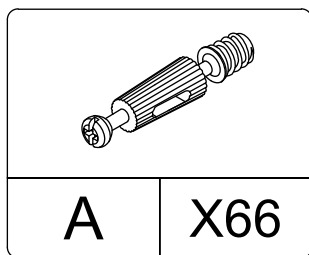


Cam Screws
Ø6X40

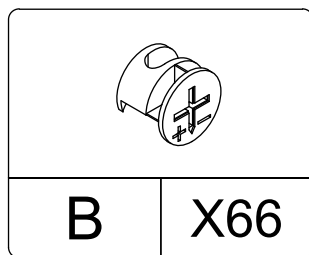


Cam lock
Ø15X9

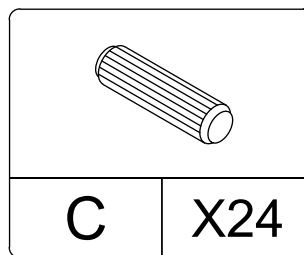


WoodDowel
Ø8X40

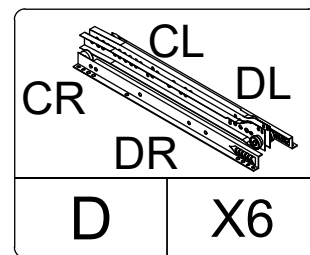


Bottom-Mount Drawer Slide Kit
Detachable
Symmetrical parts

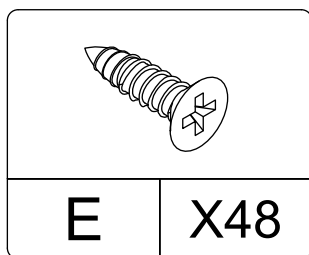


Self-tapping screws
Ø3.5X12

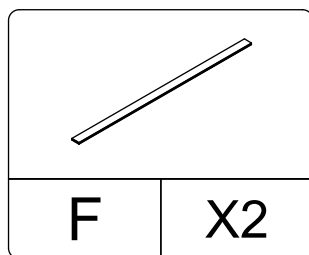


Clip Strip

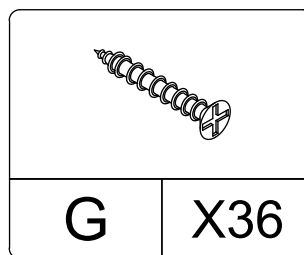


Self-tapping screws
Ø4X40

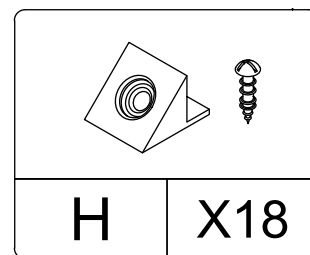


Back plate buckle

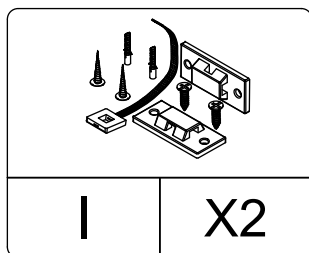


Anti-inverted
parts

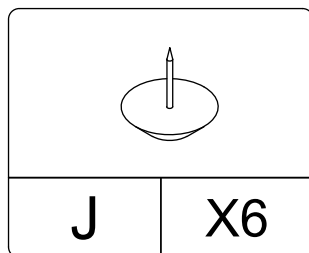





Foot nail

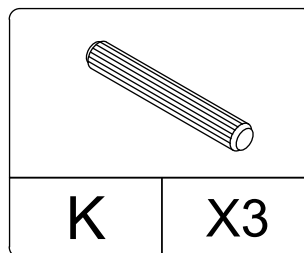

WoodDowel
Ø8X50







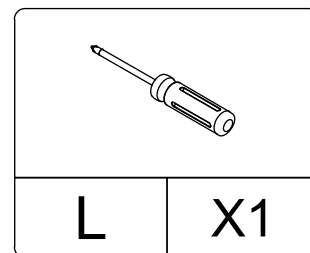


Screwdriver

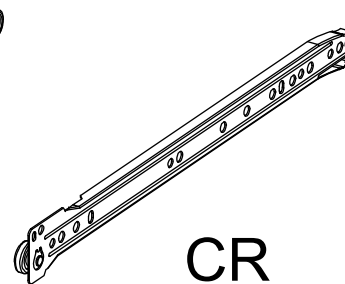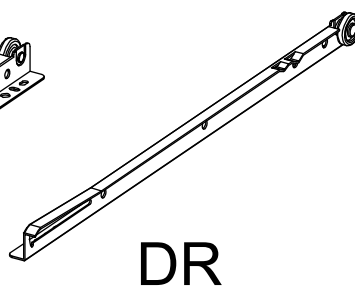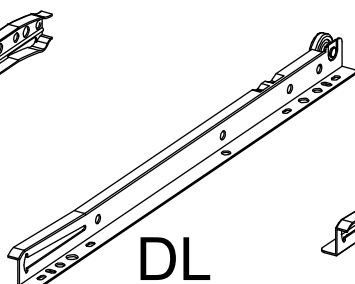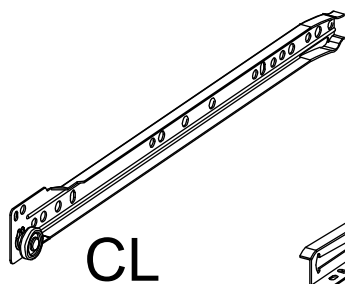

IMPORTANT PRECAUTIONS




Use Cam Screws 、 Cam Lock Nuts、

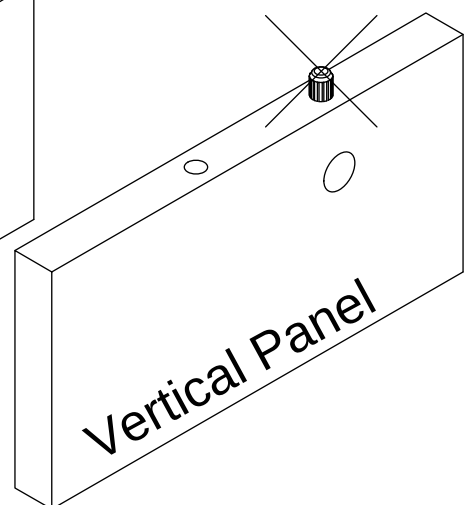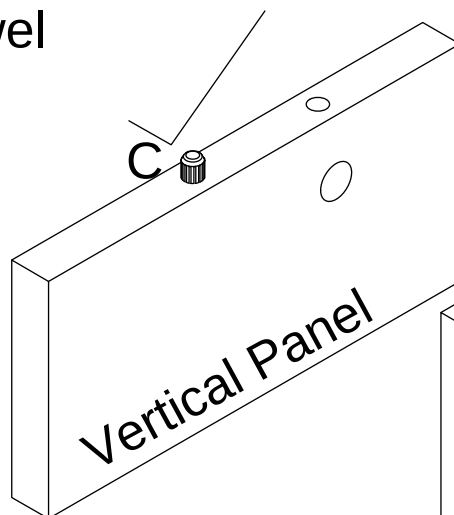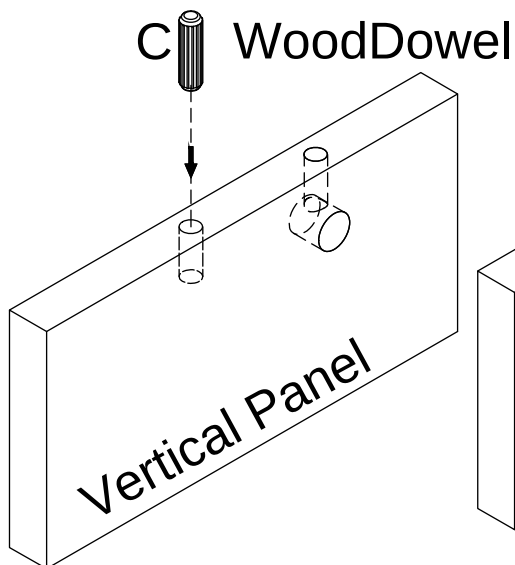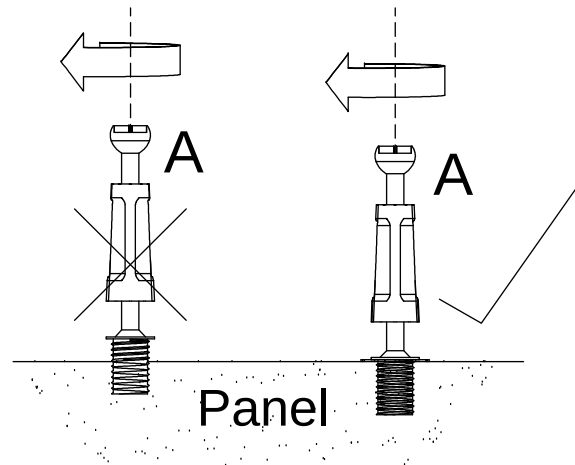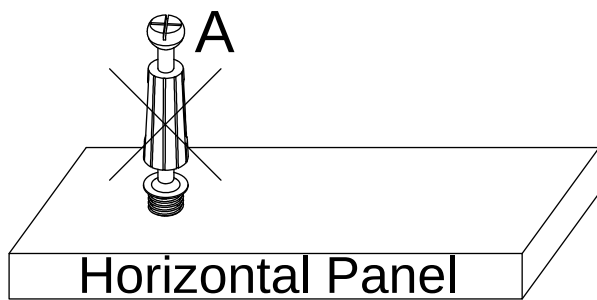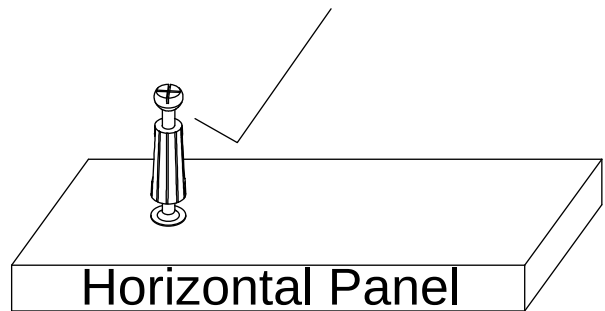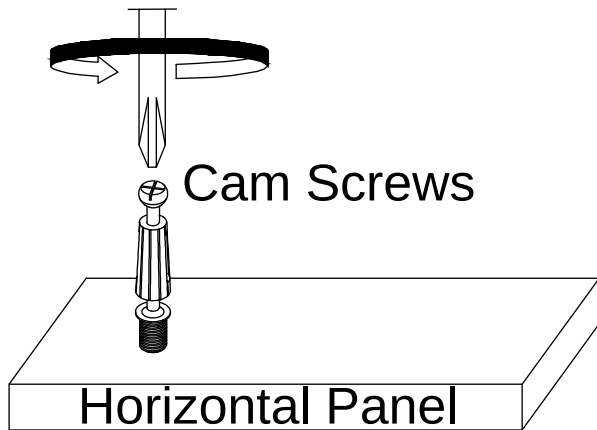


BOARD IDENTIFICATION

IMPORTANT PRECAUTIONS

Use Cam Screws 、 Cam Lock Nuts、 Dowel Kit(B)


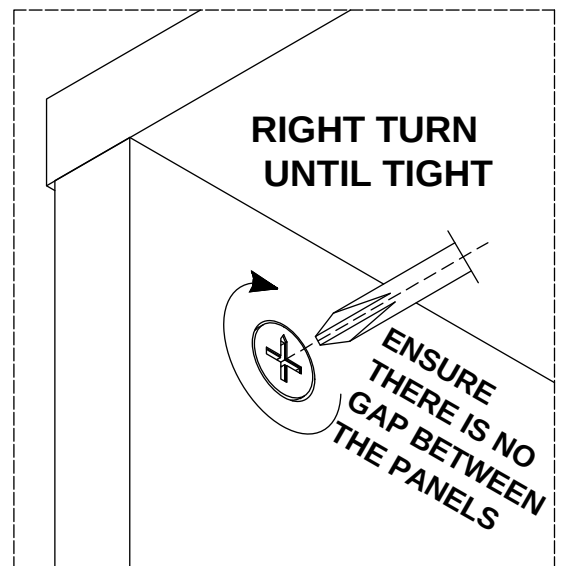
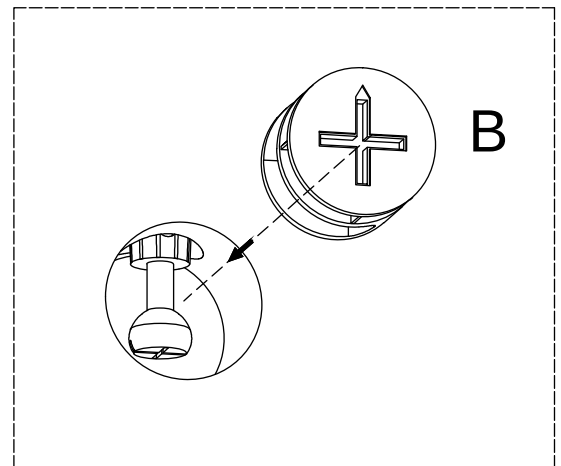
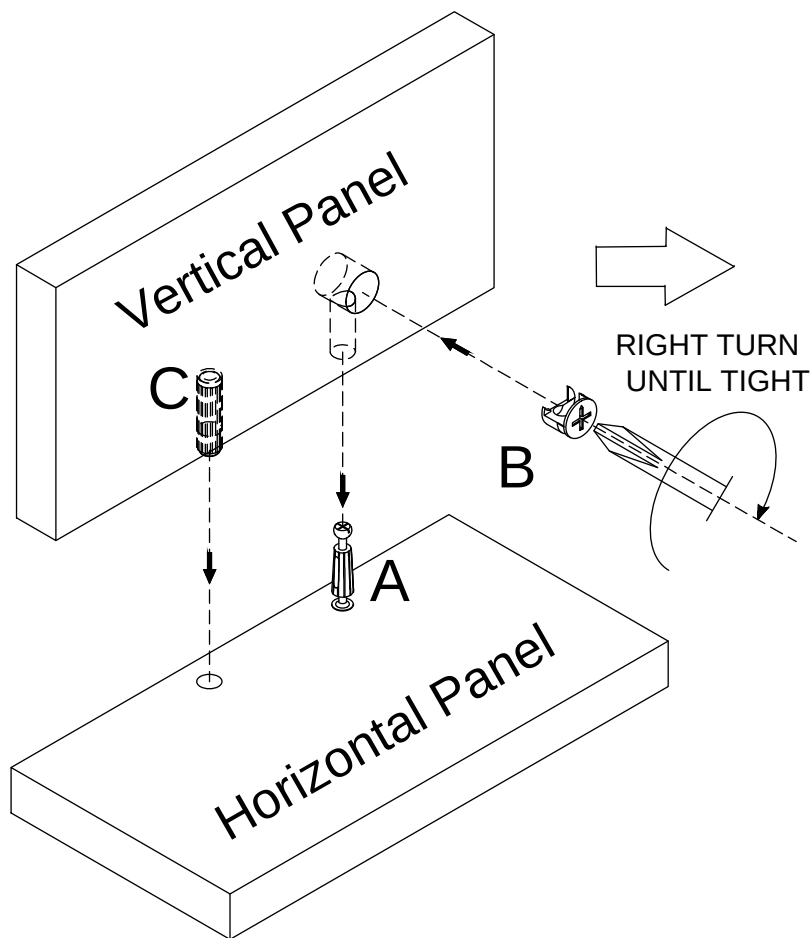


ENSURE THERE IS NO GAP BETWEEN THE PANELS



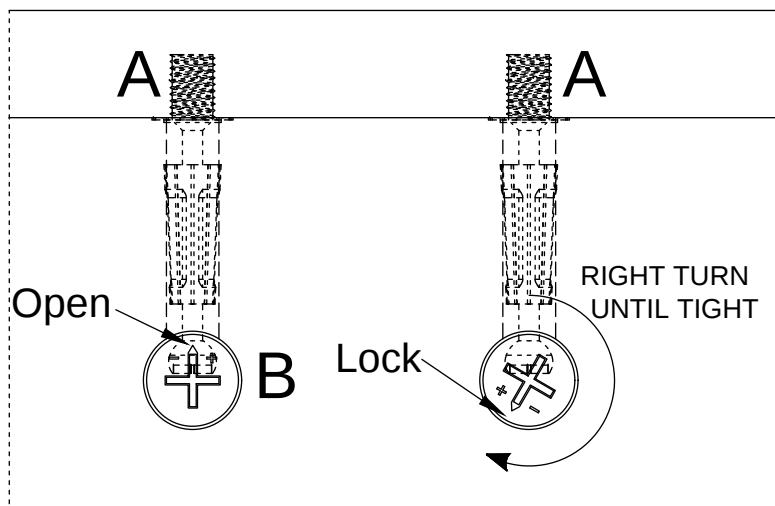


INSTALLATION STEPS

STEP1:

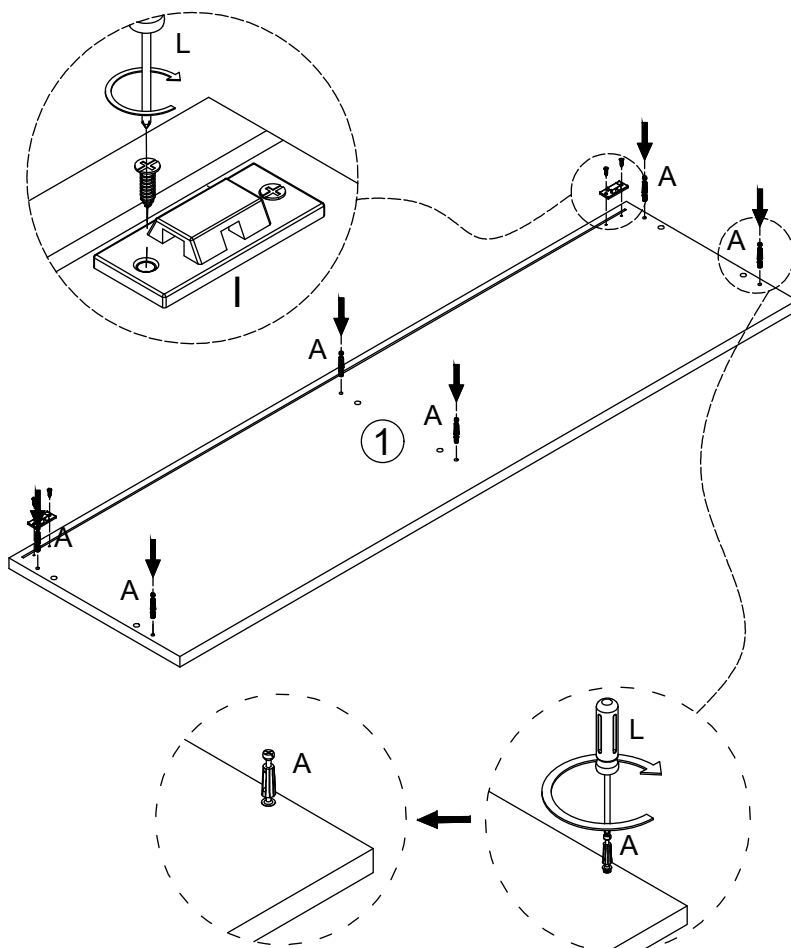
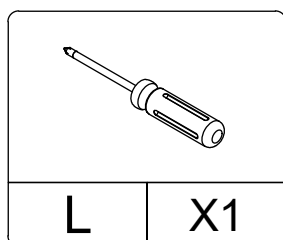
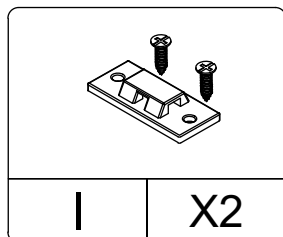
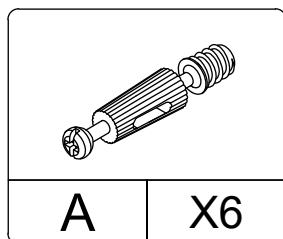


STEP2:




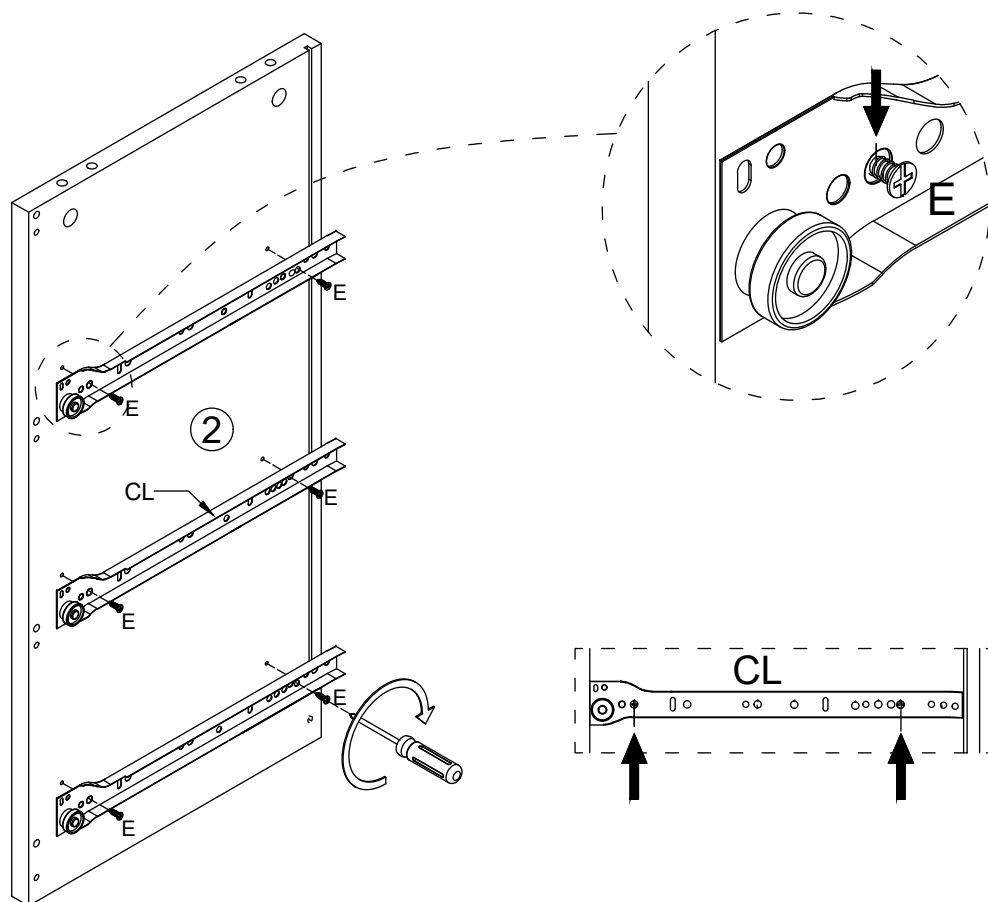
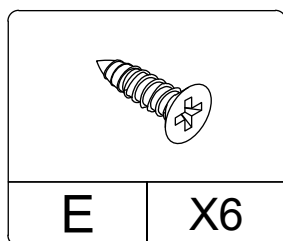
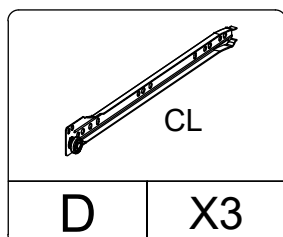


INSTALLATION STEPS

STEP3:

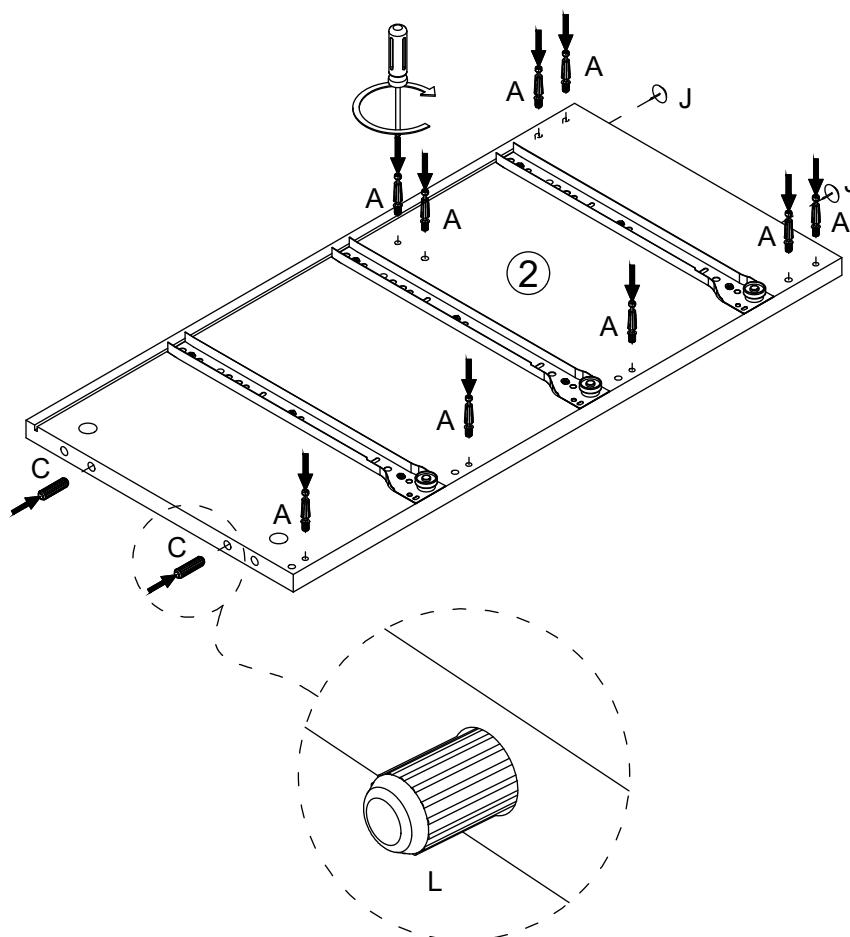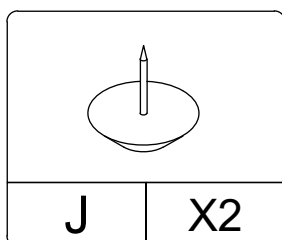
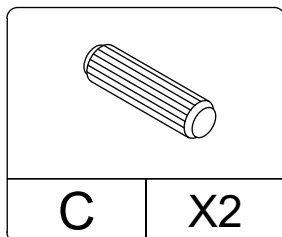
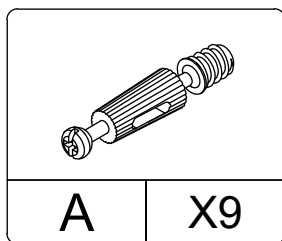



STEP4:

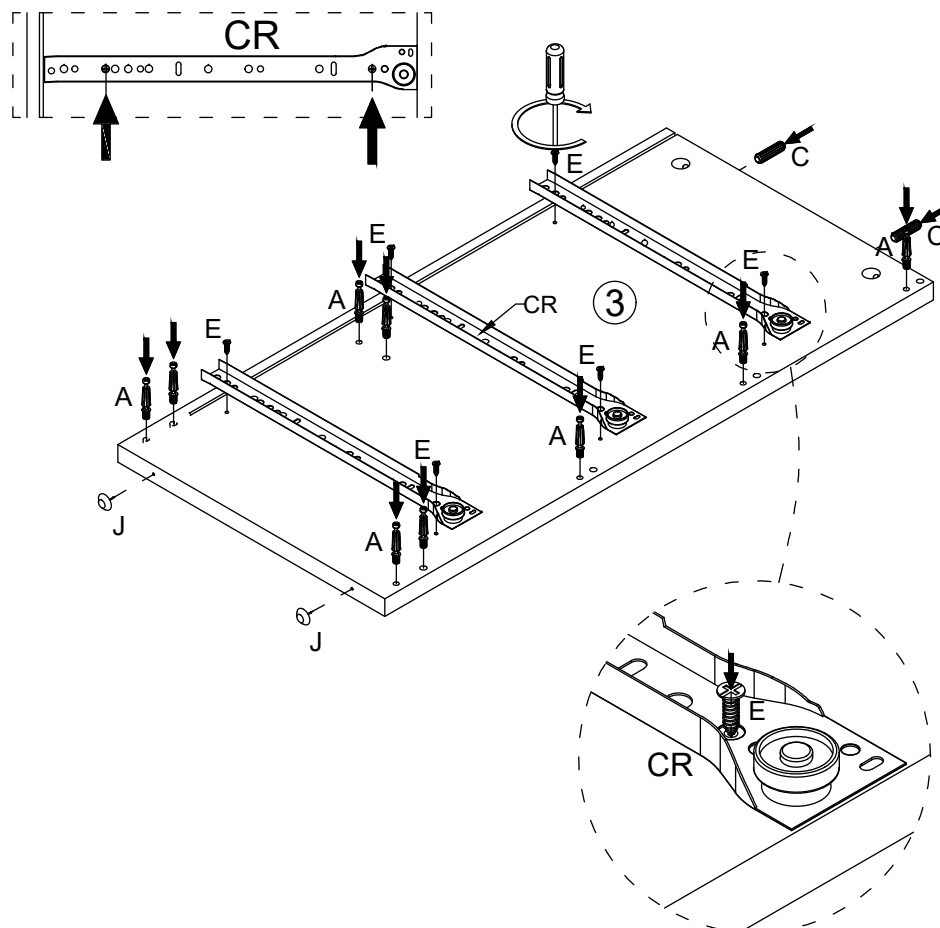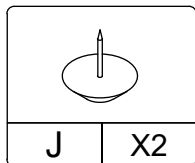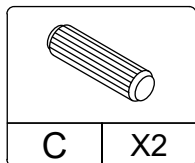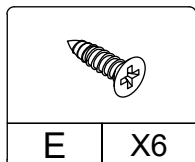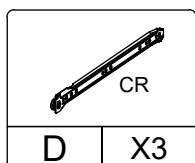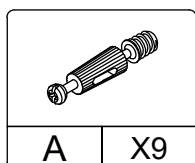



INSTALLATION STEPS


STEP5:

	
A	X9
	
D	X3
	
E	X6
	
C	X2

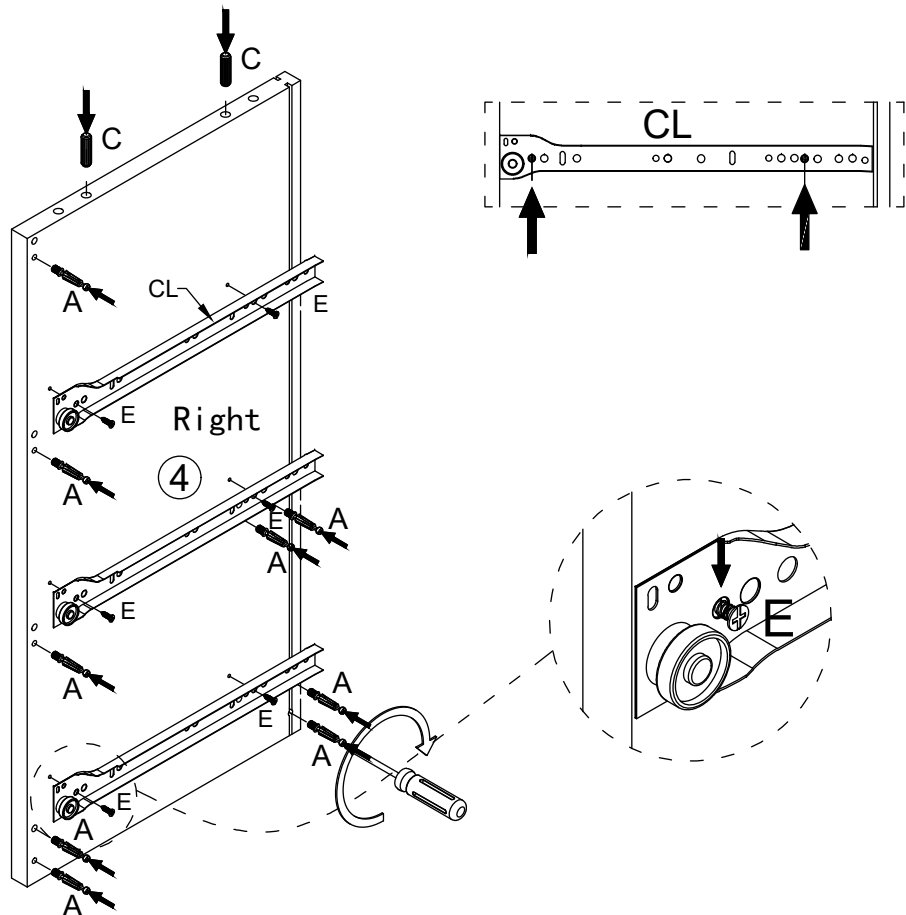




STEP6:

	
A	X9
	
D	X3
	
E	X6
	
J	X2

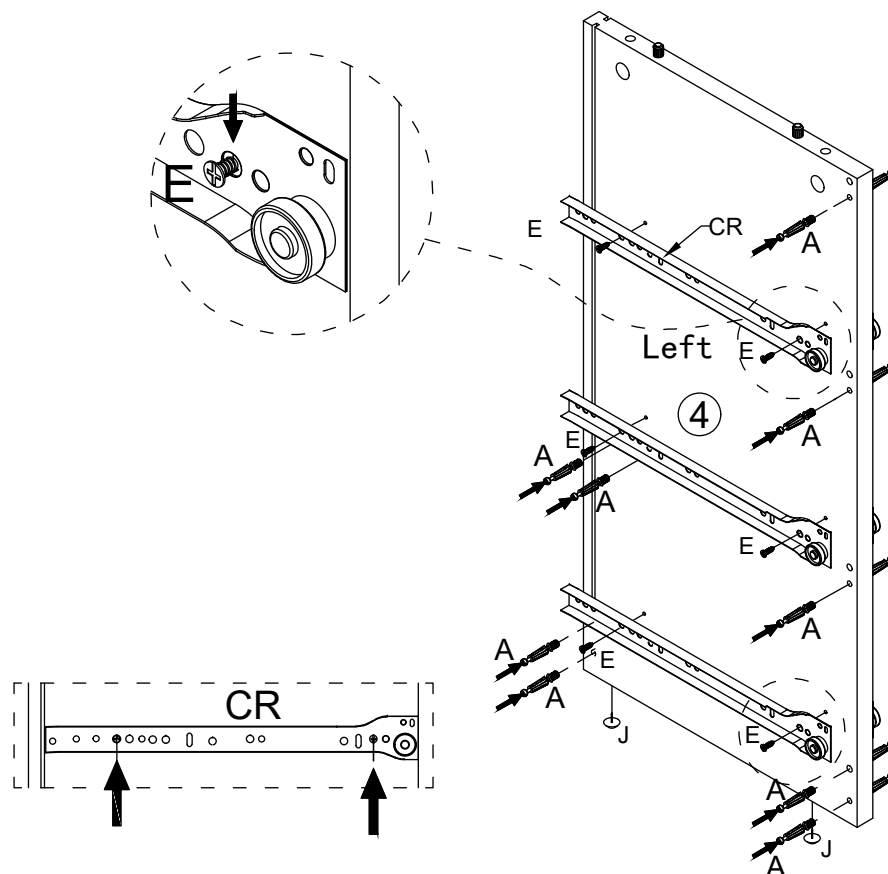


INSTALLATION STEPS

STEP7:

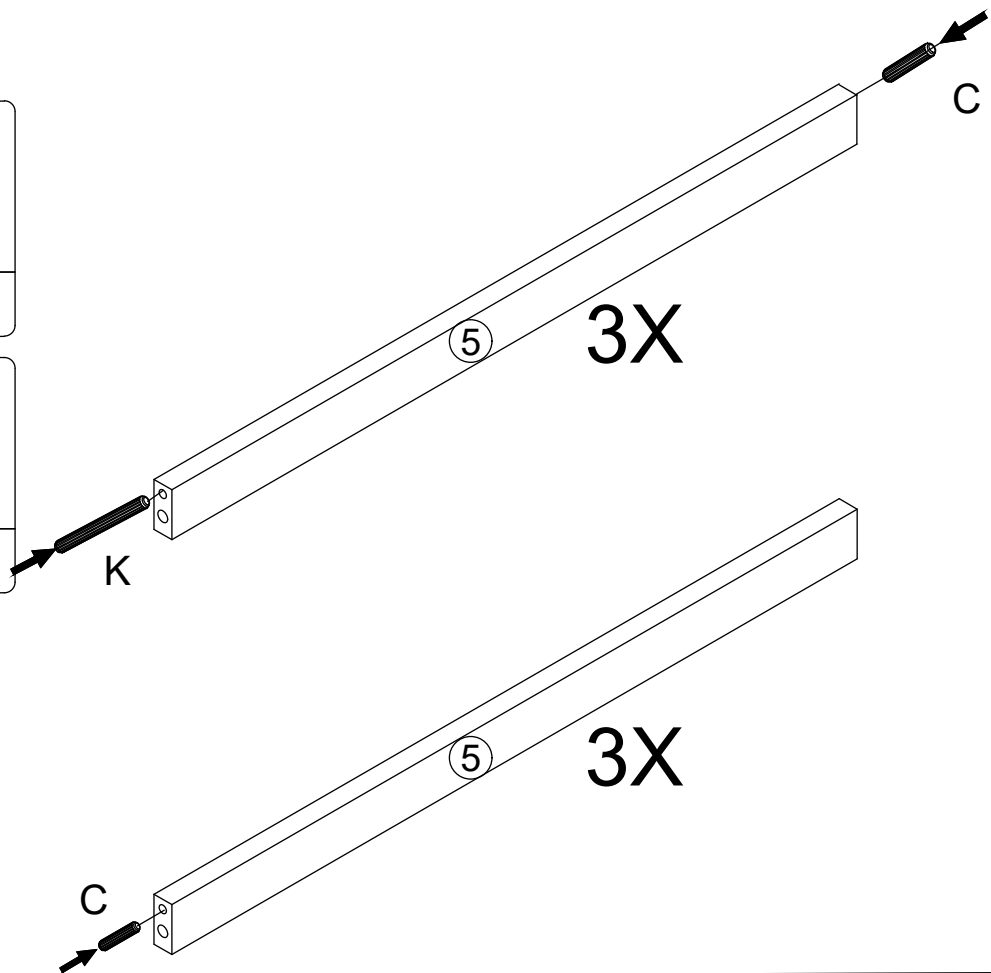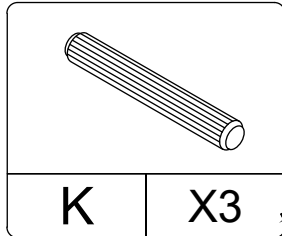
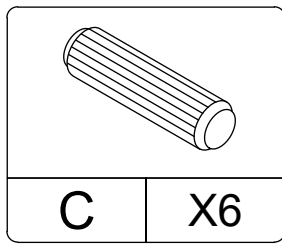


STEP8:

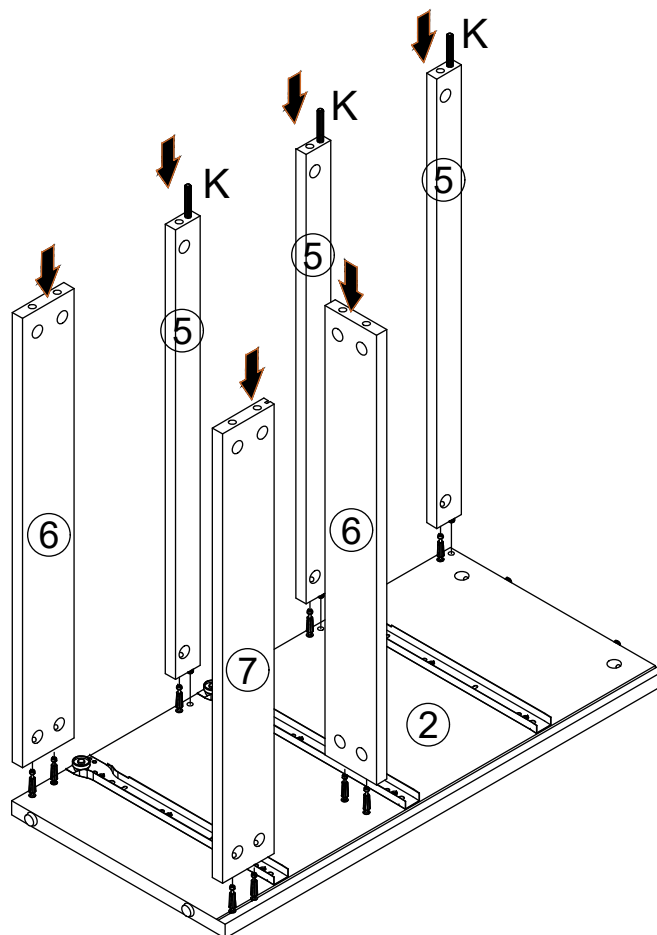


INSTALLATION STEPS

STEP9:

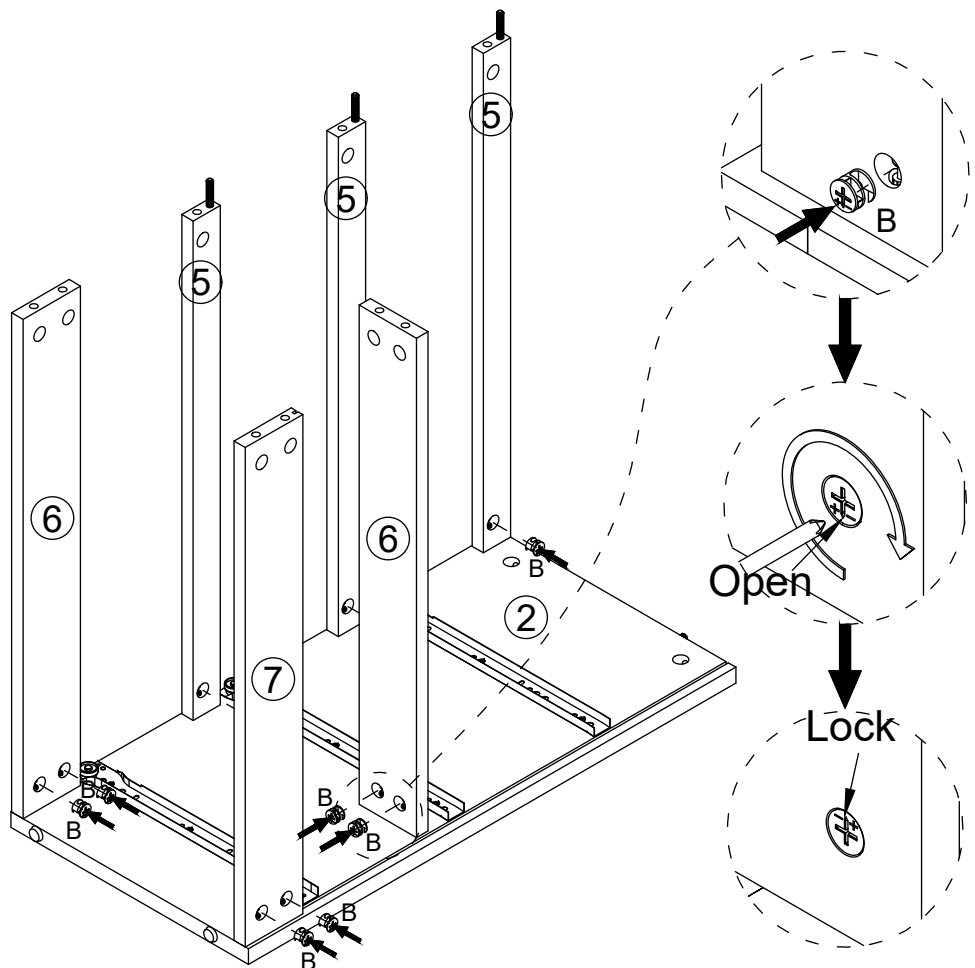
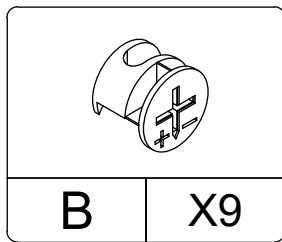


STEP10:


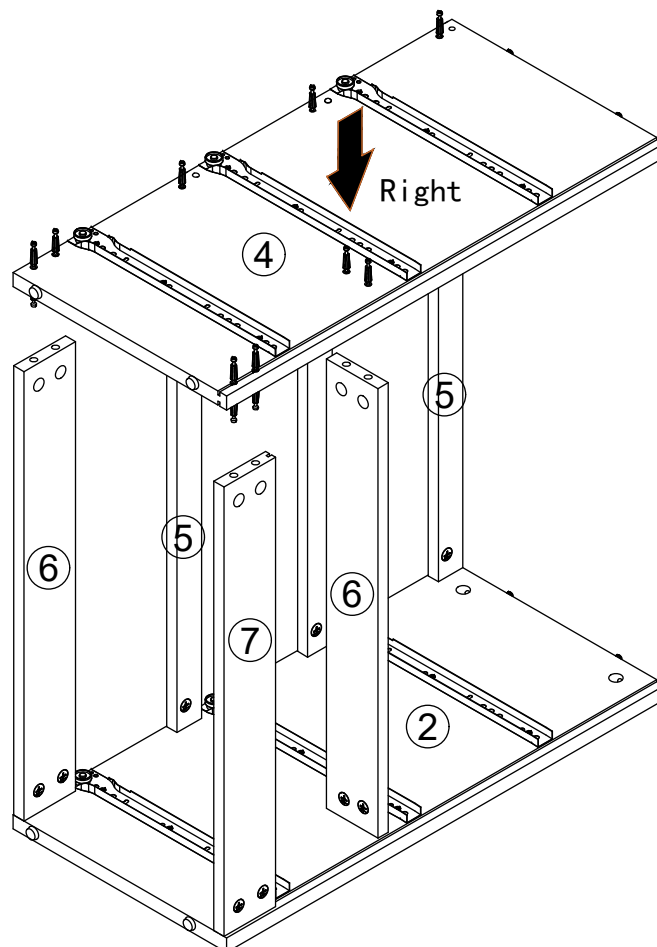


INSTALLATION STEPS

STEP11:

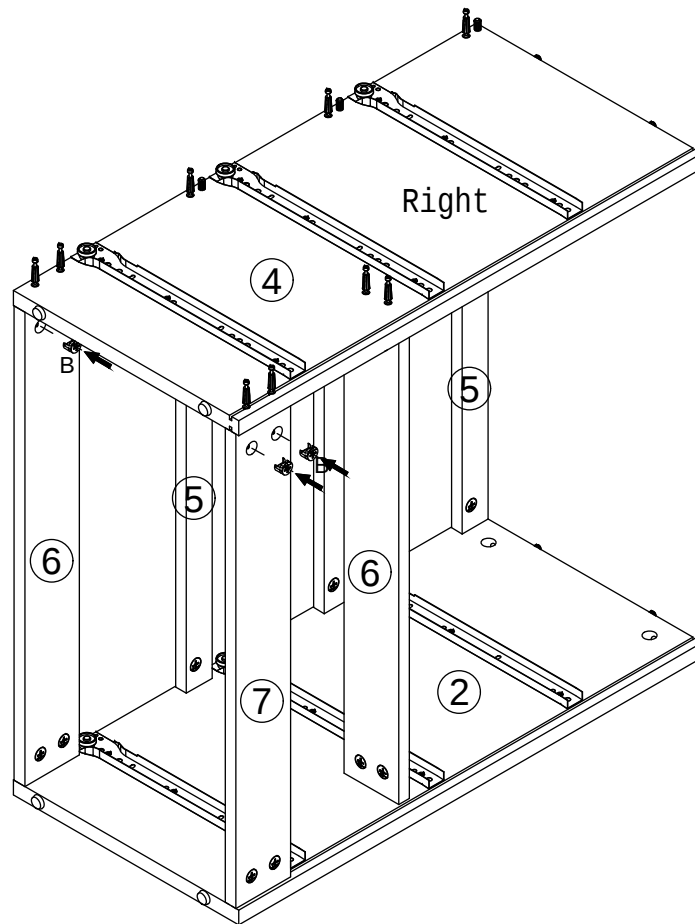
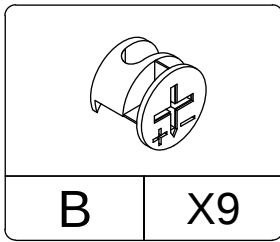


STEP12:

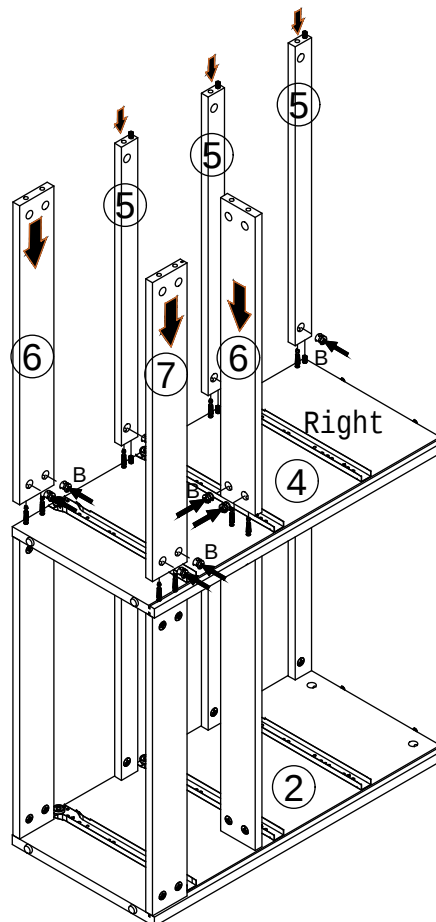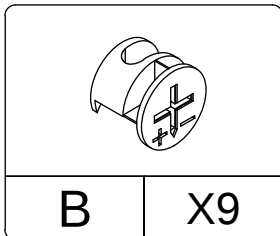


INSTALLATION STEPS

STEP13:

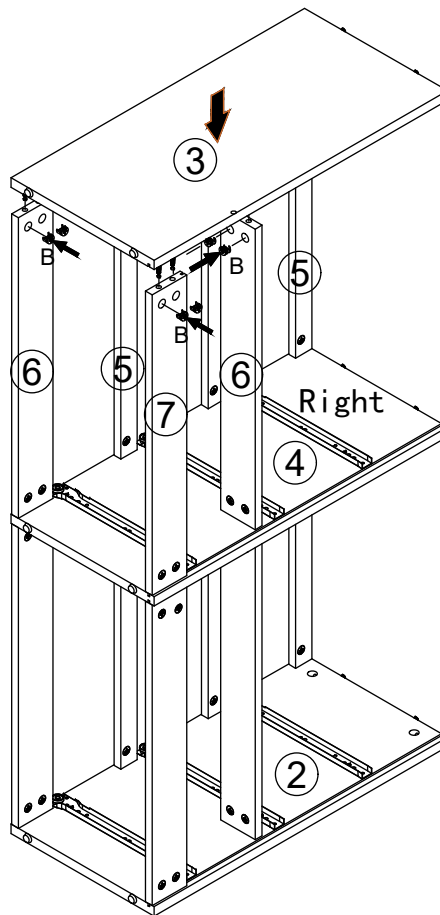
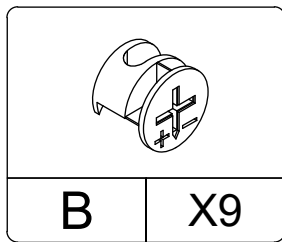


STEP14:


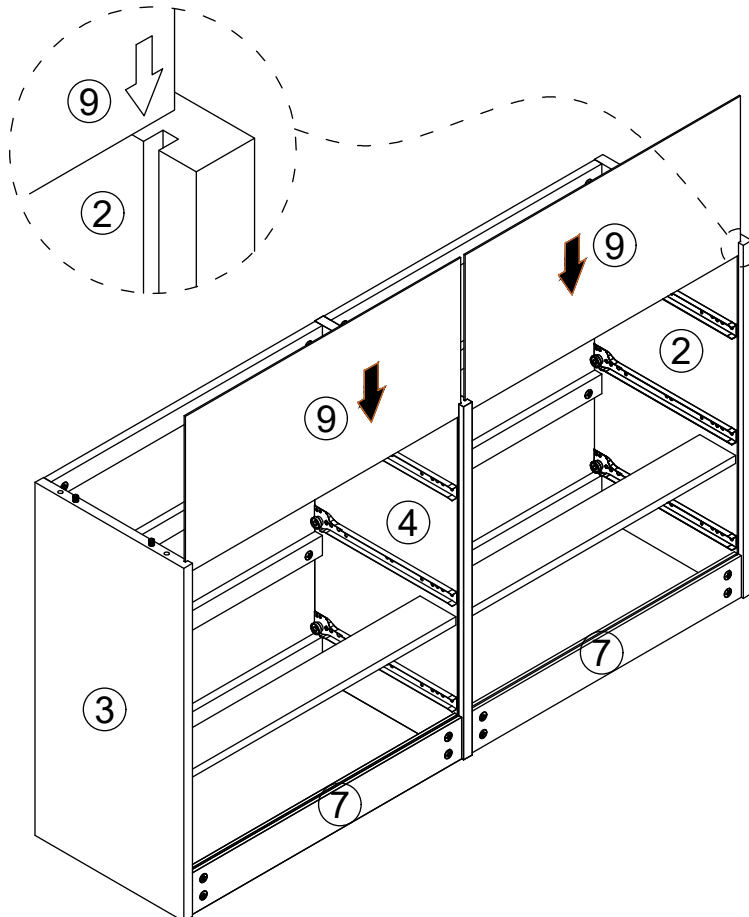


INSTALLATION STEPS

STEP15:

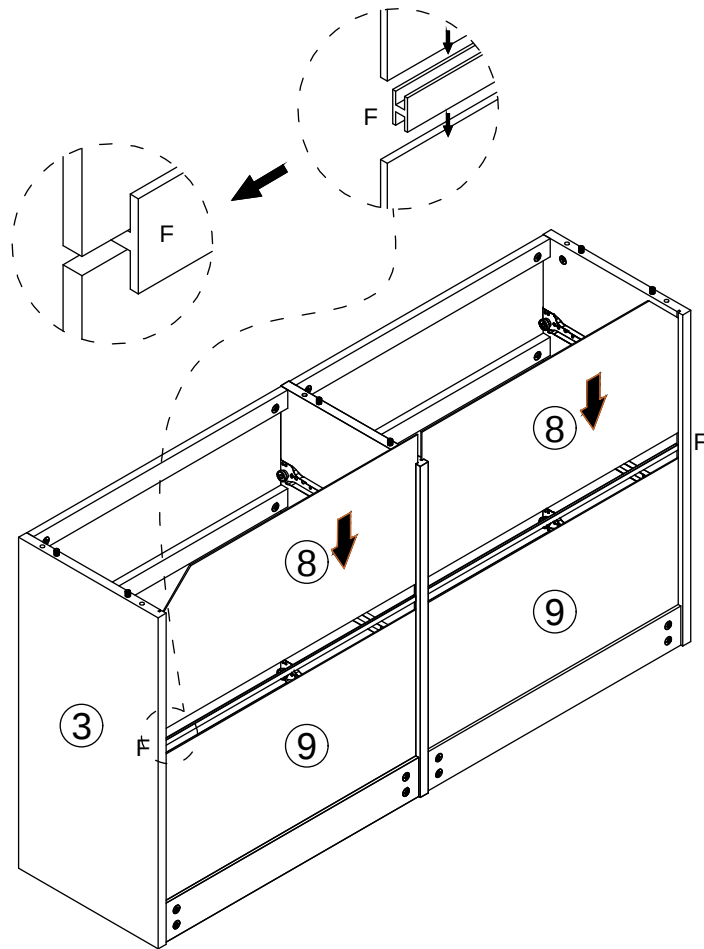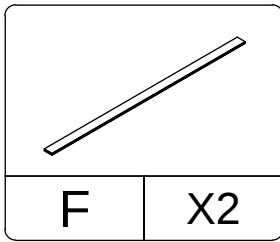


STEP16:

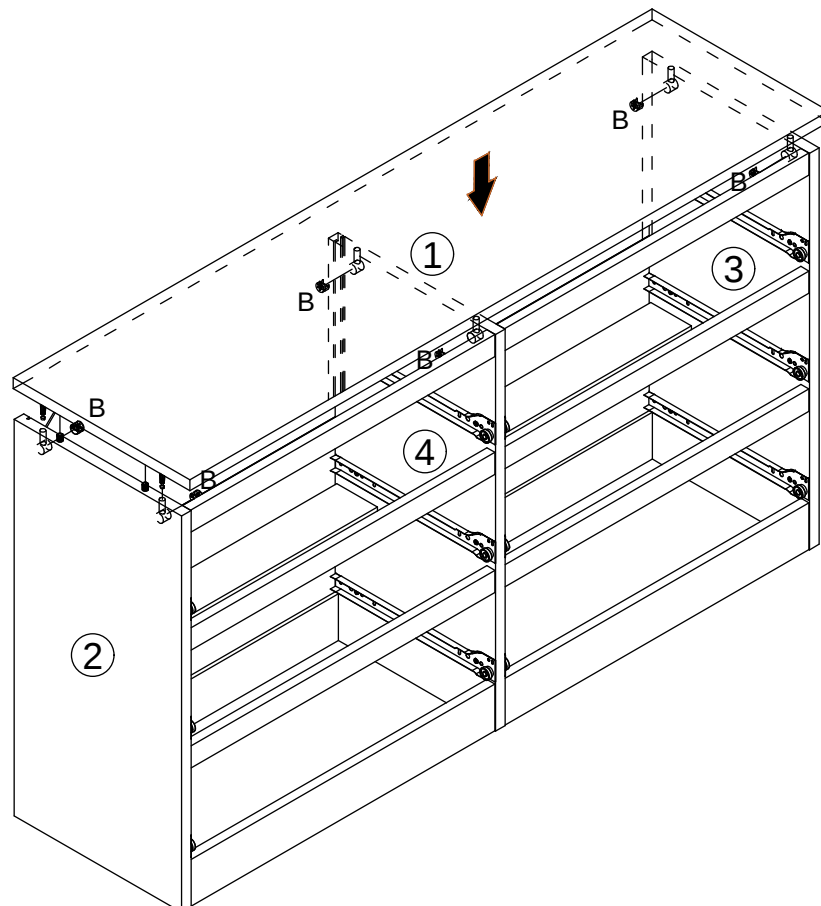
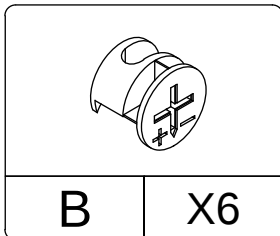


INSTALLATION STEPS

STEP17:

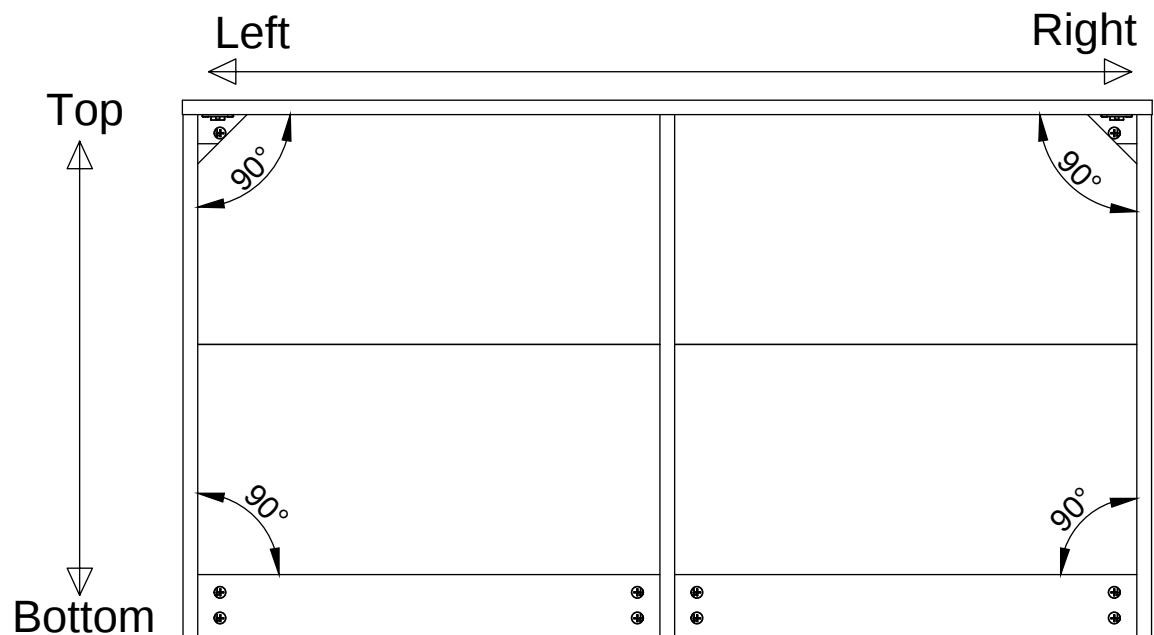


STEP18:

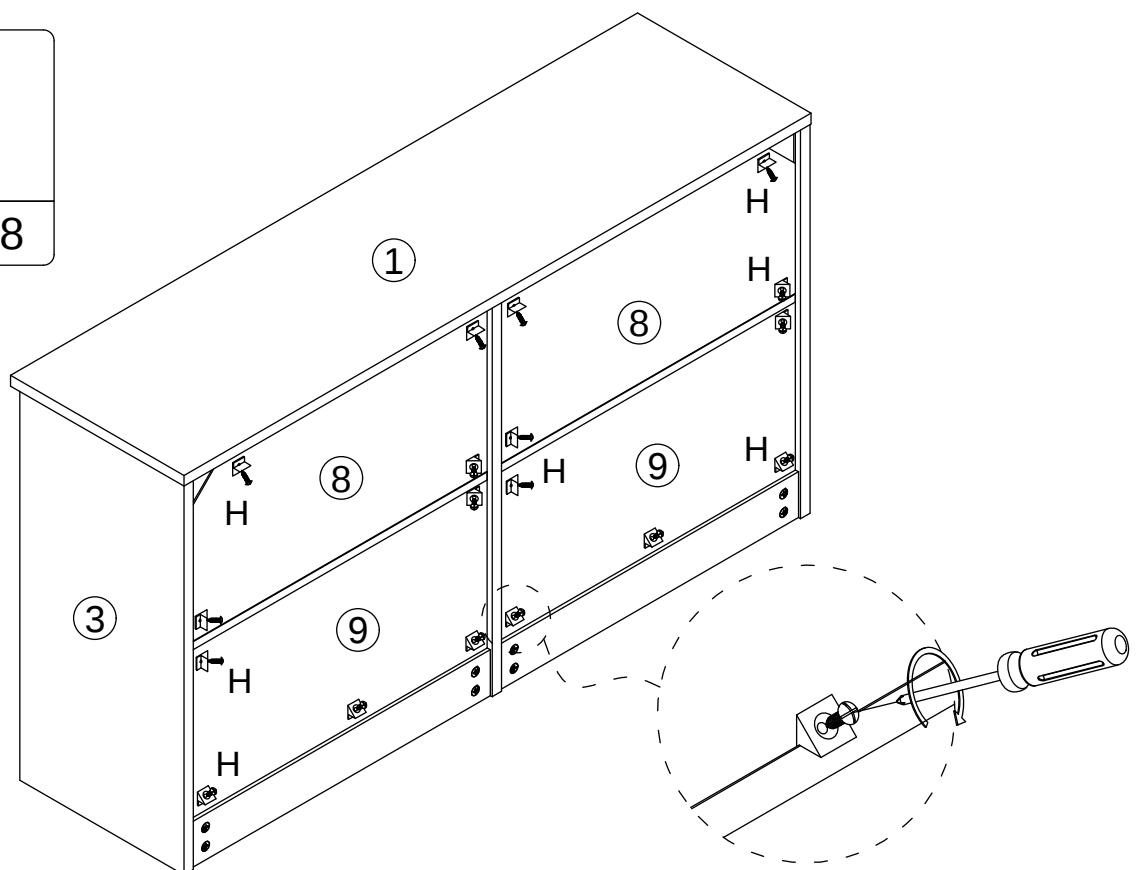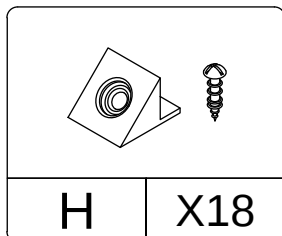


INSTALLATION STEPS

STEP19:

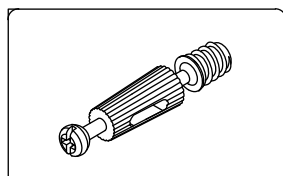

A


X24

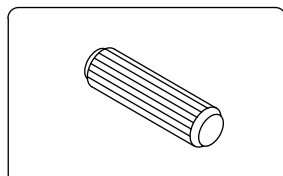


C

X12

6X

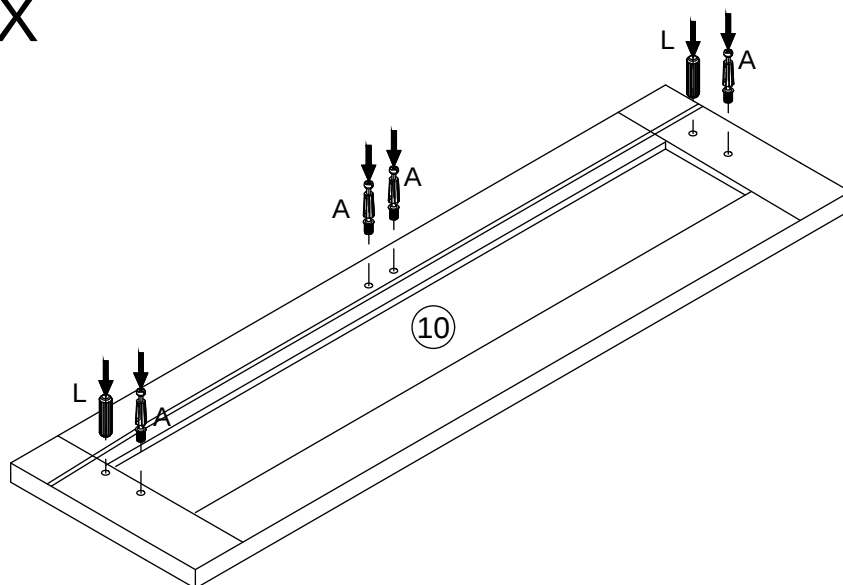


STEP20:

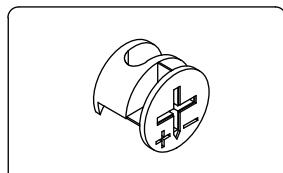

B

X24


6X

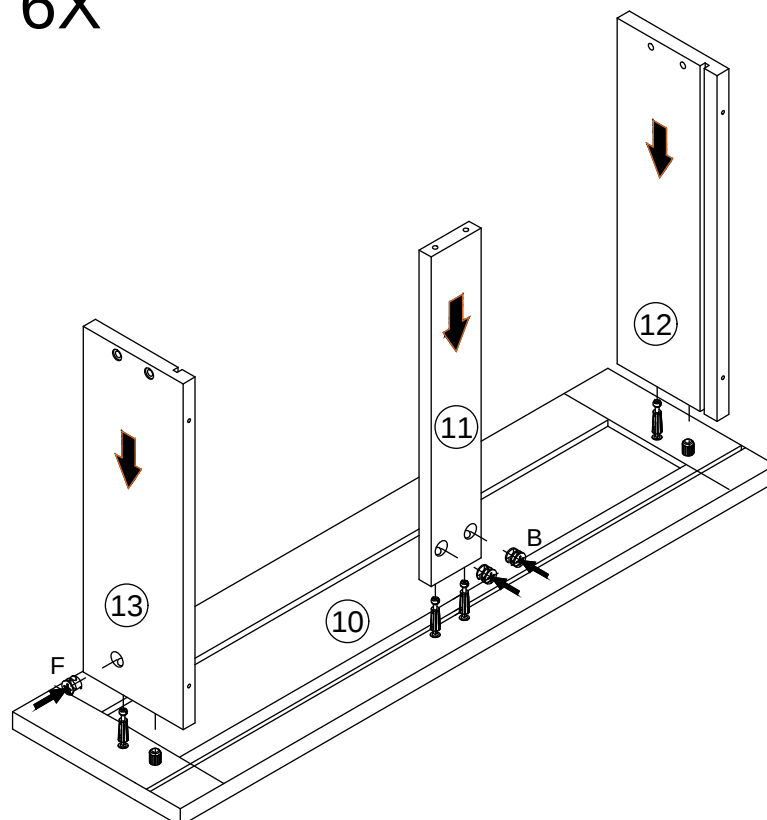

INSTALLATION STEPS



STEP21:

6X

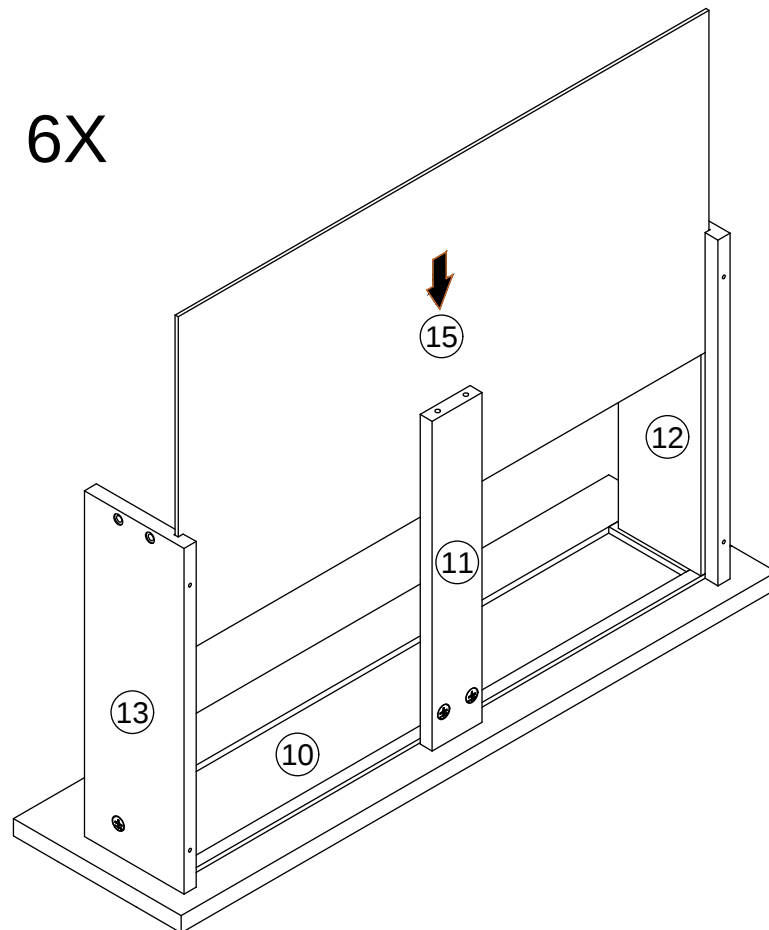



STEP22:

6X

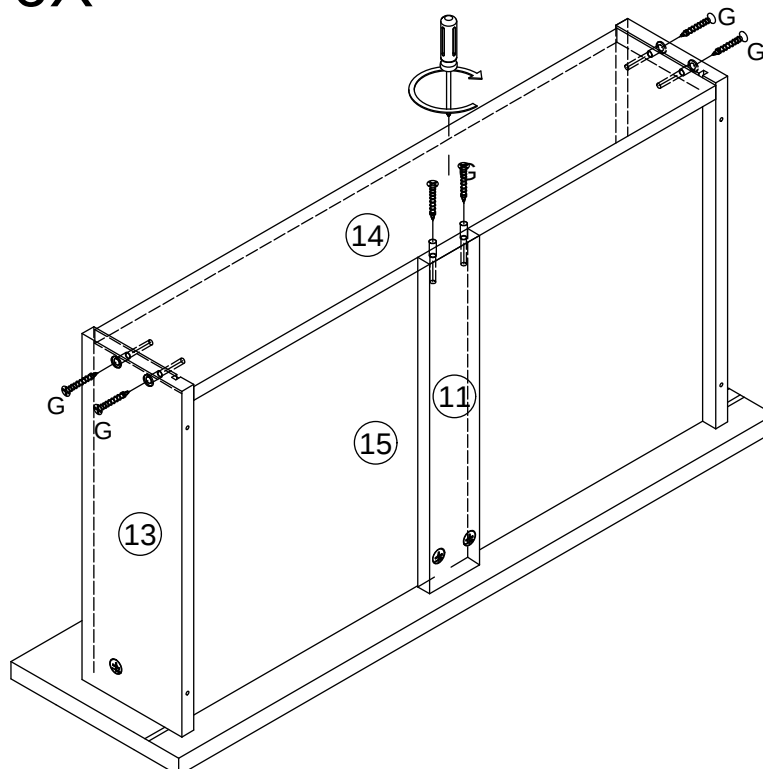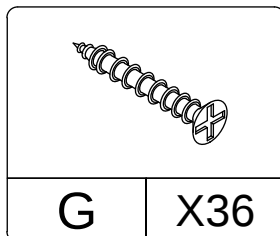


INSTALLATION STEPS





STEP23:

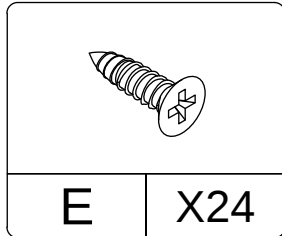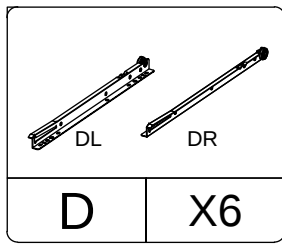

6X







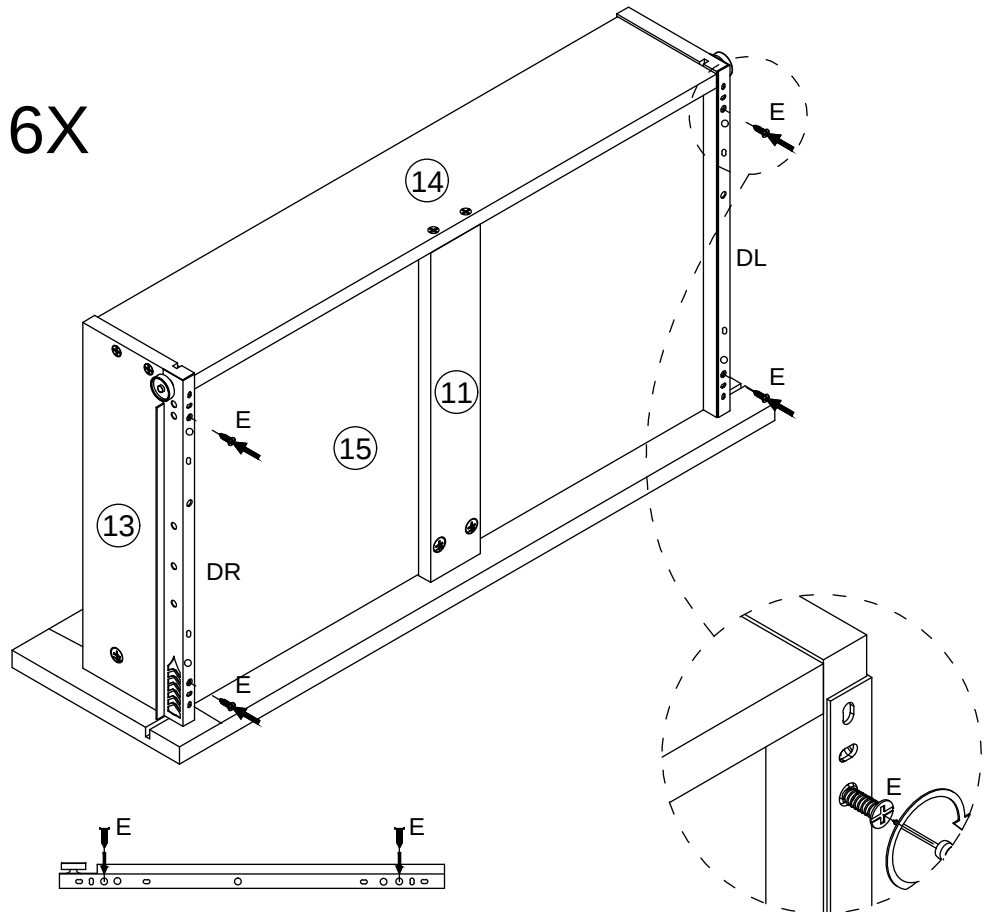


STEP24:

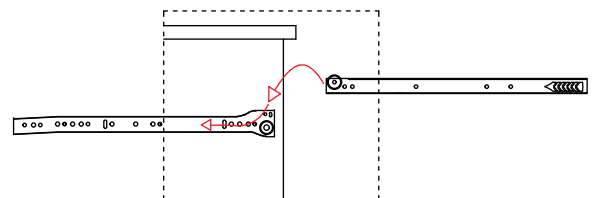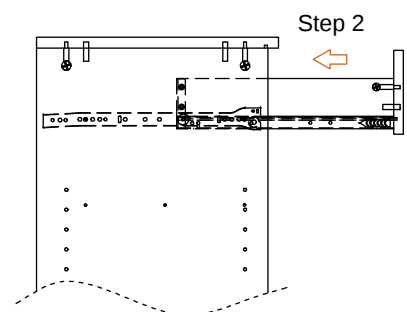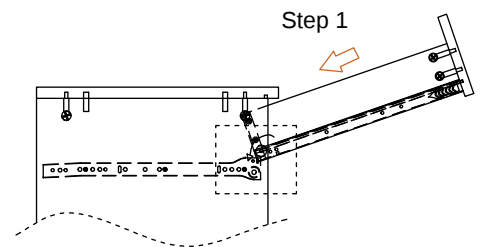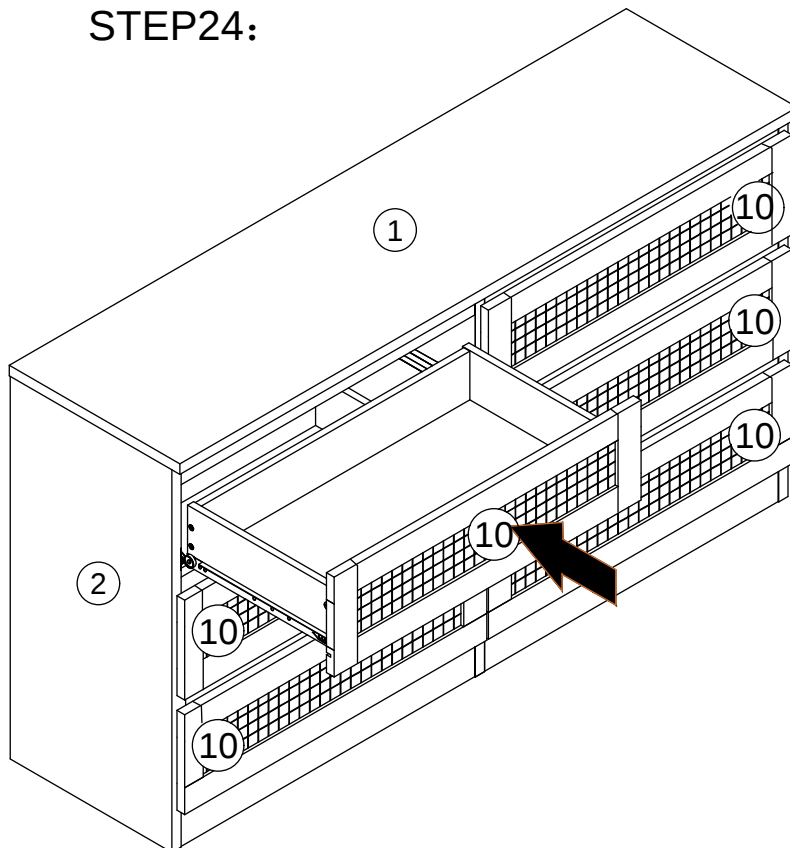

INSTALLATION STEPS

STEP25:

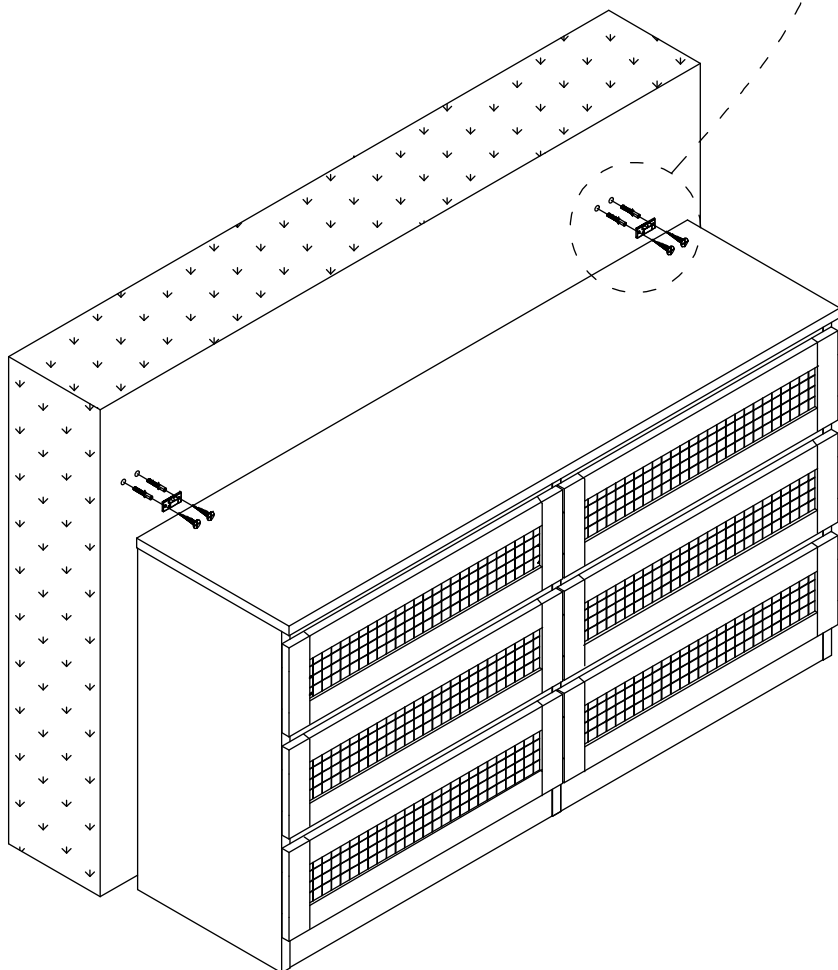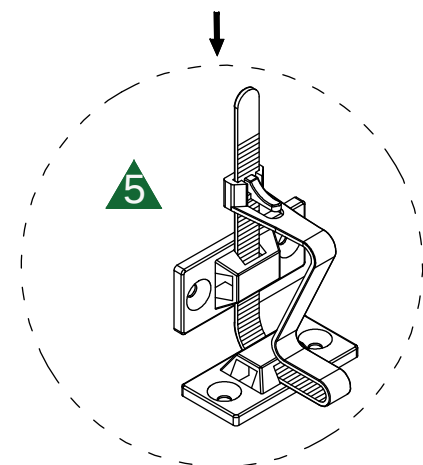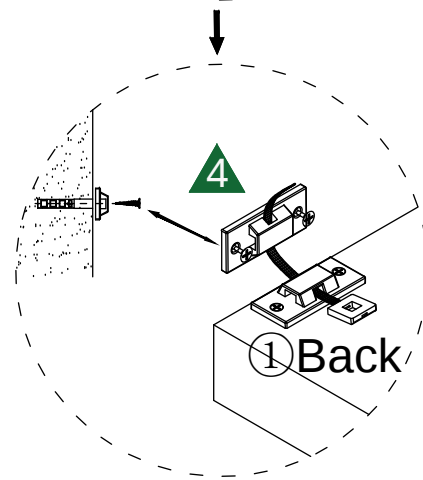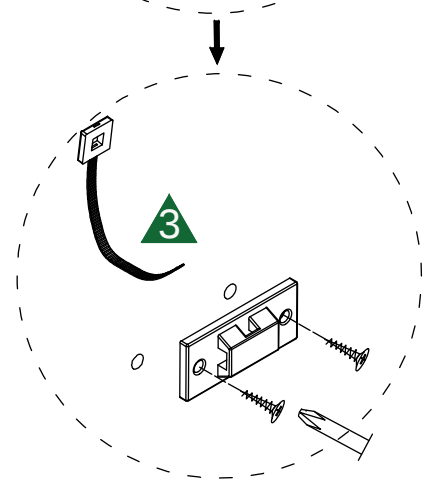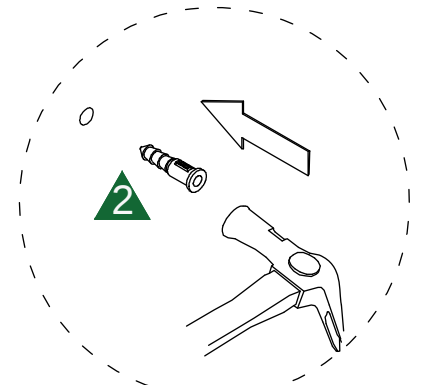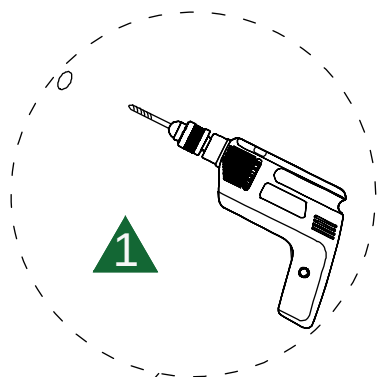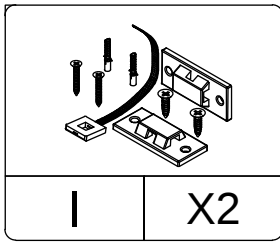

GARVEE
support@garvee.com