
Shoe Cabinet


Assembly Instructions - Please keep for future reference

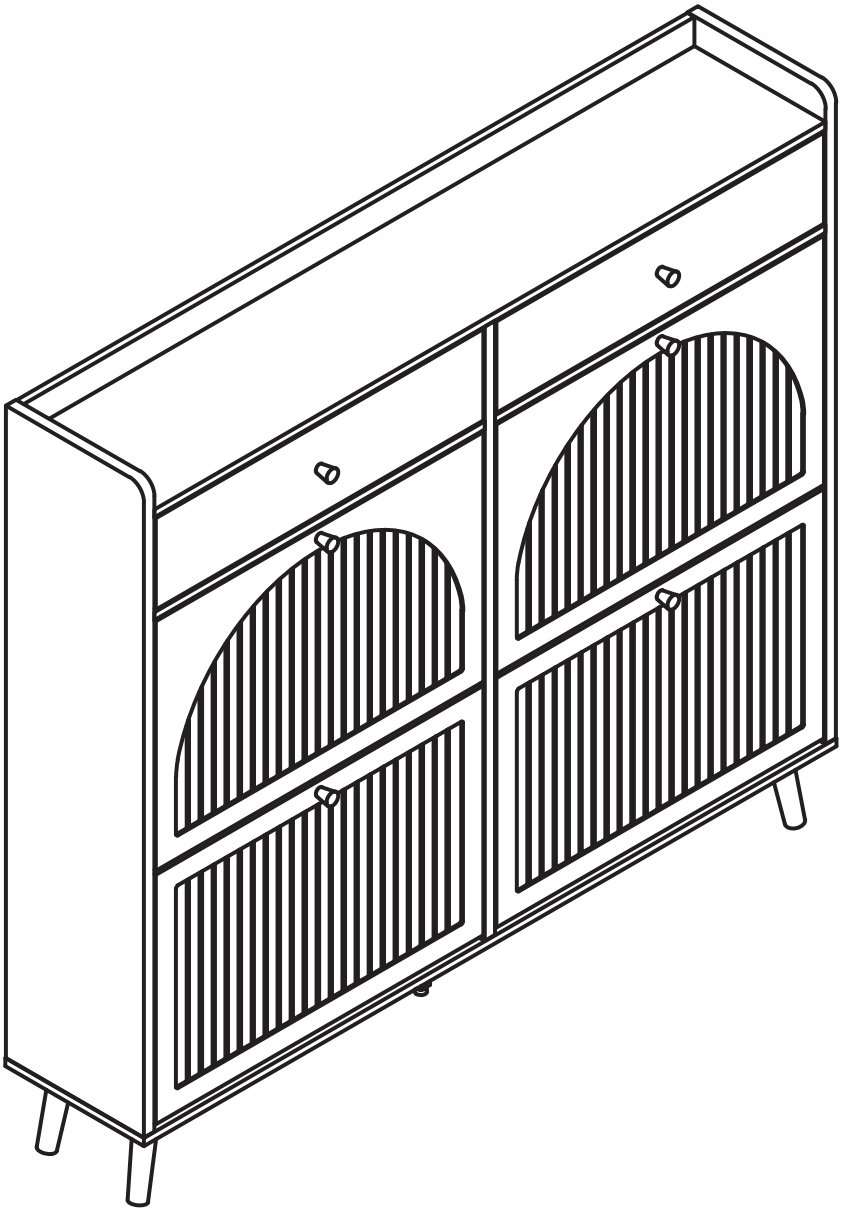

Dimensions


Width - 47.2inch
Depth - 9.5 inch
Height - 44.1inch

Important – Please read these instructions fully before starting assembly

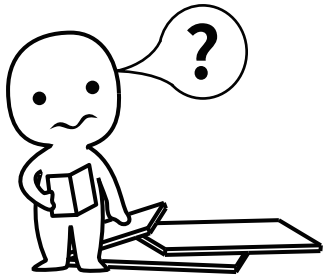

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

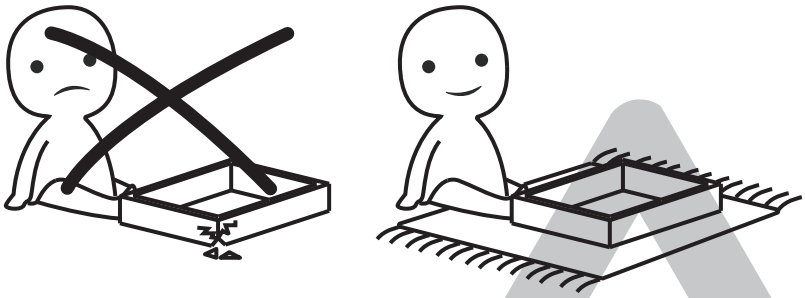


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

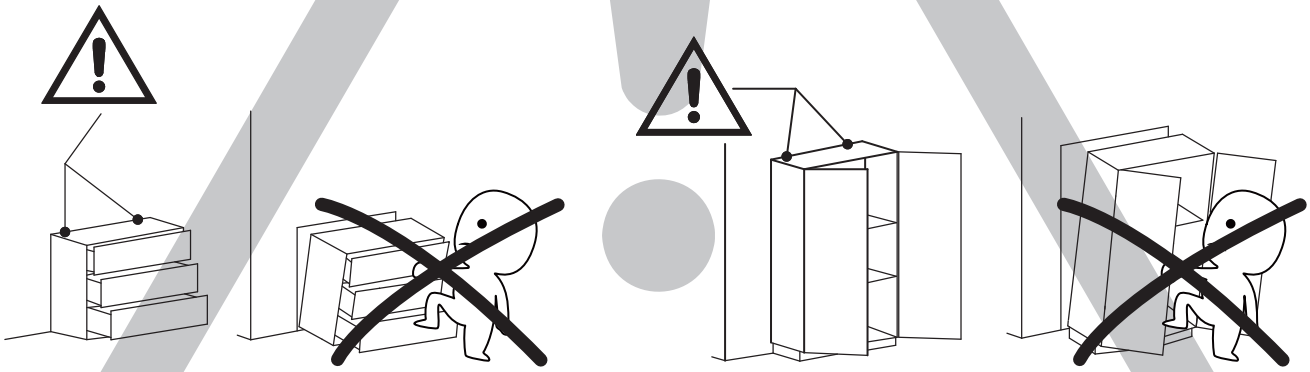


ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

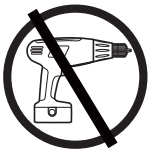

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly .


WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Componets - Panels

Please check you have all the panels listed below

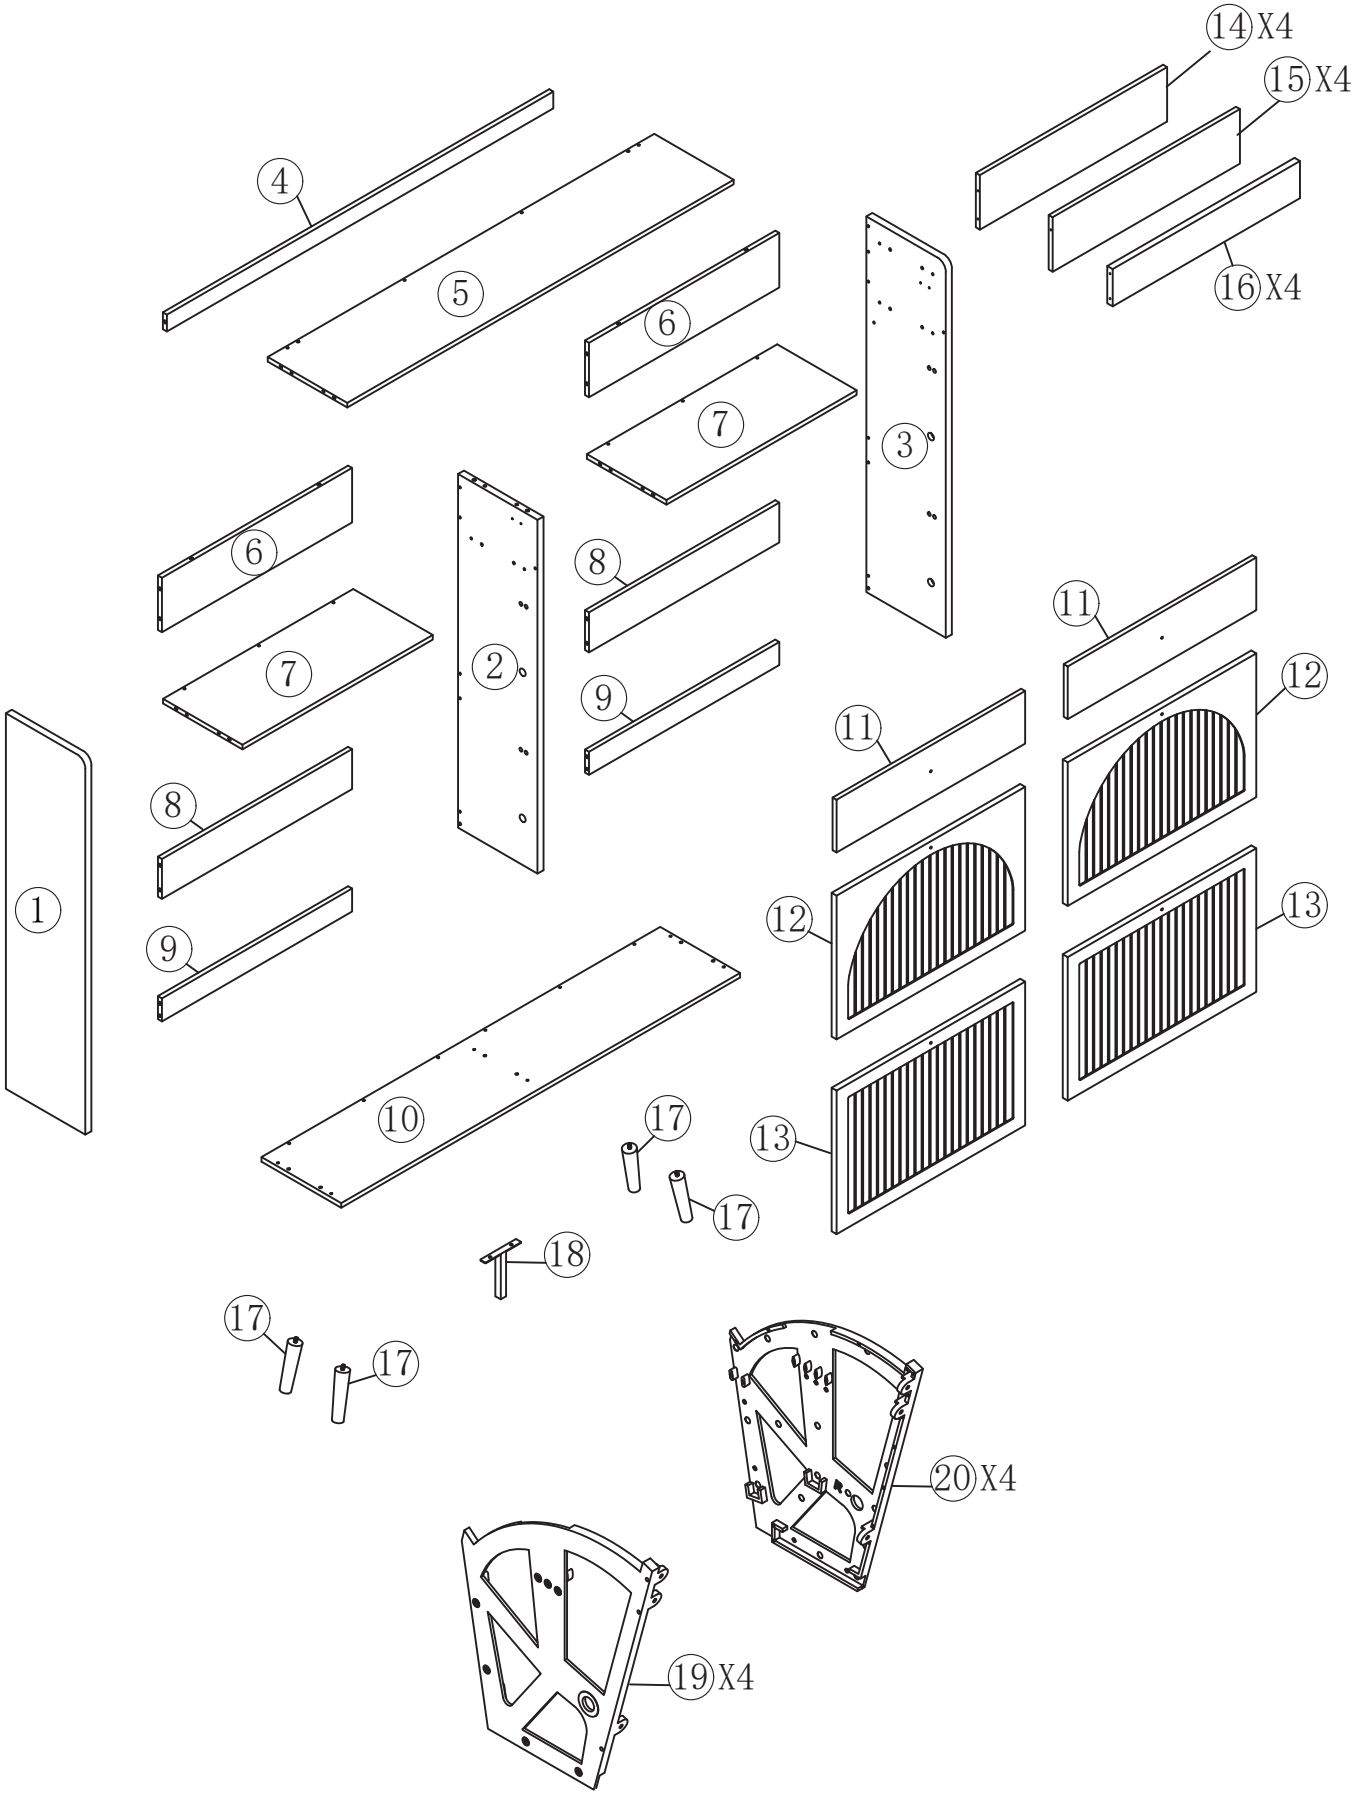


Componets - Panels


Please check you have all the panels listed below

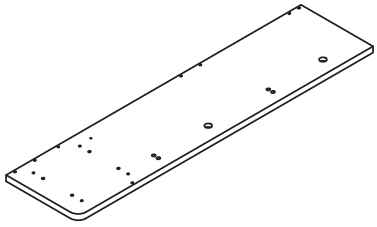


1（978*239*18mm x1）

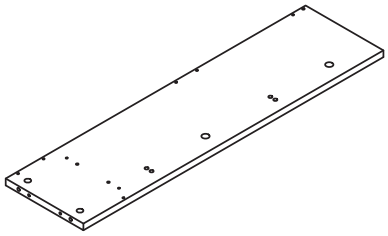


2（921*239*18mm x1）

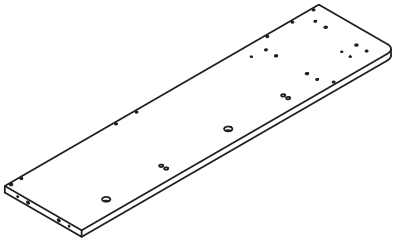


3（978*239*18mm x1）

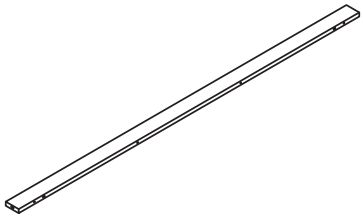


4（1162*44*12mm x1）

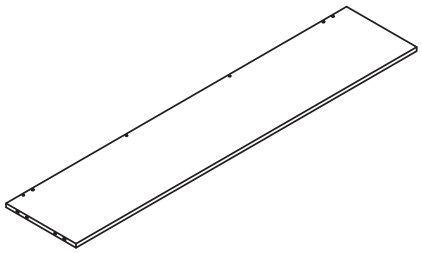


5（1162*239*12mm x1）

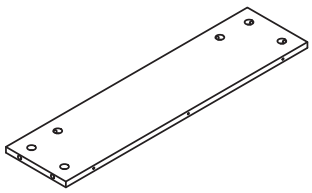


6（572*142*12mm x2）

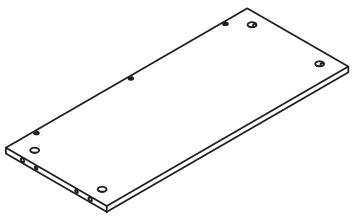


7（572*239*12mm x2）

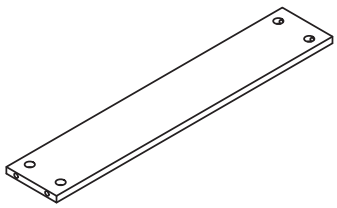


8（572*104*12mm x2）

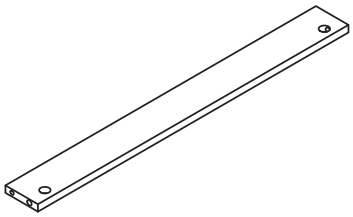


9（572*60*12mm x2）

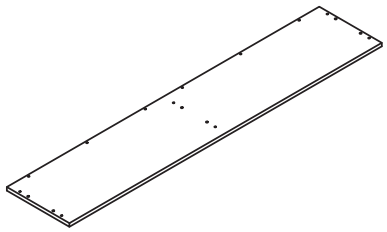


10（1199*240*12mm x1）

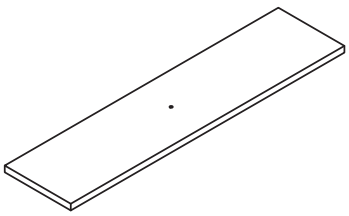


11（567*137*12mm x2）

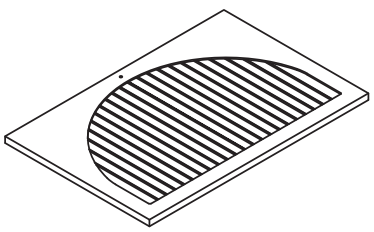


12（567*374*15mm x2）

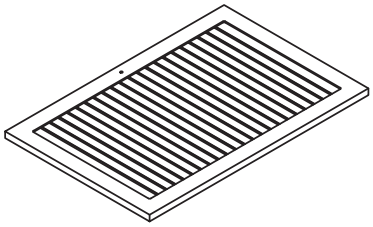

13（567*374*15mm x2）

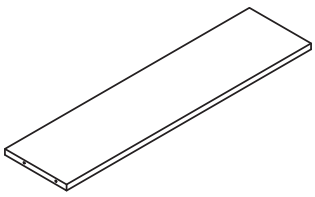


14（563*142*12mm x4）

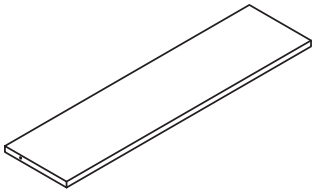


15（563*142*12mm x4）

Componets - Panels


Please check you have all the panels listed below

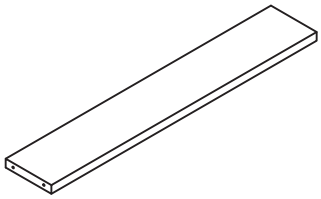


16（563*97*12mm x4）

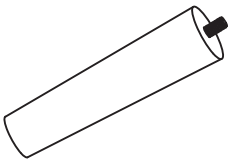


17（120*35mm x4）

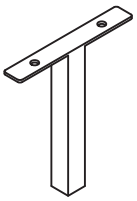

18（120*108*16mm x1）

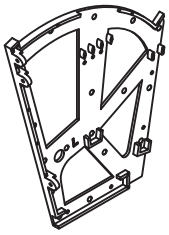

19（250*230*23mm x4）







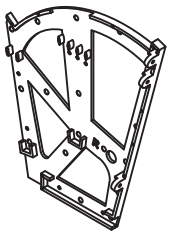


20（250*230*23mm x4）


Componets - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


Ⓐ  6*35mm Cam Bolt x40	Ⓑ  Cam Lock x 40	Ⓒ  6*30mm Wooden Dowel x26
Ⓓ  6*10mm Screw x2	Ⓔ  4*35mm Screw x24	Ⓕ  4*10mm Screw x8
Ⓖ  x 4	Ⓗ  x 2	Ⓘ  x 4
Ⓙ  4*12mm Screw x22	Ⓚ  x 1	Ⓛ  x 4
Ⓜ  x 2	Ⓝ  x 2	Ⓞ  x 2
Ⓟ  3*14mm Screw x4	Ⓠ  4*16mm Screw x6	Ⓡ  x 6
Ⓢ  x 2	Ⓣ  3*12mm Screw x12	Ⓤ  x 8
Ⓥ  x 8	Ⓦ  x 8	Ⓧ  3*16mm Screw x64
Ⓨ  x 1	Ⓩ  x 1	


Tools required



Phllips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws






The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

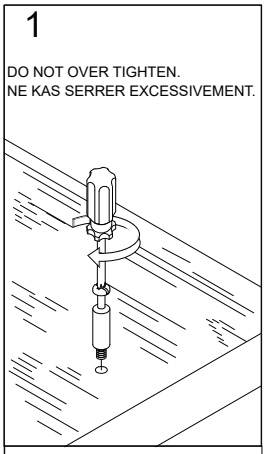

Step 2


Push the male camlock into the entry hole.

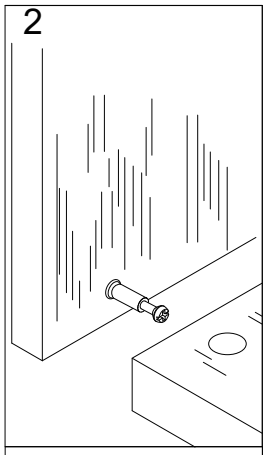

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

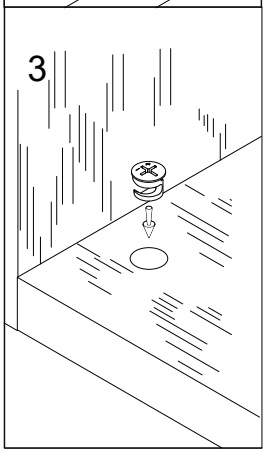


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

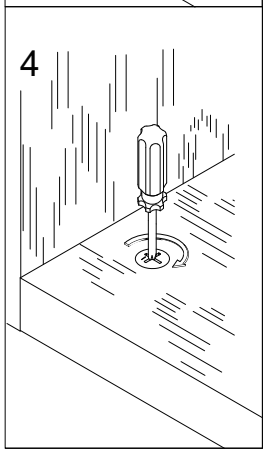


Assembly Instructions

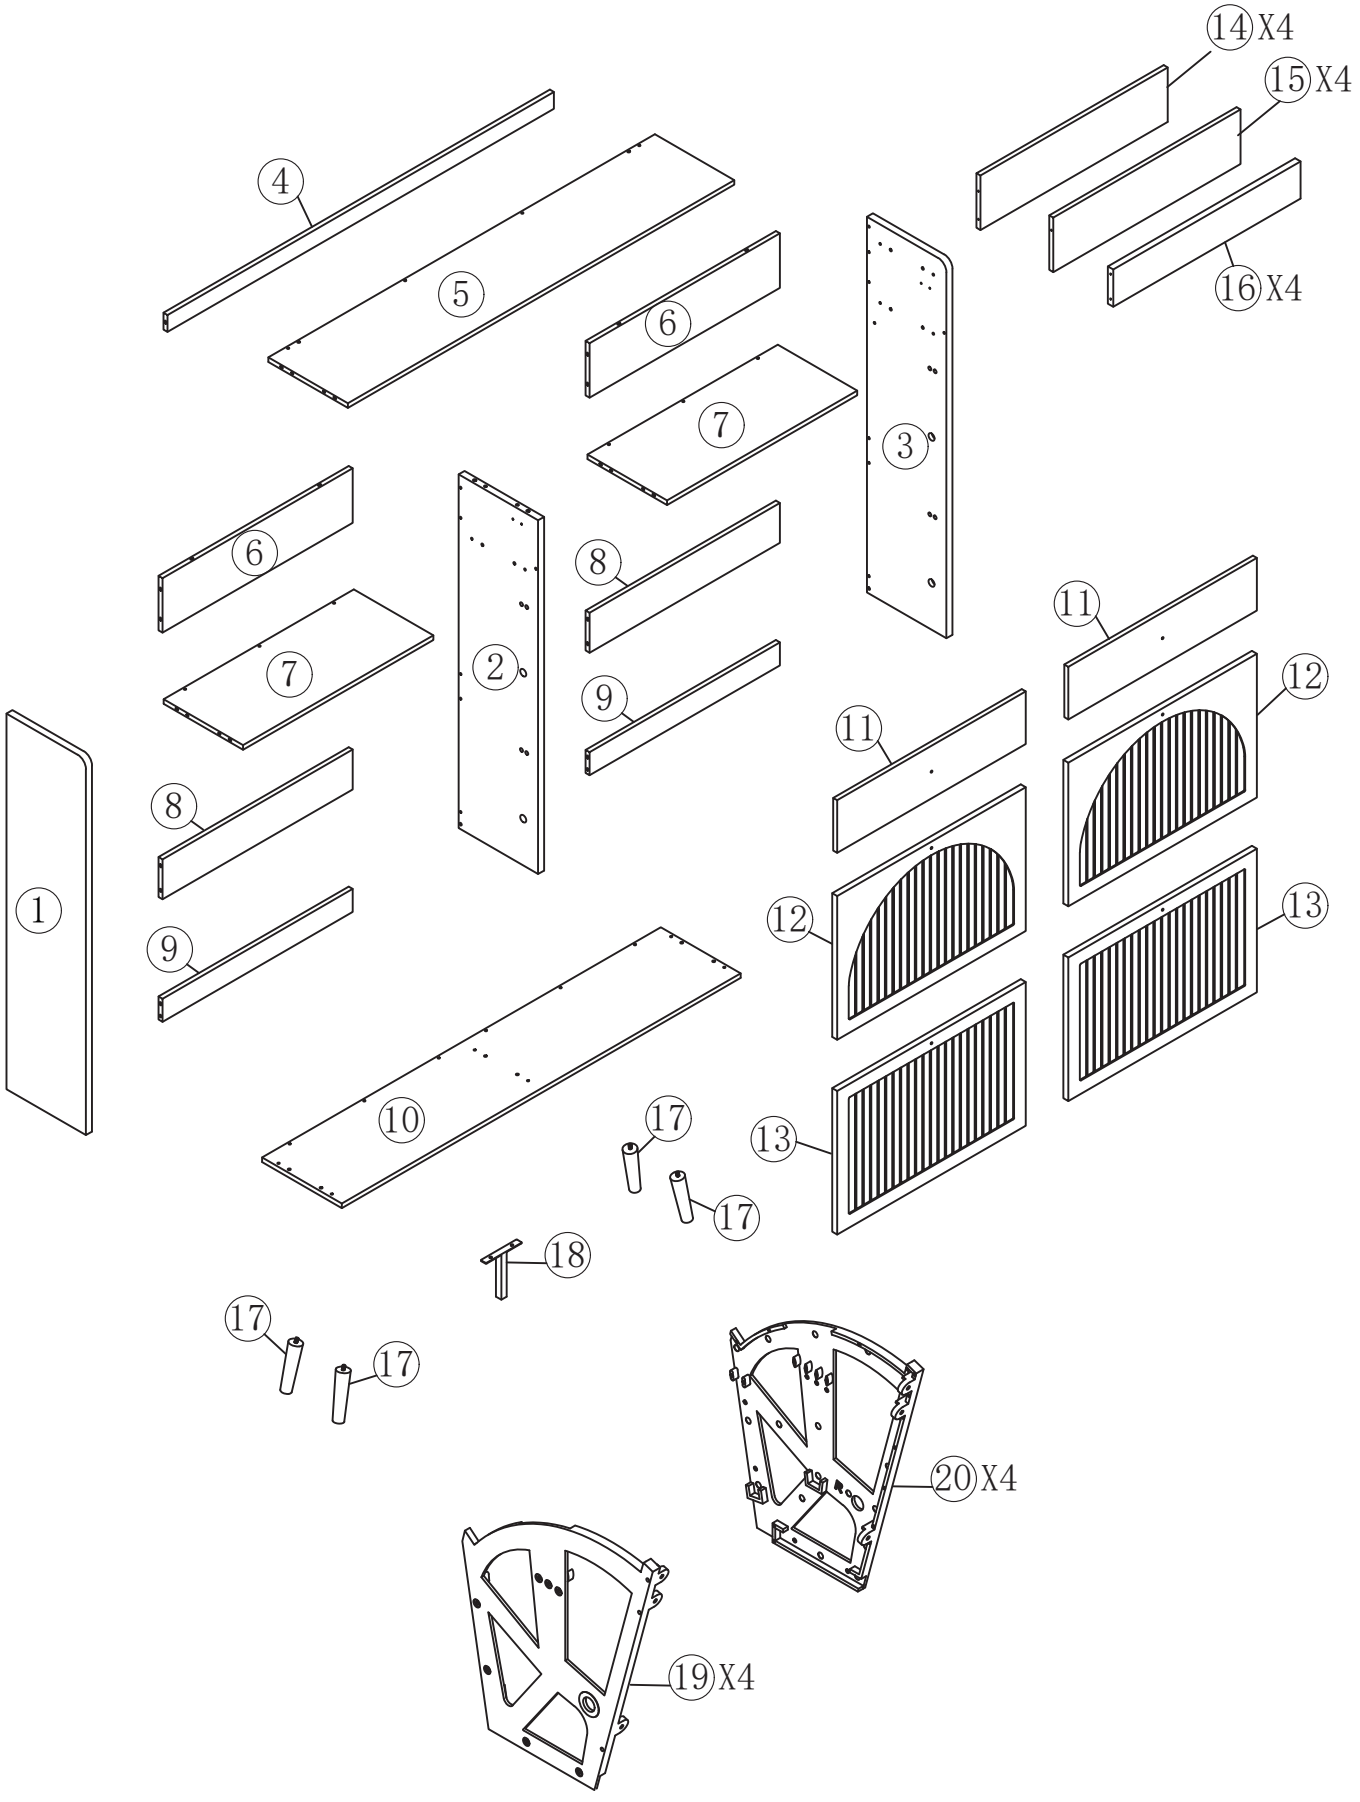


Assembly Instructions

Step 1

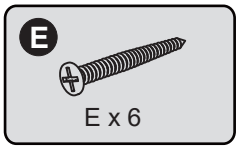


Two-person installation is


recommended for the entire process.

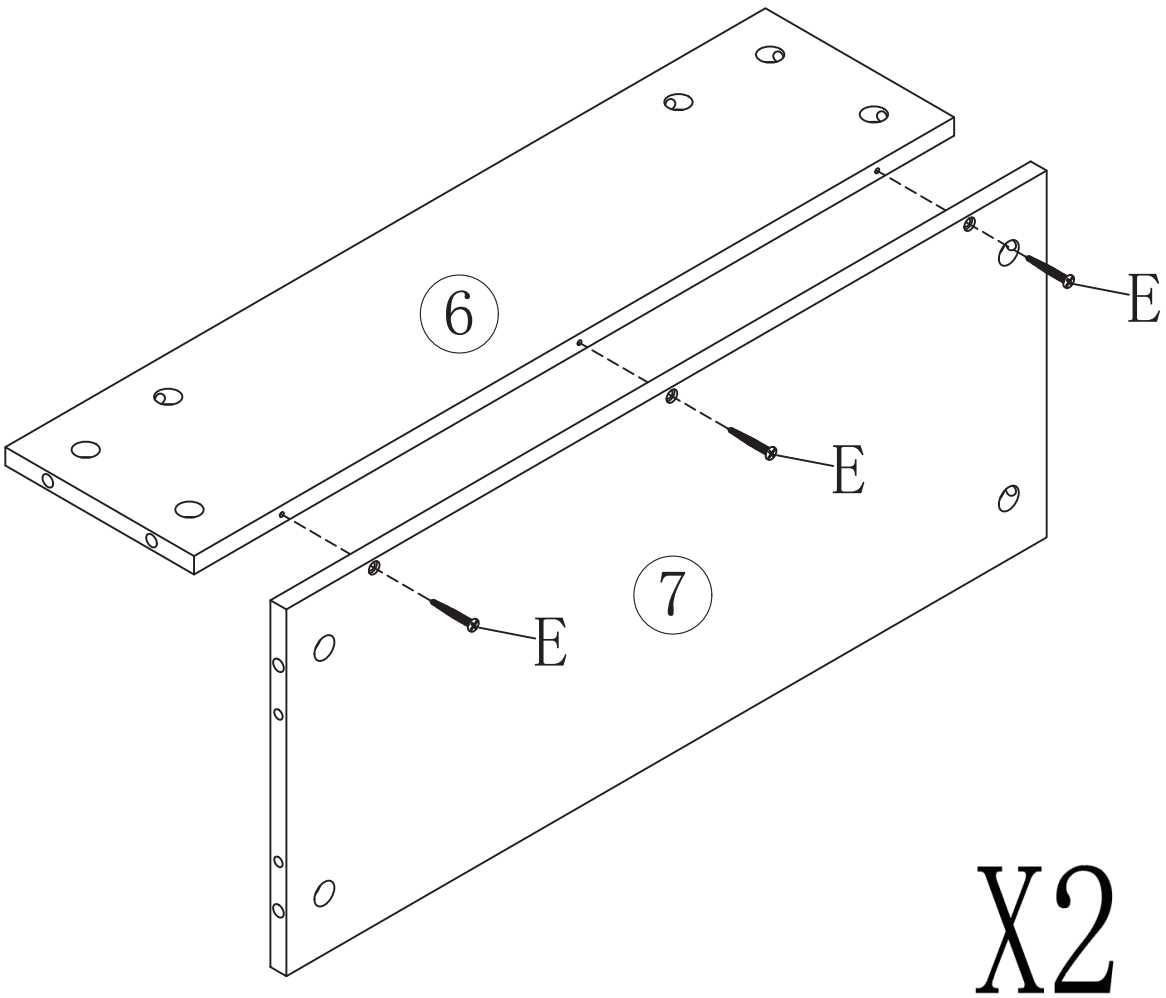

Assembly Instructions

Step 2

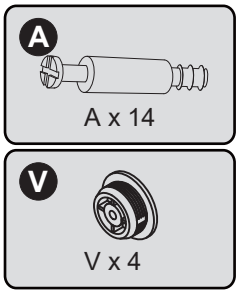


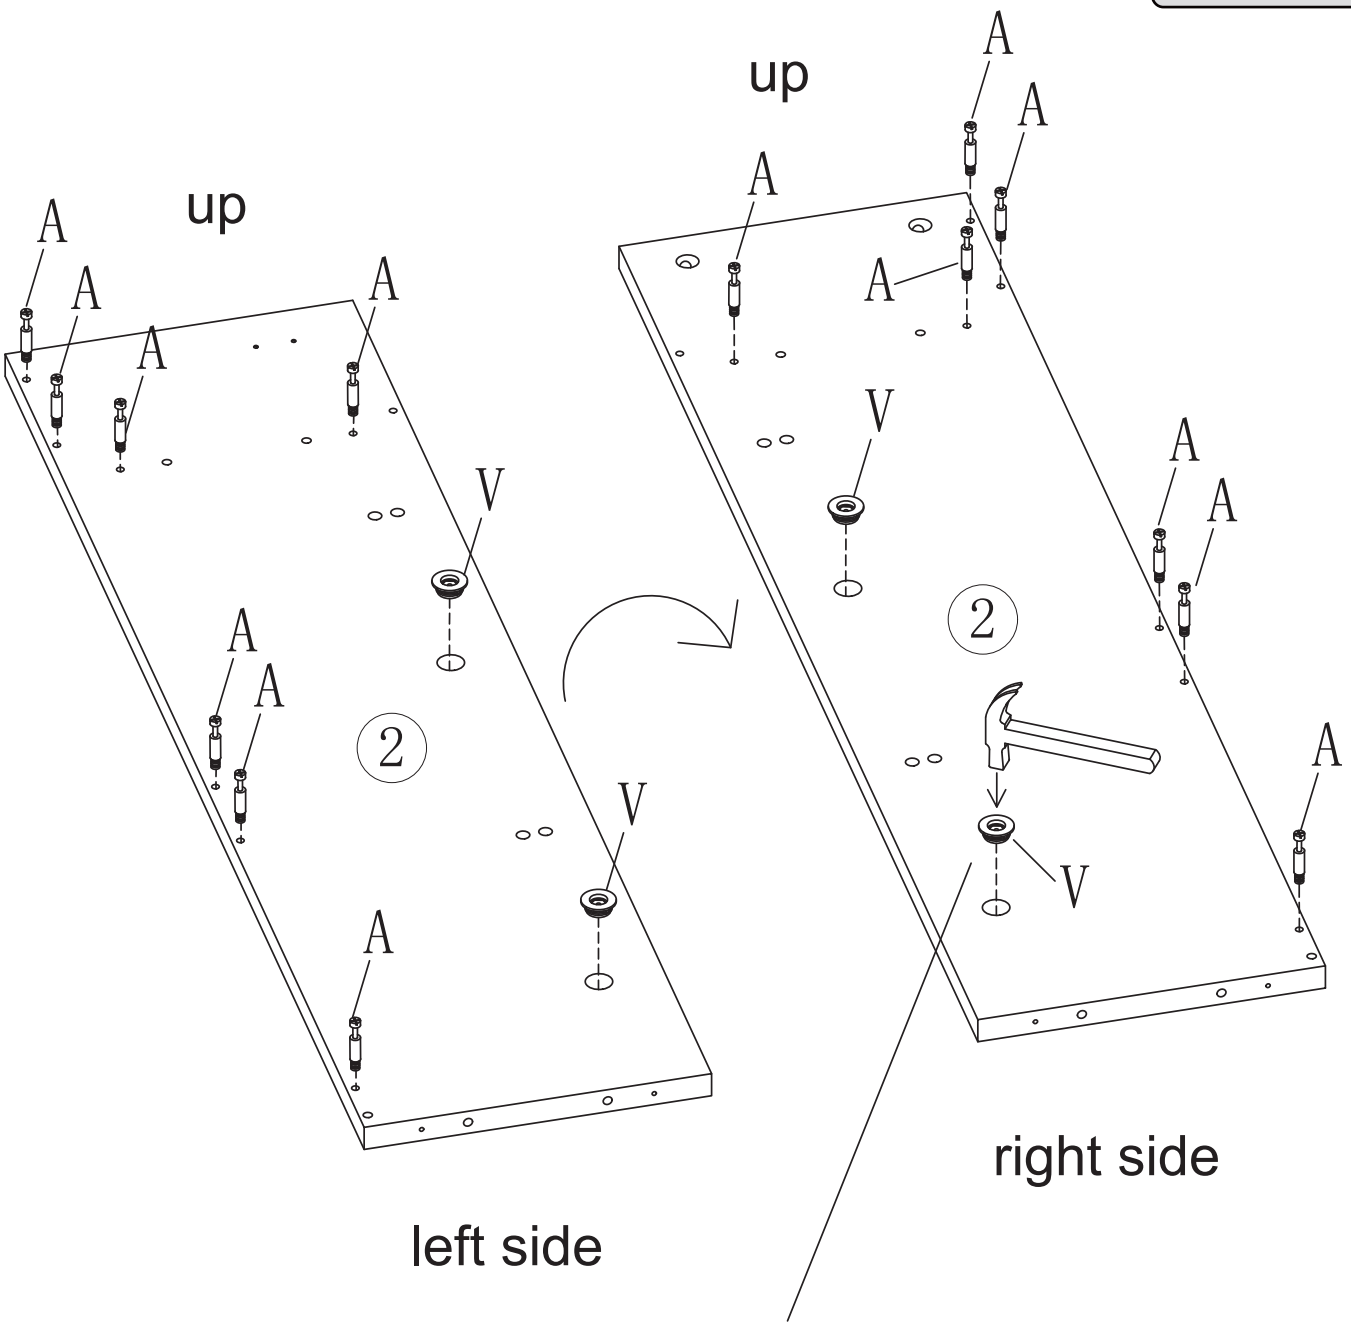


Drive the "V" in multiple stages; avoid a single powerful impact. Ensure the "V" fits completely flush against the board surface.

Assembly Instructions


Step 3

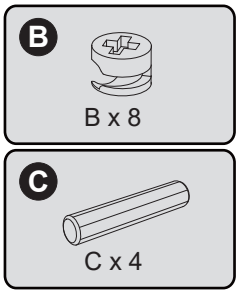


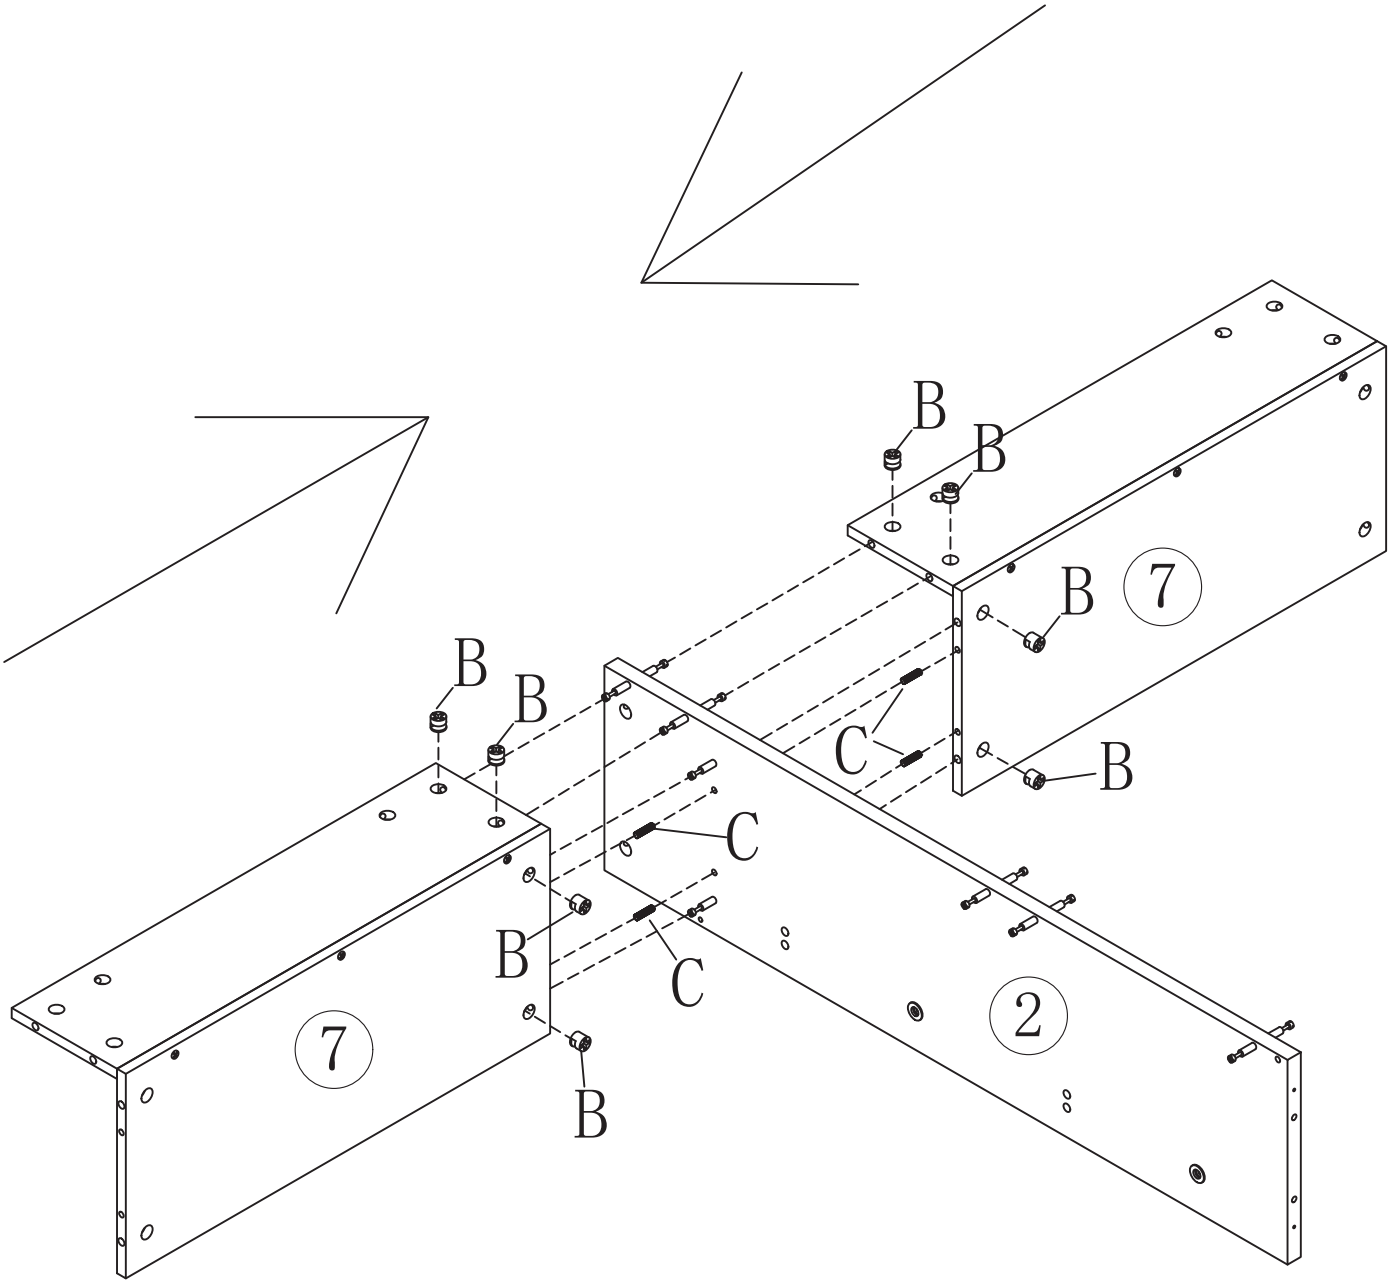

Assembly Instructions


Step 4

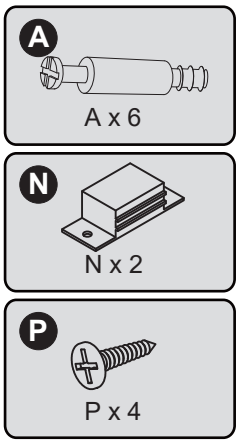


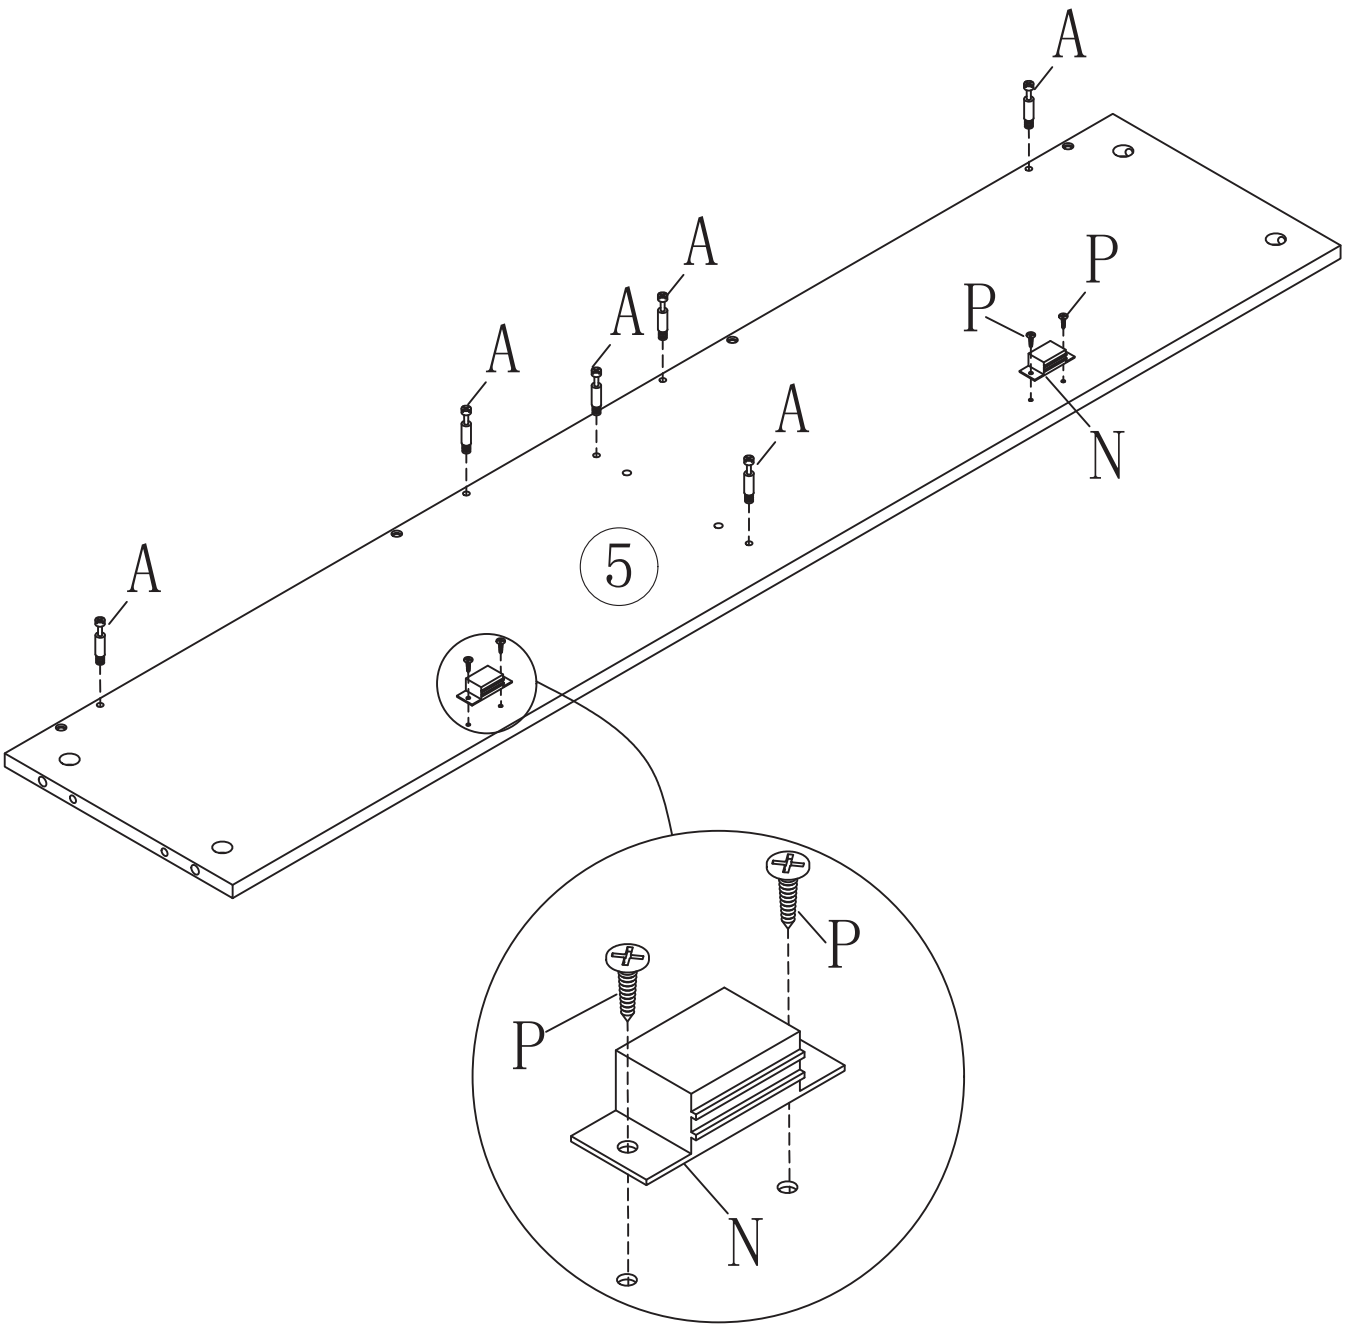

Assembly Instructions


Step 5

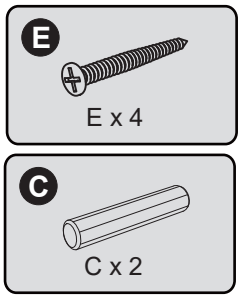


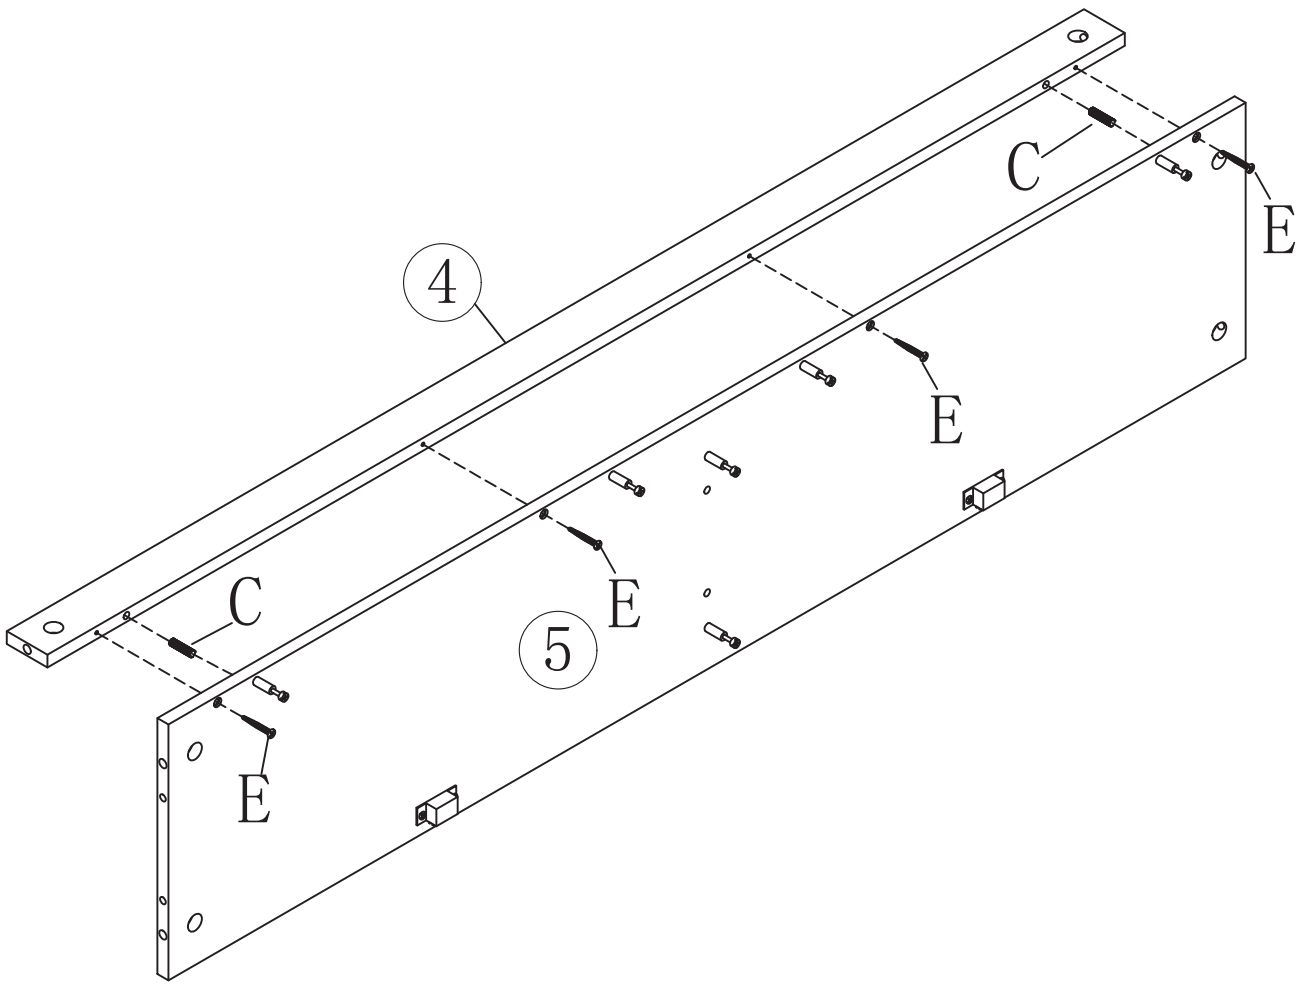

Assembly Instructions

Step 6

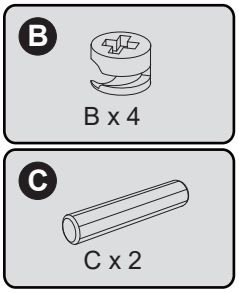


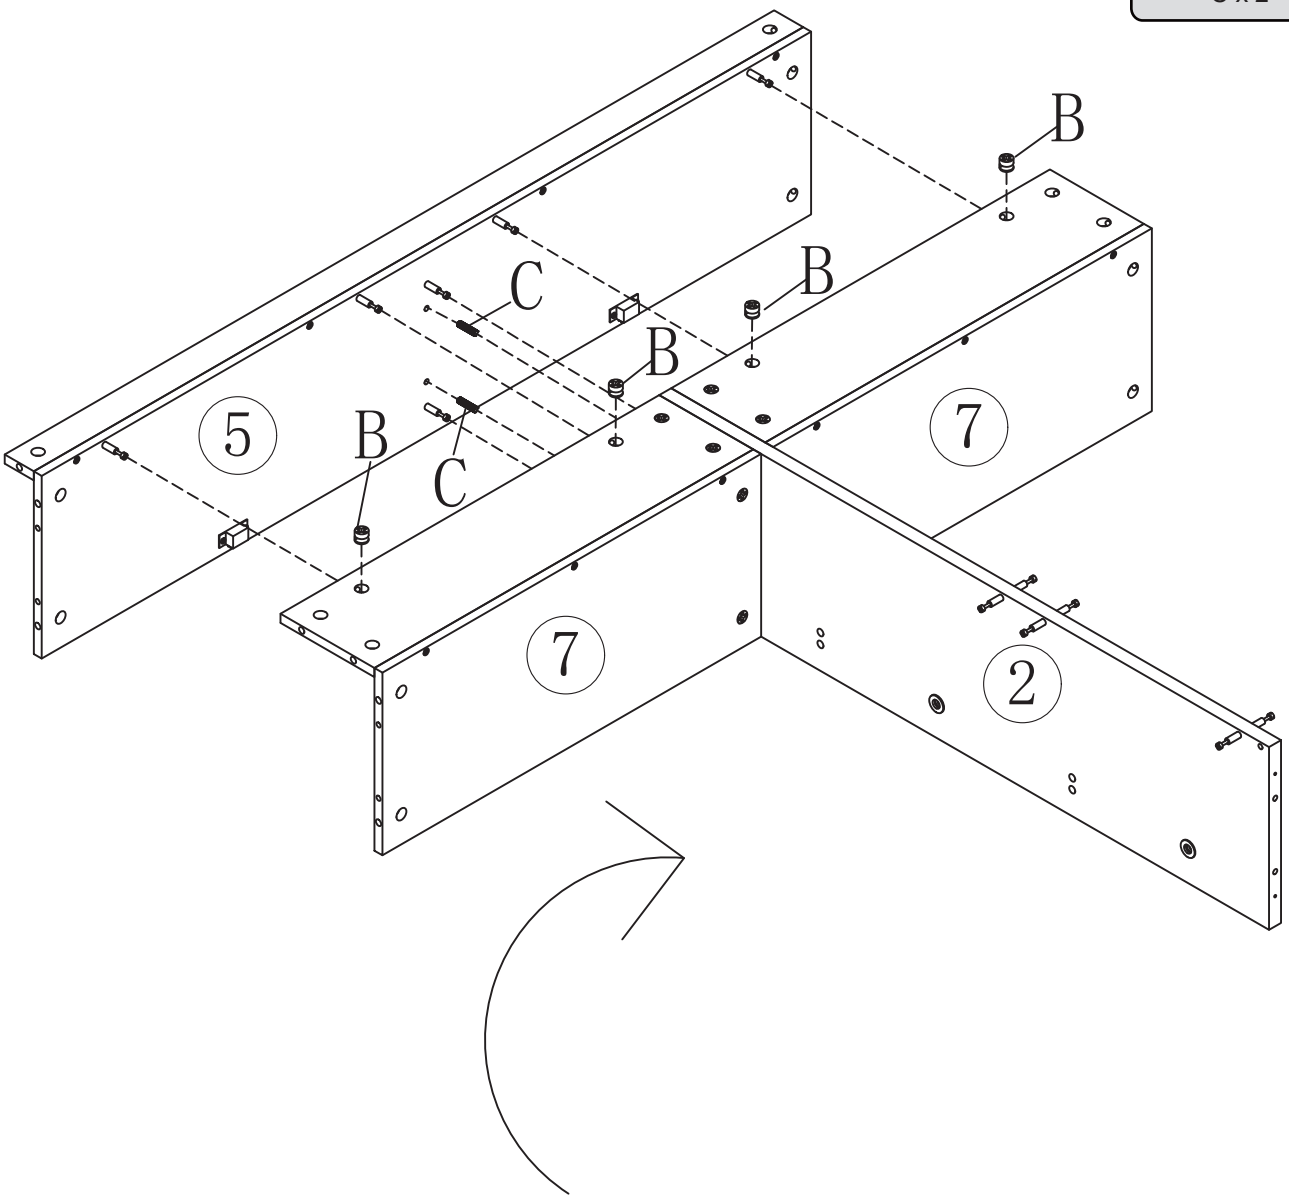


After fastening the Cam Lock,
flip the cabinet over and lay it flat, then
proceed to Assembly Step 7.

Assembly Instructions


Step 7

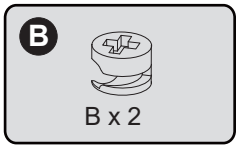


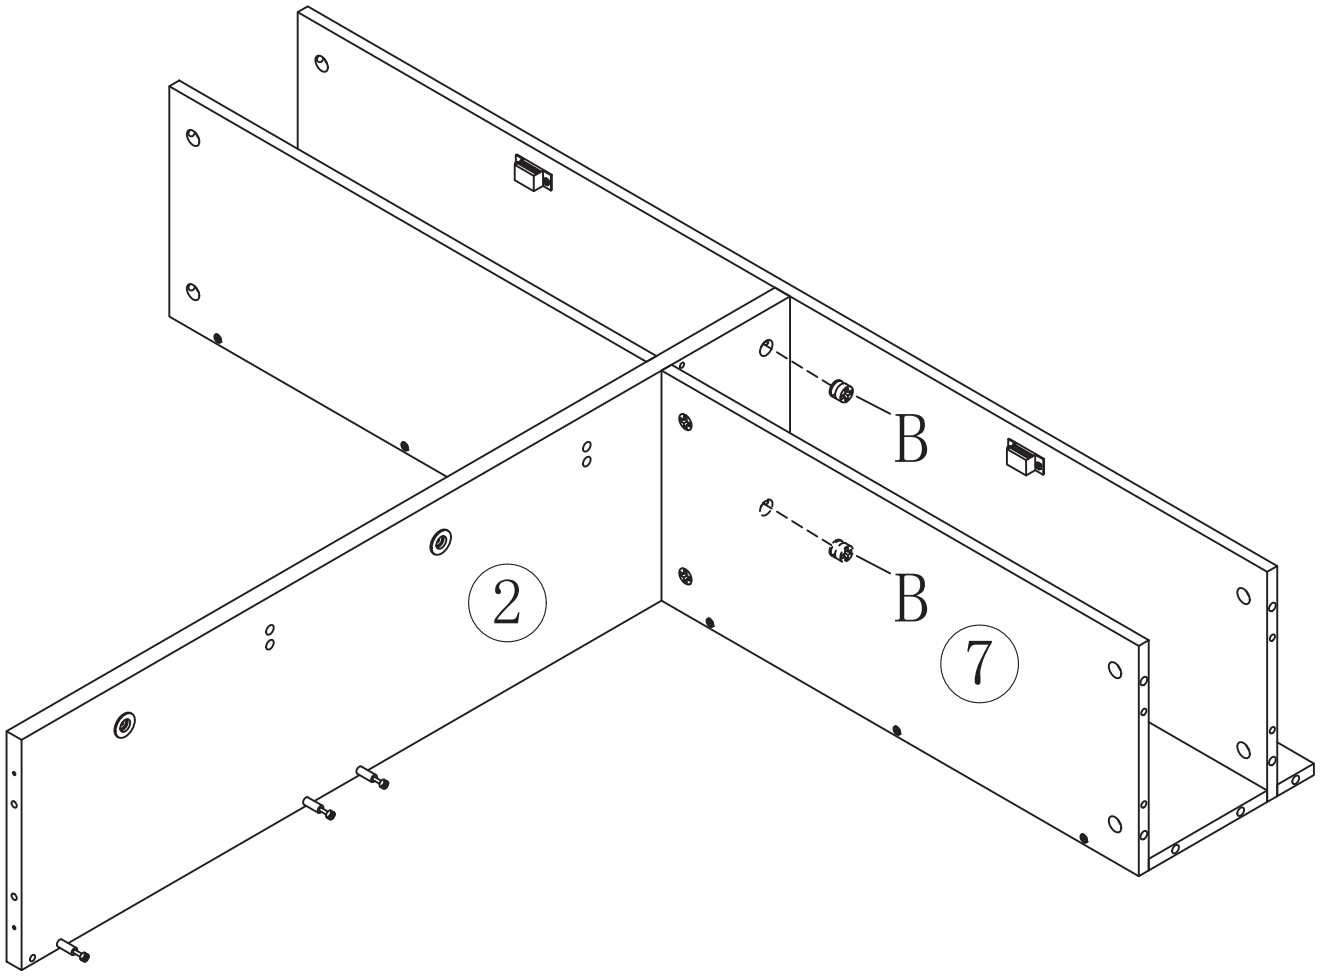

Assembly Instructions

Step 8

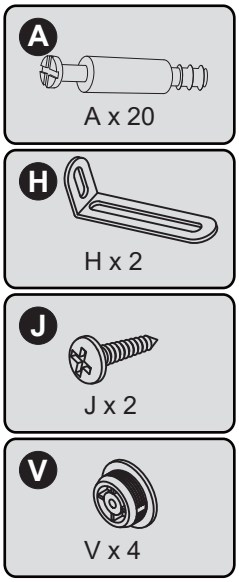


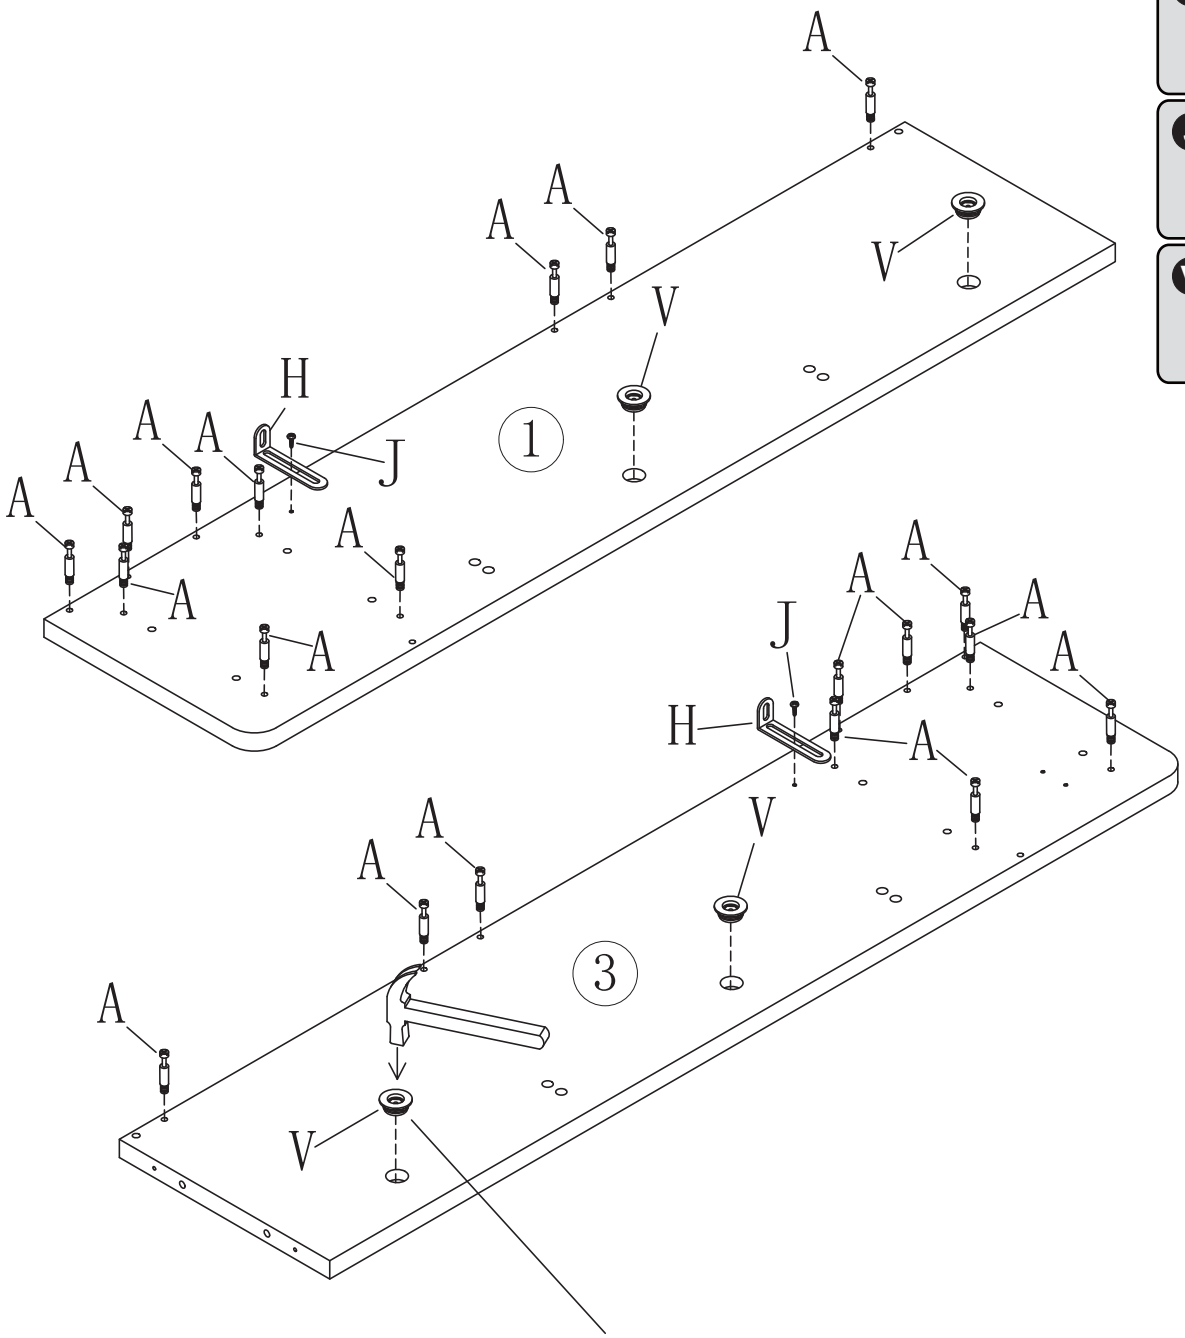


Drive the "V" in multiple stages; avoid a single powerful impact. Ensure the "V" fits completely flush against the board surface.

Assembly Instructions


Step 9

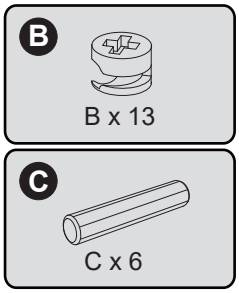


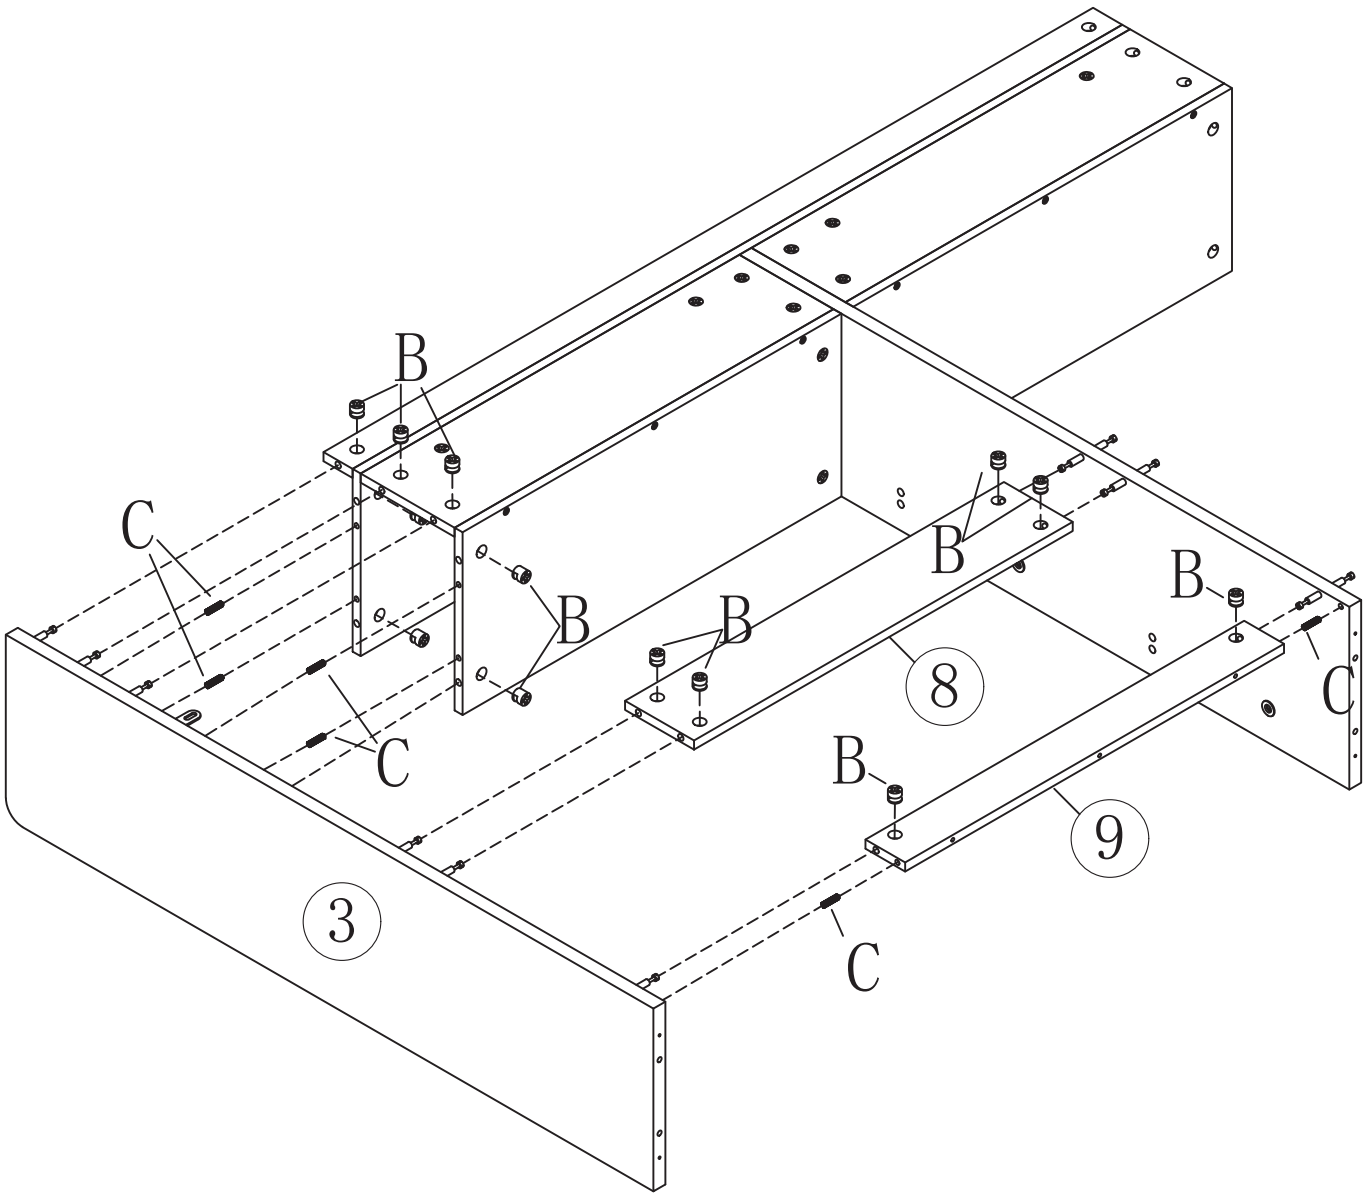

Assembly Instructions


Step 10

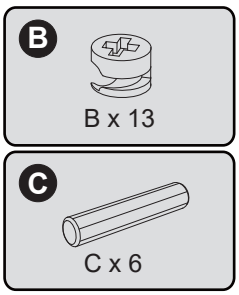


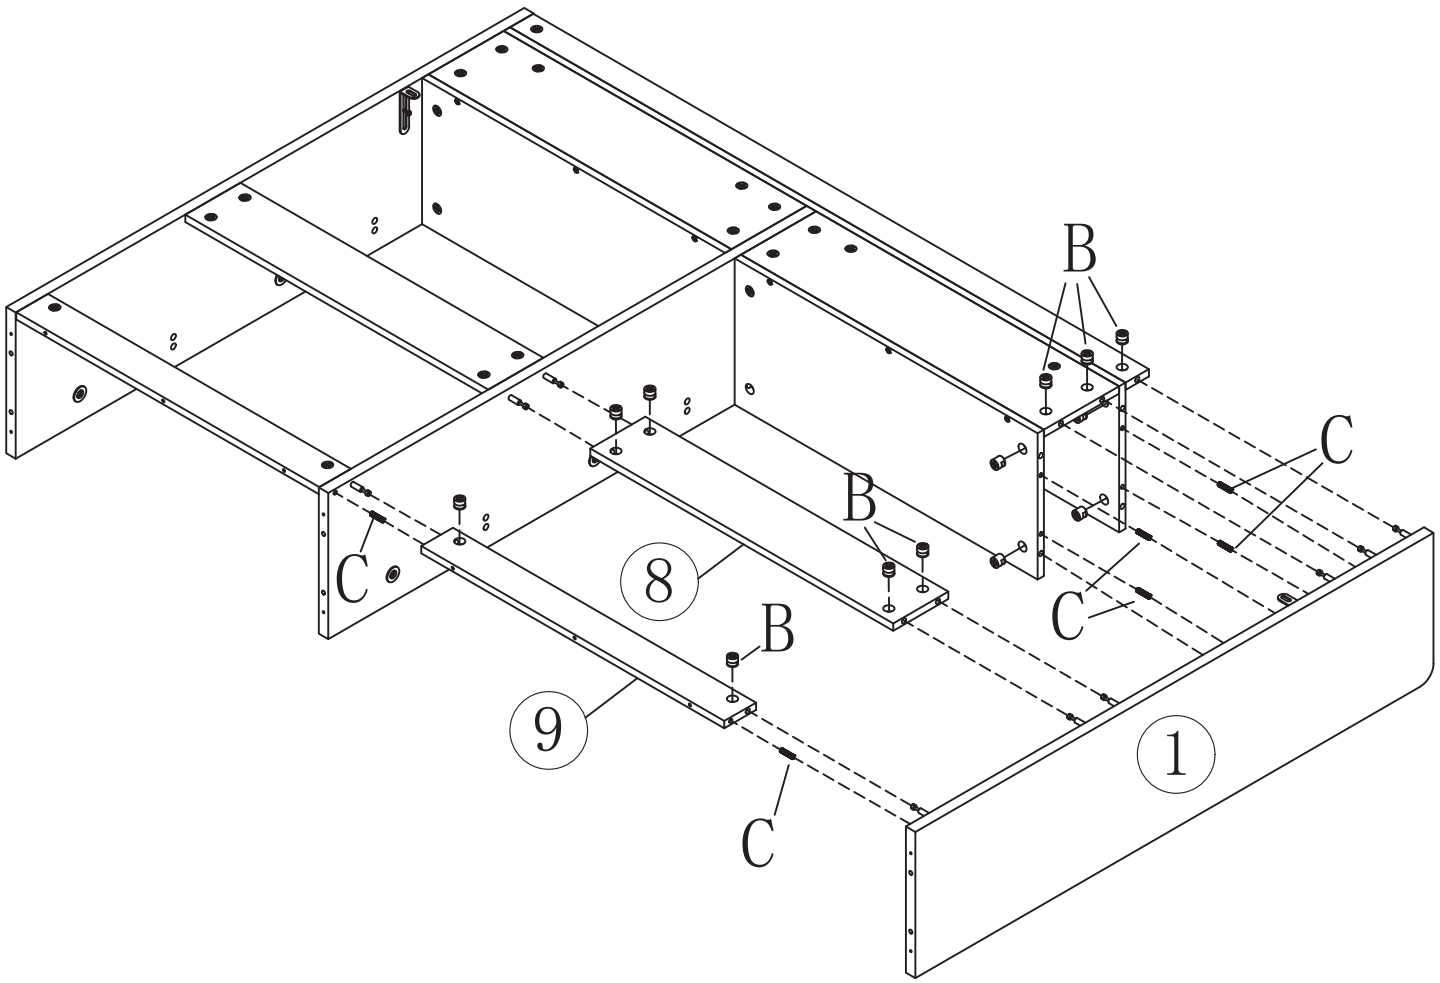


Assembly Instructions

Step 11

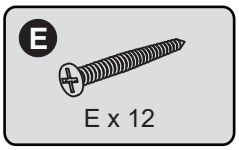


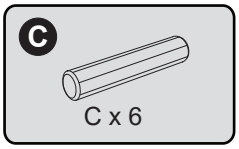

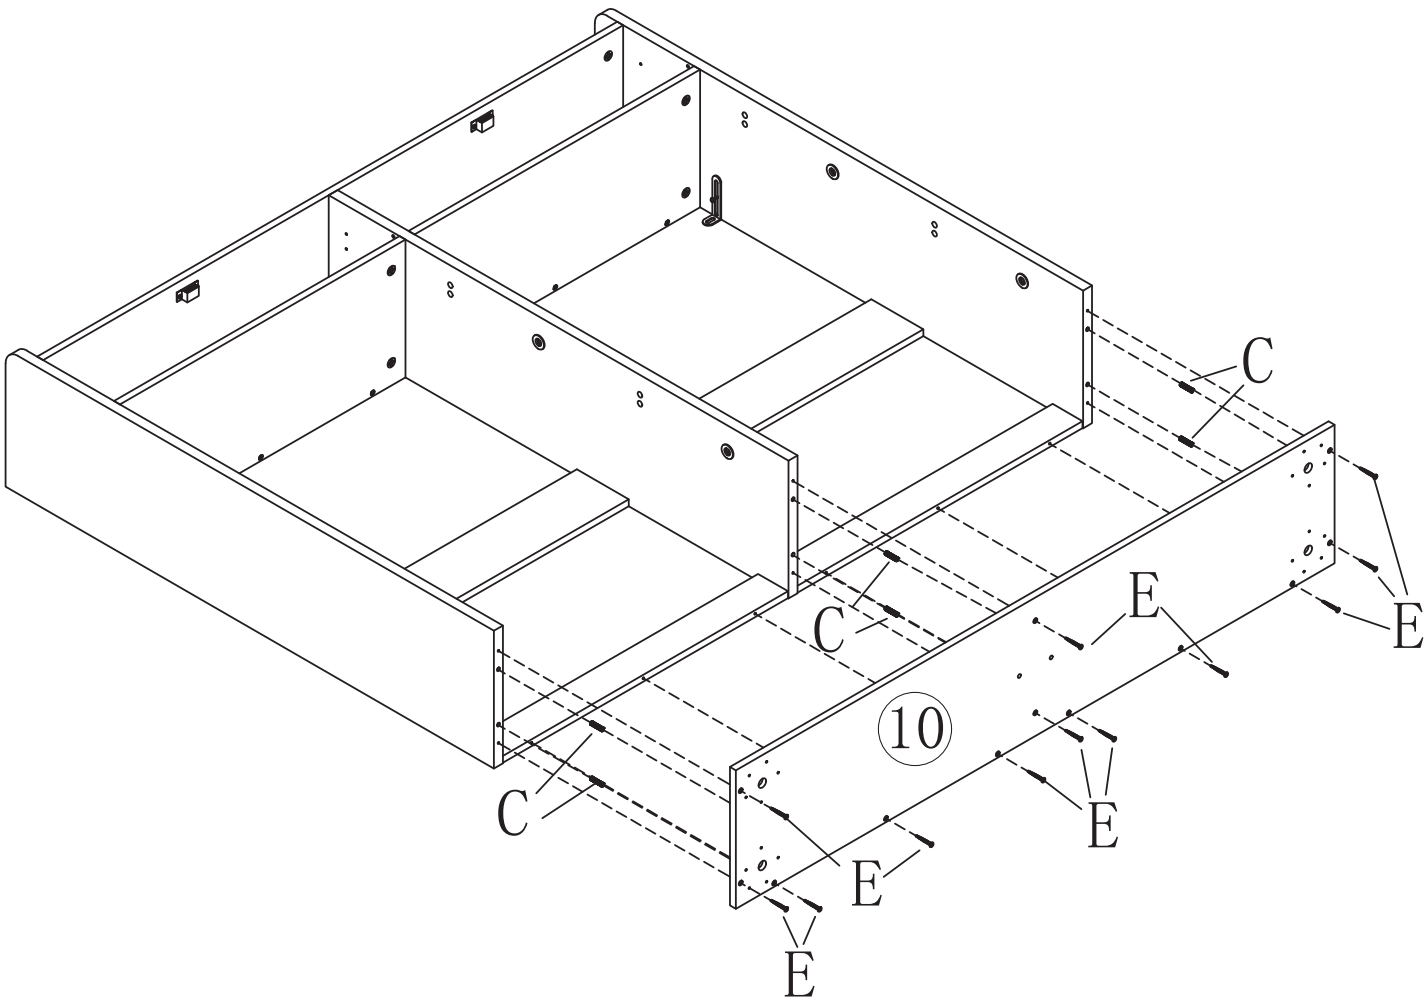


Assembly Instructions


Step 12

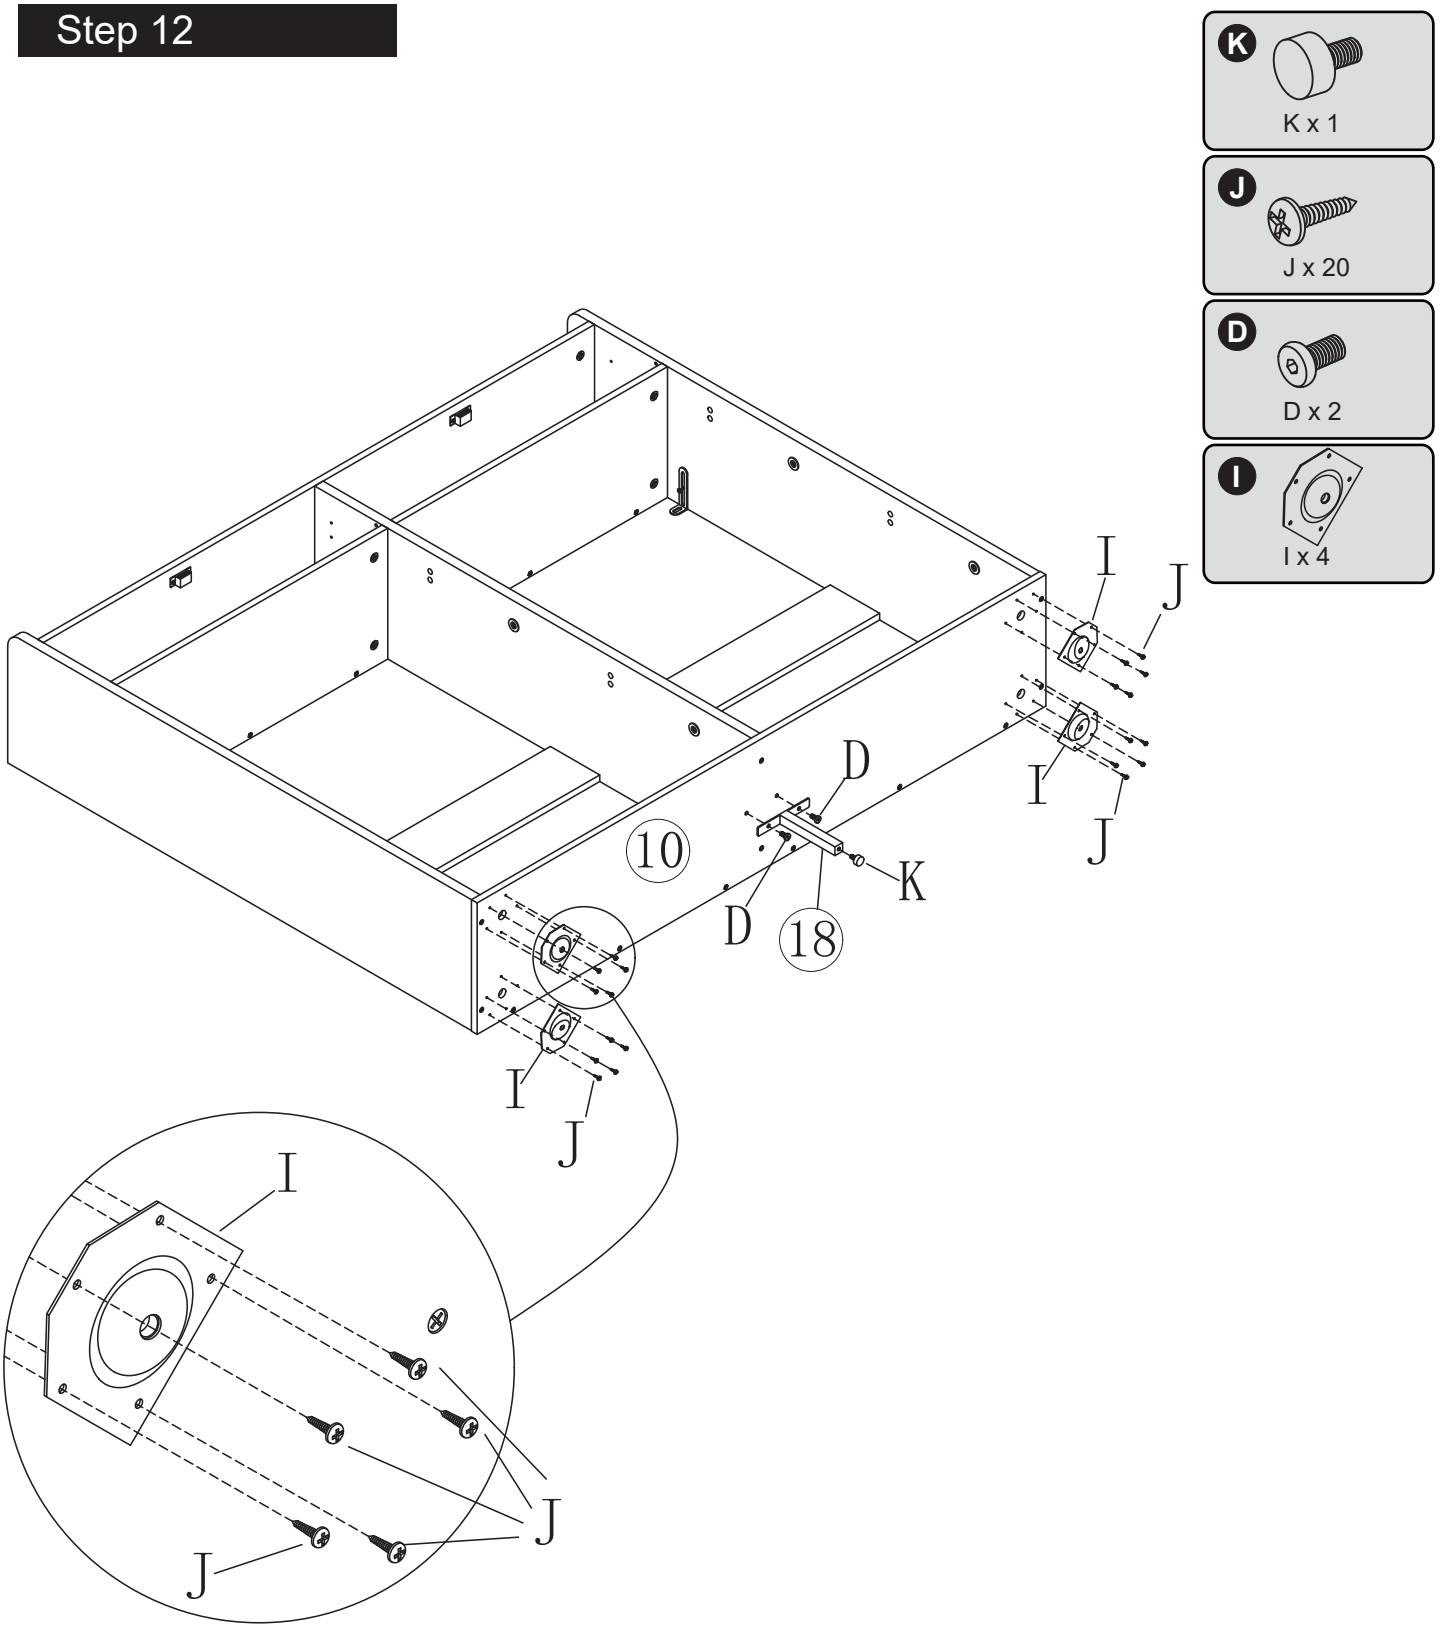


Assembly Instructions

Step 13

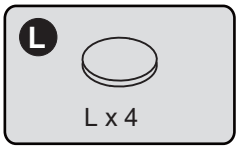


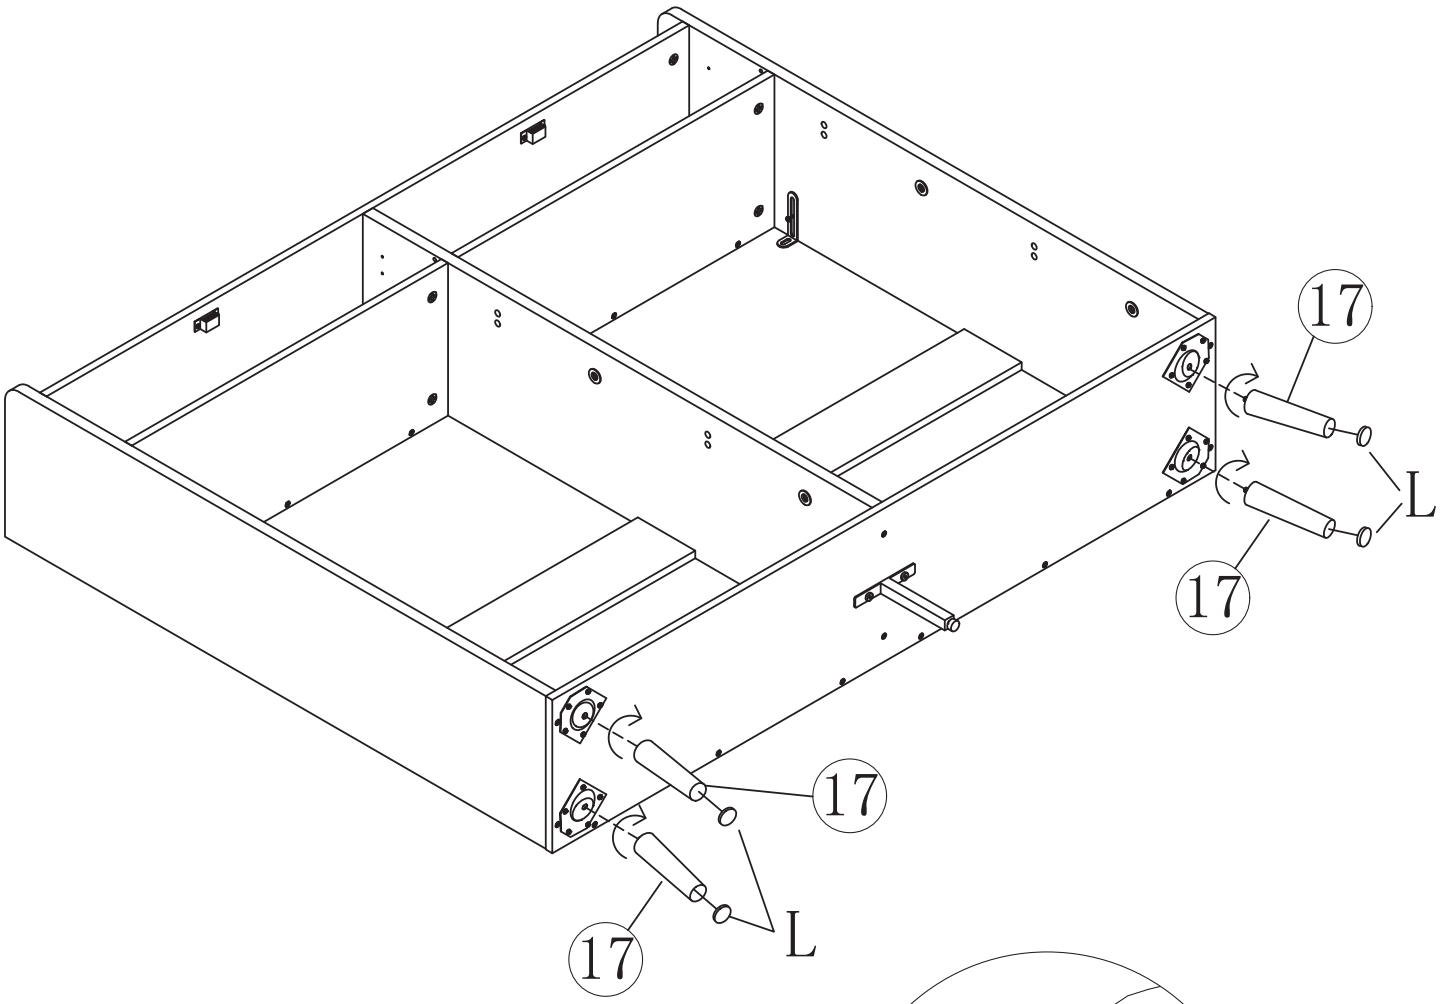


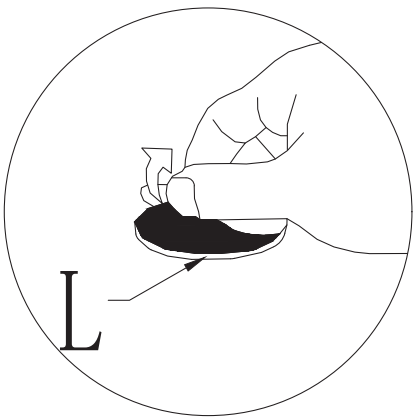

Assembly Instructions

Step 14

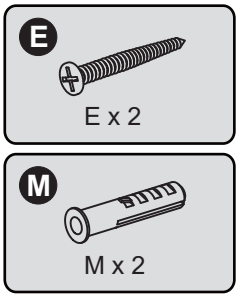

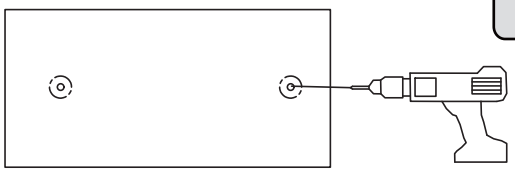


1.First, figure out where you want to mount the cabinet and mark the spots on the wall.

2.Drill holes in the wall right where you marked.

3.Tap the M expansion anchors into the holes you drilled.


4.Secure everything with the E screws.

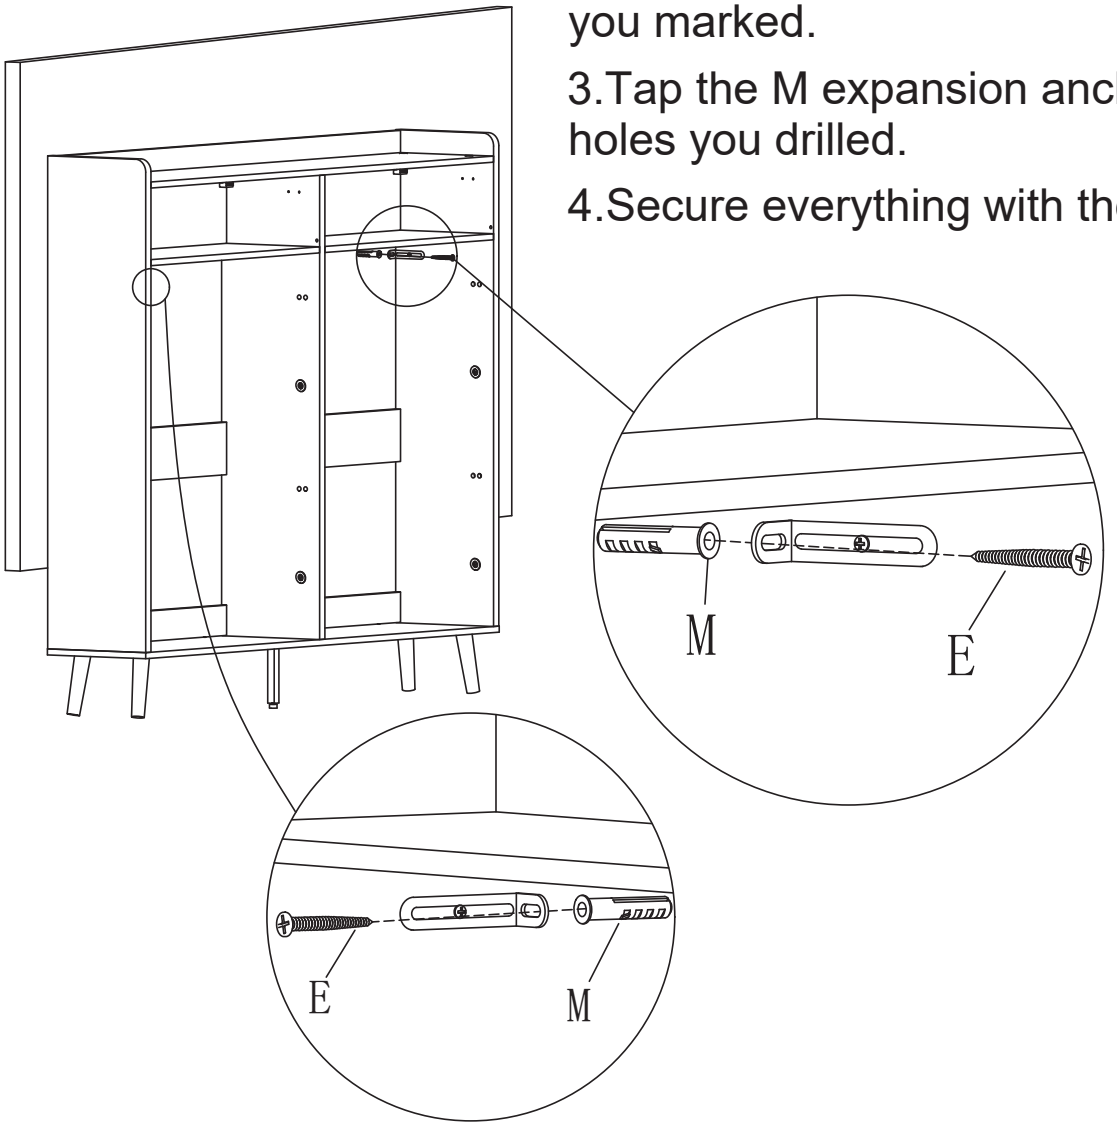



Assembly Instructions


Step 15


X2

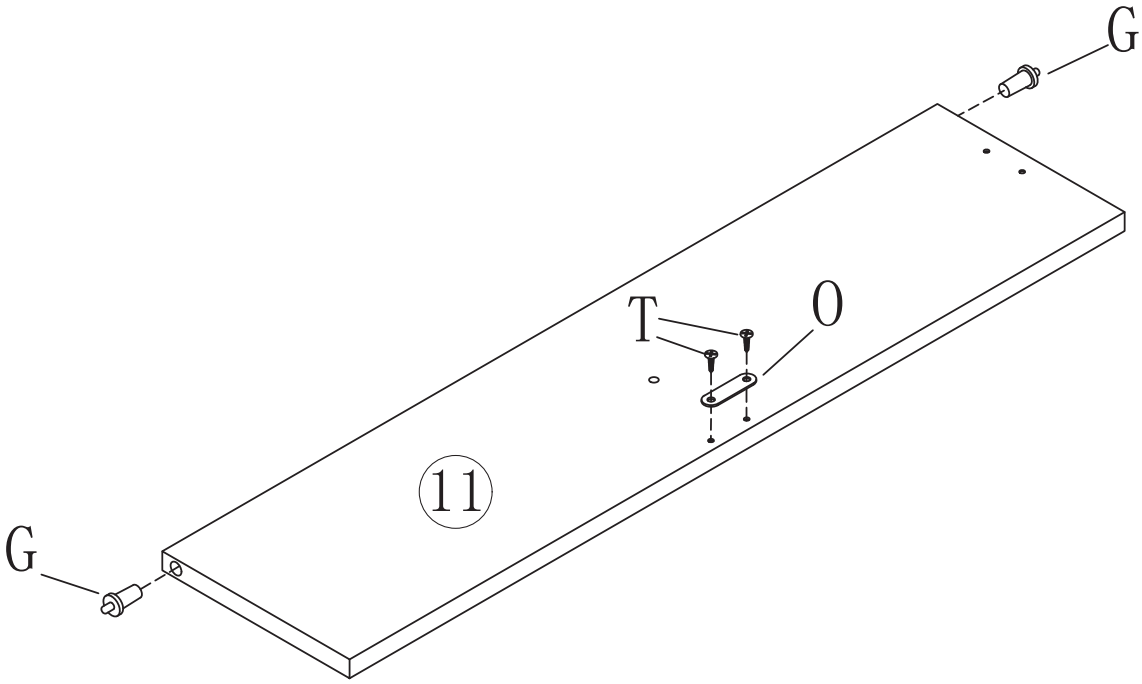


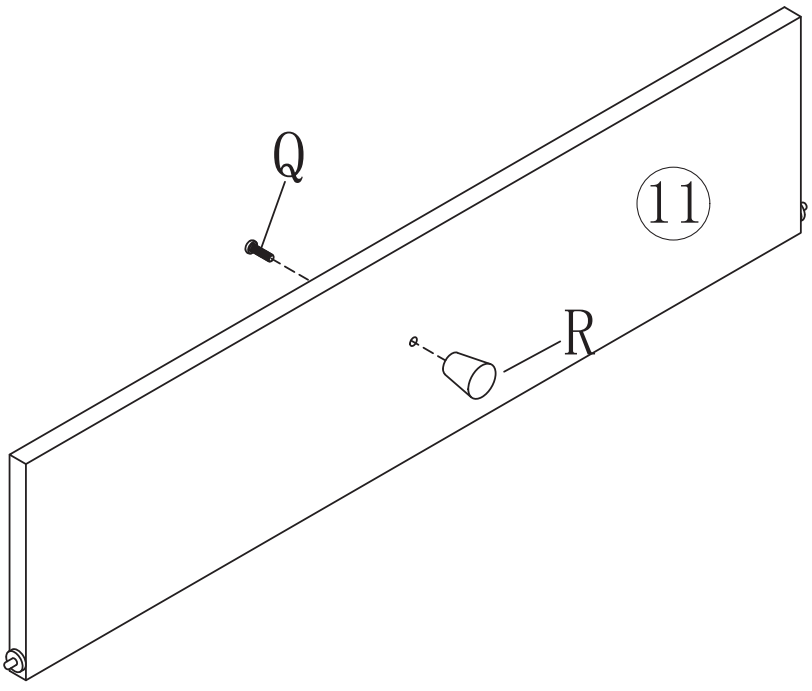


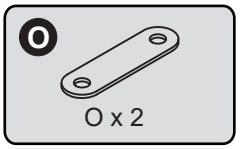

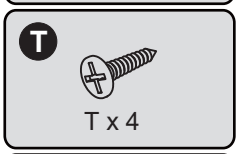

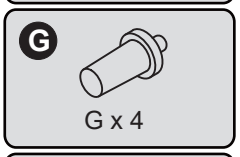


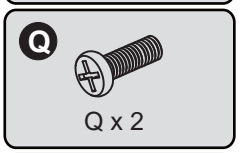


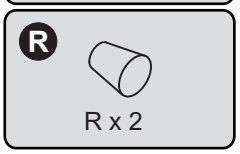

Assembly Instructions


Step 16

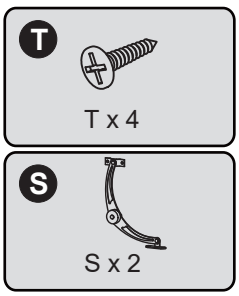

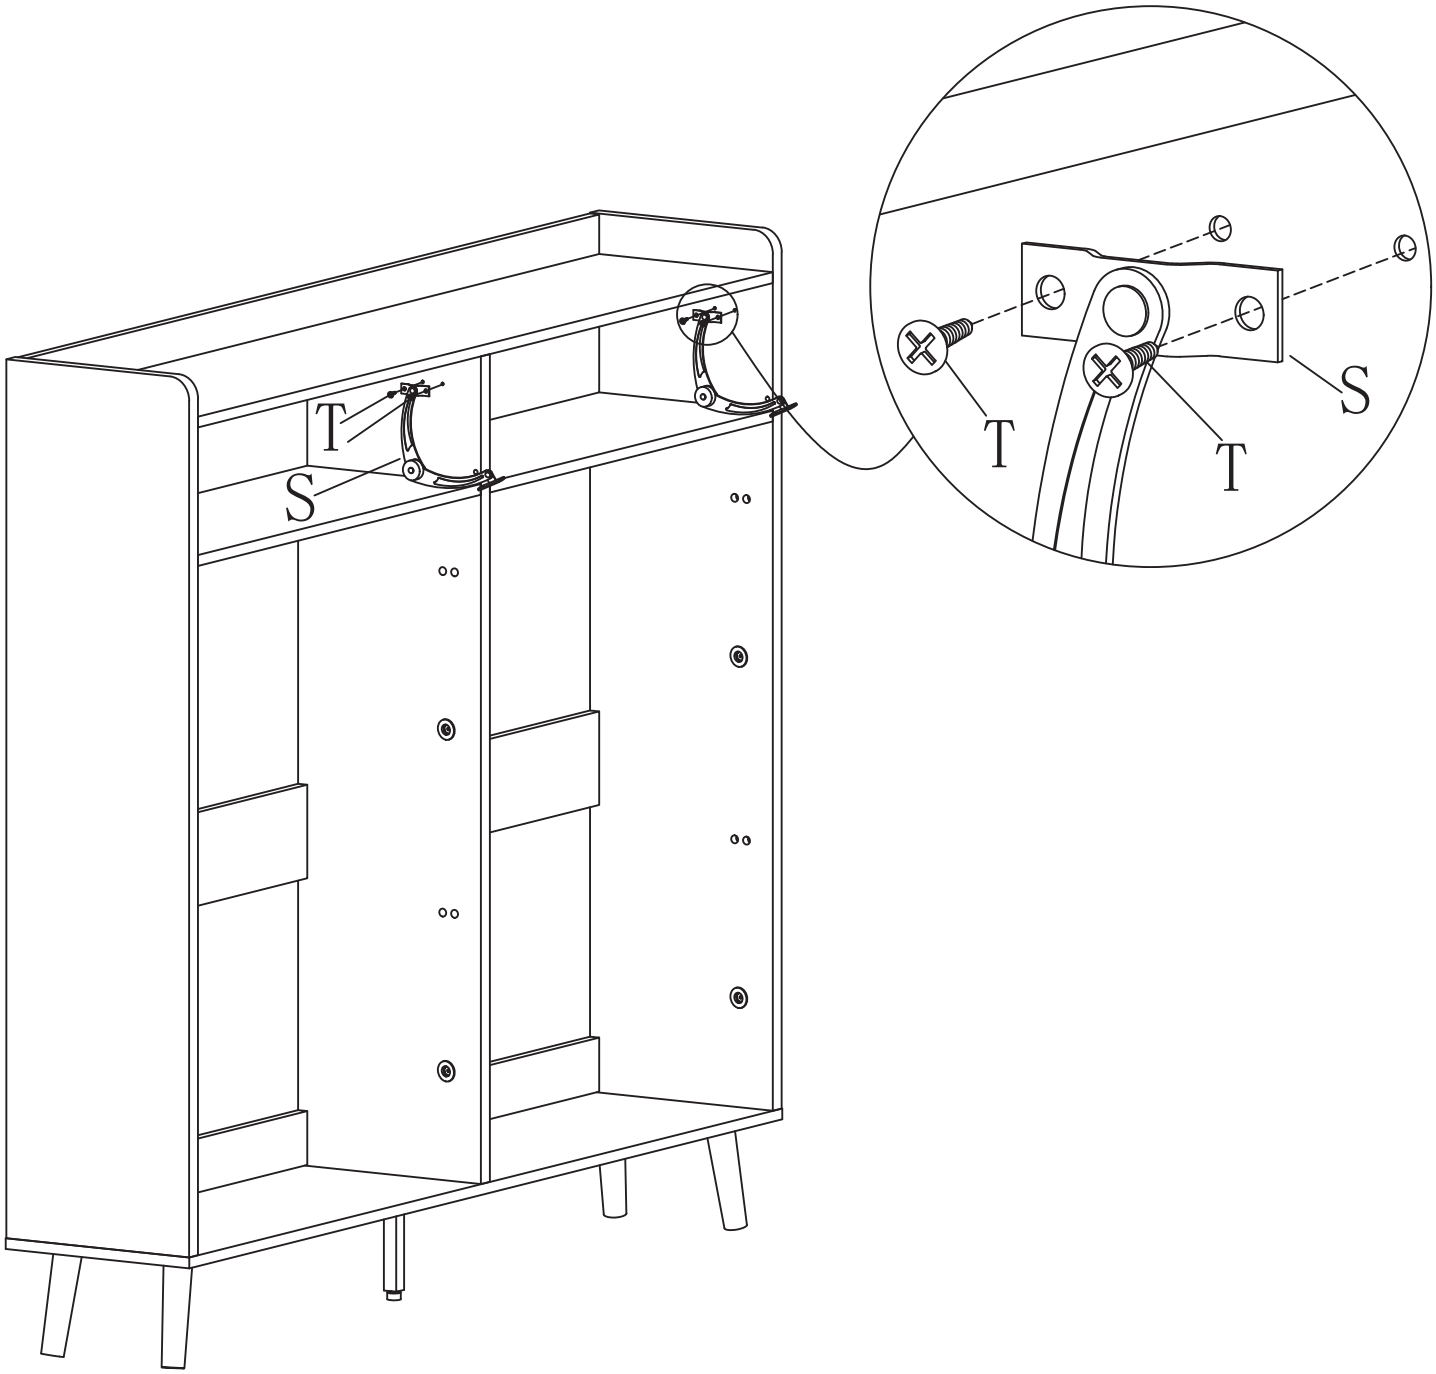

Assembly Instructions


Step 17

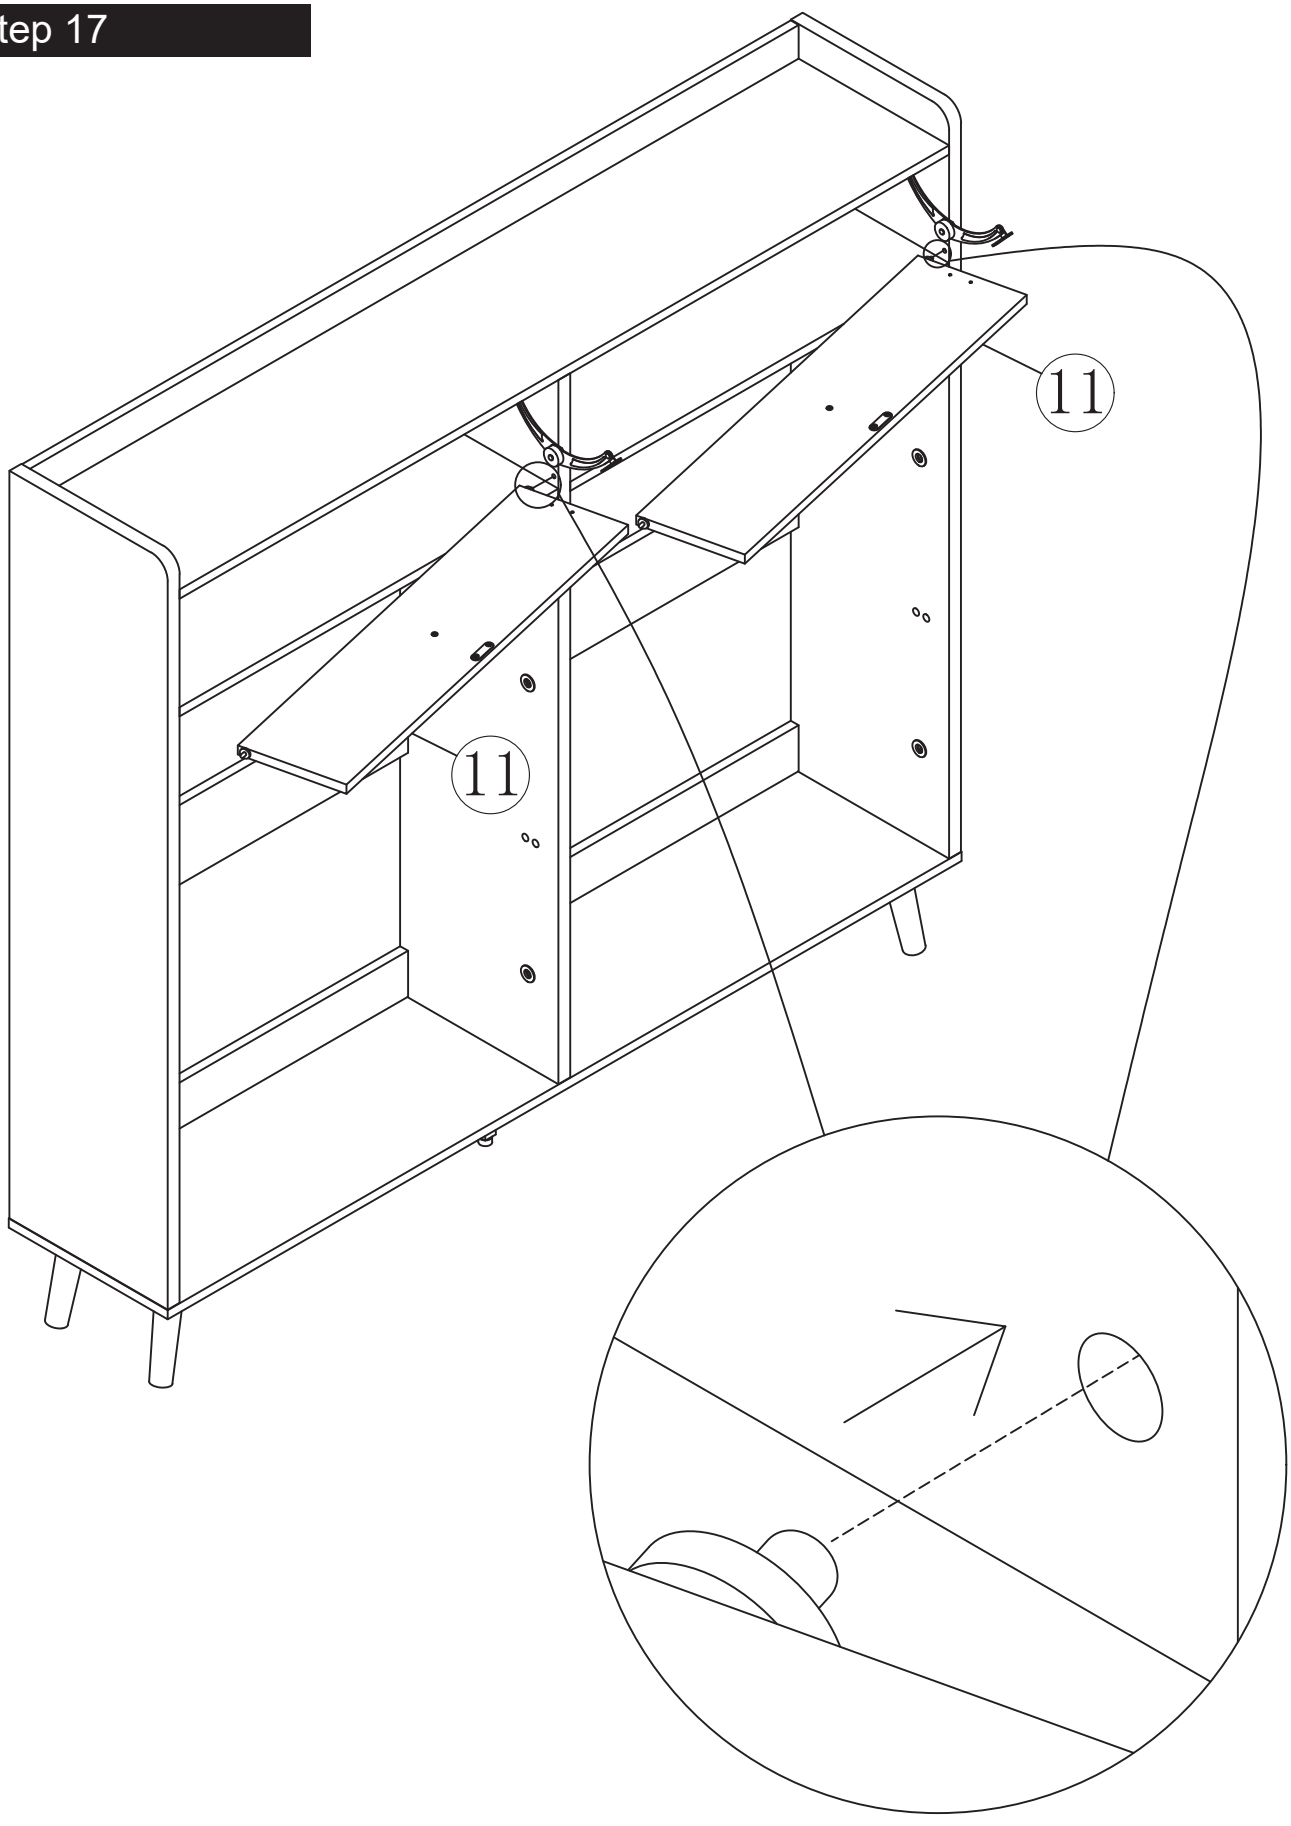

Assembly Instructions

Step 18

T x 4

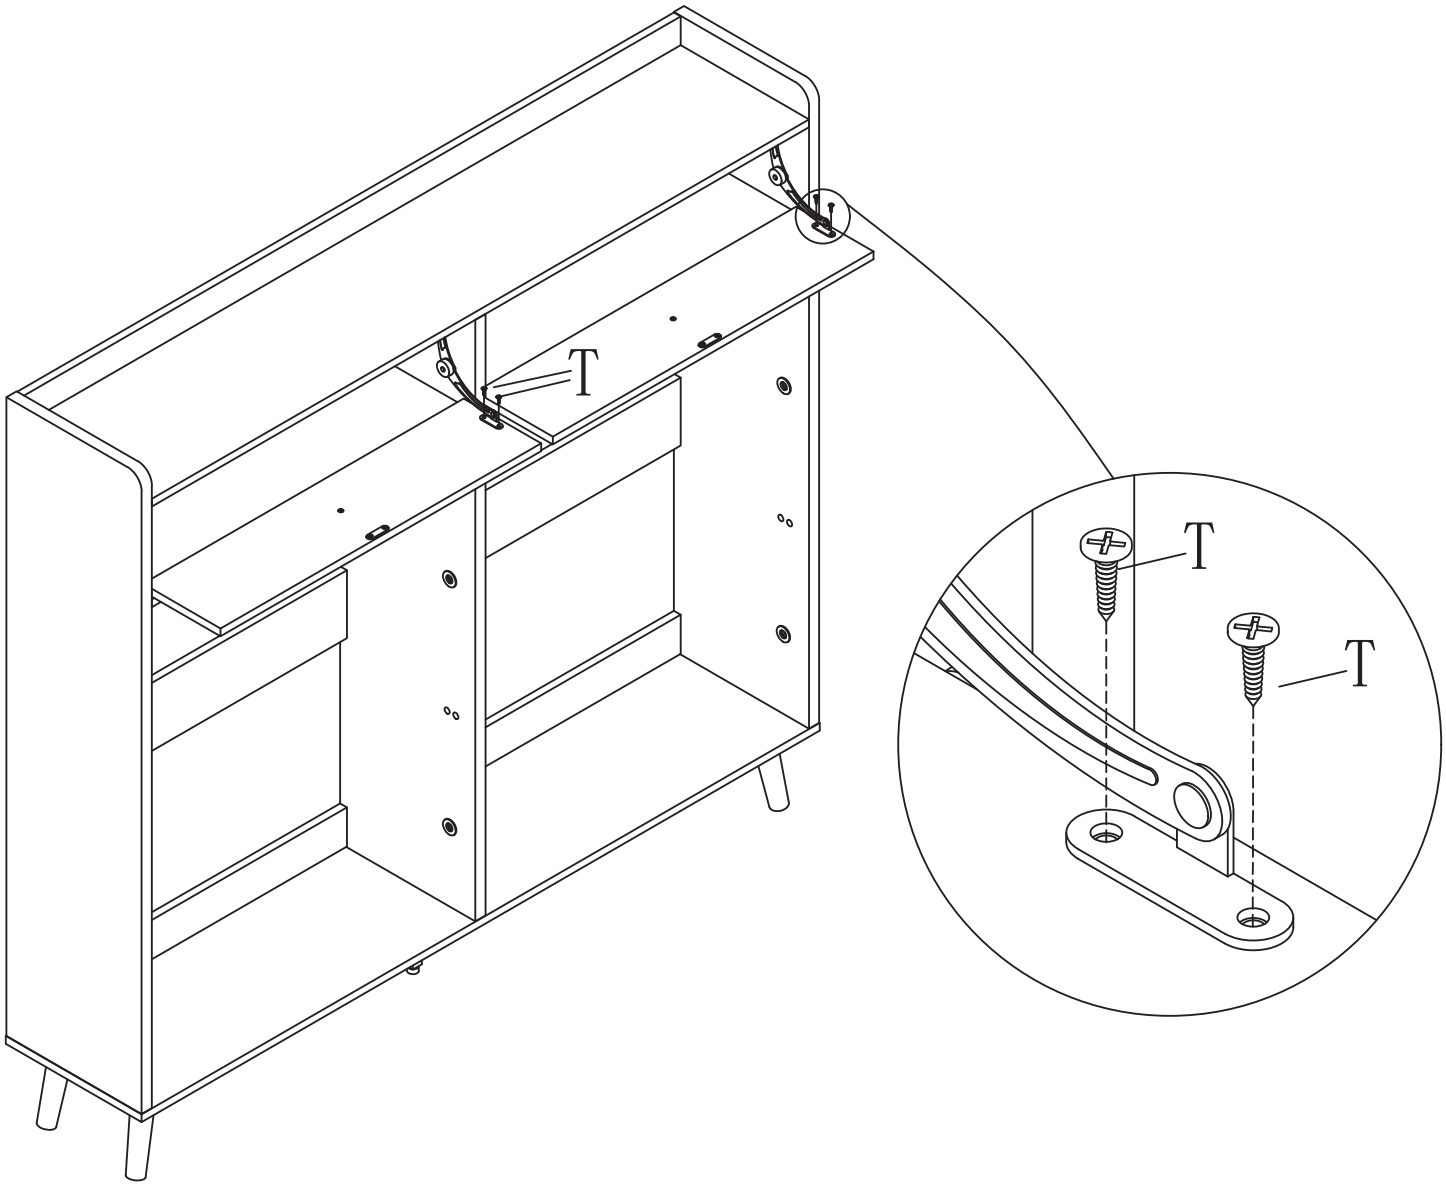


Assembly Instructions

Step 19

X2

X x 24

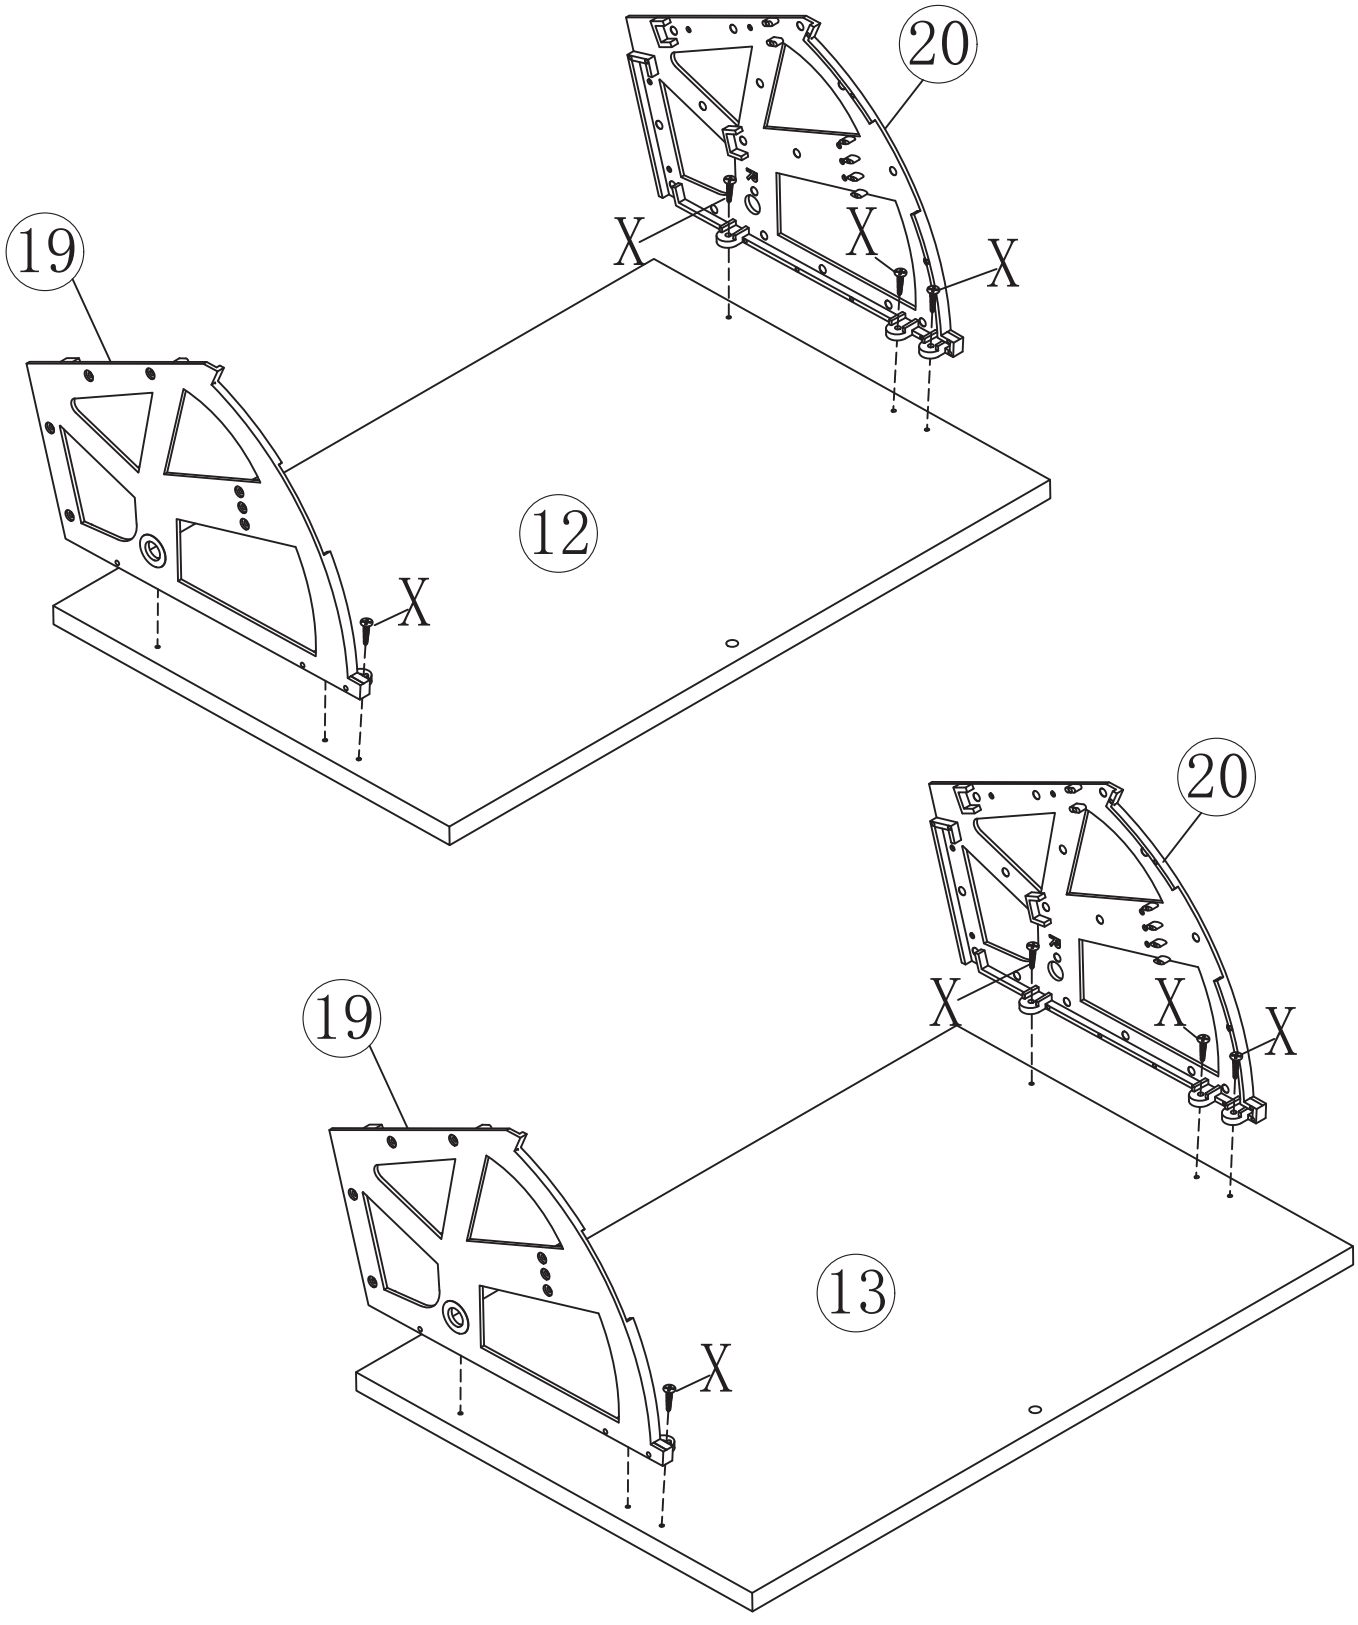


Assembly Instructions


Step 20

X2

X x 32

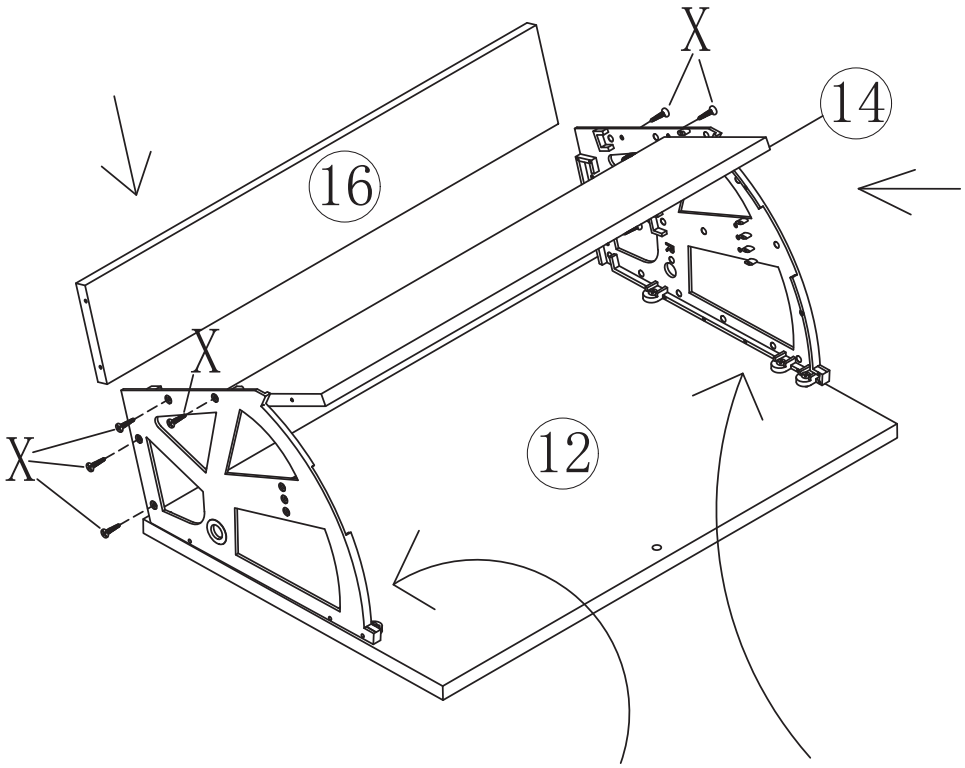

Gently pull the flip bin brackets outward,
insert the shelf panel, and secure with X screws.

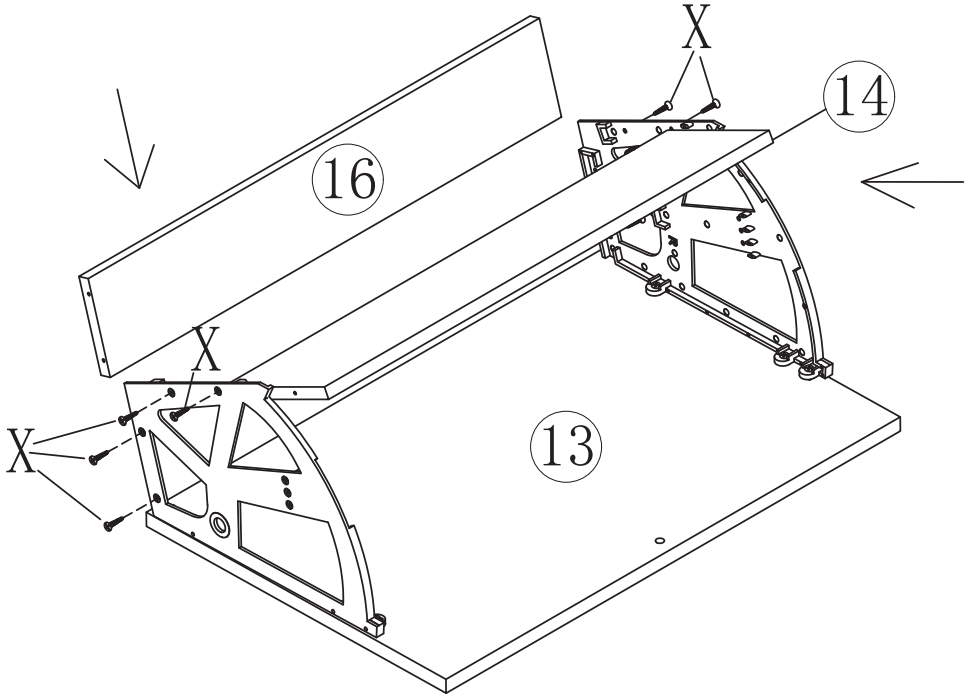

Assembly Instructions

Step 21


X2

Q

Q x 4


R

R x 4

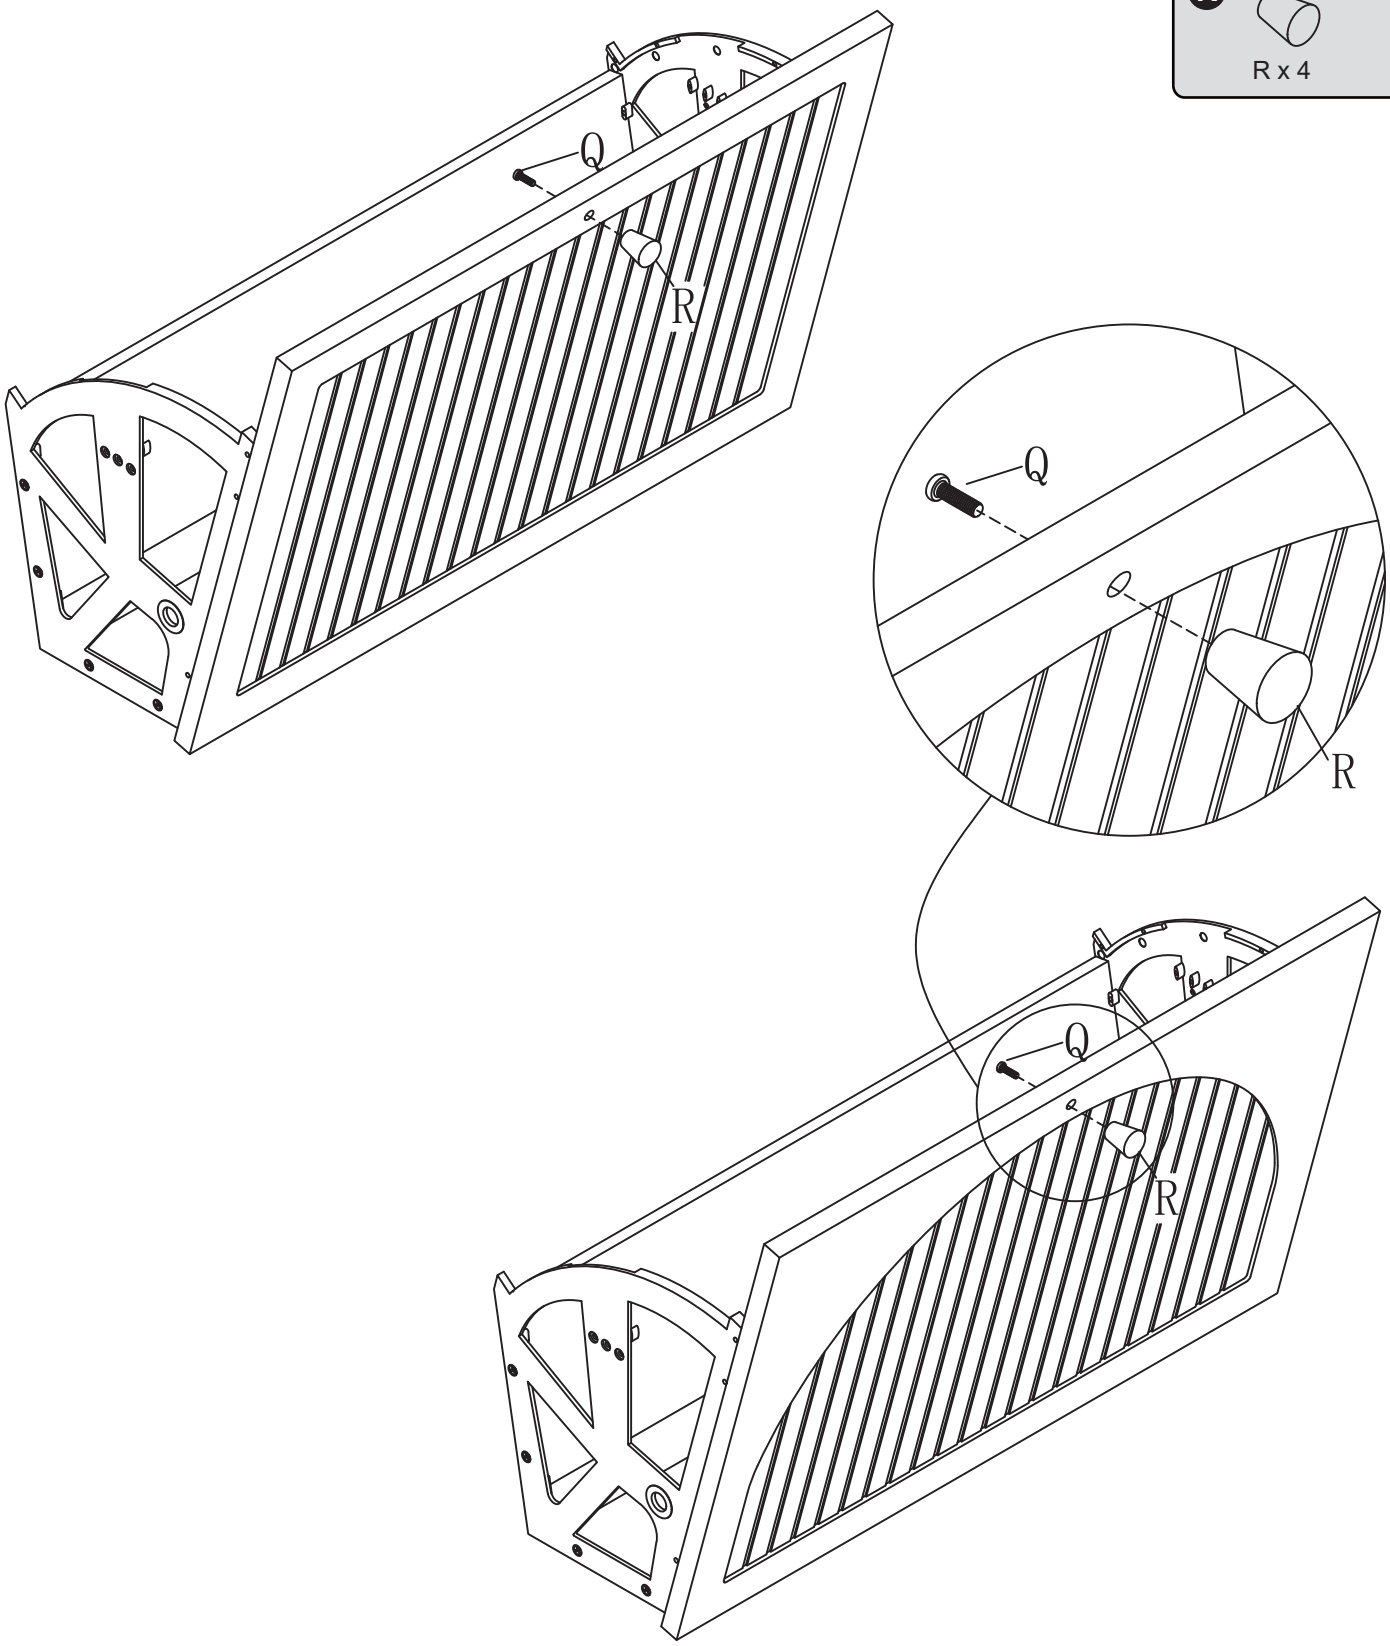


Assembly Instructions

Step 22

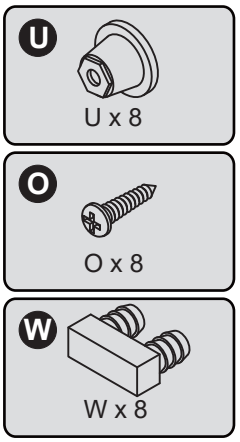

rotate part ‘1’ to the position shown in the figure, then insert the W component.

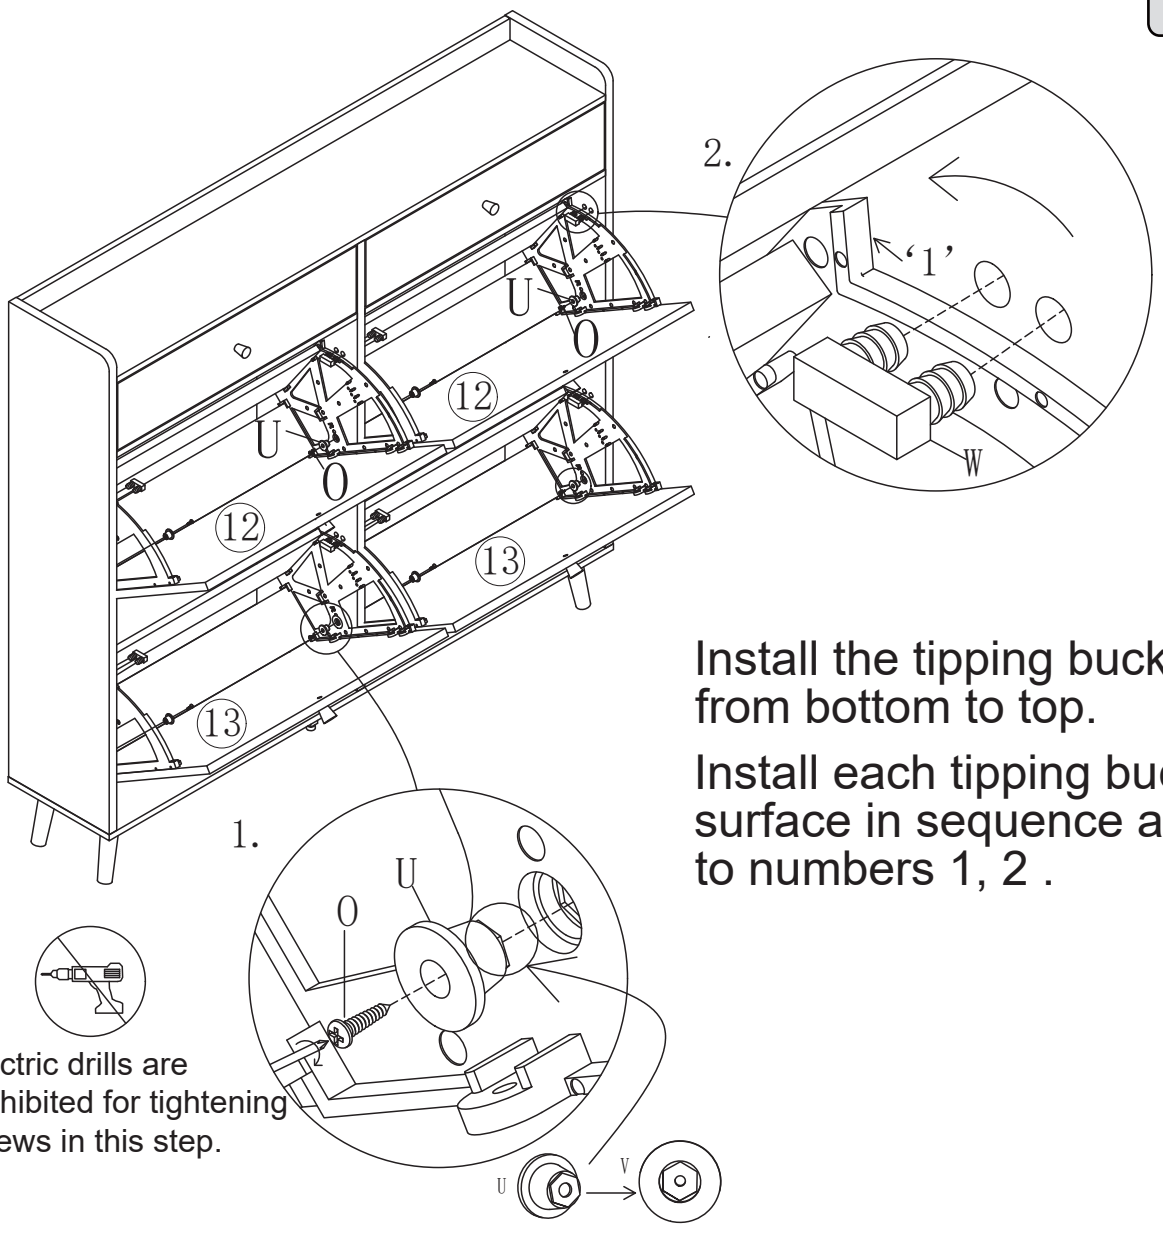

Install the tipping bucket from bottom to top.


Install each tipping bucket surface in sequence according to numbers 1, 2 .


Electric drills are prohibited for tightening screws in this step.

Align hex socket of part 'U'with hole of part 'V'to full fit, then tighten screw 'O'.

Assembly Instructions

Step 23

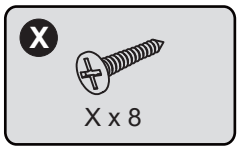

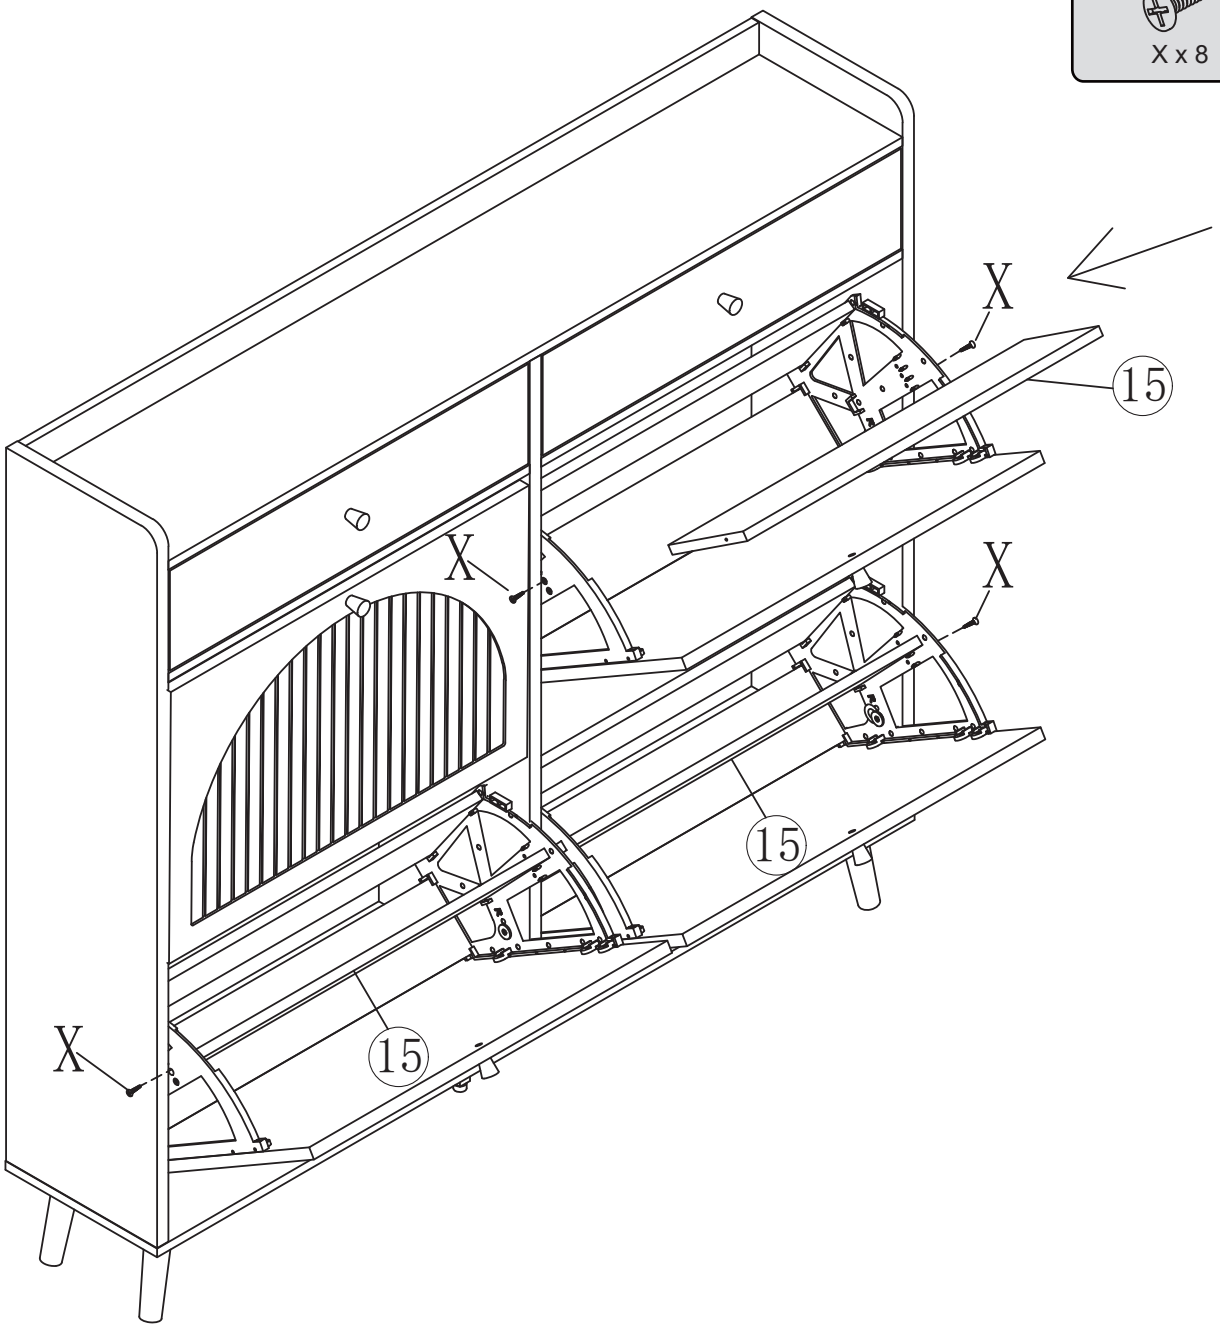


If screws are not fastened for Panel 15, the gap can be adjusted as required.

If screws are fastened on Panel 15, the panel will be fixed. If you need to adjust the gaps of the shoe cabinet, please loosen the screws securing Panel 15 again.

Assembly Instructions

Step 24

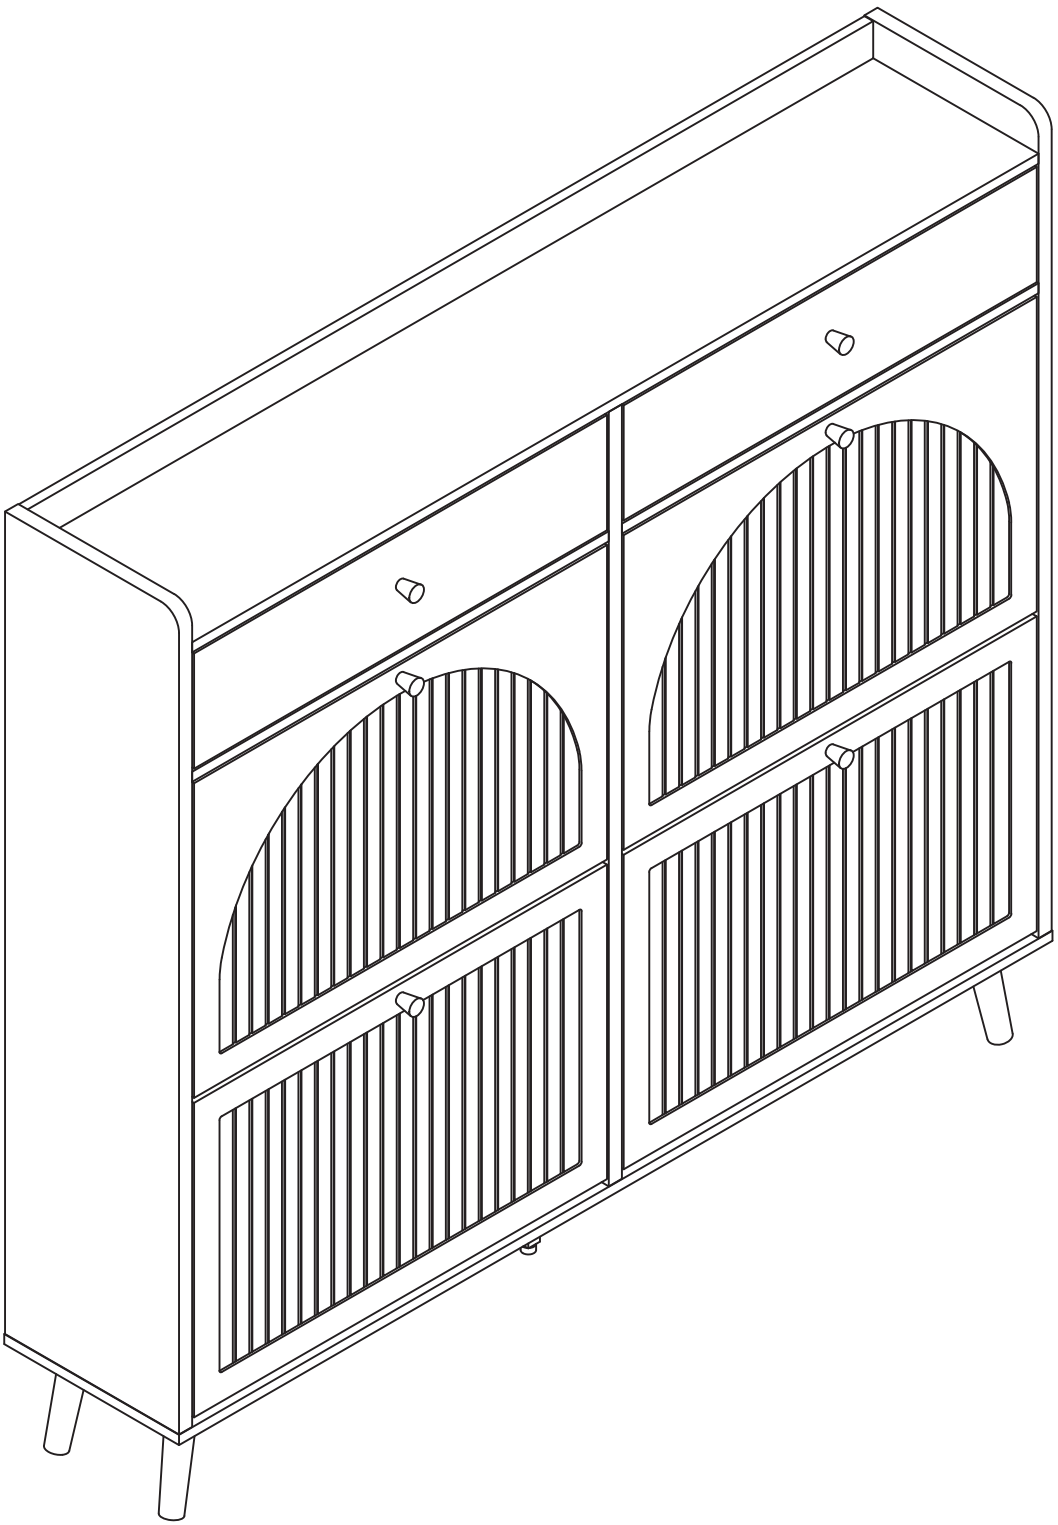

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.


Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

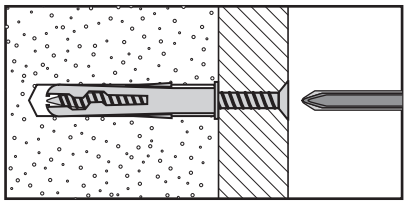


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

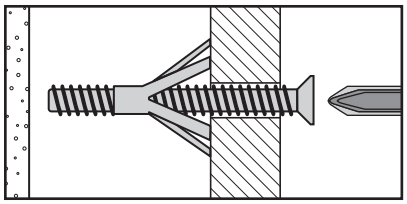


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

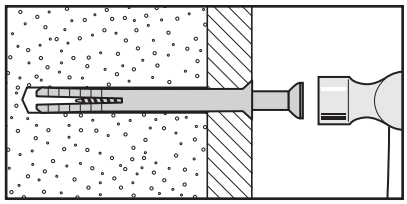


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 " Plasterboard" wall plug

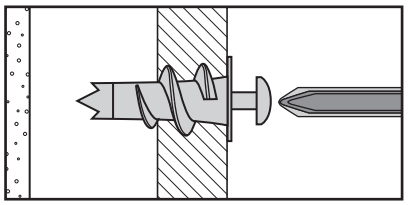


For use when attaching light loads onto plasterboard partitions.

No.4 " Cavity Fixing – Heavy Duty" wall plug

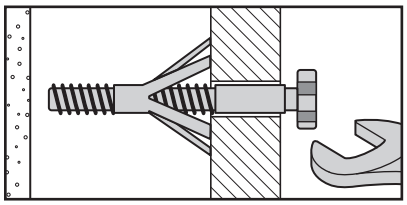

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 " Shield Anchor" wall plug – heavy loads

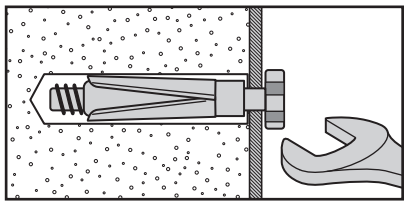

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.