



Serial Number: SDS16-22
R1.0

Shower Door Installation Instructions

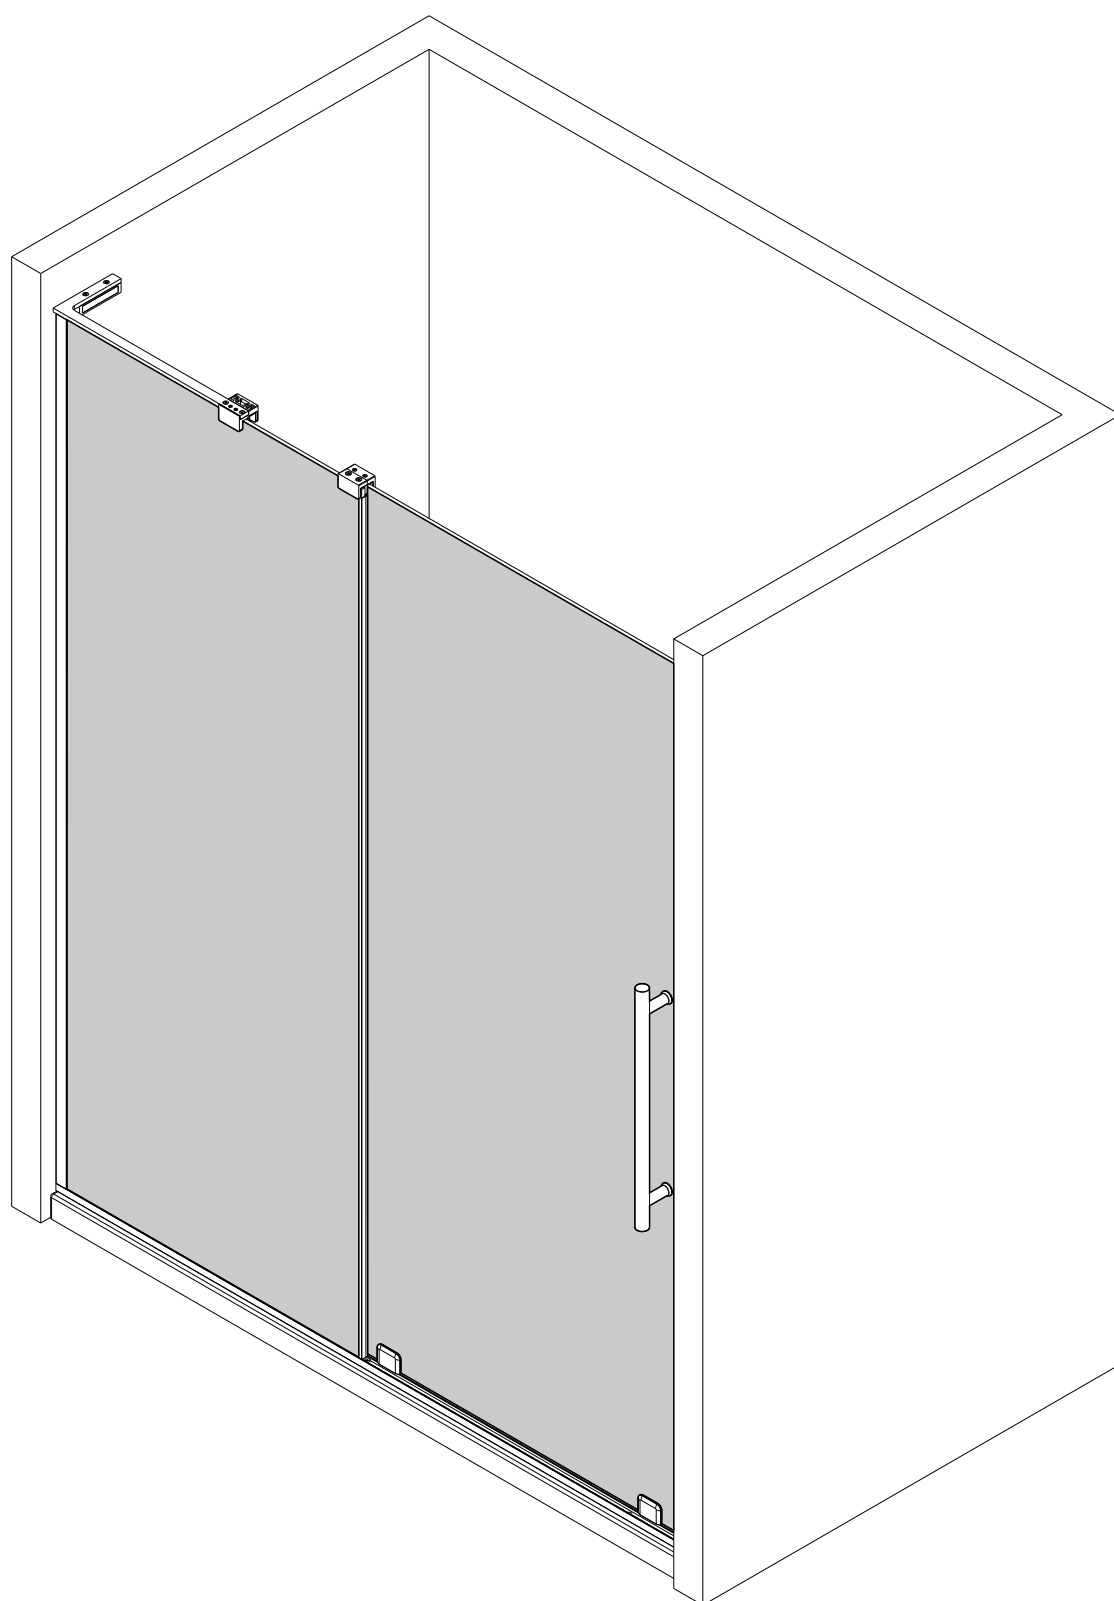

(Left opening Installation)

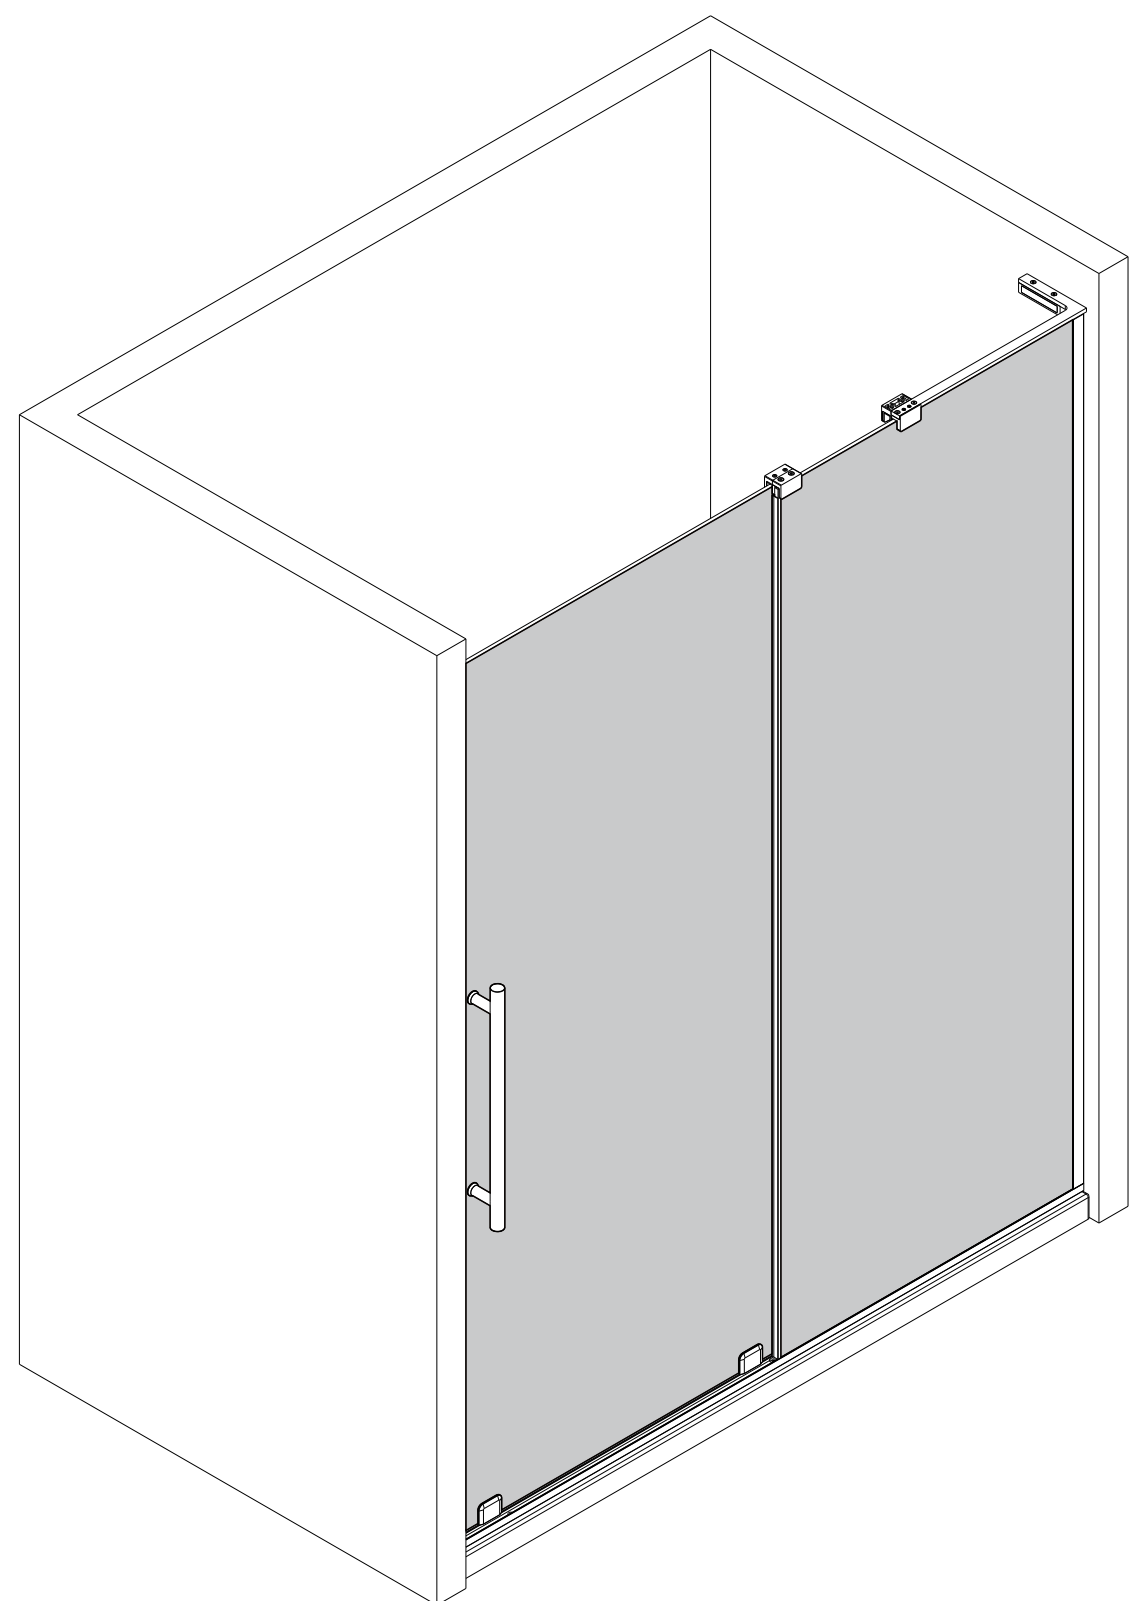

(Right opening Installation)

**Please do not return the product to the store.
Contact us with any questions.**


Model Specific Preparation




REQUIRED:

Verify threshold and wall with a level.


1/4"(6mm) Maximum out of plumb adjustment from top to bottom

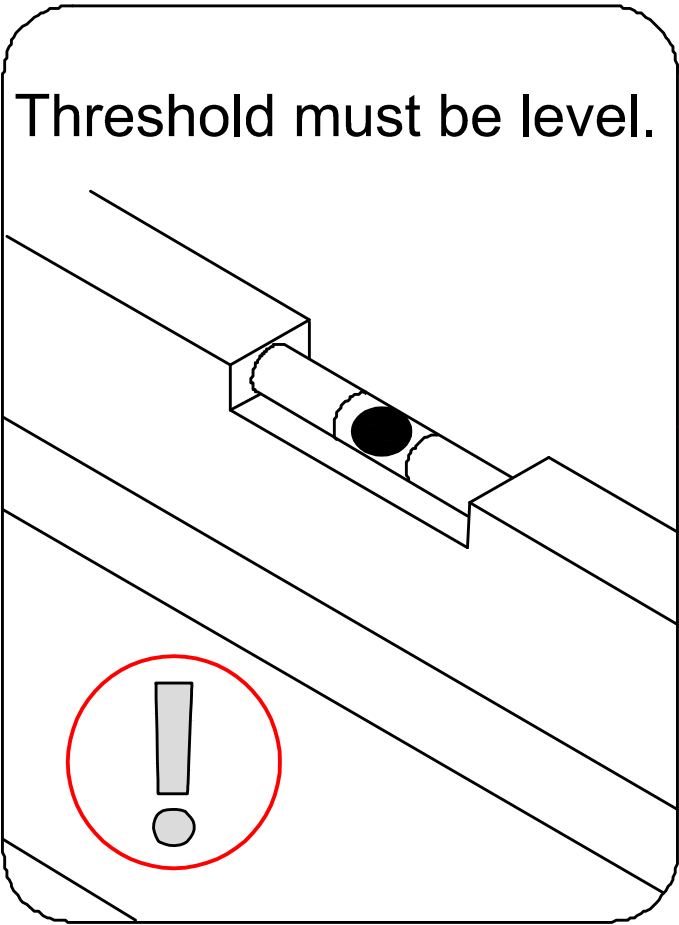

Model width	Shower Door Area
48"	46"min~48"max
60"	56"min~60"max

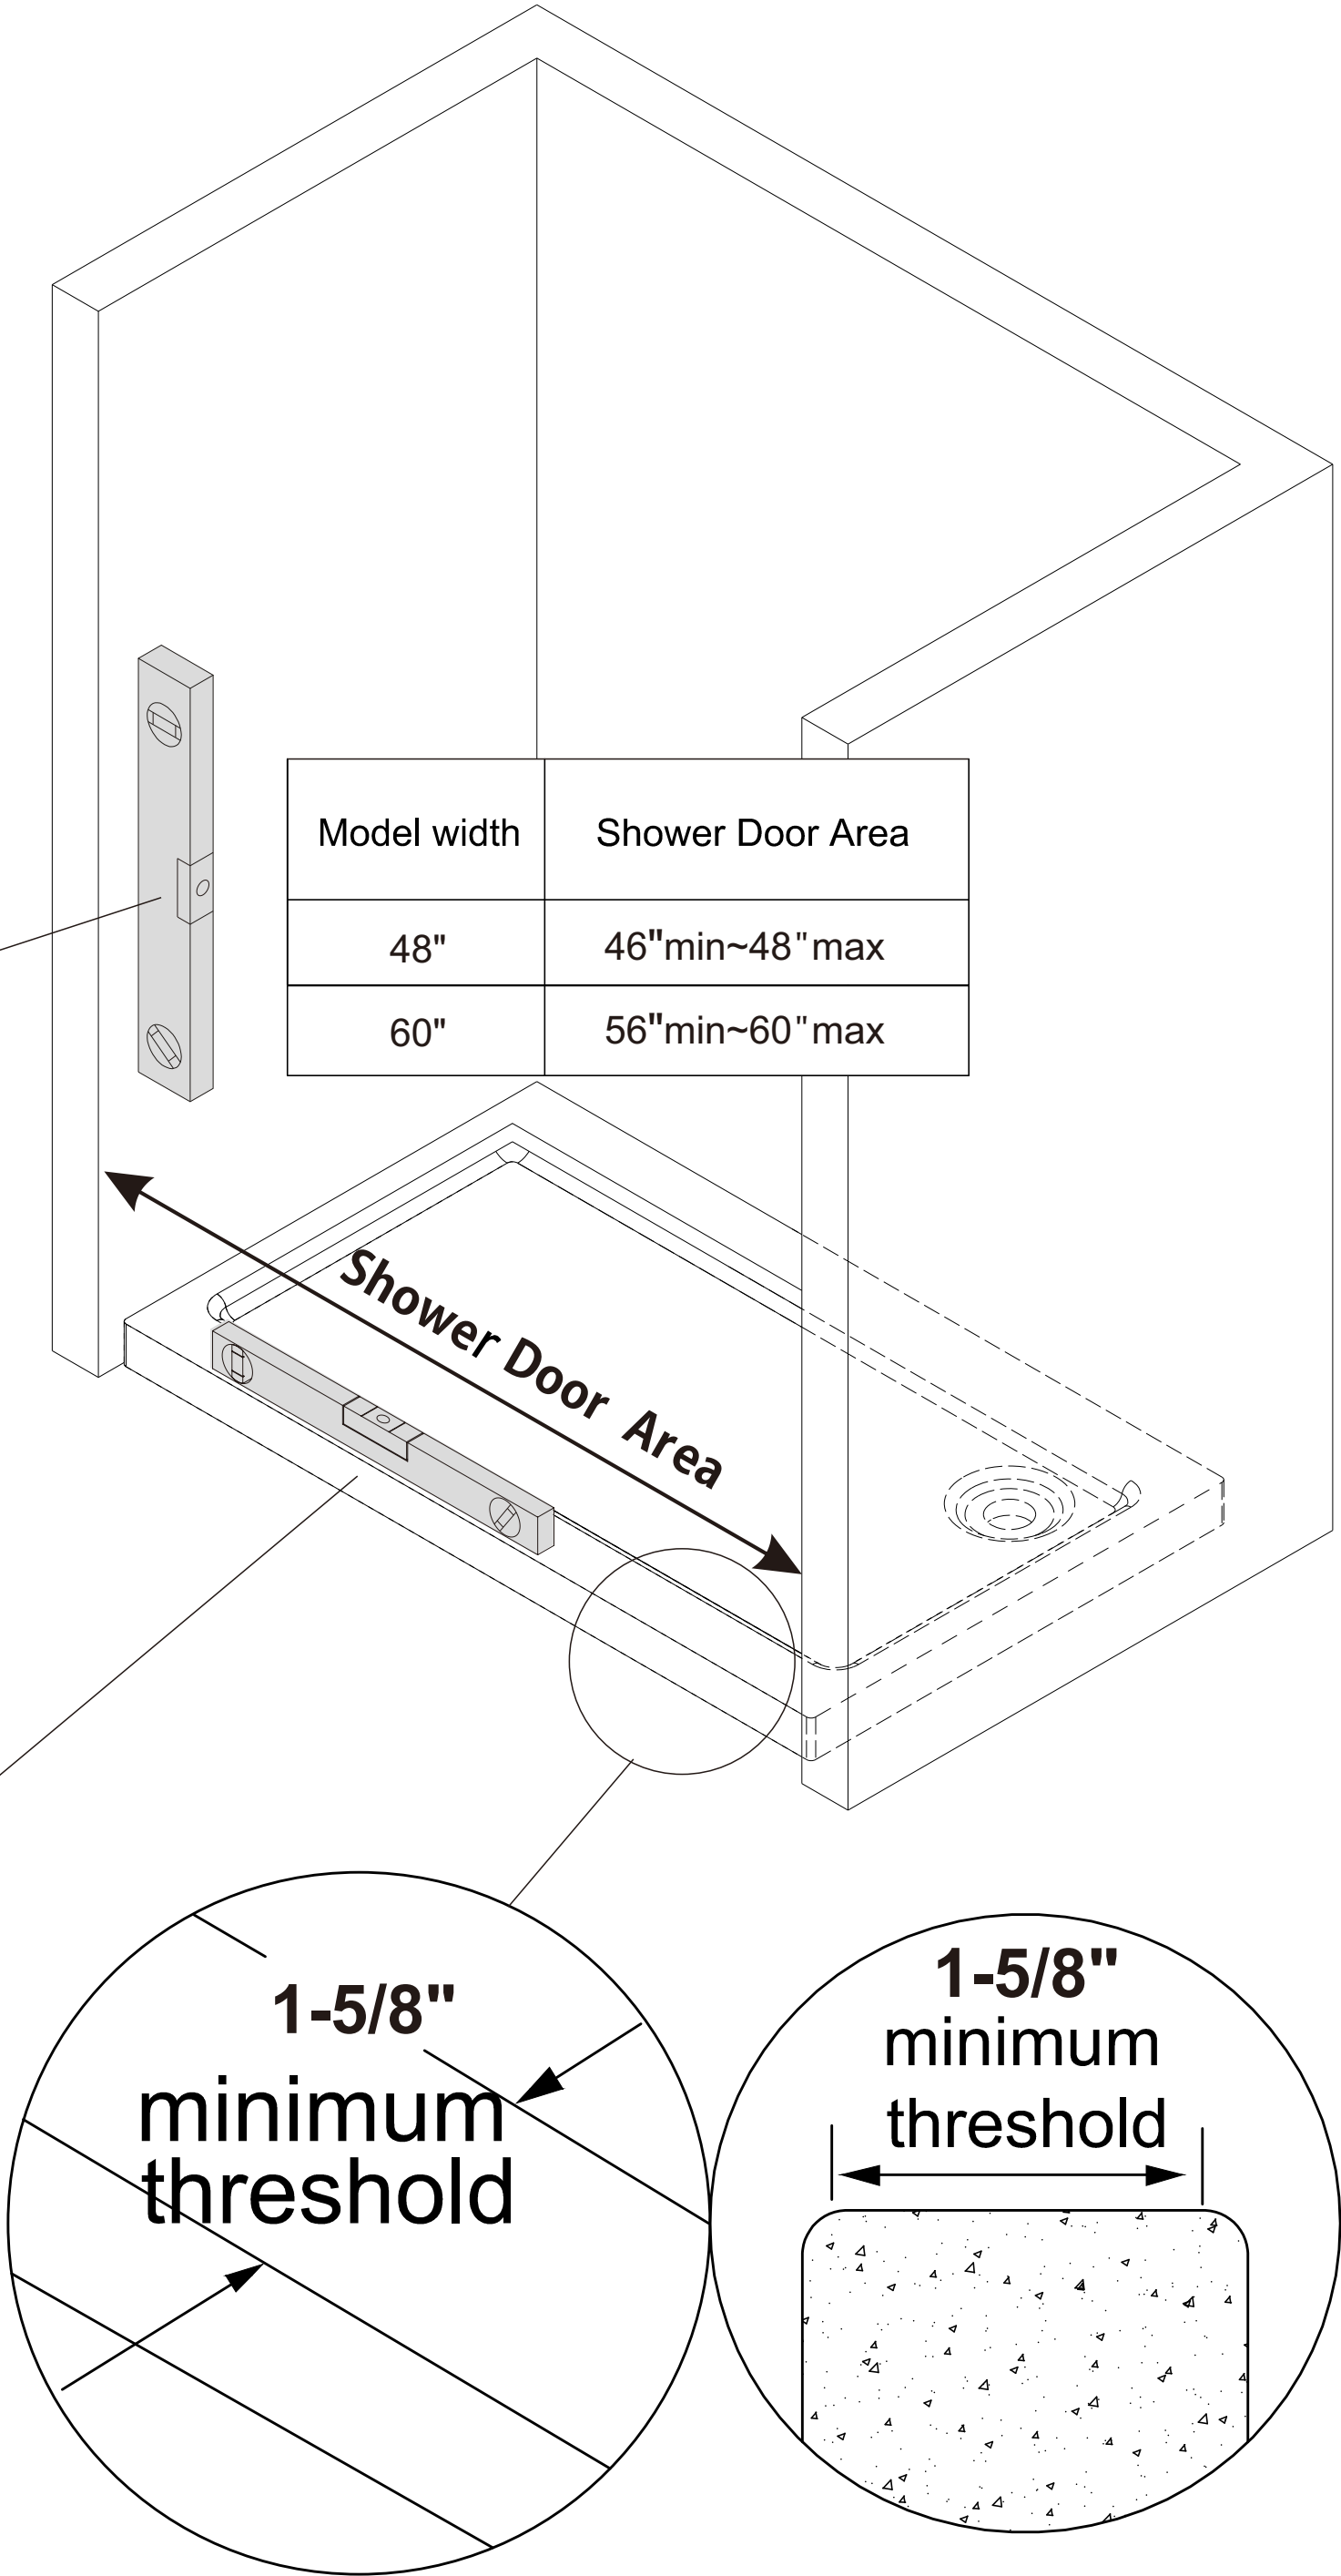

PACKAGE CONTENT

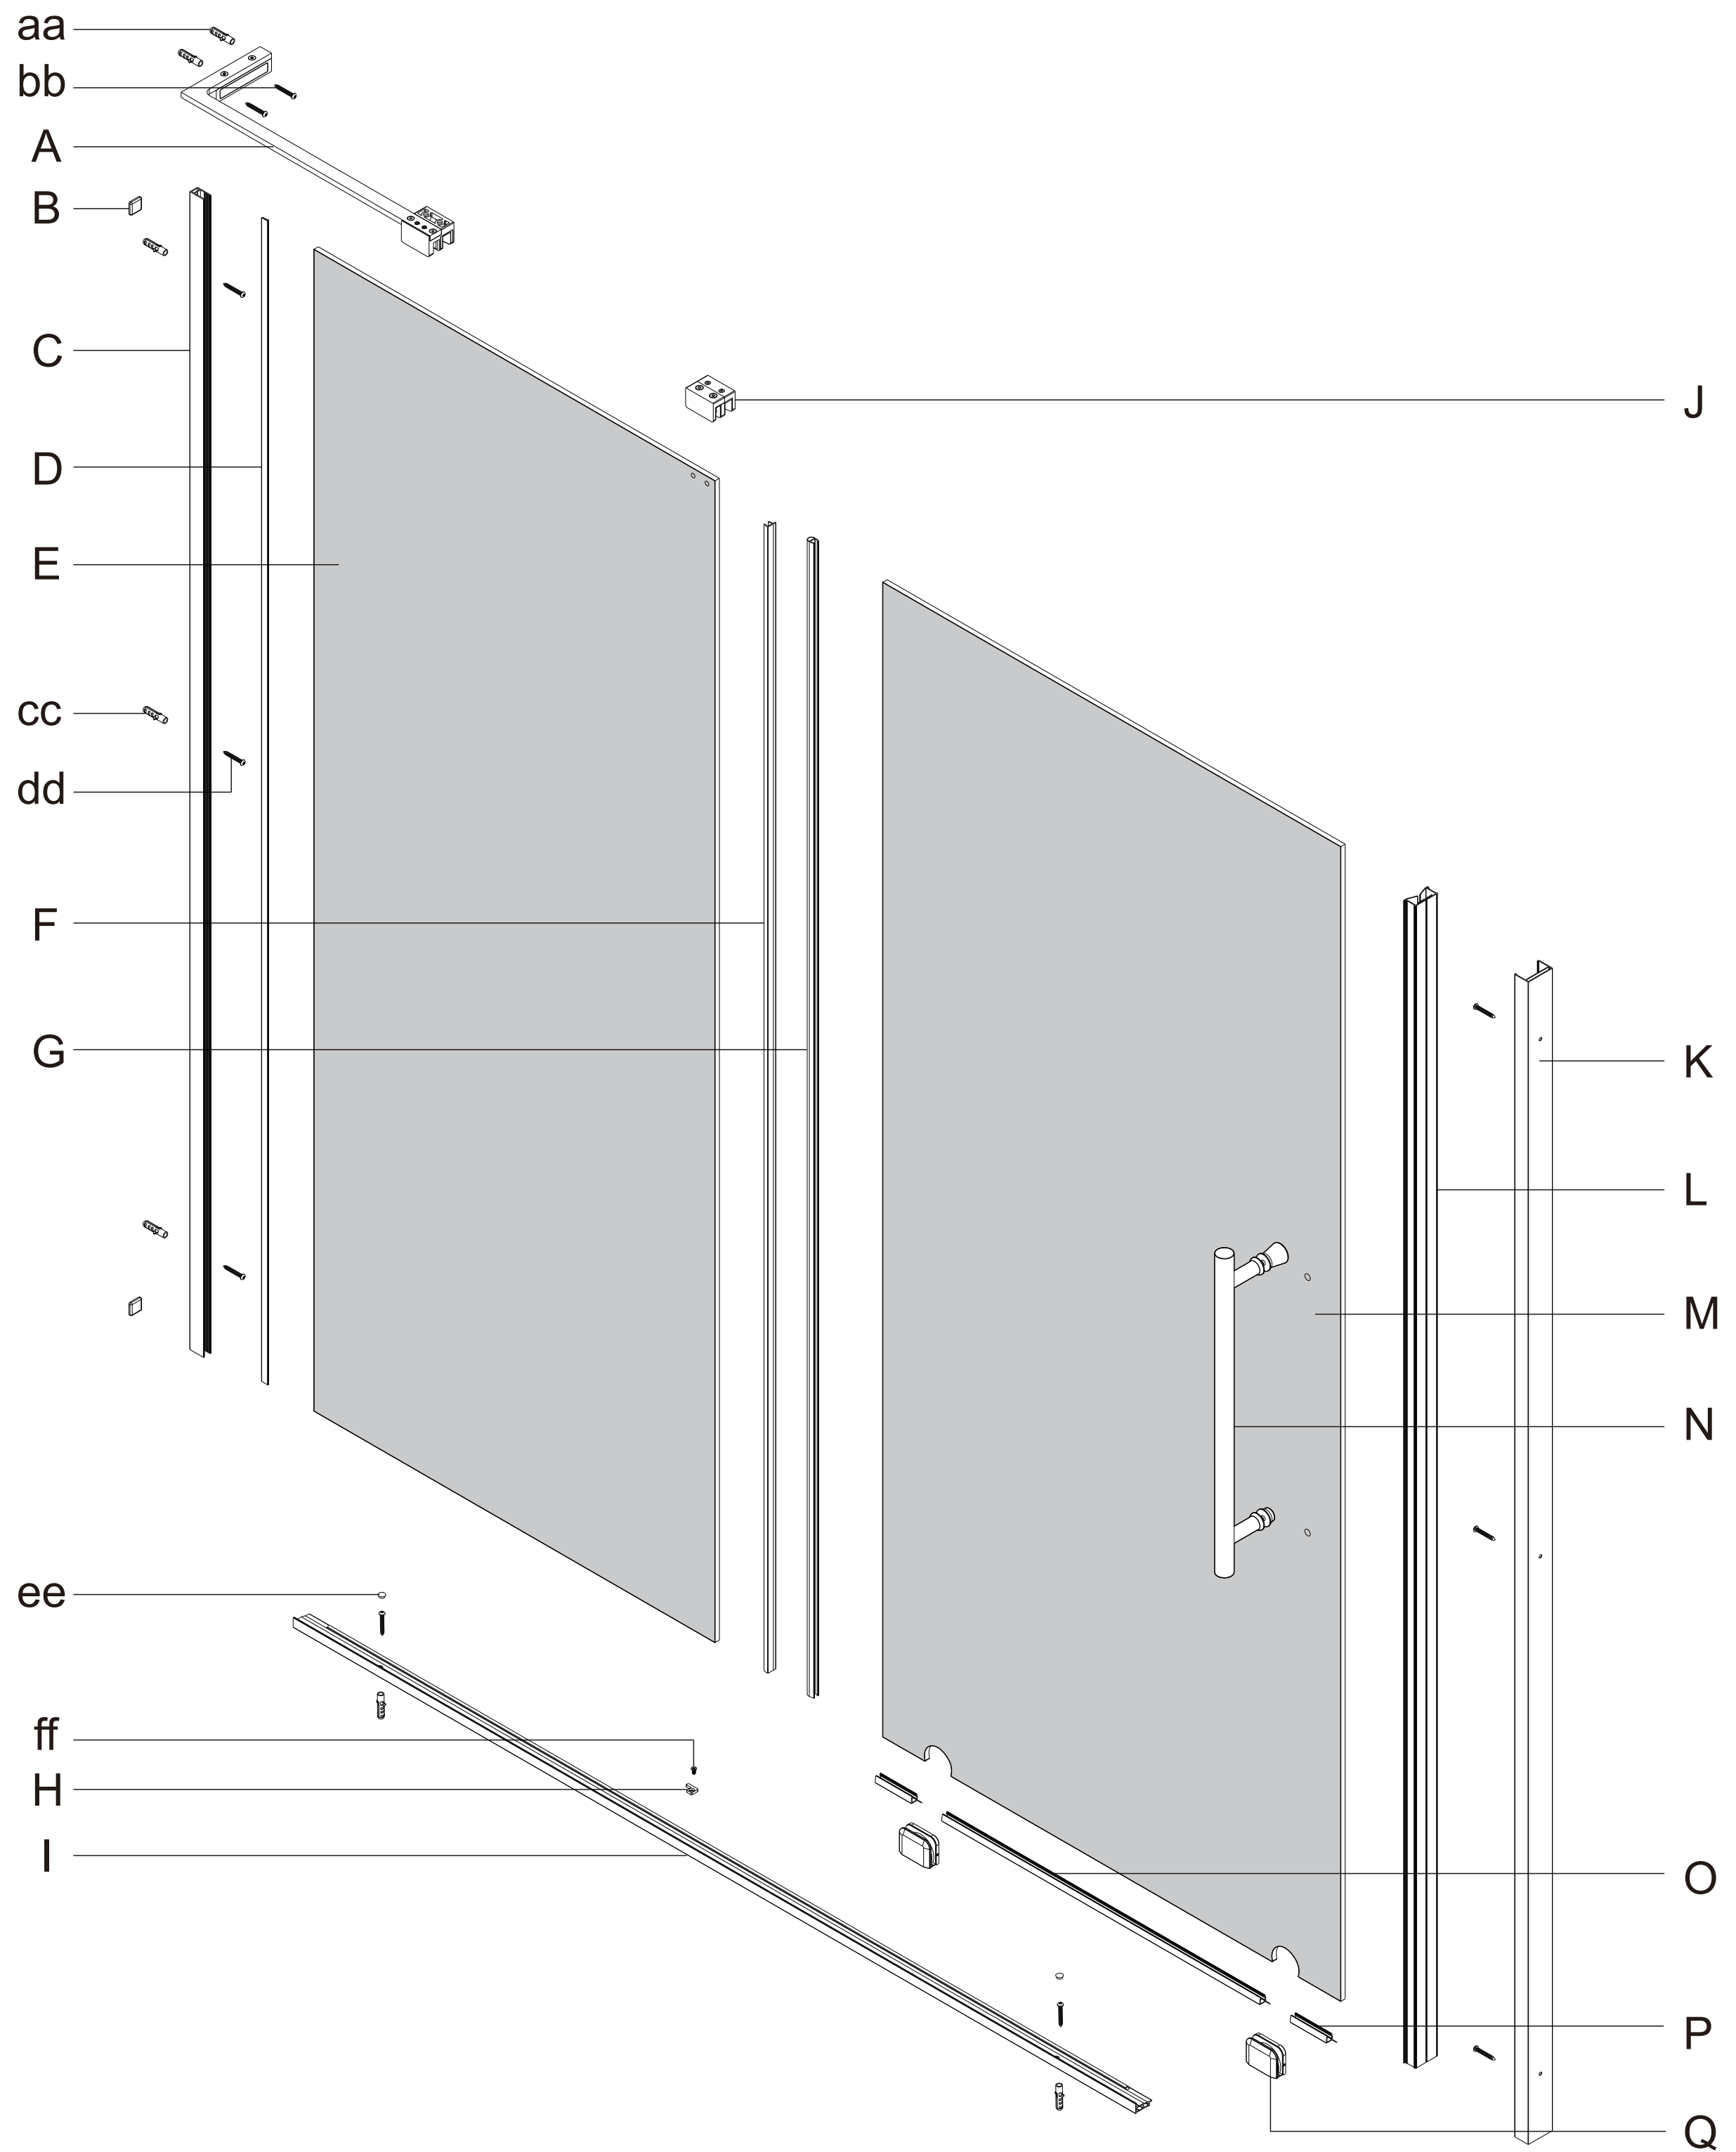

SHOWER DOOR

PACKAGE CONTENT


















PART#	DESCRIPTION	QTY
A	Pull Rod	1
B	Bumper Blocks	2
C	Wall Jamb	1
D	Wedge Strip	1
E	Stationary Glass	1
F	Anti-Water Strip	1
G	Anti-Water Strip	1
H	Glass Clips	1
I	Bottom Rail	1

PART#	DESCRIPTION	QTY
J	Guide Block	1
K	Wall Jamb	1
L	Buffer Strip	2
M	Glass Door	1
N	Handle	1
O	Bottom Anti-Water Strip	1
P	Bottom Anti-Water Strip	2
Q	Rollers	2

NOTE

Prior to installation, check that all parts are included and undamaged. Contact us for any part missing or damaged.

PACKAGE CONTENT

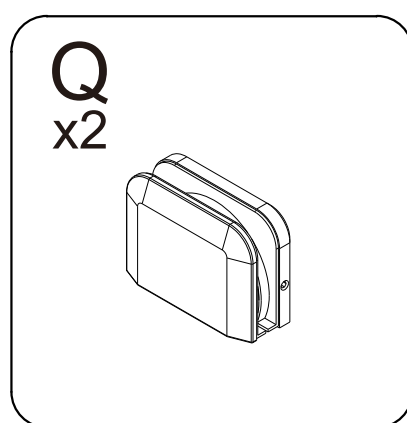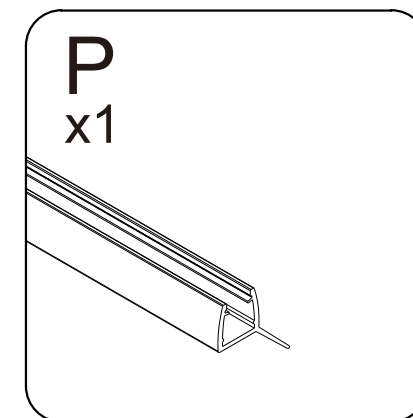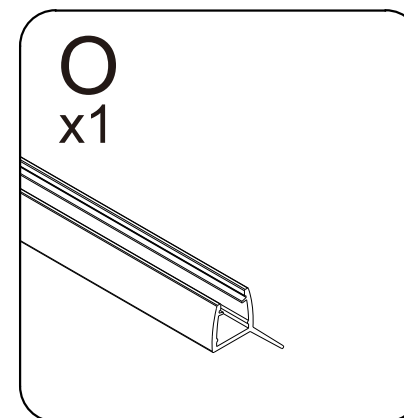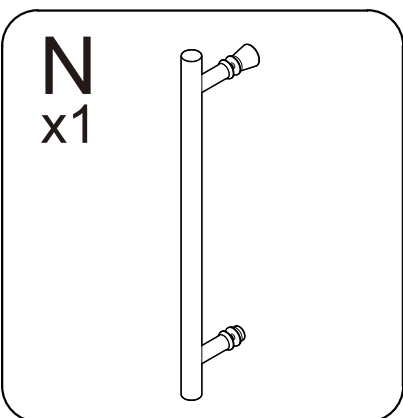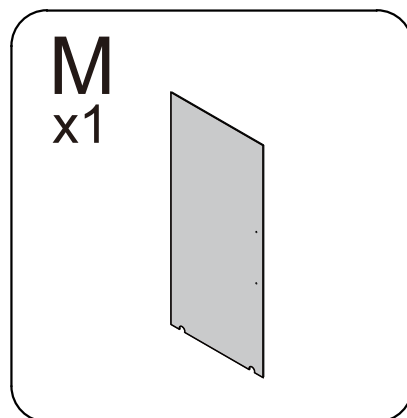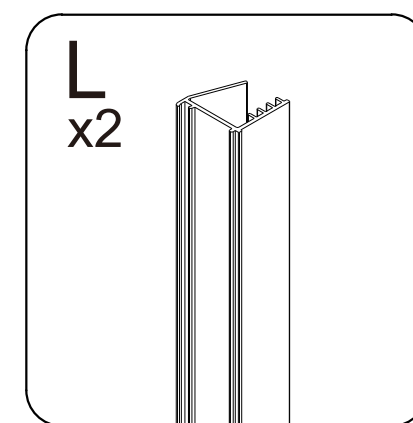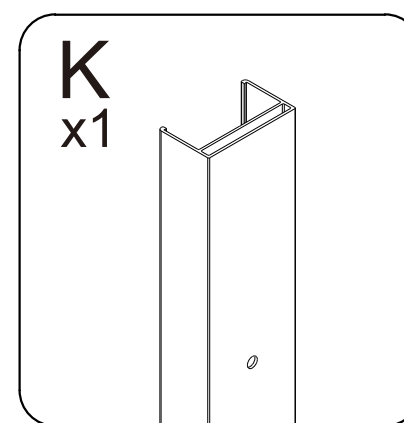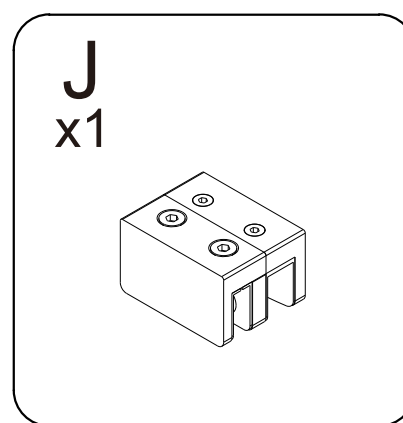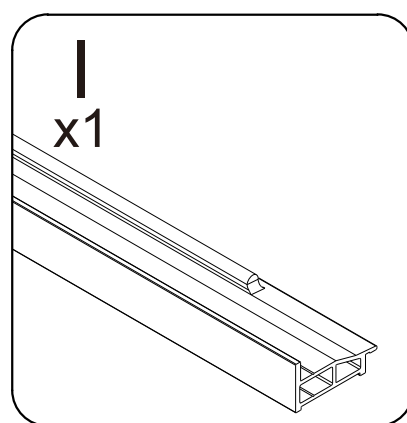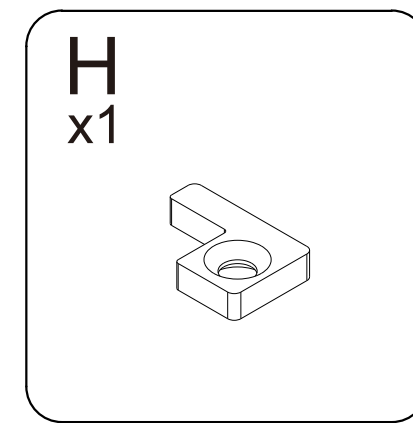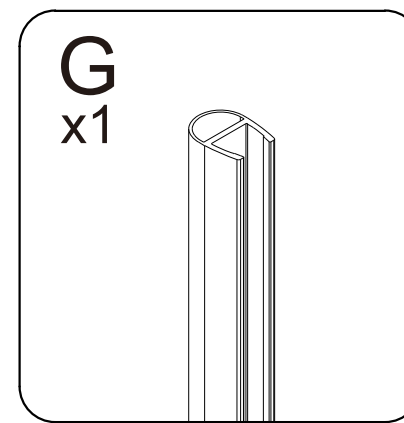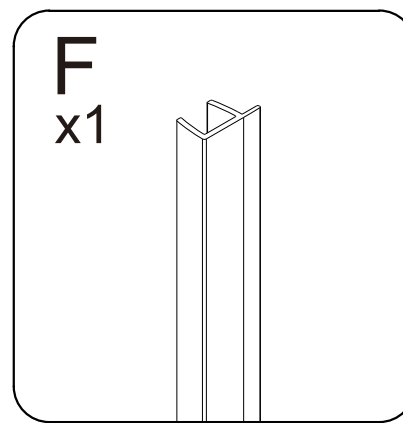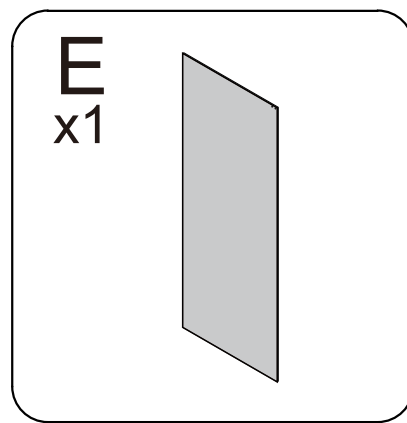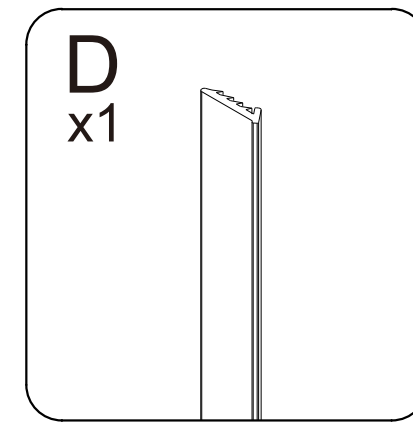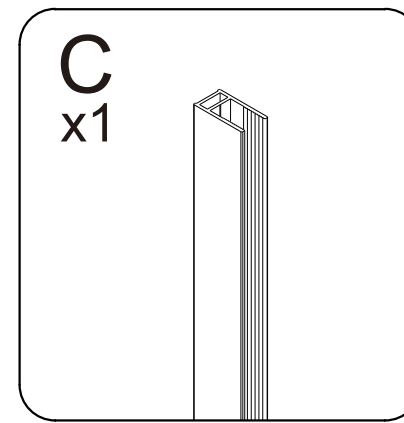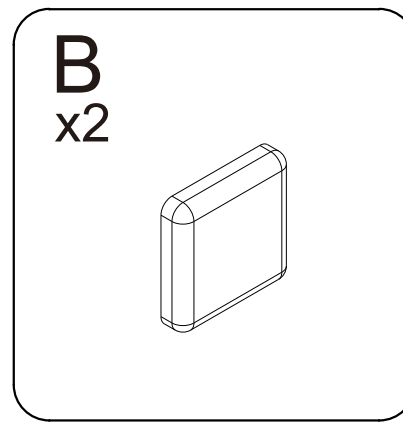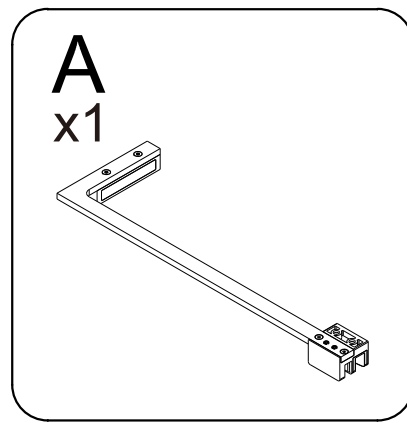


HARDWARE CONTENT




Additional spare parts are included.

aa

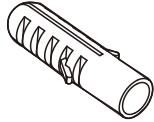


Wall anchor
Ø8X30mm
3 pcs

bb

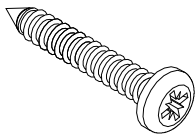


Screw
ST5X30mm
3 pcs

cc

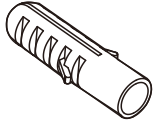


Wall anchor
Ø6X30mm
9 pcs

dd

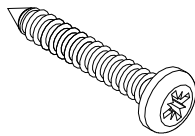


Screw
ST4X30mm
9 pcs

ee




Decorative
cover
2 pcs

ff

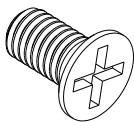


Screw
ST4X8mm
1 pcs

gg

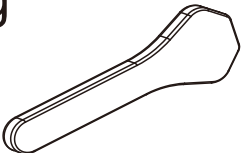

Wedge strip
install tool
1 pcs

hh




Wrench
1 pcs

NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.


TOOLS REQUIRED

Drill Bits

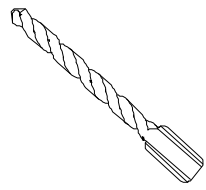


Ø1/8" & Ø1/4" (3&6mm) dia.
HSS


Phillips screw driver

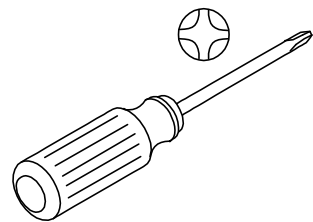


Electric hand drill

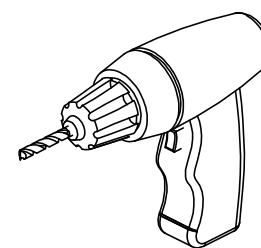


Level

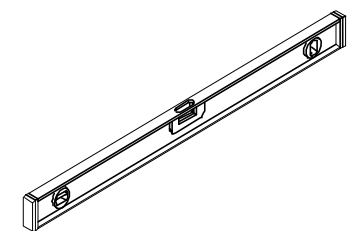


Caulking gun

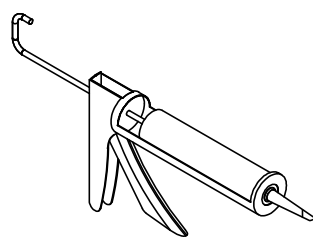


Measuring Tape

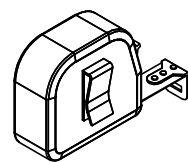


Soft Head Hammer

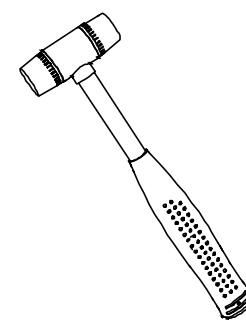


Marking Pencil

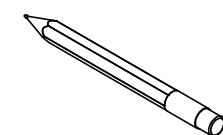

Utility Knife

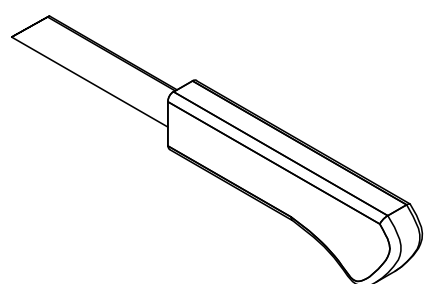


Sealant

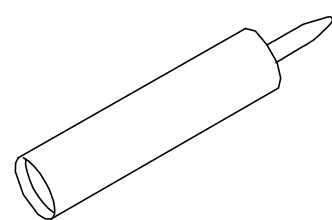

MASONRY DRILL BIT FOR TILE Ø6mm




Safety Glasses

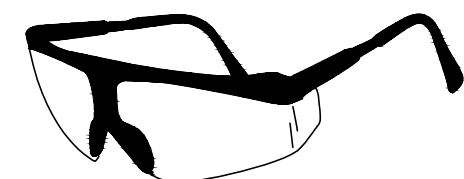


Gloves




Carpenter's Squarer

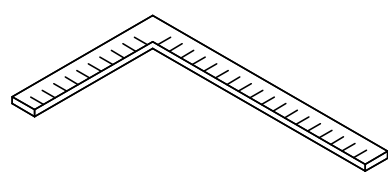


Masking or painter's tape

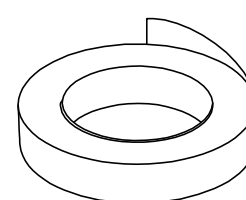


Hack Saw

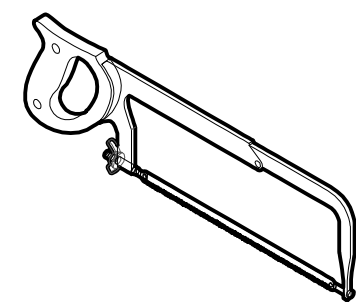

Metal File

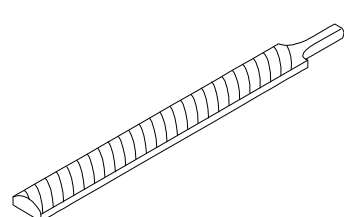

Glass suction Handle

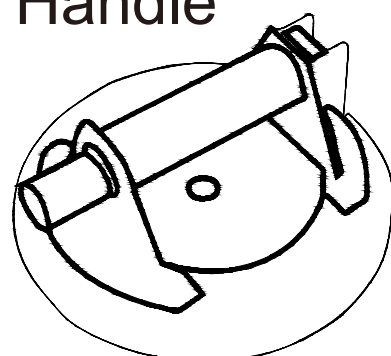

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower door . There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation,protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

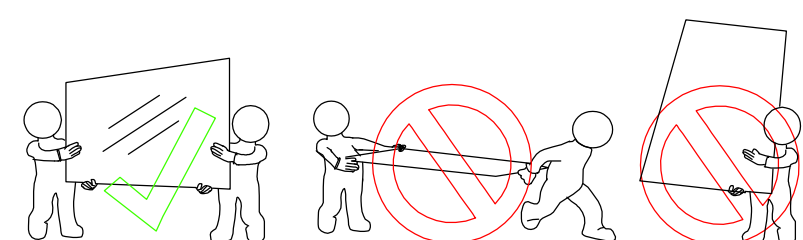



1

Measure the finished opening width.

NOTE

1. Measure the finished opening width at the bottom and at the shower door height.
- Use these dimensions as “W1” (top) and “ W2”(bottom) in step #2.
2. Also check the threshold for level and the walls for plumb.

1/4"(6mm) Maximum out of plumb adjustment from top to bottom

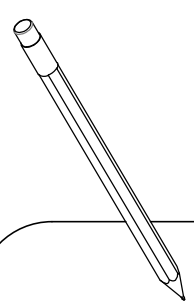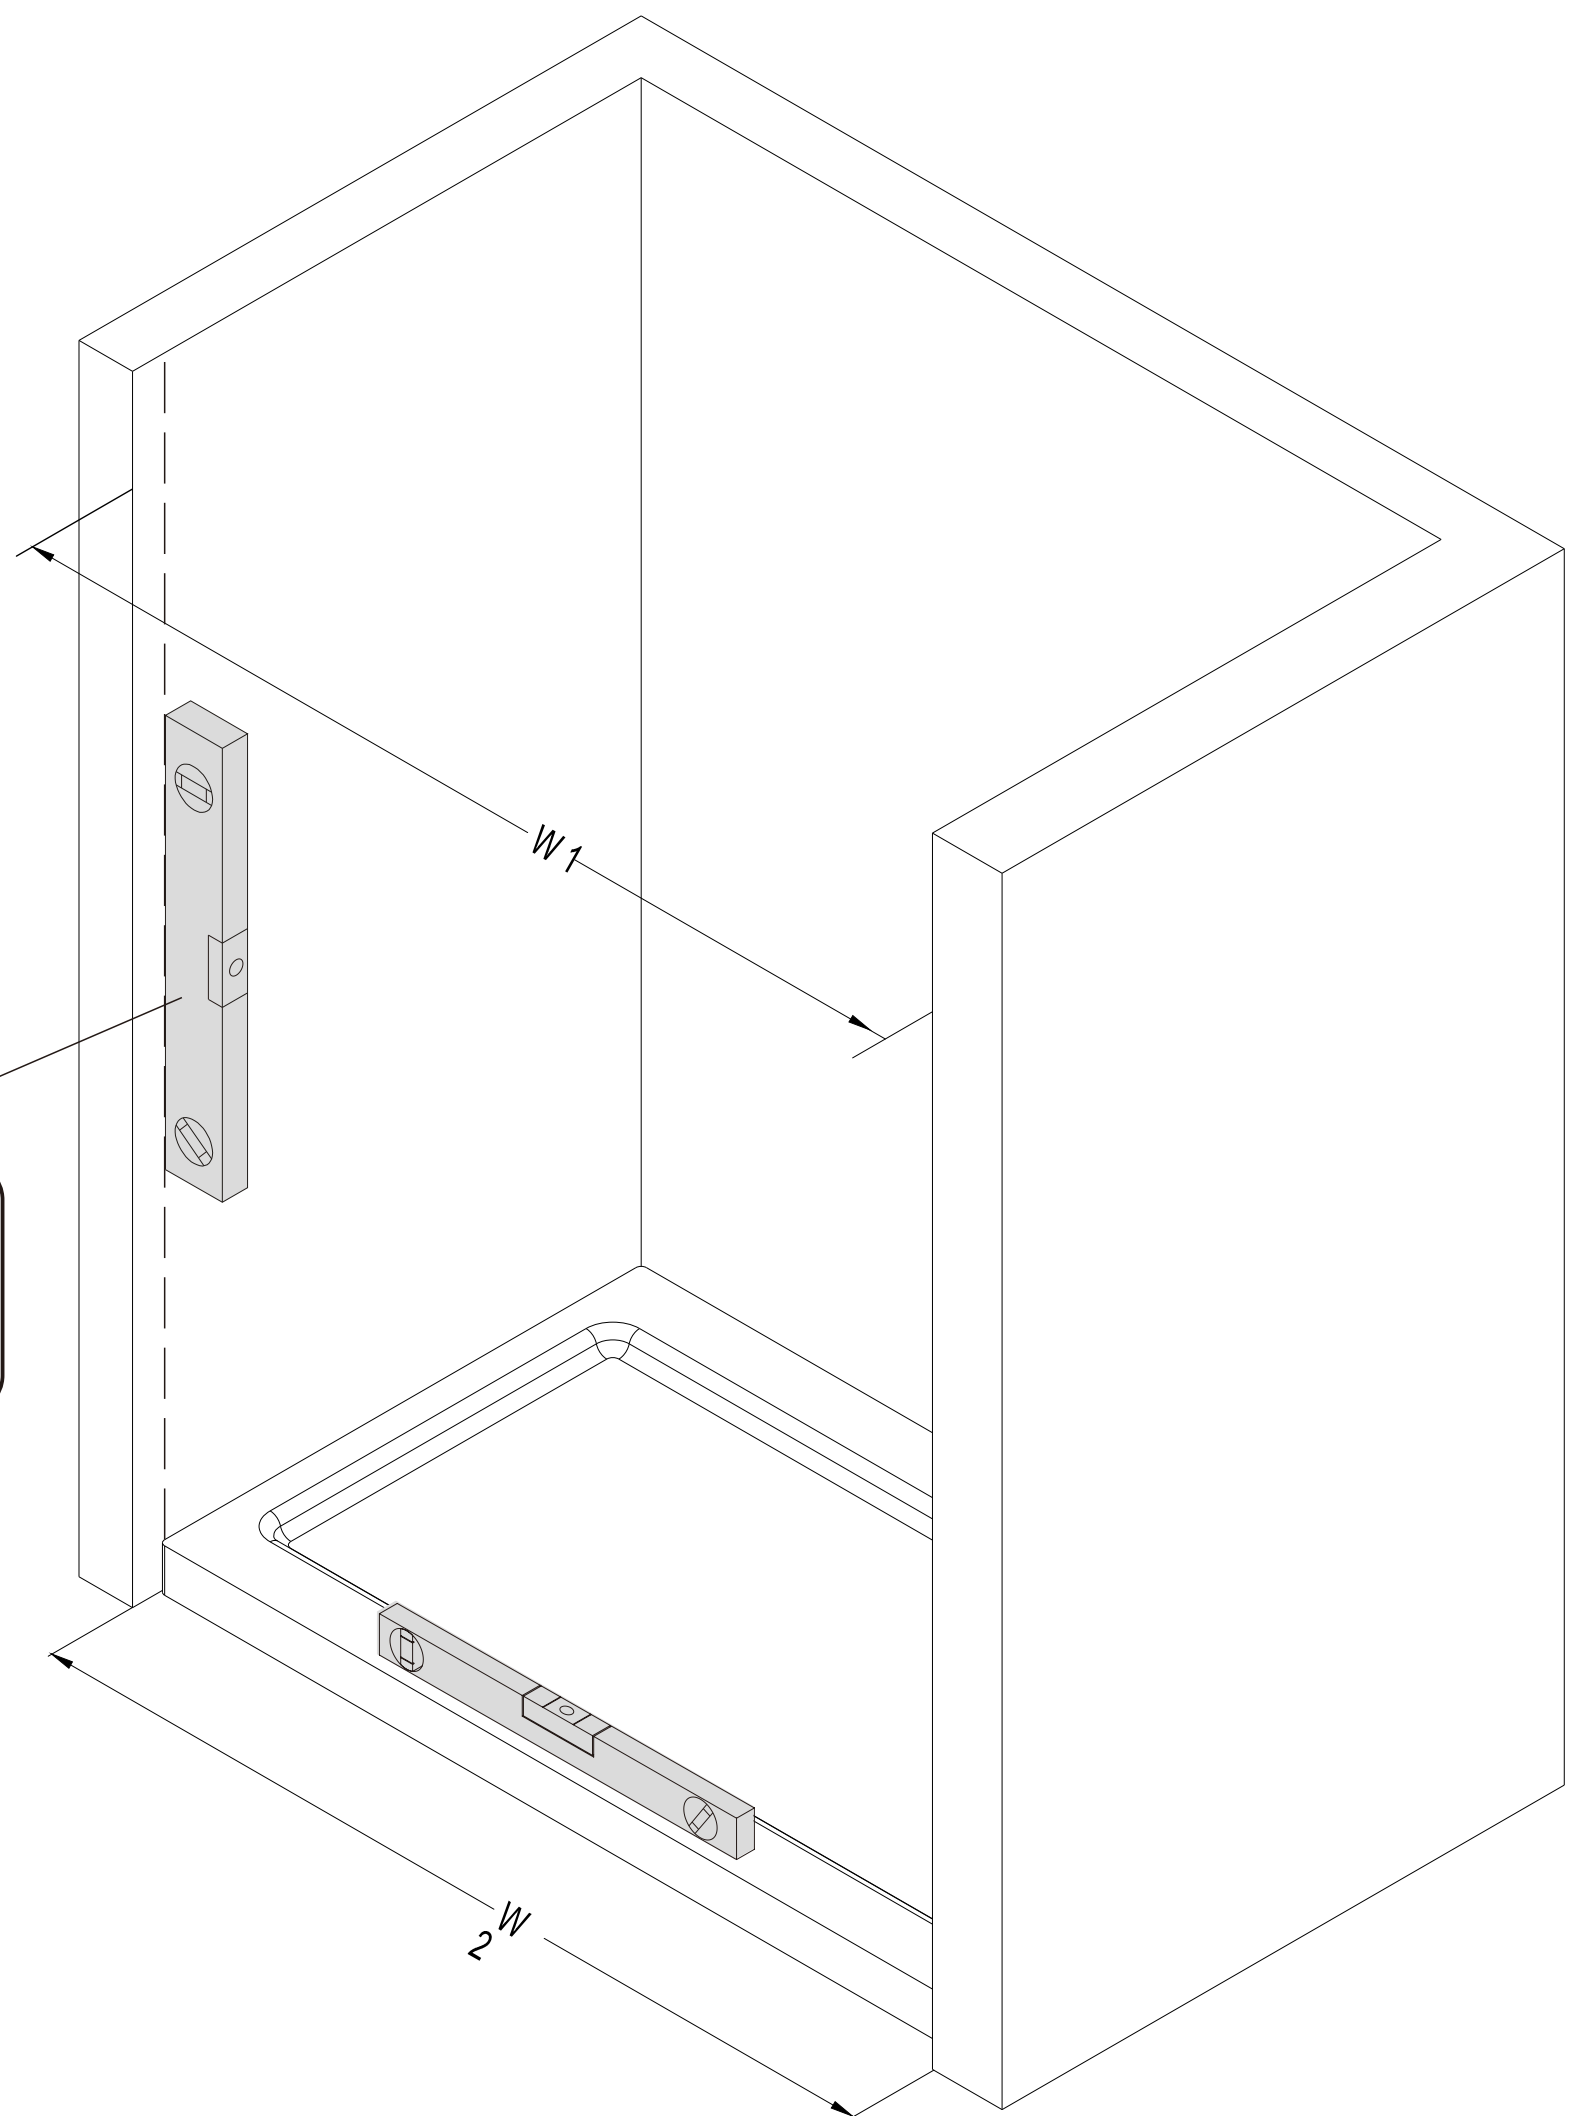

Finished opening top (W1)


Finished opening bottom (W2)

2 Cut the **Bottom Rail (I)** to fit your finished opening using either a miter saw or a hacksaw

NOTE

The cutting **Bottom Rail (I)** dimensions are the same as the model dimensions W2. Confirm the door opening direction before cutting. This manual uses a left-opening door as an example.

Direction of cutting and installing **Stationary Glass(E)**

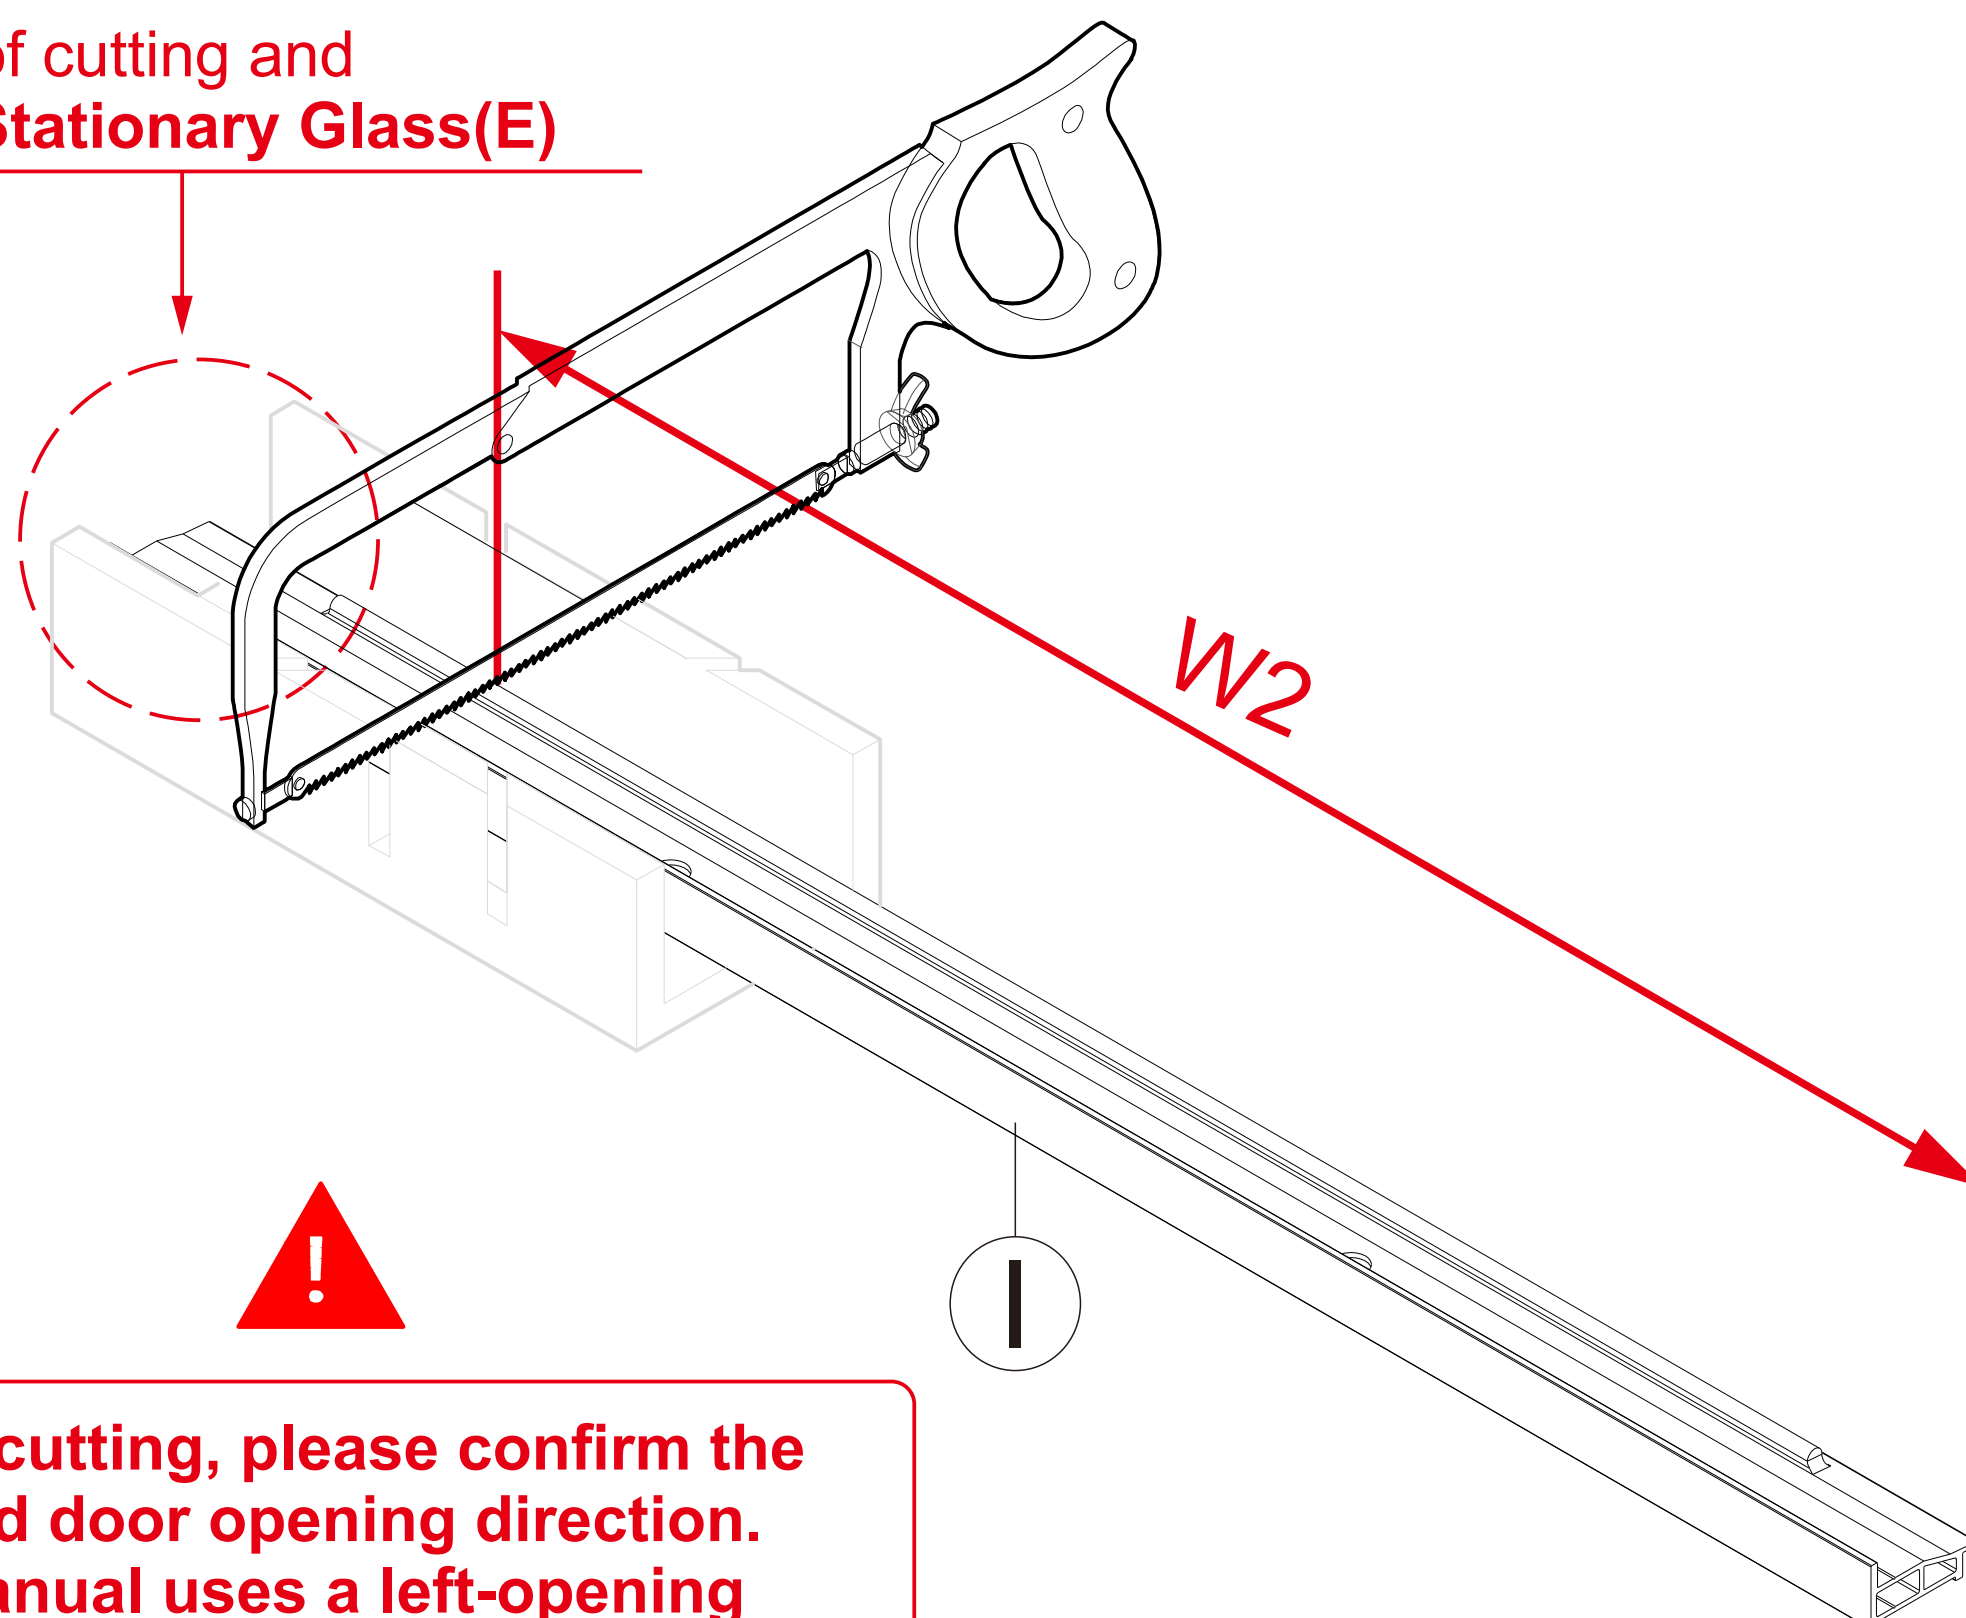







Before cutting, please confirm the installed door opening direction. This manual uses a left-opening door as an example.

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

3 Mark the **Wall Jamb(C)** and the **Bottom Rail(I)** hole positions

NOTE

1. Keep the **Bottom Rail(I)** level with the model as Fig.a .
2. Align the **Wall Jamb(C)** with the **Bottom Rail(I)** as Fig.b .
3. Determine your starting point from the edge of tray (3/8" (10mm) is recommended) and mark the position as Fig.a.
4. Mark the **Wall Jamb(C)** and the **Bottom Rail(I)** hole positions with a pencil as Fig.d and Fig.e .

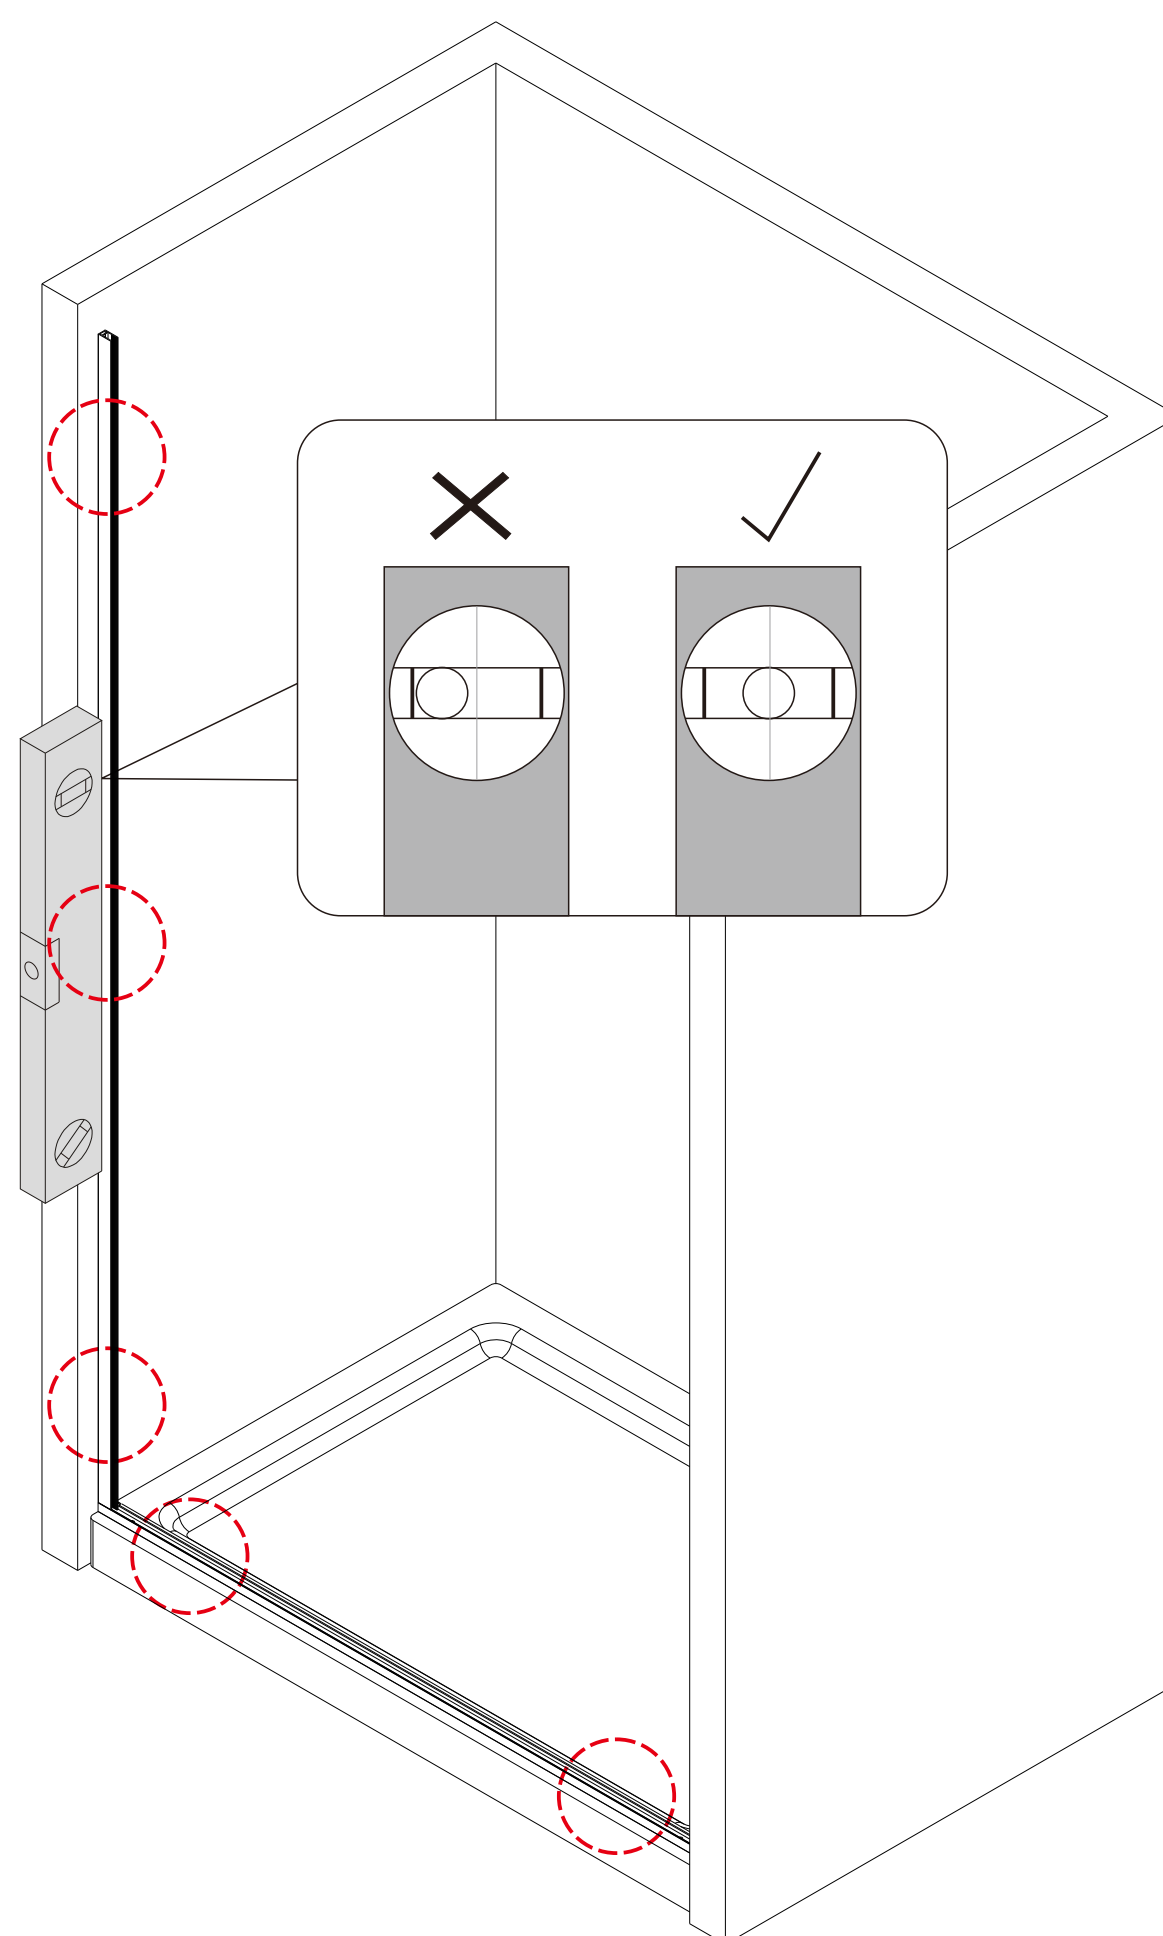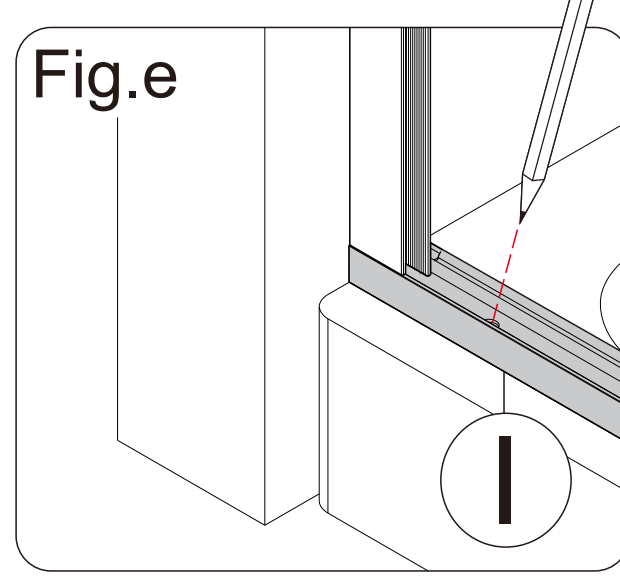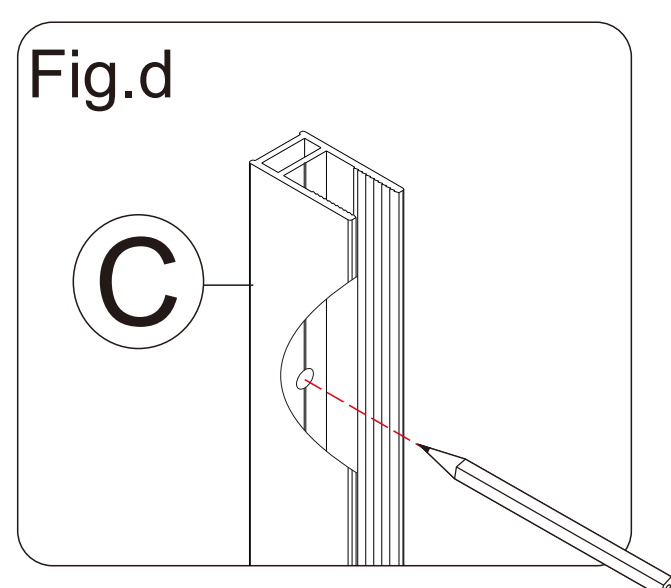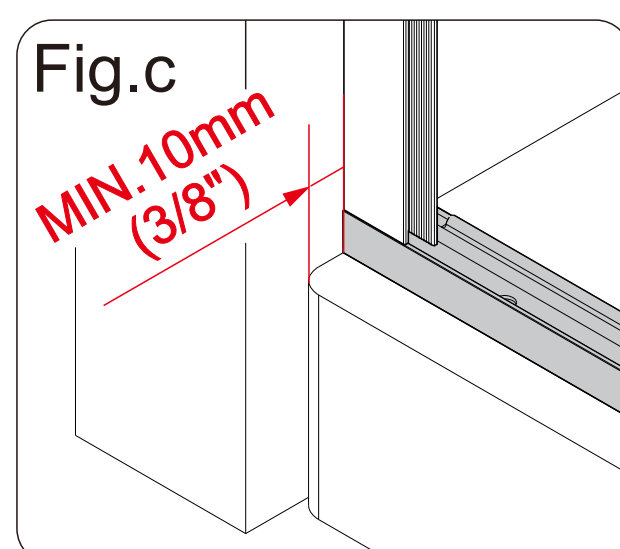
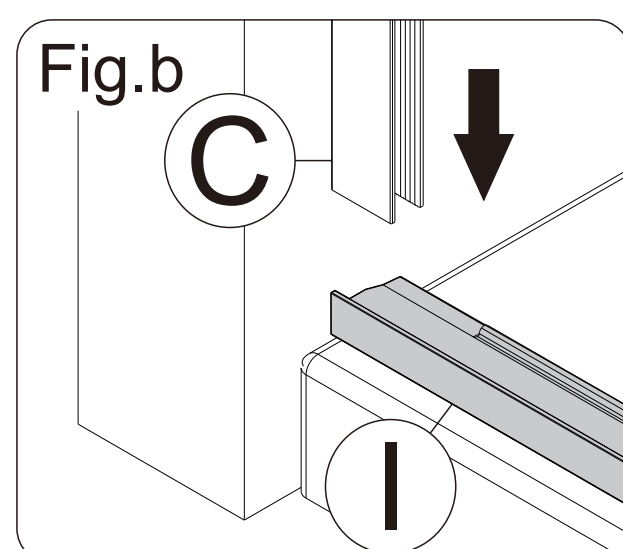
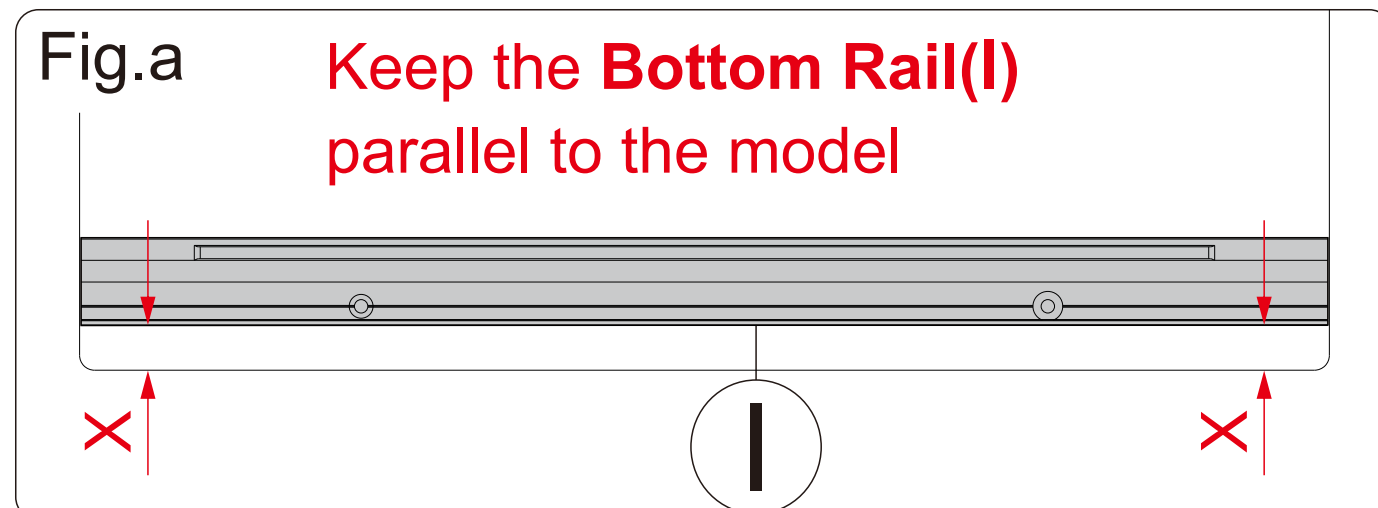


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

4 Drill a hole at the marked spot and insert **Wall Anchors(cc)**

NOTE

1. Drill holes with $\Phi 6\text{mm}$ ($1/4"$) drill bit as Fig.a .
2. Insert **Wall Anchors(cc)** as Fig.b .

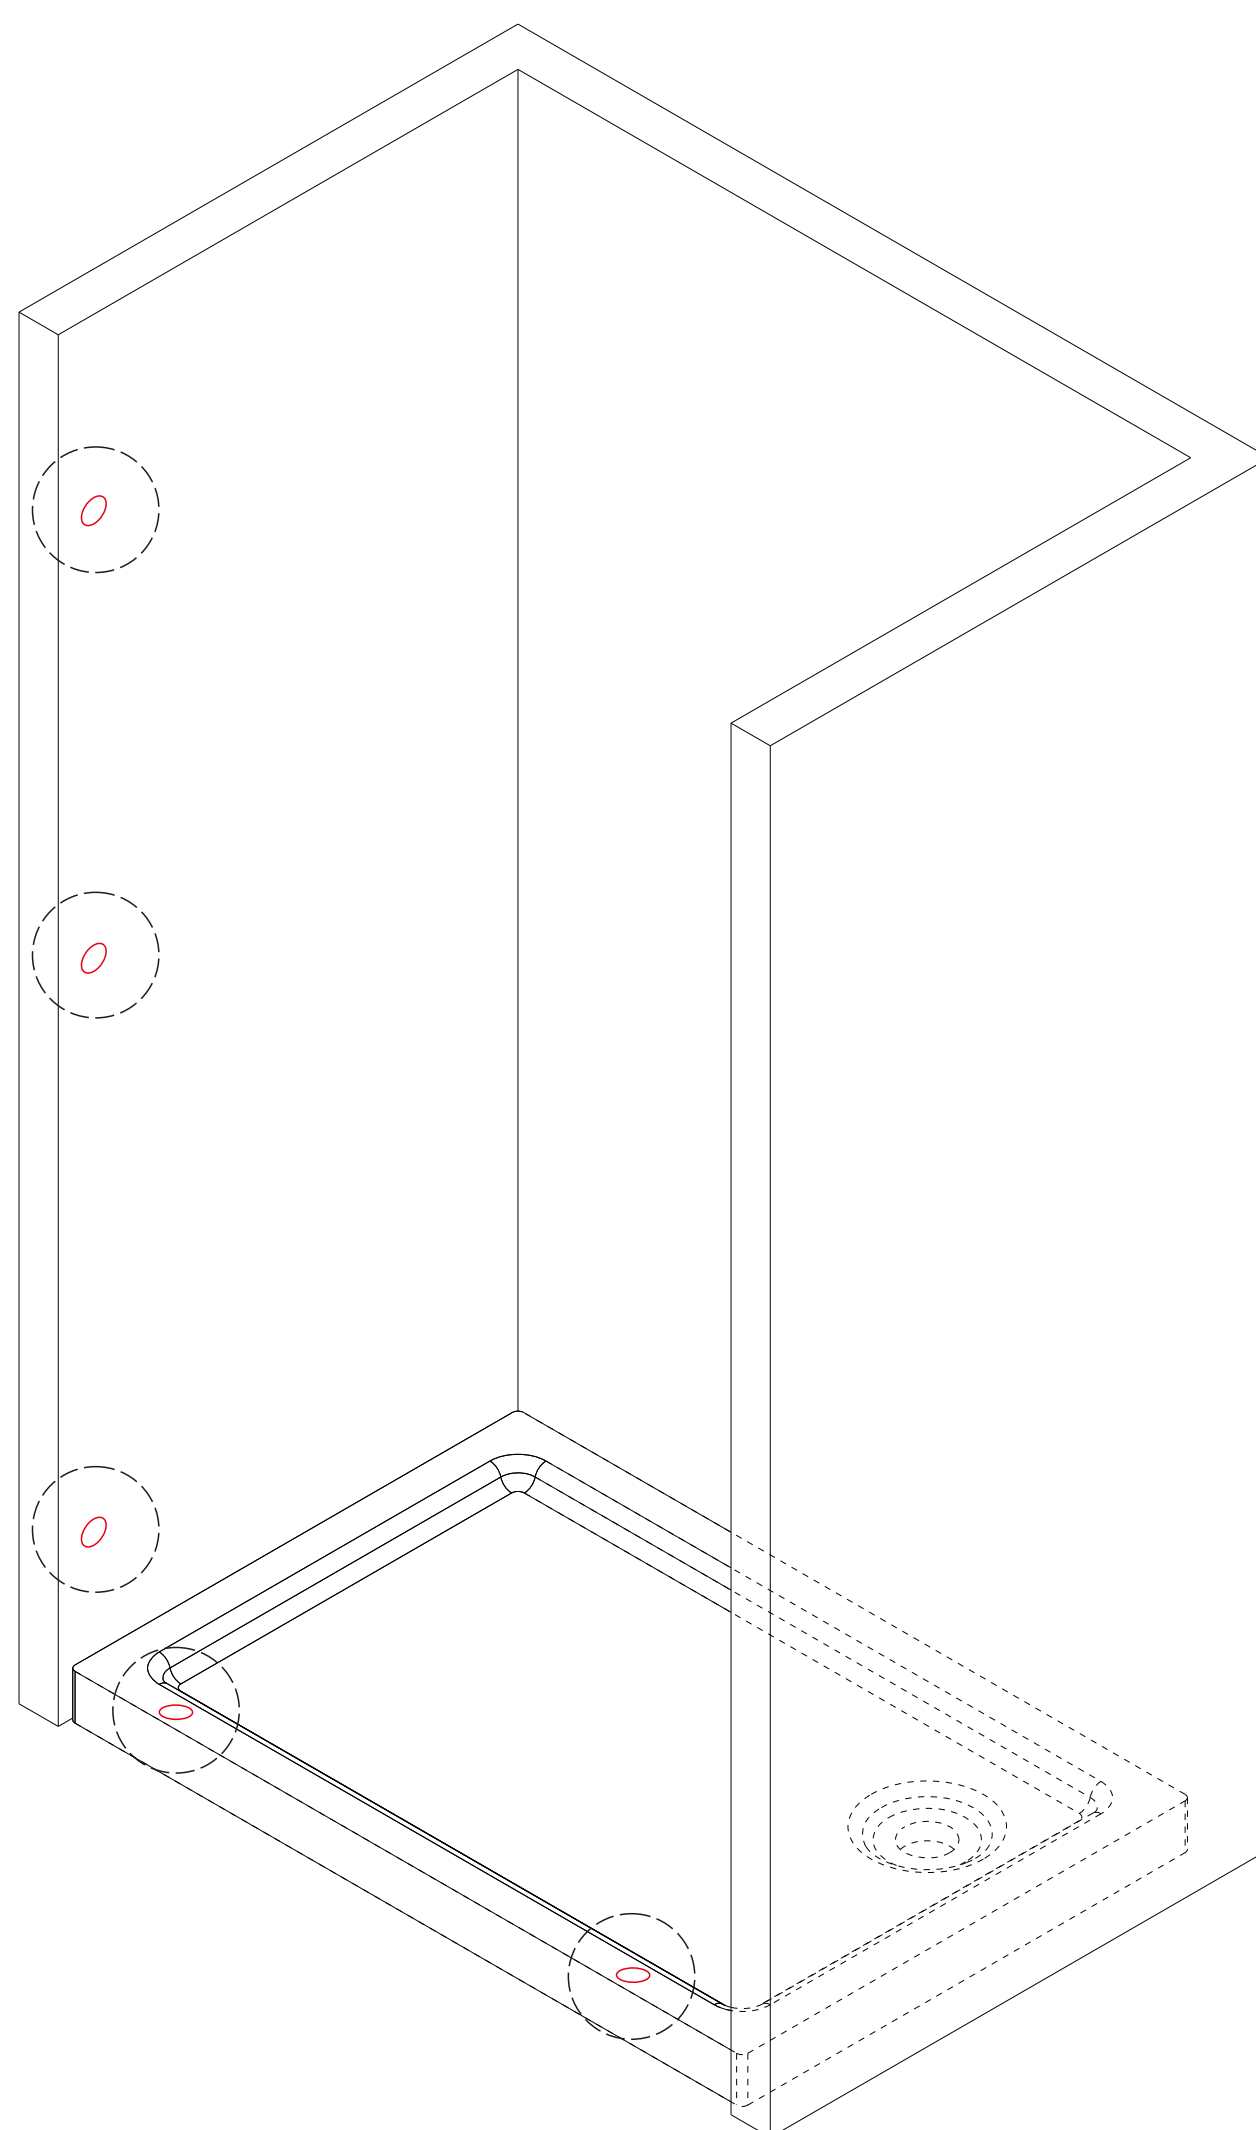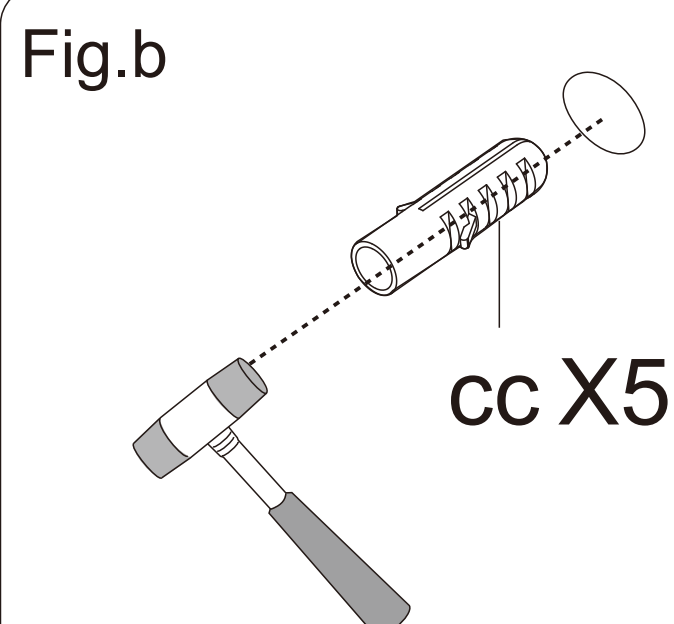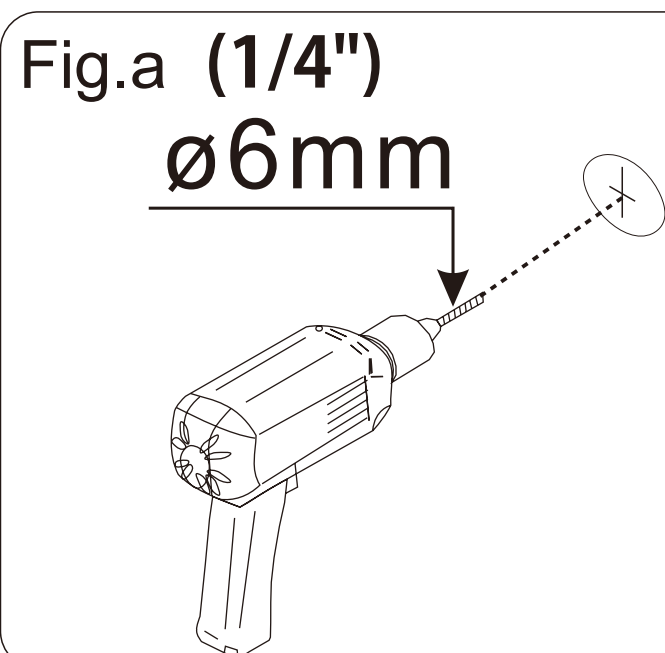

NOTE

- If a Stud is present behind the wall:
drill $\Phi 1/8"$ (3mm) pilot holes into the stud and use the ST4.0x30mm **Screws(dd)**
OR
- If NO Stud is present behind the wall:
drill $\Phi 1/4"$ (6mm) holes and insert the **Wall Anchors(cc)**
and use the ST4.0x30mm **Screws(dd)**.





Note: The shower door can be installed left or right, according to the need to determine the installation direction.

5

Install **Wall Jamb(C)** and **Bottom Rail(I)**

NOTE

1. Use screws to secure the **Wall Jamb(C)** and the **Bottom Rail(I)** as Fig.a and Fig.b .

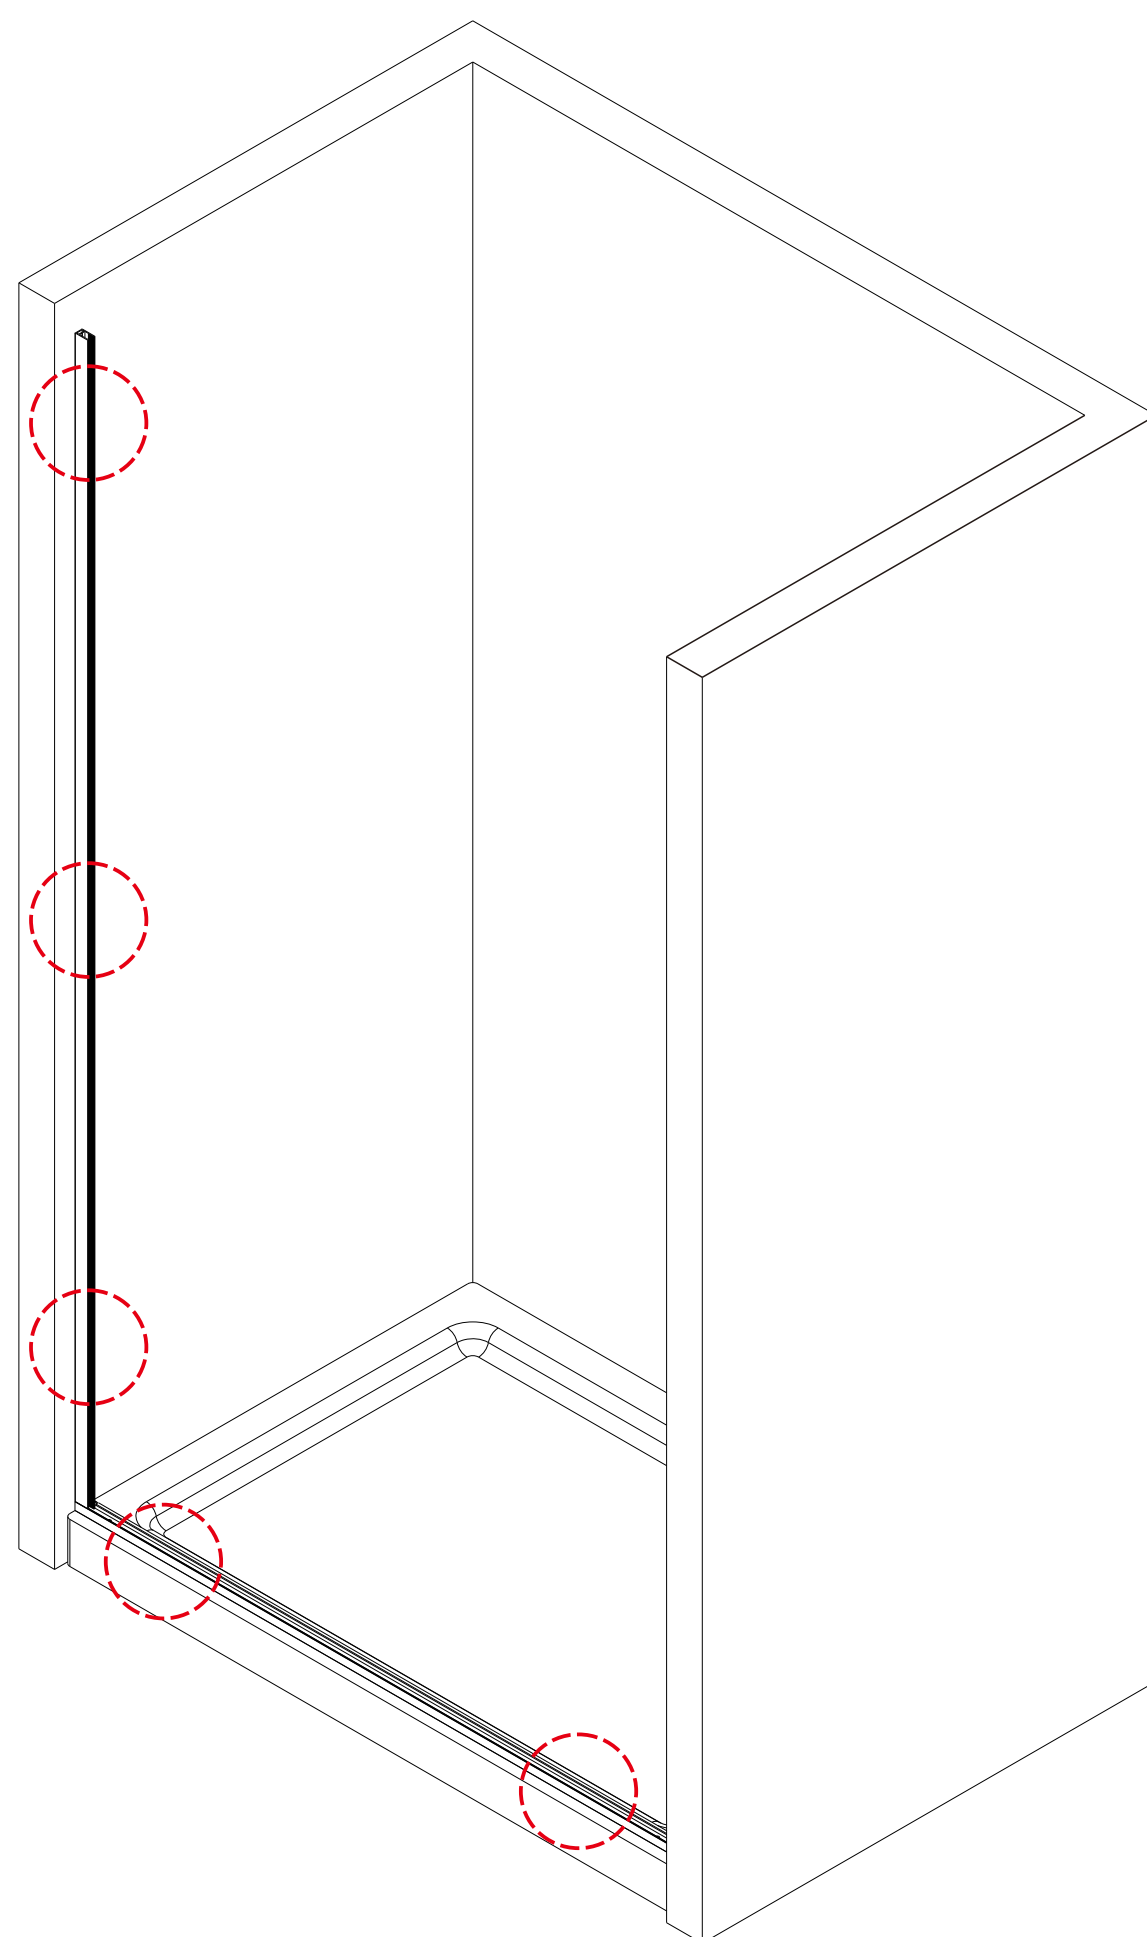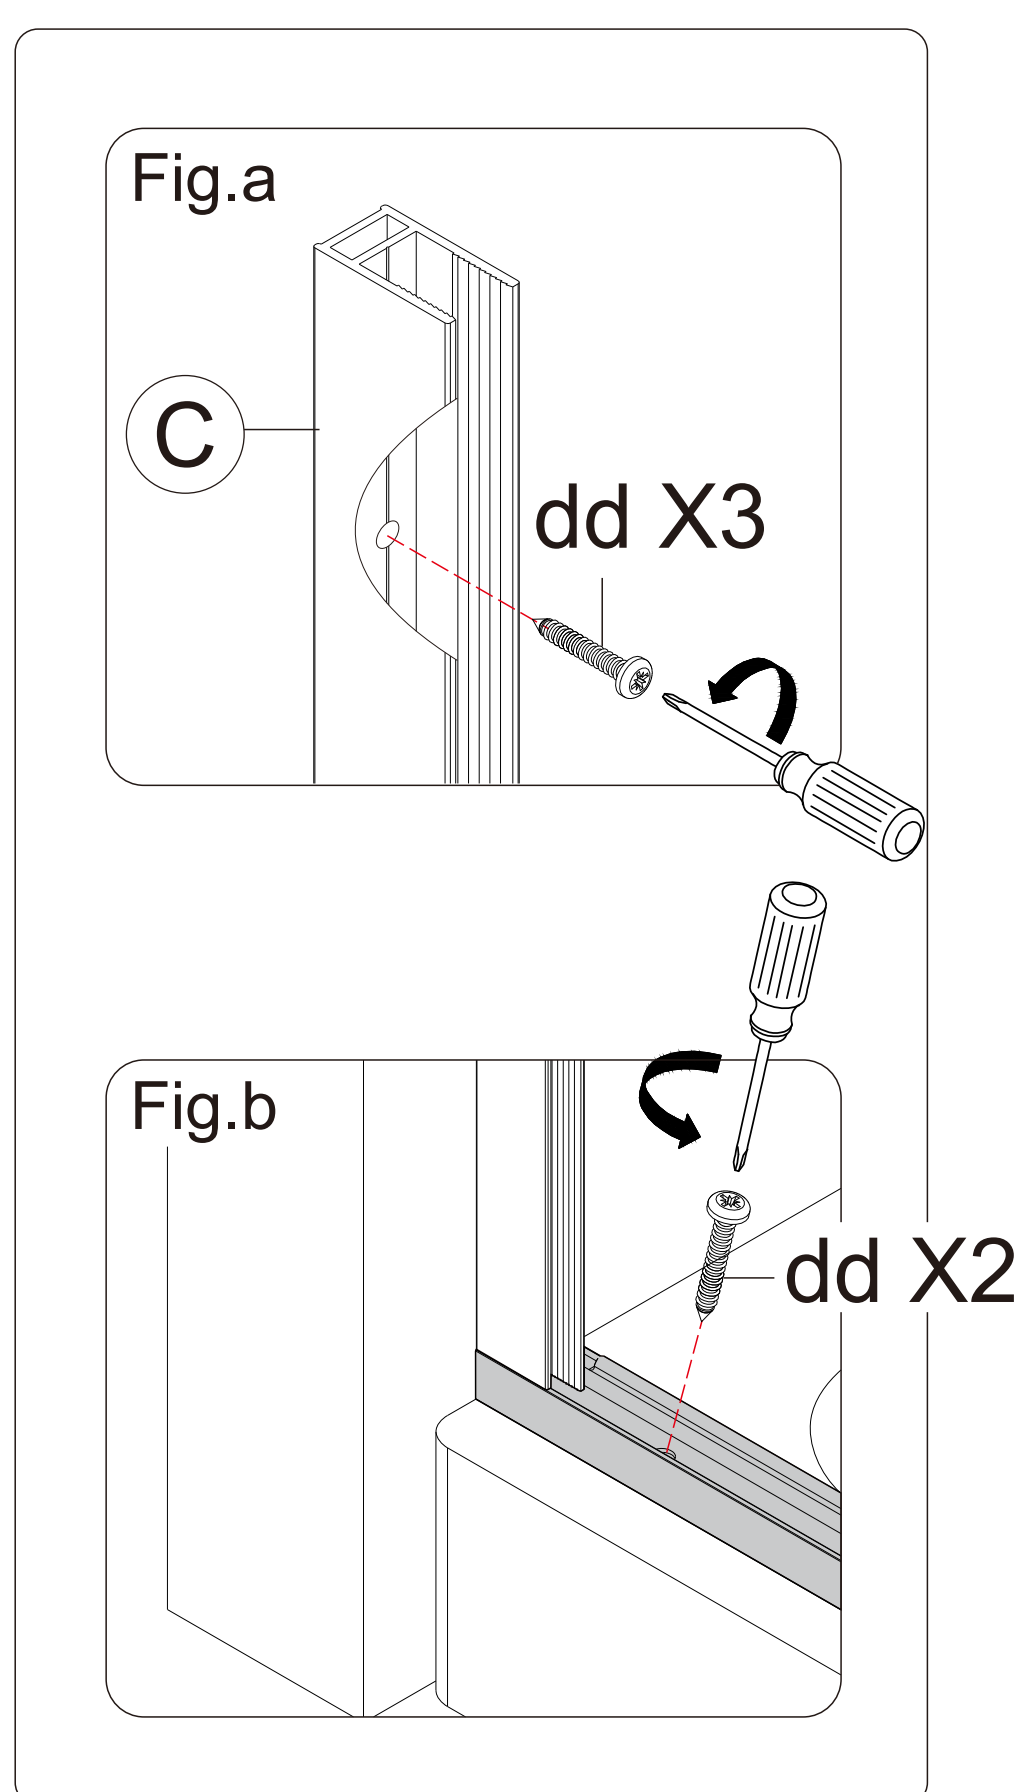


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

6

Install **Stationary Glass(E)**

NOTE

1.Install **Stationary Glass(E)** into the **Wall Jamb(C)** as Fig.a .





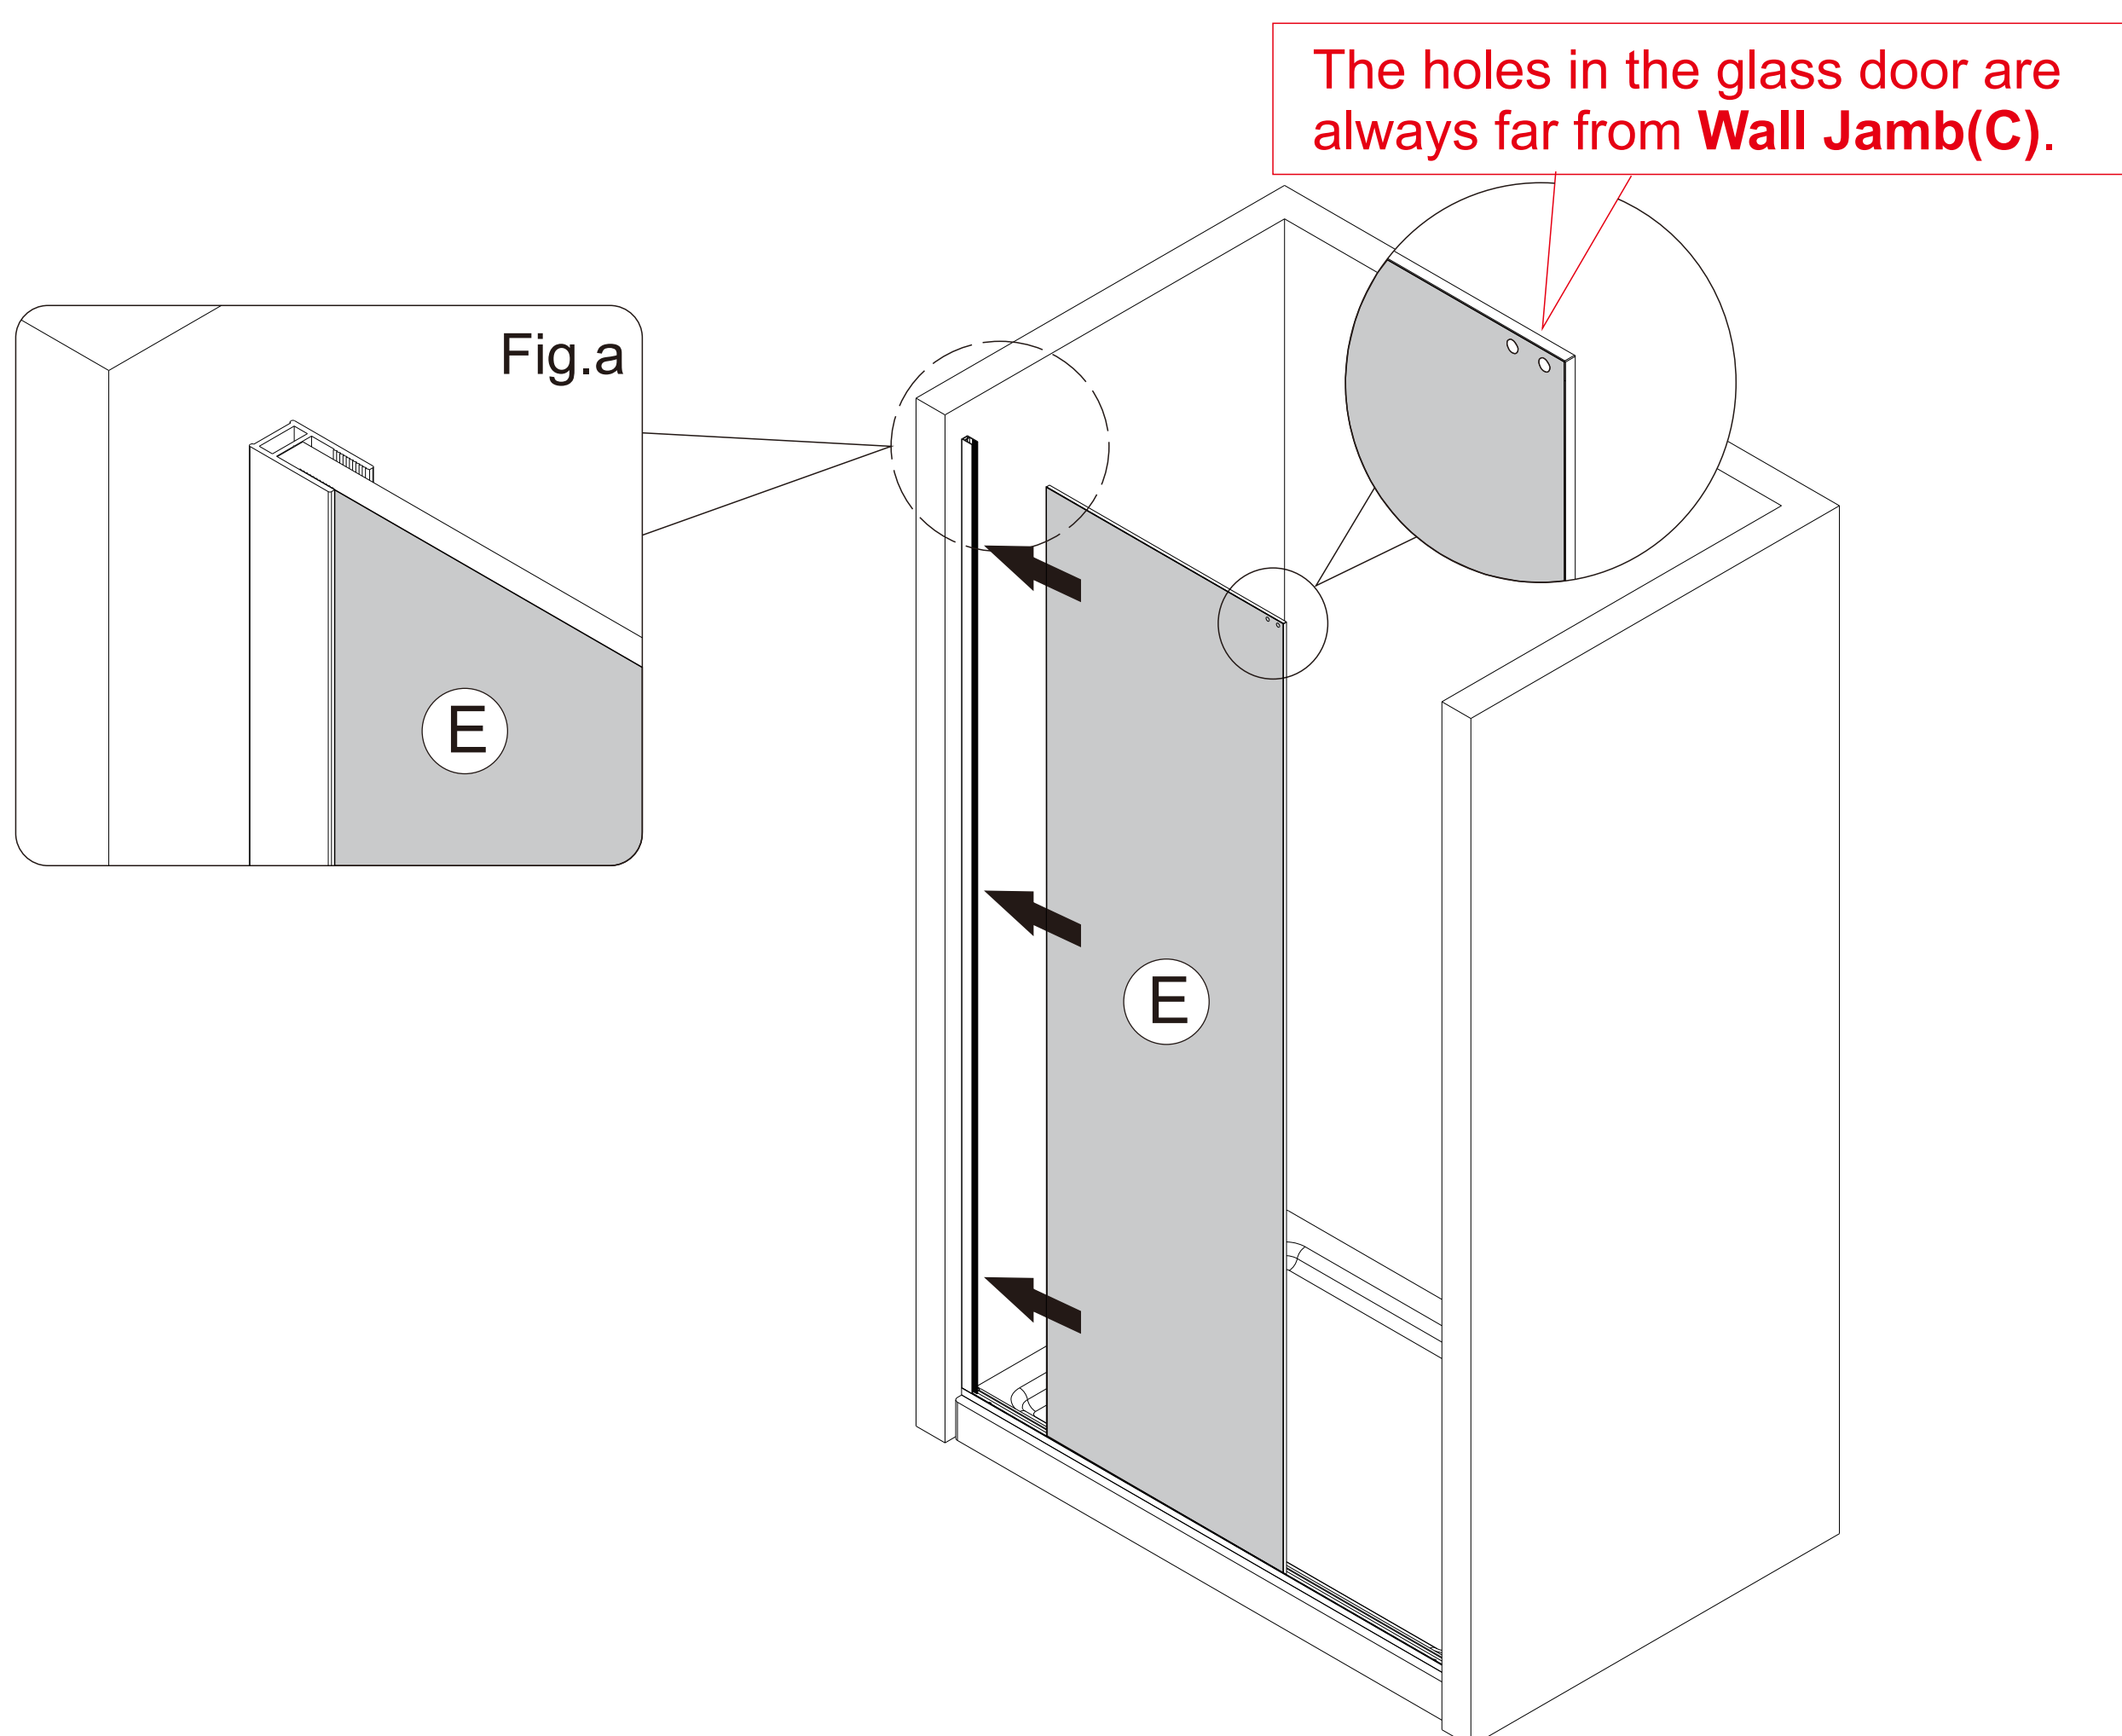


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

7 Install Glass Clips(H)

NOTE

1. Place the **Glass Clips(H)** at the **Stationary Glass(E)** and mark the hole with a pencil as Fig.a and Fig.b .
2. Use a drill bit to drill hole in marked position as Fig.c.
3. Secure the **Glass Clips(H)** with **screws(ff)** as Fig.d .

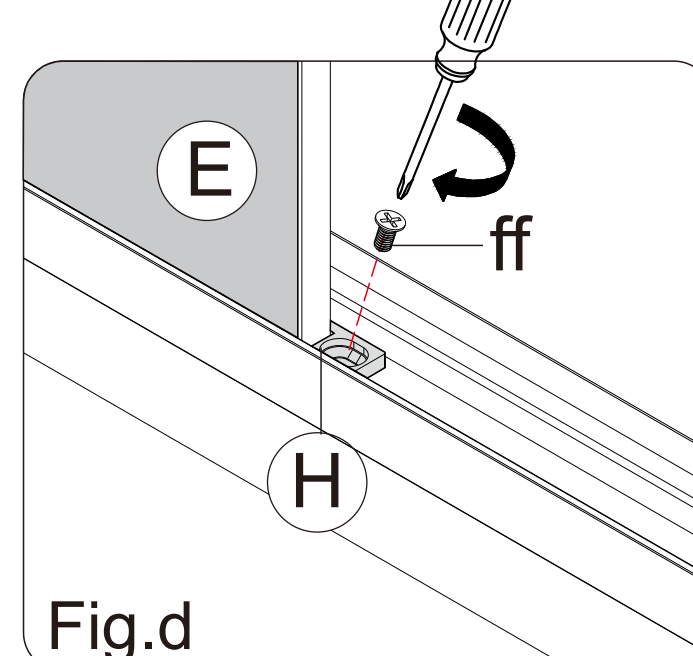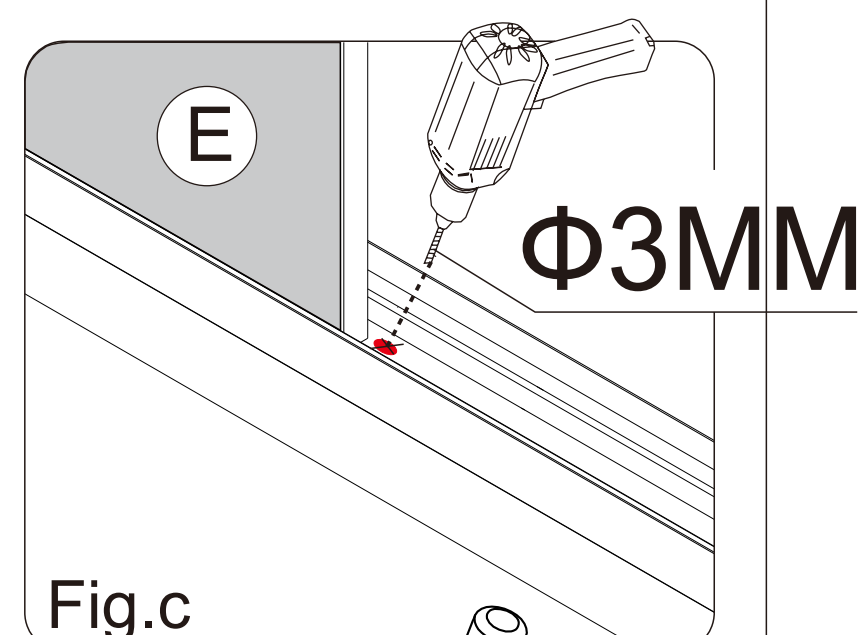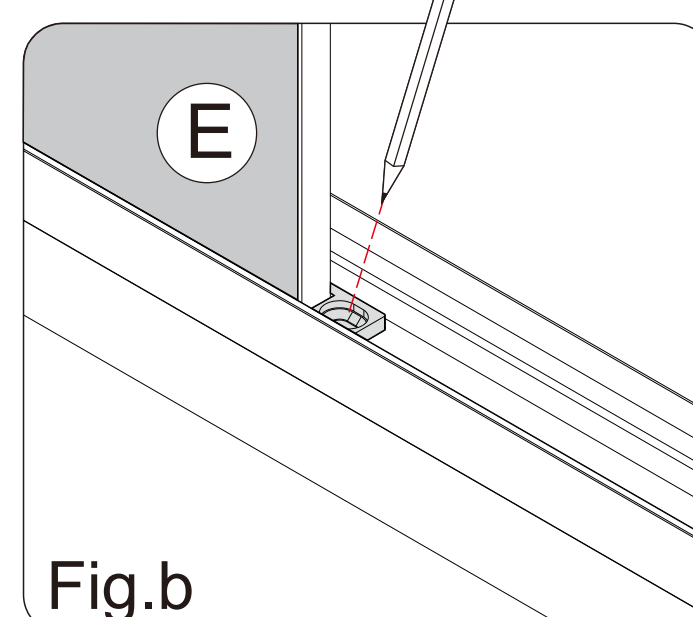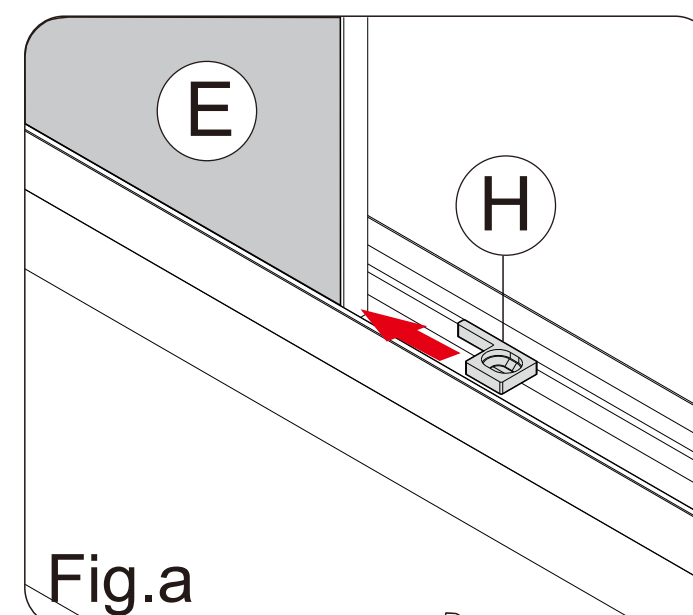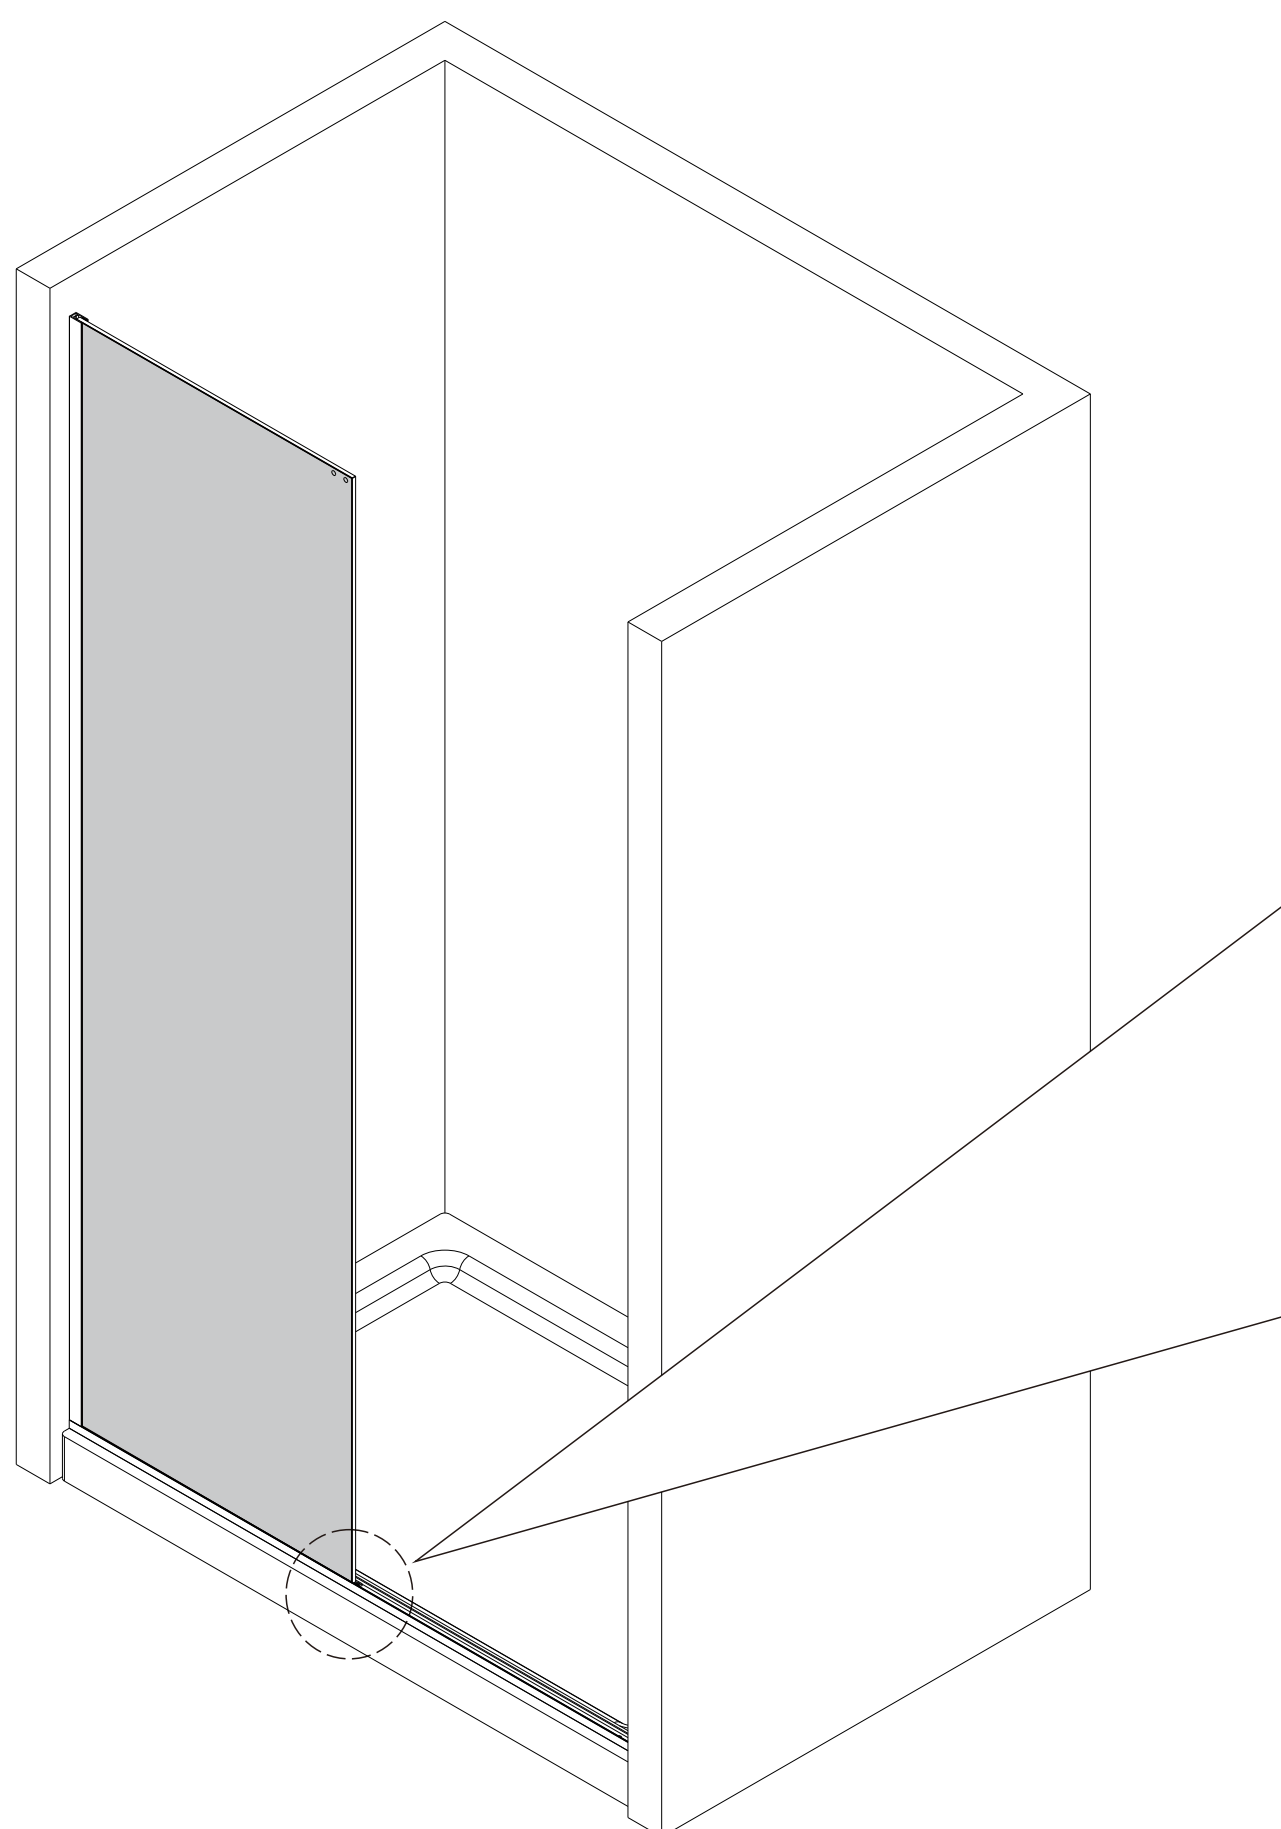

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

8

Install Wedge Strip(D)

NOTE

1. Spray water on the **Stationary Glass(E)** and the slot of **Wall Jamb(C)** as Fig.a .
2. Insert in the **Wedge Strip(D)** Using the given **Wedge strip install tool(gg)** to press the Wedge strip(D) and Fit it place as Fig.b .

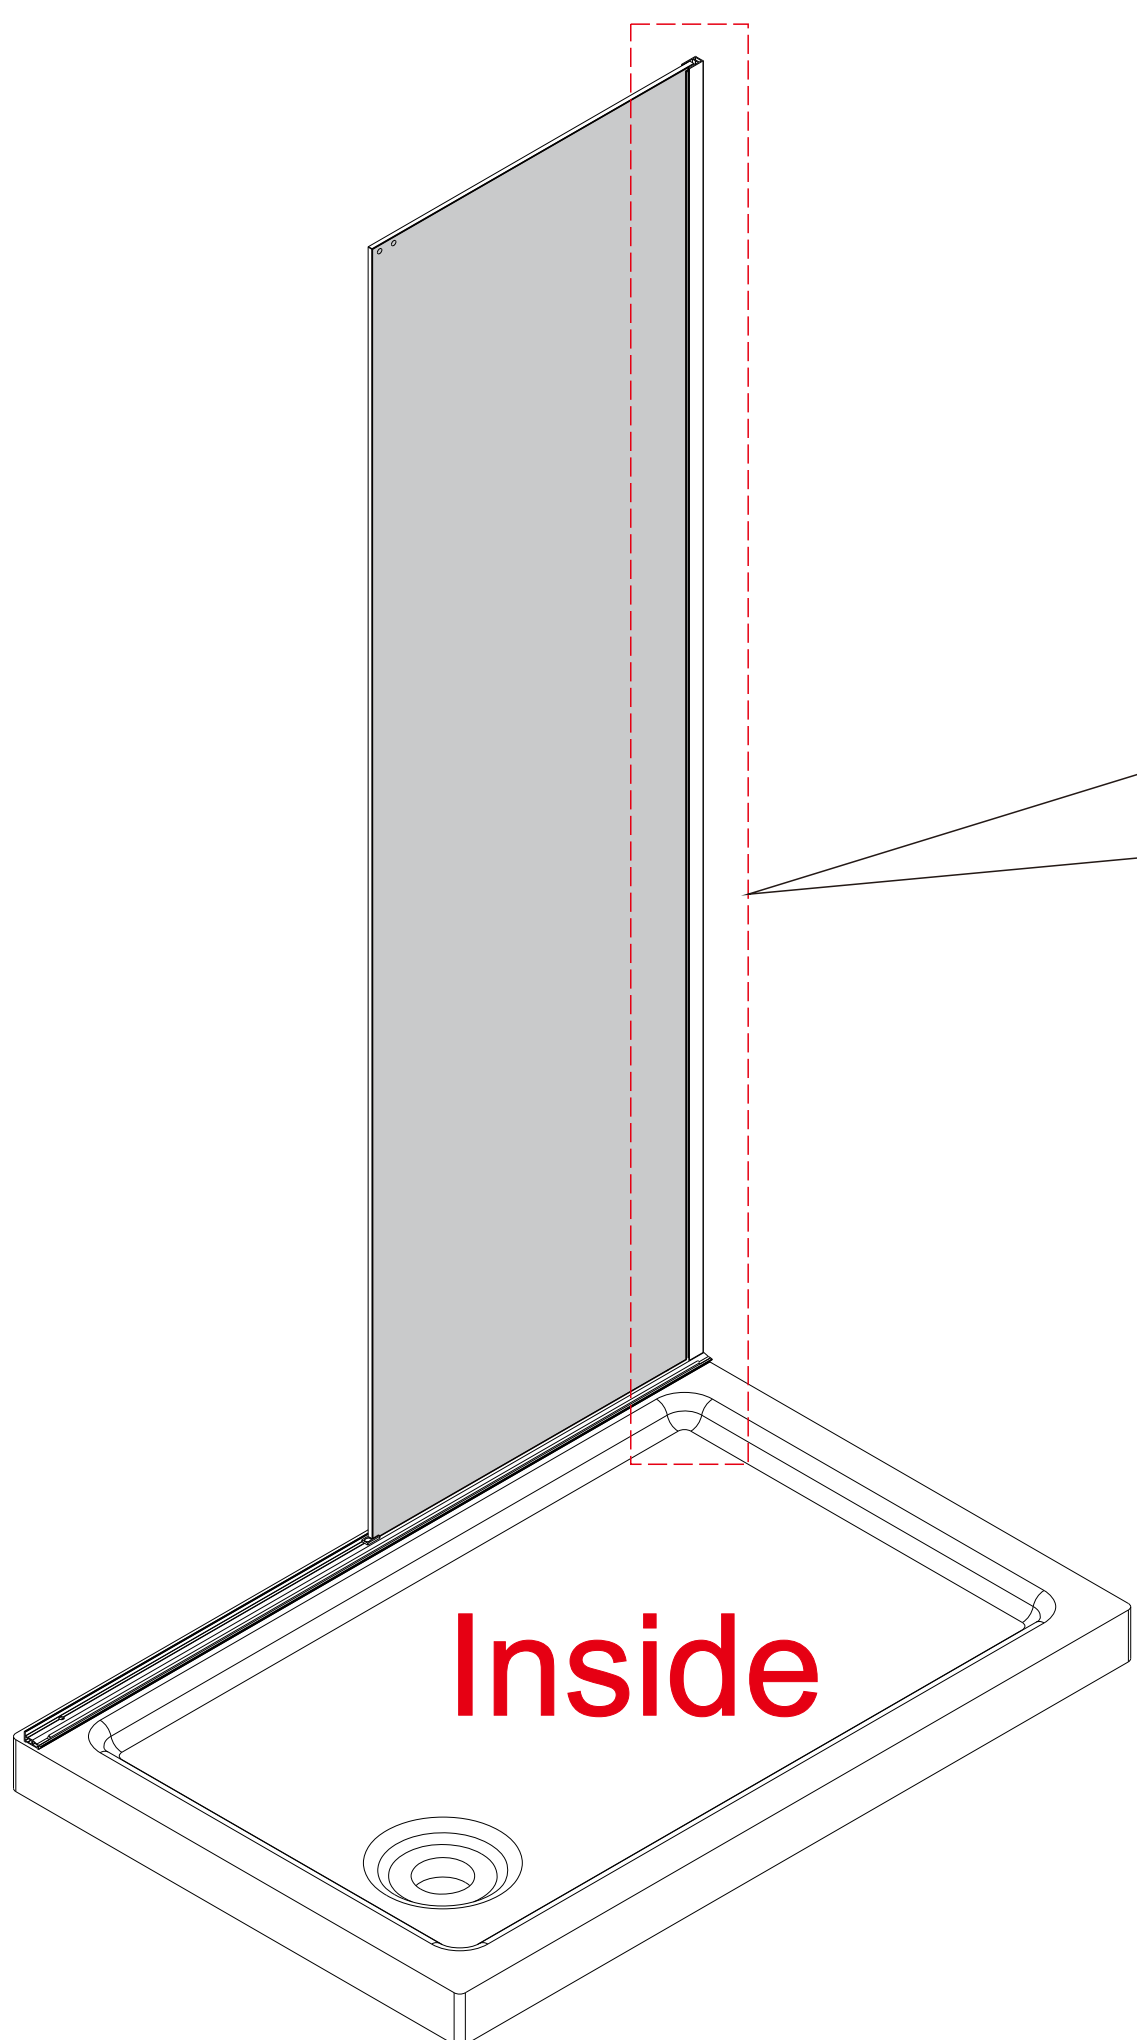


Fig.a


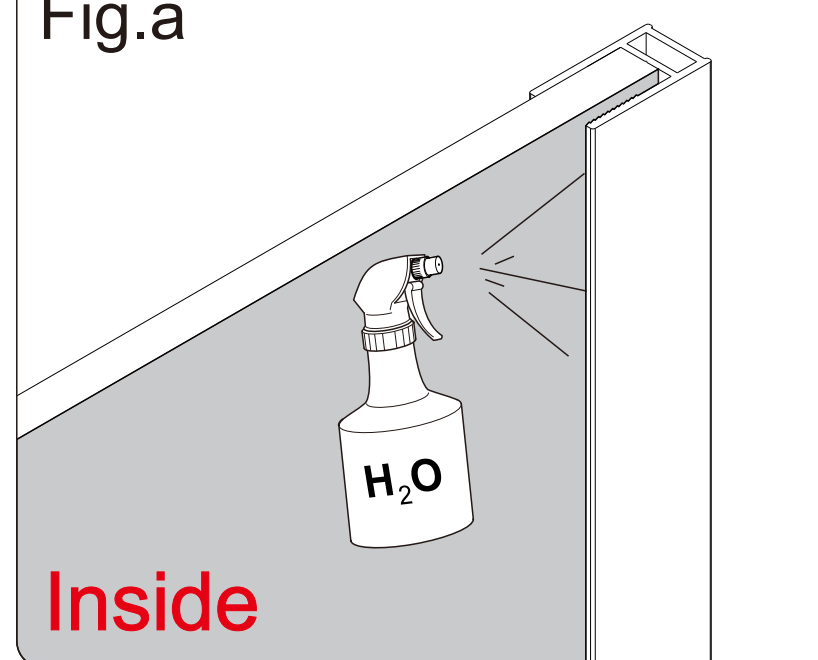


Fig.b

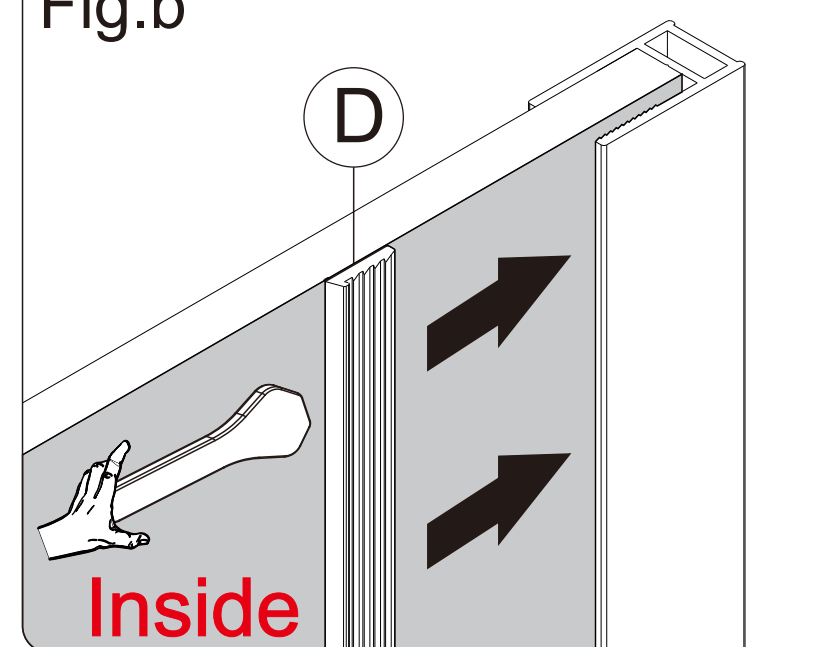

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

9

Tips & Tricks for Pull Rod installation

NOTE

Pull Rod in Fig.a shows Left opening stallation. For Right opening in stallation. follows procedures shown in Fig.b to Fig.e .

Fig.a

A

Left opening
Installation

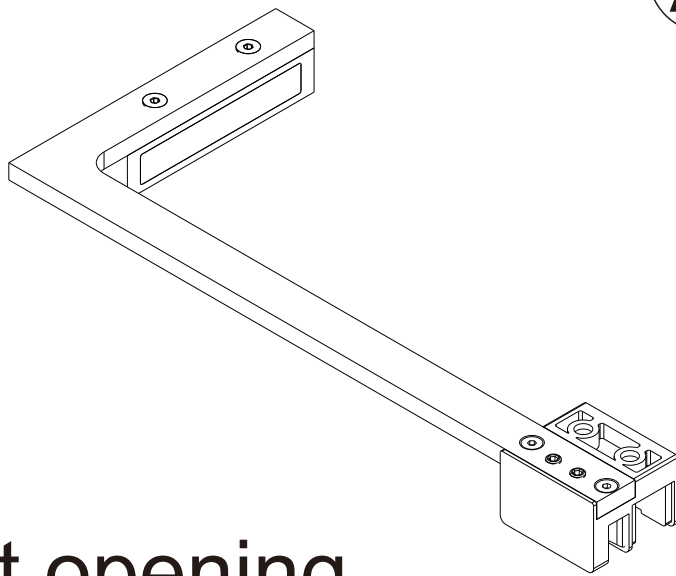


Fig.d

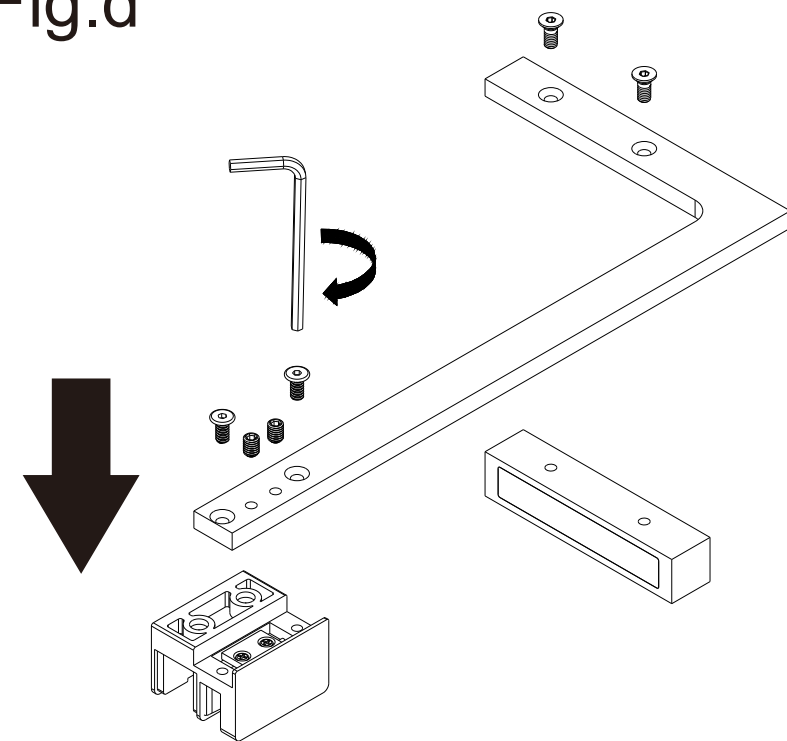


Fig.b

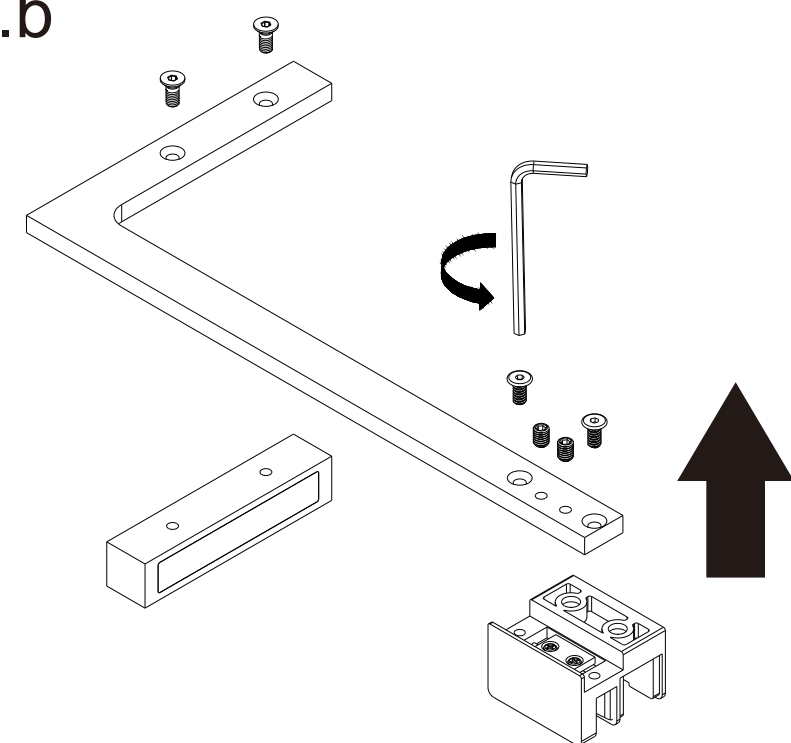


Fig.e

A

Right opening
Installation


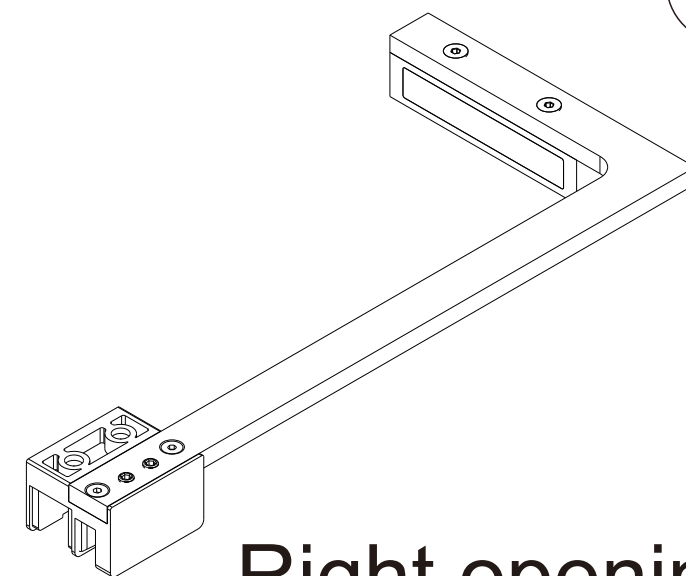



Fig.c

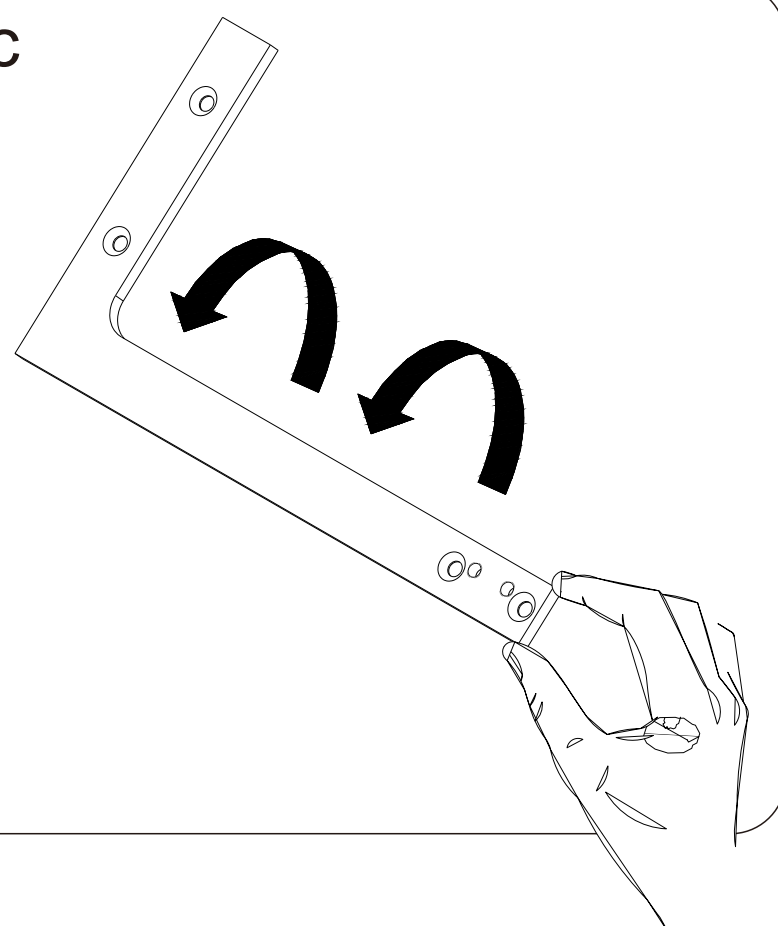

10₋₁ Install Pull Rod(A)

NOTE

1. Install the **Pull Rod(A)** on the **Stationary Glass(E)** as Fig.a
2. Note that the **Pull Rod(A)** should be perpendicular to the wall, if it is not vertical, you can twist the screw to adjust the **Pull Rod(A)** as Fig.b & Fig.c and Fig.d

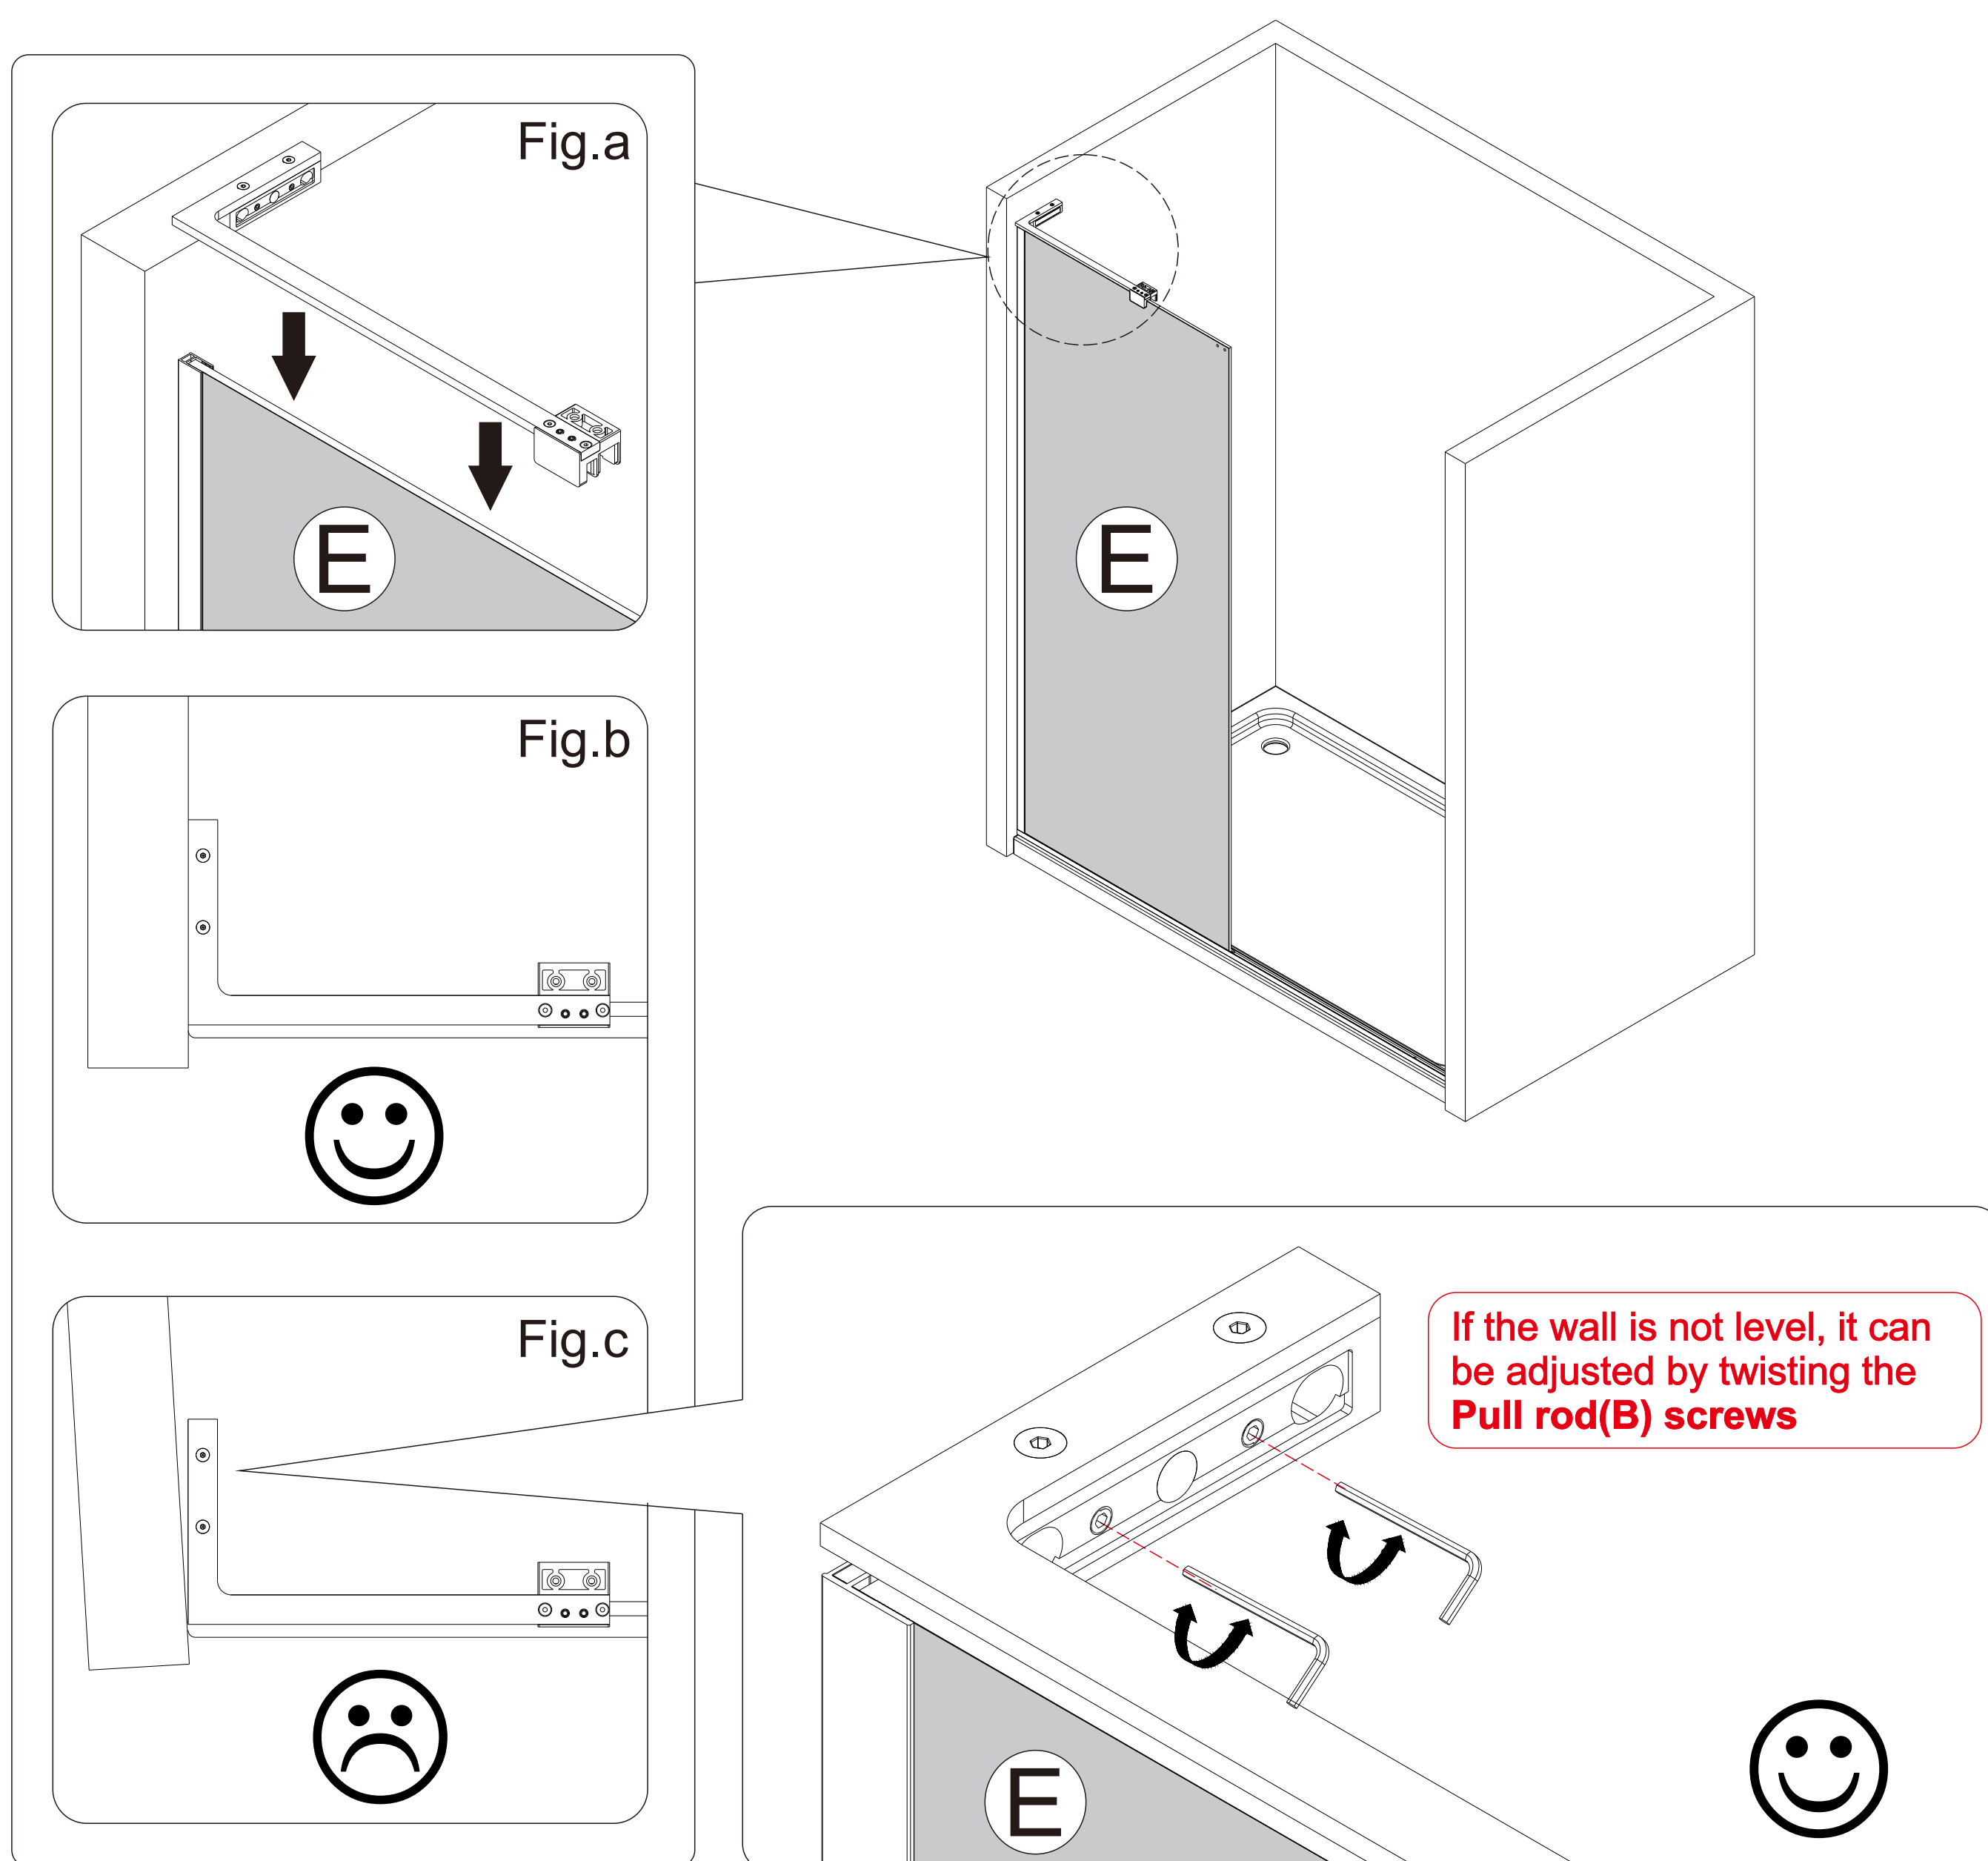

10-2 Install Pull Rod(A)

NOTE

Fig.a

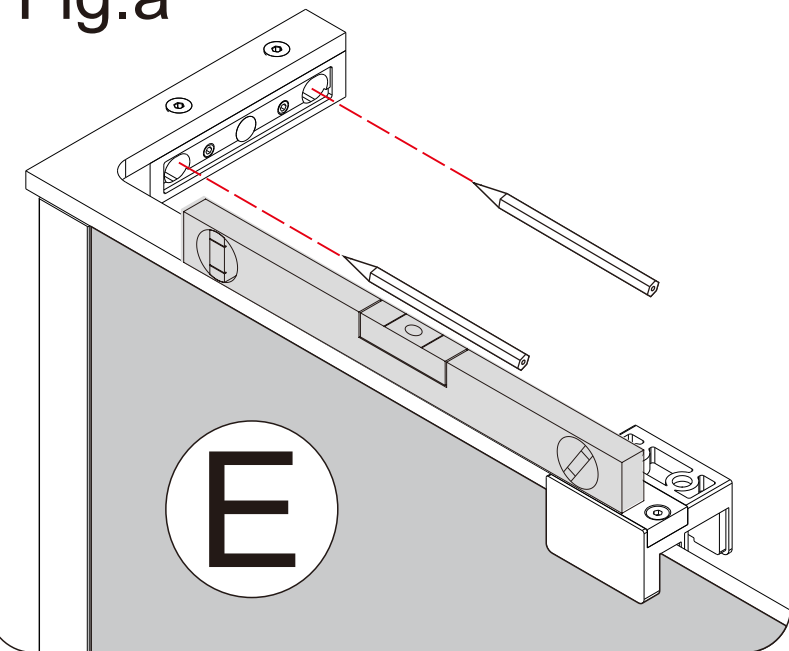


Fig.b



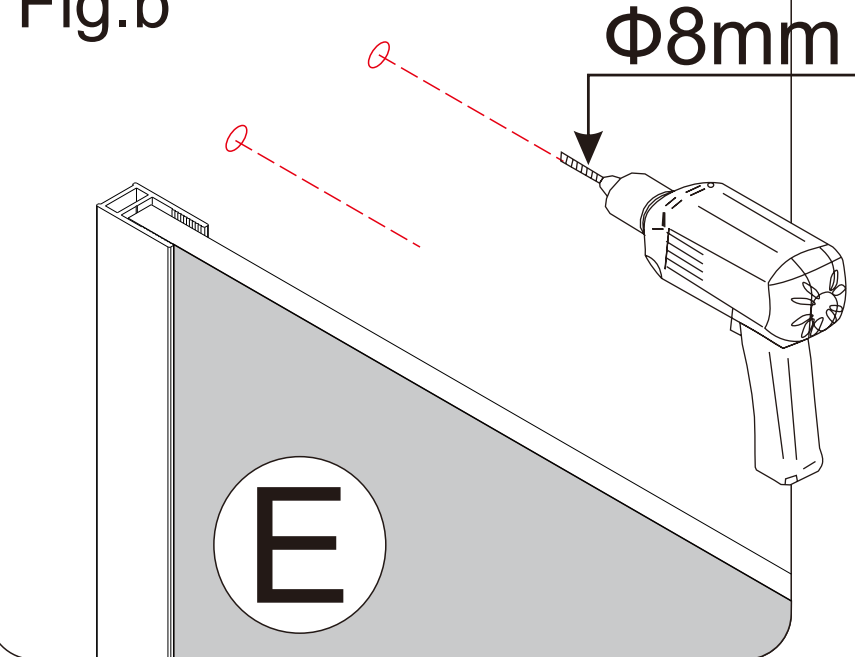


Fig.c

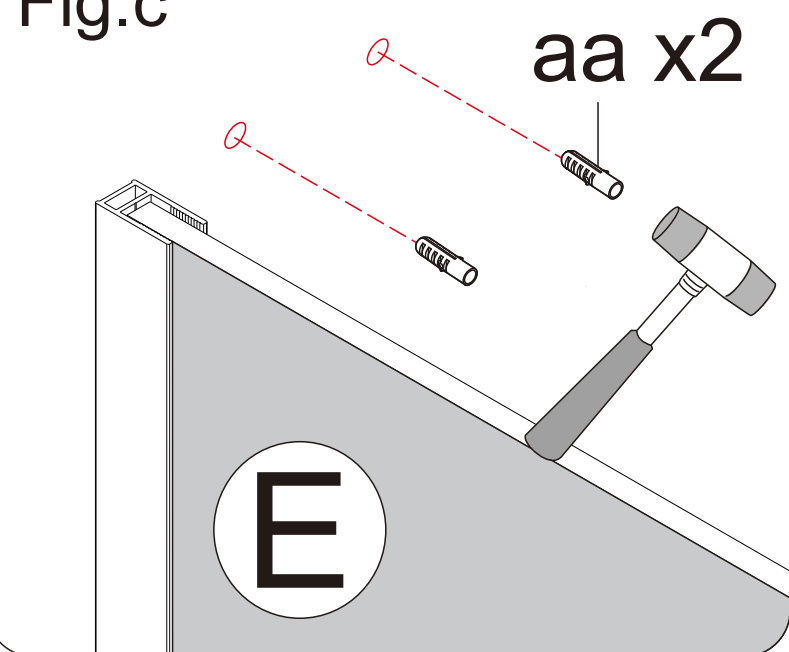

- 1.Once the **Pull Rod(A)** is level, mark holes with a pencil as Fig.a .
- 2.Drill holes with $\Phi 8\text{mm}$ drill bit as Fig.b .
- 3.Insert the **Wall Anchors(aa)** as Fig.c .

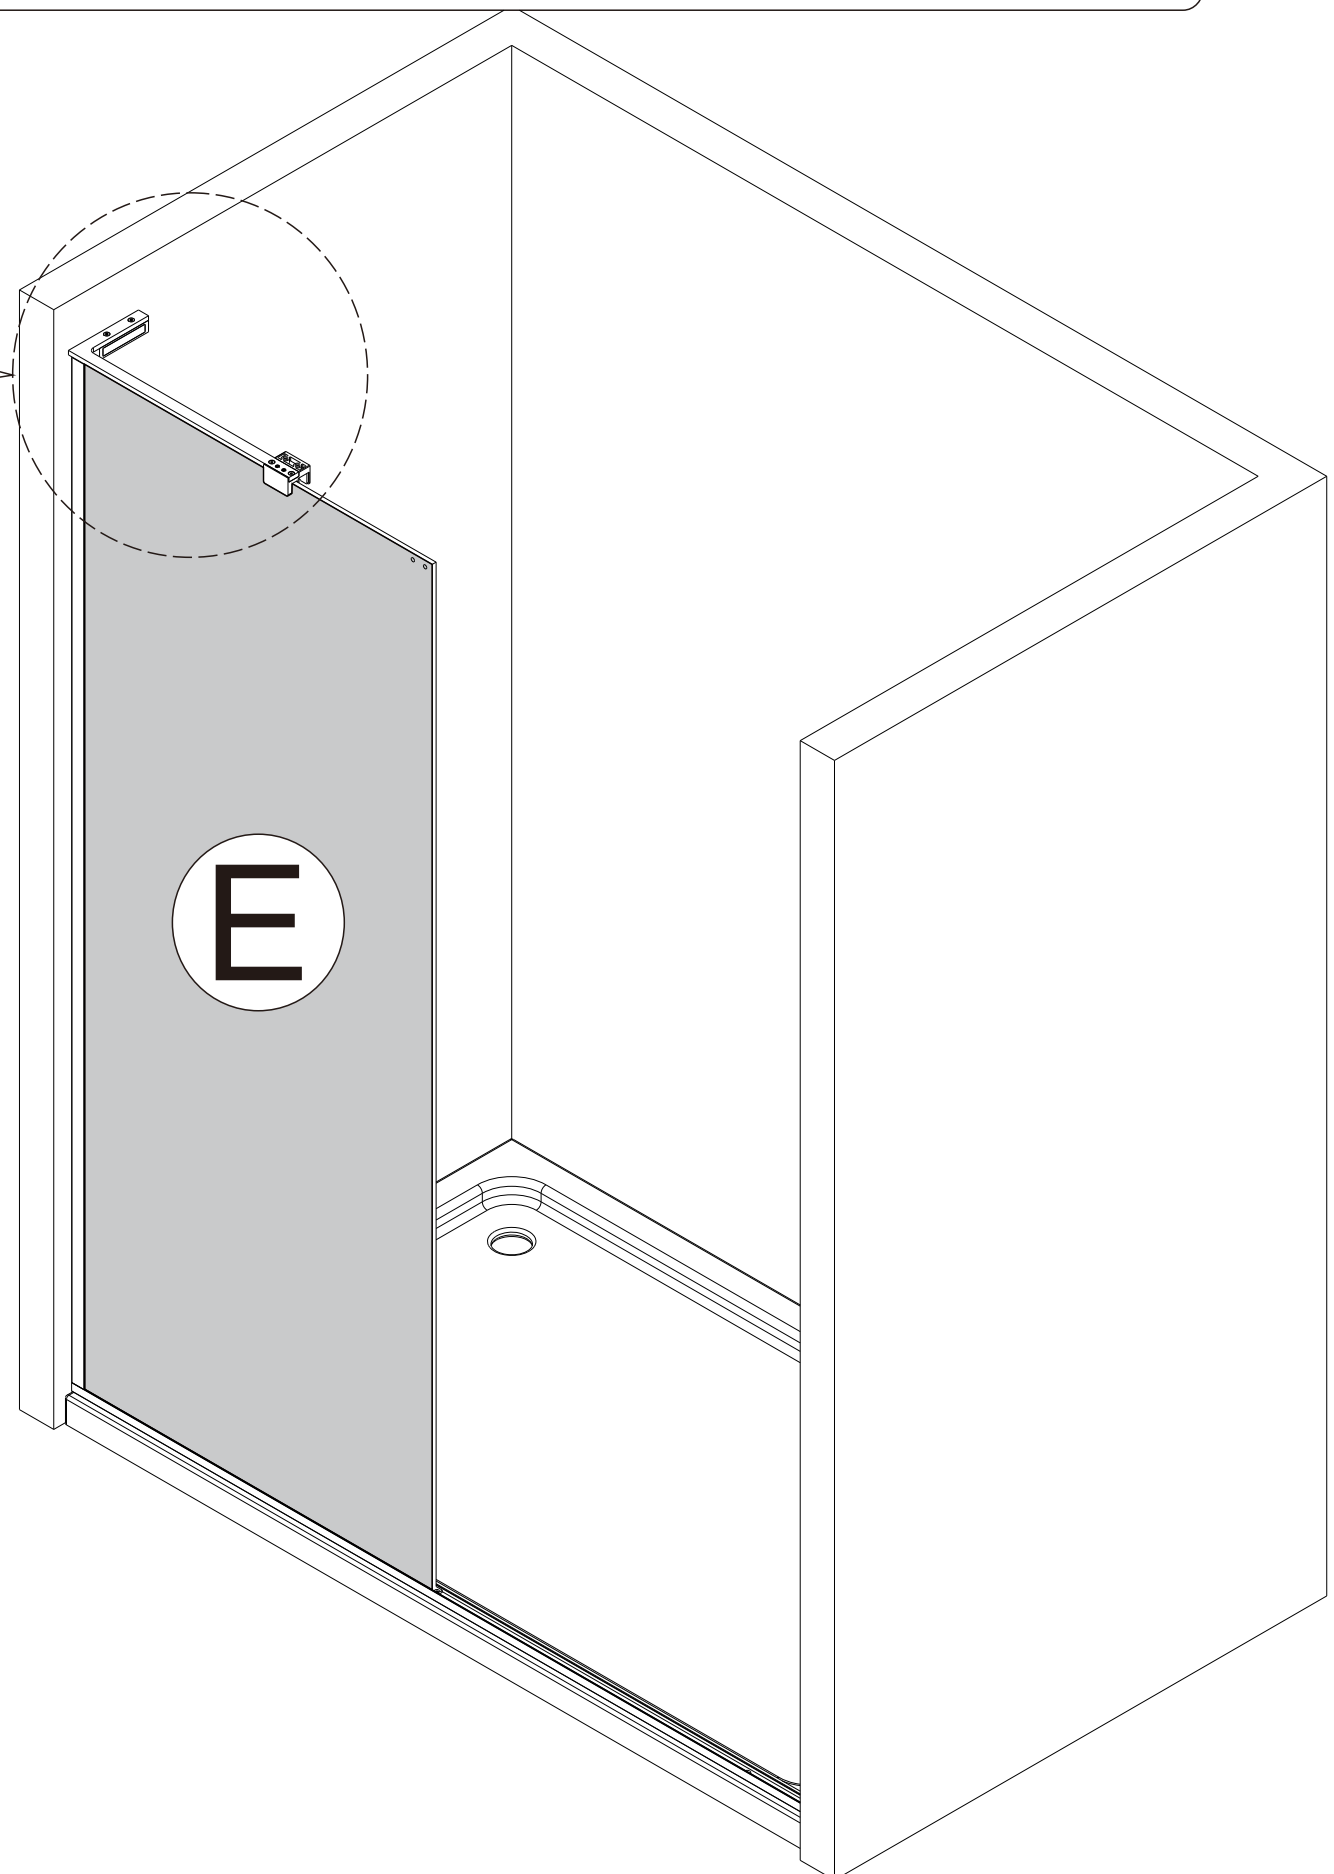

NOTE

- If a Stud is present behind the wall:
drill $\Phi 1/8"$ (3mm) pilot holes into the stud and use the ST4.0x30mm **Screws(bb)**
OR
- If NO Stud is present behind the wall:
drill $\Phi 1/4"$ (6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x30mm **Screws(bb)**.







Note: The shower door can be installed left or right, according to the need to determine the installation direction.

10₋₃ Install Pull Rod(A)

NOTE

1. Secure the **Pull Rod(A)** to the wall with Screws(bb) as Fig.a .
2. Twist the screws on the Pull rod so that the **Pull Rod(A)** holds the **Stationary Glass(E)** as Fig.b .
3. Install the decorative cover on the **Pull Rod(A)** as Fig.c .

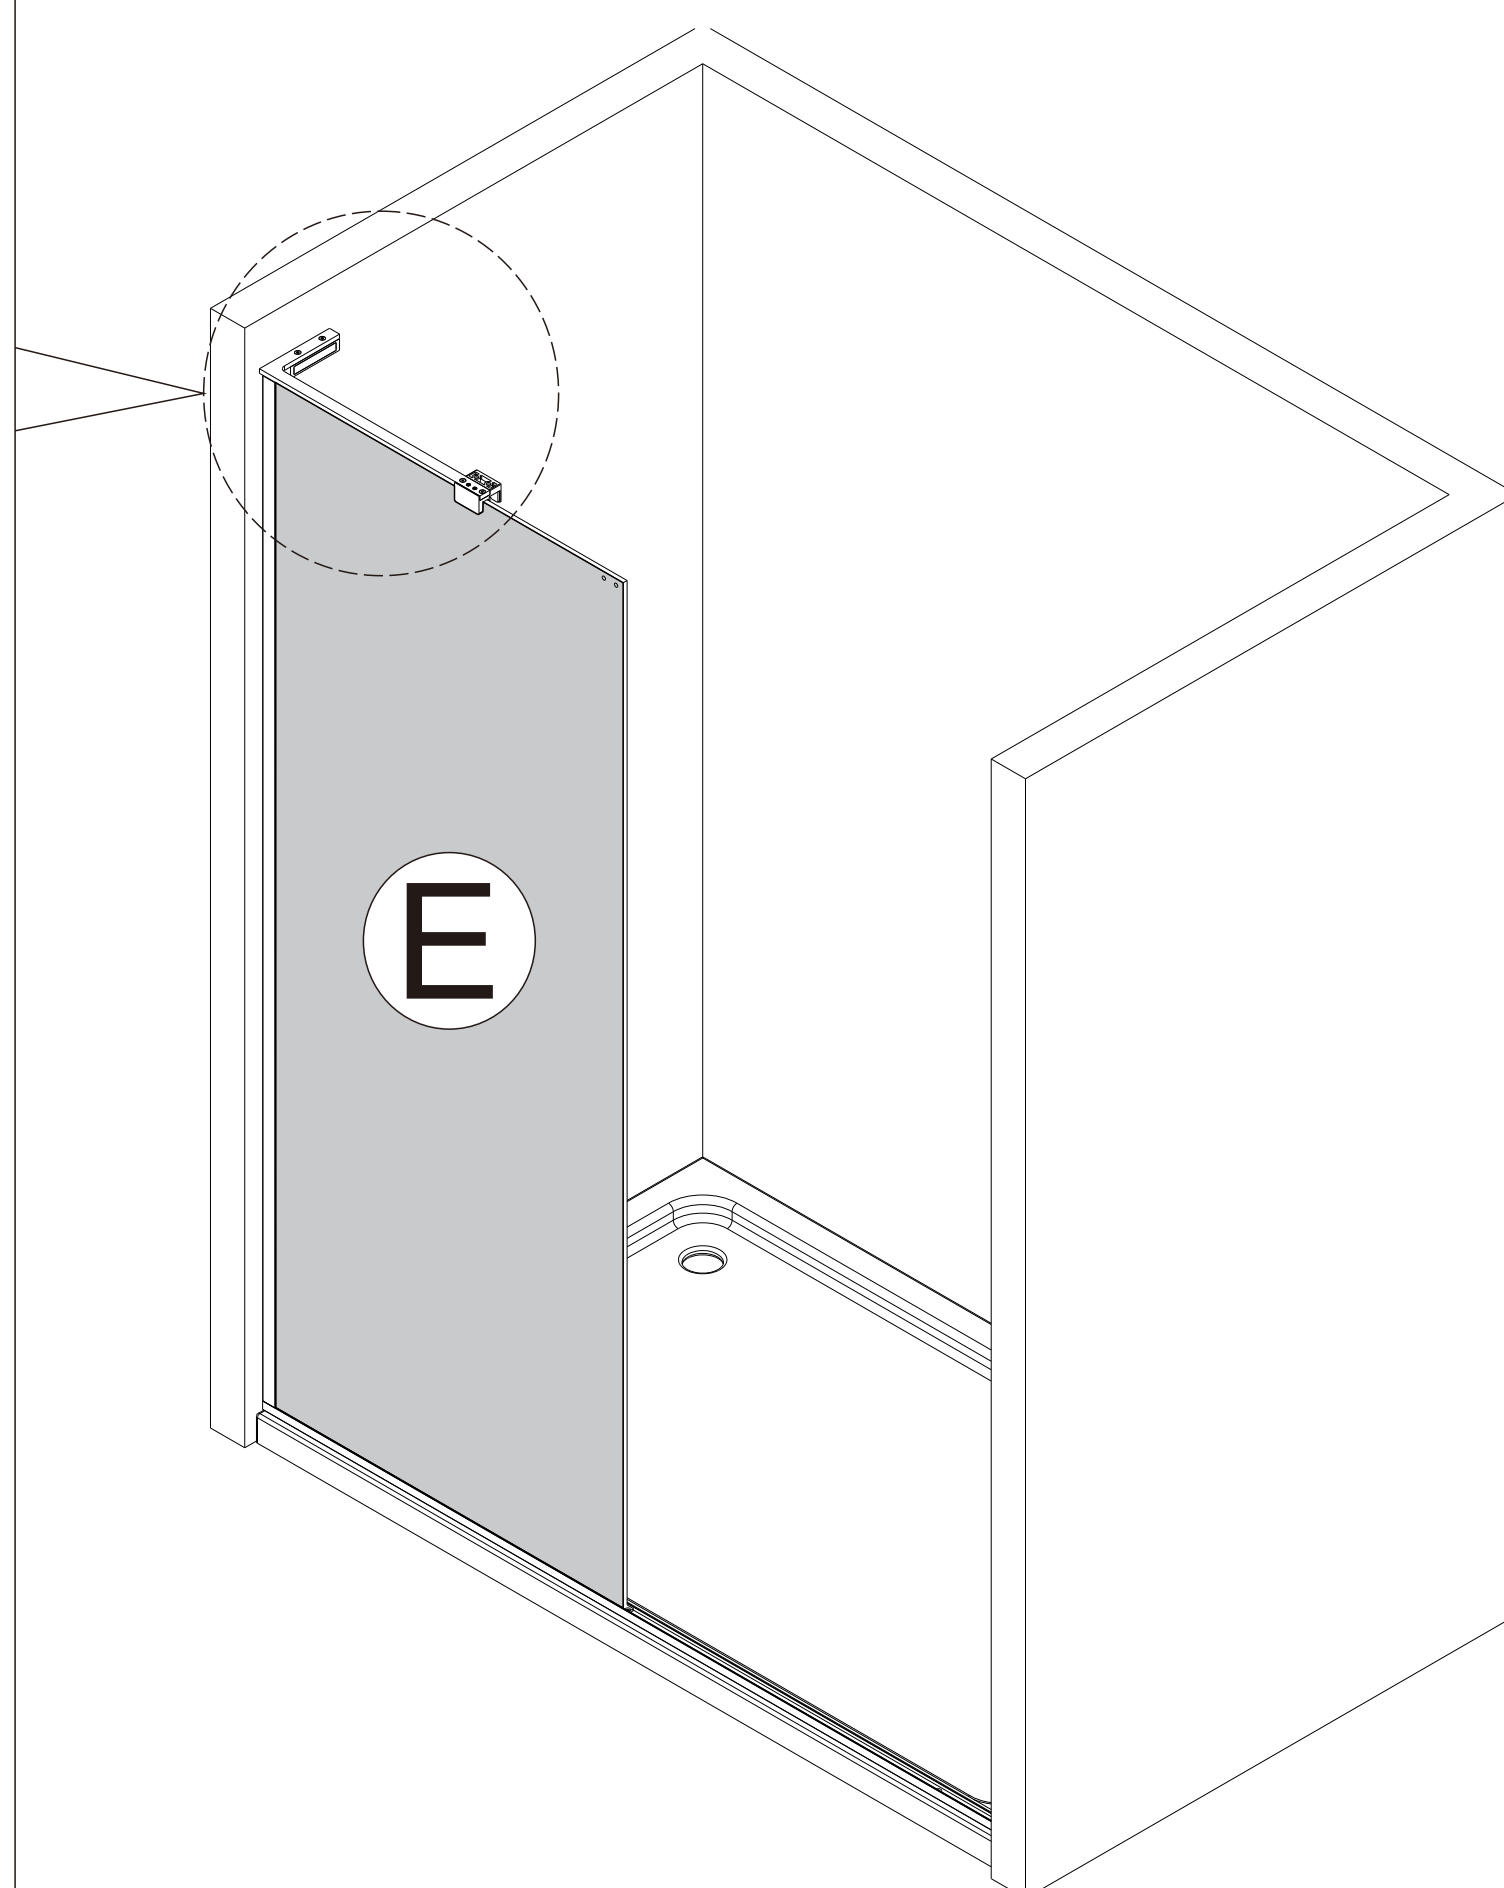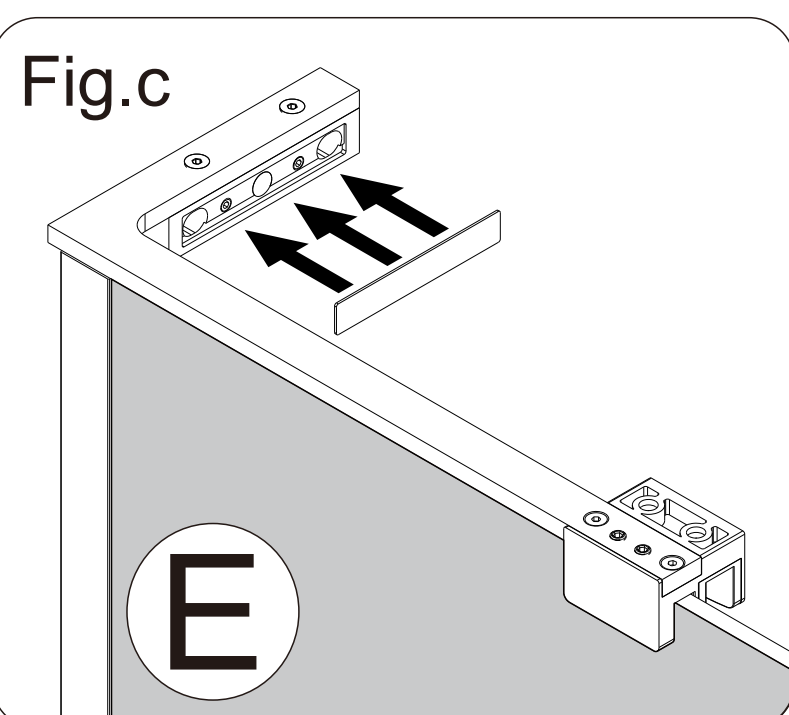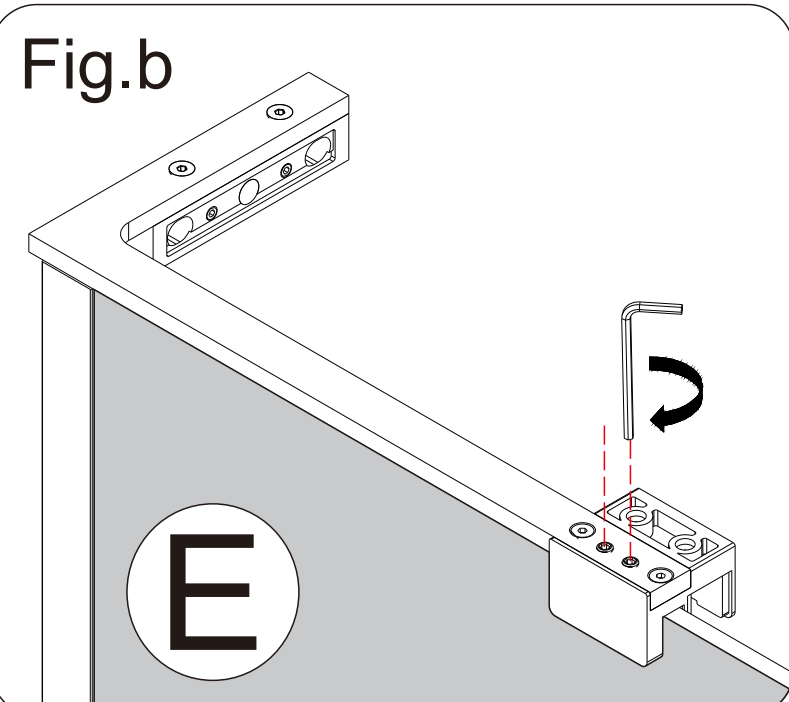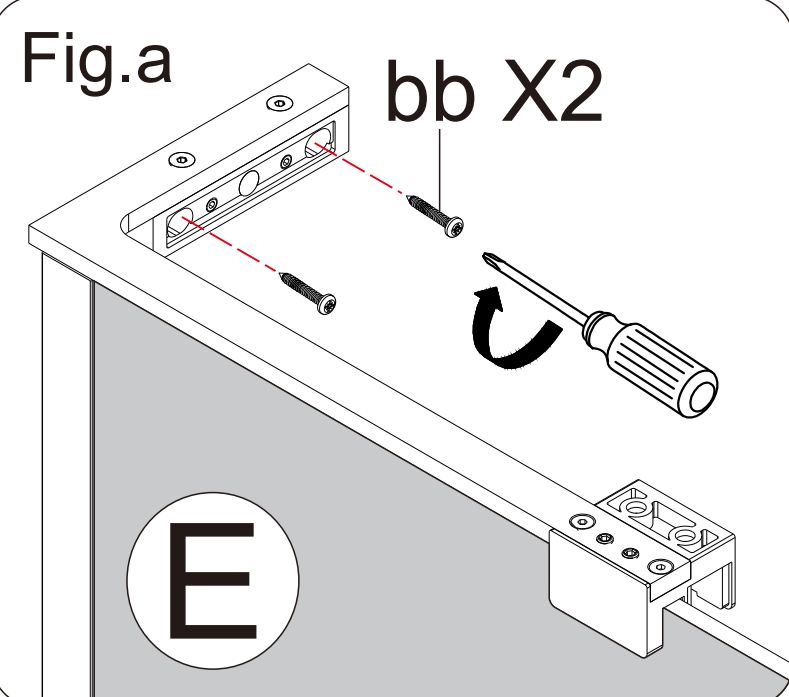


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

11 Prepare to install **Wall Jamb(K)**

NOTE

1.Place the **Wall Jamb(K)** on the **Bottom Rail(I)** and keep it level, then mark the hole positions with a pencil as Fig.a and Fig.b .

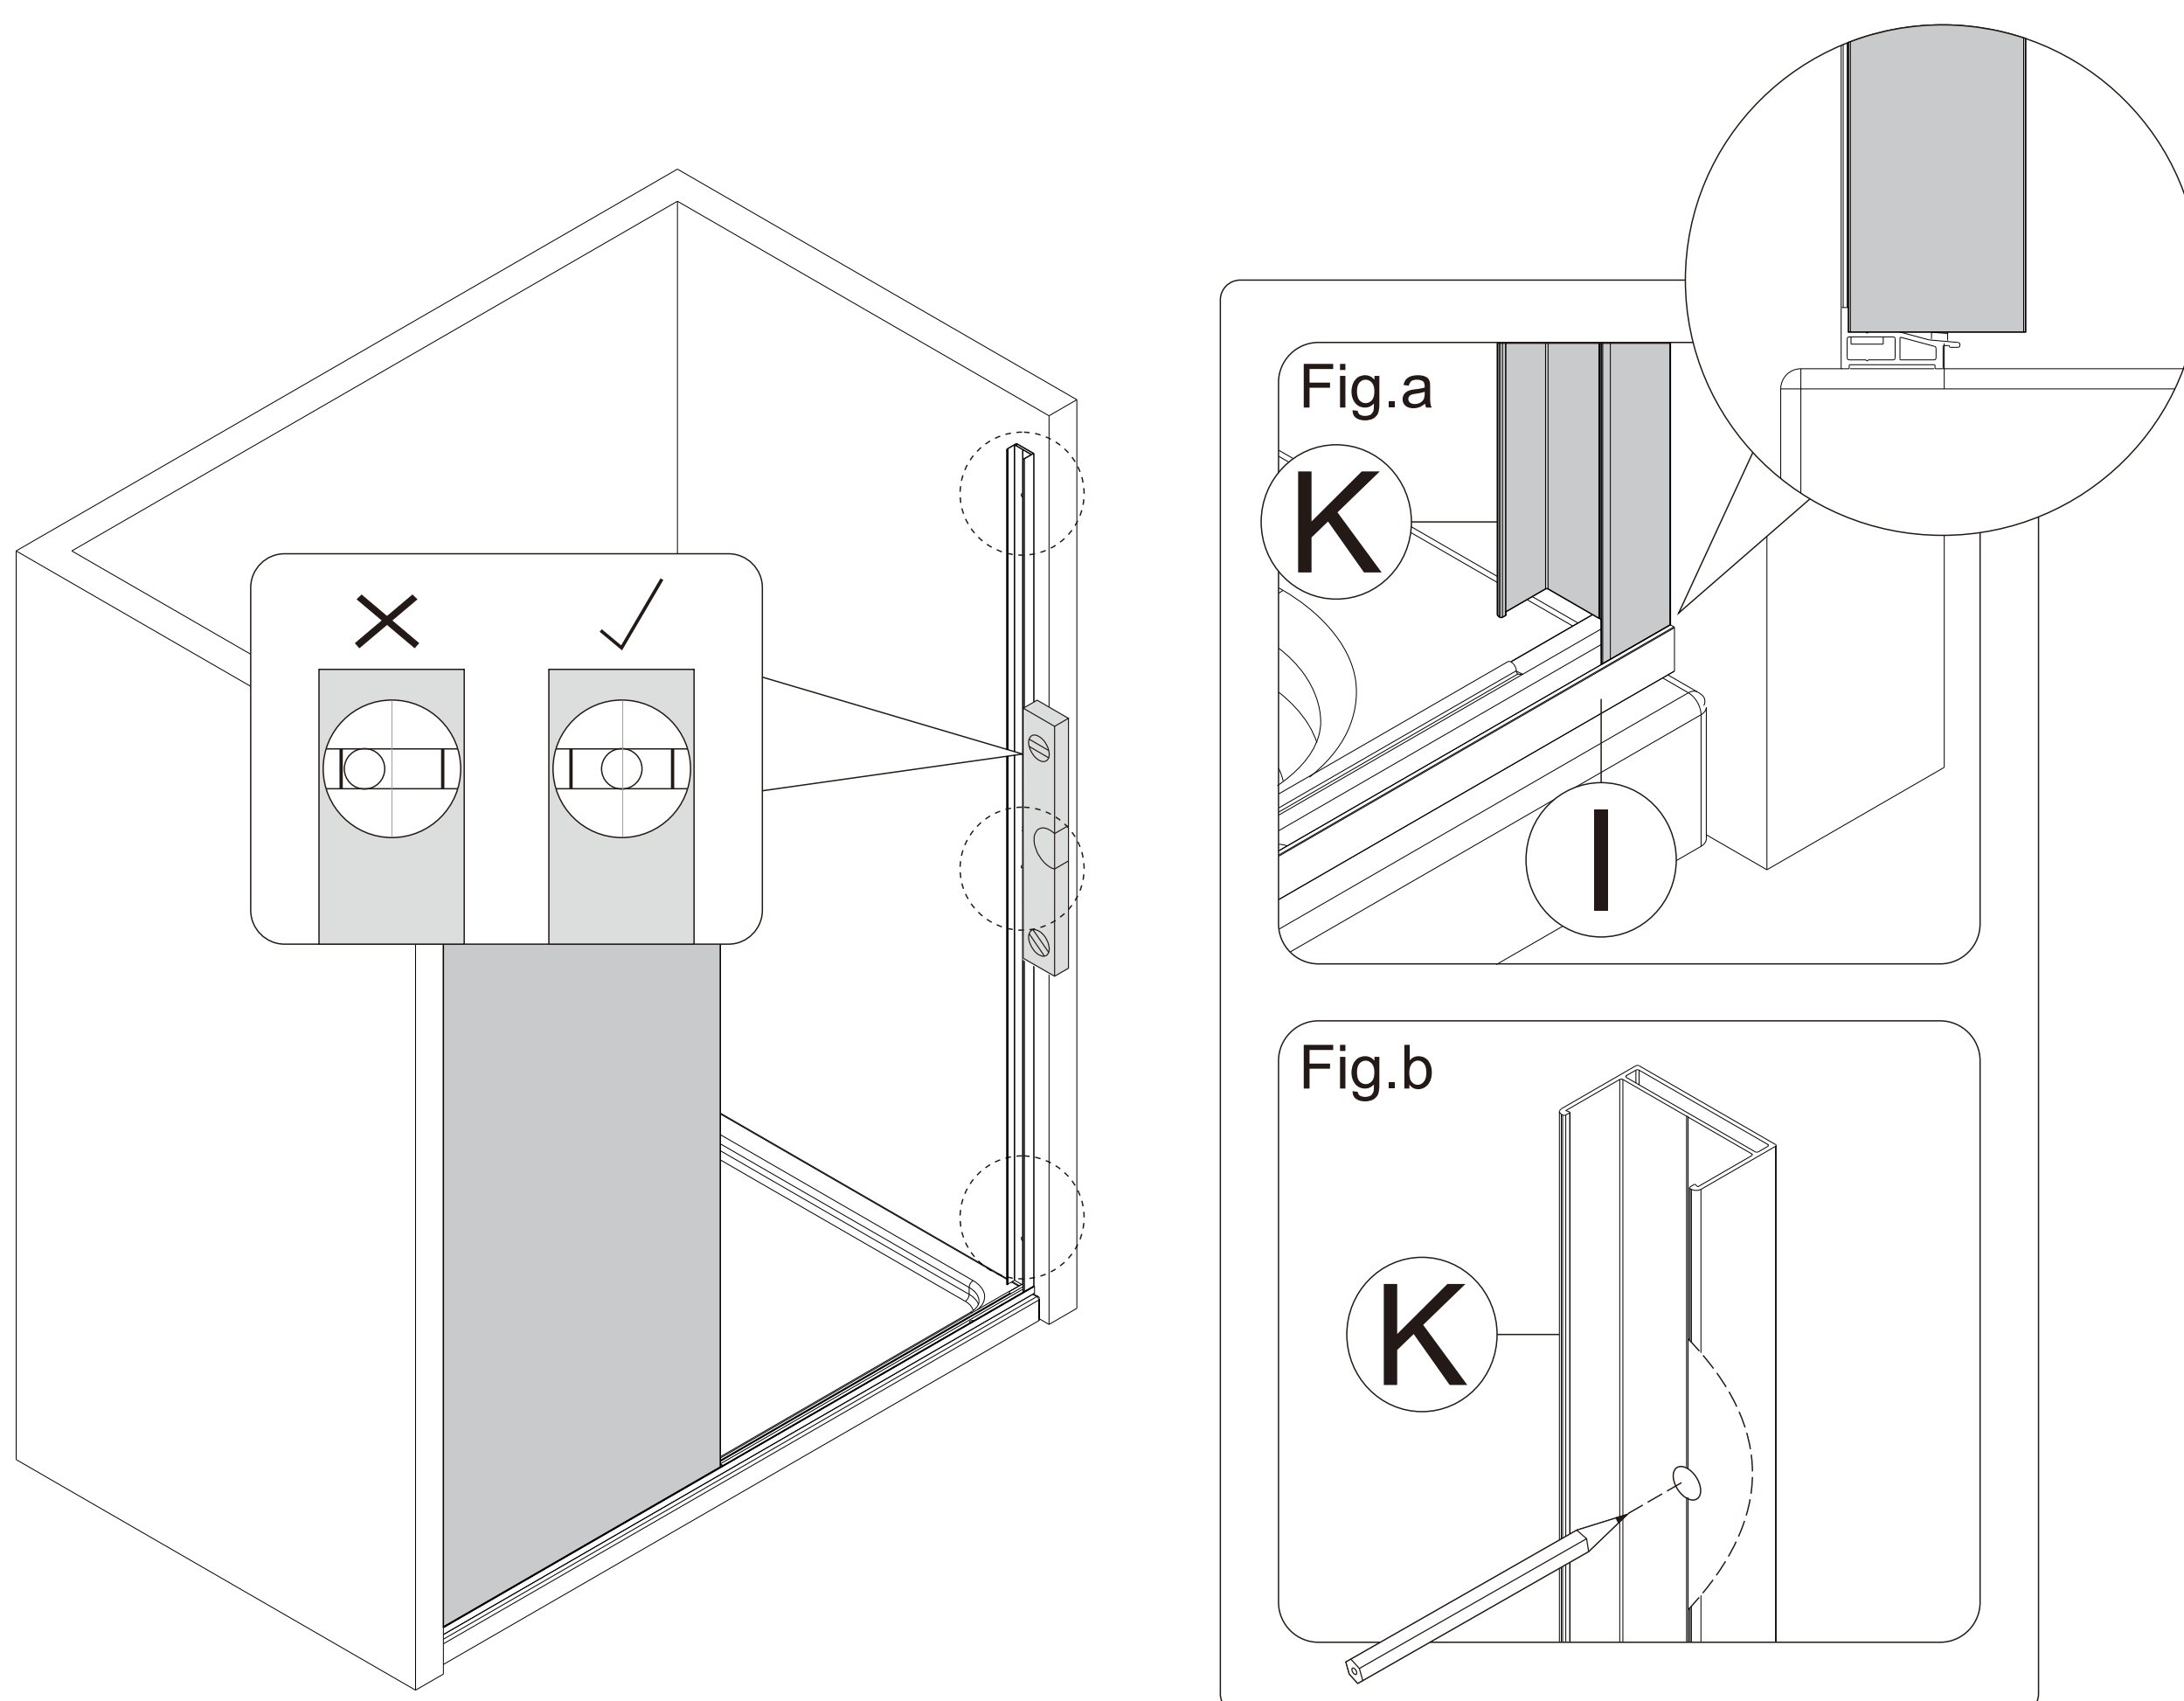

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

12 Install **Wall Anchor(cc)**

NOTE

1. Drill holes with ϕ 6mm(1/4") drill bit as Fig.a .
2. Insert **Wall Anchors(cc)** as Fig.b .

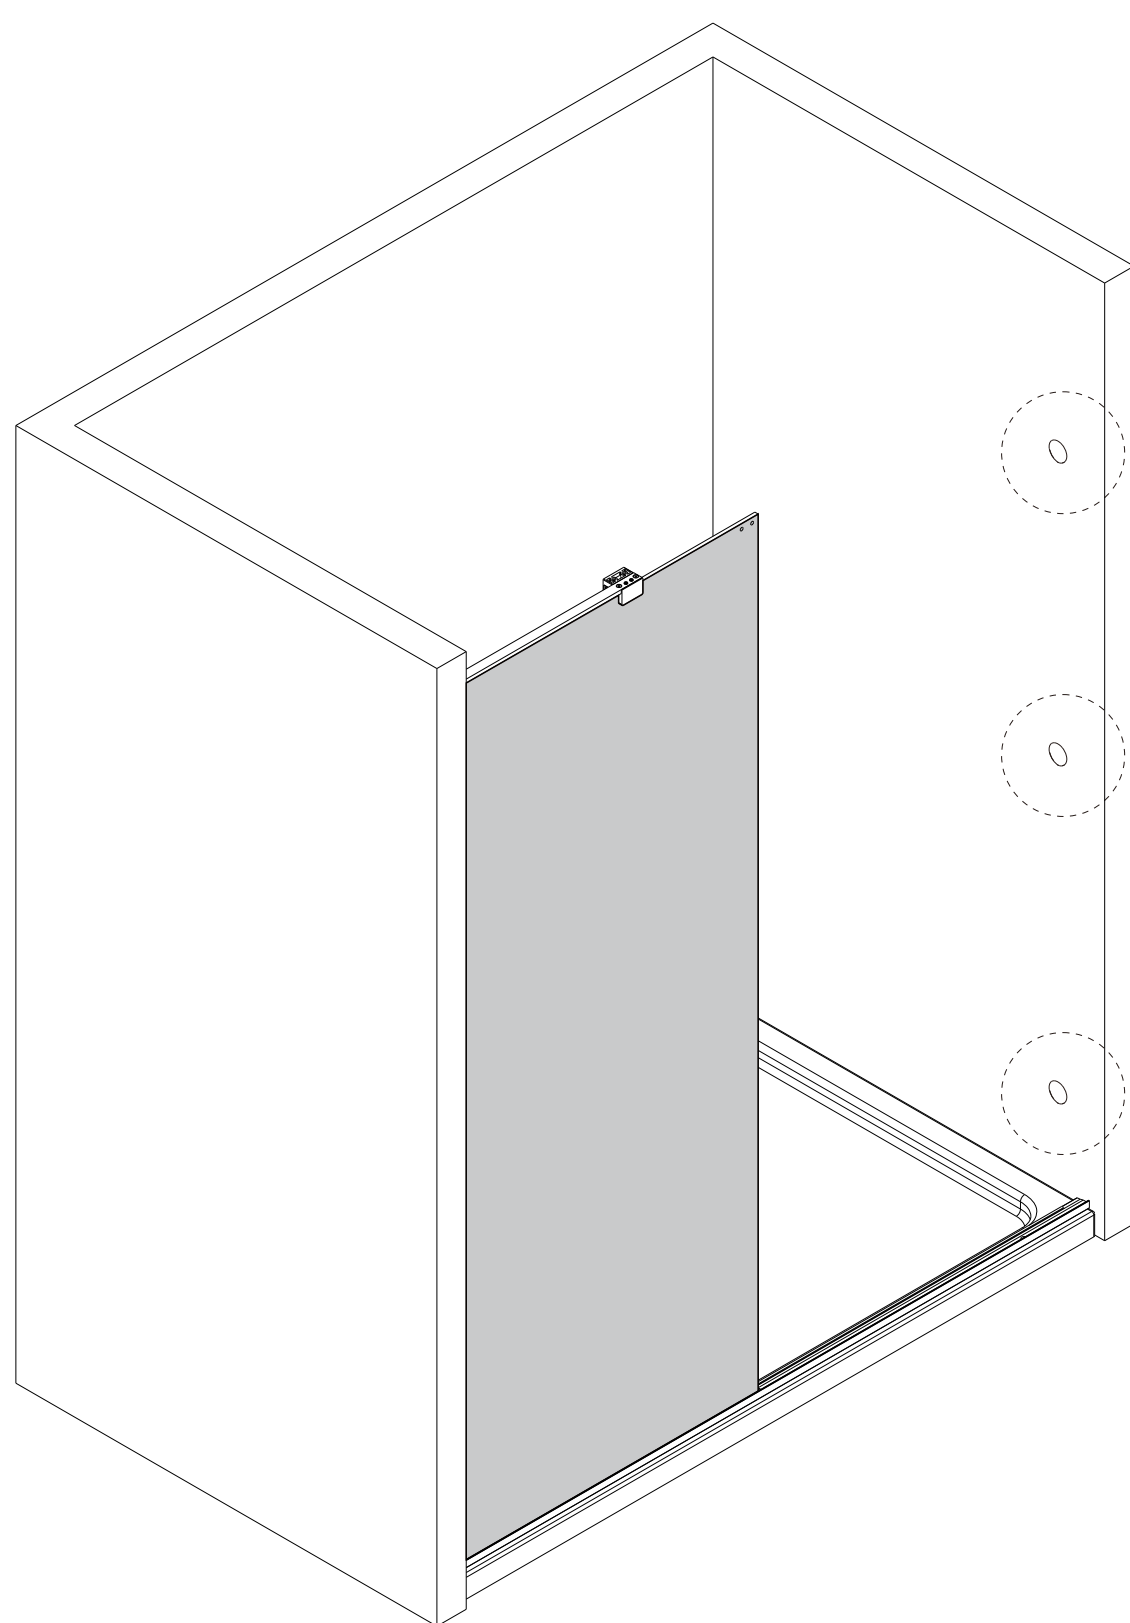


Fig.a (1/4")
 ϕ 6mm


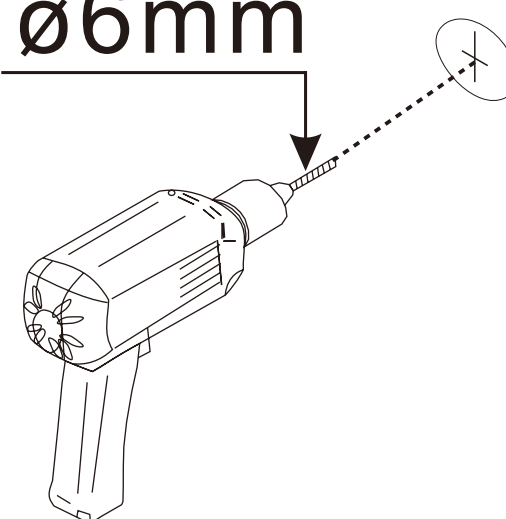


Fig.b



NOTE

- If a Stud is present behind the wall:
drill ϕ 1/8" (3mm) pilot holes into the stud and use the ST4.0x35mm **Screws(dd)**
OR
- If NO Stud is present behind the wall:
drill ϕ 1/4" (6mm) holes and insert the **Wall Anchors(cc)** and use the ST4.0x35mm **Screws(dd)**.


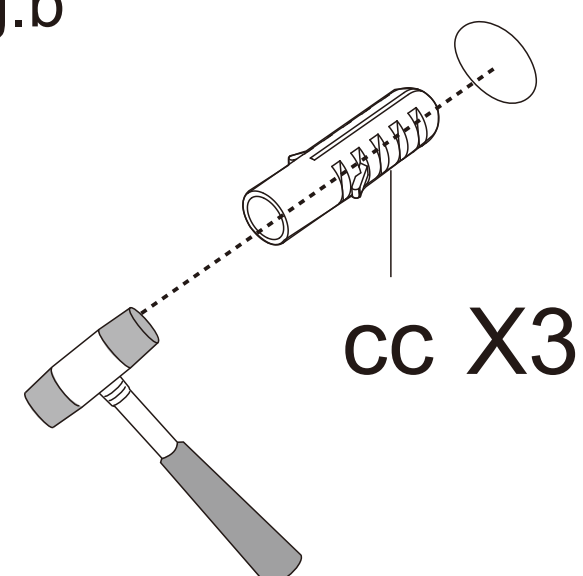


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13 Install Wall Jamb(K)

NOTE

1. Fix **Wall Jambs(K)** with **Screw(dd)** as Fig.a .

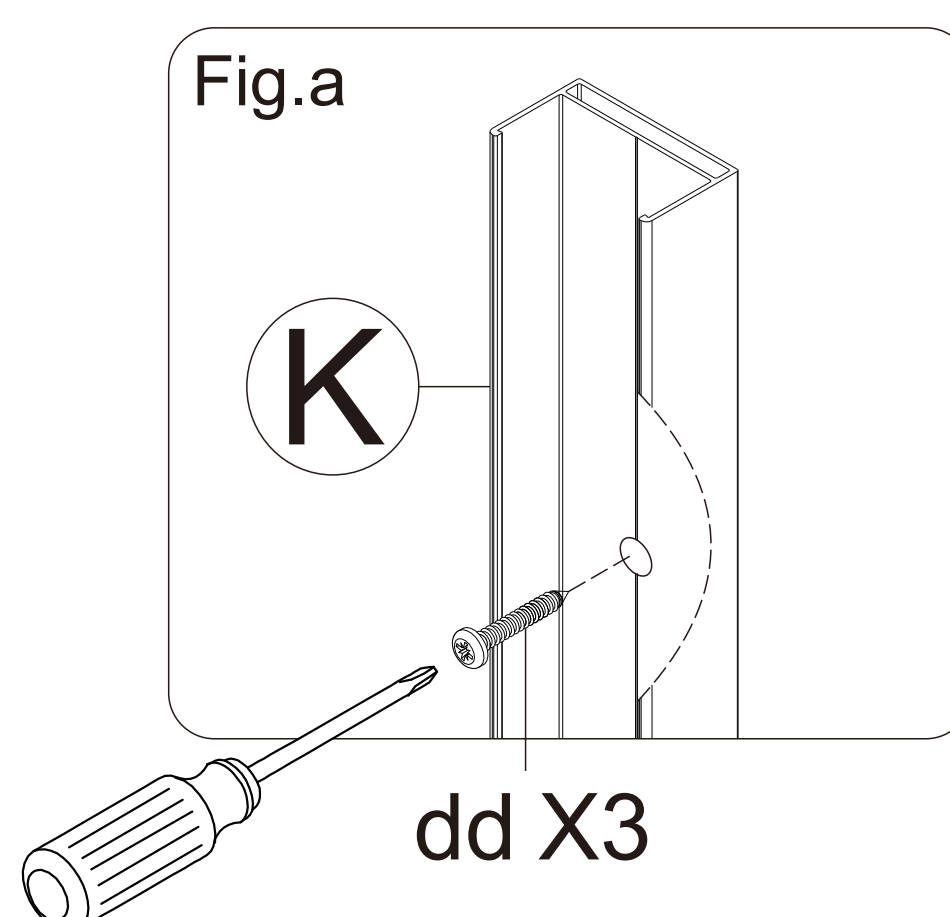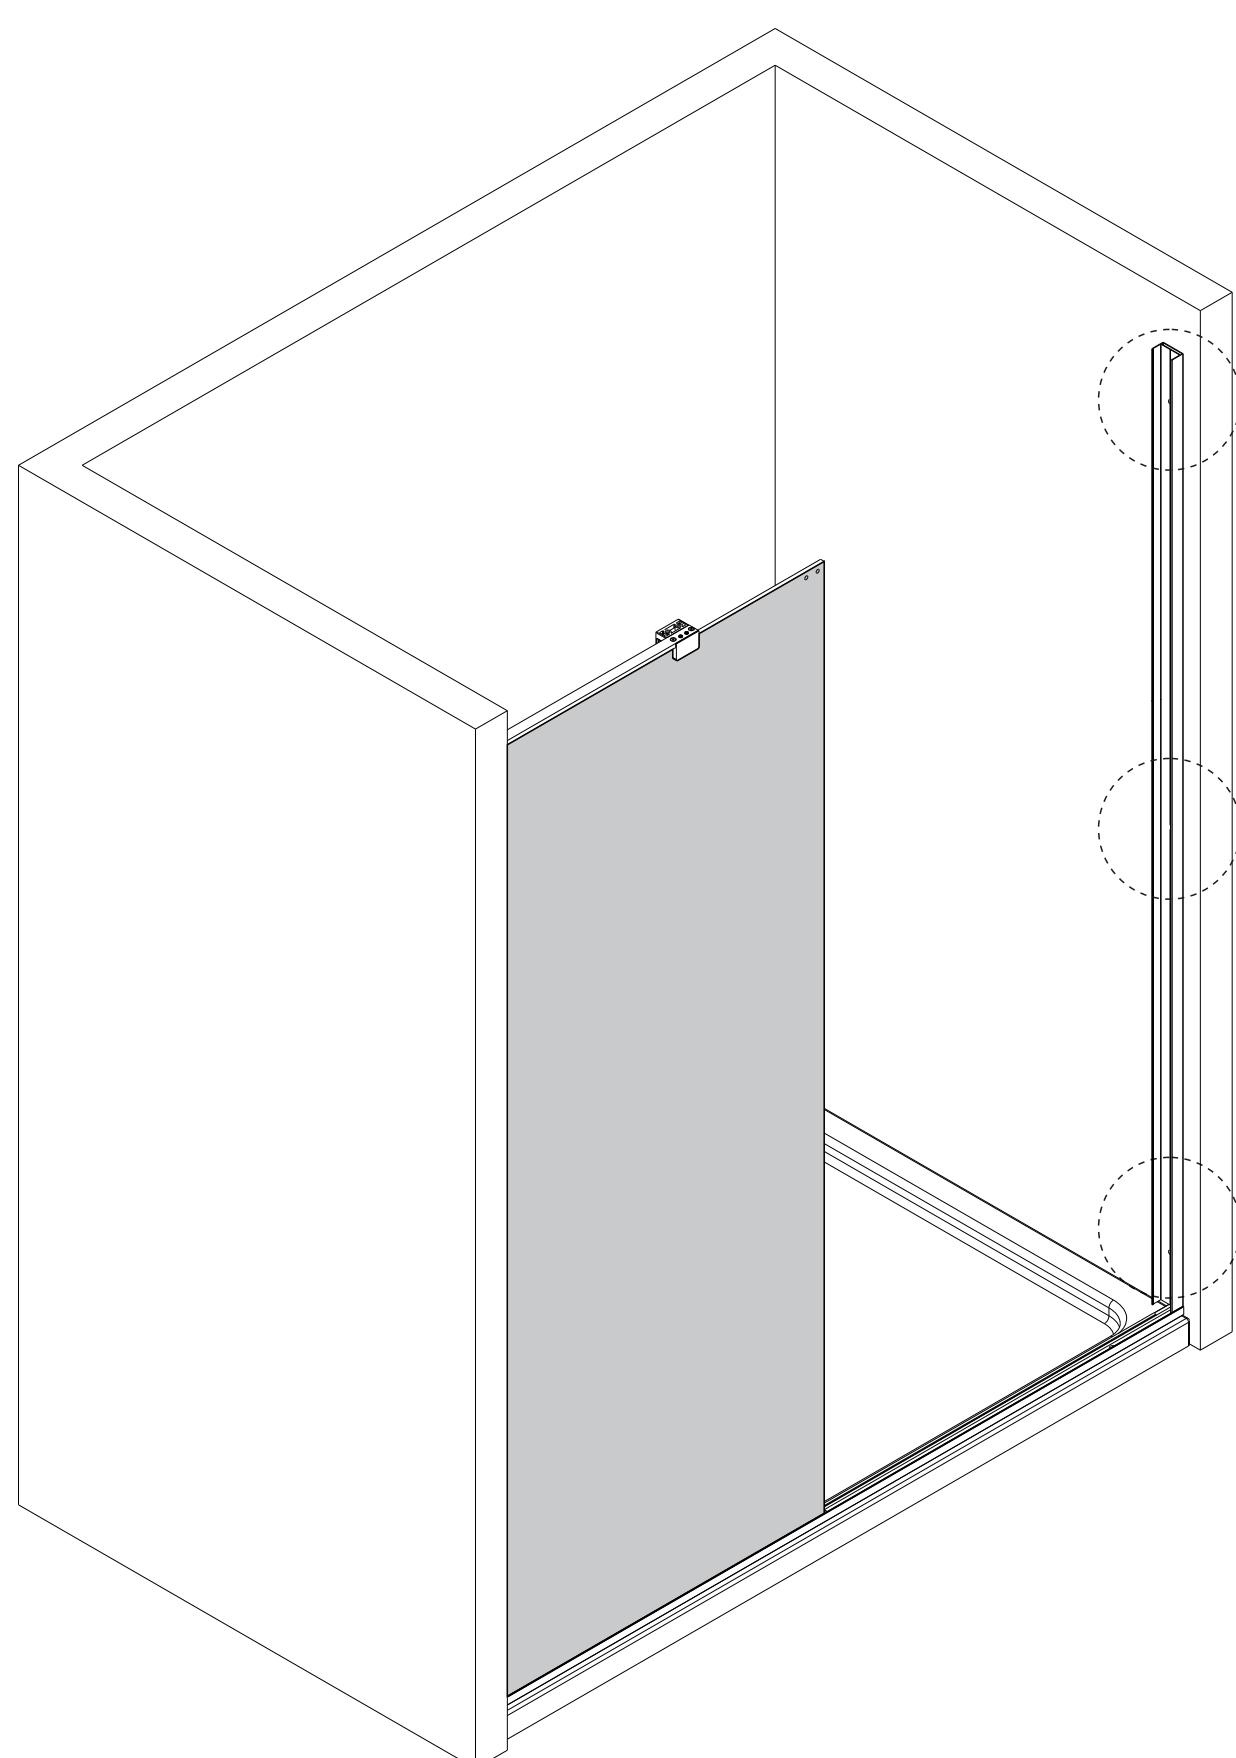


Note: The shower door can be installed left or right, according to the need to determine the installation direction.


14 Install Buffer Strip(L)

NOTE

Peel off the double-sided tape on the back of the **Bumper Strip (L)** and install it on the **Wall Jamb (K)**, paying attention to the installation direction as Fig.a & Fig.b and Fig.c .

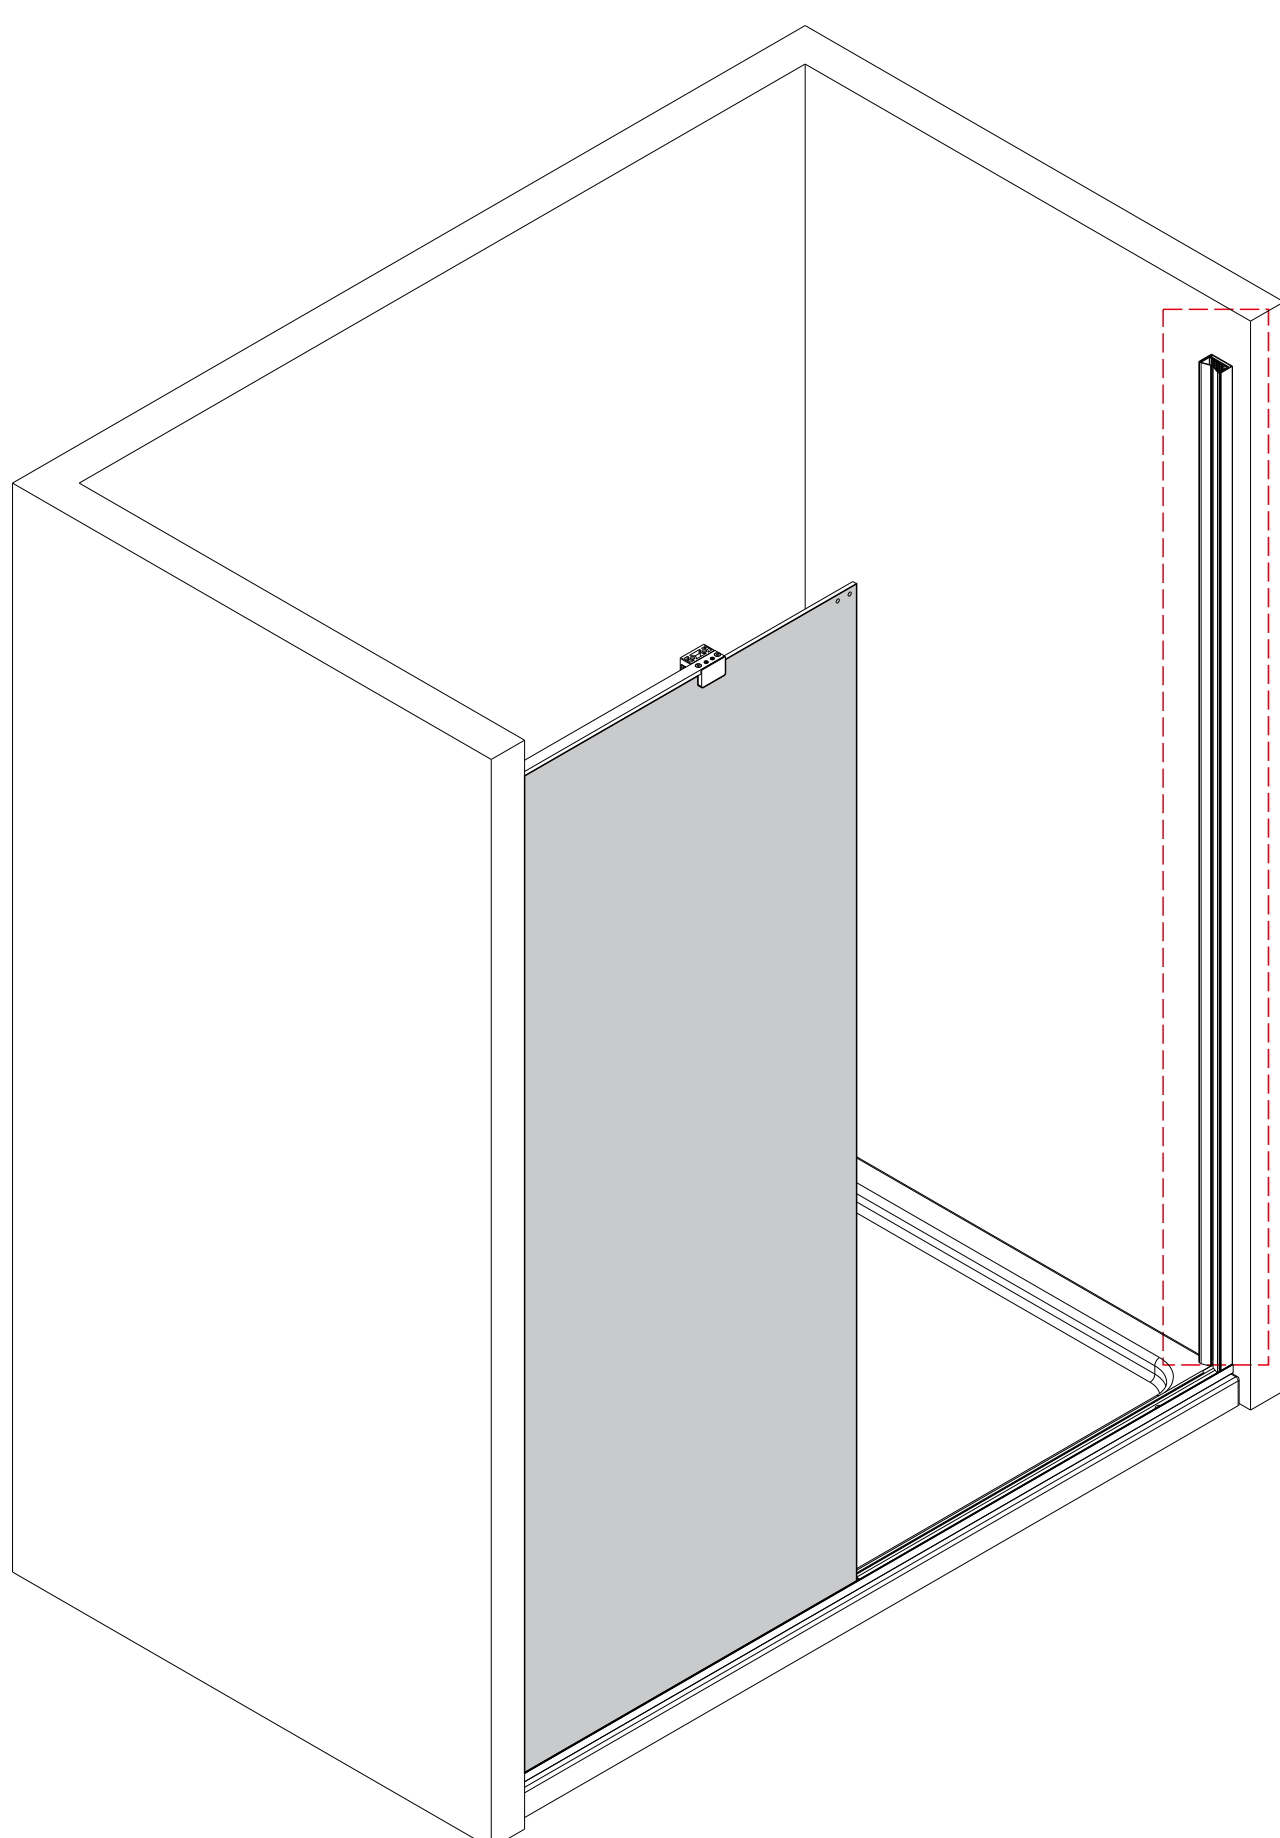

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

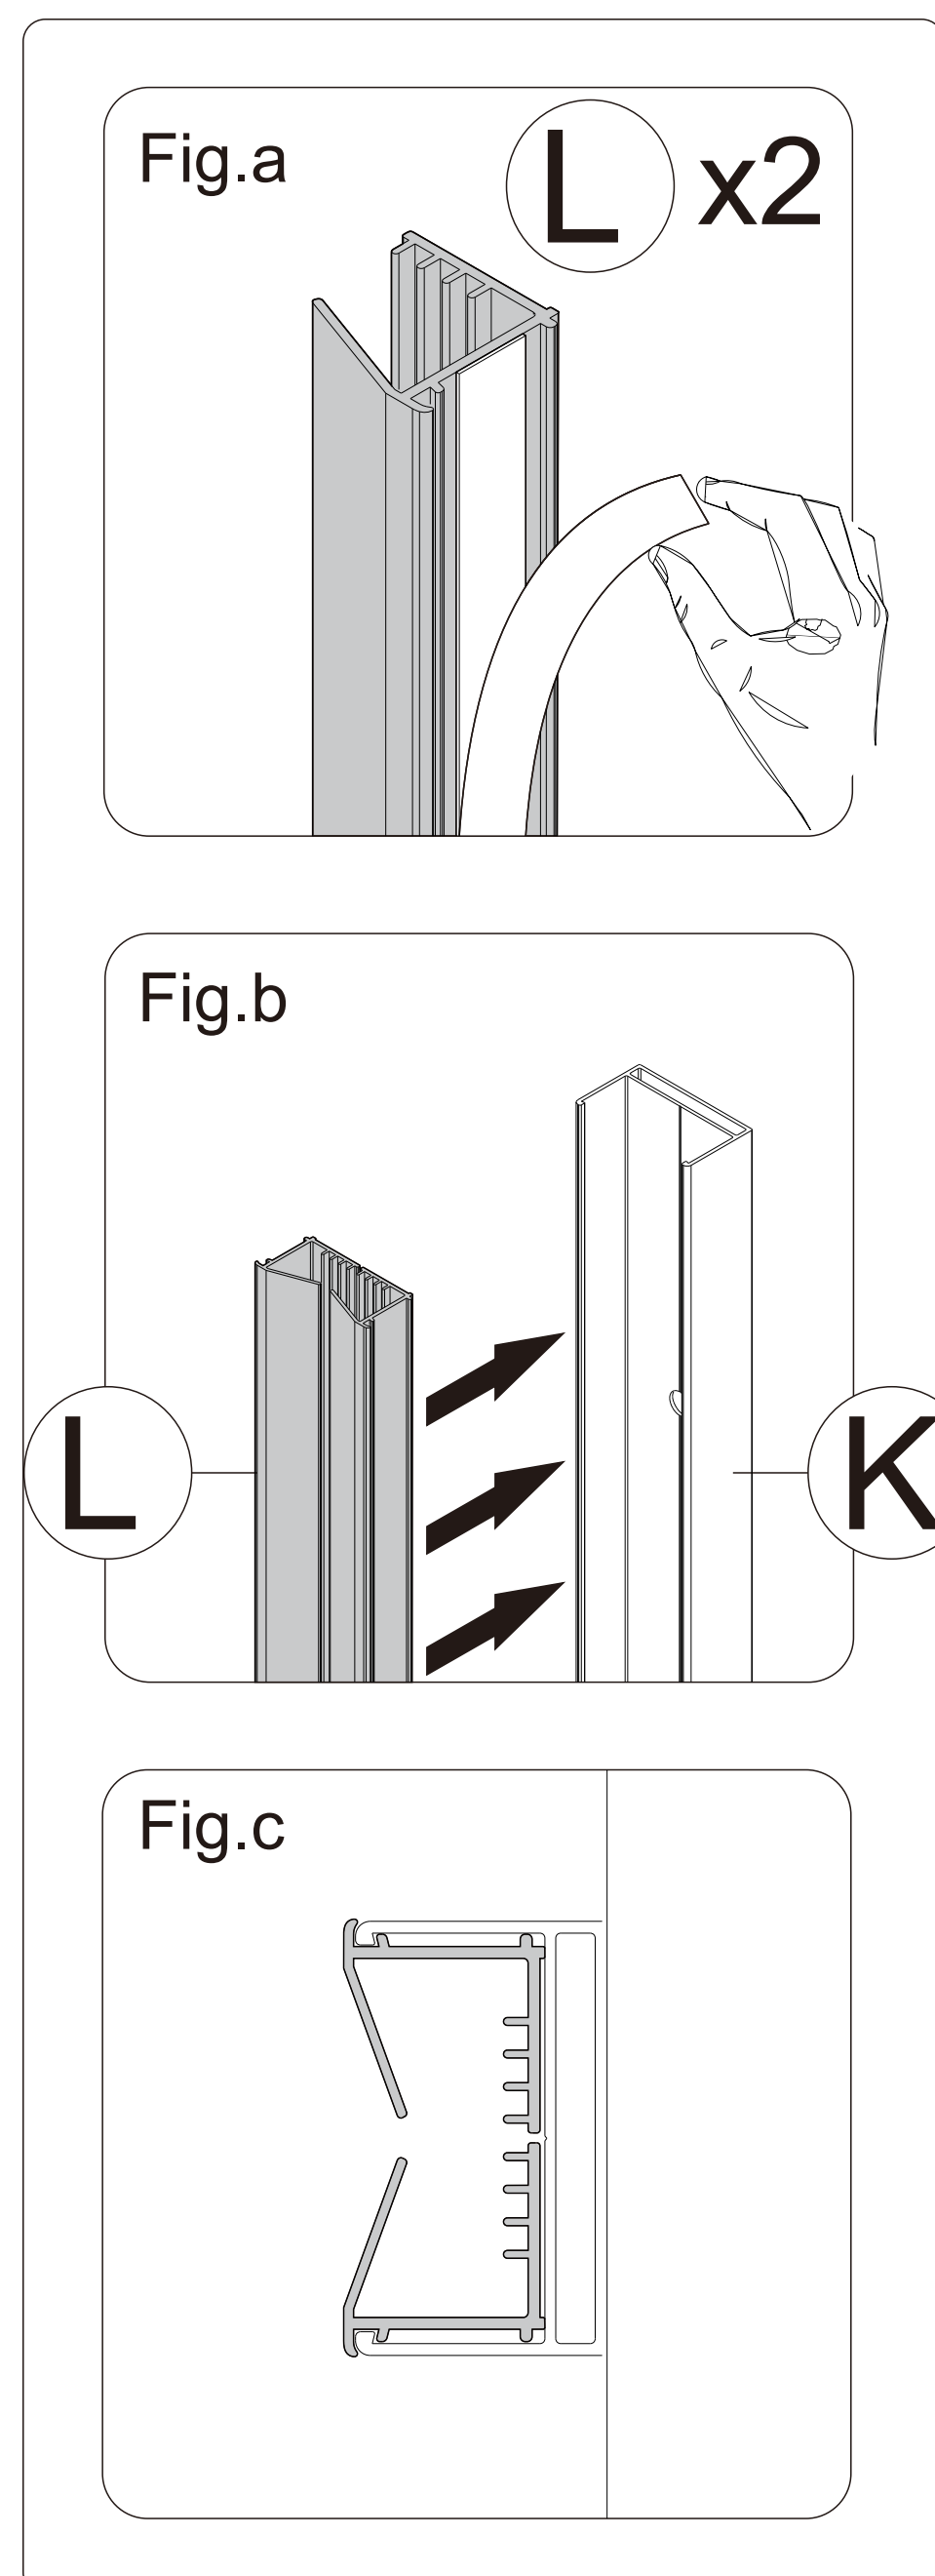

15 Install the **Rollers(Q)**

NOTE

Take a part **Roller(Q)** as Fig.a and install part of it as Fig.b

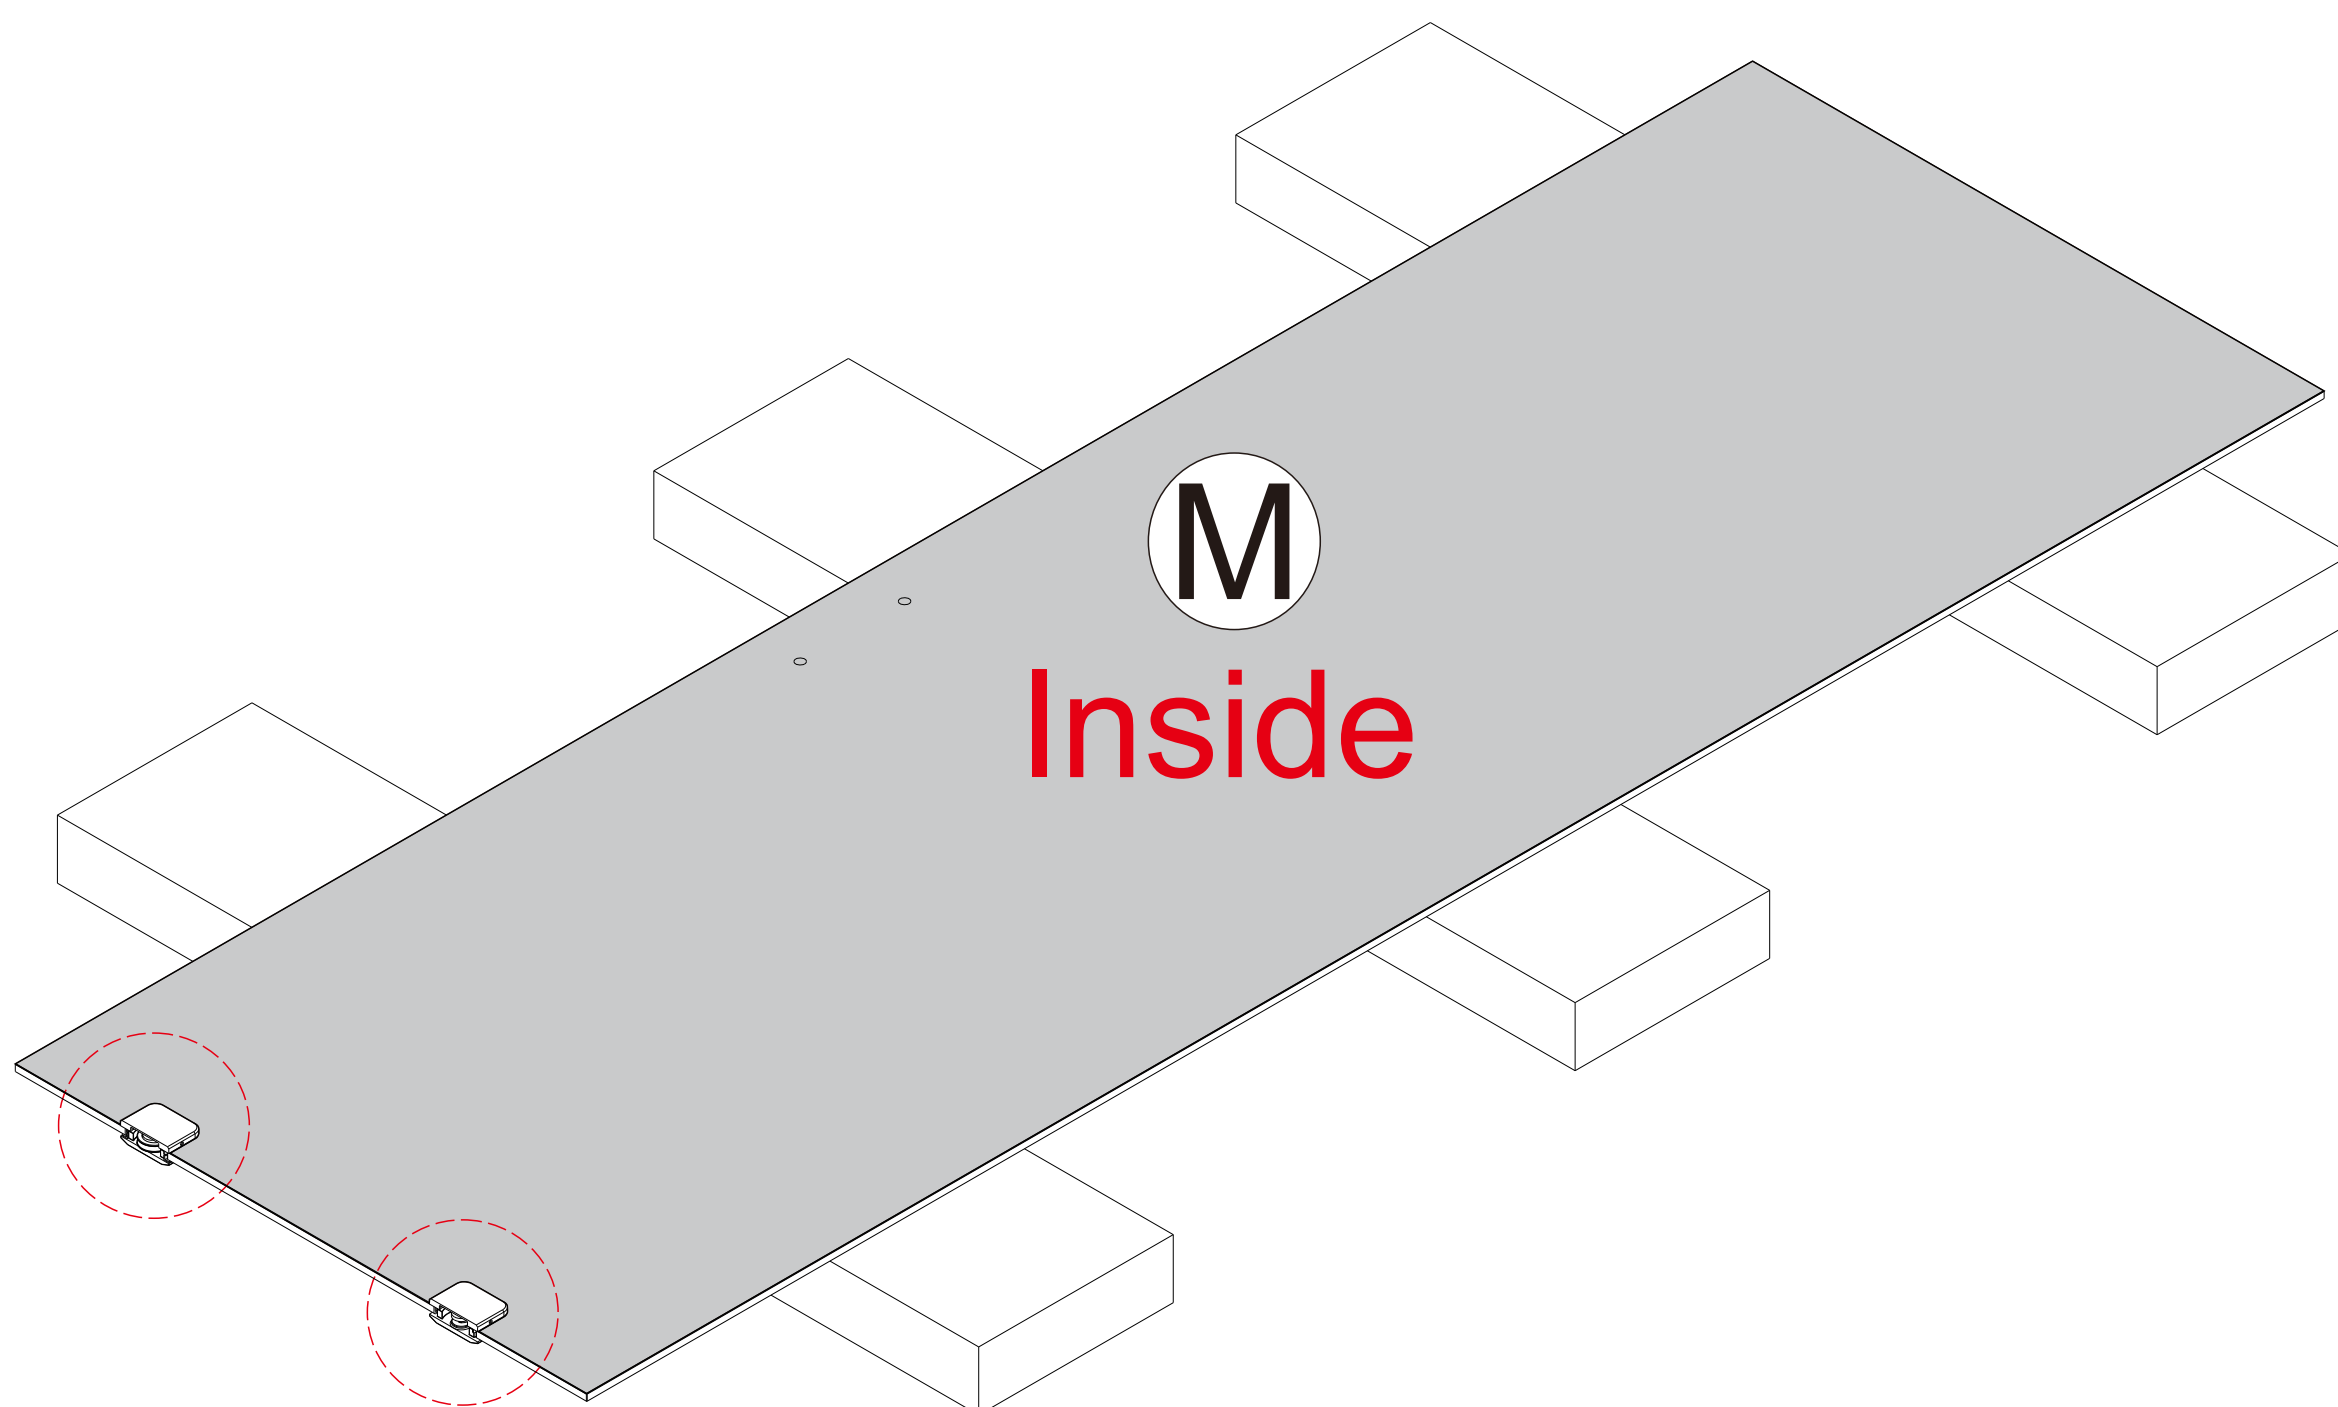


Fig.a **Gasket and Rollers**


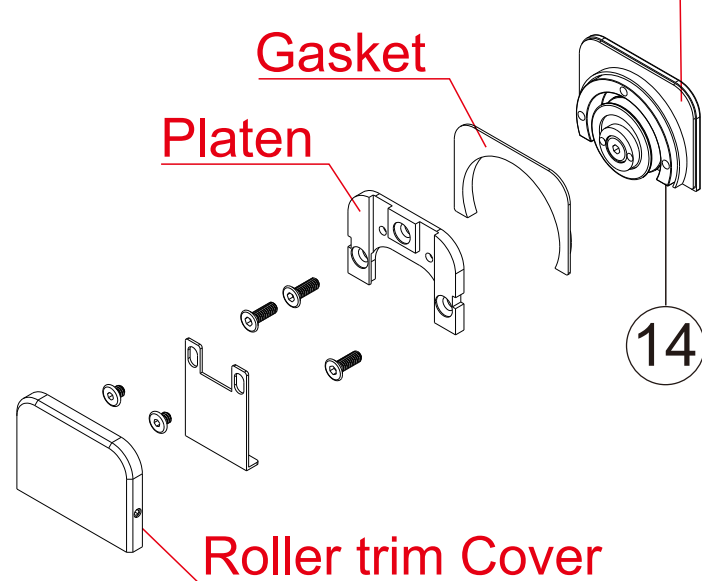


Fig.b



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

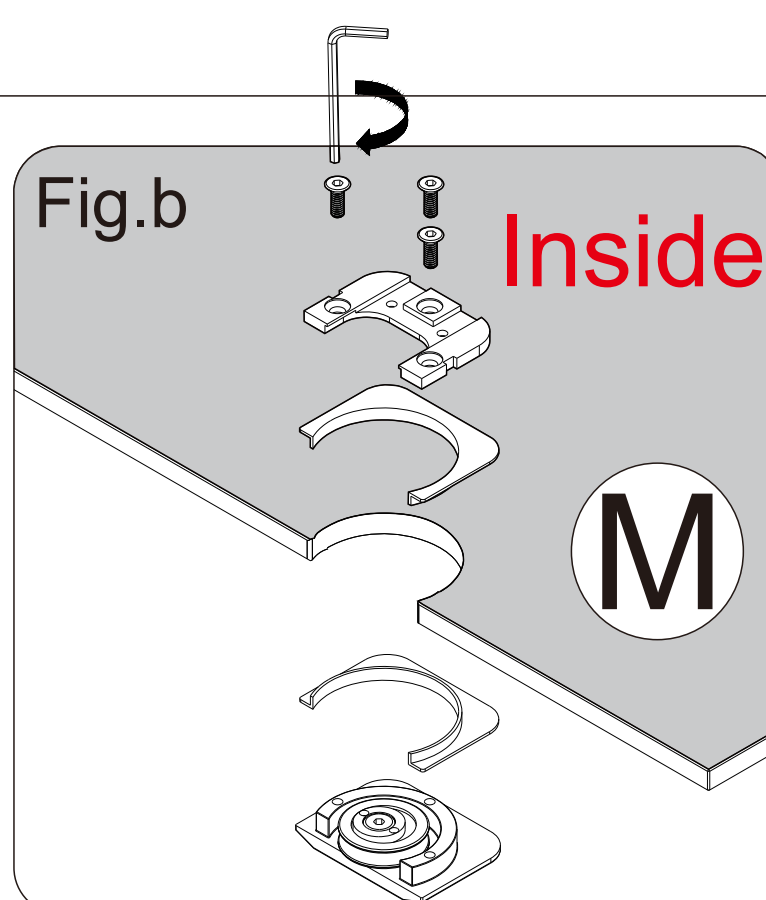


CAUTION: Do not put glass directly on the ground

16 Install the **Bottom Anti-Water Strip(O&P)**

NOTE

1. Install the **Bottom Anti-Water Strip(O&P)** on the **Glass Door(M)** as Fig.a and Fig.b .

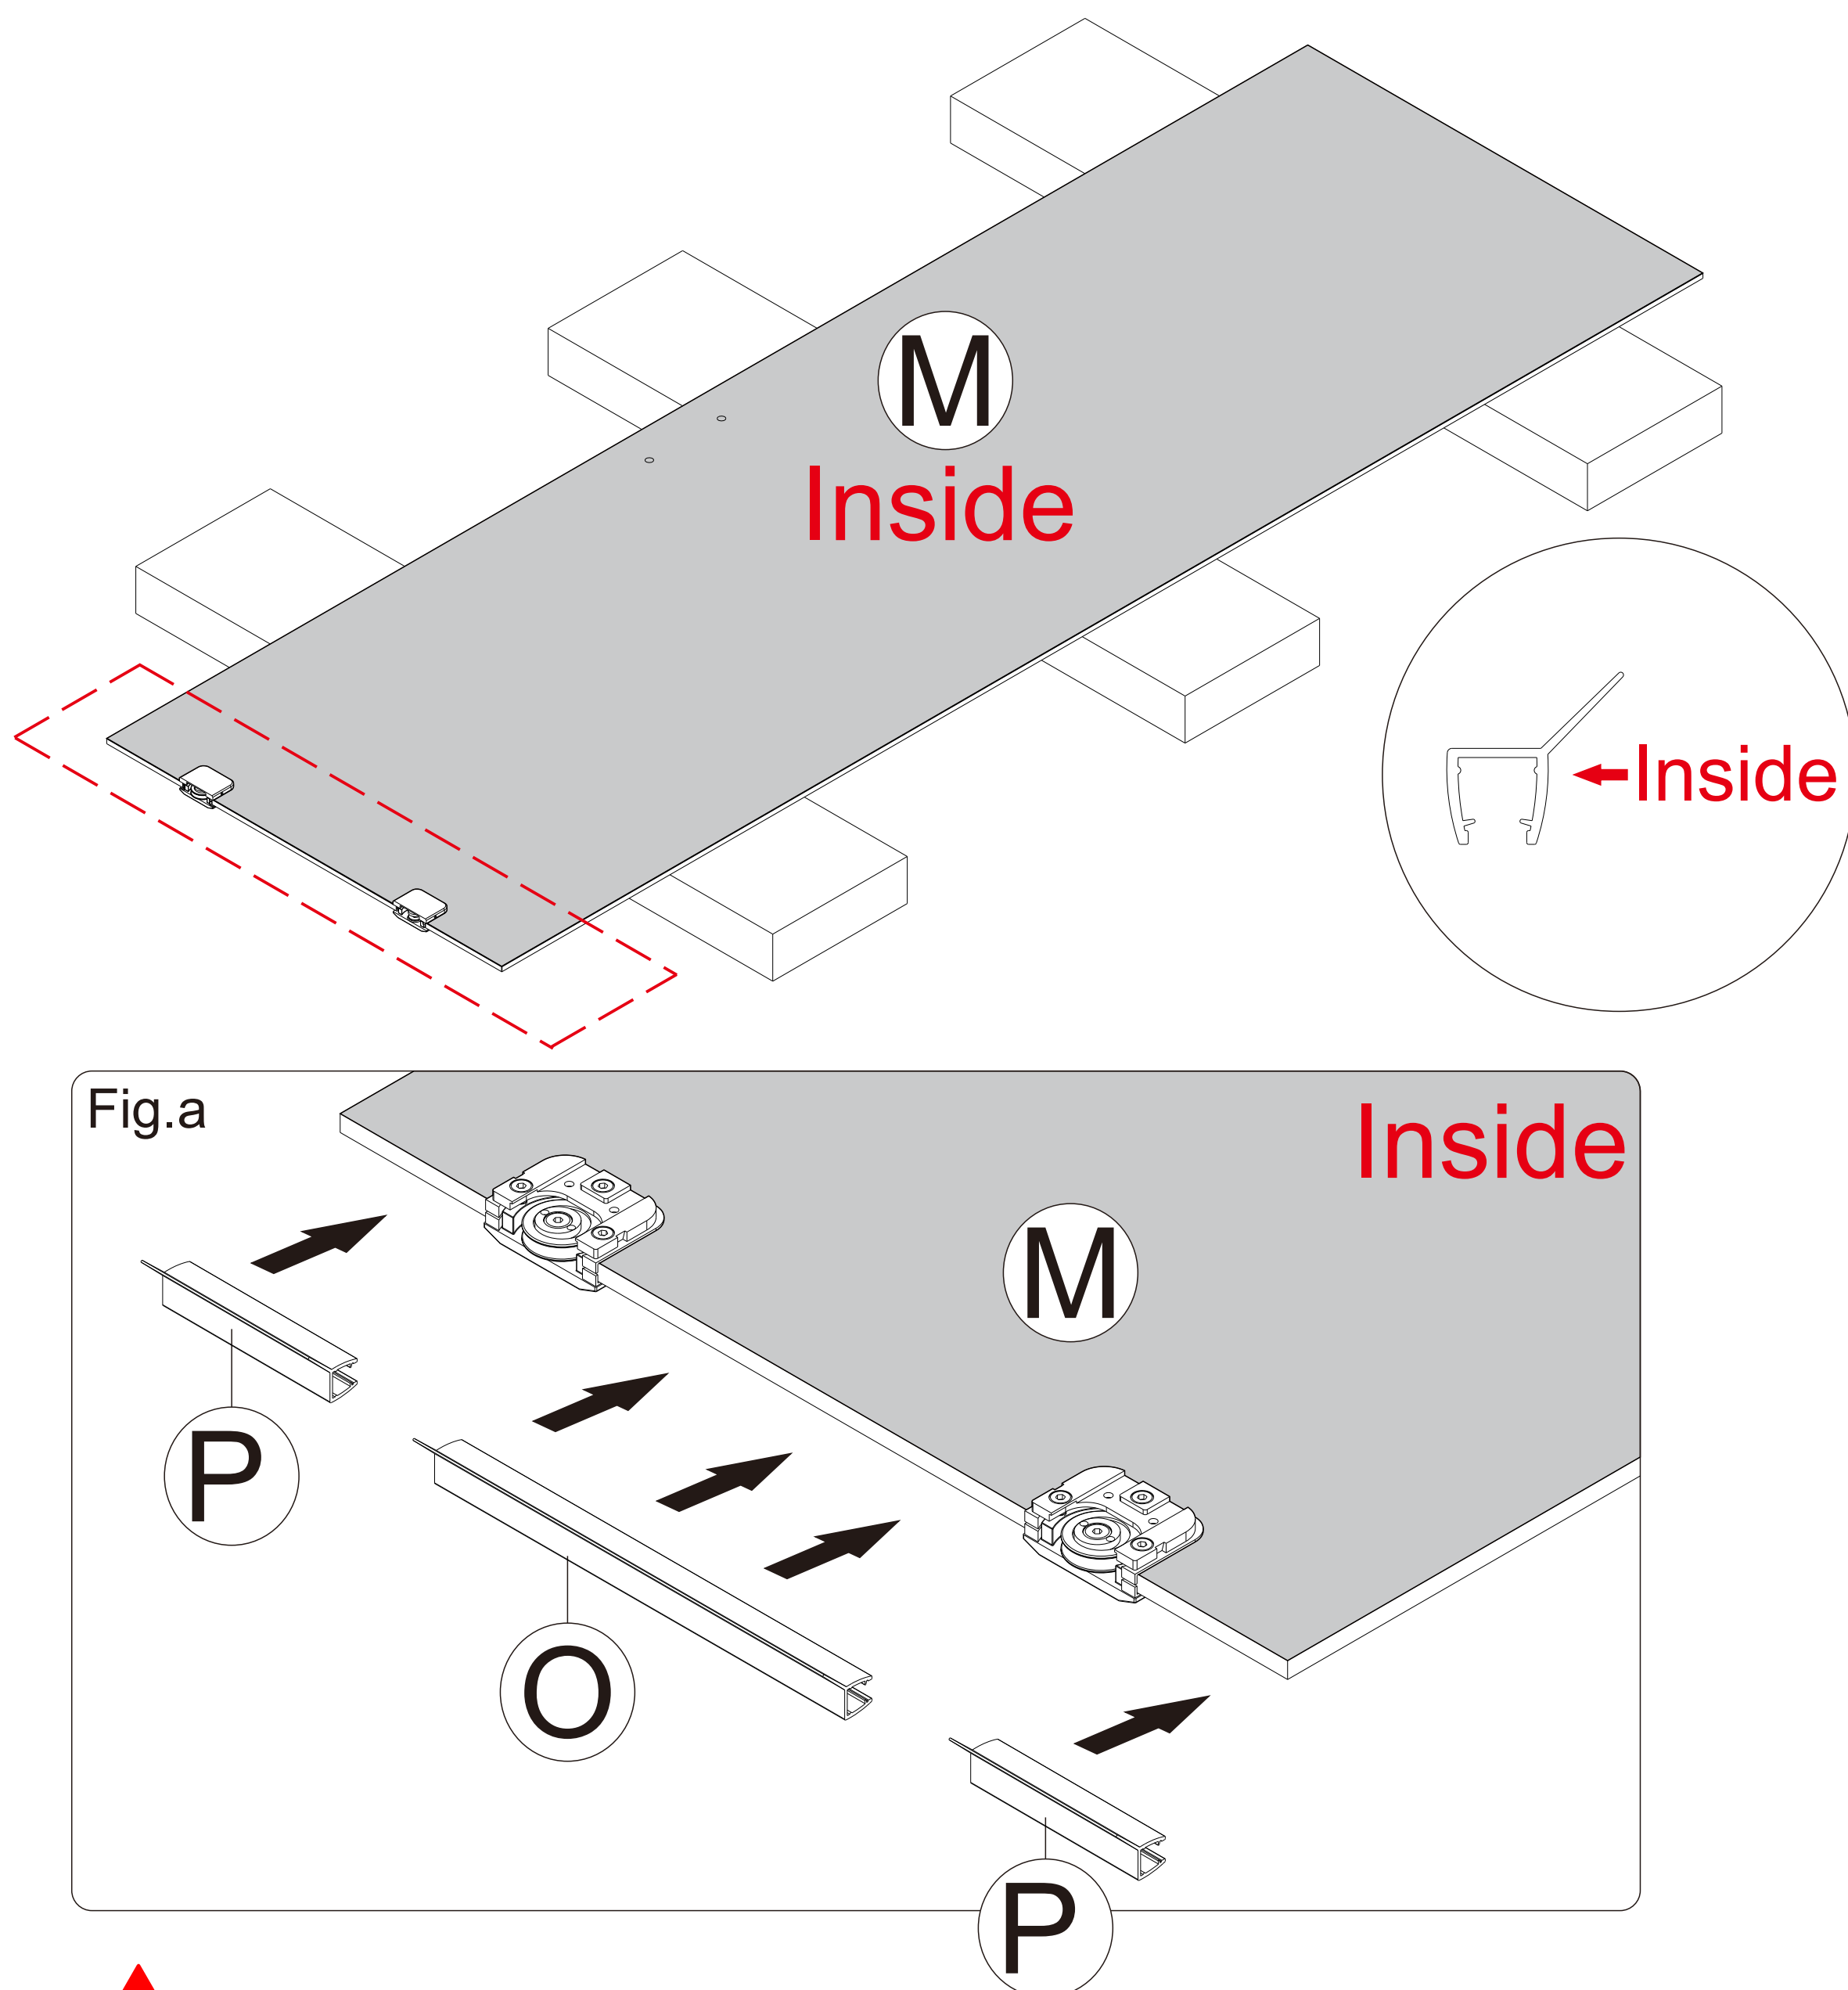



Note: The shower door can be installed left or right, according to the need to determine the installation direction.



CAUTION: Do not put glass directly on the ground

17₋₁


Separate **Guide Block (J)** to part A & part B .

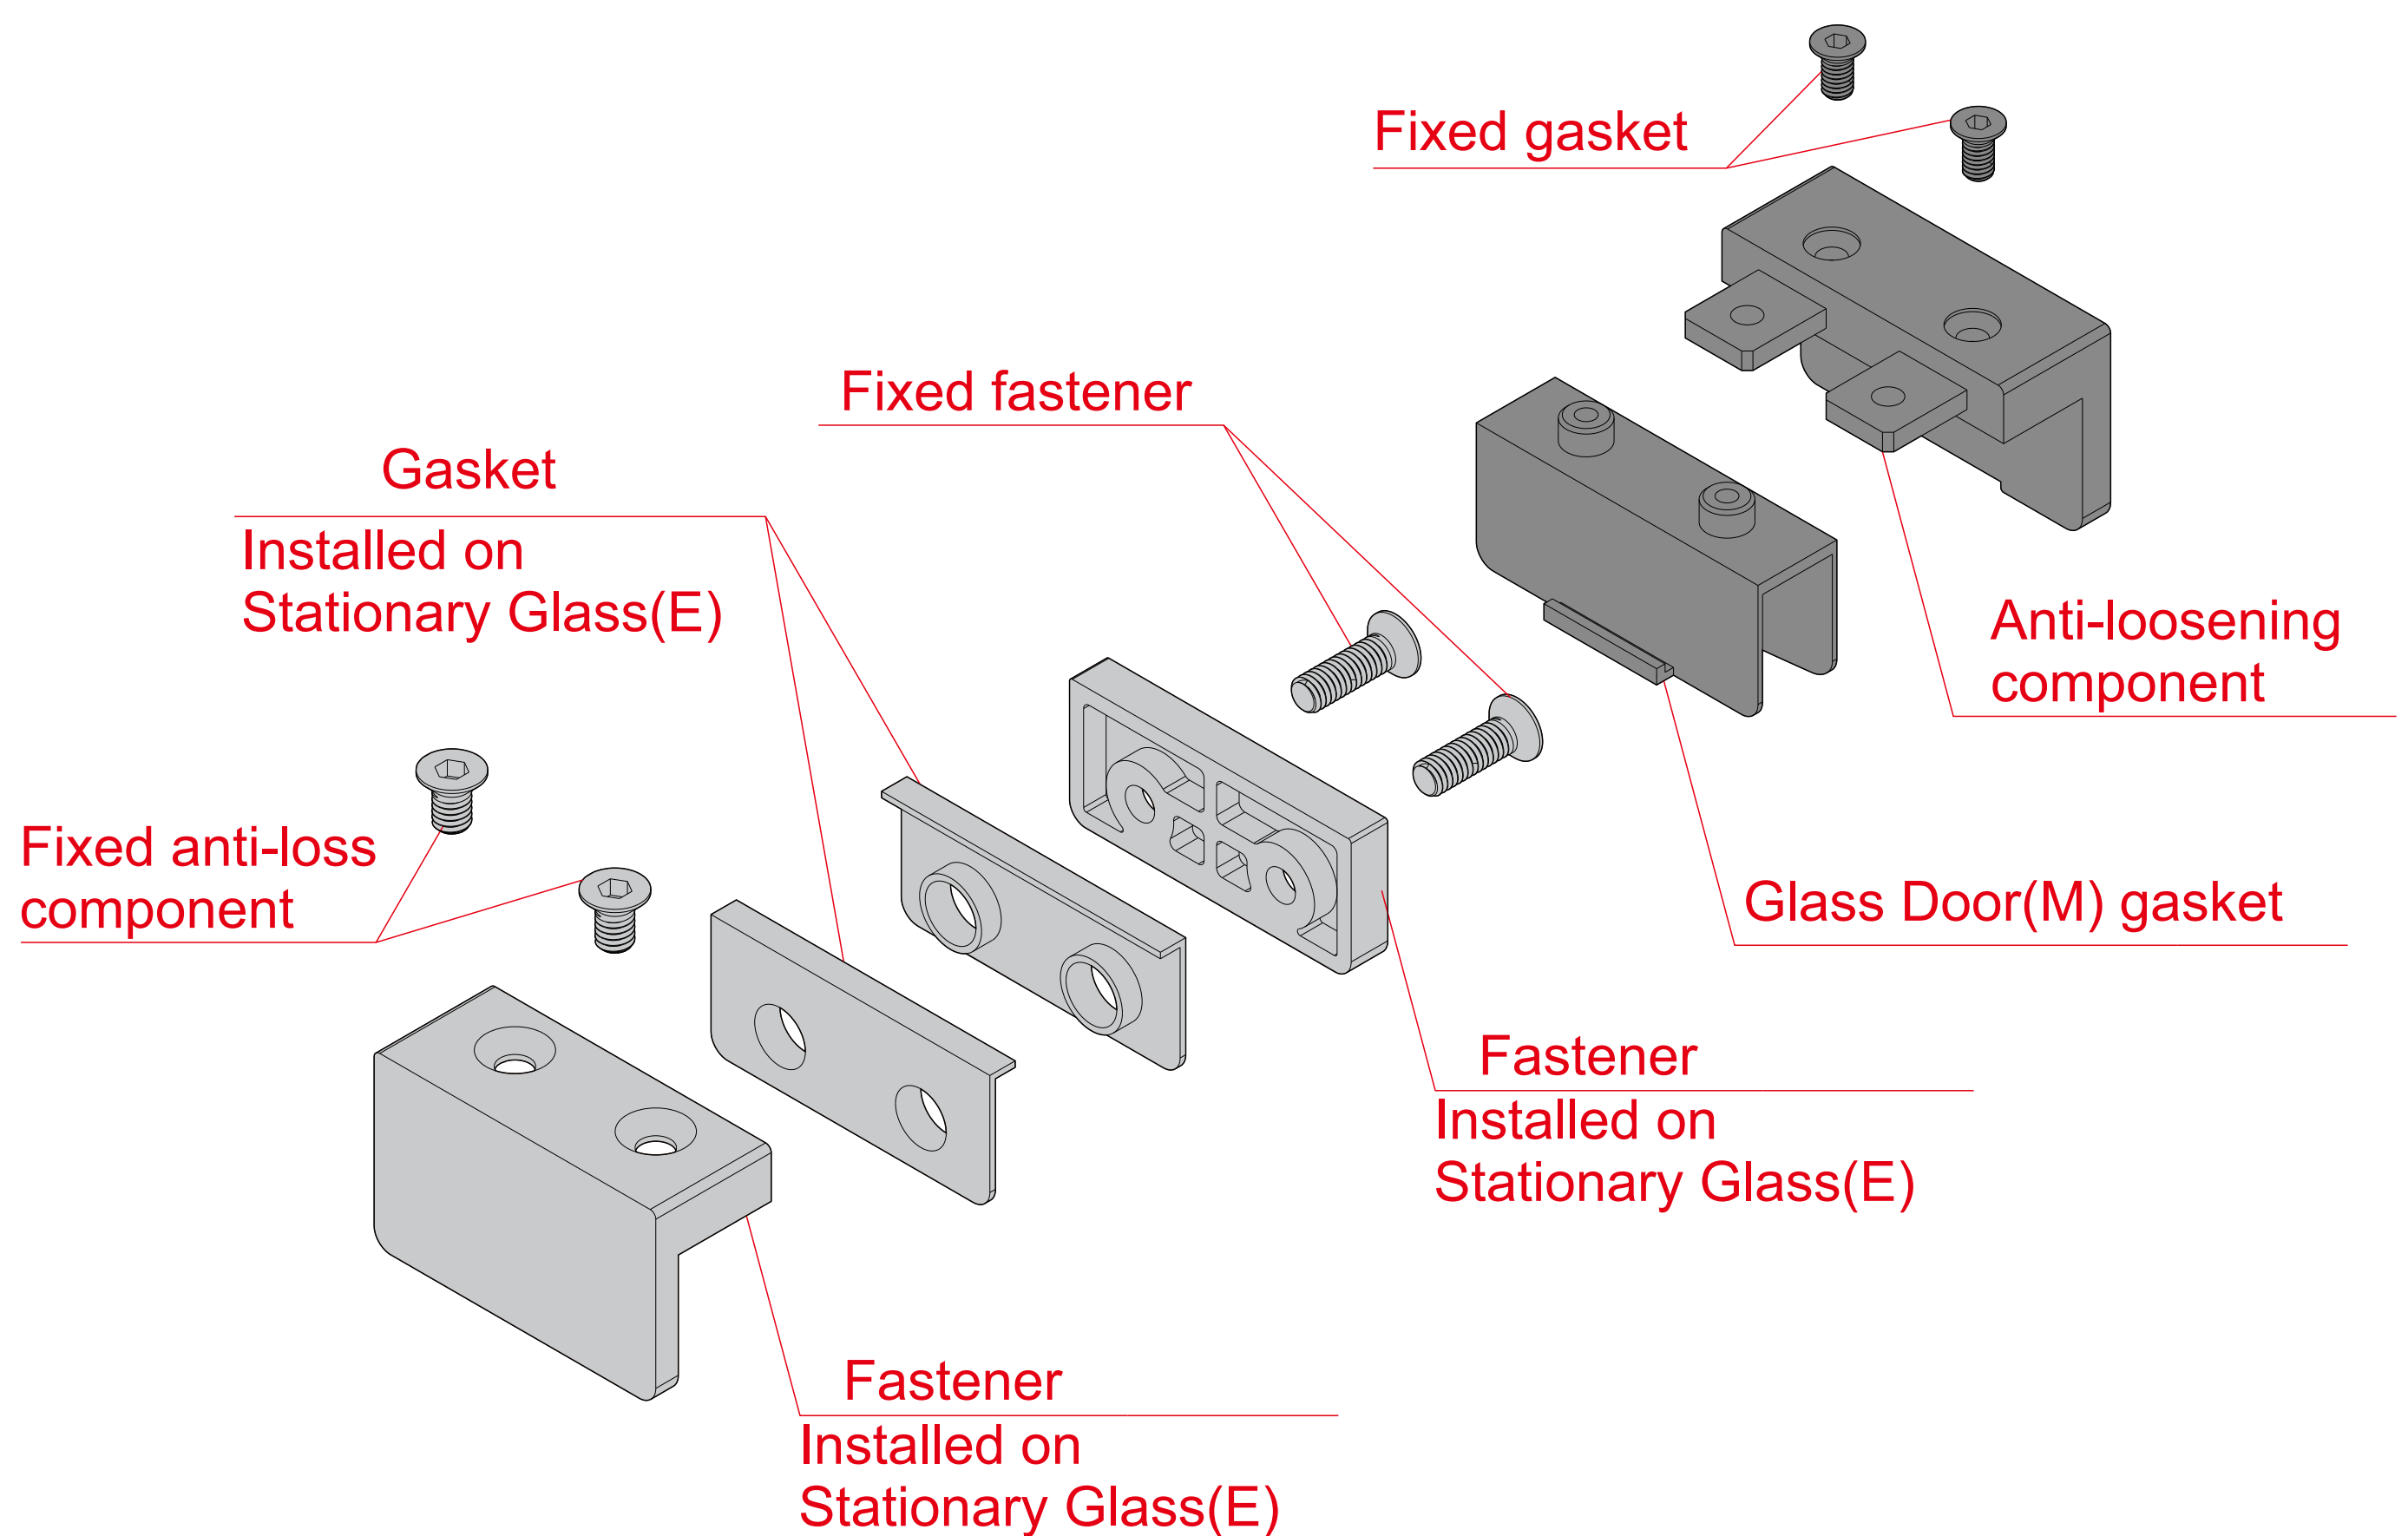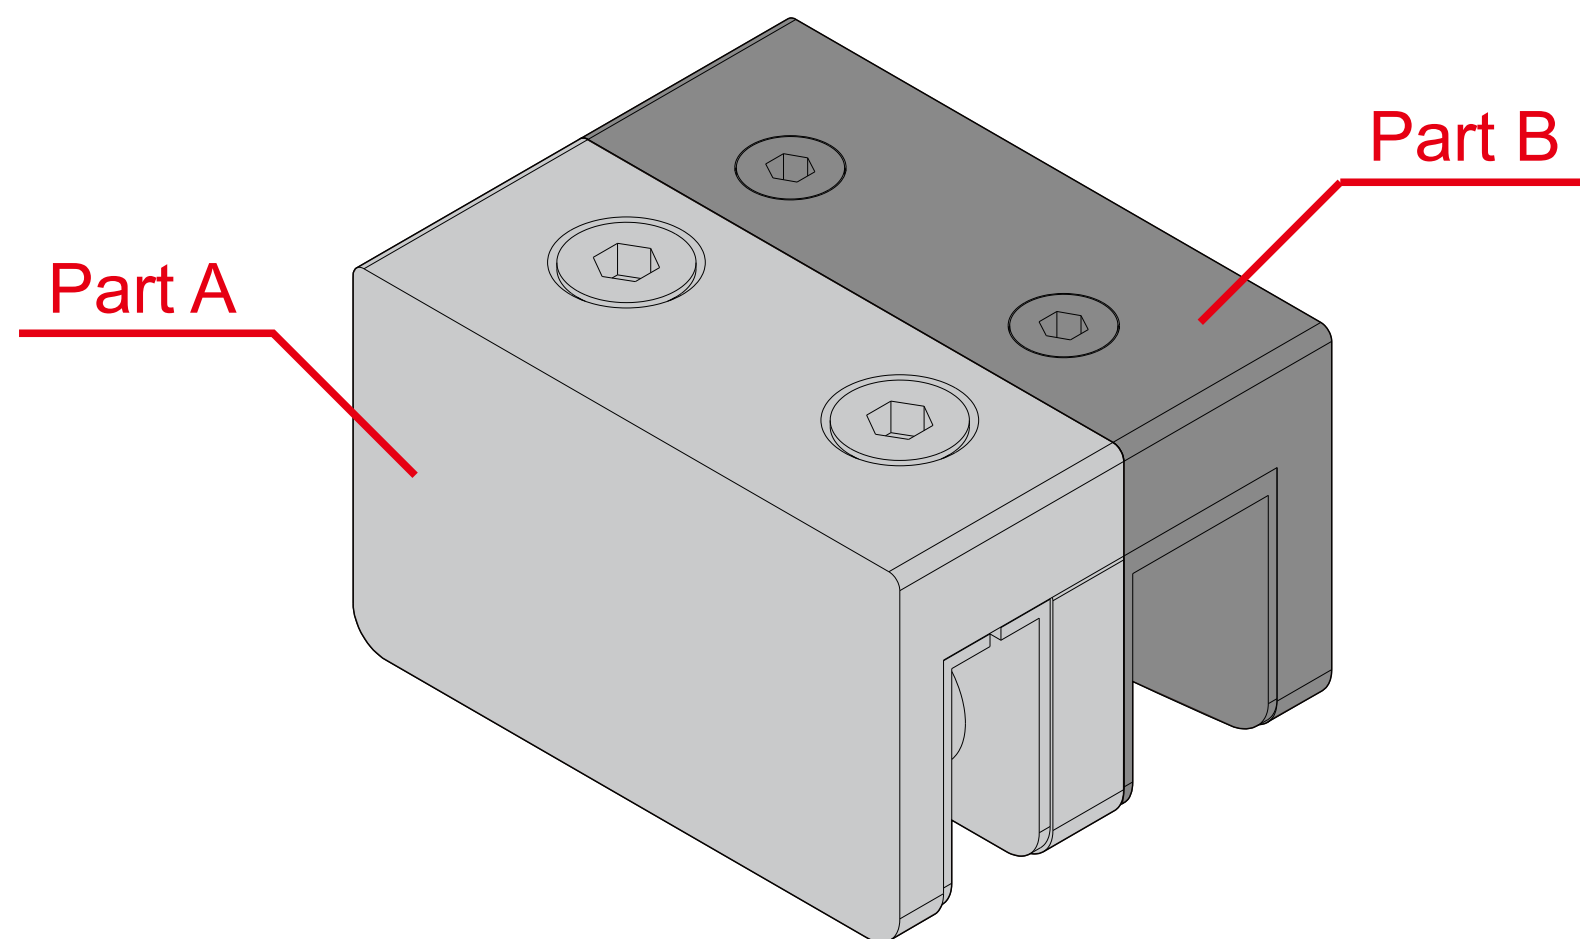

17₋₂ Install Guide Block(J)




NOTE

1. Install the **Guide Block(J) Part A** on the **Stationary Glass(E)** as Fig.a .

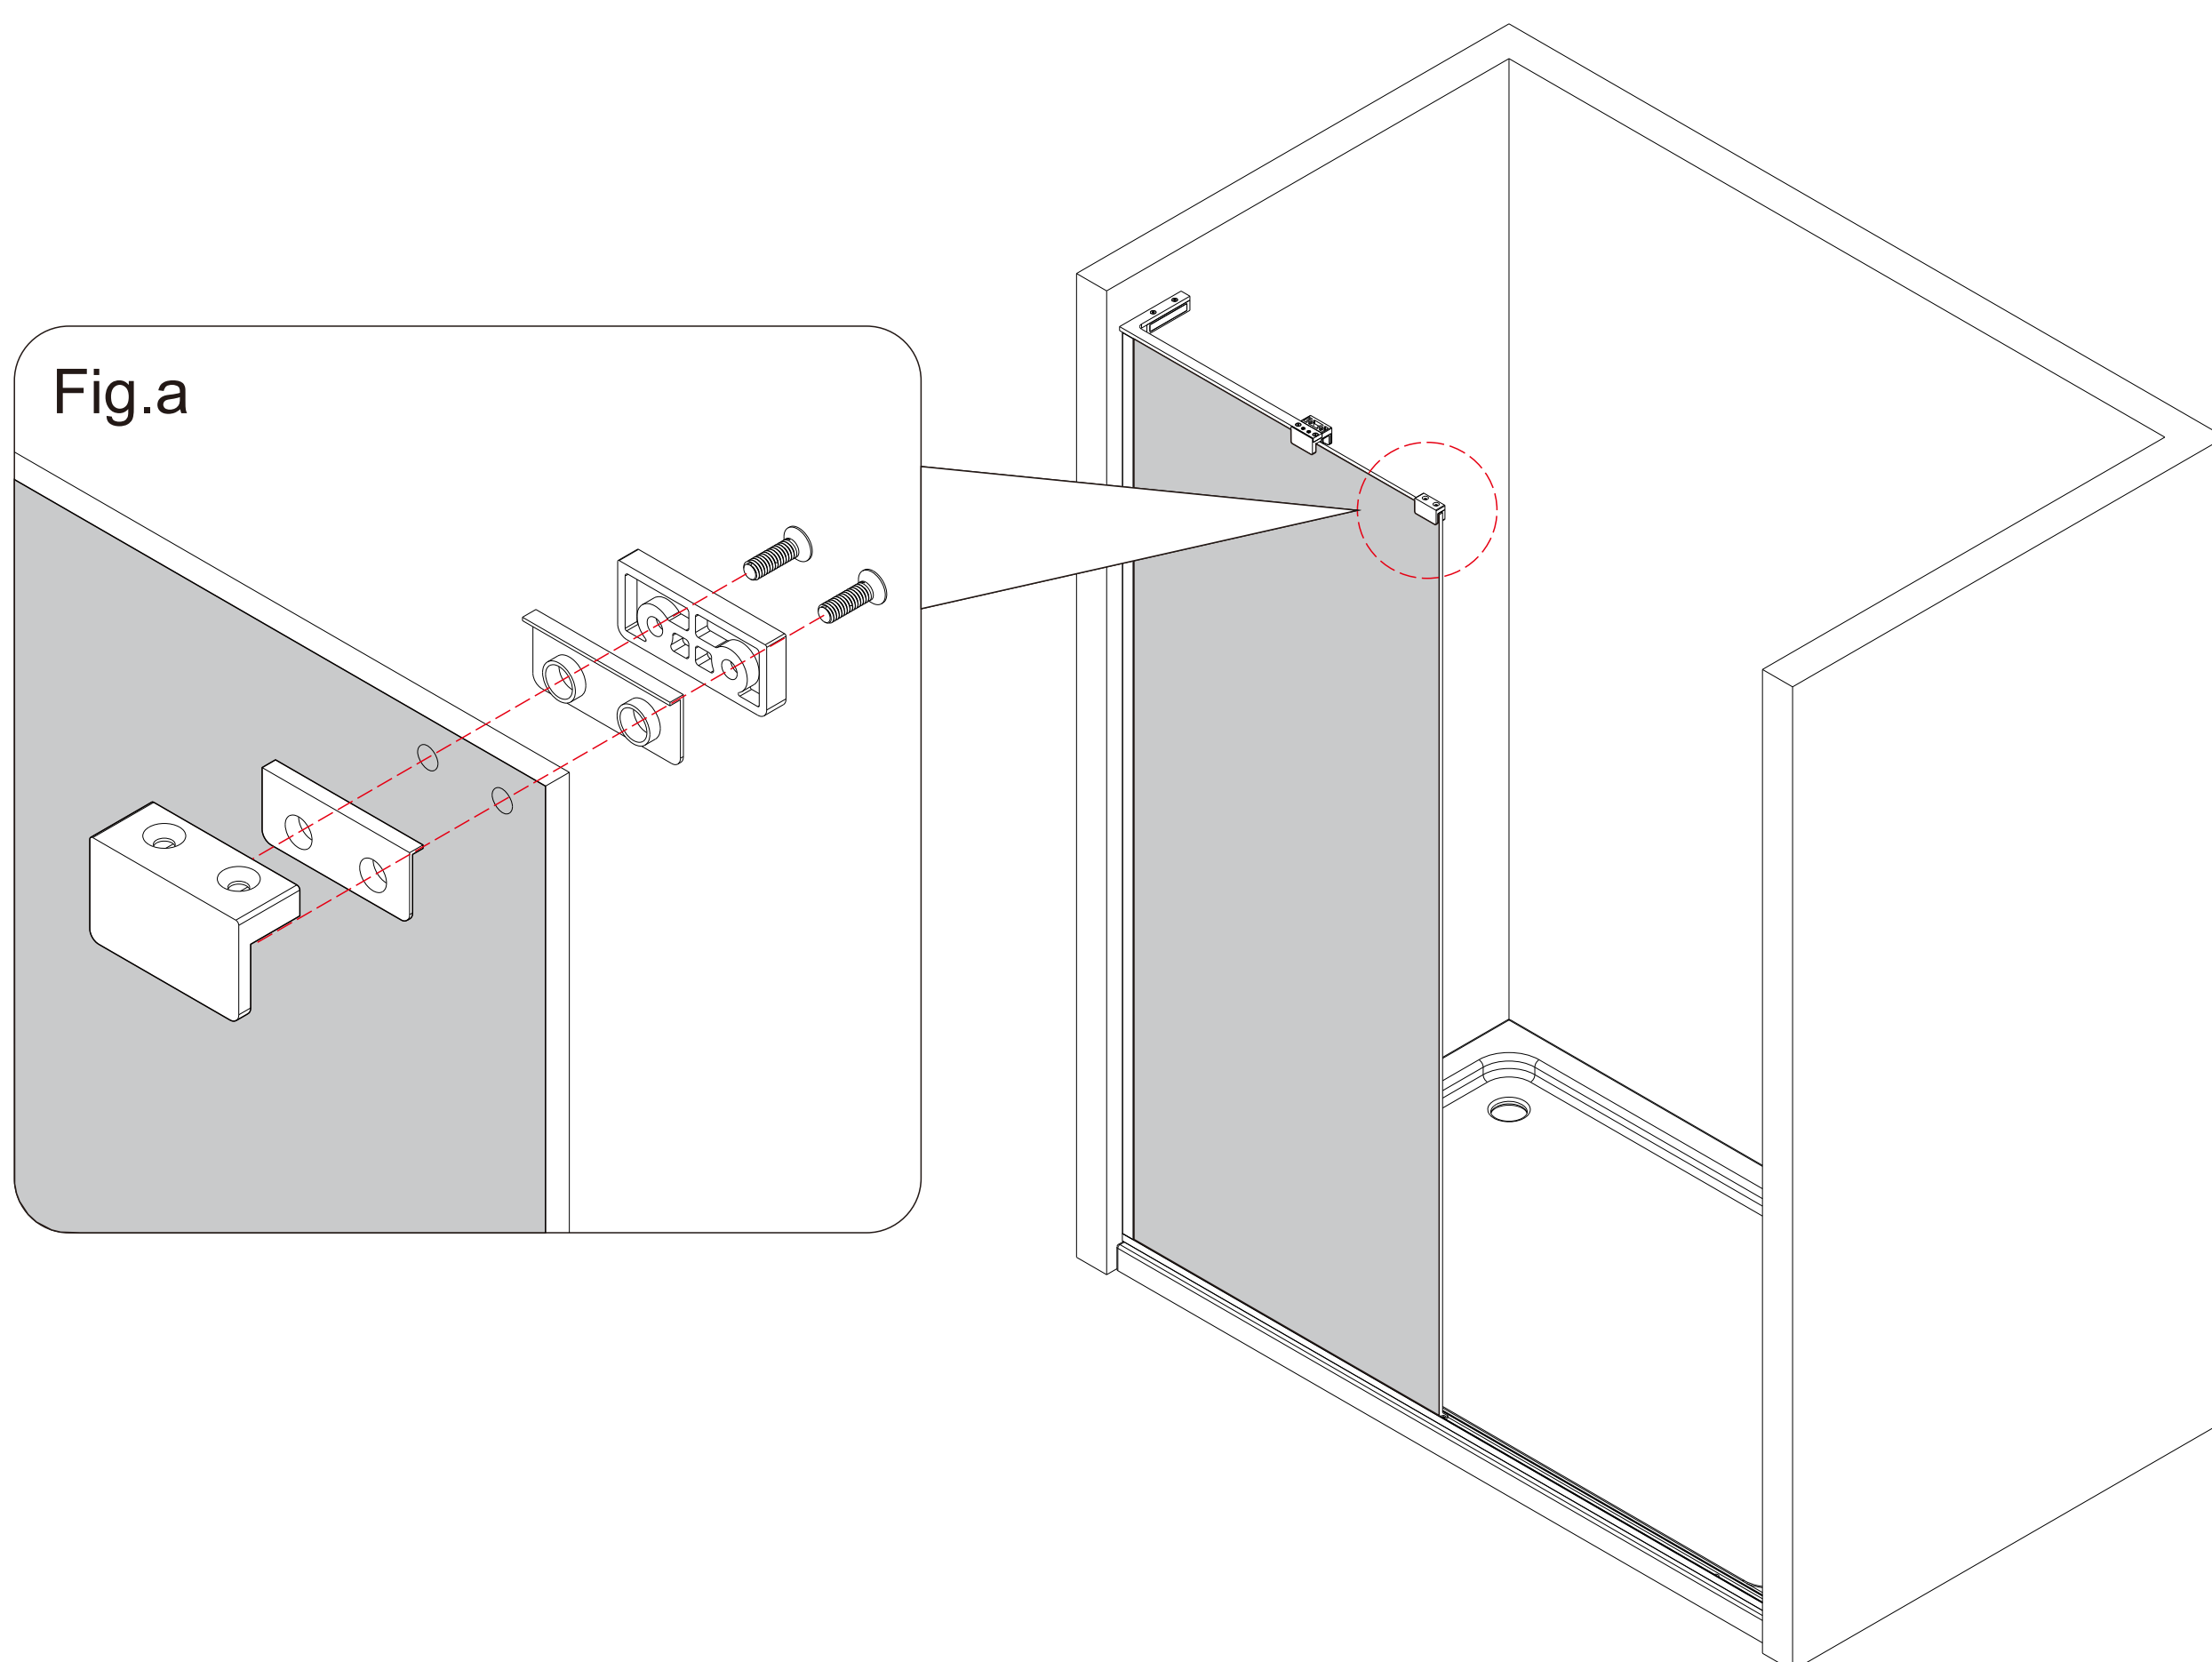


Note: The shower door can be installed left or right, according to the need to determine the installation direction.


18 Install Glass Door(M)

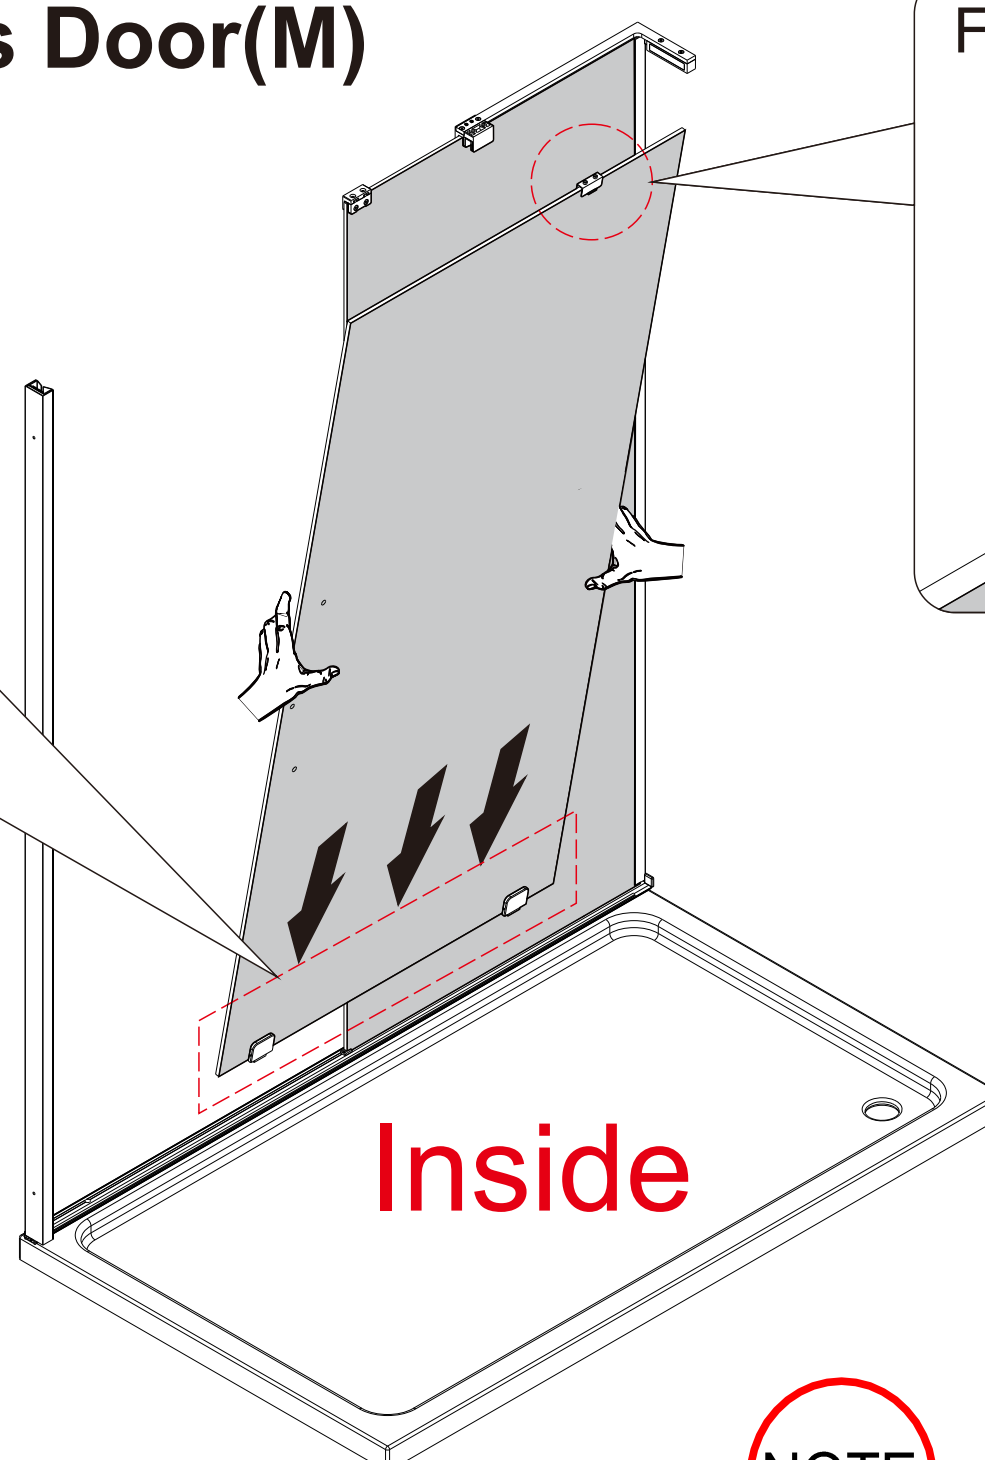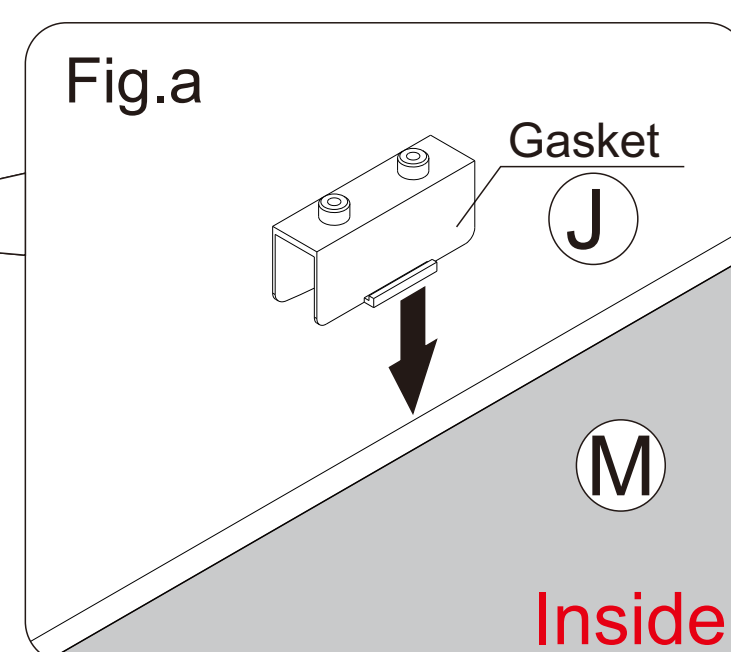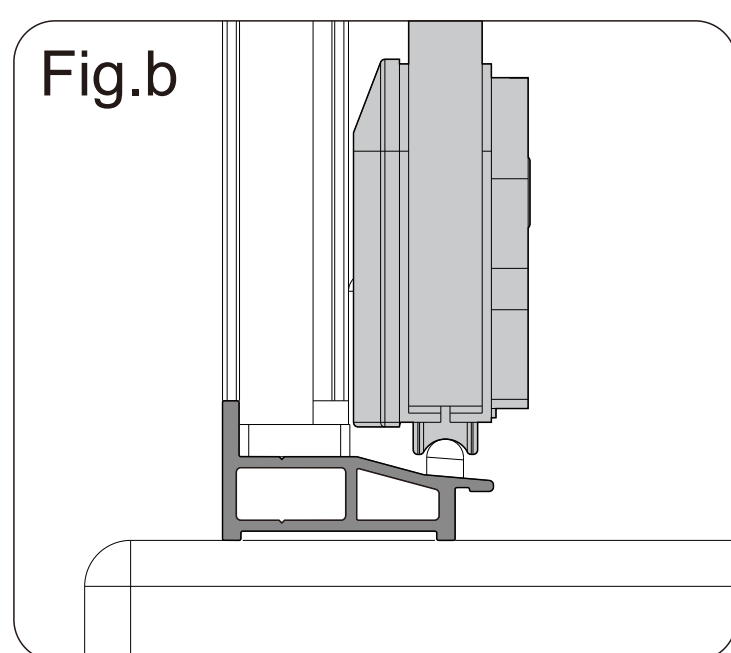


NOTE

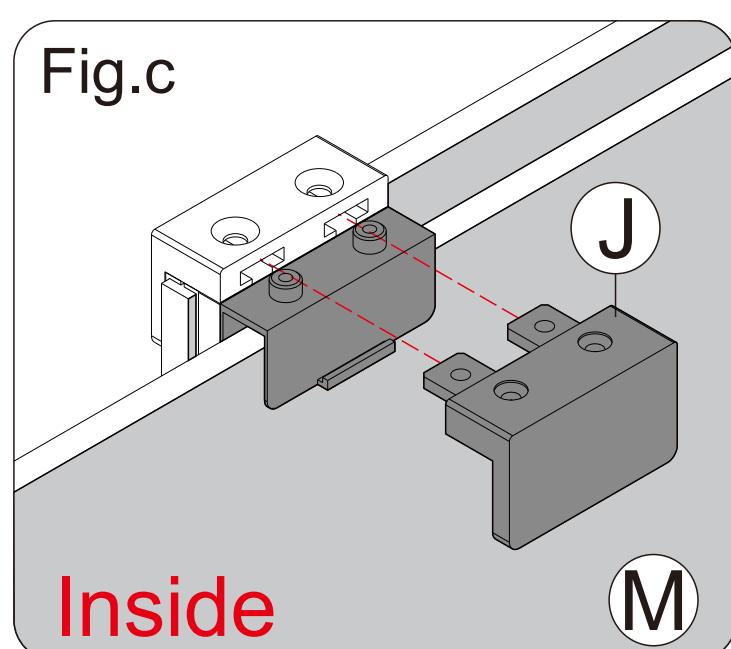



Place the **Guide Block (J) Part B** on the **Glass Door(J)**, put the wheel on the **Bottom Rail(I)**, install the guide block fasteners, and then secure it with screws.

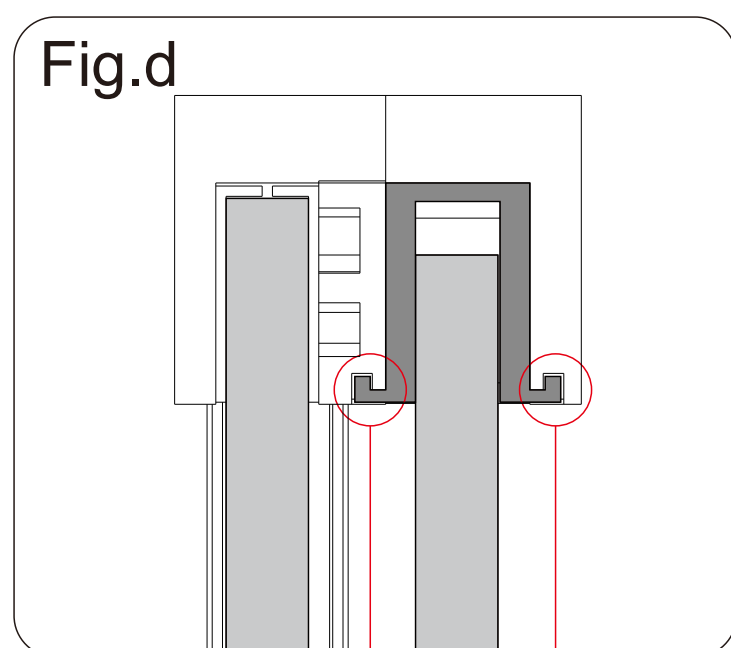

Pay attention to proper gasket installation

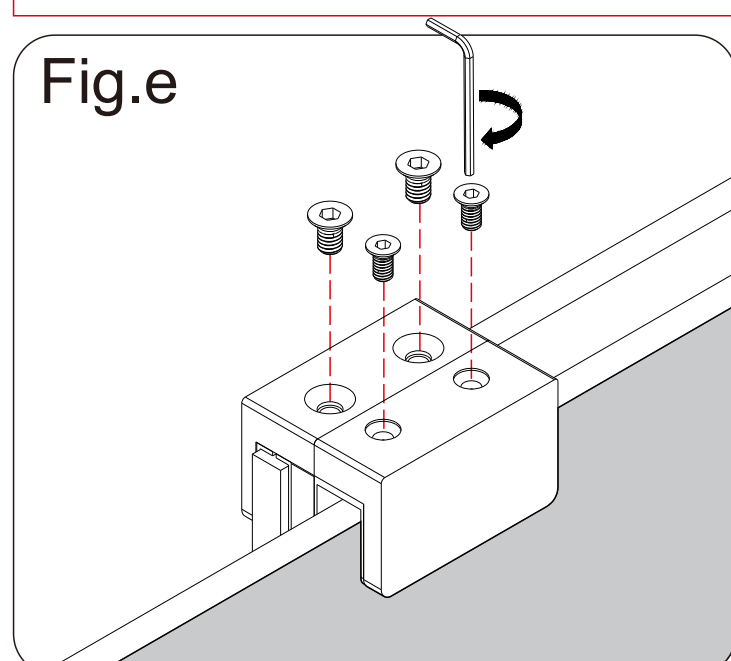




Note: Do not bump the edges of the **Glass Door(M)** against the **Pull Rod(A)**

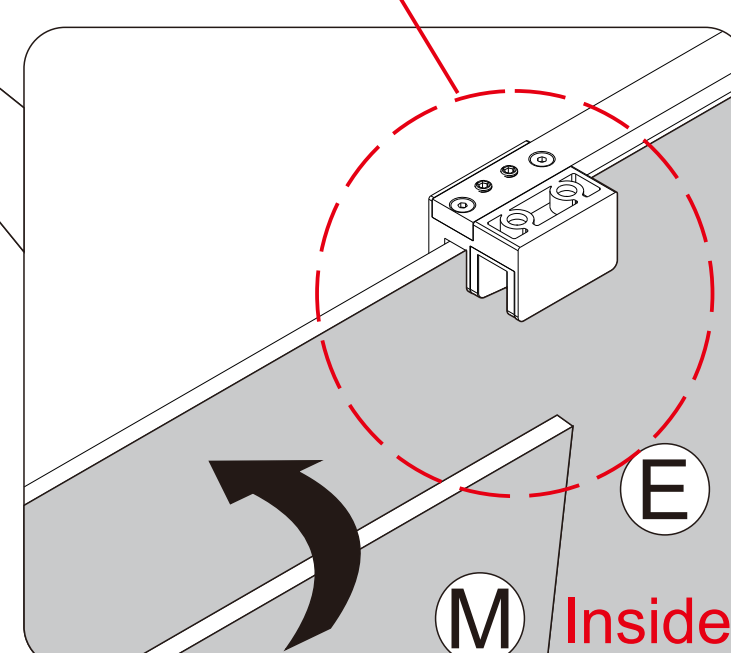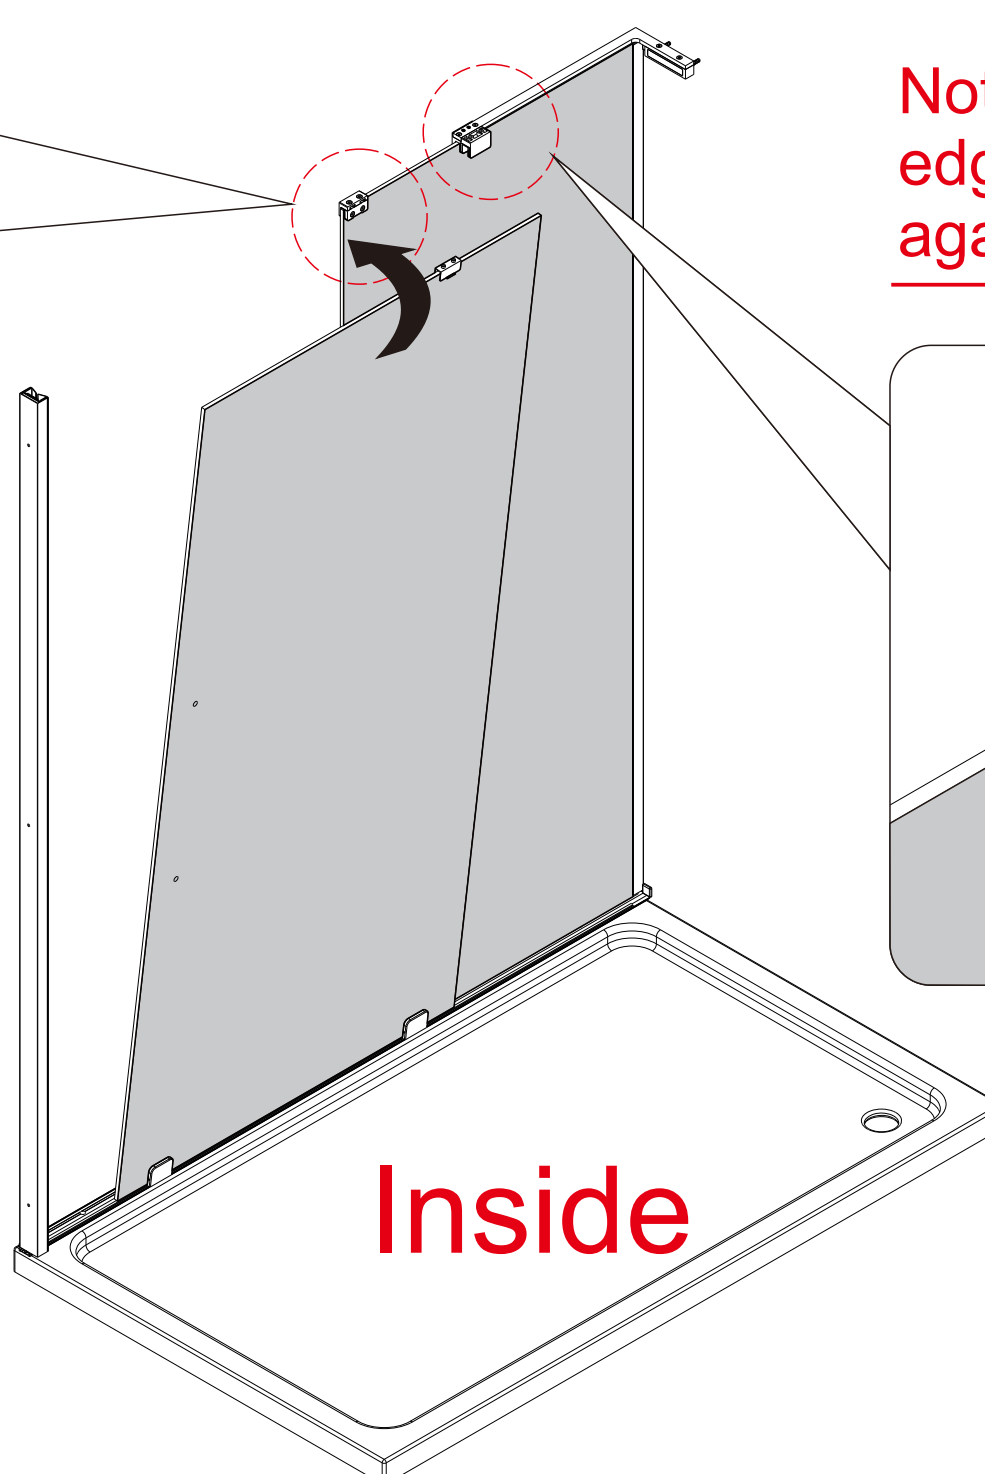

19 Install Glass Door(M)

NOTE



1. Slightly loosen the **Rollers(Q)** with a hex wrench as Fig.a, adjust it up and down with the wheel wrench as Fig.b, and adjust the **Glass Door(M)** to be level as Fig.c .

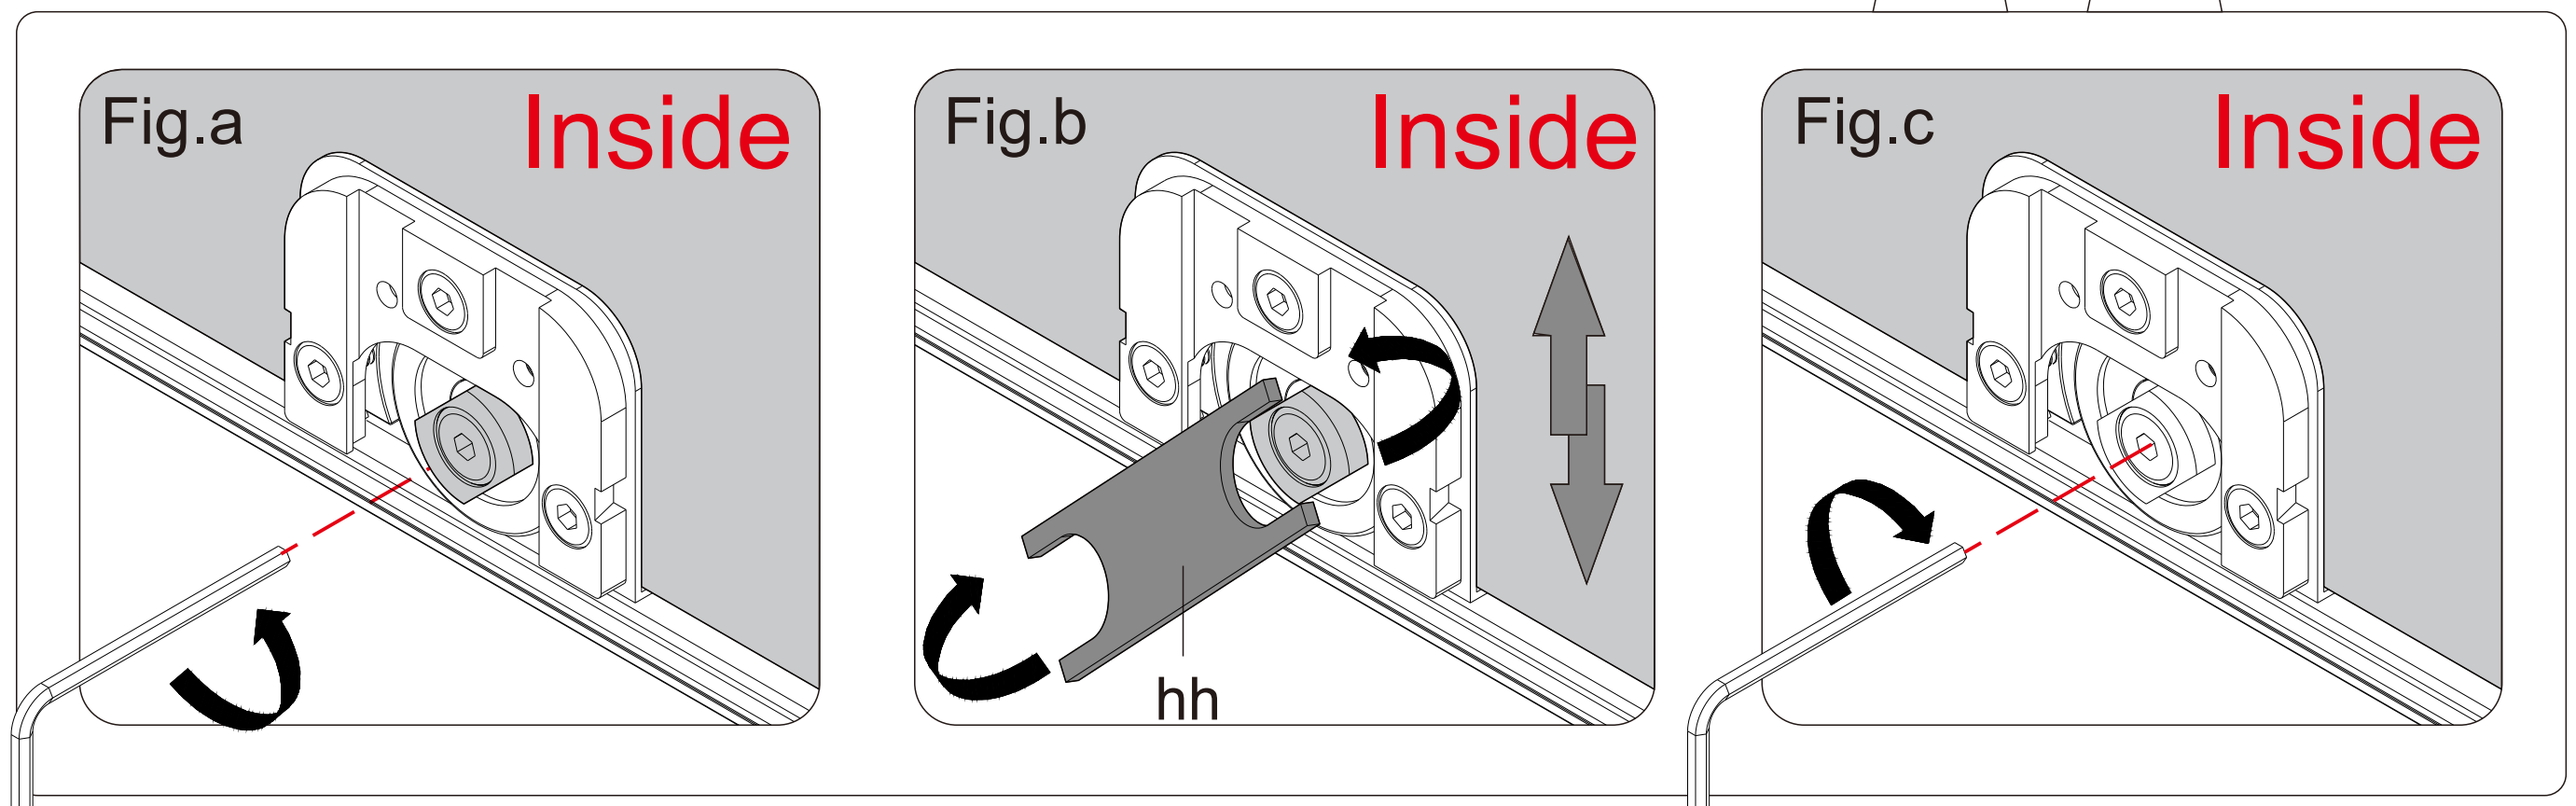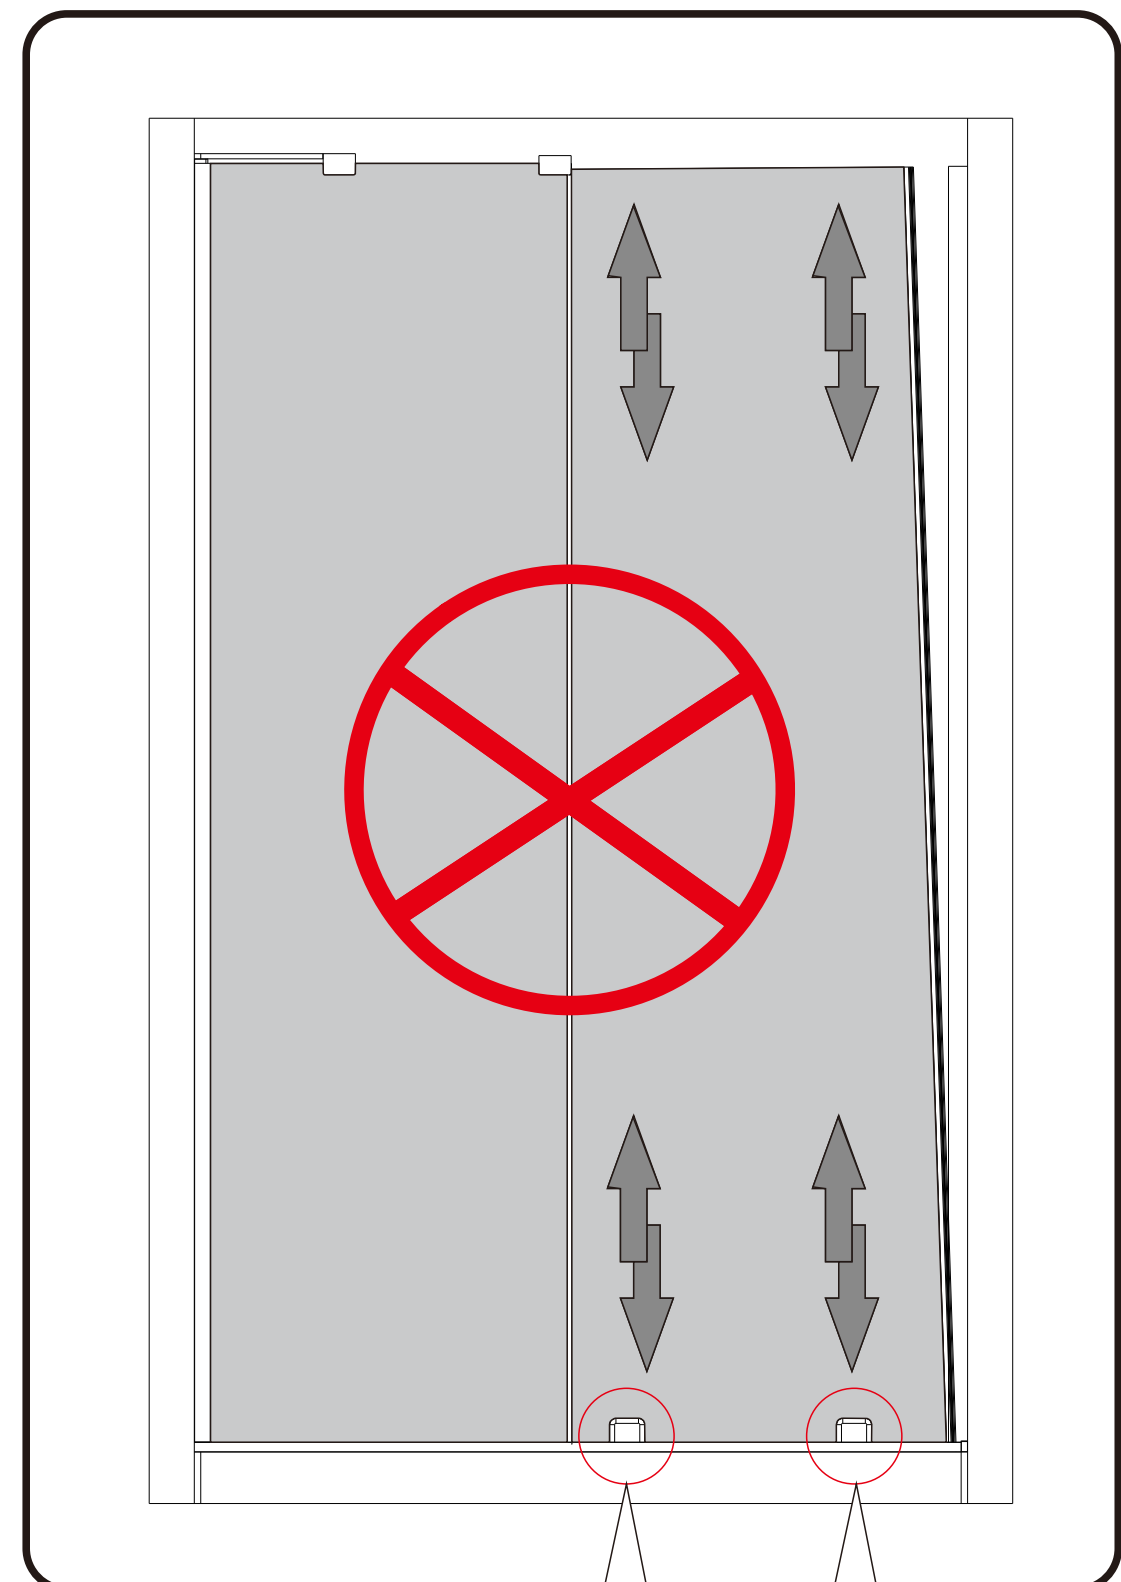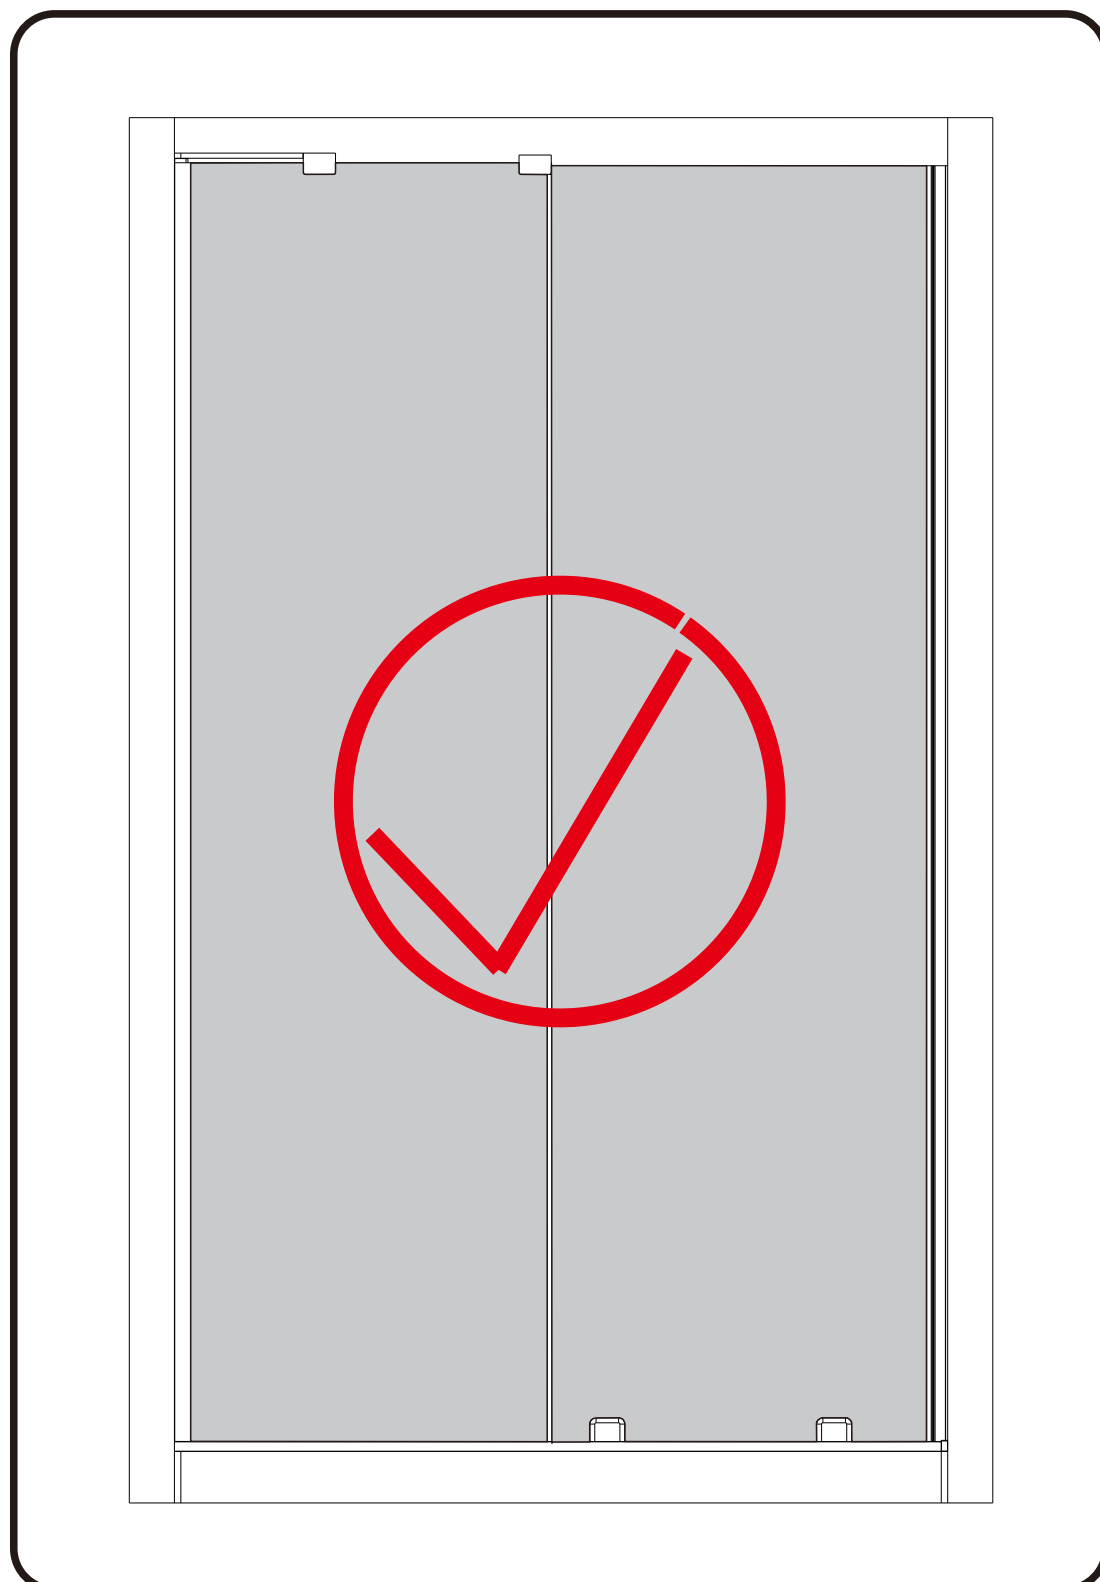

20 Install Glass Door(M)

NOTE

1.Install the roller stopper and roller trim cover as Fig.a and Fig.b .

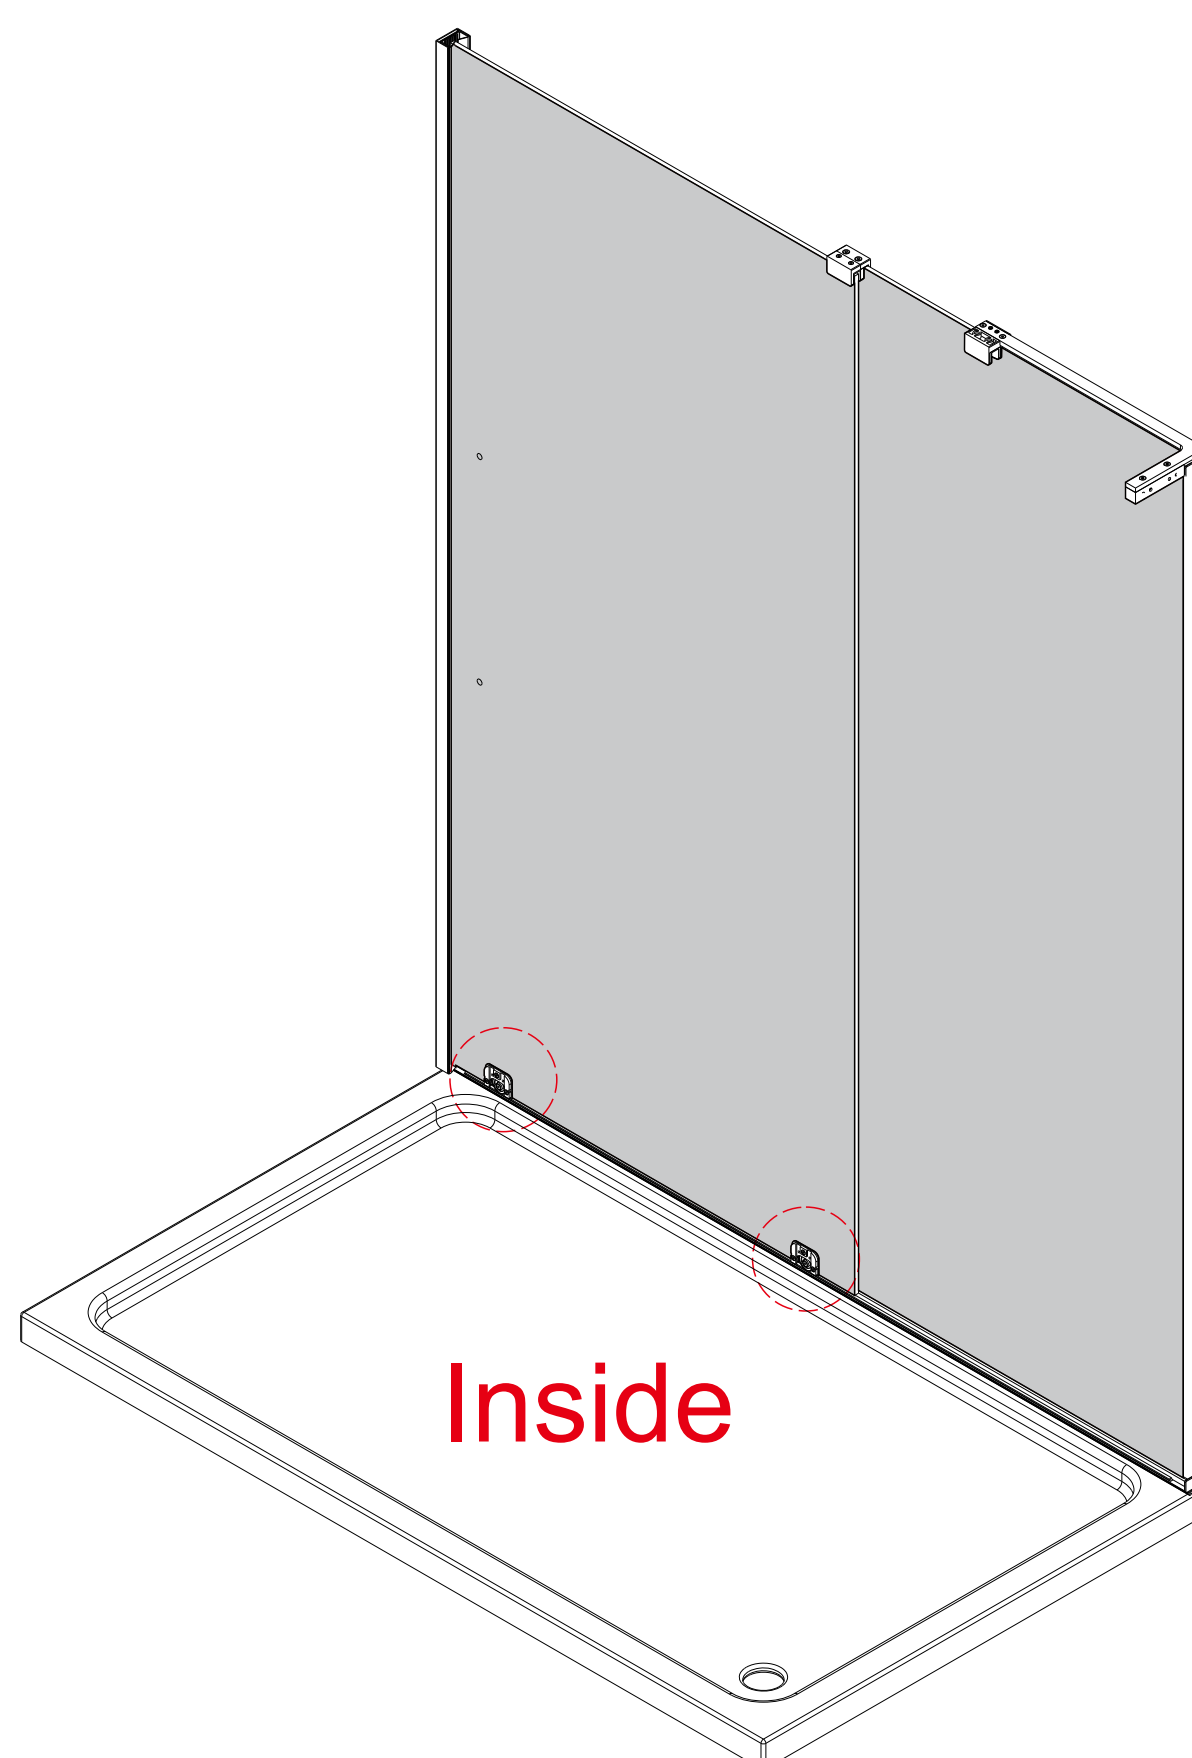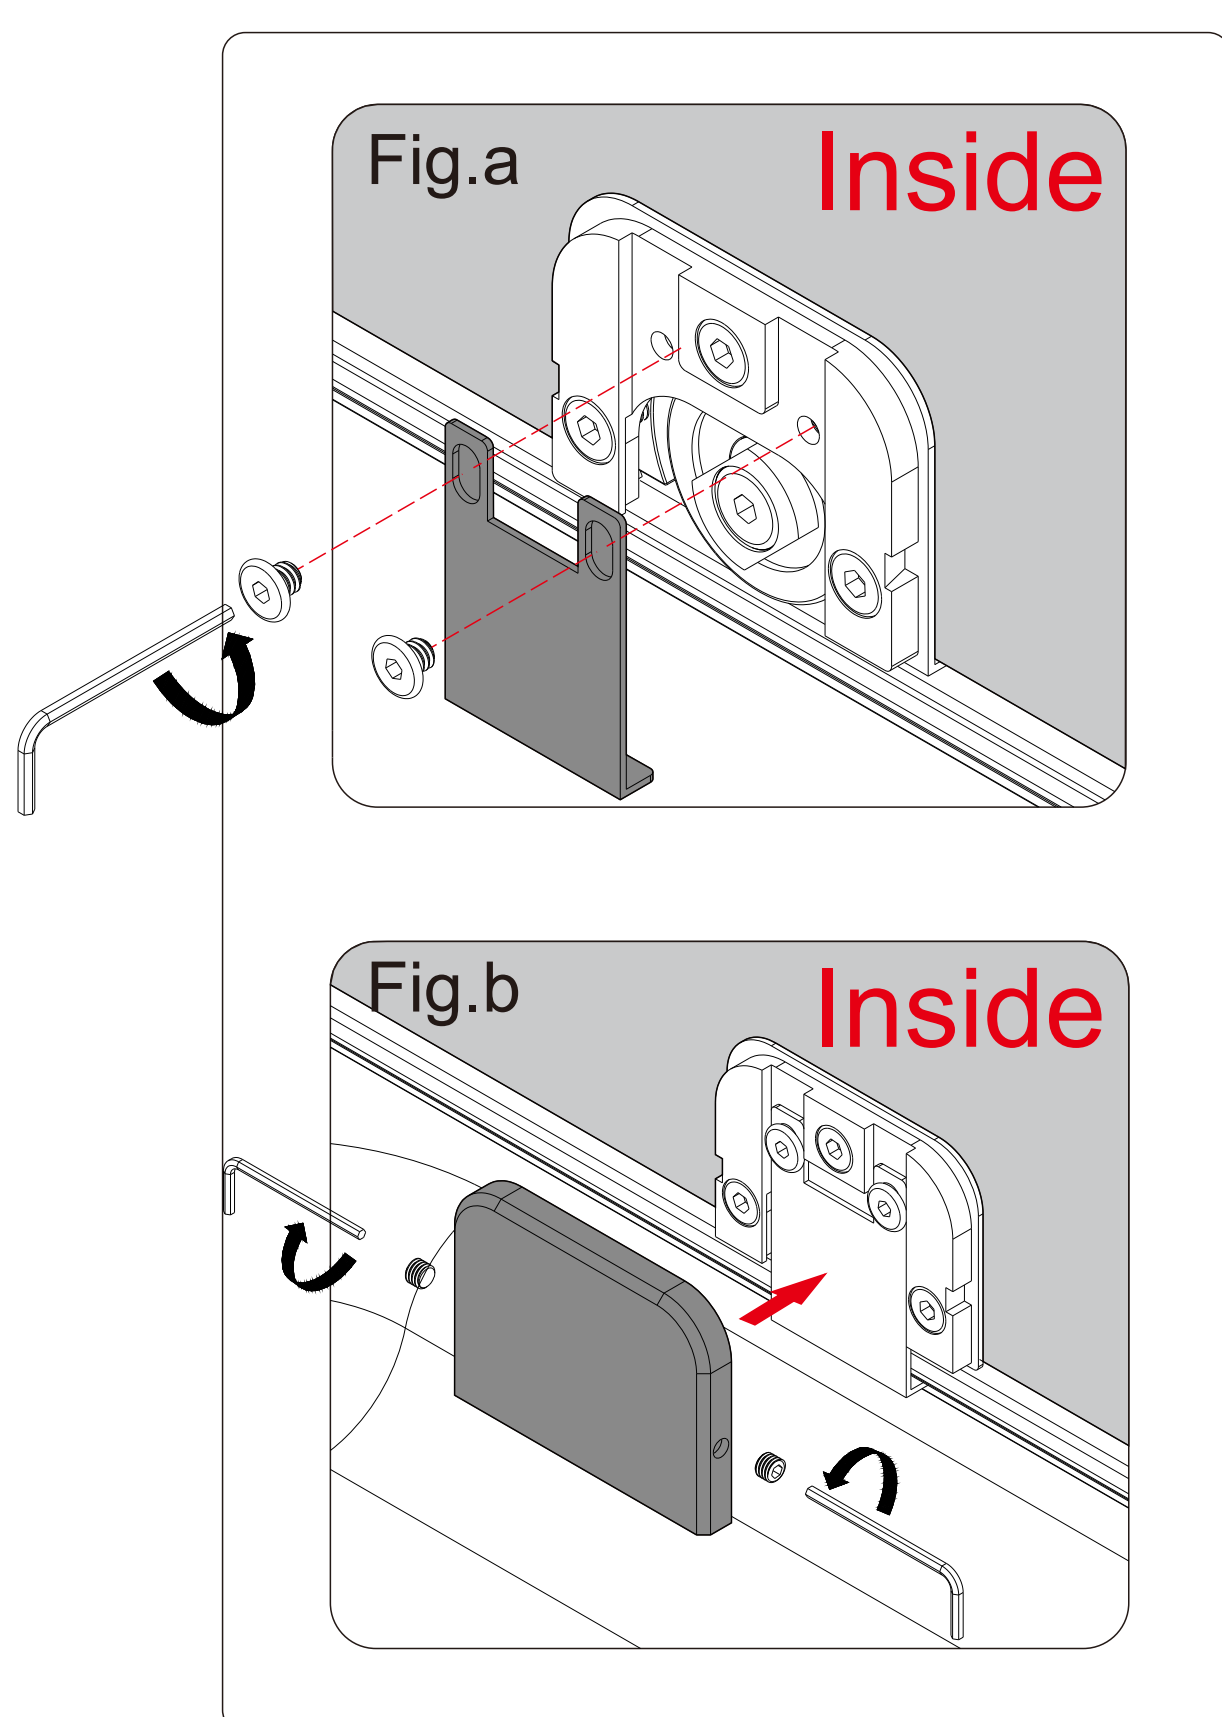


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

21 Install **Handle(N)** and **Decorative Covers(ee)**

NOTE

- 1.Install the **Handle(N)** on the **Glass Door(M)** as Fig.a .
- 2.Install the **Decorative Covers(ee)** on the **Bottom Rail(I)** as Fig.b .

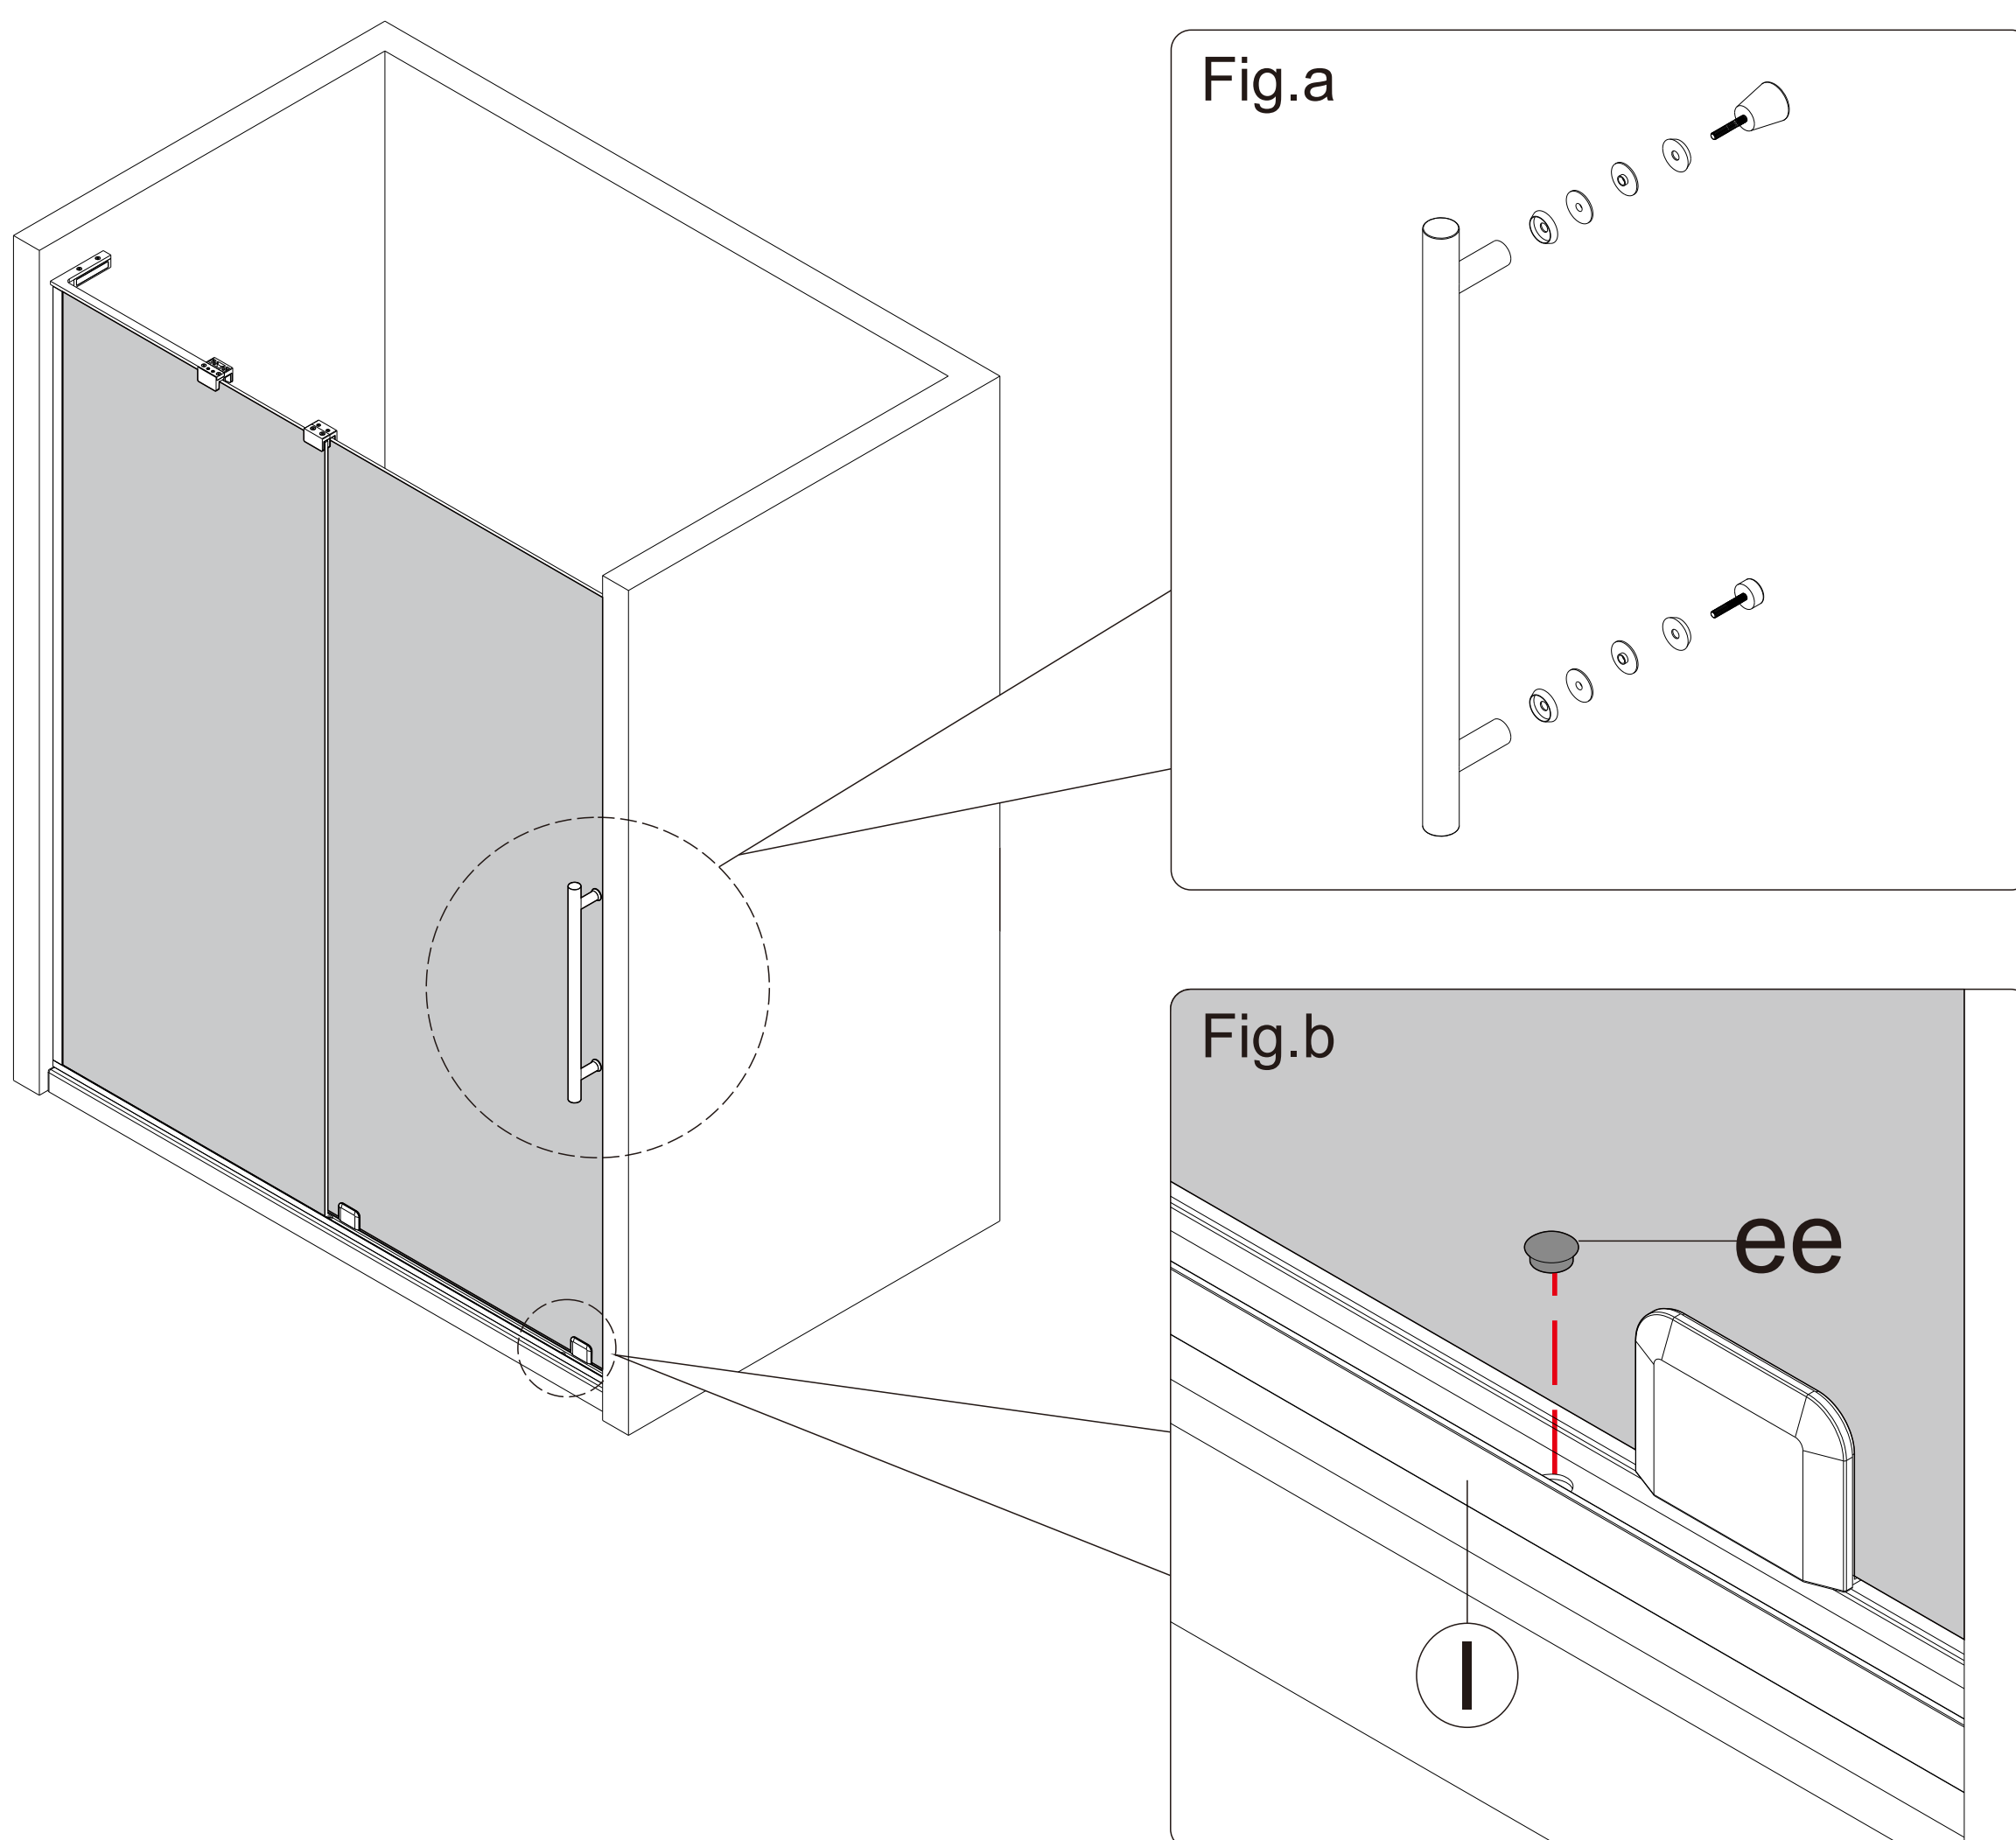



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

22

Install Anti-Water Strip(F&G)

NOTE

1. Install the **Anti-Water Strip(F)** on the **Stationary Glass(E)** as Fig.a .
2. Install the **Anti-Water Strip(G)** on the **Glass Door(M)** as Fig.b .

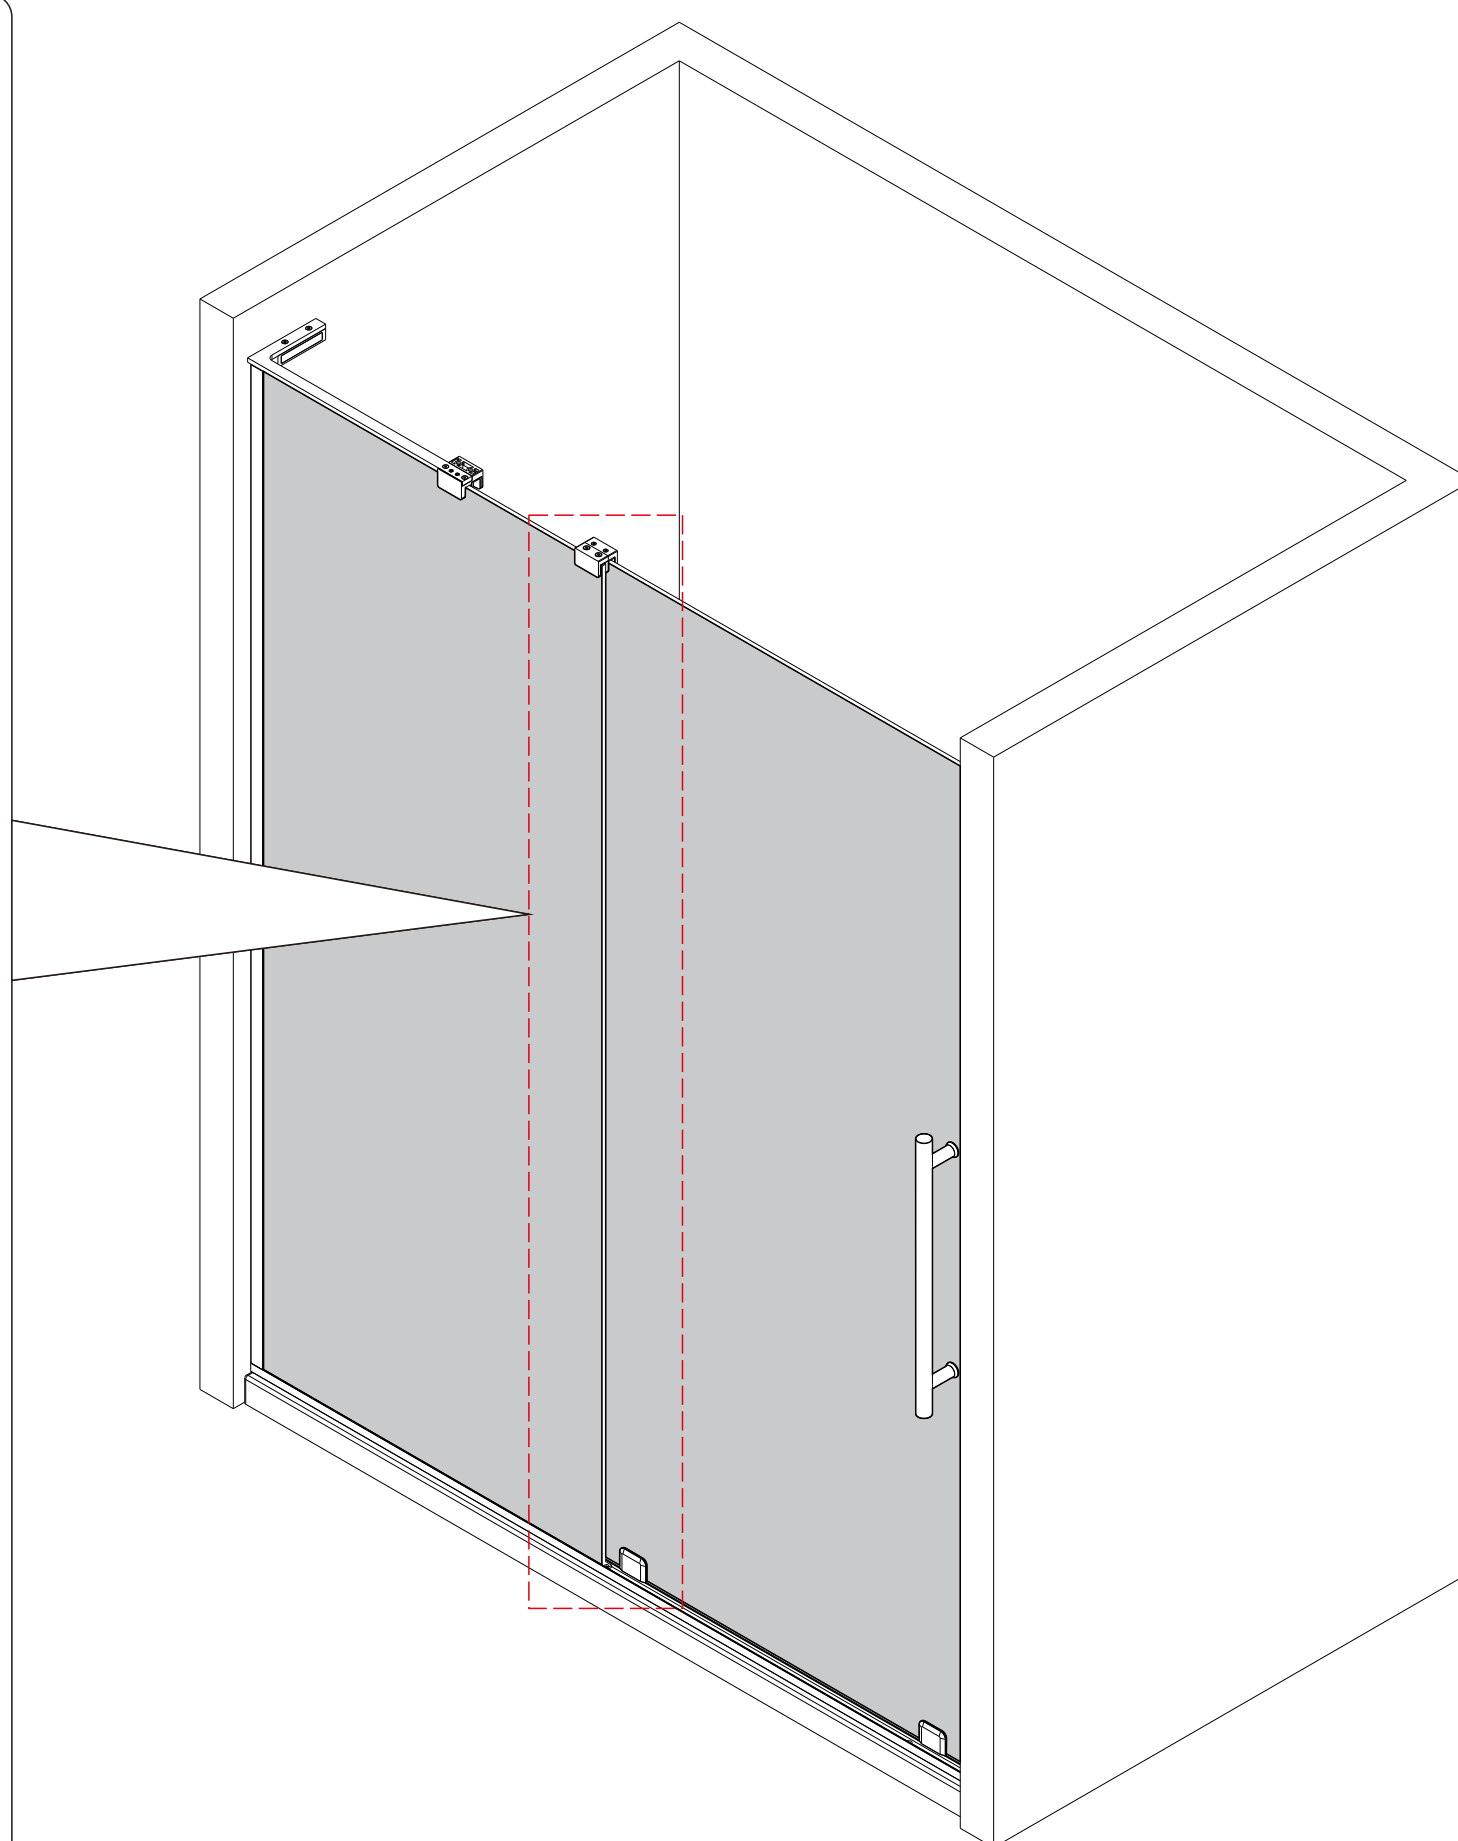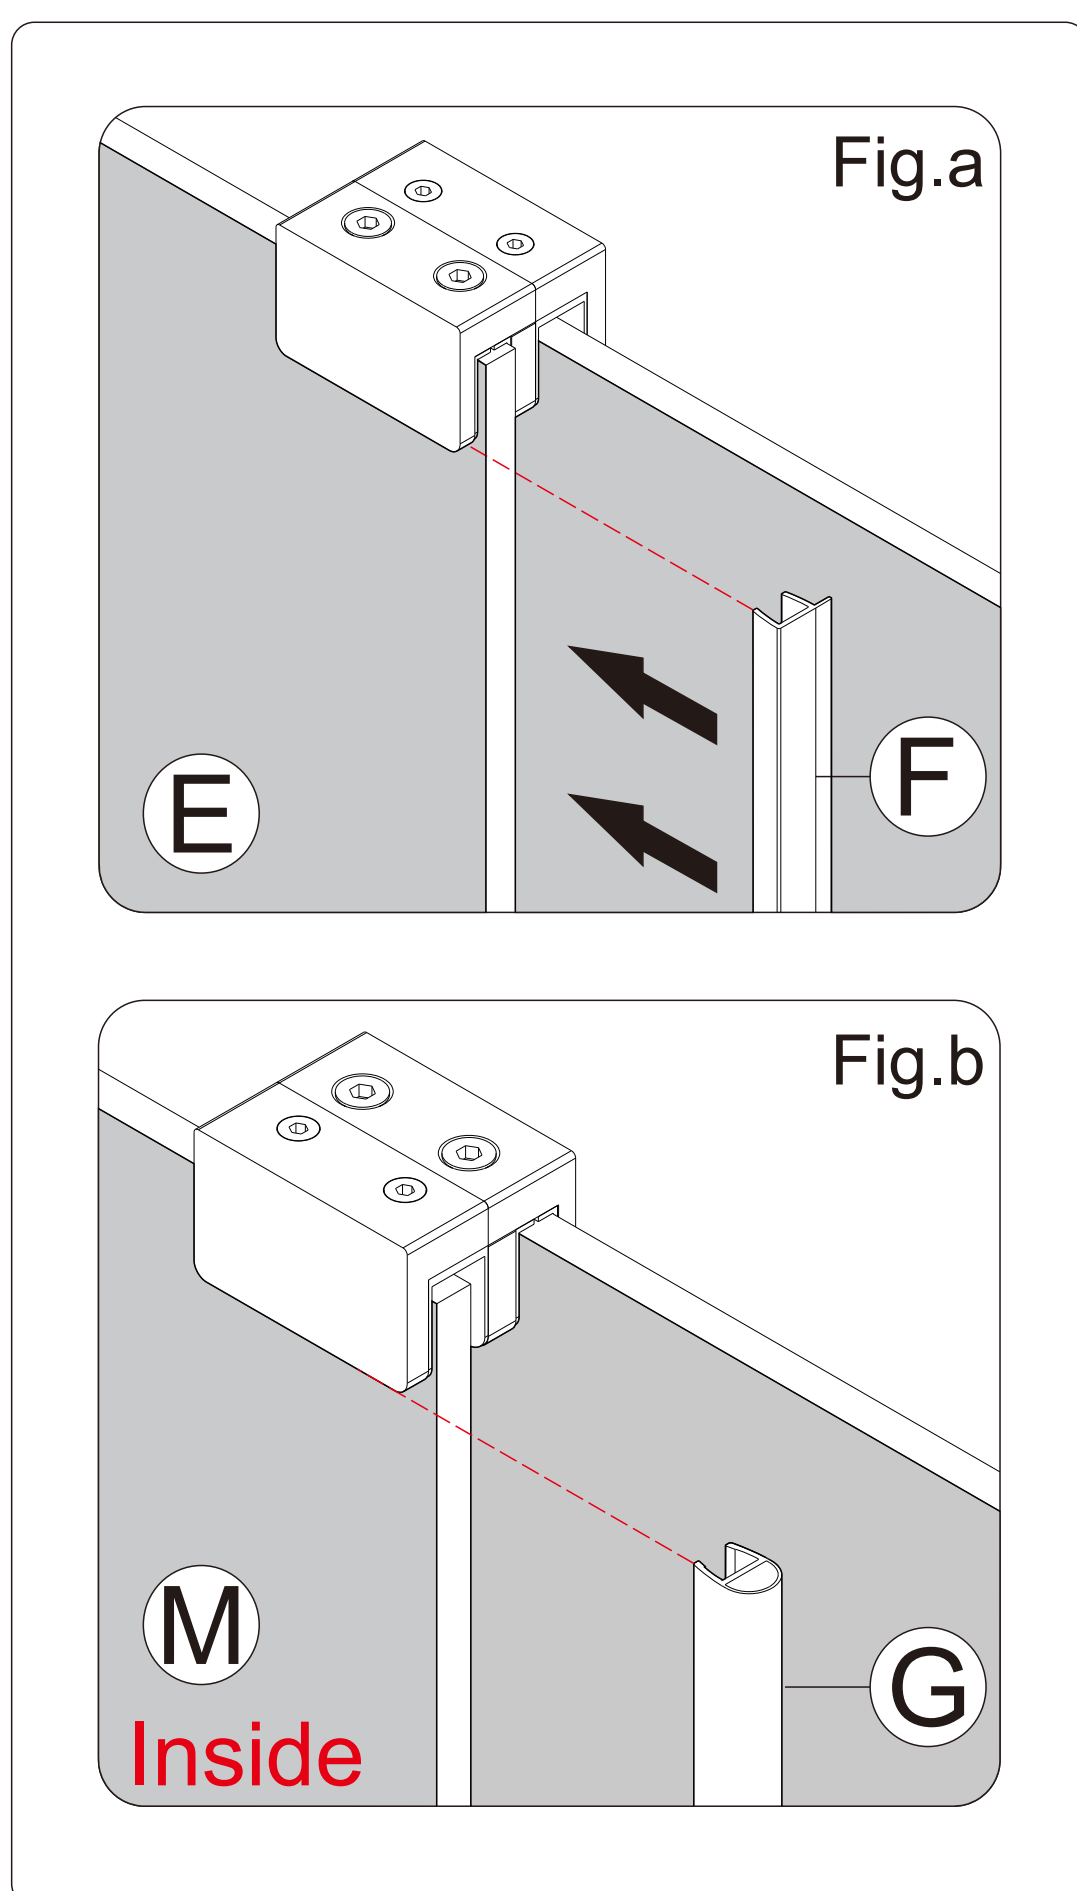

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

23 Install **Bumper Blocks(B)**

NOTE

1. Peel off the double-sided tape on the back of the **Bumper Block (B)** and install it on the wall to prevent the **Glass Door (M)** from hitting the wall as Fig.a & Fig.b and Fig.c .

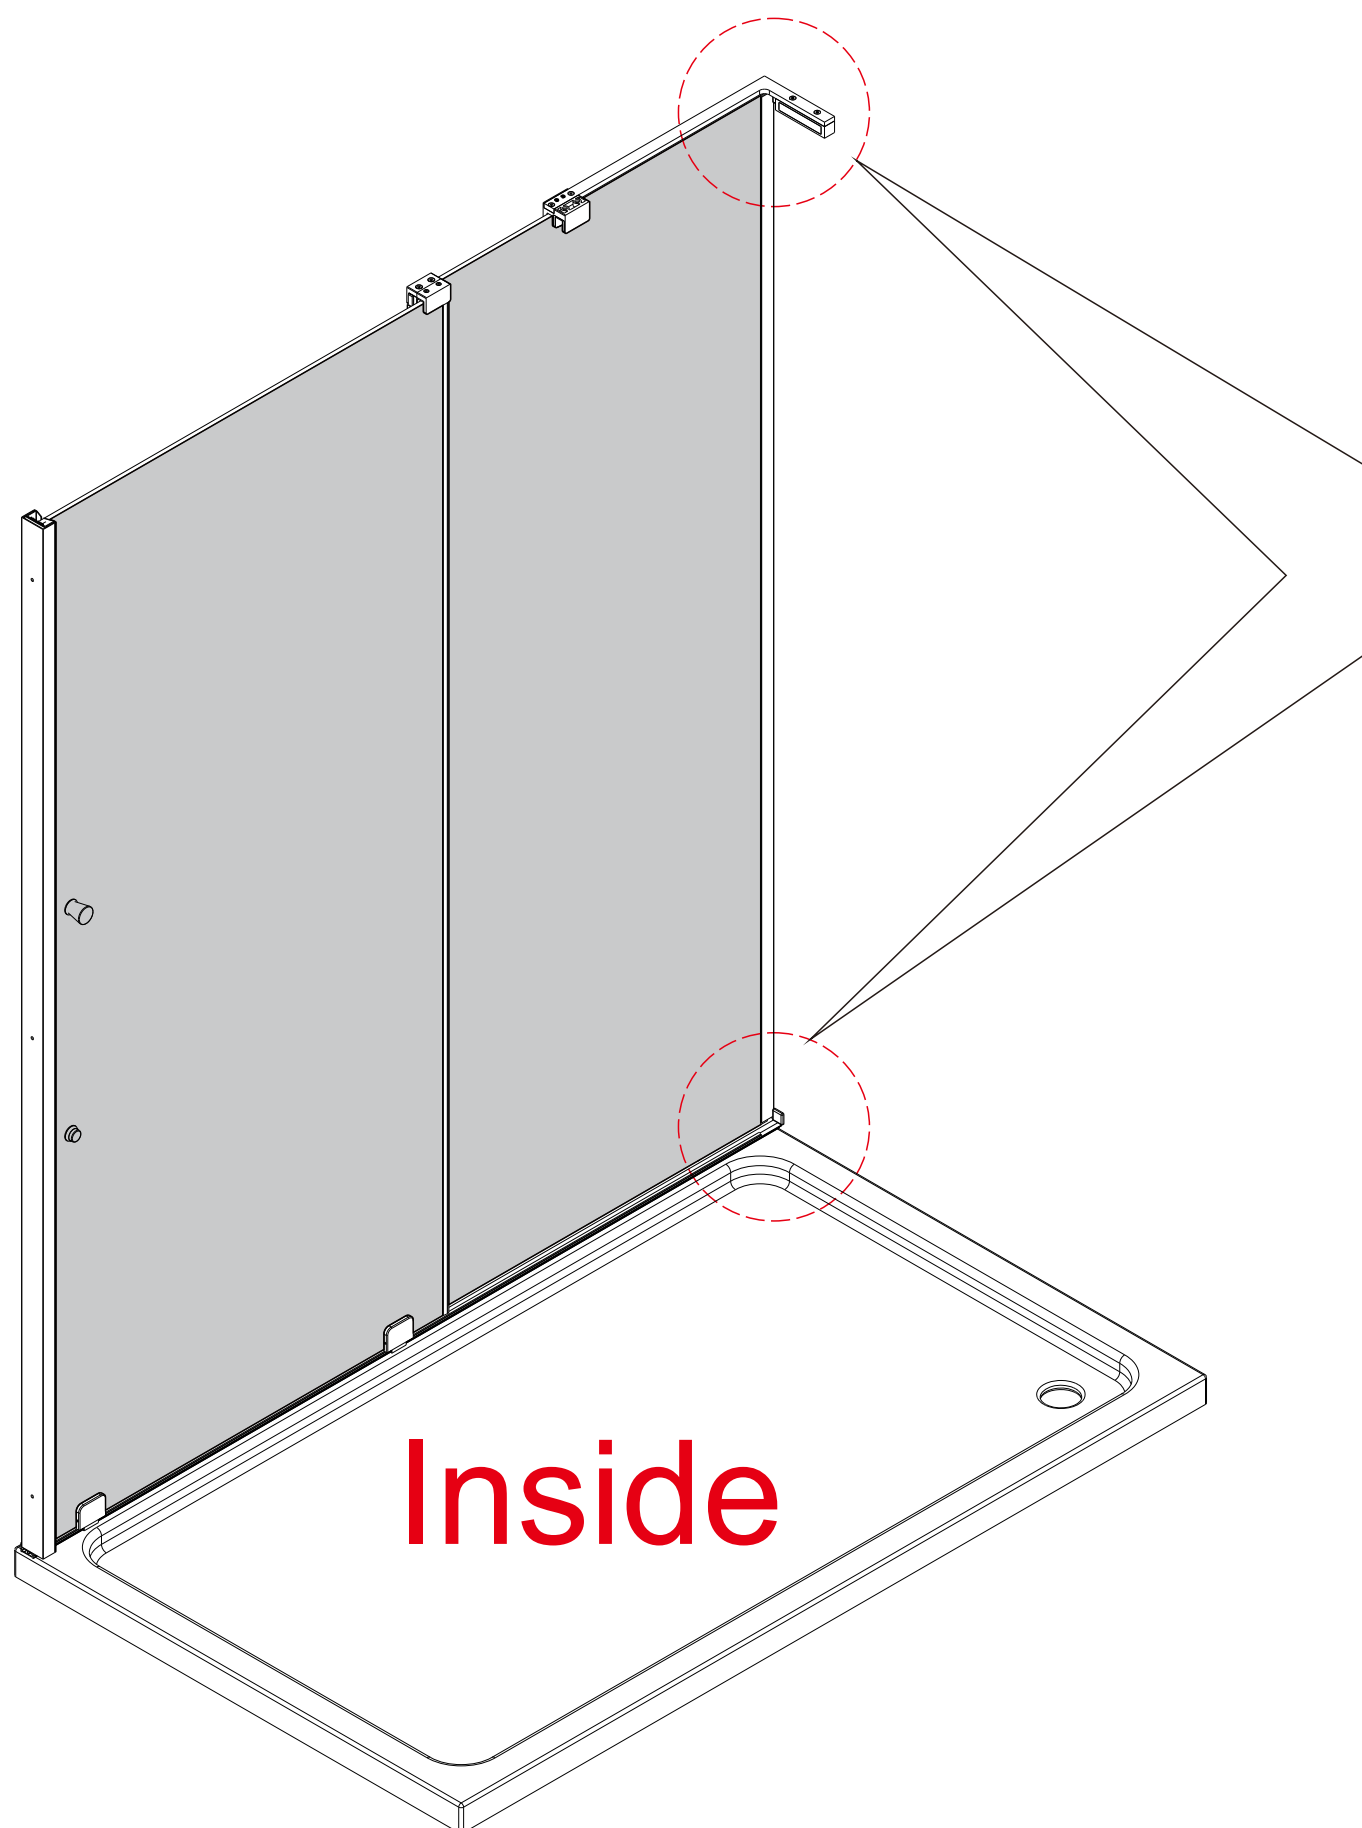


Fig.a

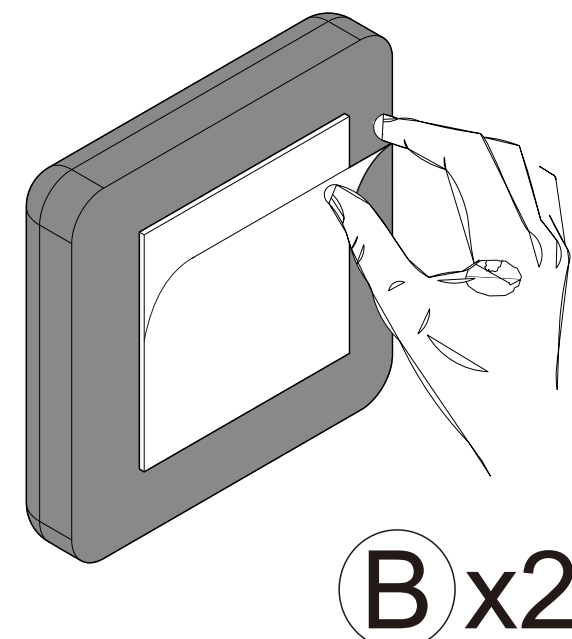


Fig.b


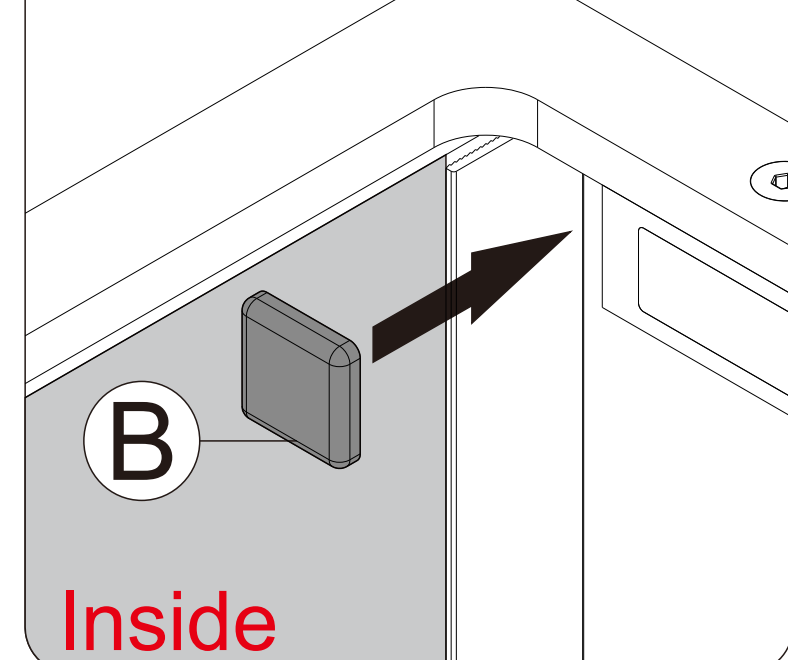


Fig.c

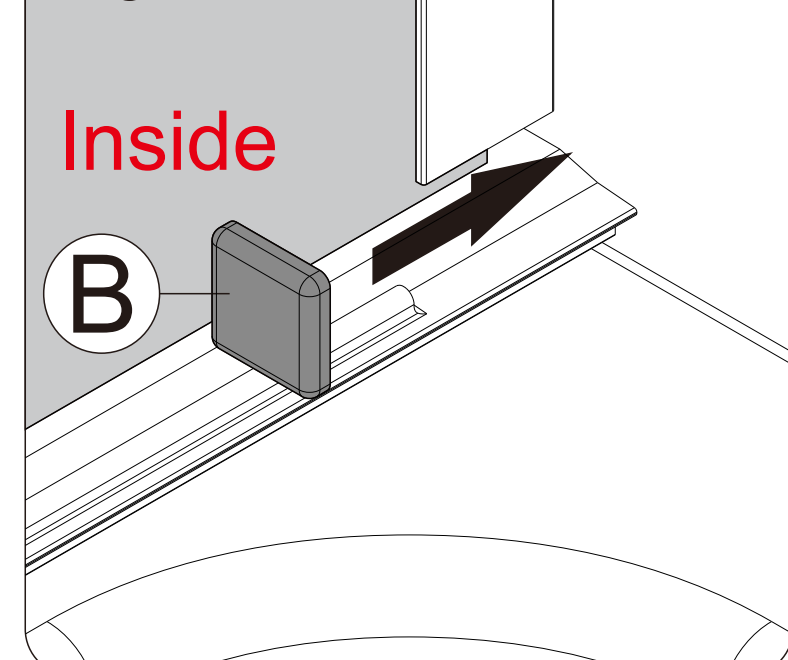



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

24 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(C&K)** and **Bottom Rail(I)**.

! Allow 24 hours for the silicone to cure before using the shower.

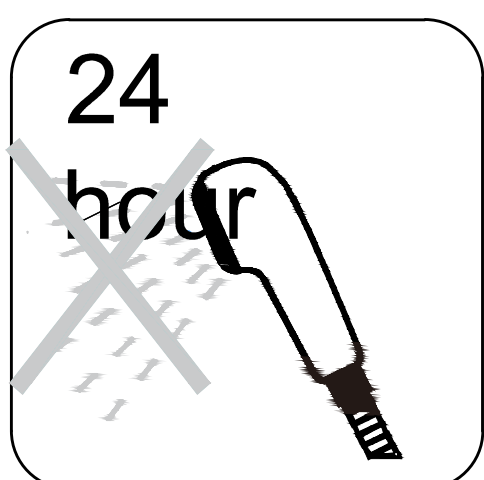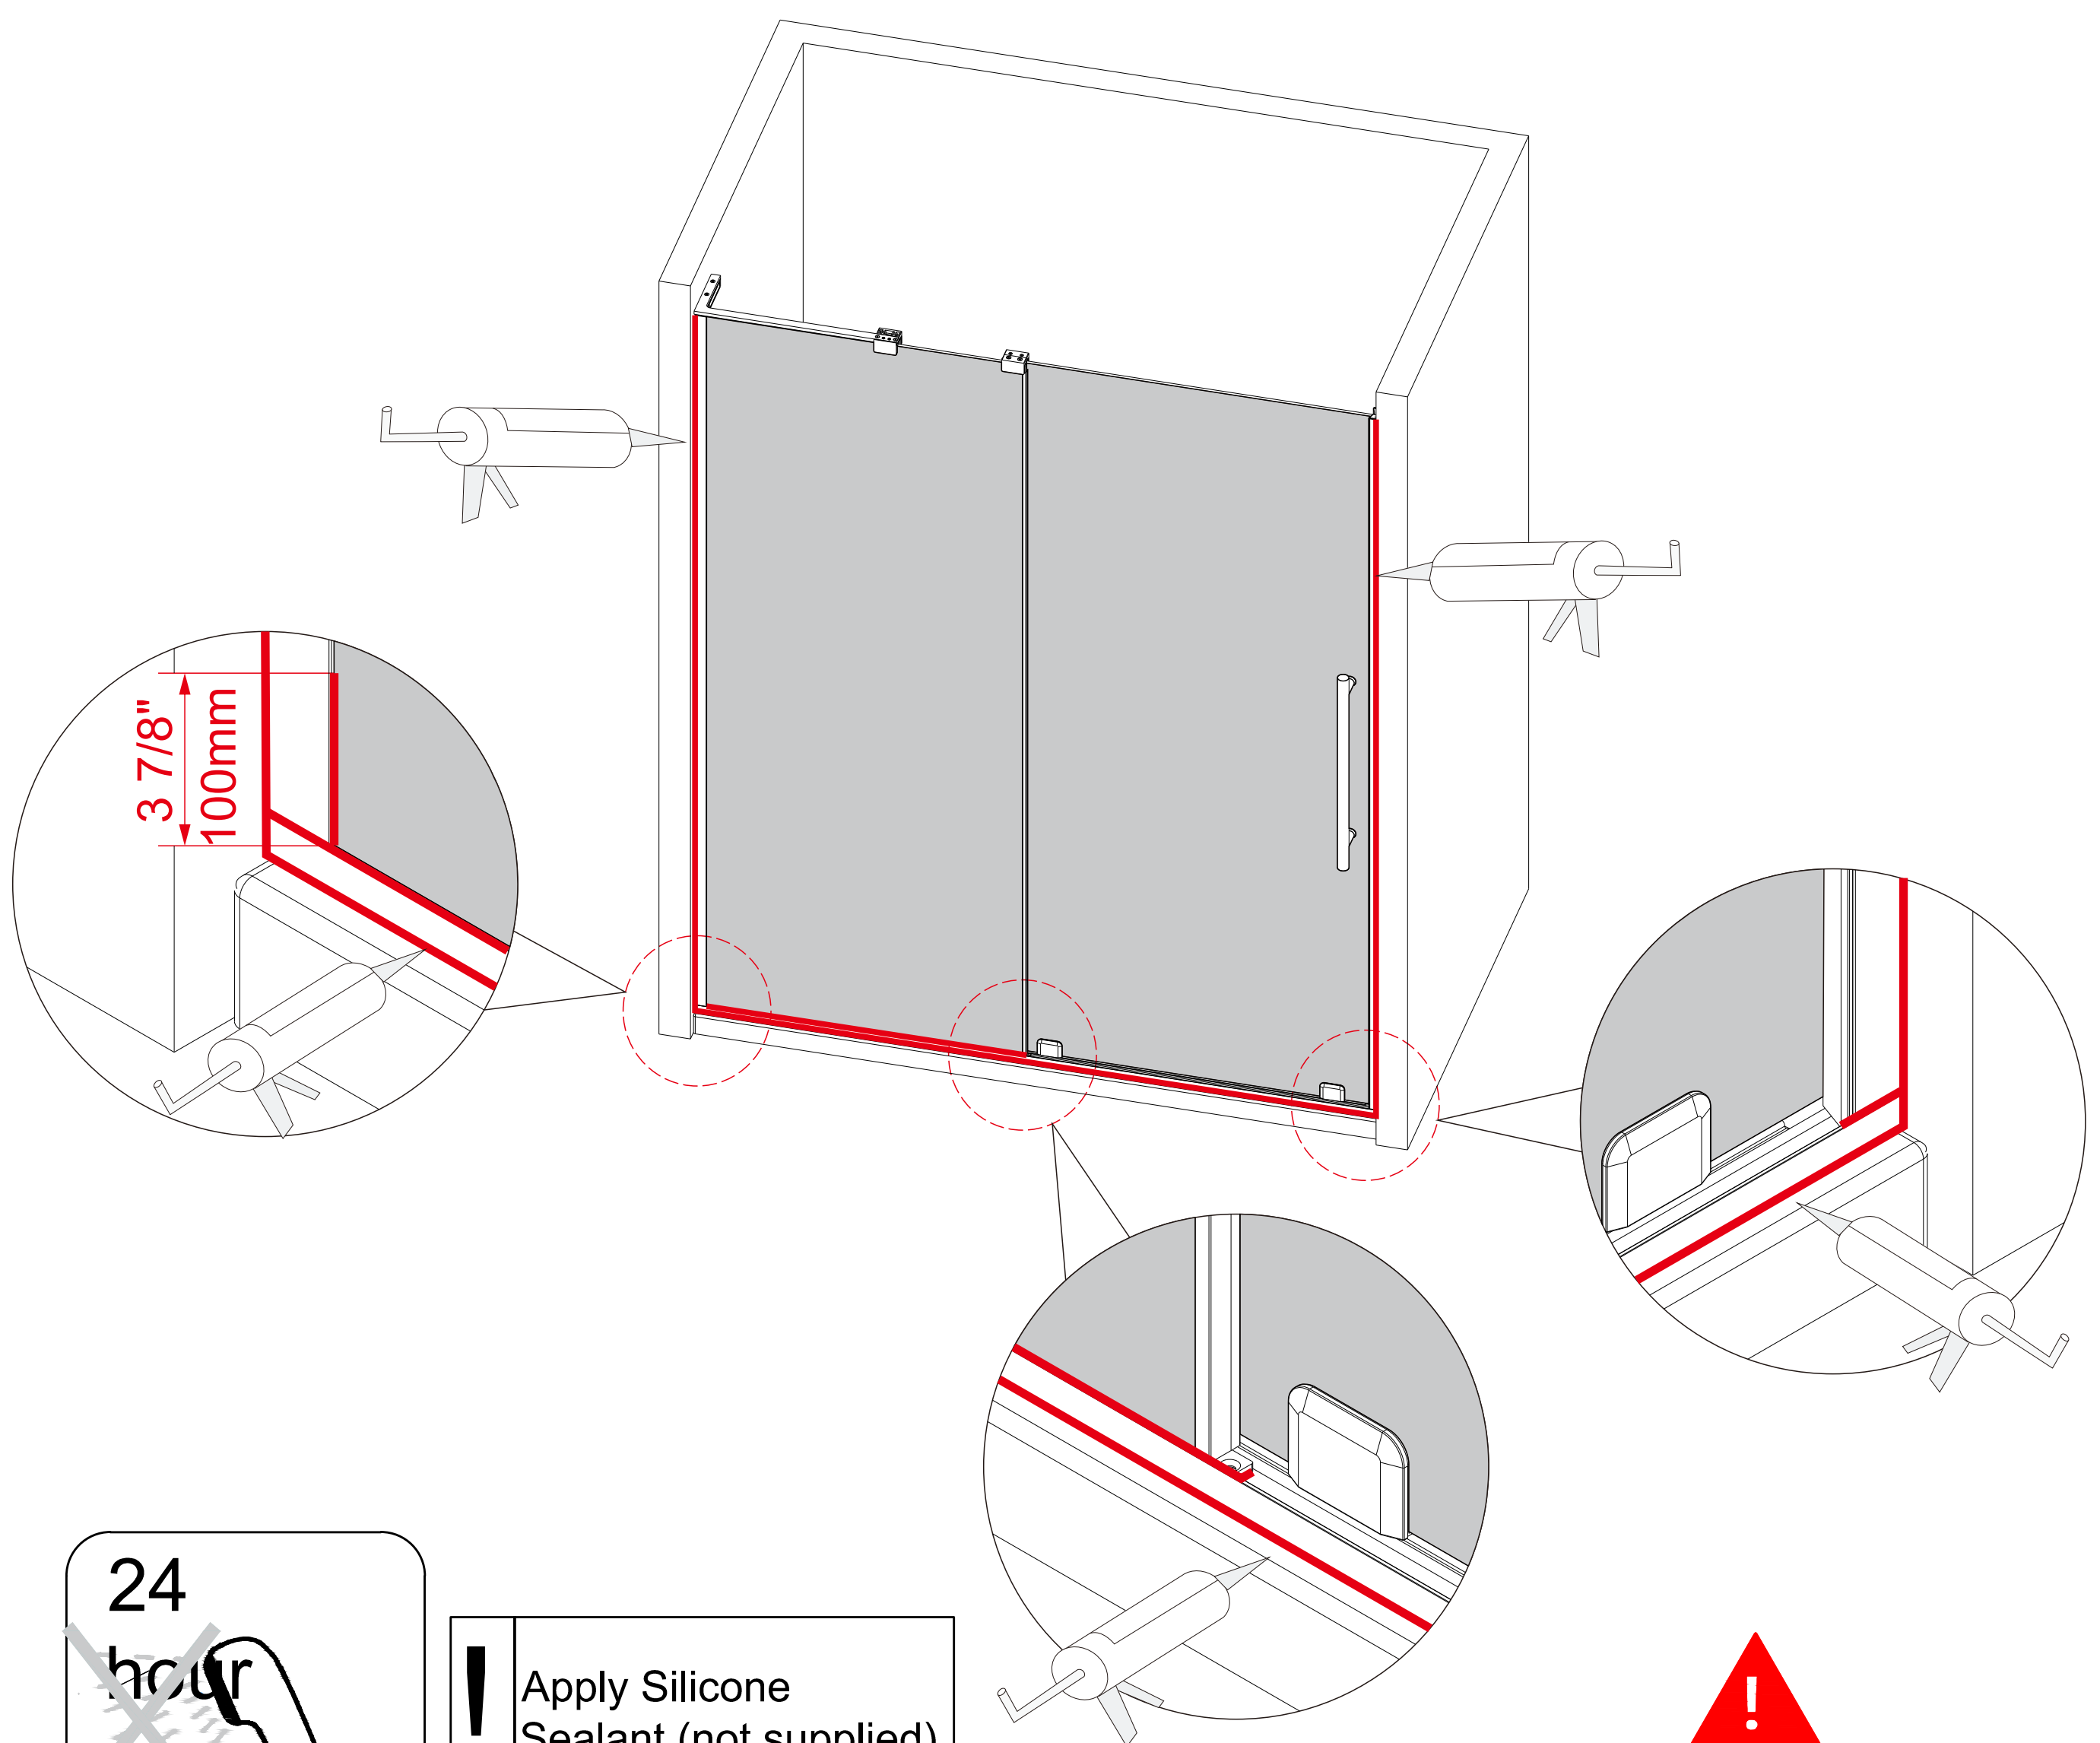

! Apply Silicone Sealant,(not supplied).



The shower room needs to be sealed inside and out



25 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(C&K)** and **Bottom Rail(I)**.



Allow 24 hours for the silicone to cure before using the shower.

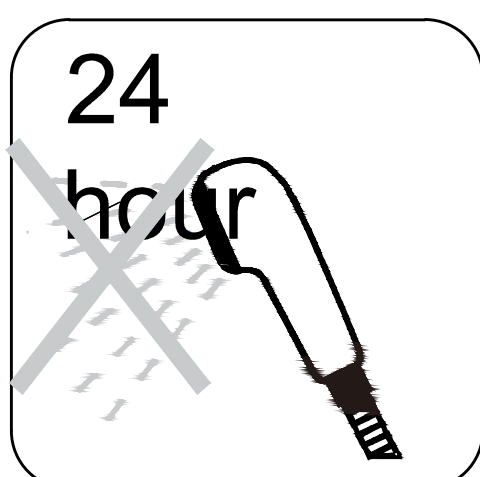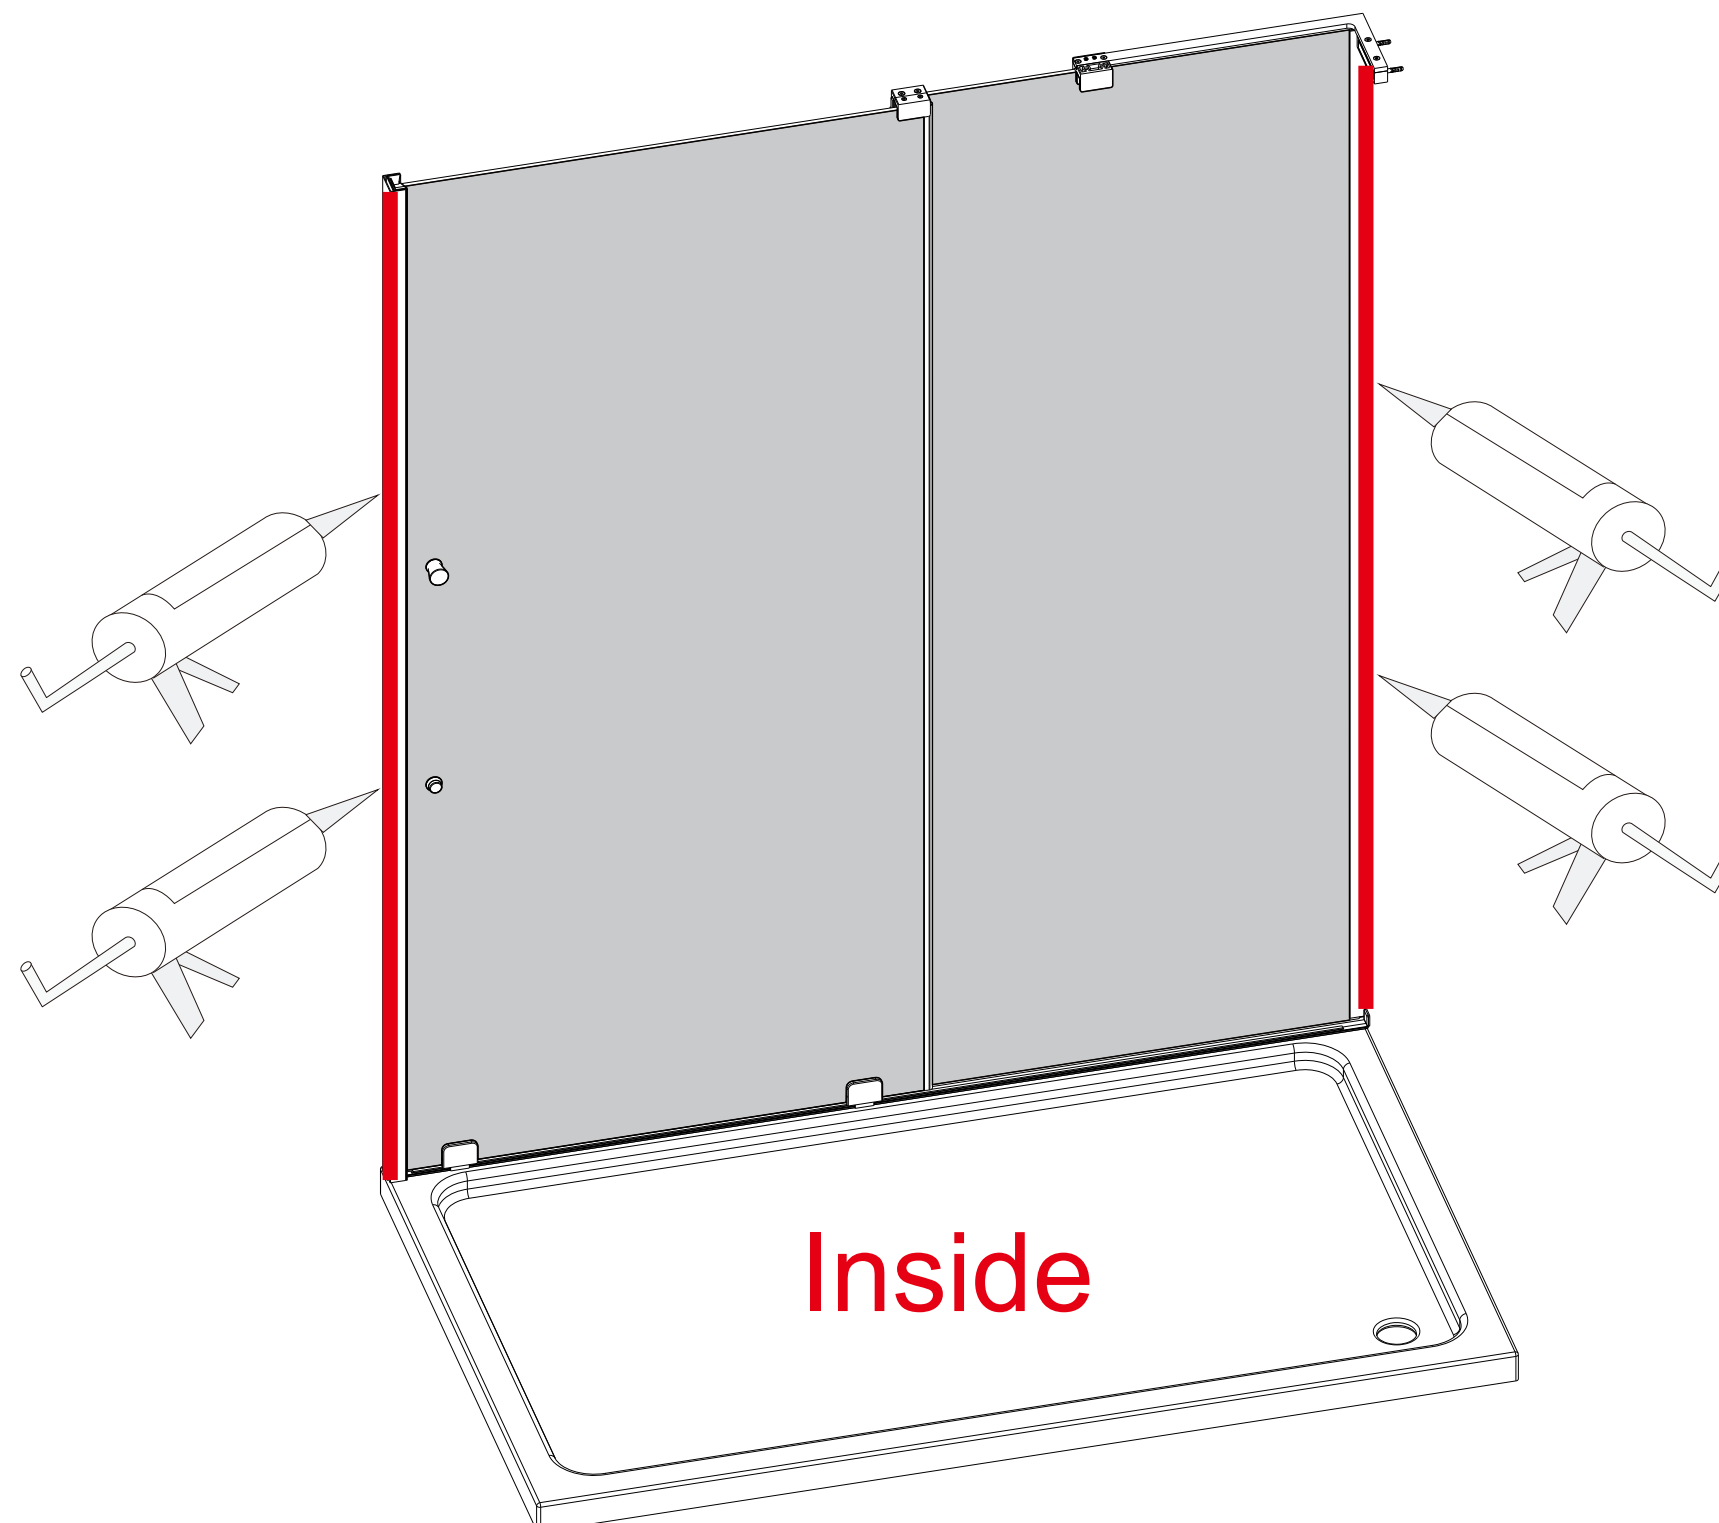

! Apply Silicone Sealant,(not supplied).



The shower room needs to be sealed inside and out