
DA0998

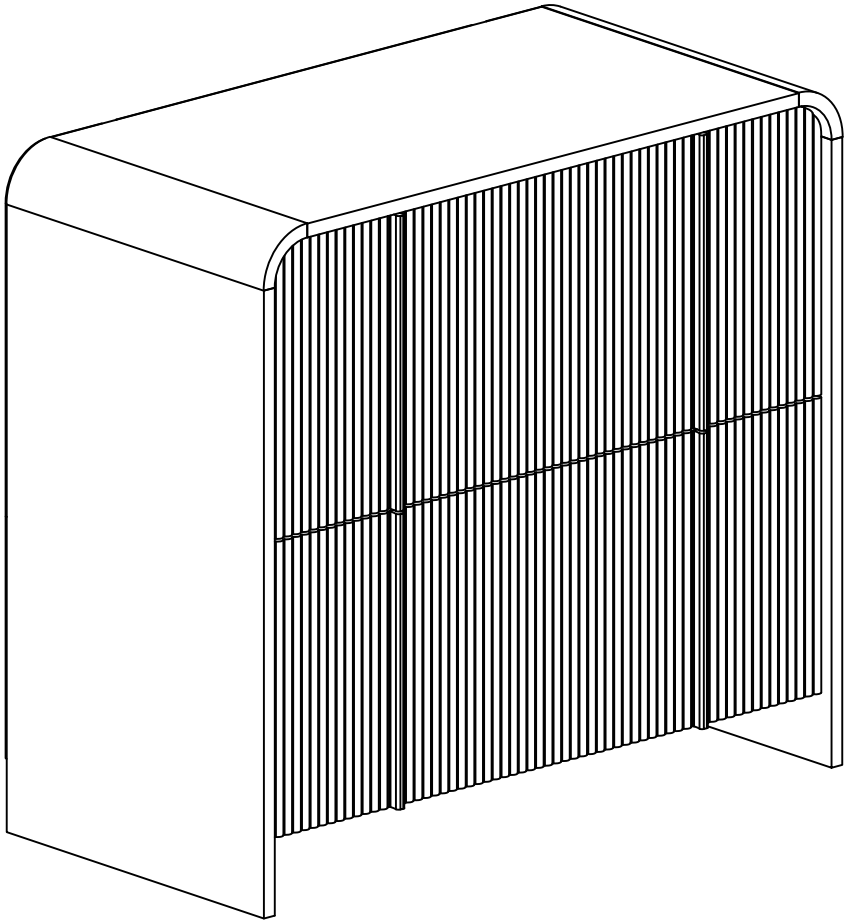


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

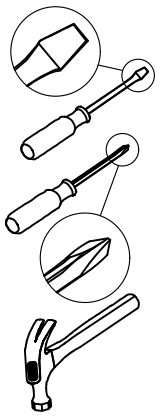


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

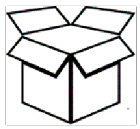

- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.
















Board Identification

Not actual size

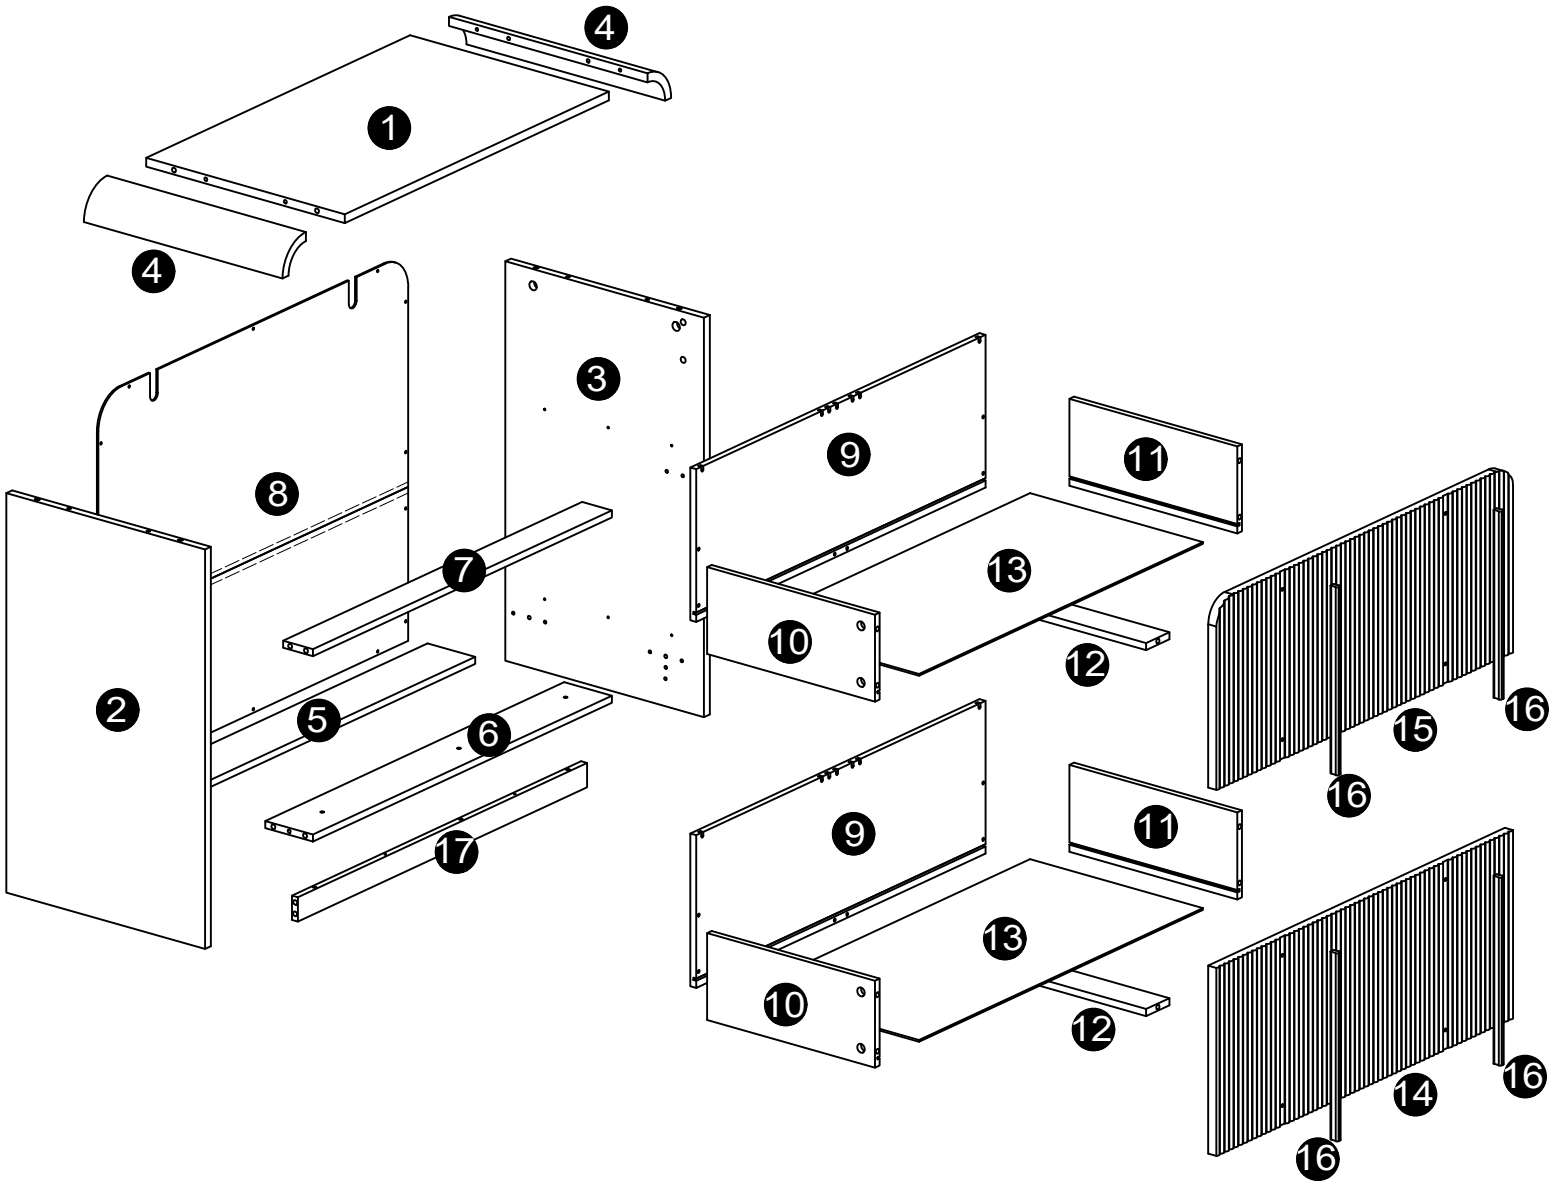



Board Identification

Not actual size

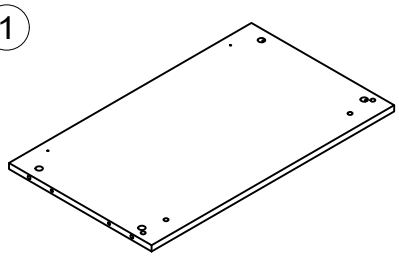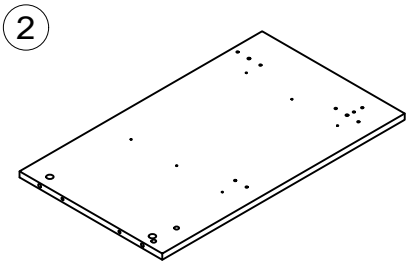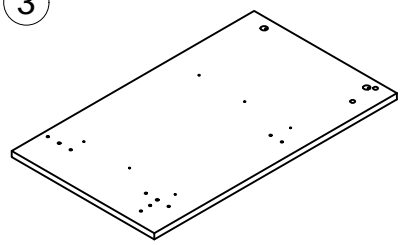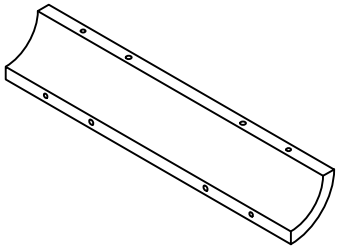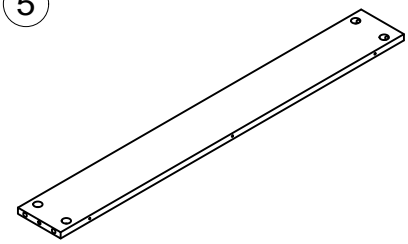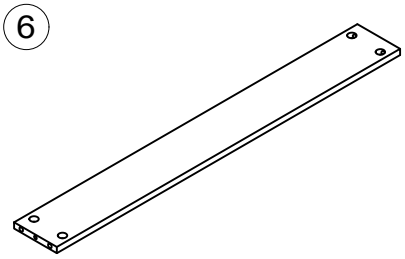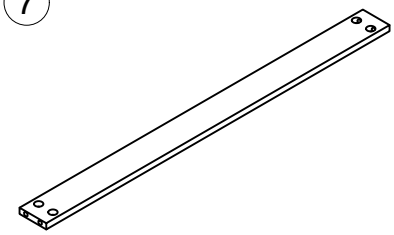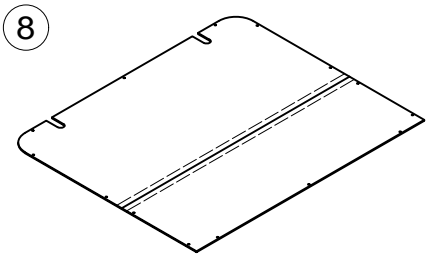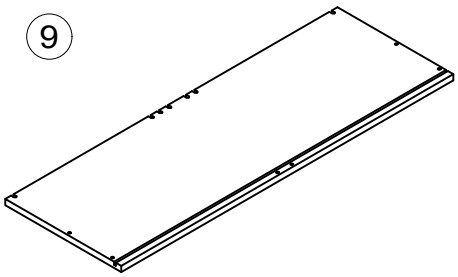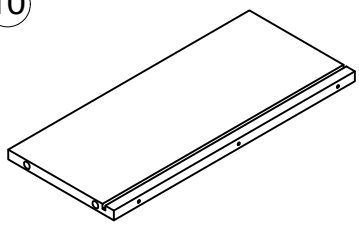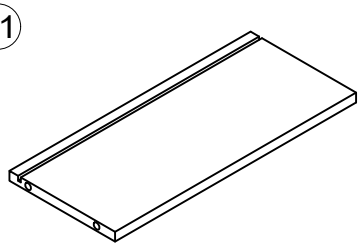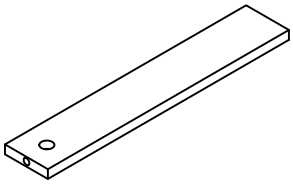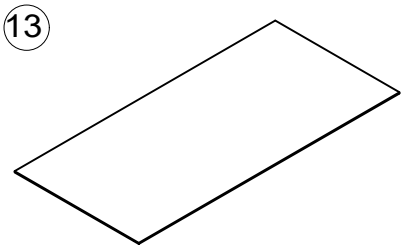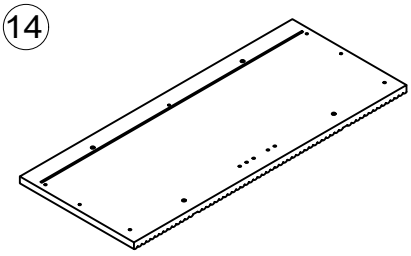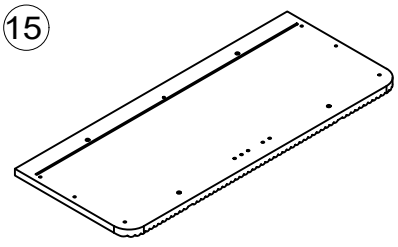1  Qty:1	2  Qty:1	3  Qty:1
4  Qty:2	5  Qty:1	6  Qty:1
7  Qty:1	8  Qty:1	9  Qty:2
10  Qty:2	11  Qty:2	12  Qty:2
13  Qty:2	14  Qty:1	15  Qty:1

Board Identification

Not actual size

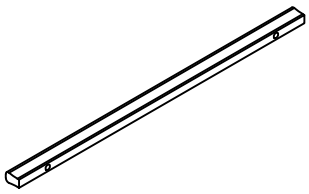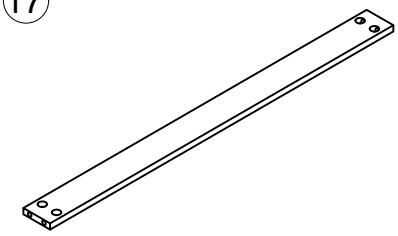16  Qty:4	17  Qty:1

Part List



Ø15X9.5mm

Ⓐ	X34

CAM LOCK
spare:3



Ø6.5X35mm

Ⓑ	X34


CAM BOLT
spare:3



Ø6X30mm

Ⓒ	X14


WOOD DOWEL
spare:2



Ø3.5X12mm


Ⓓ	X24

SCREW
spare:2



74X24X15mm Ø6X30mm Ø4X14mm Ø4X35mm

Ⓔ	X 2set



135X135X3mm

Ⓕ	X2



M6X10mm

Ⓖ	X8



M4


Ⓗ	X1



Ø3X14mm

Ⓘ	X14

SCREW
spare:2



Ø4X35mm

Ⓙ	X15


SCREW
spare:2



Ø4X25mm


Ⓚ	X8

SCREW
spare:1



Ø5X350mm


Ⓛ	X8



40X10x2mm


Ⓜ	X4

SCREW
spare:1

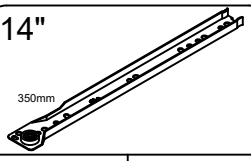


CL	X2

DRAWER SLIDE

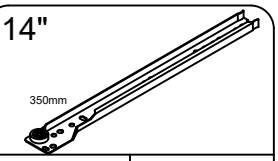


CR	X2

DRAWER SLIDE

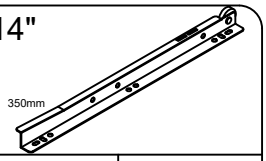

DL	X2

DRAWER SLIDE

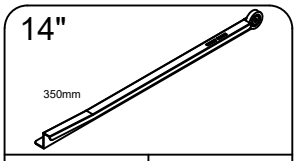


DR	X2

DRAWER SLIDE


Part List


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

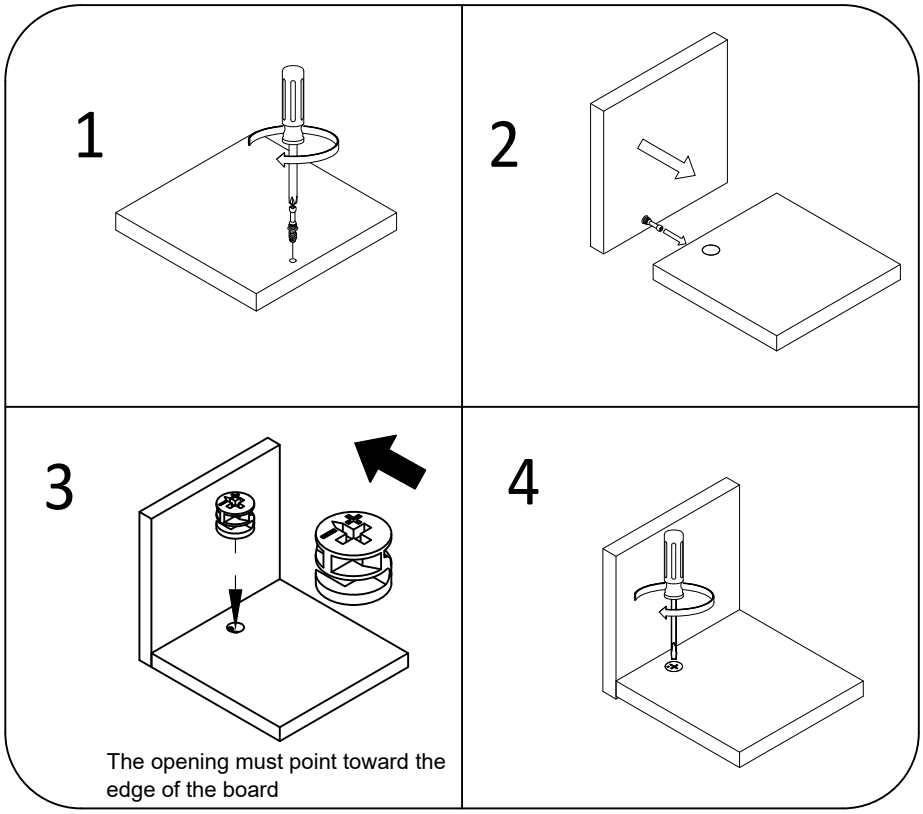



STEP1

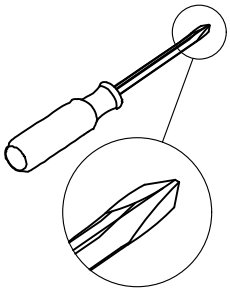


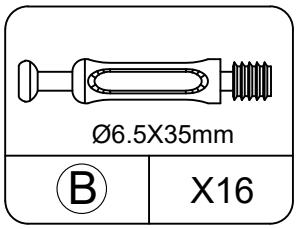


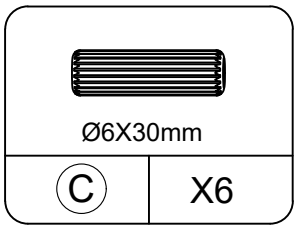


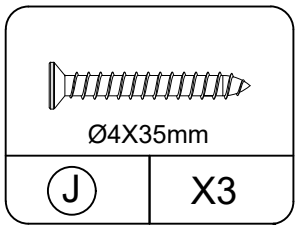


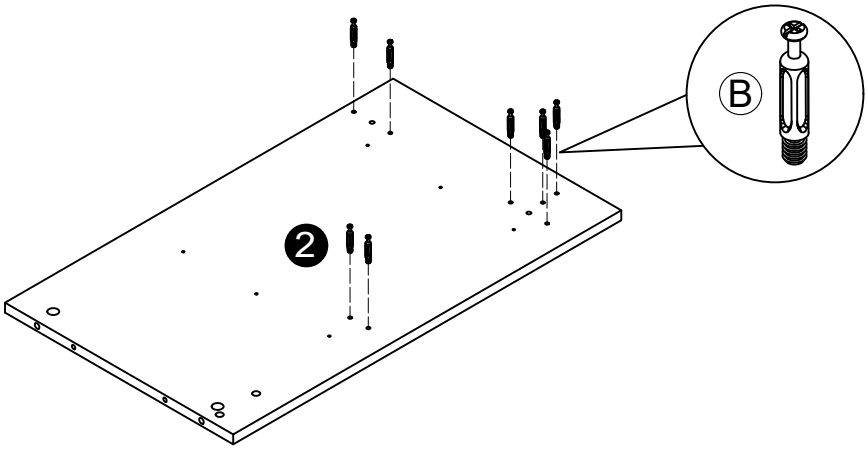

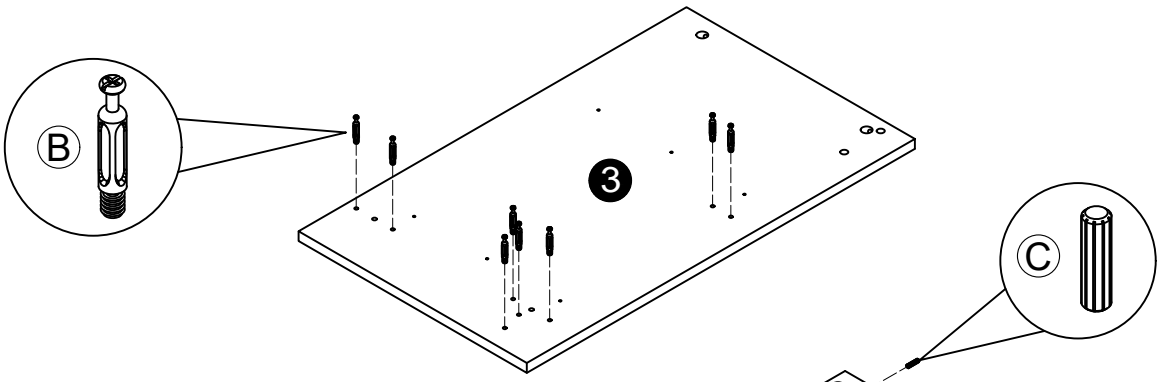


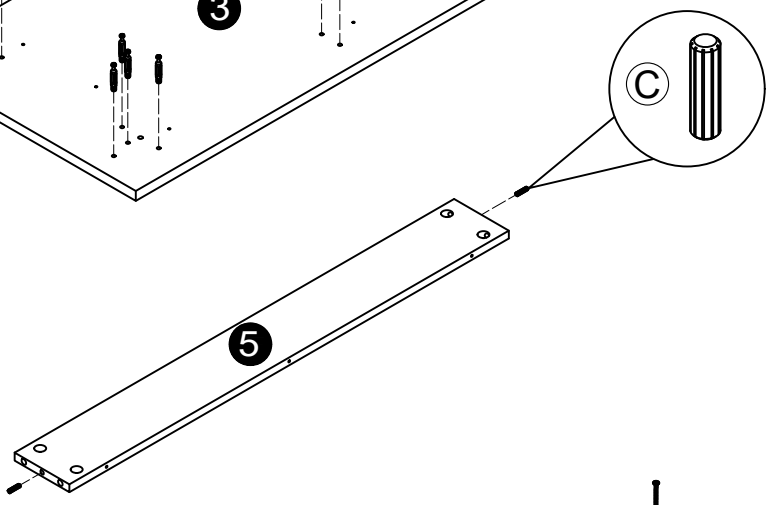

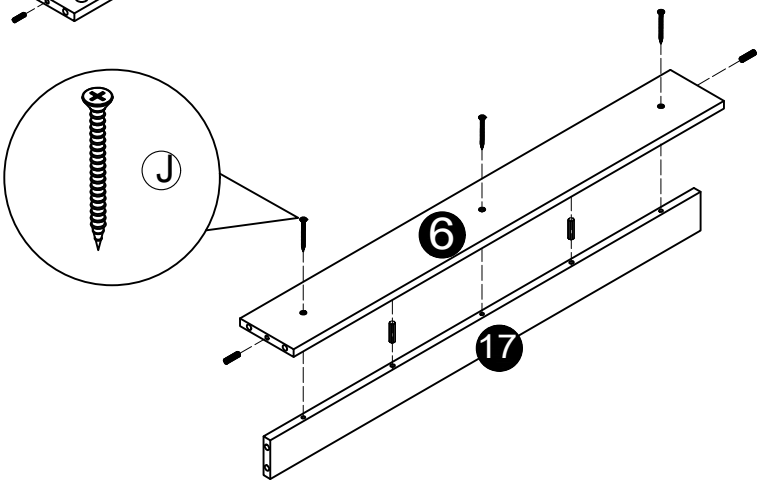


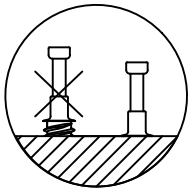


STEP2

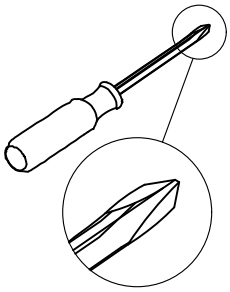

Ø6X30mm	
C	X4

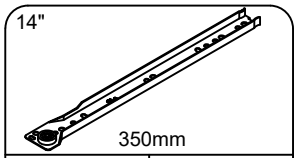


CL	X2

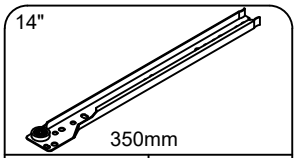


CR	X2





Ø3.5X12mm	
D	X12

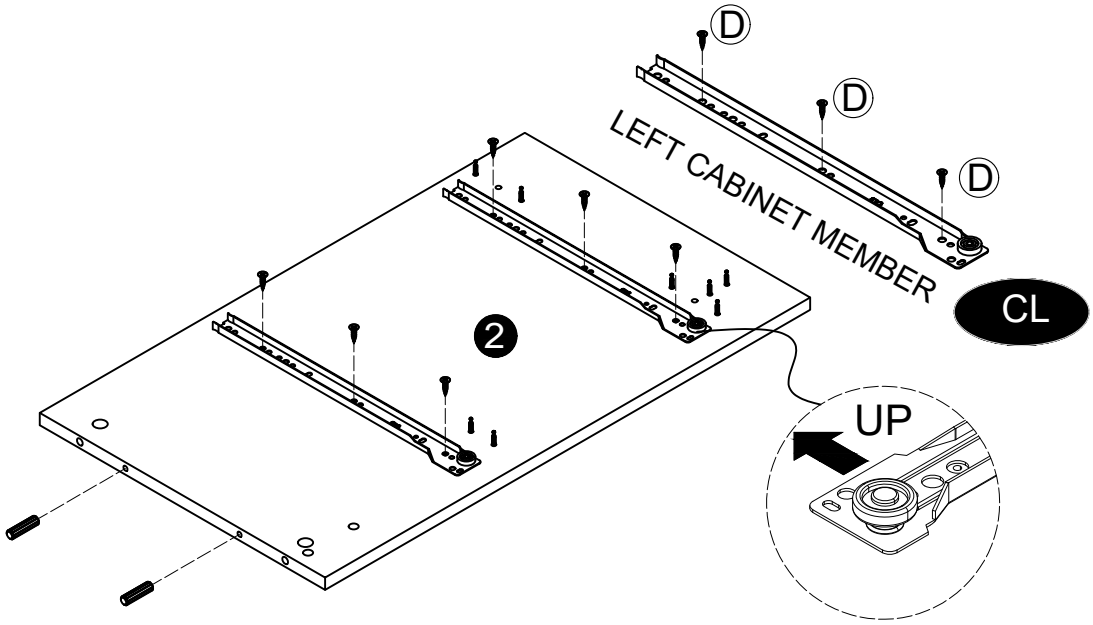


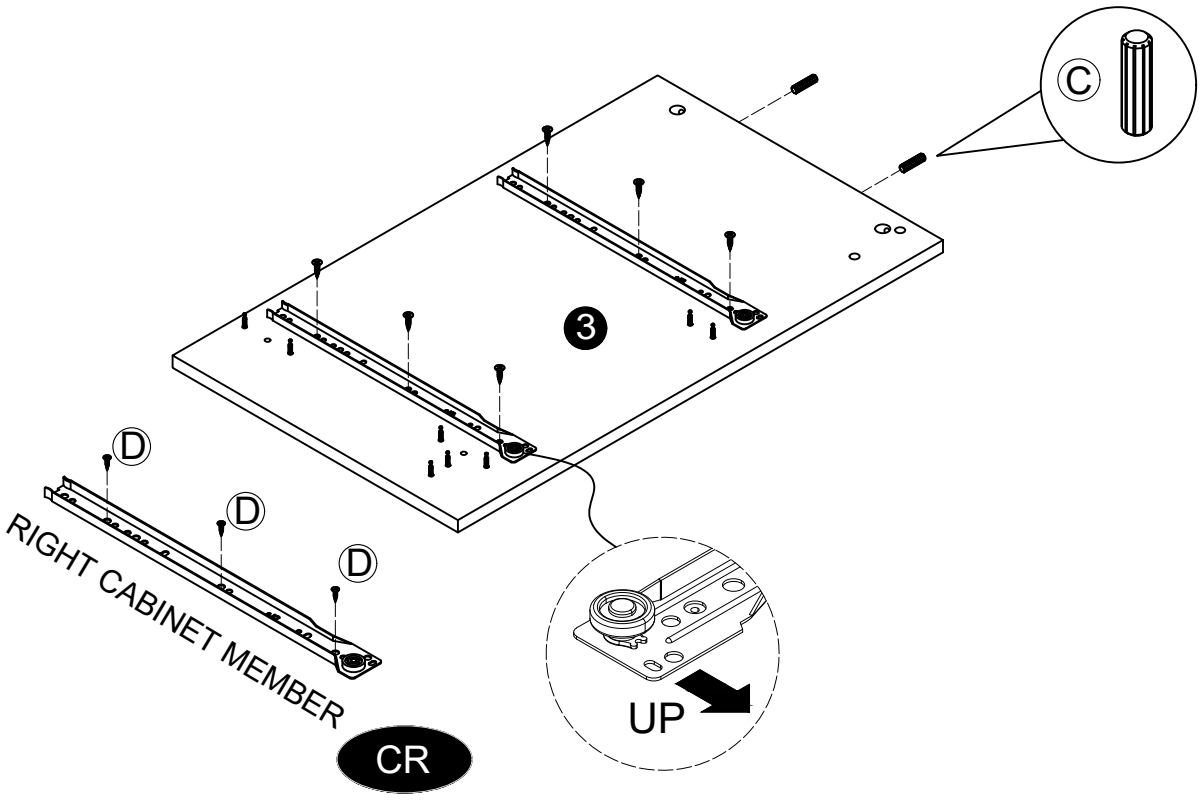



STEP3

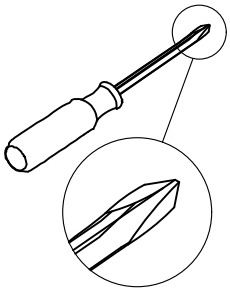


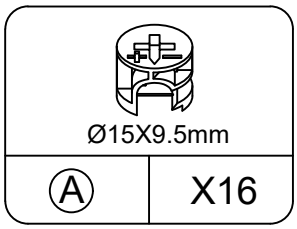

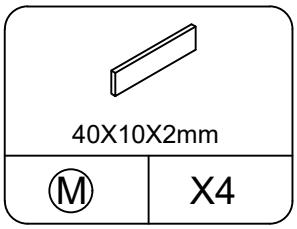

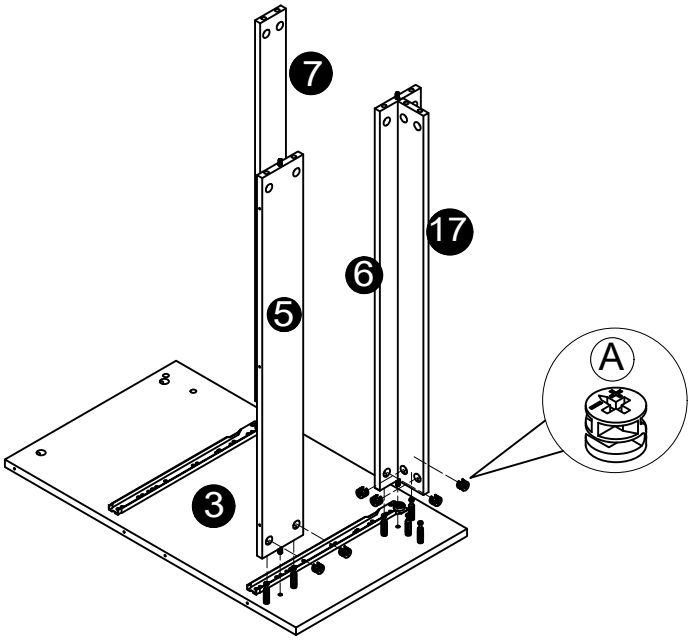


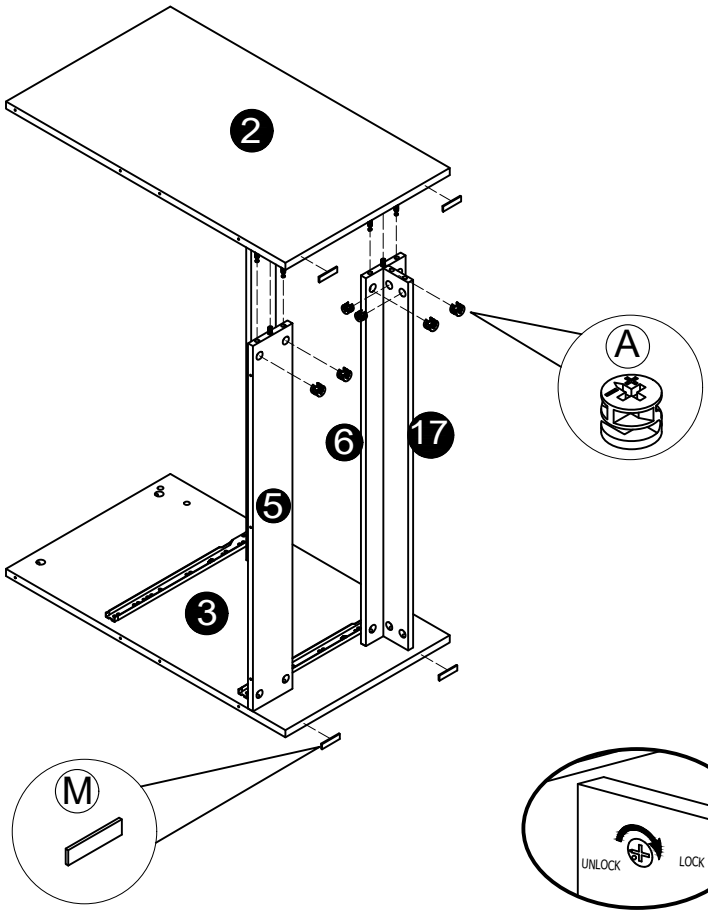

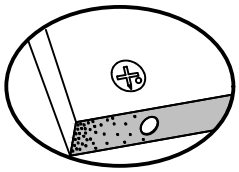



Proper orientation of CAM LOCK


STEP4

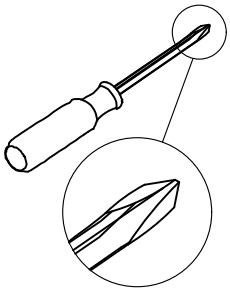


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm
A X4	B X8	C X4

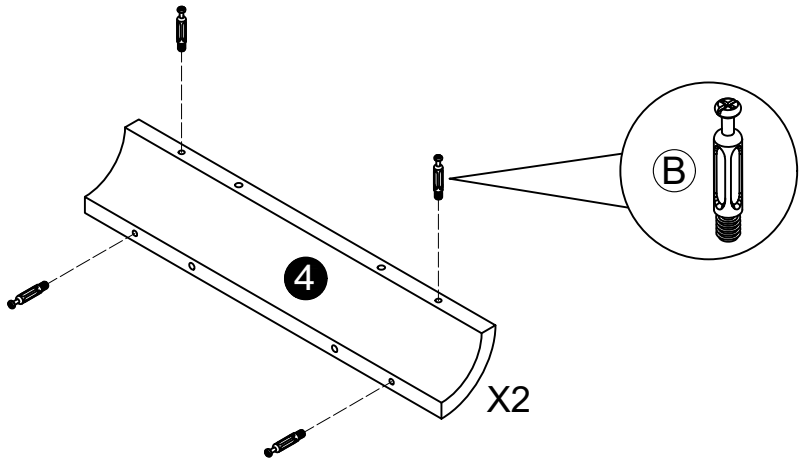

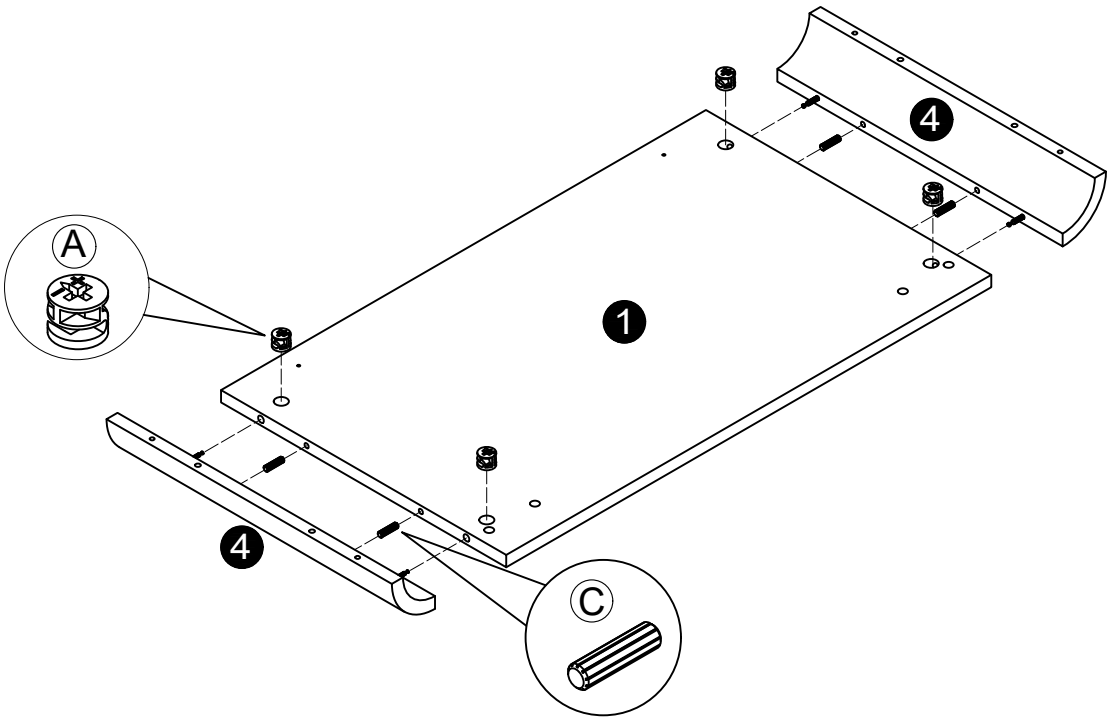


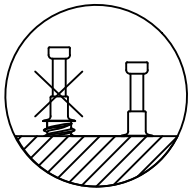


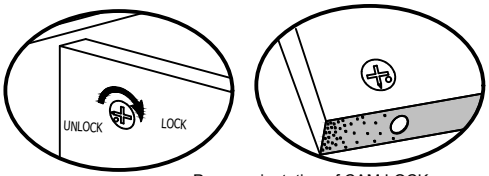



Proper orientation of CAM LOCK


STEP5

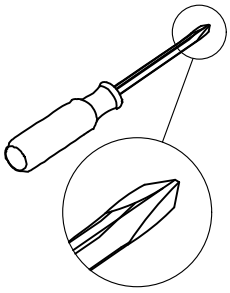


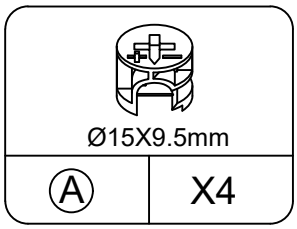

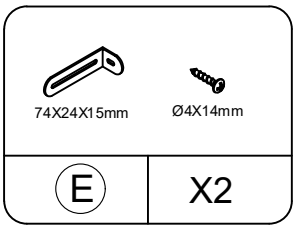

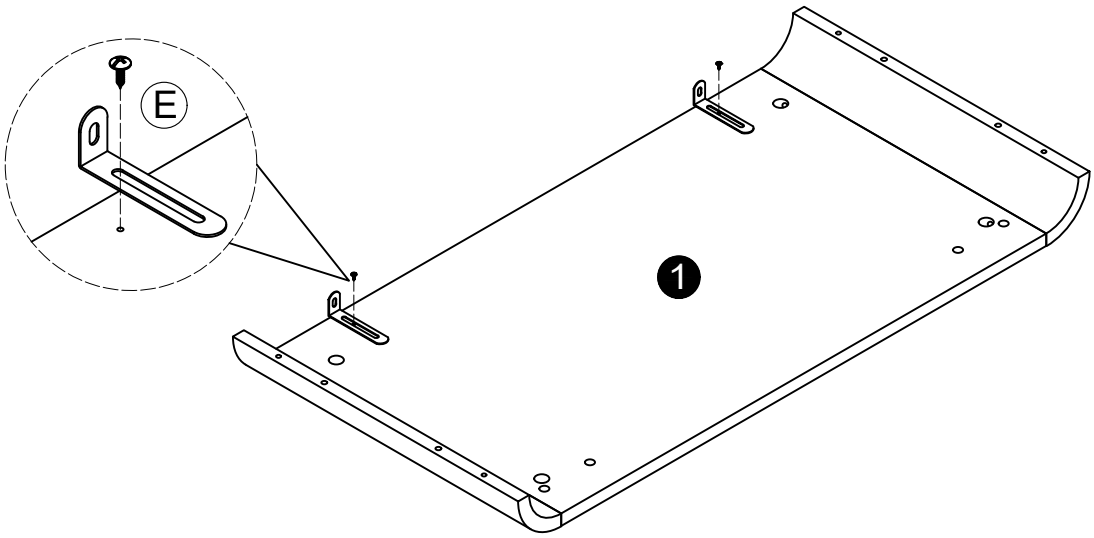


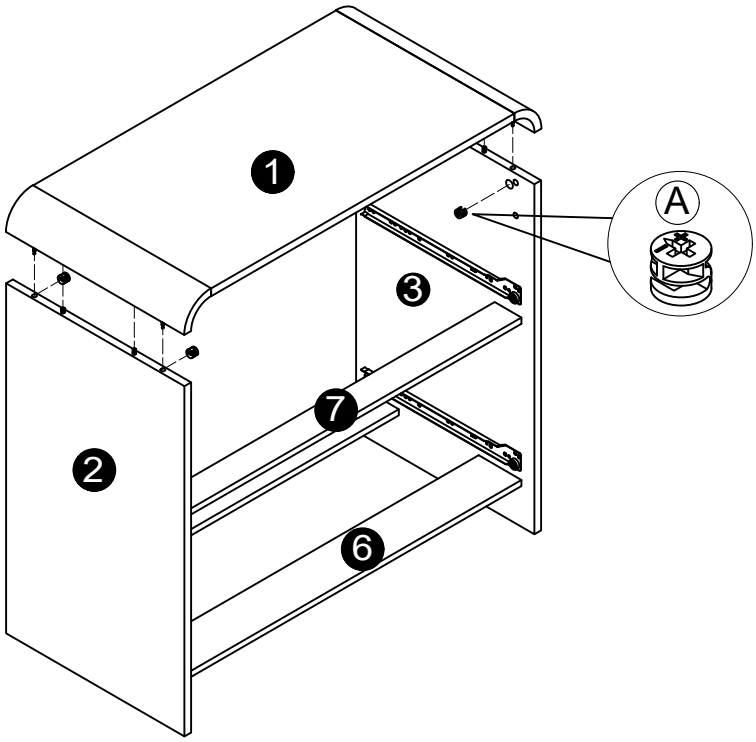

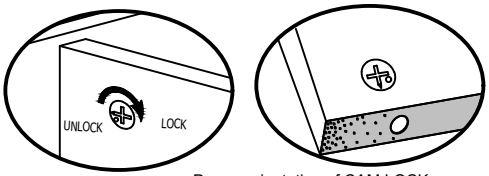



Proper orientation of CAM LOCK

STEP6

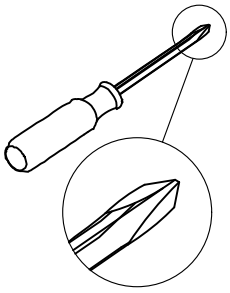



135X135X3mm	M6X10mm	M4	Ø3X14mm
F X2	G X8	H X1	I X14

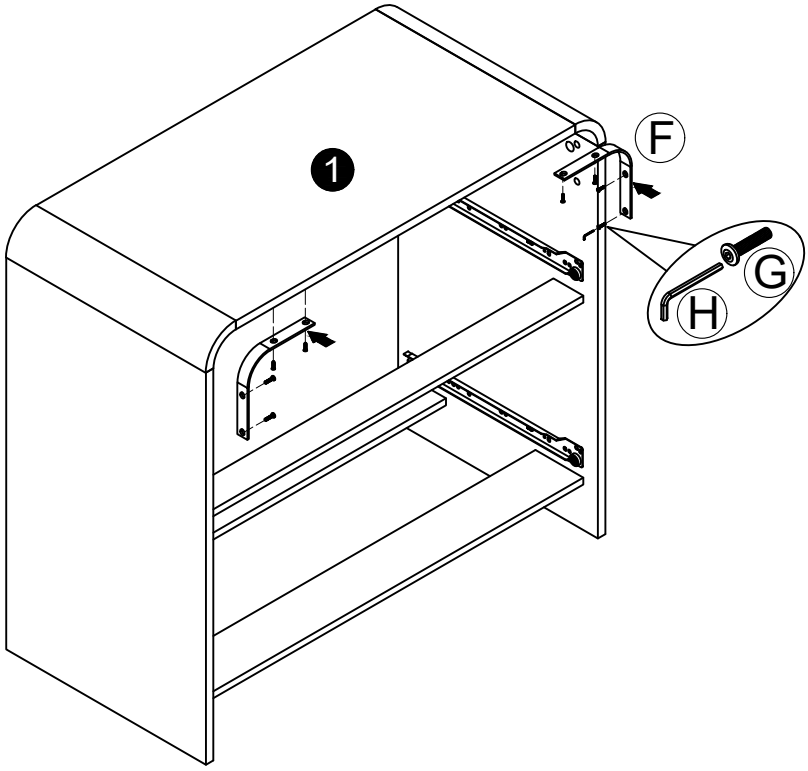


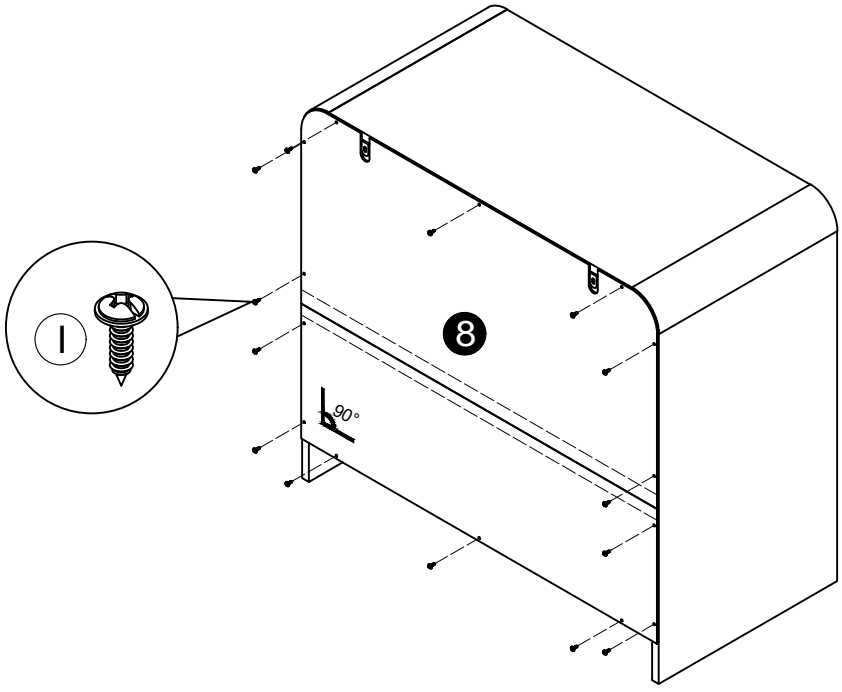


STEP7

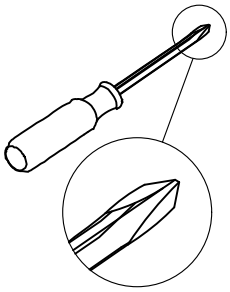


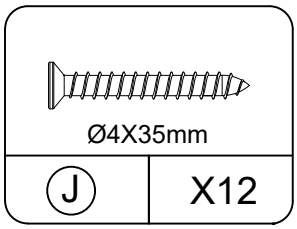


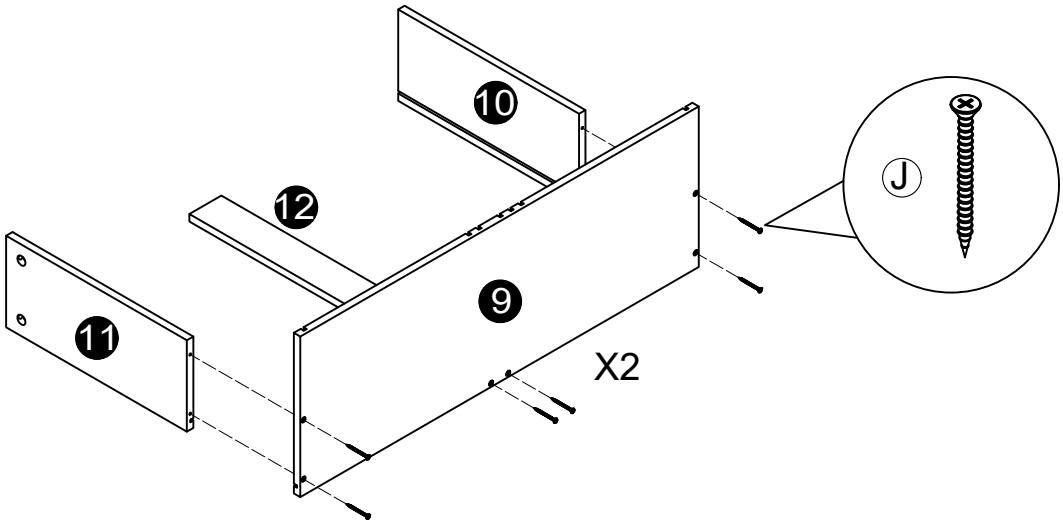


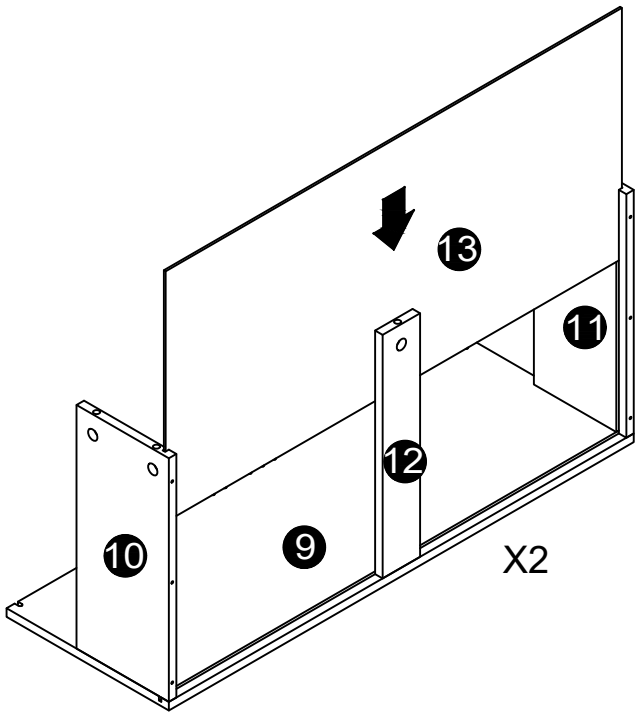



STEP8

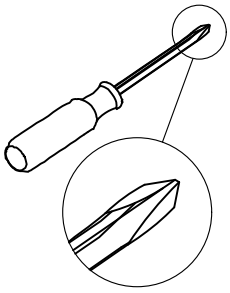


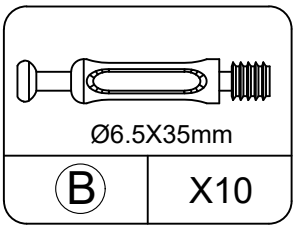

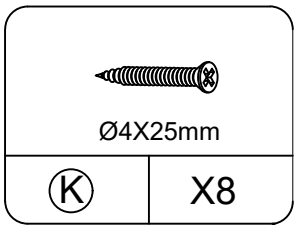


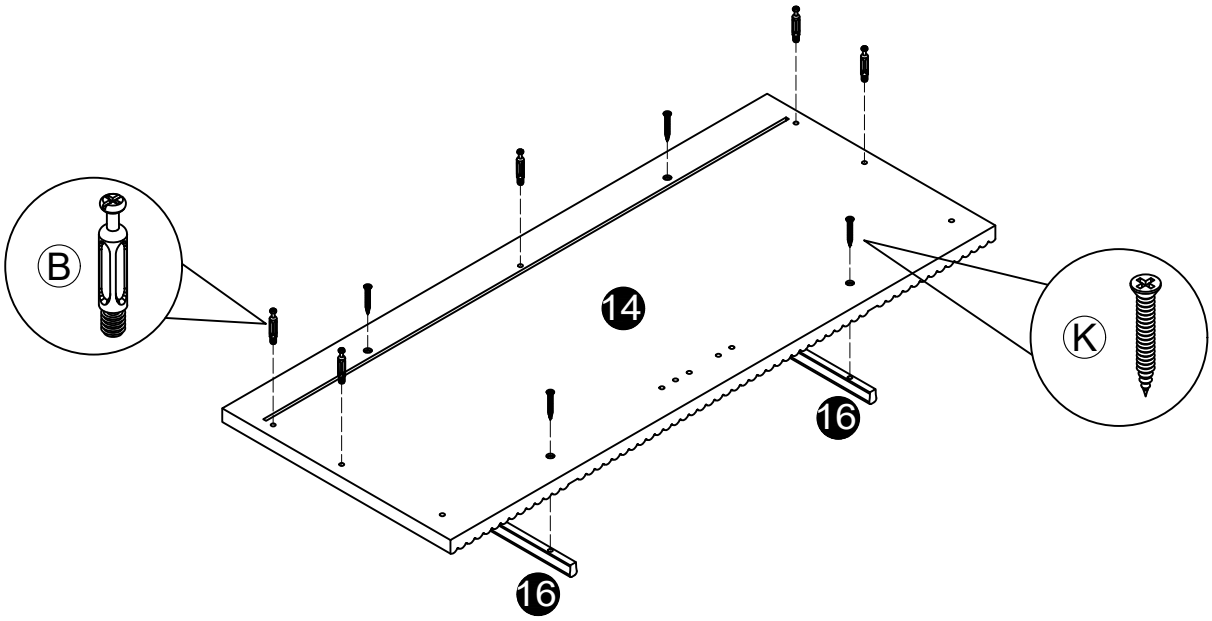


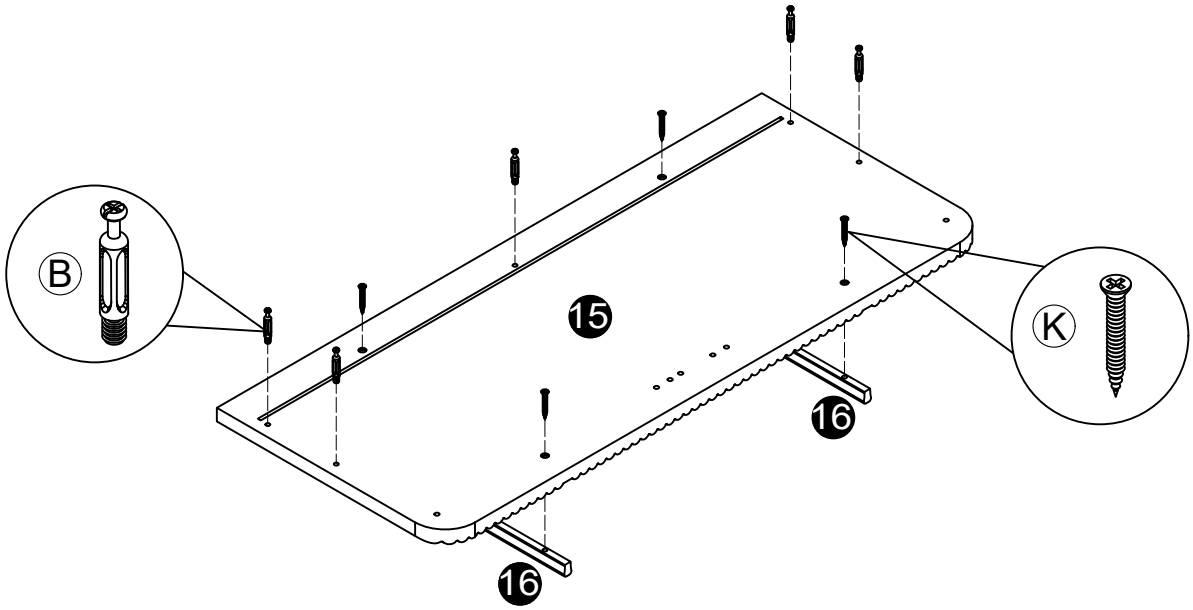


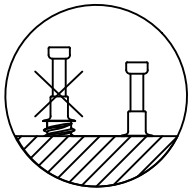



STEP9

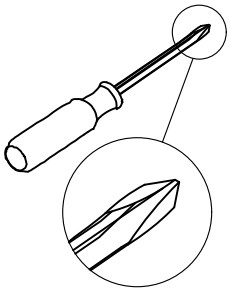

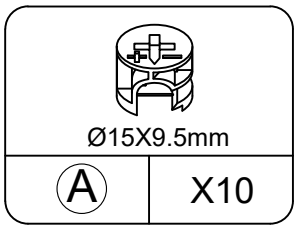

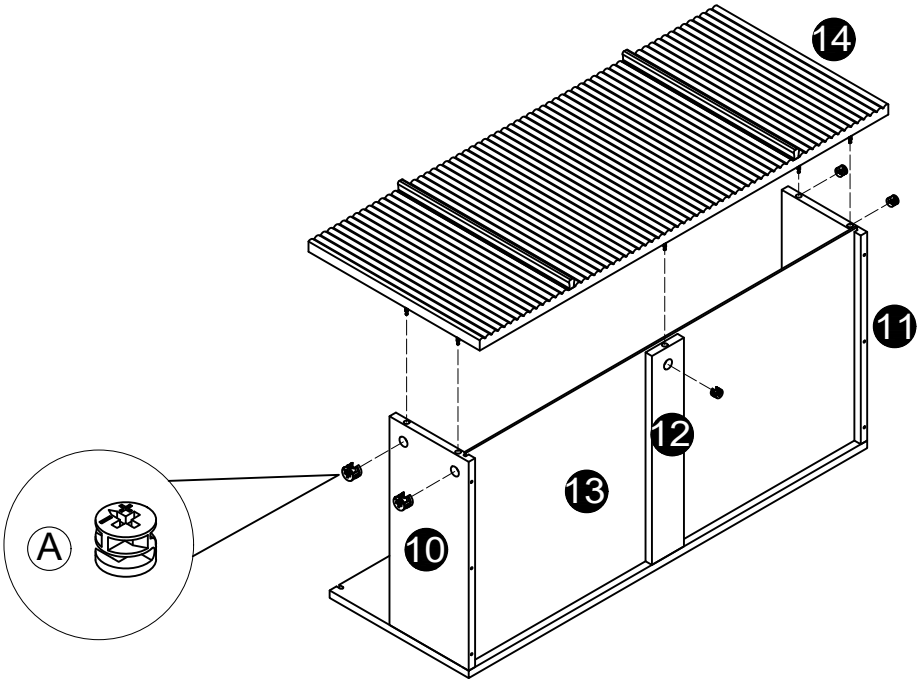


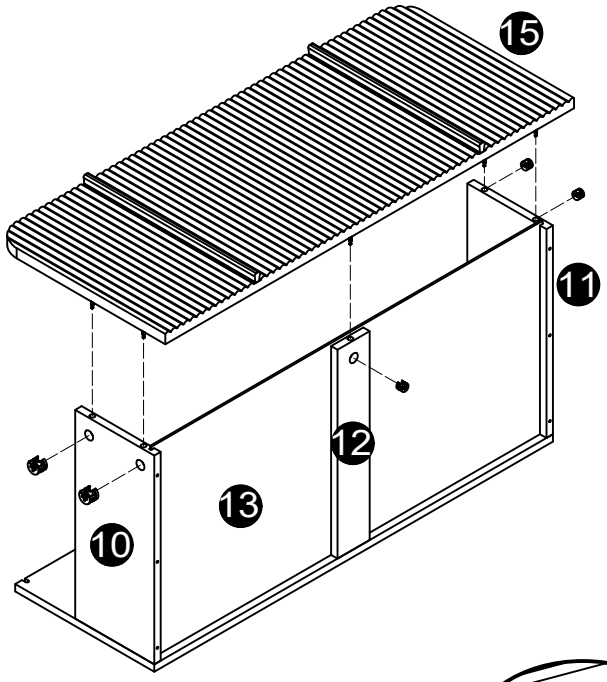

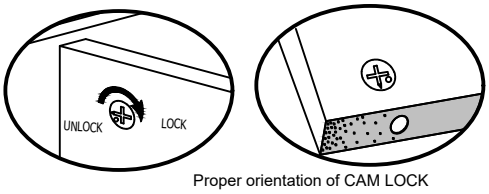

Proper orientation of CAM LOCK


STEP10

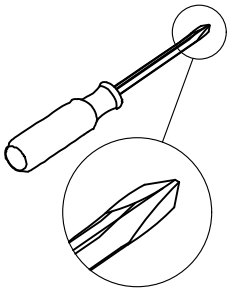


14" 350mm	
DL	X2


14" 350mm	
DR	X2


Ø3.5X12mm	
Ⓓ	X12

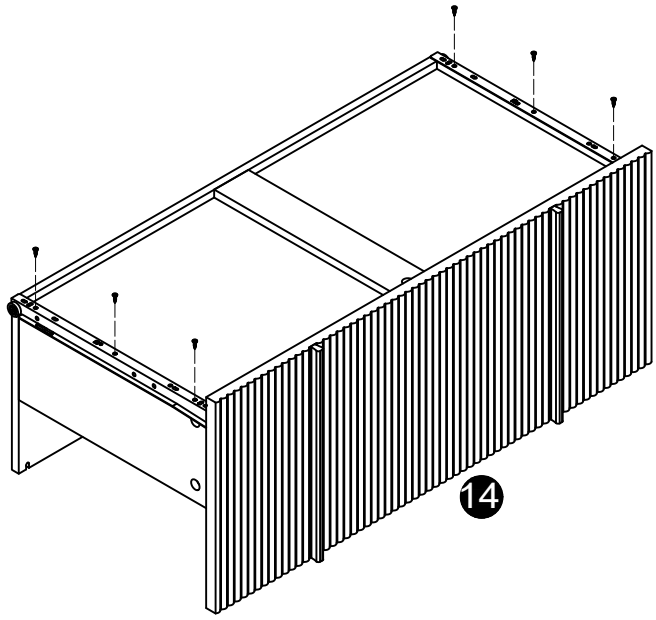


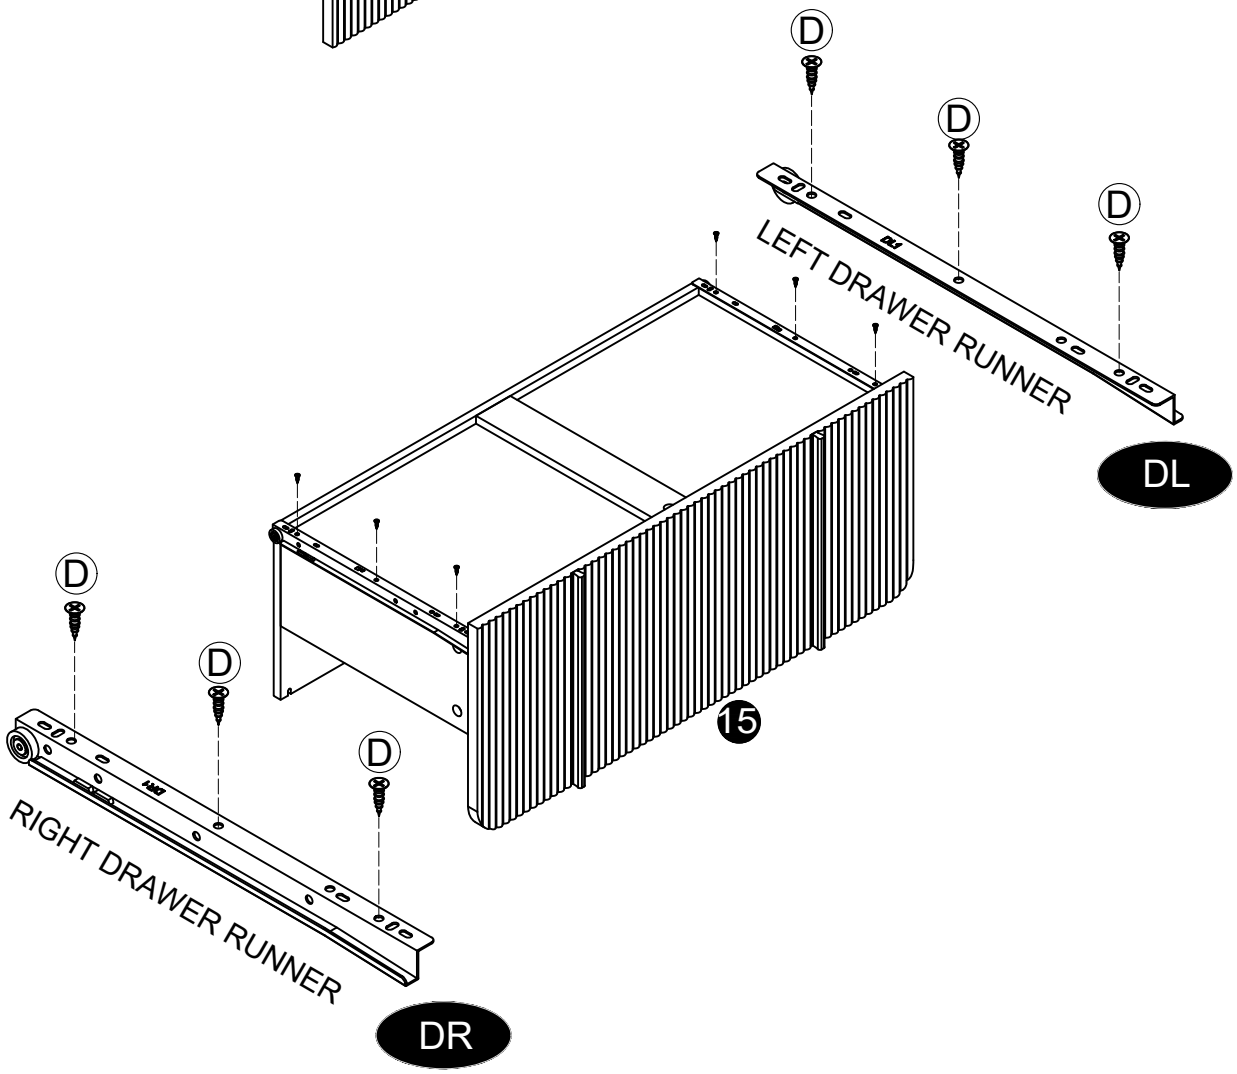


STEP11

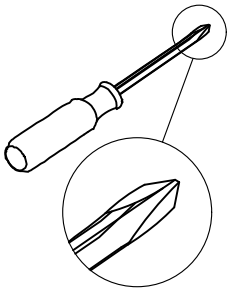


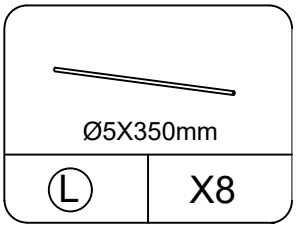

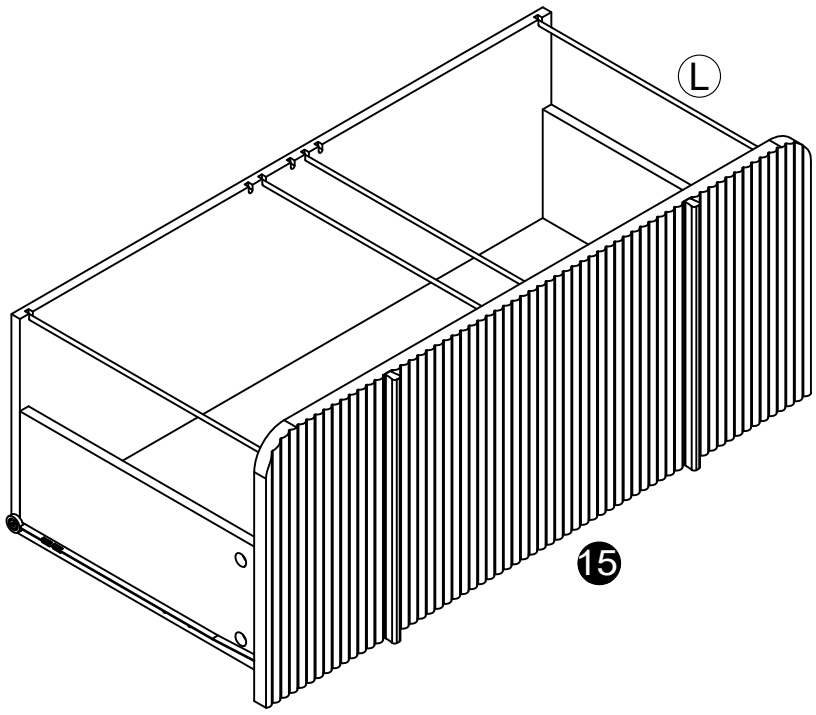

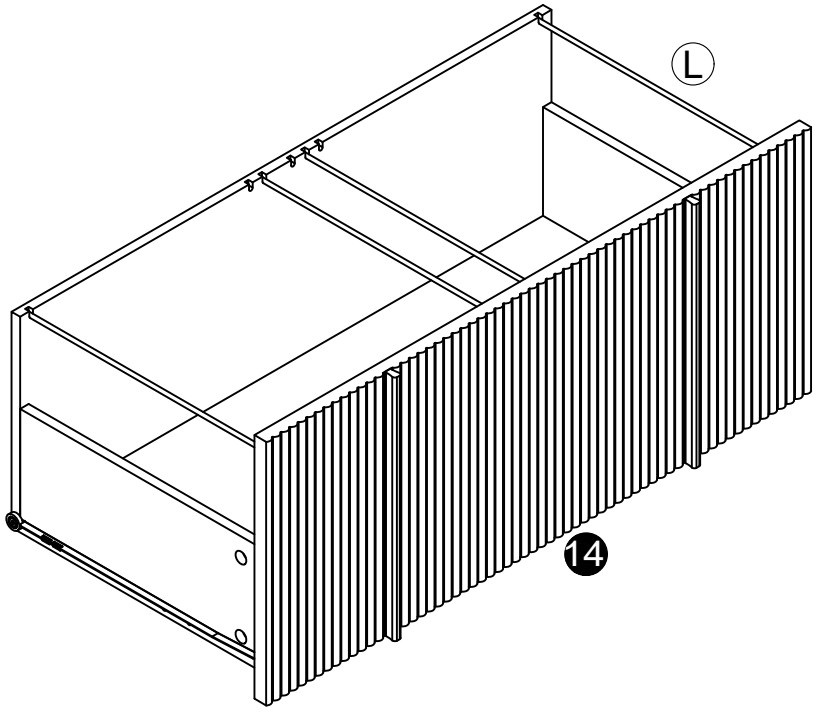


STEP12

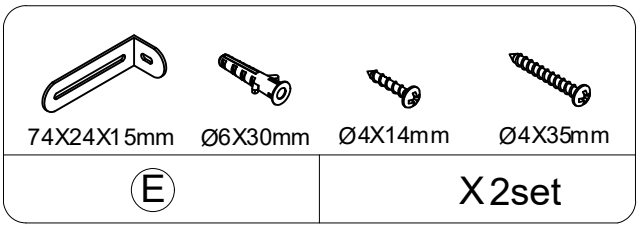


TIPPING RESTRAINT
HARDWARE KIT

Install the tipping restraint hard ware




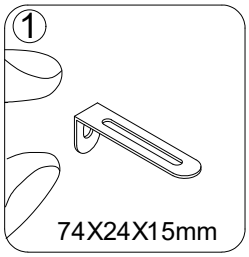


1.make mark on the wall

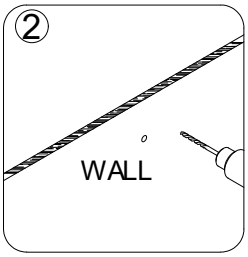

2.drill two Ø6 holes on the wall

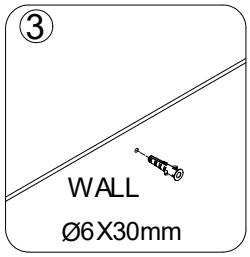


3.put two anchors in the holes

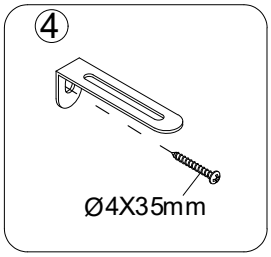

4.fix the device on the wall by the long screws


5.Push the cabinet closer to the wall so tha the two bases are close to each other and tighten them with screws.

STEP13

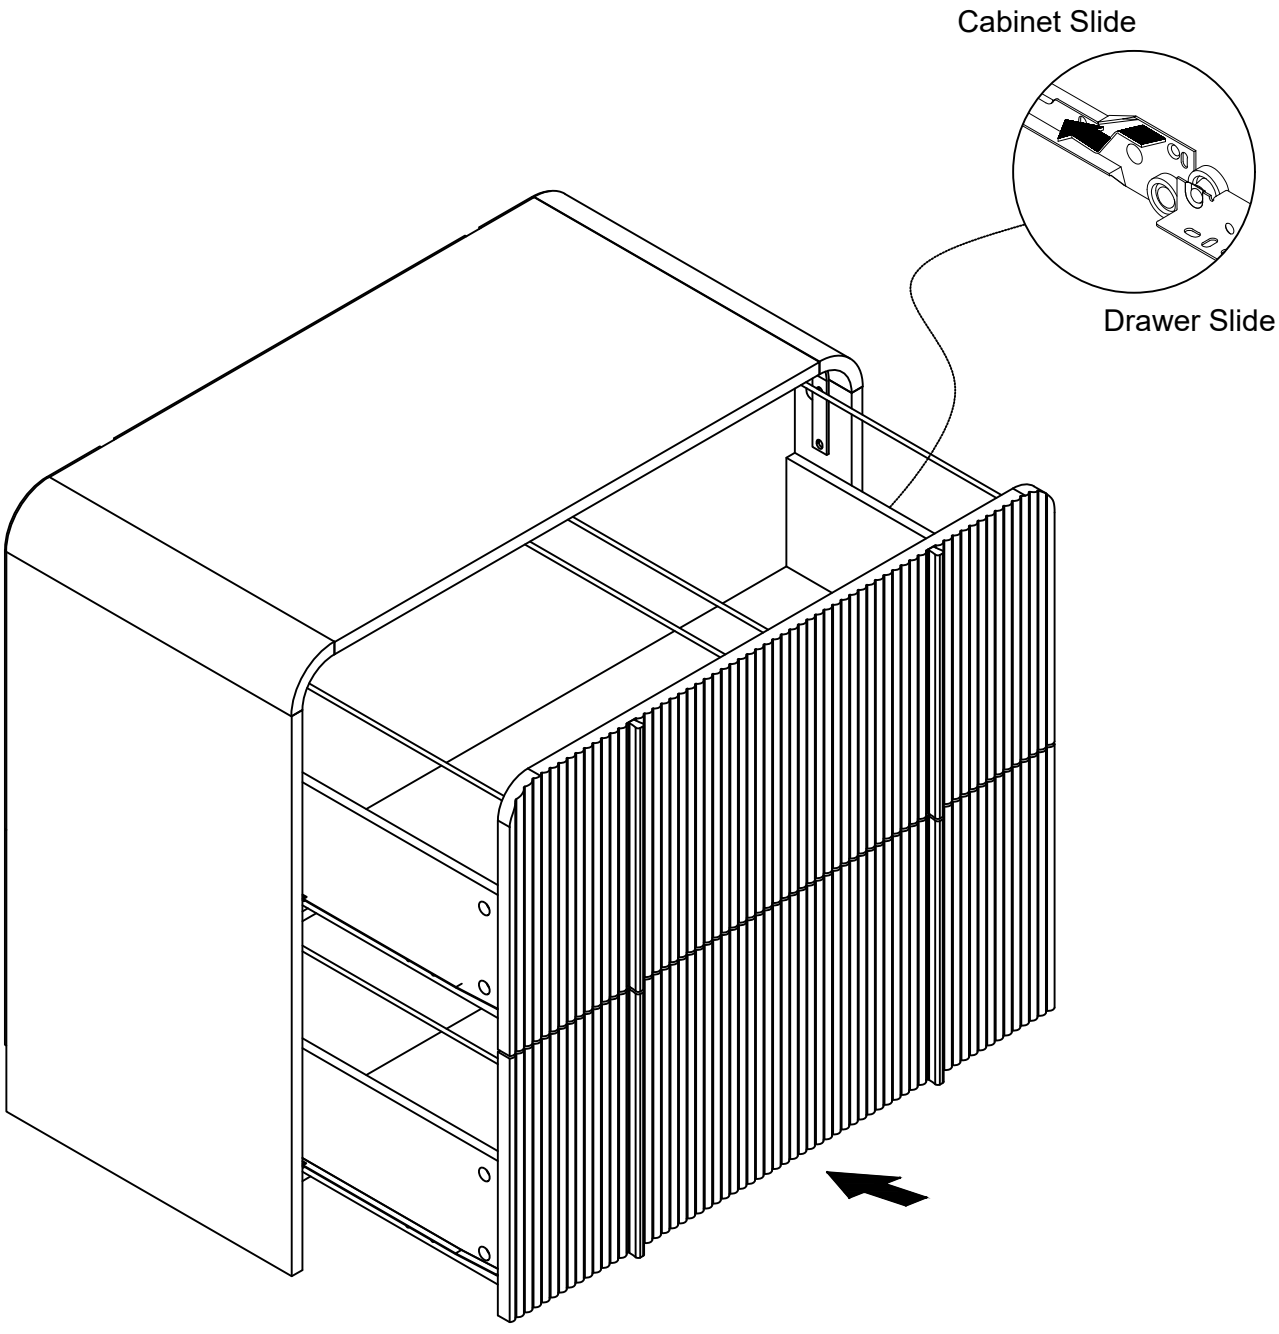

The Item Assemble is Finished.


⚠ WARNING

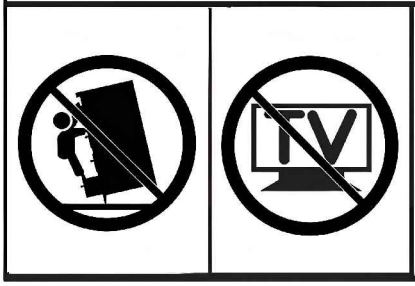

Children have died from furniture tipover. To reduce the risk of furniture tipover:
- •ALWAYS install tipover restraint provided.
- •NEVER put a TV on this product.
- •NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- •NEVER open more than one drawer at a time.
- •Place heaviest items in the lowest drawers.
- •Do not defeat or remove the drawer interlock system.

This is a permanent label.
Do not remove!


⚠ ATTENTION

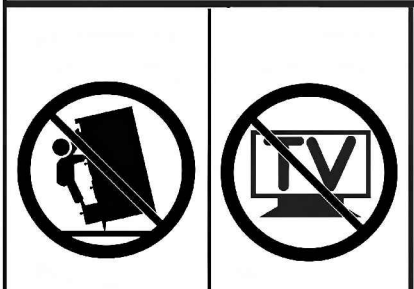

Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:
- • TOUJOURS installer la retenue de basculement fournie.
- • NE JAMAIS mettre de téléviseur sur ce produit.
- • NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- • N'ouvrez JAMAIS plus d'un tiroir à la fois.
- • Placez les objets les plus lourds dans les tiroirs les plus bas.
- • Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.
Ne pas enlever!

⚠ WARNUNG

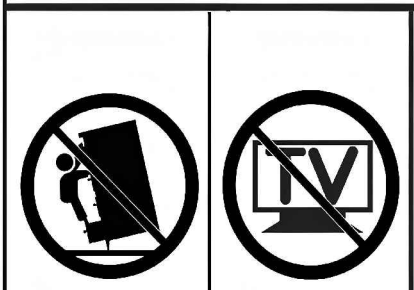

Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:
- • Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- • Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- • Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- • Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- • Legen Sie schwerste Gegenstände in die untersten Schubladen.
- • Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.
Nicht entfernen!