


PRODUCT DISPLAY

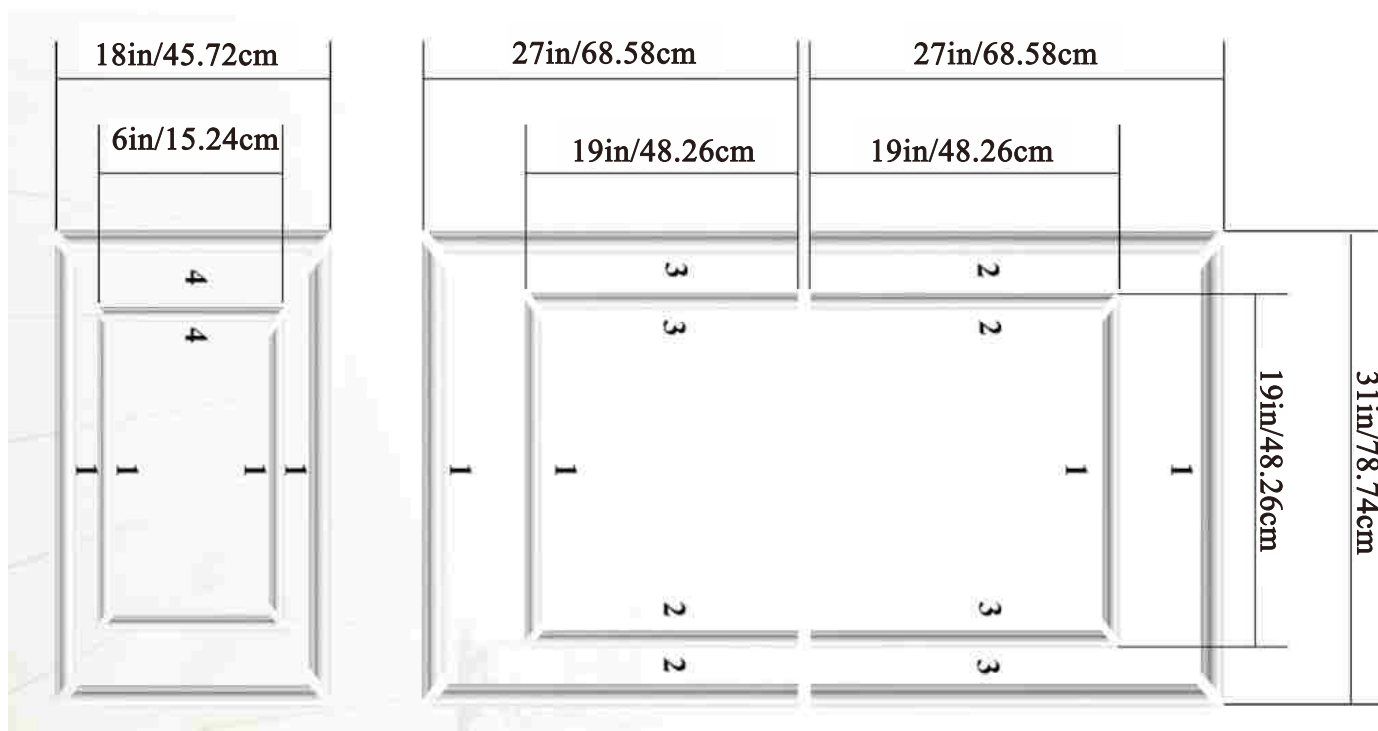


- | | | |
|---|-----------------------------|------|
| ① | 31in | 12pc |
| ② | 27in 12pc | 12pc |
| ③ | 19in(2 cut angles)12pc | 12pc |
| ④ | 19in(1 cut angle 1flat)12pc | 12pc |
| ⑤ | 18in 6pc | 6pc |
| ⑥ | 6in 6pc | 6pc |


INSTALLATION INSTRUCTION




Clean the wall surface thoroughly.

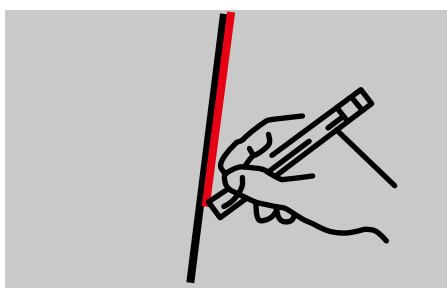


After confirming the dimensions, use a pencil and a ruler to mark the appropriate positions.

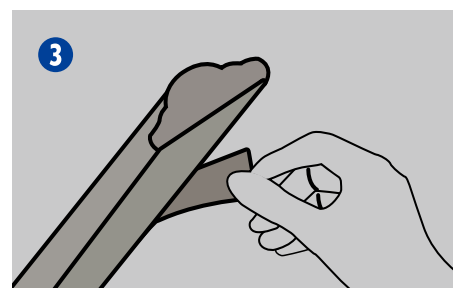


Tear off the white adhesive tape on the back side.

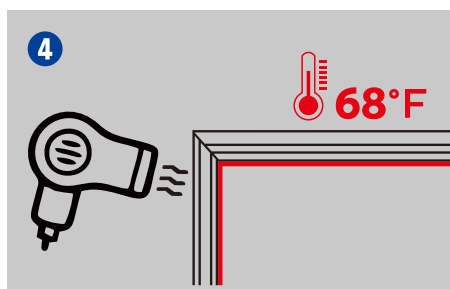

Start sticking along the marked positions on the wall. Note: If the room temperature is below 68°F use a hair dryer or a heat gun to warm up the adhesive strip before installation.

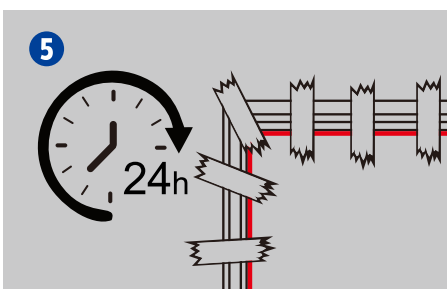

Secure the surface of the trim with tape to prevent it from moving. The adhesive backing will achieve its optimal effect after 24 hours.

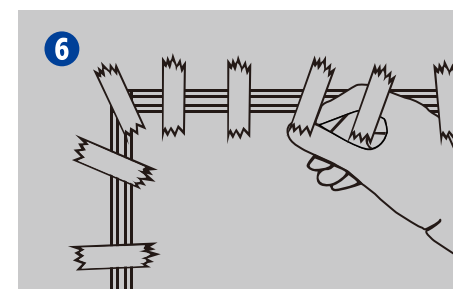

Remove the tape to complete the installation.