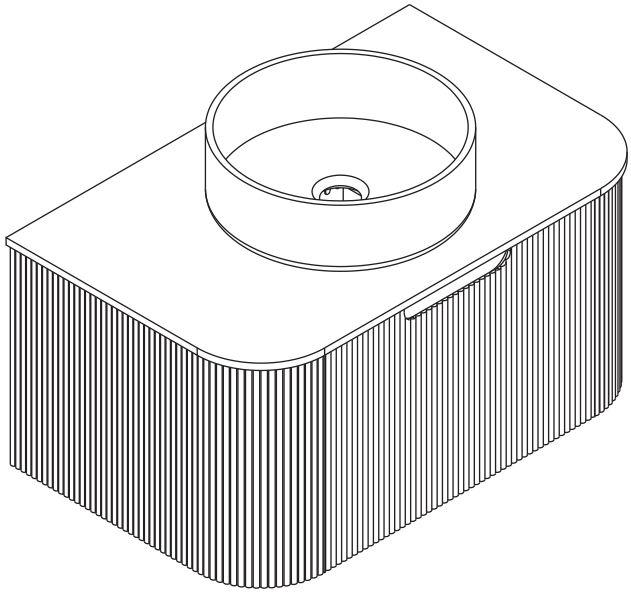


Bathroom Vanity

Notice:

1.Follow the installation instructions. Please confrm all accessories are preset before installation.

2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

3. If you encounter any problems during installation, please contact our customer service.

4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.







Recommended installers : 2





Put a carpet on the floor before unpacking





Estimate installation time: 30 minutes

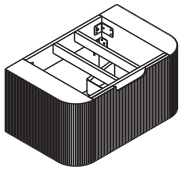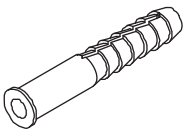Item no.	Reference Image	Qty
A		x1
B		x1
C		x1
1		x4

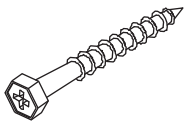
Item no.	Reference Image	Qty
2		x4
3		x4
4		x6

1

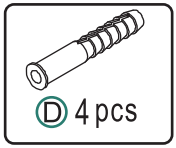


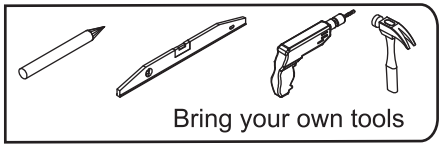


Solid color cabinet hanging hole size

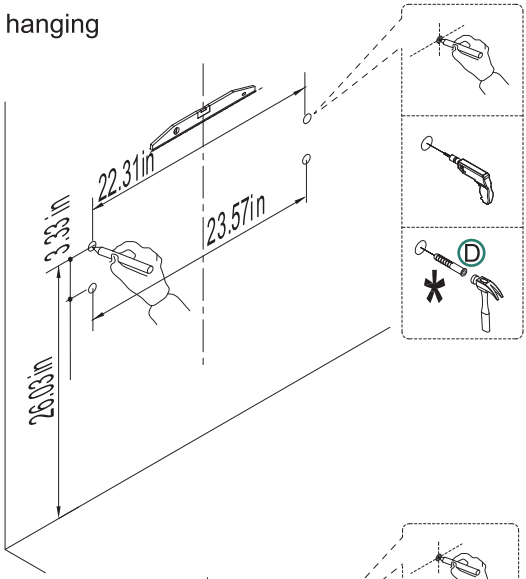


Wood grain cabinet hanging wall hole size

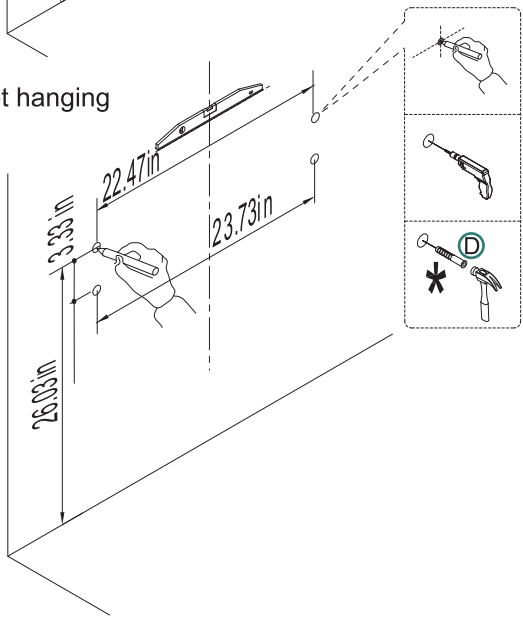



2

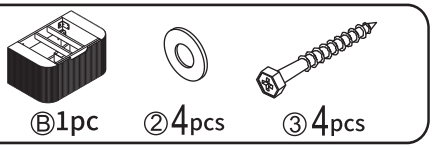

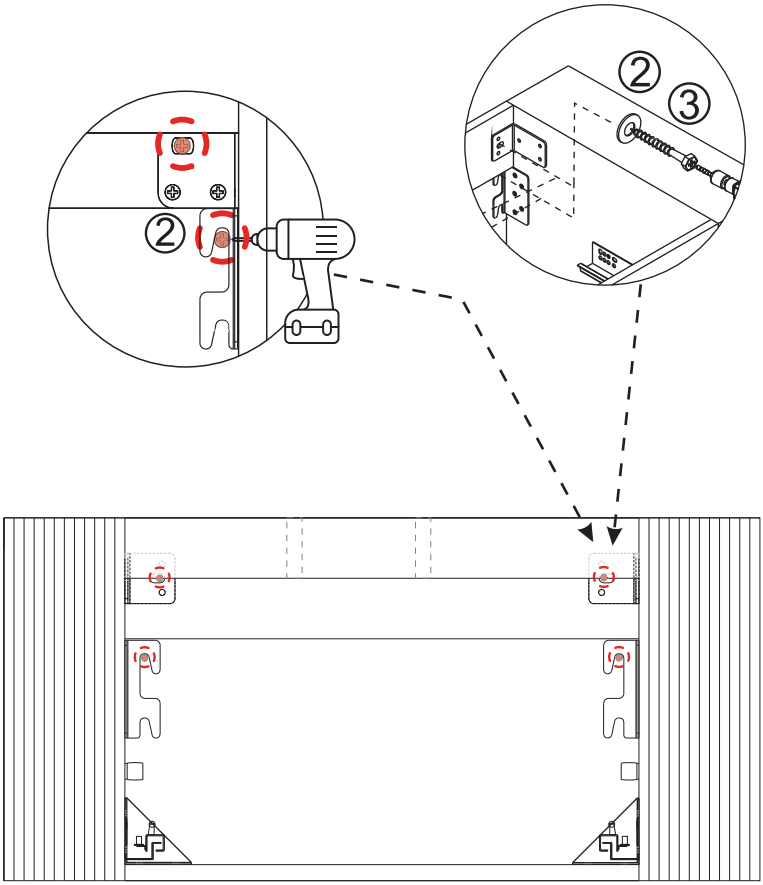

3

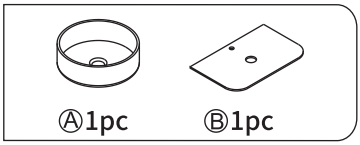


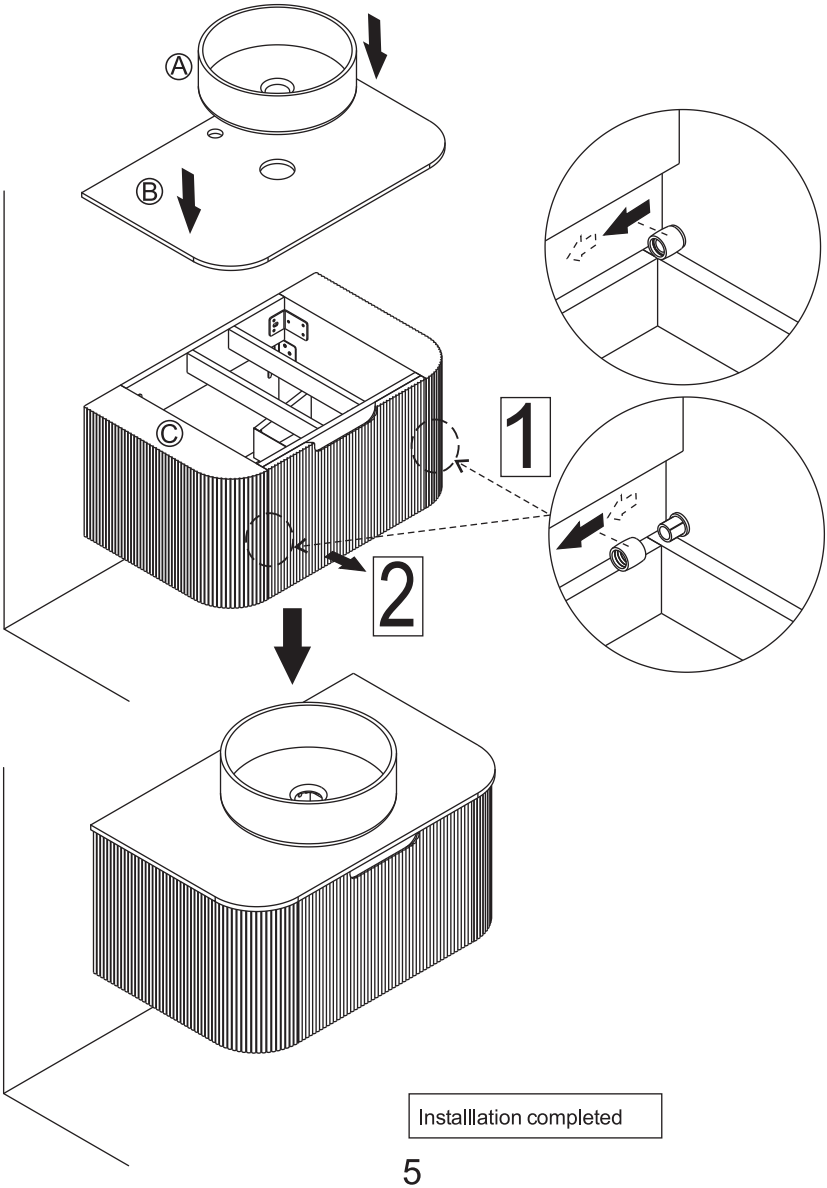



Installlation completed

4

Installation of drain assembly

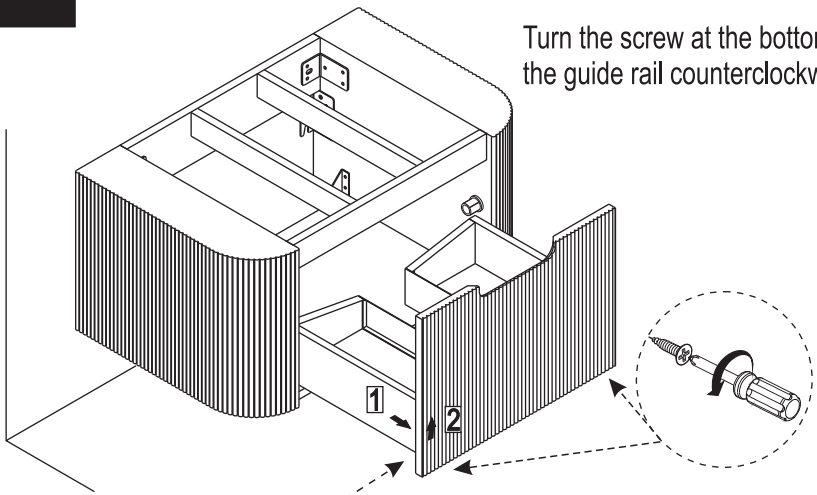

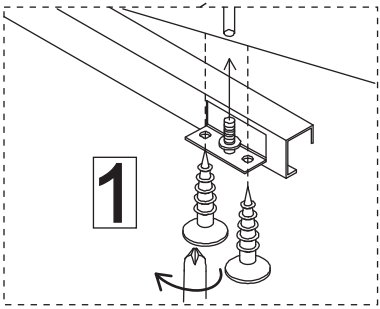

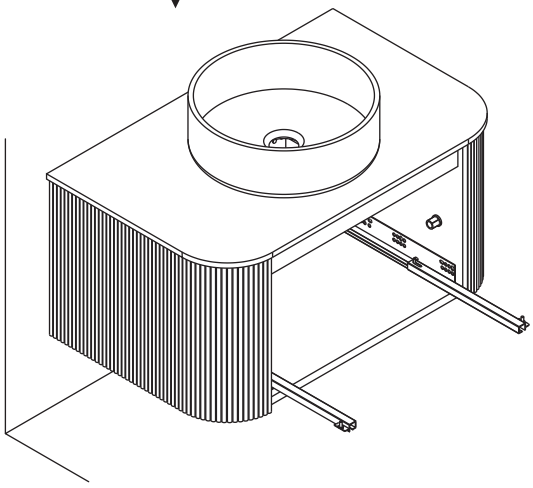


Move out the drawer

5





④6pcs

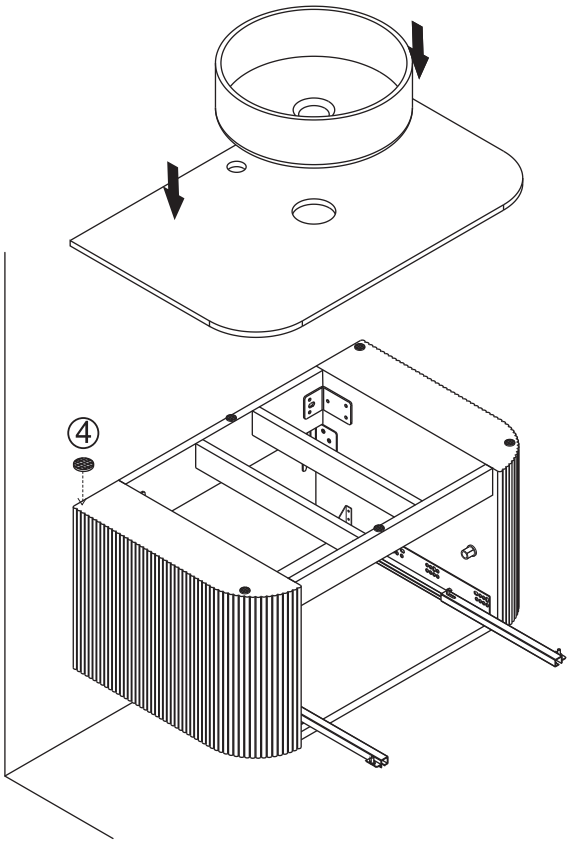



Installation of drain assembly


6

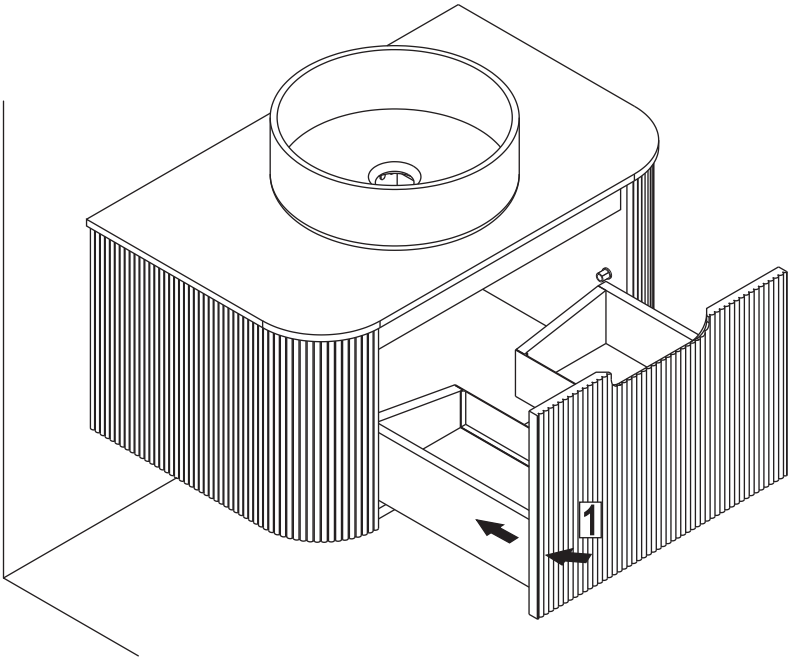

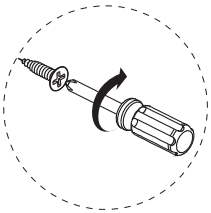

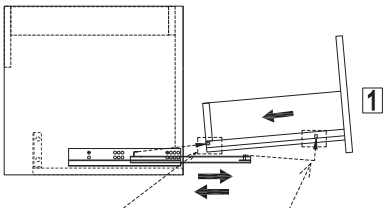

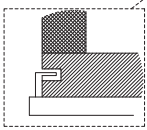

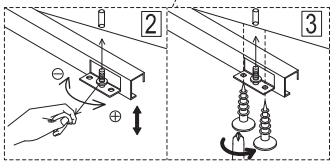

Installlation completed