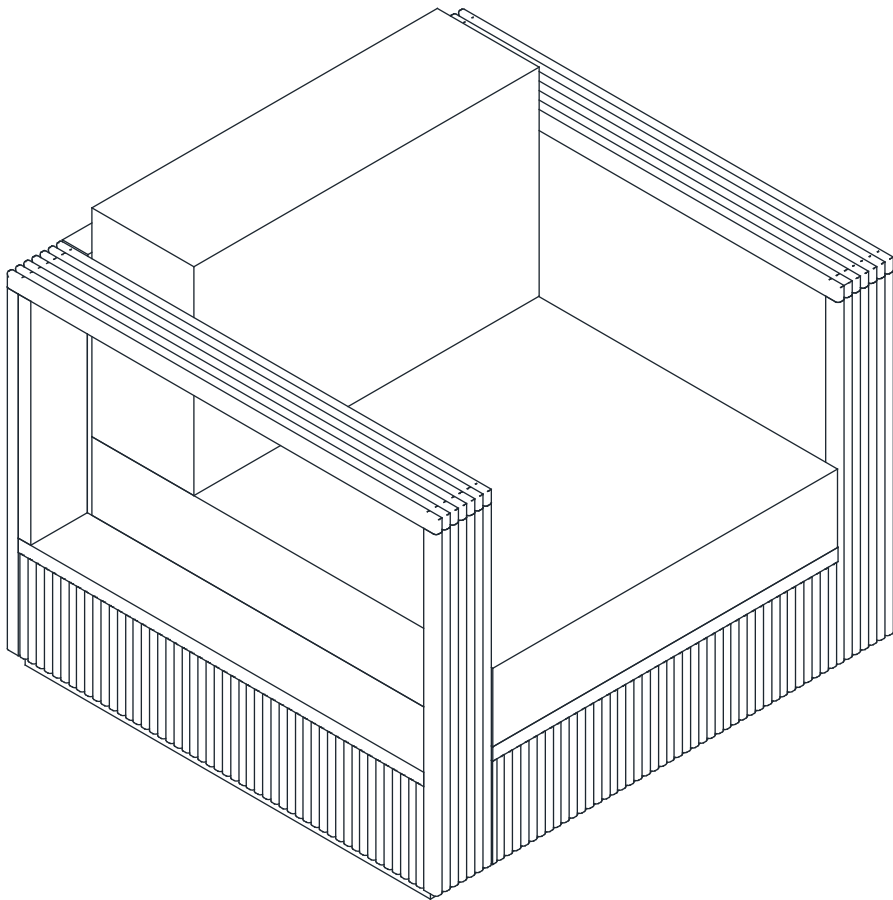








TEAK WOOD PATIO CHAIR

Assembly Instructions



Every thing we make is incredibly simple to set up, including your new chair. You won't need any additional tools.

Parts List


A x 1 Right leg Panel	
B x 1 Left leg Panel	
C x 1 Front panel	
D x 1 Back panel	
E x 1 Seat panel	
CSH1 x 1 Seat Cushion	
CSH2 x 1 Back Cushion	

Hardware List

HW1 x 8 Allen Bolt: M6x0.5x35 mm	
HW2 x 2 Allen Screw: M6x0.5x35 mm	
HW3 x 1 Allen key	


1

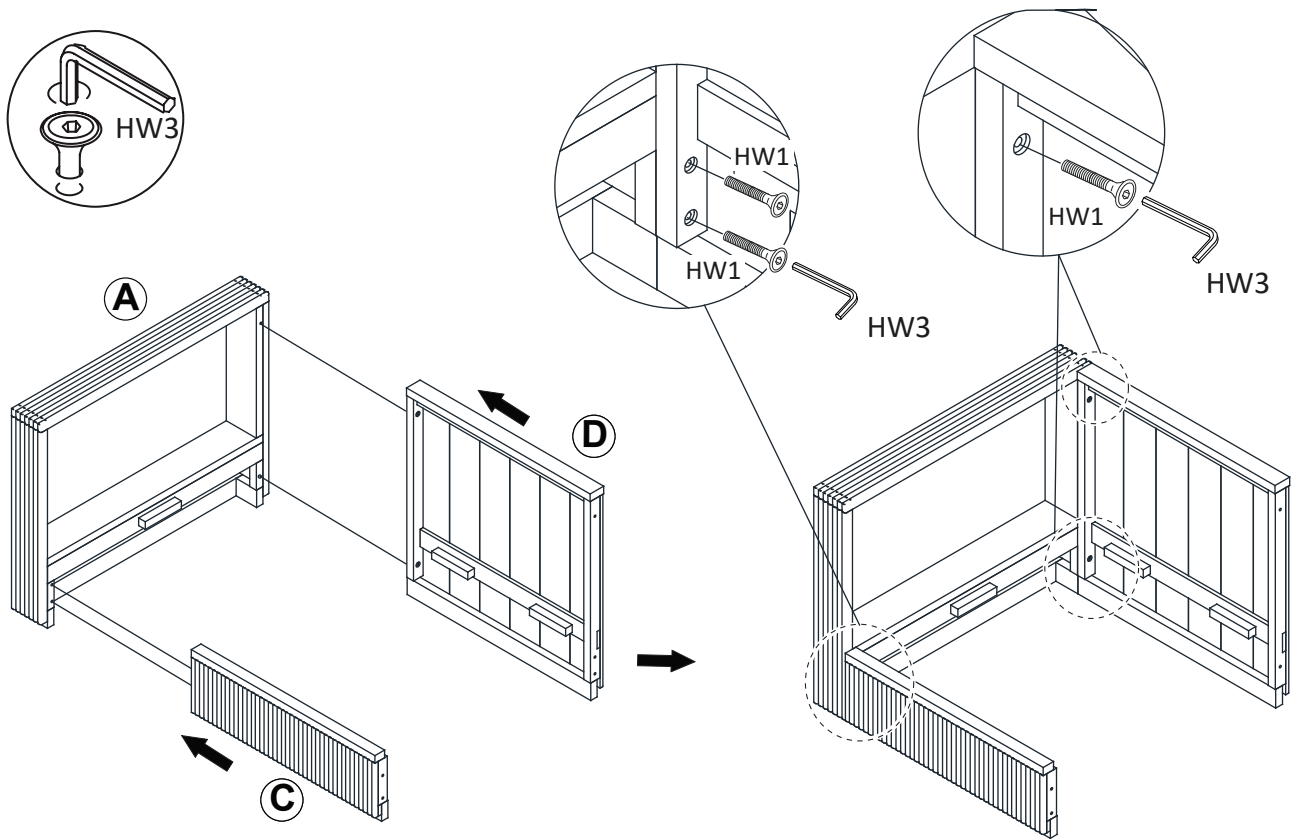Attach Front panel (C), and Back panel (D) to Right leg Panel (A) ,use Bolt (HW1) tighten with allen key (HW3).in the spots shown below.




2

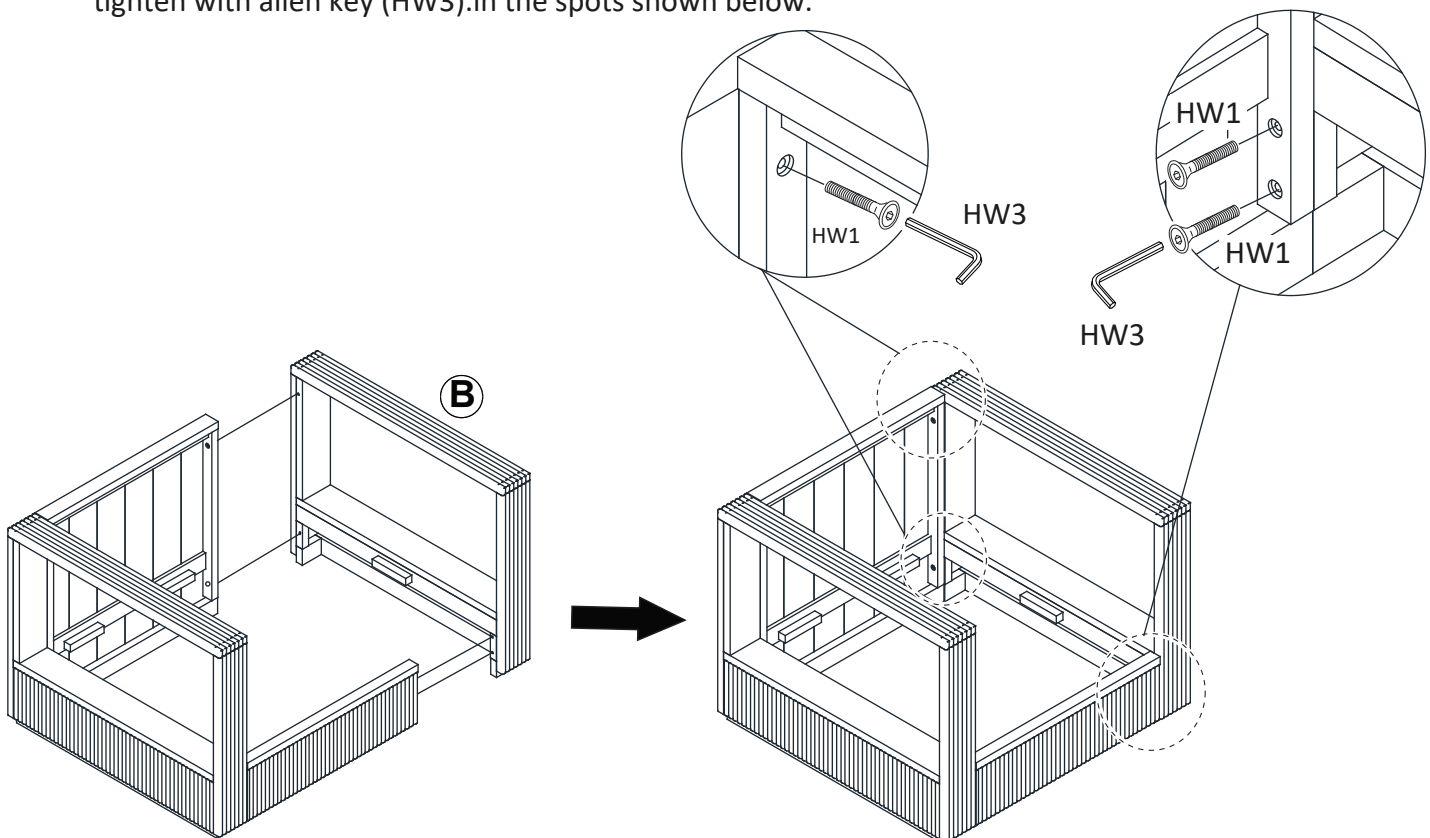
Attach Left leg Panel (B) to Front panel (C) and Back panel(D),use Bolt (HW1) tighten with allen key (HW3).in the spots shown below.



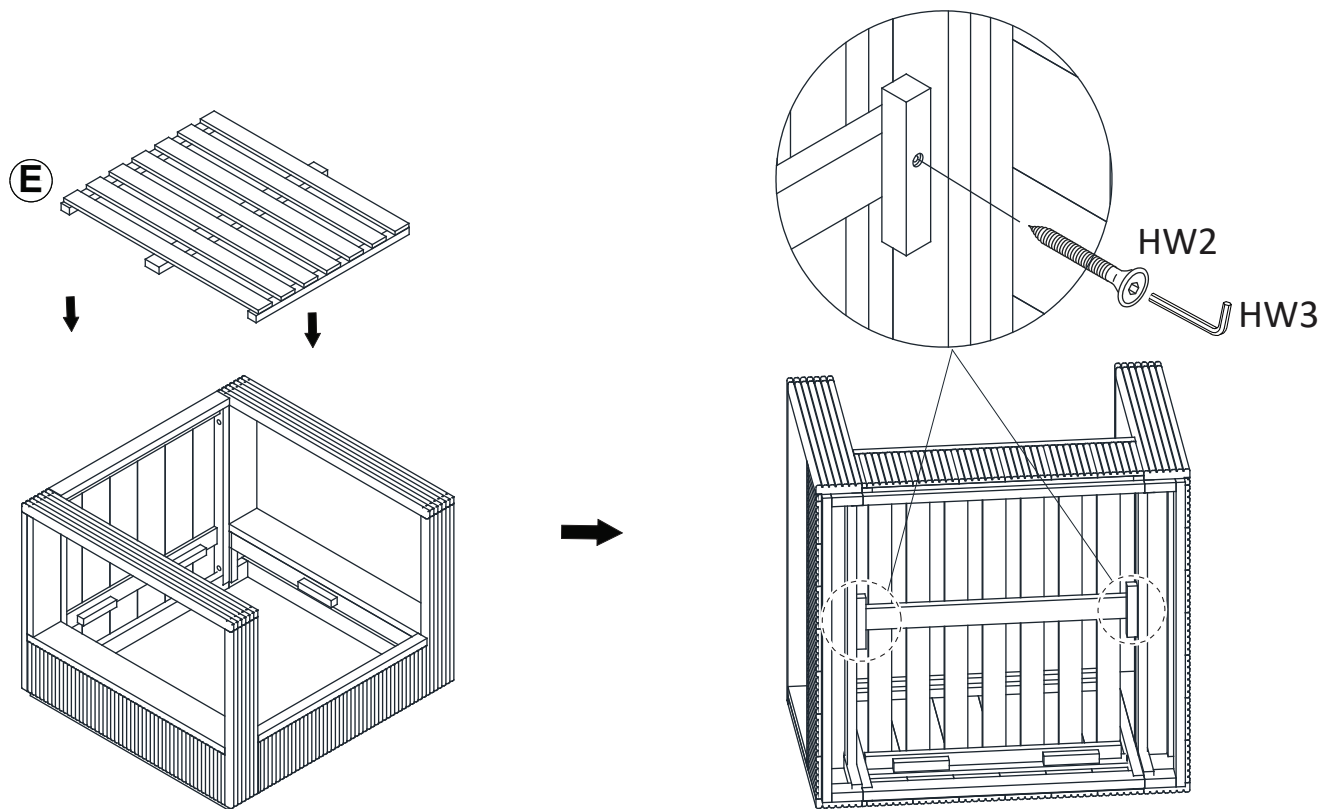Attach Seat panel (E) to ArmChair .Use Screw (HW2) tighten with allen key (HW3).
in the spots shown below.



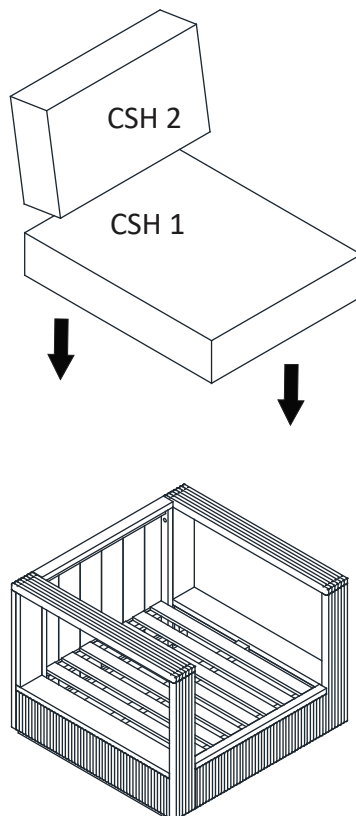Attach Seat Cushion (CSH 1) and Back Cushion (CSH2) in Chair.



Place the chair in the place where you will use it. We'd love to see it – just tag us and use the hashtag on Instagram!

