




Assembly Manual for Rolling Garden Bed 1.75ft x 4.0ft

Gardening Made Easier. Anytime, Anywhere.

Copyright © 2025 Vego



Gardening
Made Easier.
Anytime,
Anywhere.

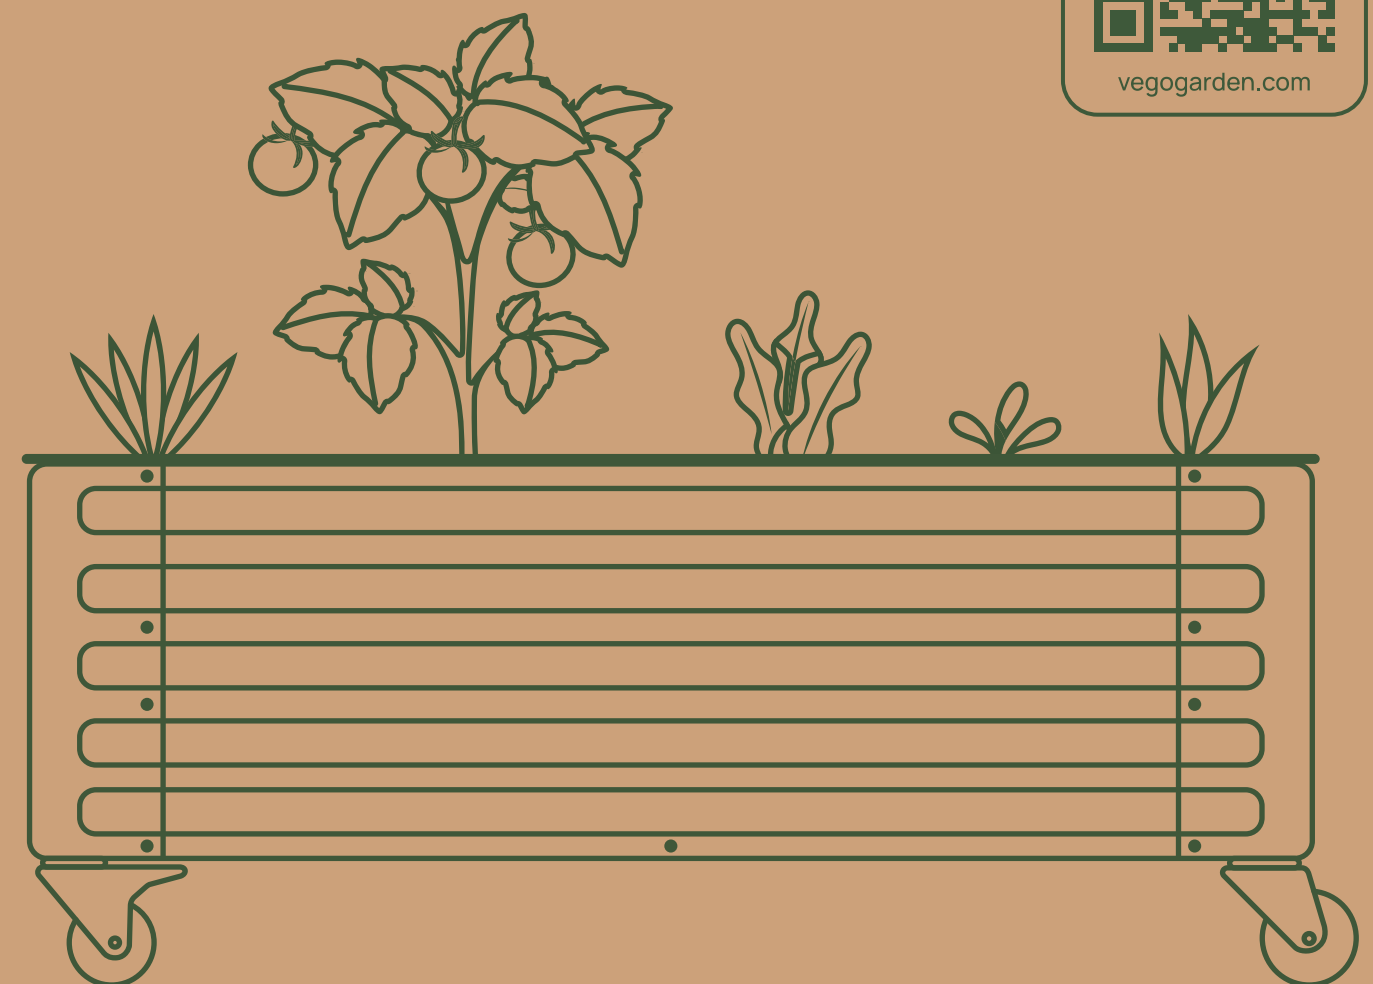

Contact Us



+1 (866) 597-1888



Vego Garden Academy



hello@vegogarden.com



vegogarden.com











vego_garden



Houston, TX

Parts List

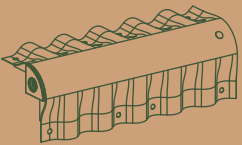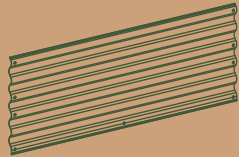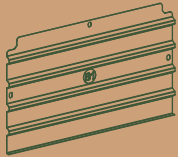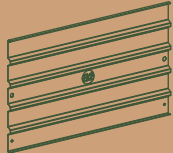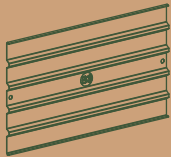			
P1 Qty: 4	P2 Qty: 2	P3 Qty: 2	B1 Qty: 2
			
B2 Qty: 1	B3 Qty: 1	H1 Qty: 2	H2 Qty: 2
			
C1 Qty: 2	C2 Qty: 2	F1 M6x10 Qty: 34	F2 M6 Qty: 16
			
F3 M6x8 Qty: 10	F4 M6x14 Qty: 8	F5 M6 Qty: 18	T1 Qty: 1

	
T2 Qty: 1	SE Qty: 1

Safety Precautions

This product may contain sharp metal corners and edges. To prevent injury:




- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed

If you are unsure about any step, pause and seek assistance.



Tips

- Additional tools are needed to complete this assembly, see below:

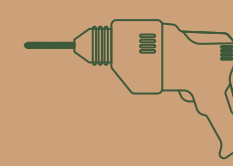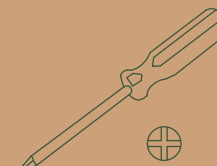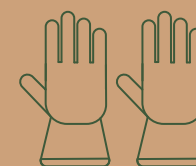


- We recommend two people work together to complete the assembly.
- During assembly, we recommend placing the unpacked box flat on the ground to serve as a protective mat.

Assembly Guide

- 1 Assemble two S1s with F1 bolts, F2 cap nuts, and F5 standard nuts to attach the P1 corner panels and P2 side panels. Install only the top three rows: use F2 cap nuts for the top two rows and F5 standard nuts for the third row.


Notes:

- Make sure the P2 panels are installed on the interior side, with the "UP" labels positioned inside the panels and facing upward.
- Do not tighten the bolts fully to allow for easier final assembly.

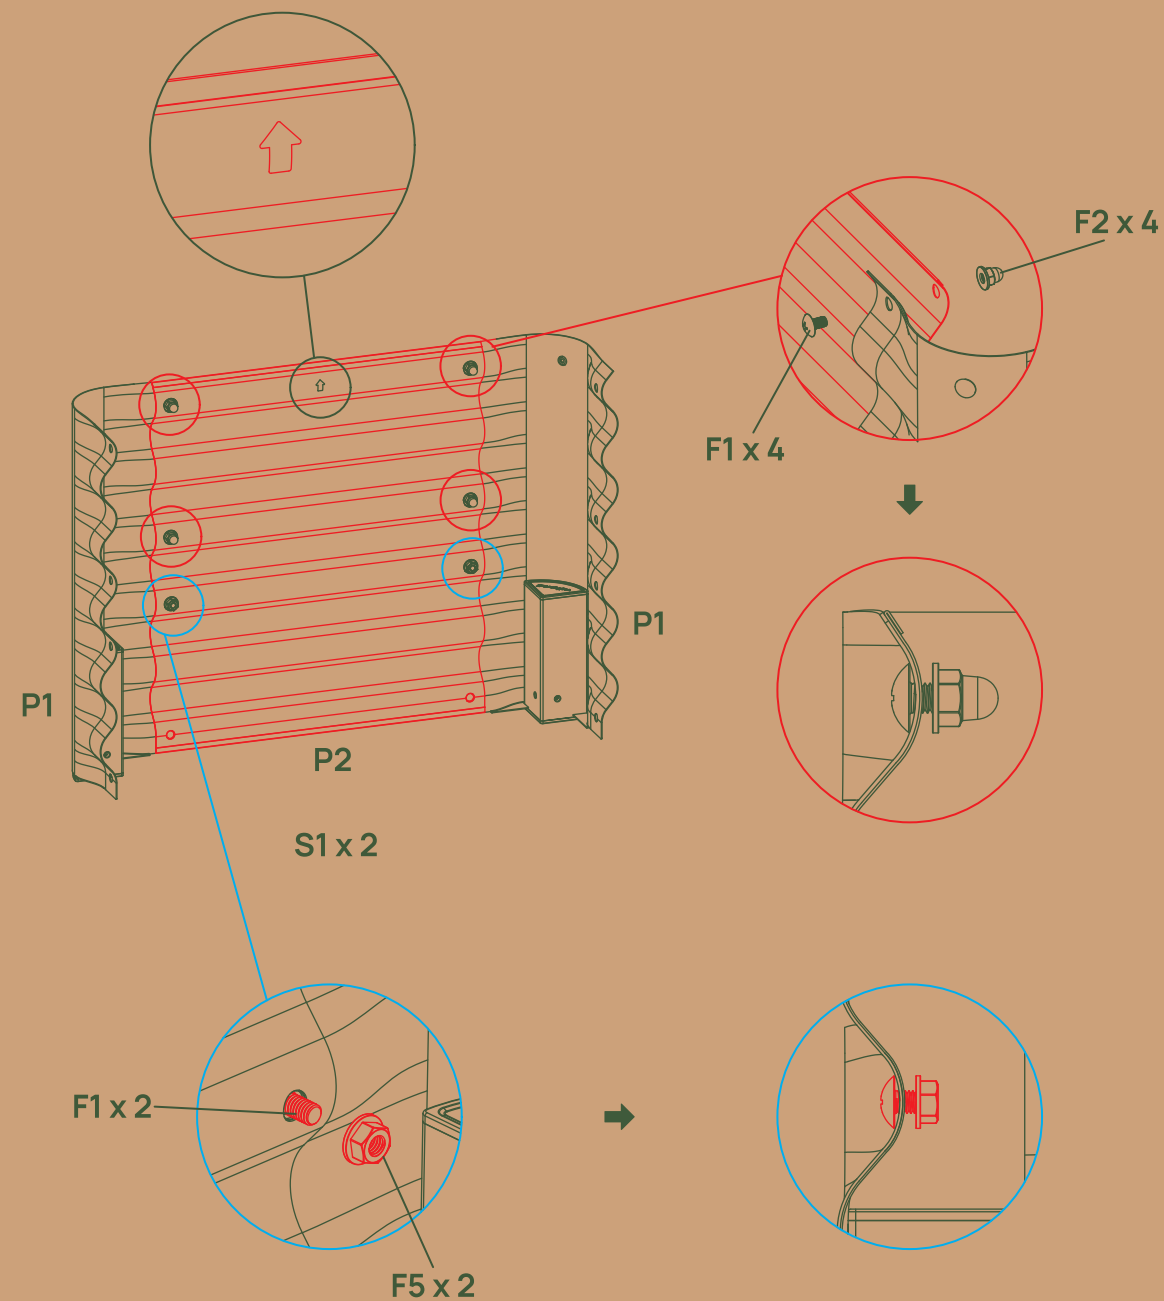


- 2 Use the T1 wrench and F4 bolts to attach H2 between the corners of each S1 assembly.

Note: Do not tighten the bolts fully to allow for easier final assembly.

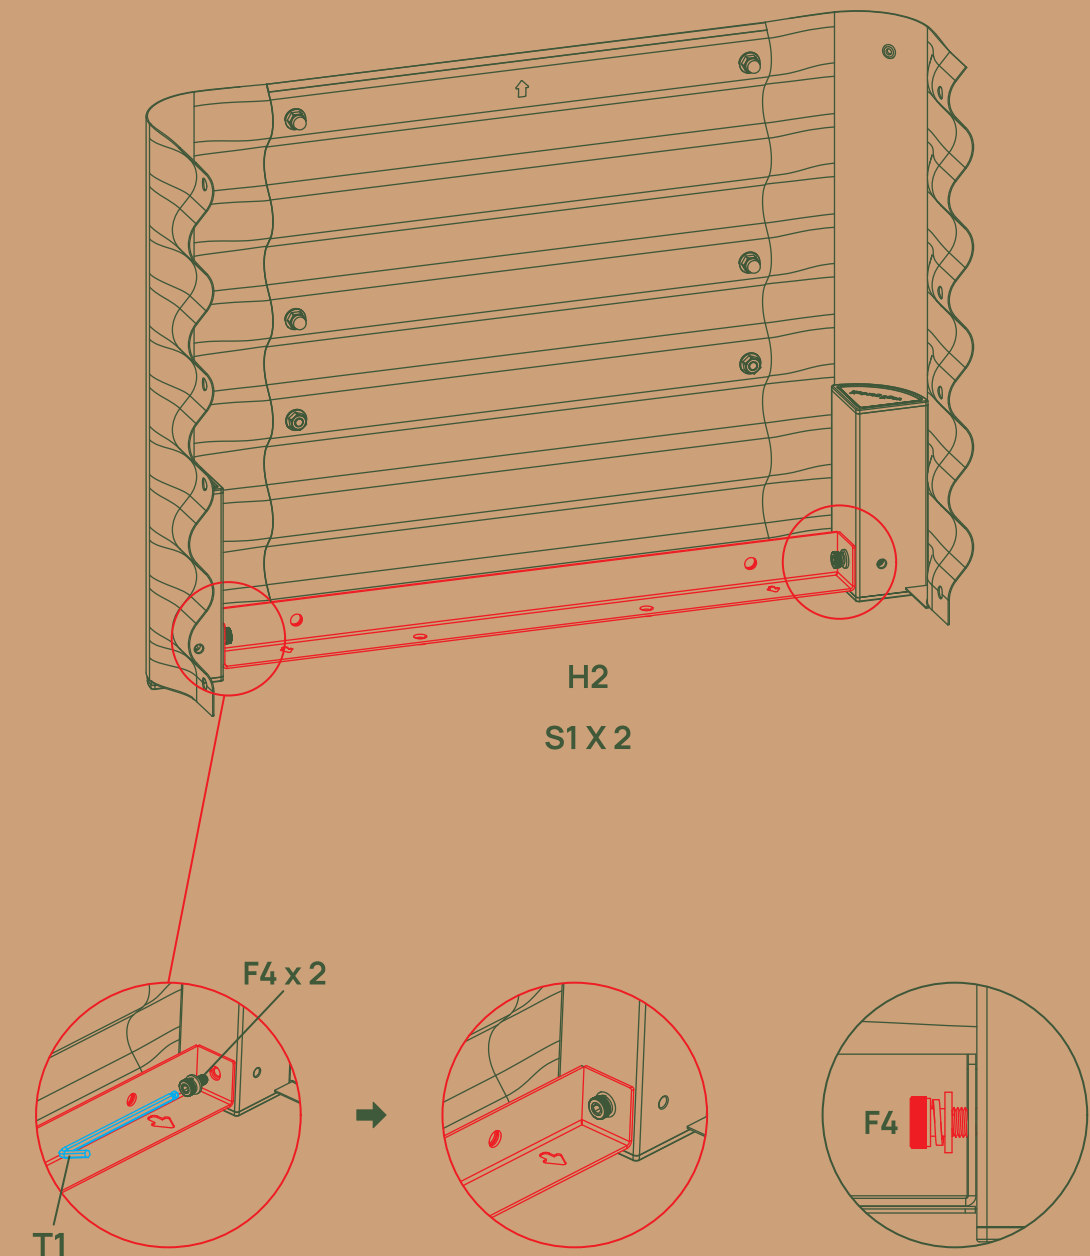


- 3** Using the T2 wrench, install F1 bolts through the pre-drilled holes in the P2 panels and H2 parts, securing with F5 nuts.

Note: If the holes do not align, slightly loosen the bolts and nuts on the top three rows, then gently adjust P1, P2, and H2 to align the holes.

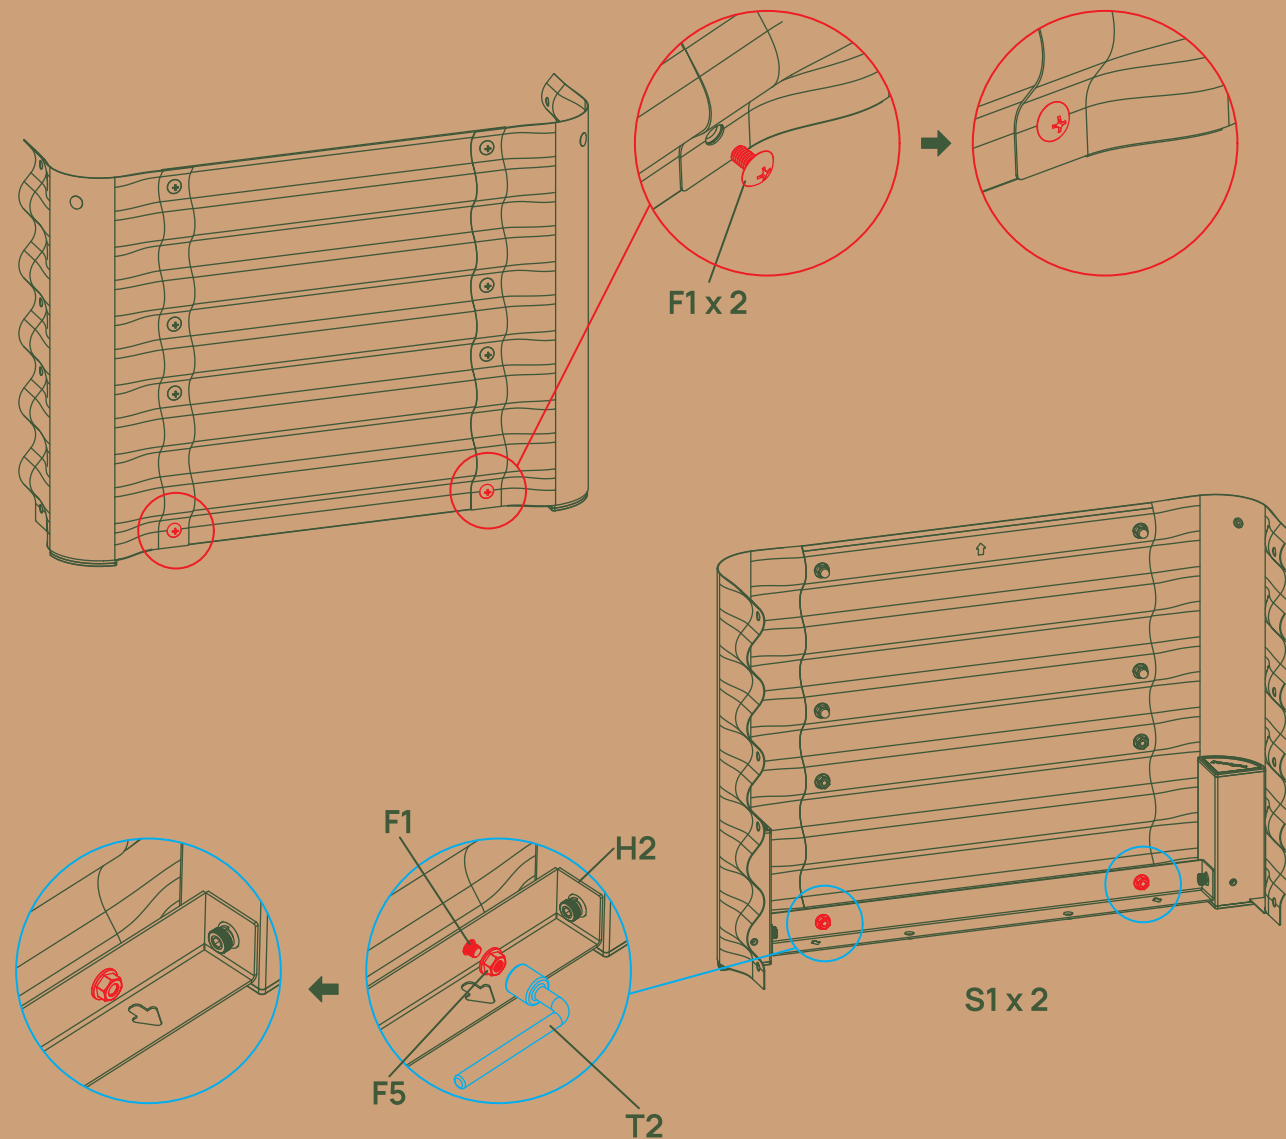


After completing this step, tighten all the bolts and nuts.

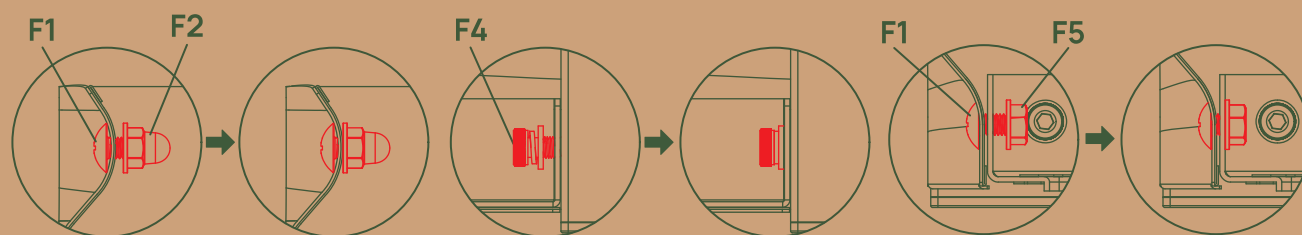

- 4** Connect the S1s and P3 panels. Install only the top three rows: use F1 bolts with F2 cap nuts for the top two rows and F1 bolts with F5 standard nuts for the third row. Leave the fourth row uninstalled.

Notes:


- Make sure the P3 panels are installed on the interior side, with the side that has holes facing the bottom of the garden bed.
- Do not tighten the bolts fully to allow for easier final assembly.

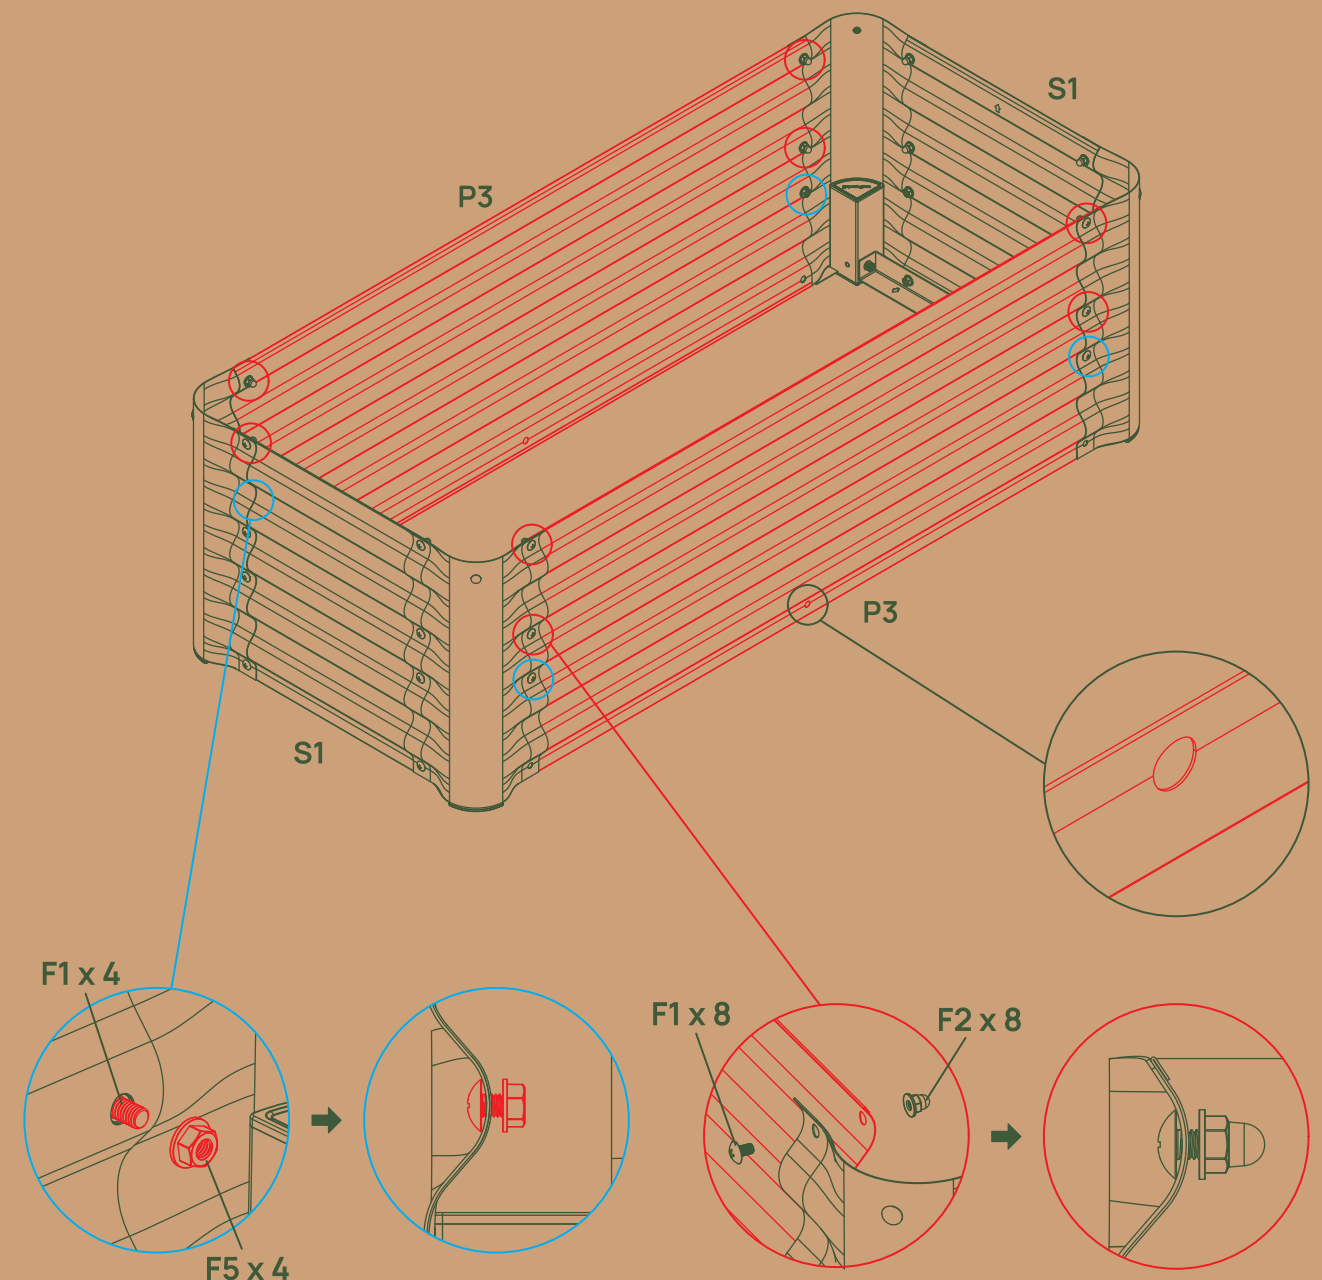

- 5** Use the T1 wrench and F4 bolts to attach the two H1 pieces to the sides of the corner panels.


Notes:

- Do not tighten the bolts fully to allow for easier final assembly.
- Make sure the arrows on both ends of H1 point toward the inside of the garden bed.

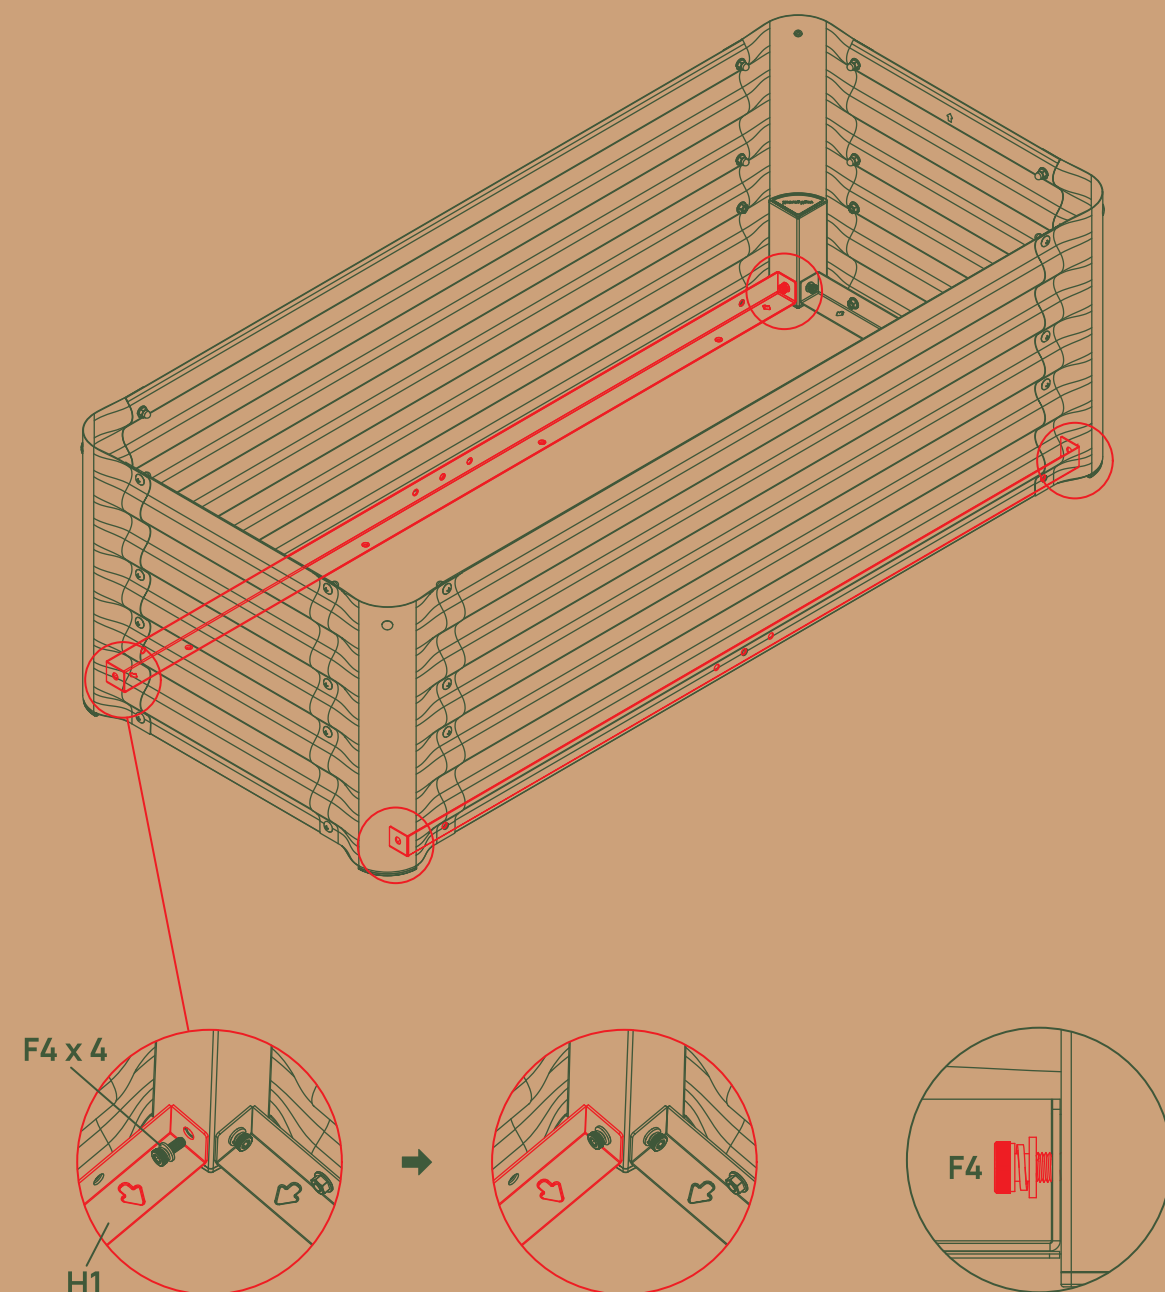


- 6** Use F1 bolts and F5 nuts to secure the bottom row of holes on the panels. First, hand-tighten all F1 bolts and F5 nuts by 2-3 turns, then fully tighten them using the T2 wrench.

Note: If the holes on the P3 panels and H1 do not align easily during installation, slightly loosen the bolts on P3 and H1, then gently adjust both components to align the holes.

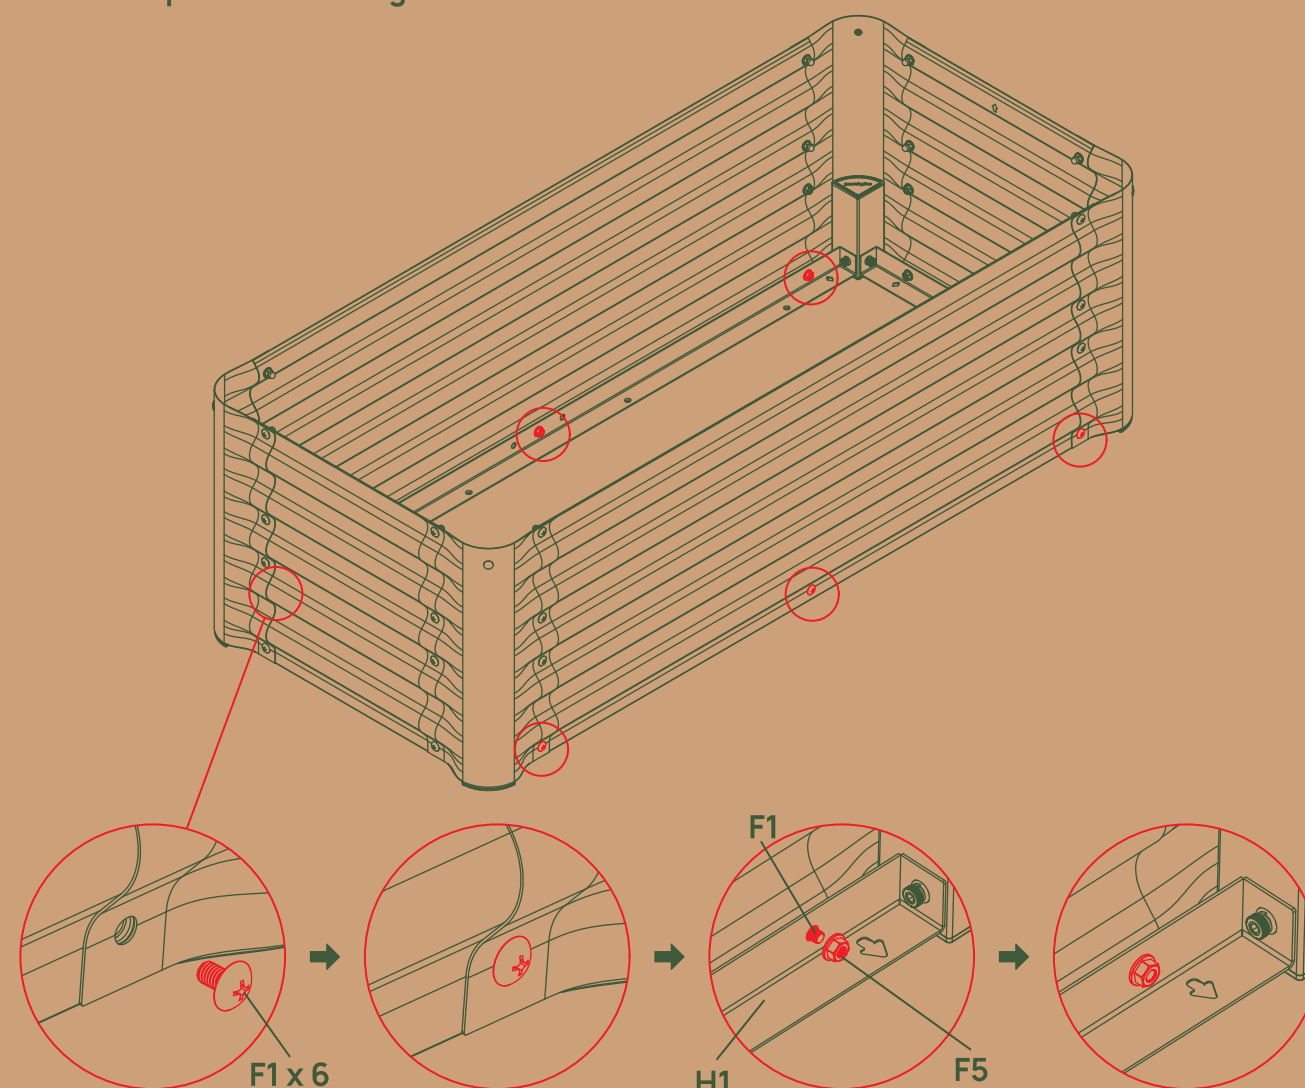


After completing this step, tighten all the bolts and nuts.

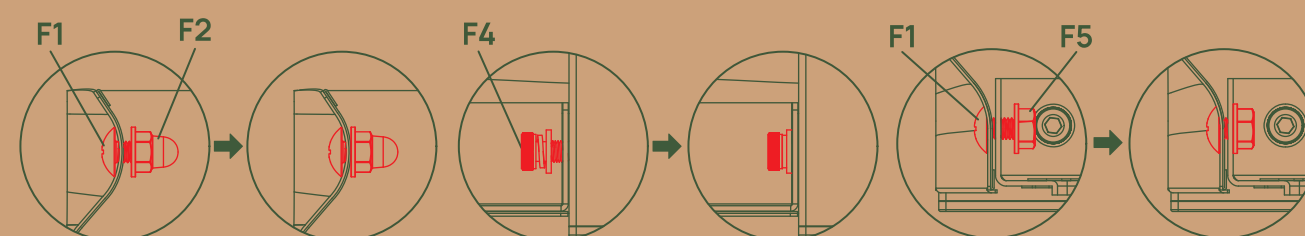

- 7** Turn the bed upside down, on a piece of cardboard or protective surface. Next, hand-tighten the casters' bolts into the holes on the bottom of the legs until they can no longer turn.

Note: Make sure matching caster types are installed diagonally from each other.

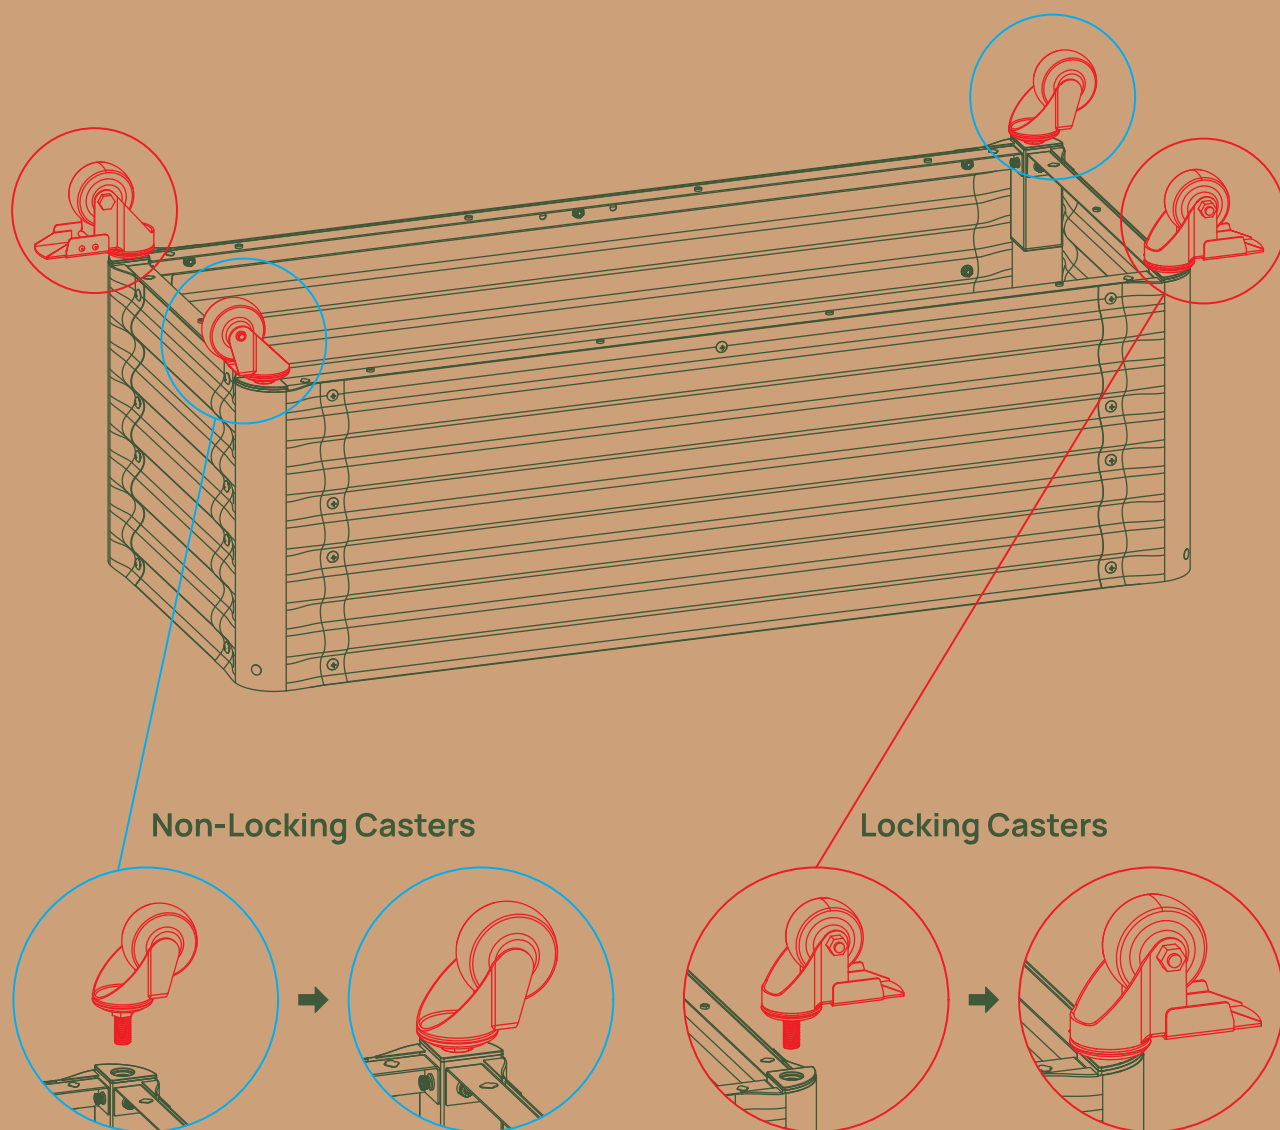

Important Caster Note

For optimal use, safety, and to prolong the lifespan of the casters please adhere to the follow guidelines:

- Always engage the casters' brakes when the garden bed is stationary to prevent unintended movement.
- Avoid depressions or grooves deeper than 0.4 inches, as they may cause the casters to become unstable.
- Remove any small stones, debris, or obstacles that could hinder movement or damage the casters over time.
- Use only on the suitable surfaces listed below:

Suitable Surfaces


- Flat, stable surfaces
- Concrete
- Wooden & composite decks
- Pavers & tile

Unsuitable Surfaces





- Slopes or inclines
- Soft ground such as grass, soil, or sand
- Uneven gravel or rocky areas

8 Install the TerraFlow floor.




Insert the B1 panels, ensuring the labels face upward.

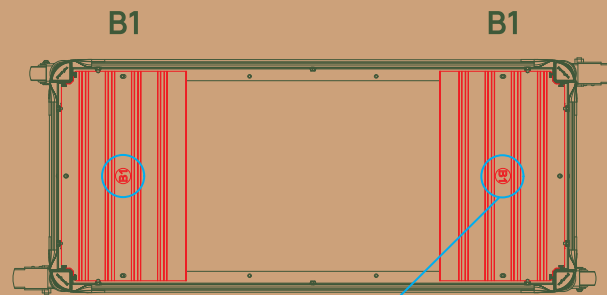

Insert the B2 panel, ensuring the label faces upward.

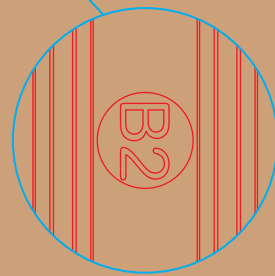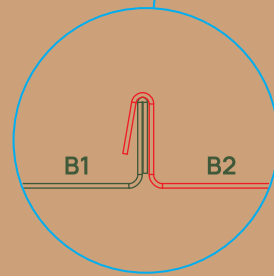
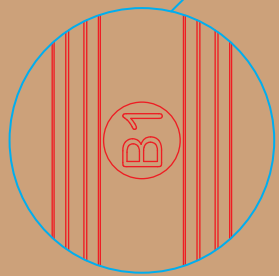
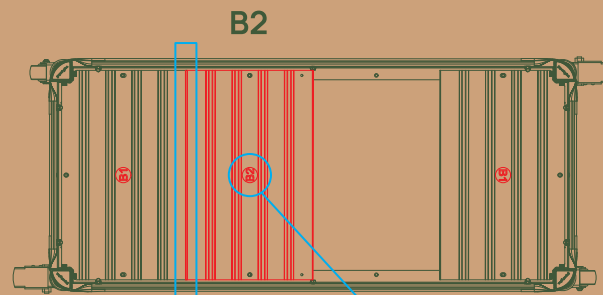


Insert the B3 panel, ensuring the label faces upward.

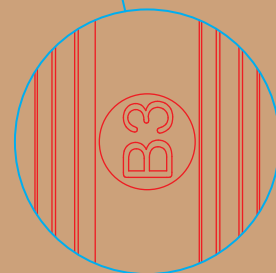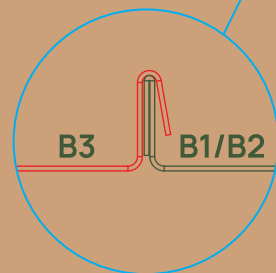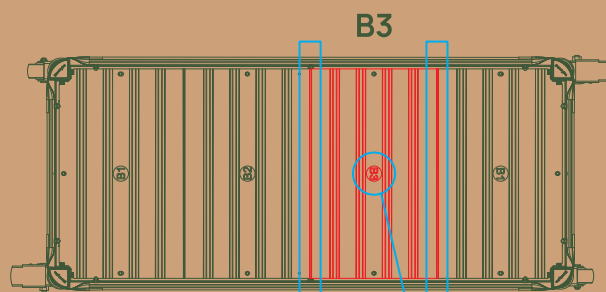



9 Use a phillips screwdriver and F3 bolts to secure the TerraFlow floor in place.

Note: To make installation easier, first thread all F3 bolts 2-3 turns, then fully tighten.

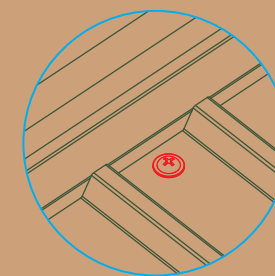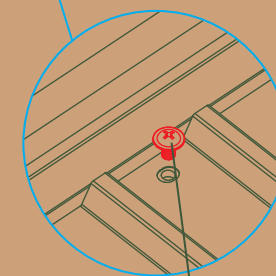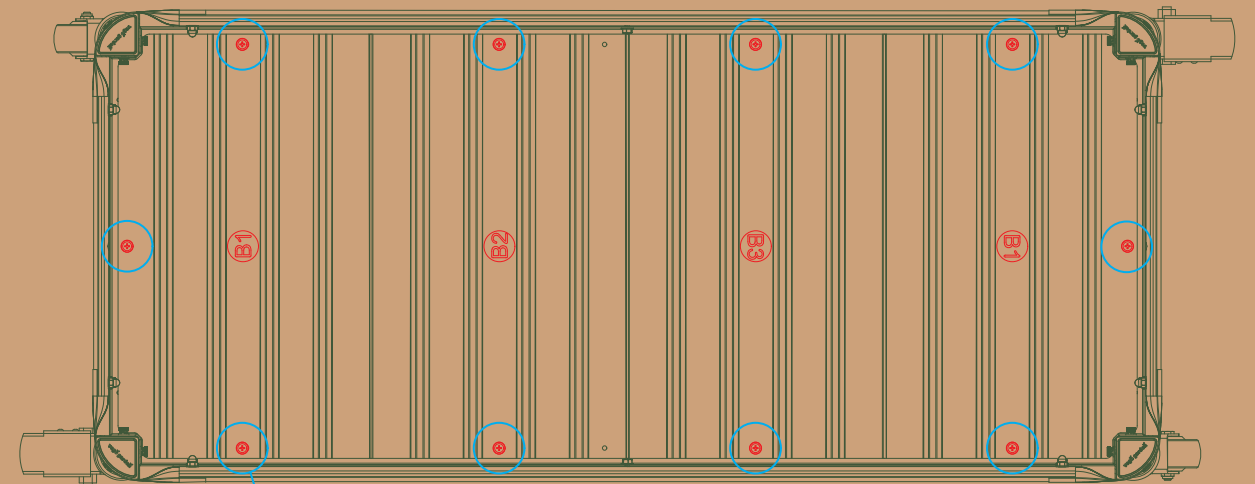

F3 x 10

10 Press the safety edging along the top edge of the bed to secure it in place.

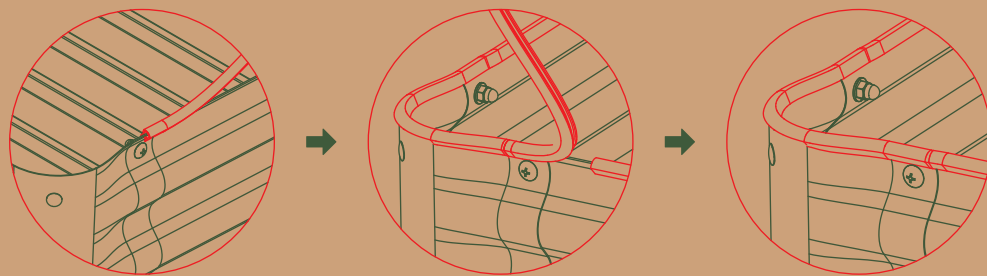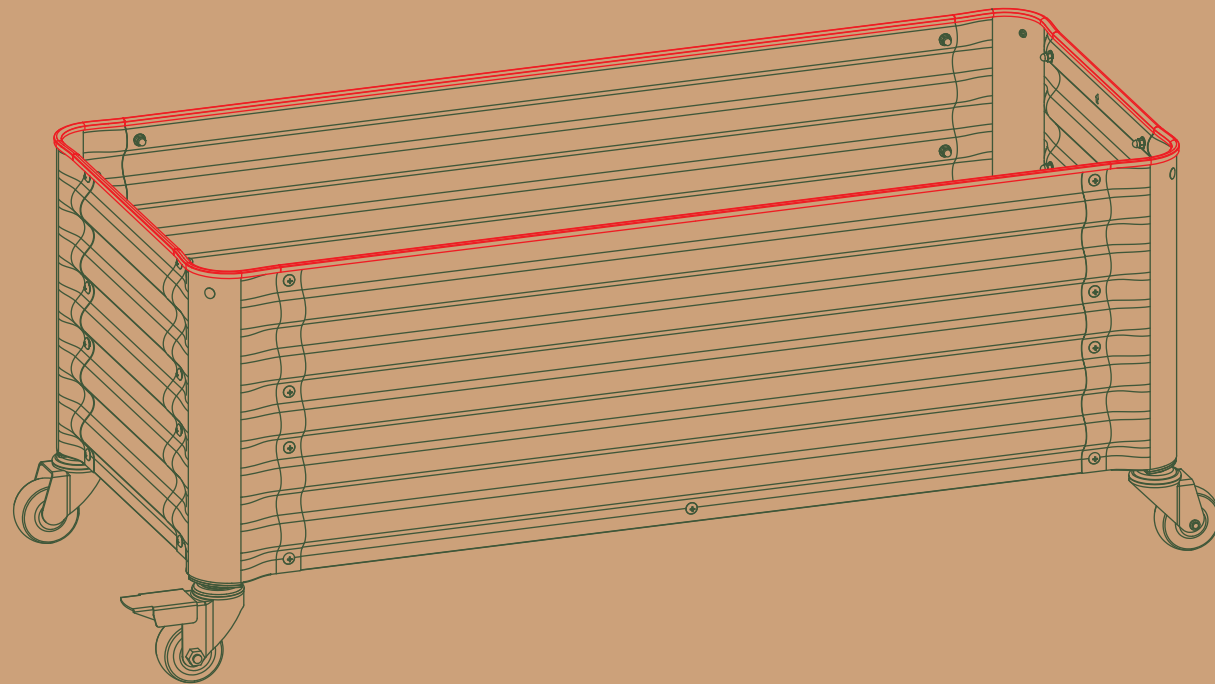

**Gardening
Made Easier.
Anytime,
Anywhere.**