


# ASSEMBLY INSTRUCTIONS

## Console Table

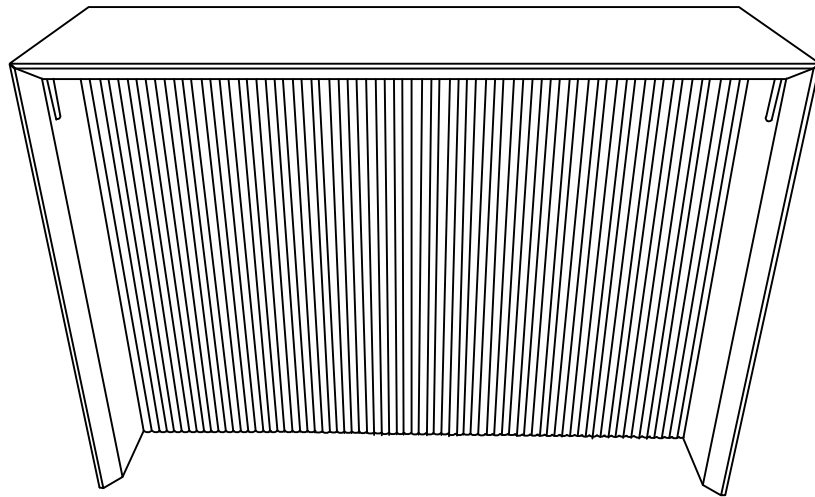

### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten ,as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)


|  |                  |   |
|--|------------------|---|
|  | <p>Diagram A</p> | <p>1. Insert cam screw into hole as shown in diagram A .</p>  |
|  | <p>Diagram B</p> | <p>Make sure not to insert the cam screw:<br/>Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.</p>               |
|  | <p>Diagram C</p> | <p>Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.</p> |







|                   |  |
|-------------------|--|
|                   | <p>2. Connect the panels together.</p>   |
| <p>ARROW SIGN</p> | <p>3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.</p>   |
|                   | <p>4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.</p> <p><b>NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.</b></p> |

**Note:**





- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.
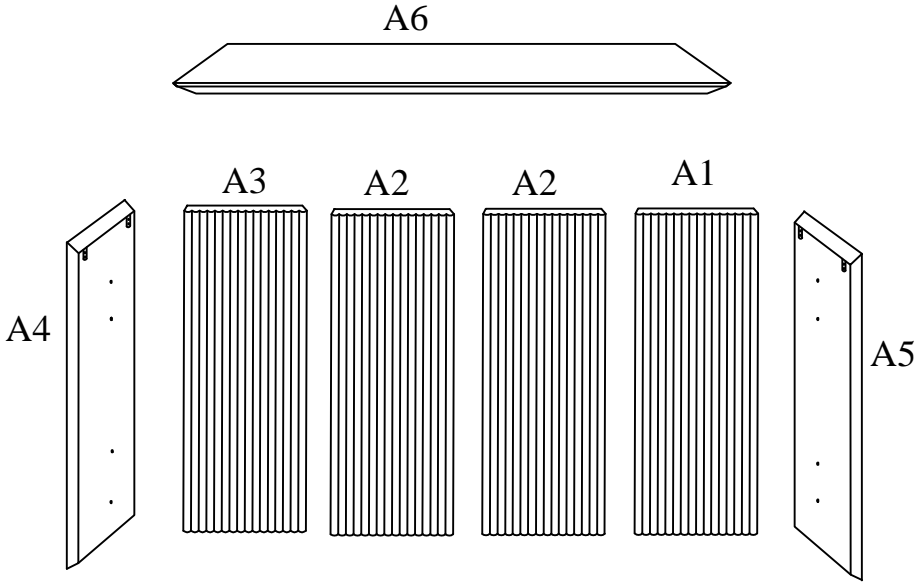
# Part List

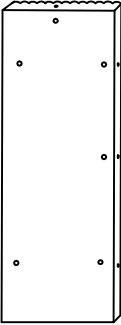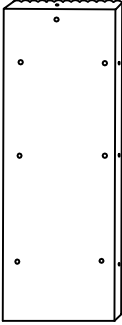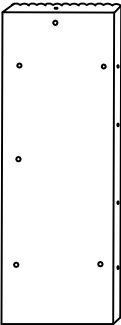


|   |  |  |
|---|--|--|
| <p>A1</p>  <p>1PC</p> <p>Divide Panel</p>    | <p>A2</p>  <p>2PCS</p> <p>Divide Panel</p>    | <p>A3</p>  <p>1PC</p> <p>Divide Panel</p> |
| <p>A4</p>  <p>1PC</p> <p>Left Side Panel</p> | <p>A5</p>  <p>1PC</p> <p>Right Side Panel</p> | <p>A6</p>  <p>1PC</p> <p>Top Panel</p>    |



# Hardware List
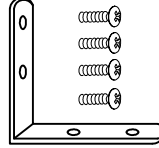
|   |   |
|---|---|
| <p><b>B1</b> <span style="float: right;"><b>9SETS</b></span></p> <div style="text-align: center;">  </div> <p><b>Cam-lock</b></p>                      | <p><b>B2</b> <span style="float: right;"><b>8SETS</b></span></p> <div style="text-align: center;">  </div> <p><b>Cam-lock</b></p>     |
| <p><b>B3</b> <span style="float: right;"><b>4PCS</b></span></p> <div style="text-align: center;">  <p>1/4"*1.25"</p> </div> <p><b>Wooden Dowel</b></p> | <p><b>B4</b> <span style="float: right;"><b>4SETS</b></span></p> <div style="text-align: center;">  </div> <p><b>"L" bracket</b></p> |



**Please follow below steps to use Cam-locks B1:**

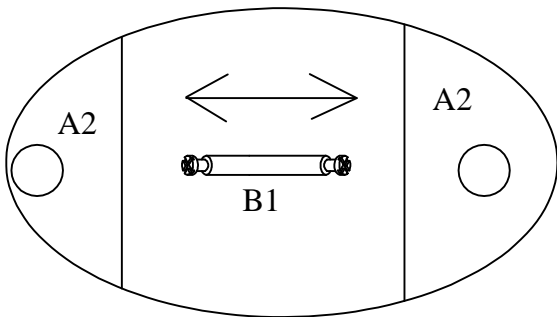



Insert Cam-bolt into holes on the panels.

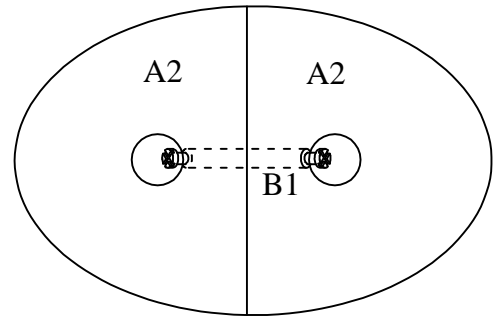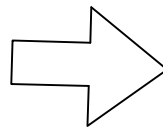

Ensure the cam-bolt is centered with both heads exposed to approximately the same length.

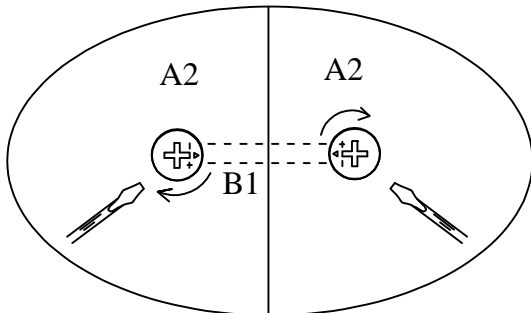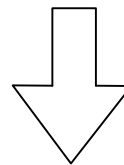

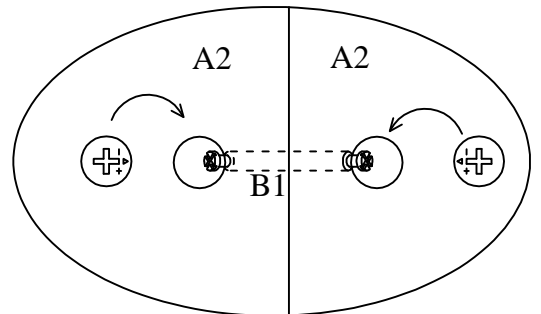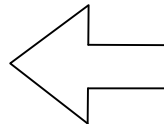

Then tighten them in the same time .




Insert the cam-nut into the pre-drilled hole, ensuring the opening is aligned to catch the bolt head. Turn the cam-nut until it locks securely onto the bolt.

# Step 1:



# Assembly instructions

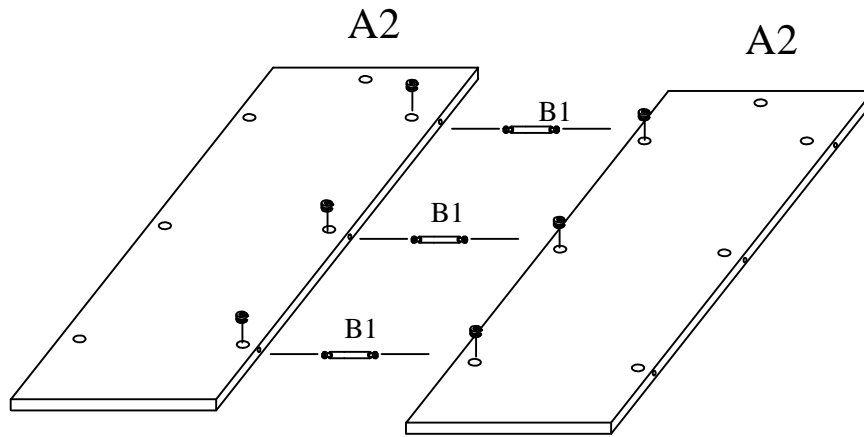
B1   3Sets



Attach Divider Panels A2 using Cam-locks B1 as shown above.




# Step 2:

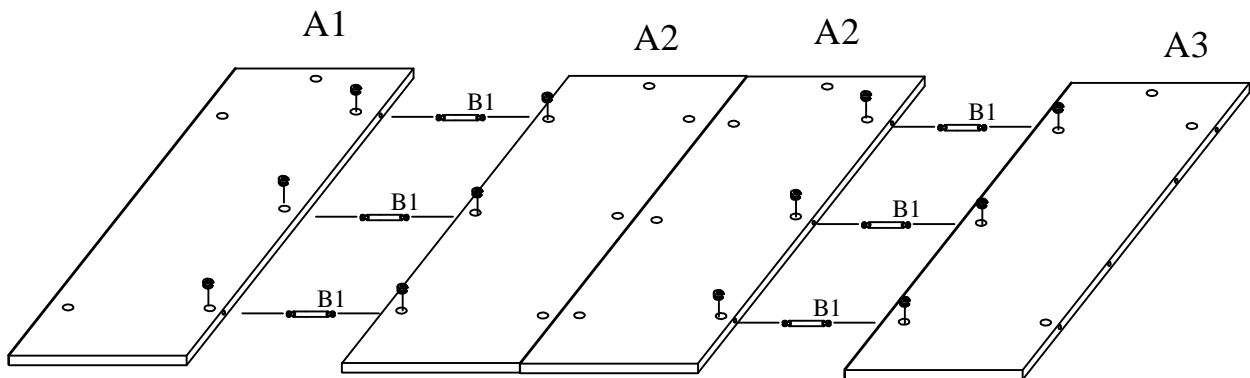
B1   6Sets



Attach Divider Panels A1 & A3 to Divider Panels A2 using Cam-locks B1 as shown above.



### Step 3:


|    |   |   |       |
|----|---|---|-------|
| B2 |  |  | 4Sets |
| B3 |  |   | 4pcs  |

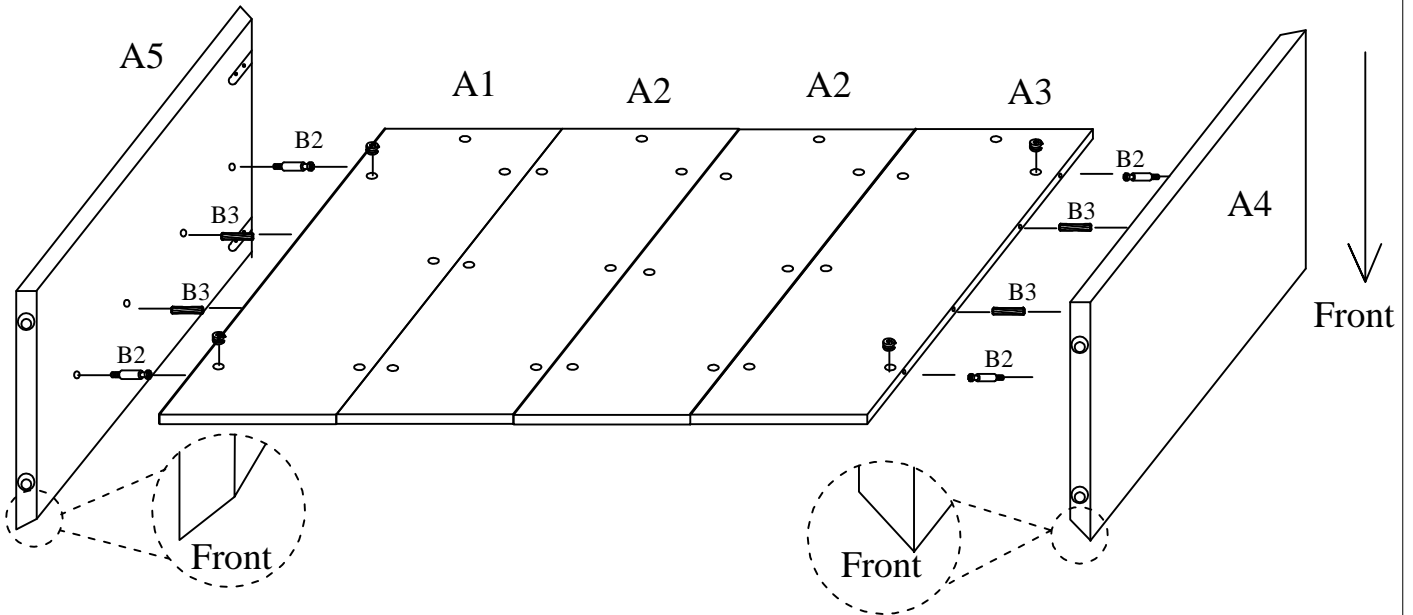

Attach Divider Panels A1&A3 to Side Panels A5 & A4 using Cam-Locks B2 and Wooden Dowels B3 as shown above.



### Step 4:

|    |   |   |       |
|----|---|---|-------|
| B2 |  |  | 4Sets |
|----|---|---|-------|

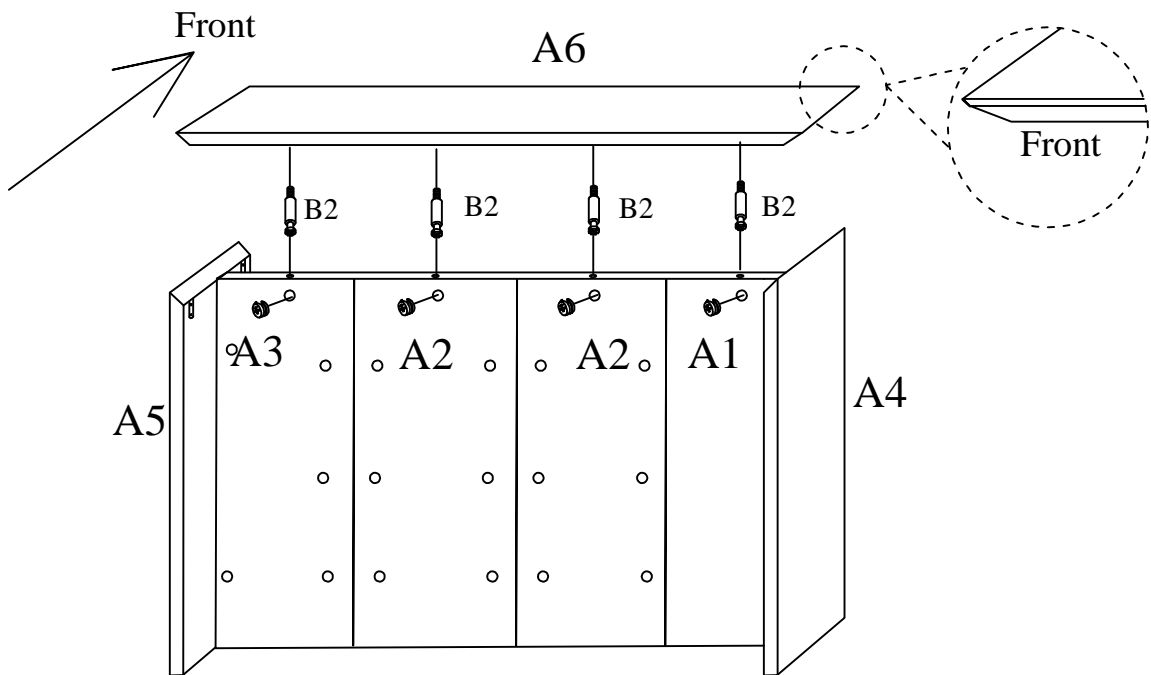

Attach Top Panel A6 to Divider Panels A1 & A2 & A3 using Cam-locks B1 as shown above.

## Step 5:

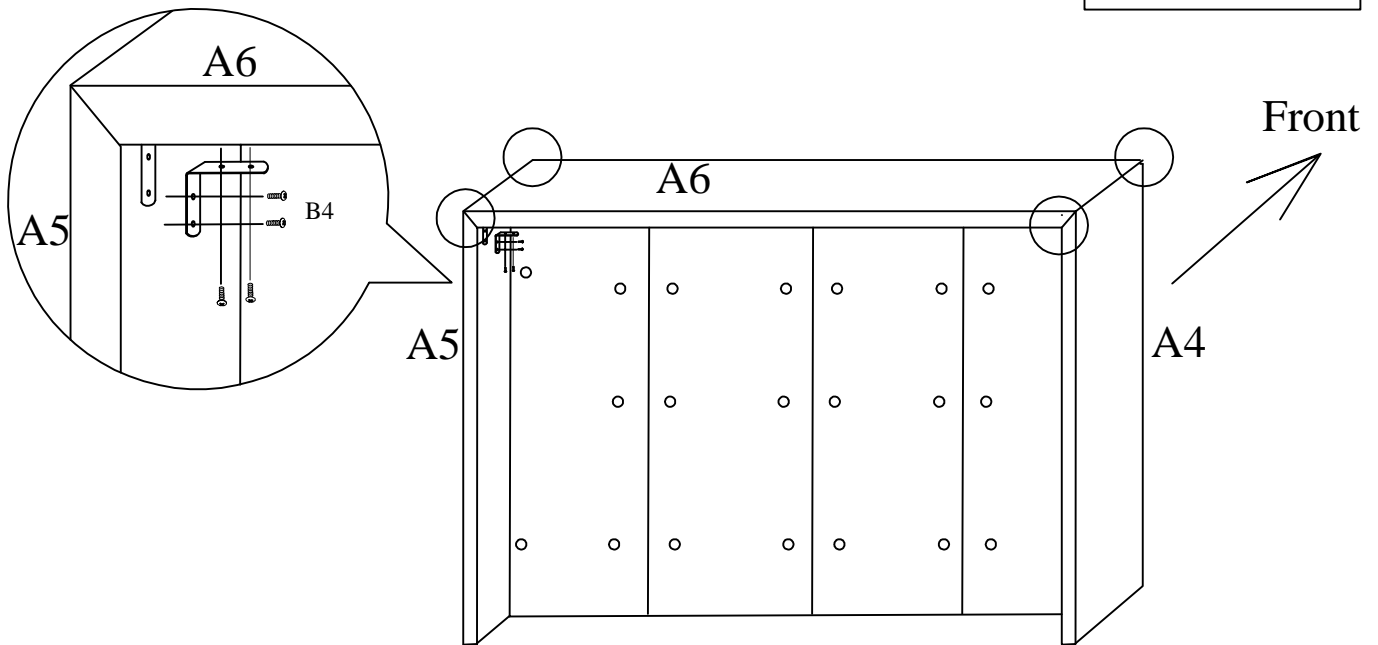

Attach "L" Brackets B4 to Side Panels A4& A5 and Top Panel A6 using included screws as shown above.

## Step 6:

