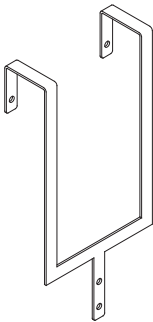
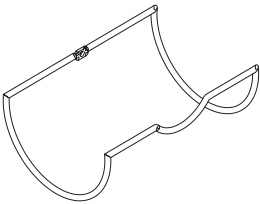
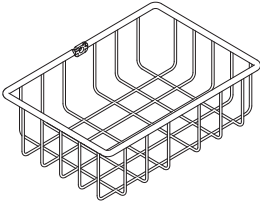
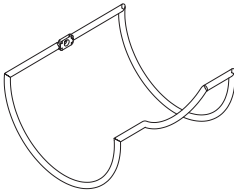



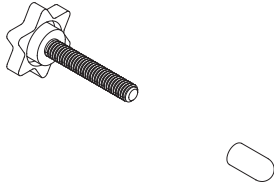
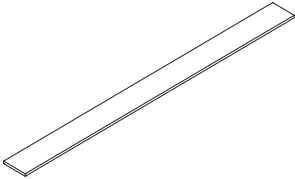
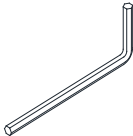



Installation Instructions

Accessories include


A*1  Up tube	B*1  Middle tube	C*1  Down tube	D*1  Door hook
E*6  Large basket	F*1  Medium basket	G*2  Small basket	H*2 
①*10  M5*6	②*13  M5*10	③*7  M4*25	④*2 
⑤*3  Side Tape	⑥*6  Pipe stopper	⑦*1  Allen key	

Installation steps (First Using Method)


1. Align tubes A and B. Wrap parts H around the A and B connection from the back, then lock the four holes on both sides with screws ①. Do the same for B and C, and finally connect them to form one long tube. Note that tube B is marked with upper and lower marks, so please check the position before installation.

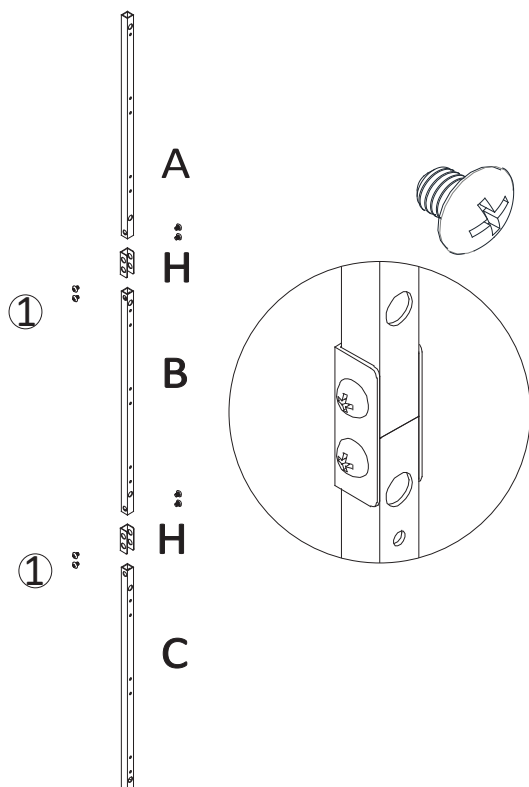


2. Use the screw ② to lock the part D on the back of the iron pipe A, pay attention to the direction of the hook, then twist the two knobs ④ into the two holes of the hook D and twist the silicone sleeve.

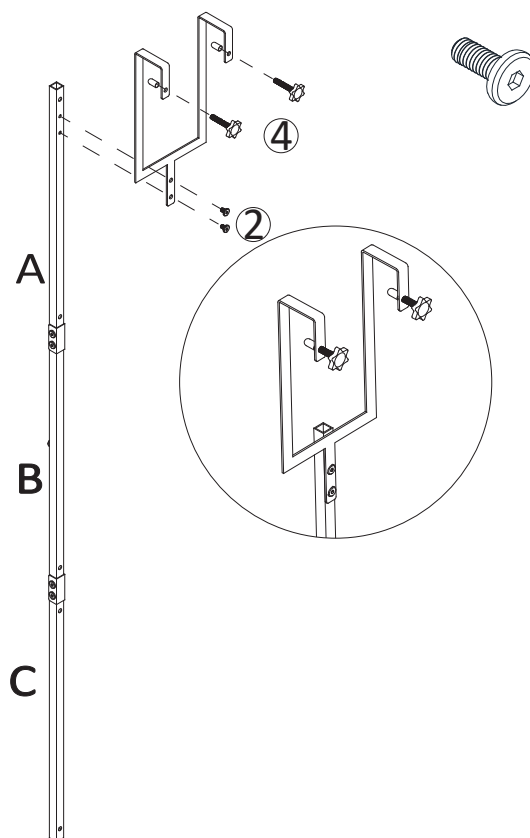

3. Secure parts F (medium basket), G and E (small and large baskets) to the long tube with screws ②. The order of the baskets is up to you.

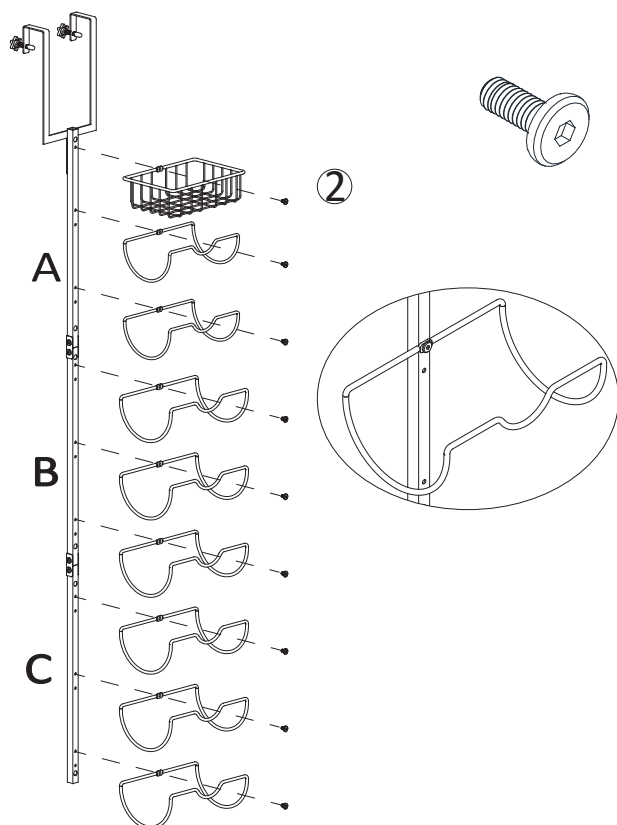


4. Use part5 (double-sided tape) on the back of the long tube to secure the frame to prevent shaking.

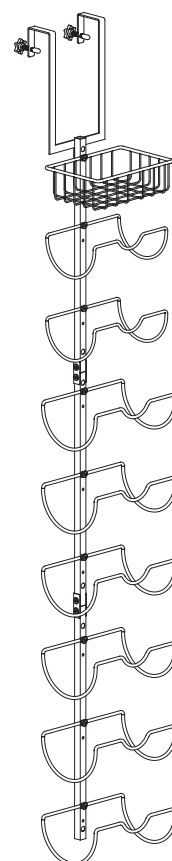


Installation steps (Second Using Method)

1.The first step is the same as in First Using Method. In the same way, connect A, B and C into a long tube, and then use screws ② to fasten parts F (medium basket), G and E (small and large baskets) to the long tube. The order of the baskets is up to you.

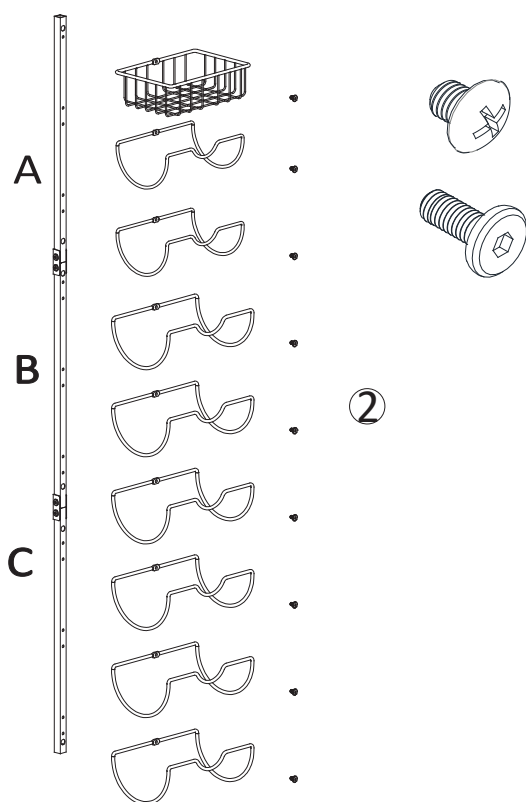

2. Secure the long tube to the wall with screws ③

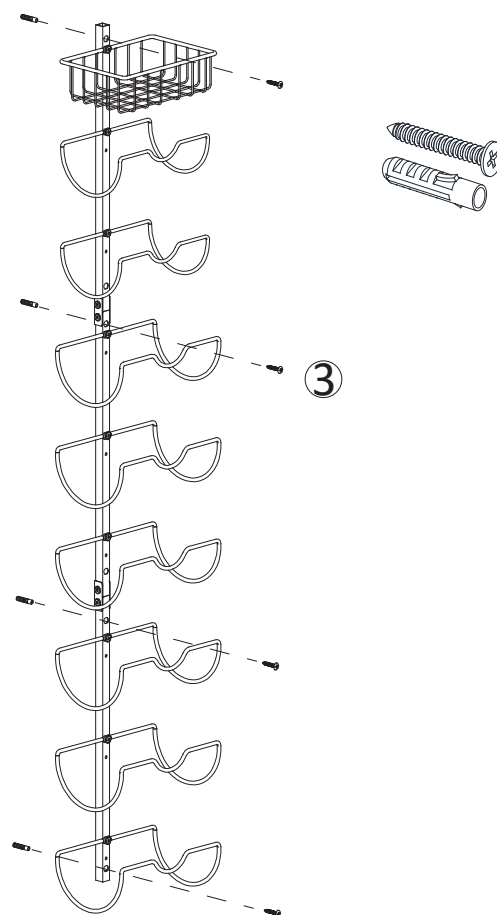

Installation steps (Third Using Method)

1. Use screws ② to fix parts F (medium basket), G and E (small and large baskets) to iron pipes A, B and C in any position you choose. Finally, fix the A, B and C iron pipes to the wall with screws ③.

