




Storage cabinet—Classify first, then install Classify first, then install (Take the six-layer storage cabinet as an example)




① Left stent\*1




② Right stent\*1



③ Layer board\*7

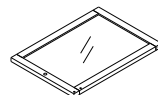

④ Door\*5

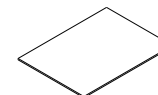

⑤ Large back panel\*5



⑥ Small back panel\*1



⑦ Pin shaft\*10



⑧ Door suction\*5



⑨ Iron sheet\*5



⑩ Handle\*5



A-Screw




B-Screw



C-Screw


1

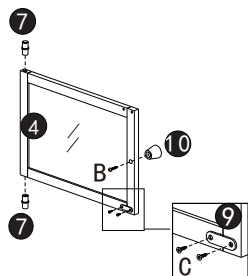

Fix accessory 9 to accessory 4 with screws-C;  
Fix accessory 10 to accessory 4 with screws-B;  
Insert Accessory 7 into the holes at both ends of the door

2

Accessory 8 is connected to accessory 9

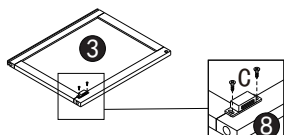


Install accessory 8 on accessory 3;  
Each layer board needs to be installed  
Except top plate



The position of accessory 8 determines the direction of opening the door


3

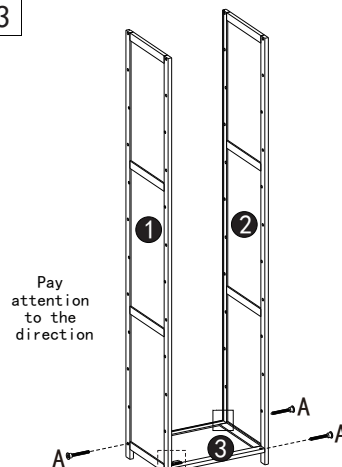

Pay attention to the direction


Fix the layer plate 3 to the bracket with screw A

4

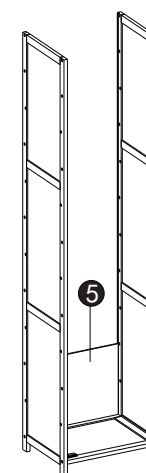


Insert accessory 5

5

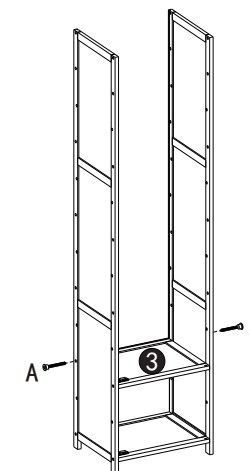


Fix accessory 3 with screw A  
Don't twist it tightly.

6

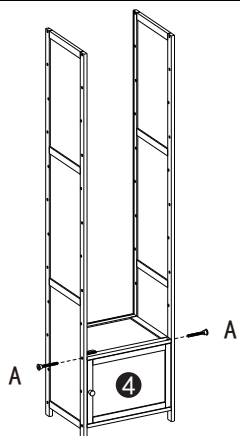


Align the holes of the Layer board properly  
Tighten it again with screw A

7

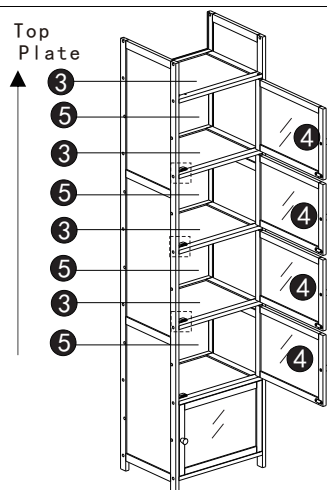


Install in sequence

8

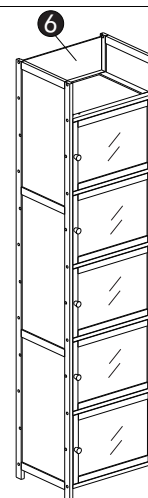


Insert accessory 6

9

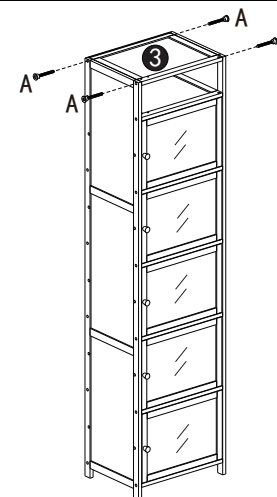

Fix the top plate with screw A

10

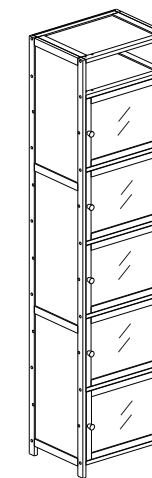

Installation completed