
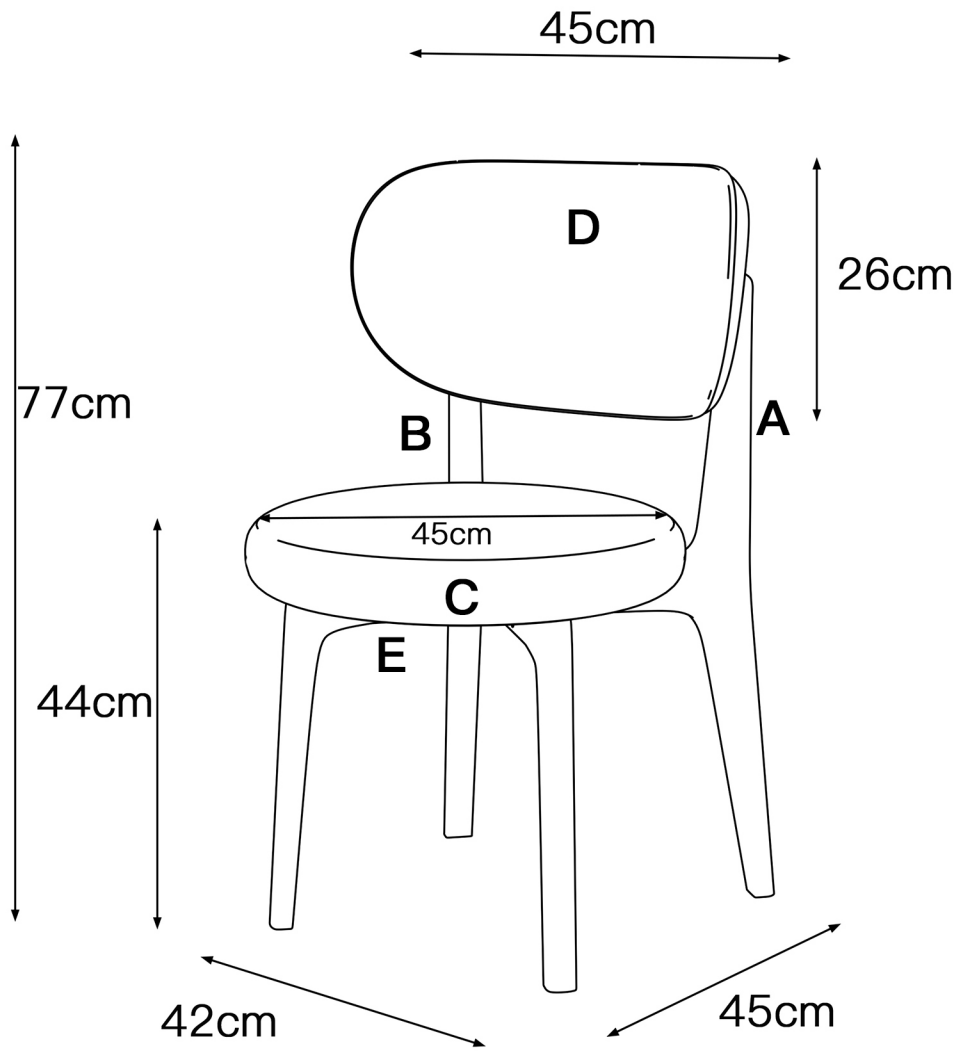


Chair

Installation Guide

Please bring your own tools(Just use one of the following tools)

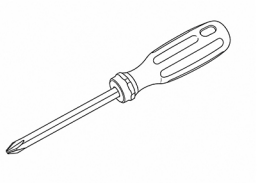

(Torx screwdriver)





(electric screwdriver)


Note: Only one of the above tools is sufficient



This product contains small parts, please keep it out of the reach of children. To prevent scratches due to contact and accidental ingestion

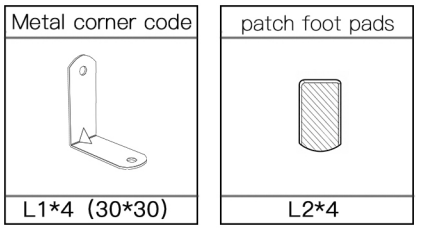


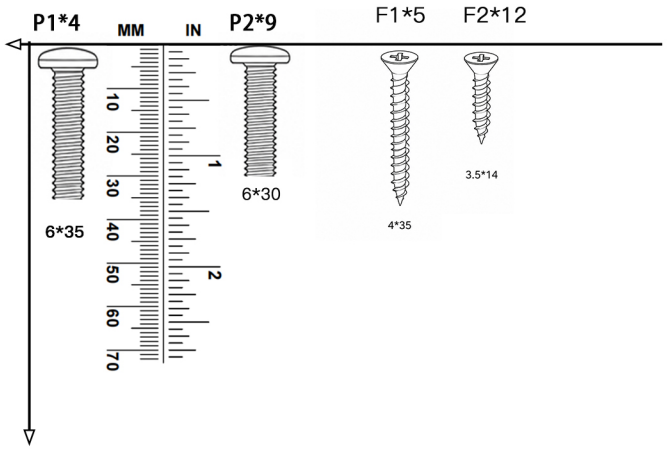

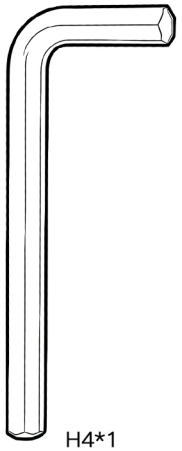


parts list

7

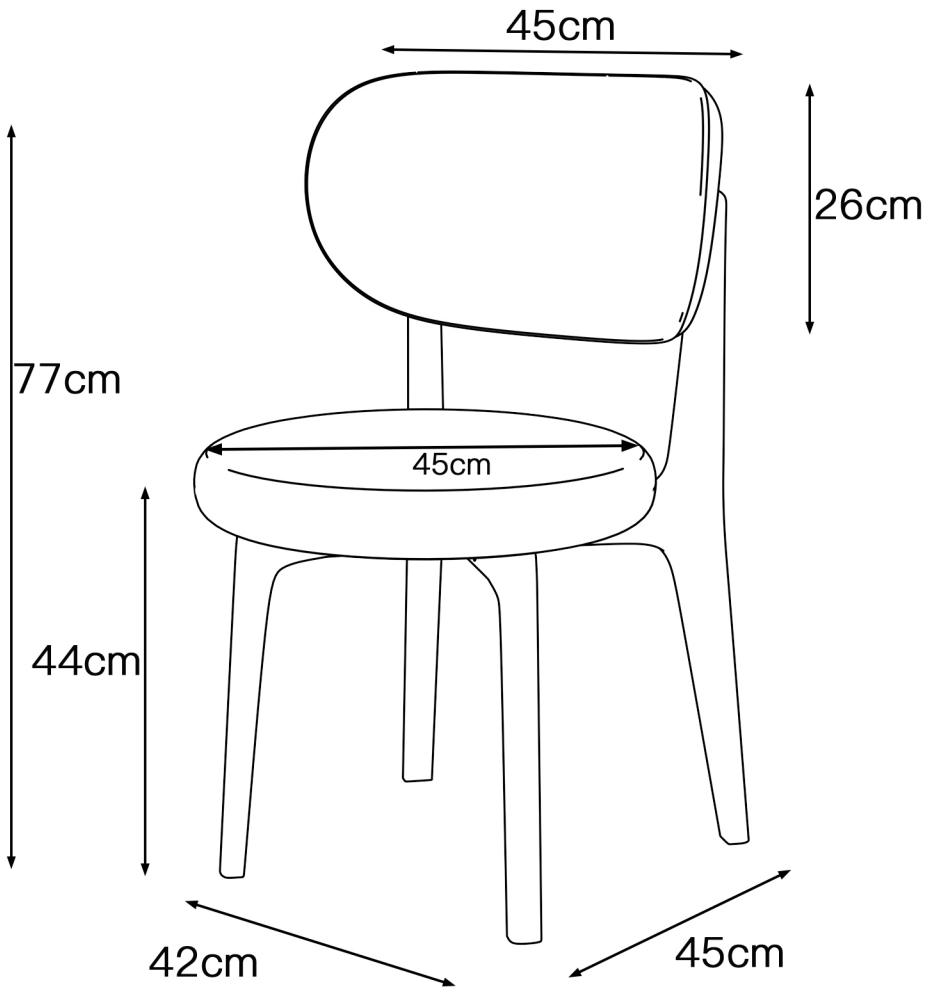


Installation completed diagram


Component

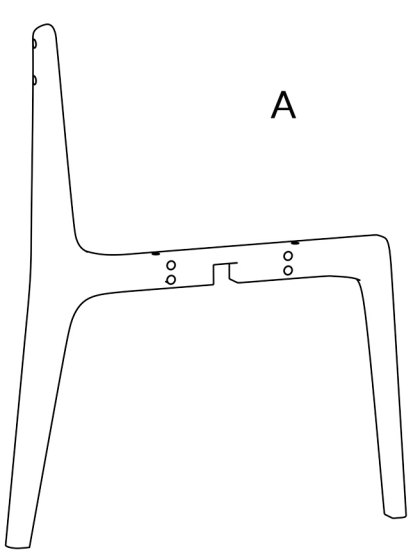


(frame left)

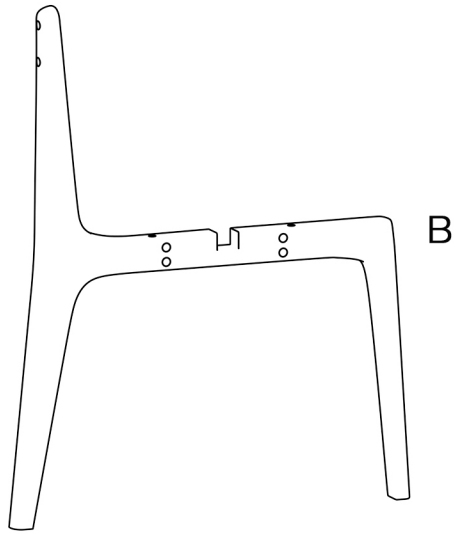


(Frame right)

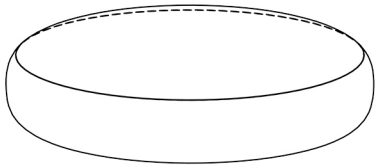


(cushion)

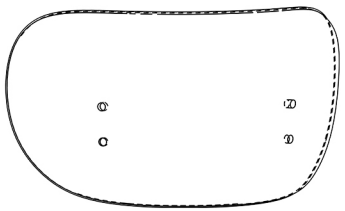

(backrest)

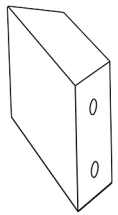


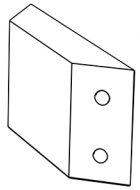

(Frame beam)


1


Warm reminder: The iron sheets are only used to protect the chair legs during transportation to avoid damage from collisions. Just unscrew the iron piece when installing the chair and there is no need to use it later.

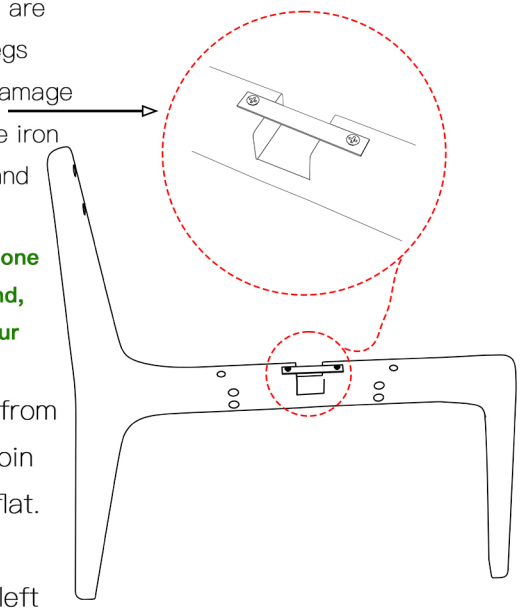


[Stand behind the chair and look: hold the one with the notch facing down in your left hand, and the one with the notch facing up in your right hand.]


Note: First remove the fixing piece from the middle gap of the frame, then join the gaps together and press them flat. From the perspective of standing behind the chair, the gap is on the left side facing down.

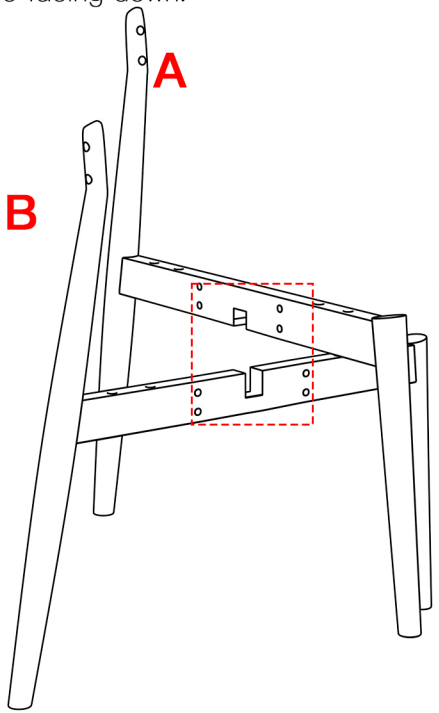

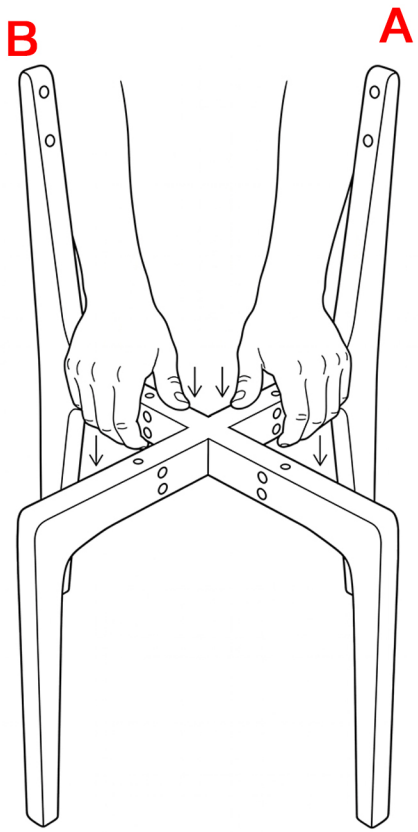


6

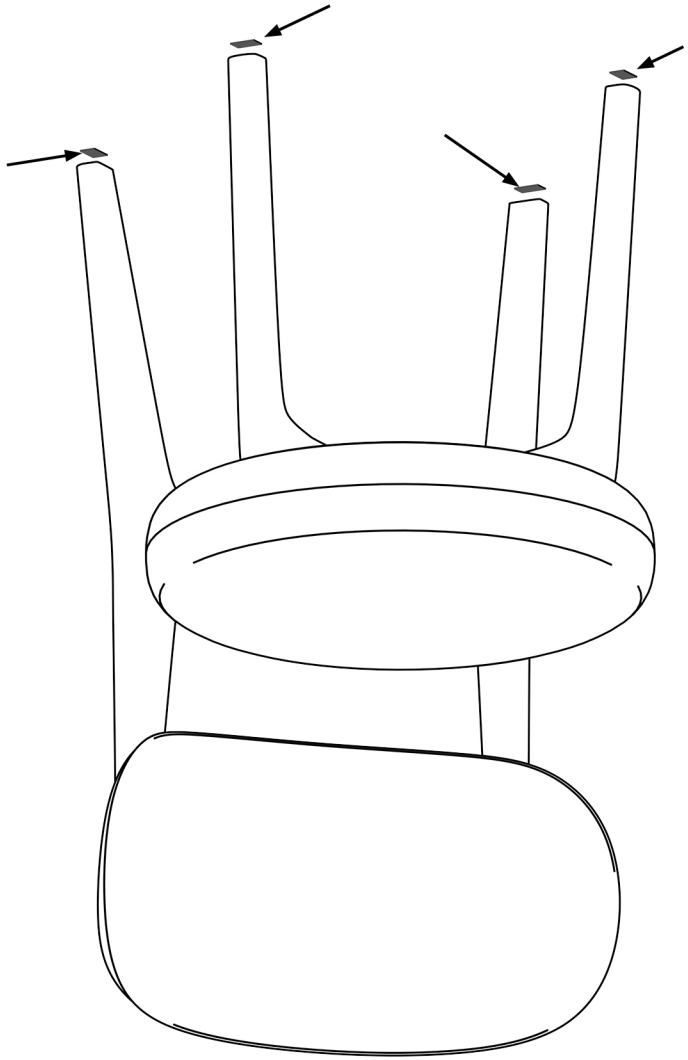

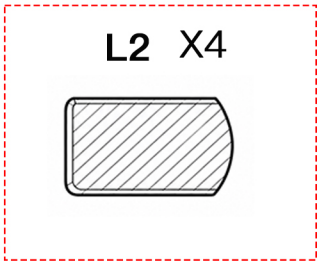


Note: Tear off the film and stick the adhesive side to the corresponding leg of the chair

5

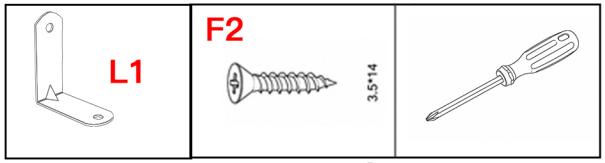


Note: The corner brackets are spare parts; they are not required once the self-tapping screws from Step 3 are installed. However, if the assembly is not secure, install them using this method.

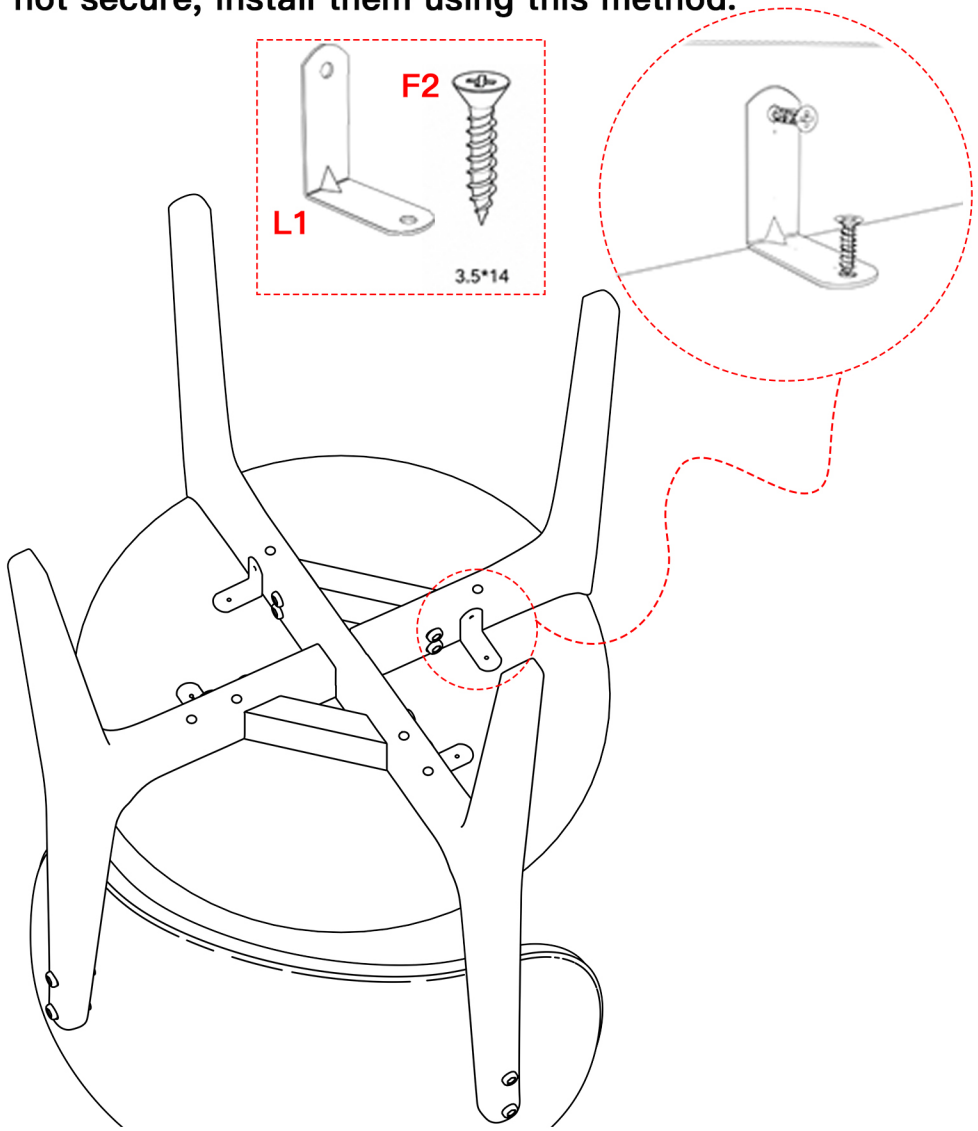


2

【Install the backrest first and then the frame triangle】

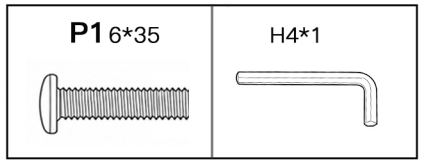



Install the backrest screws, hold the corresponding screw holes in the backrest with your hand, and then tighten the screws. Use the longest flat screw 6*35
(Do not tighten the screws at the beginning, and then tighten them after the adjustment is smooth)

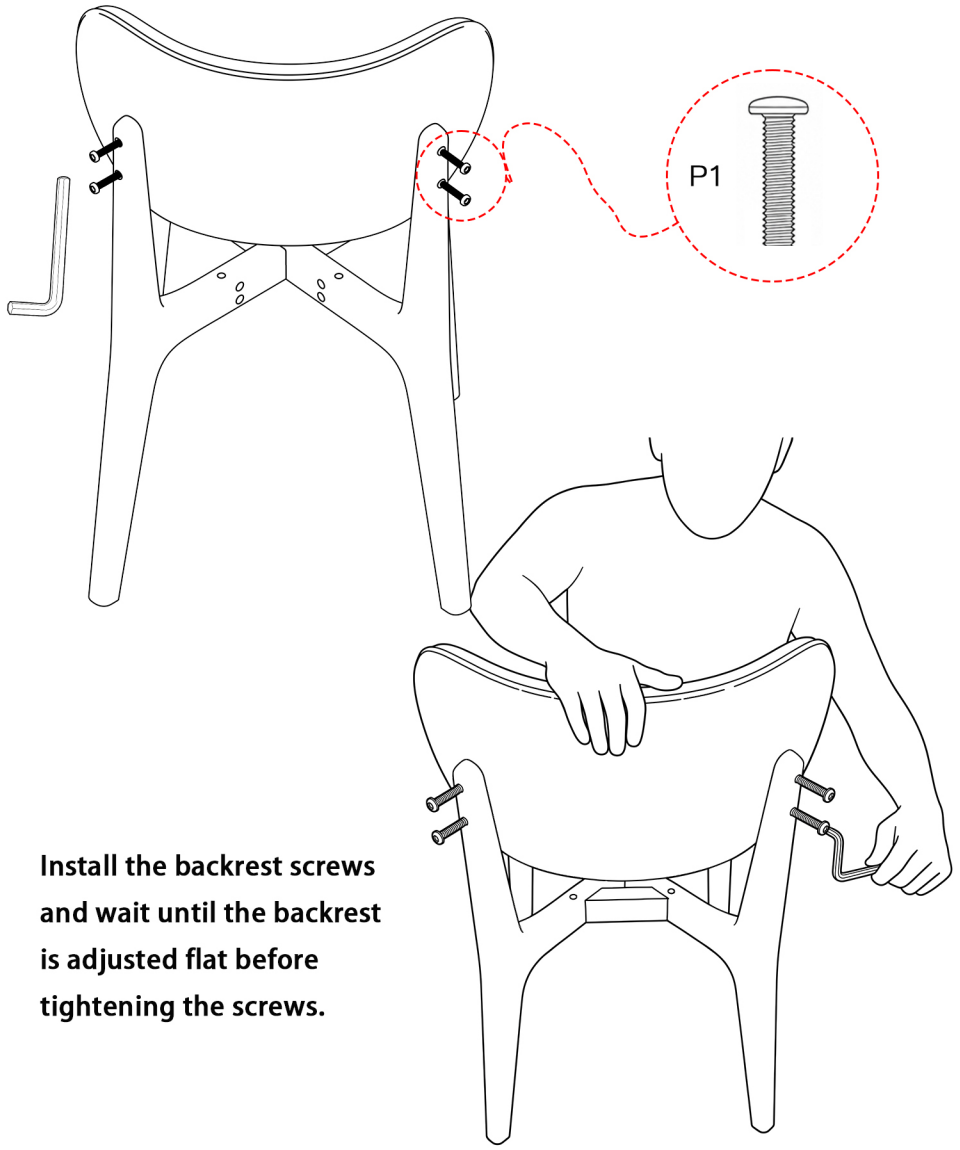


Install the backrest screws and wait until the backrest is adjusted flat before tightening the screws.


3

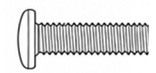P2 6*30	H4*1
	

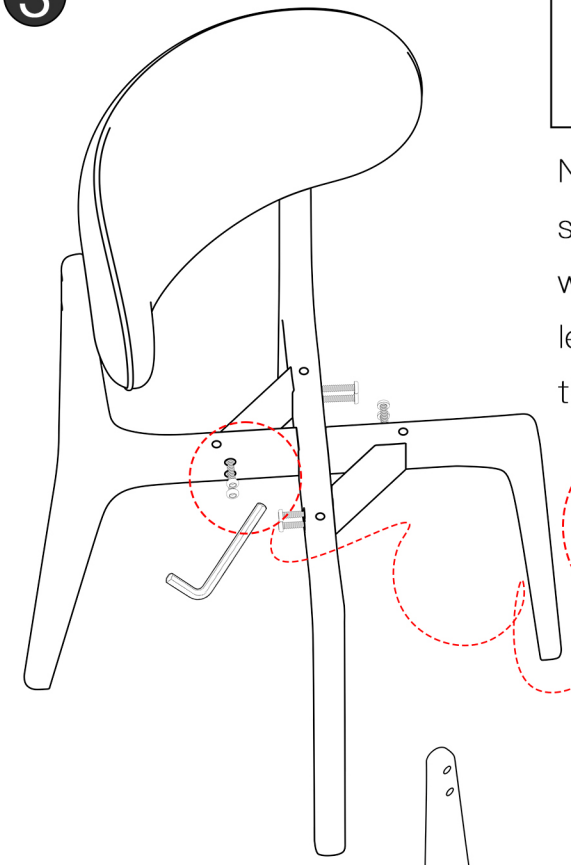

Note: Do not tighten the screws at the beginning, wait until they are leveled and then tighten them.

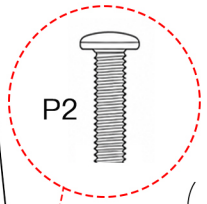


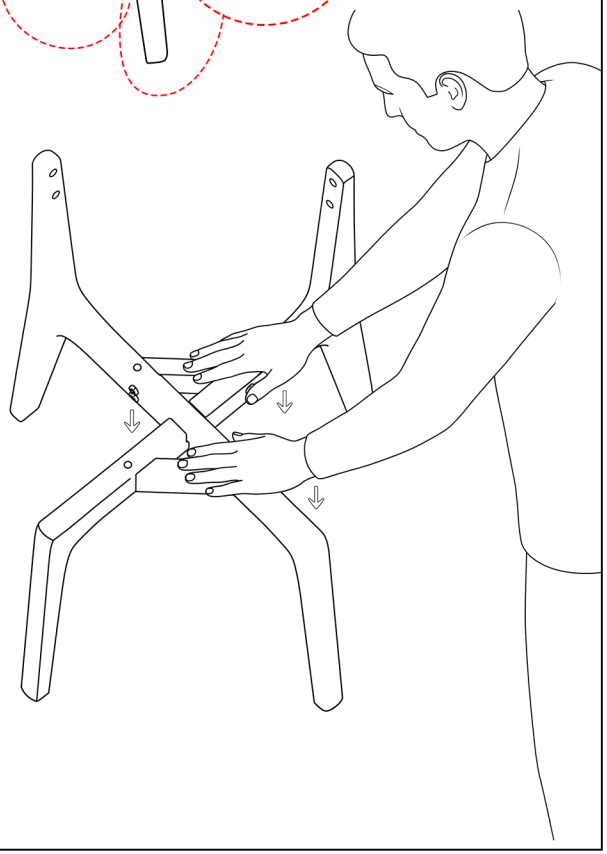



Note: After installing the screws on the frame, try to see if the chair is flat. If not, you can flatten the middle frame with force. Retighten the screws

4


Put the hat inside H4

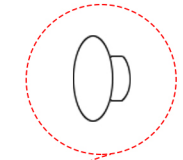


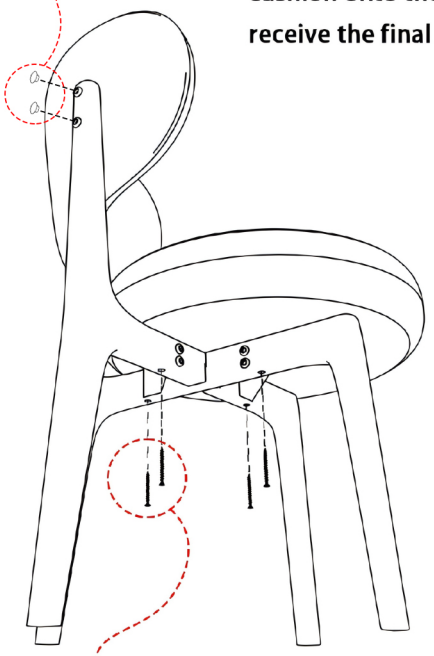

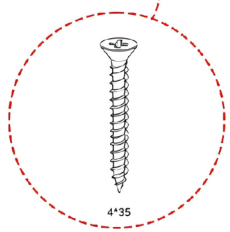


Straighten the seat cushion and screw the 4*35 self-tapping screws through the base into the seat cushion.
(Turn the chair upside down and push the seat cushion onto the stool to receive the final force)

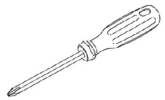F1*5	
	

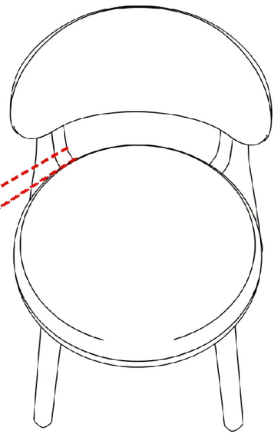

The seat cushion is about 20mm from the chair back

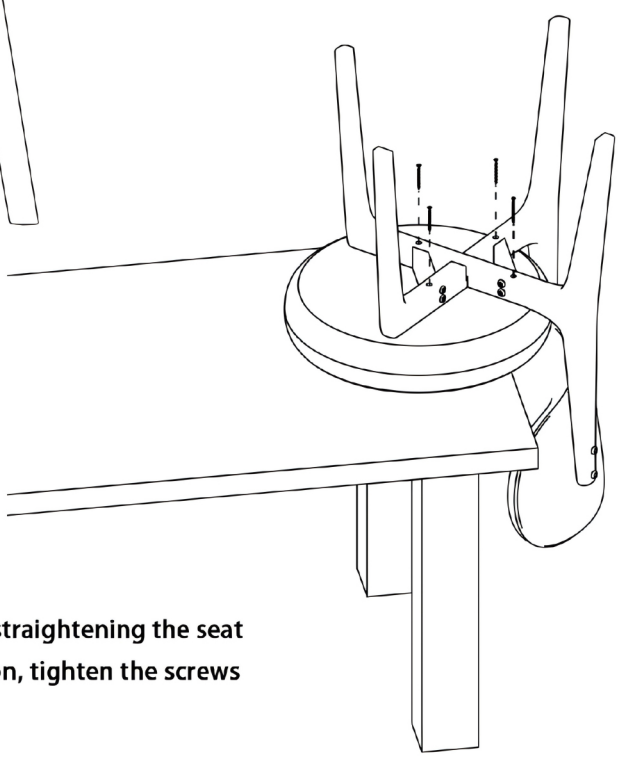

After straightening the seat cushion, tighten the screws