


ASSEMBLY INSTRUCTIONS

BATH VANITY - CABINET

SKU - N710P330971


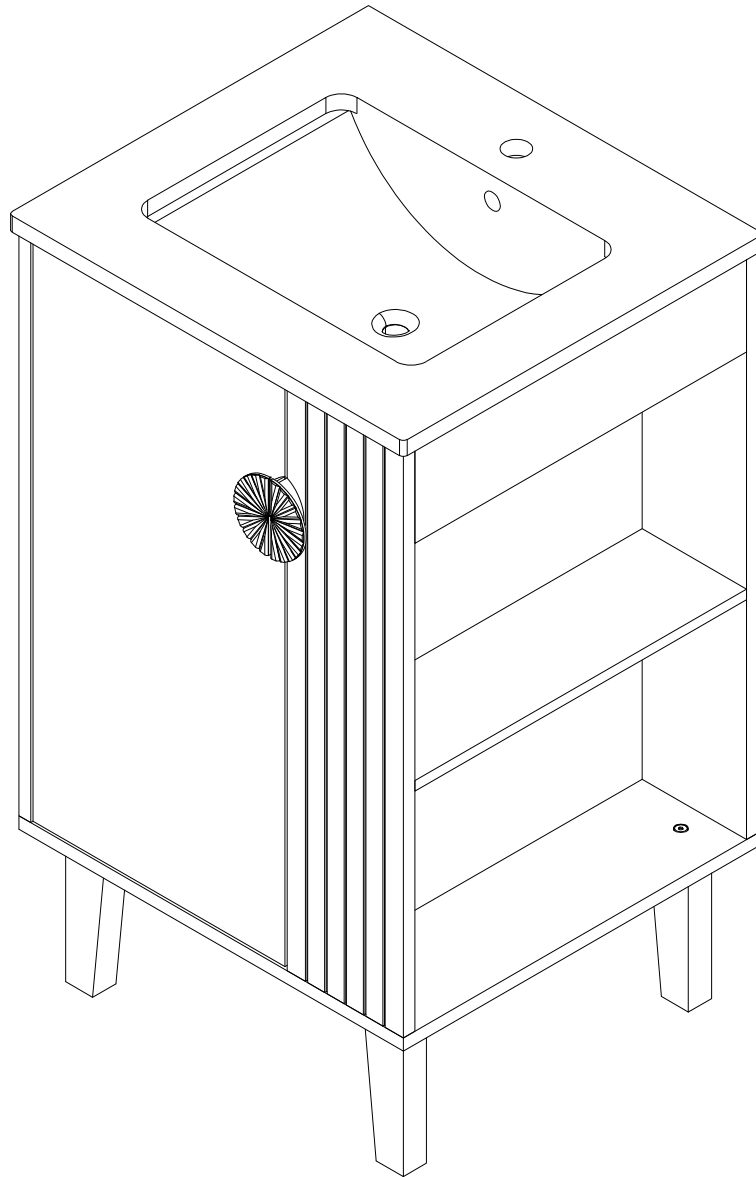


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

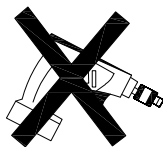

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY










Before Installation

Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions











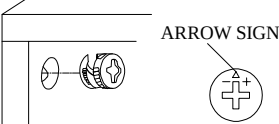
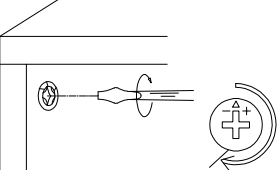
		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View



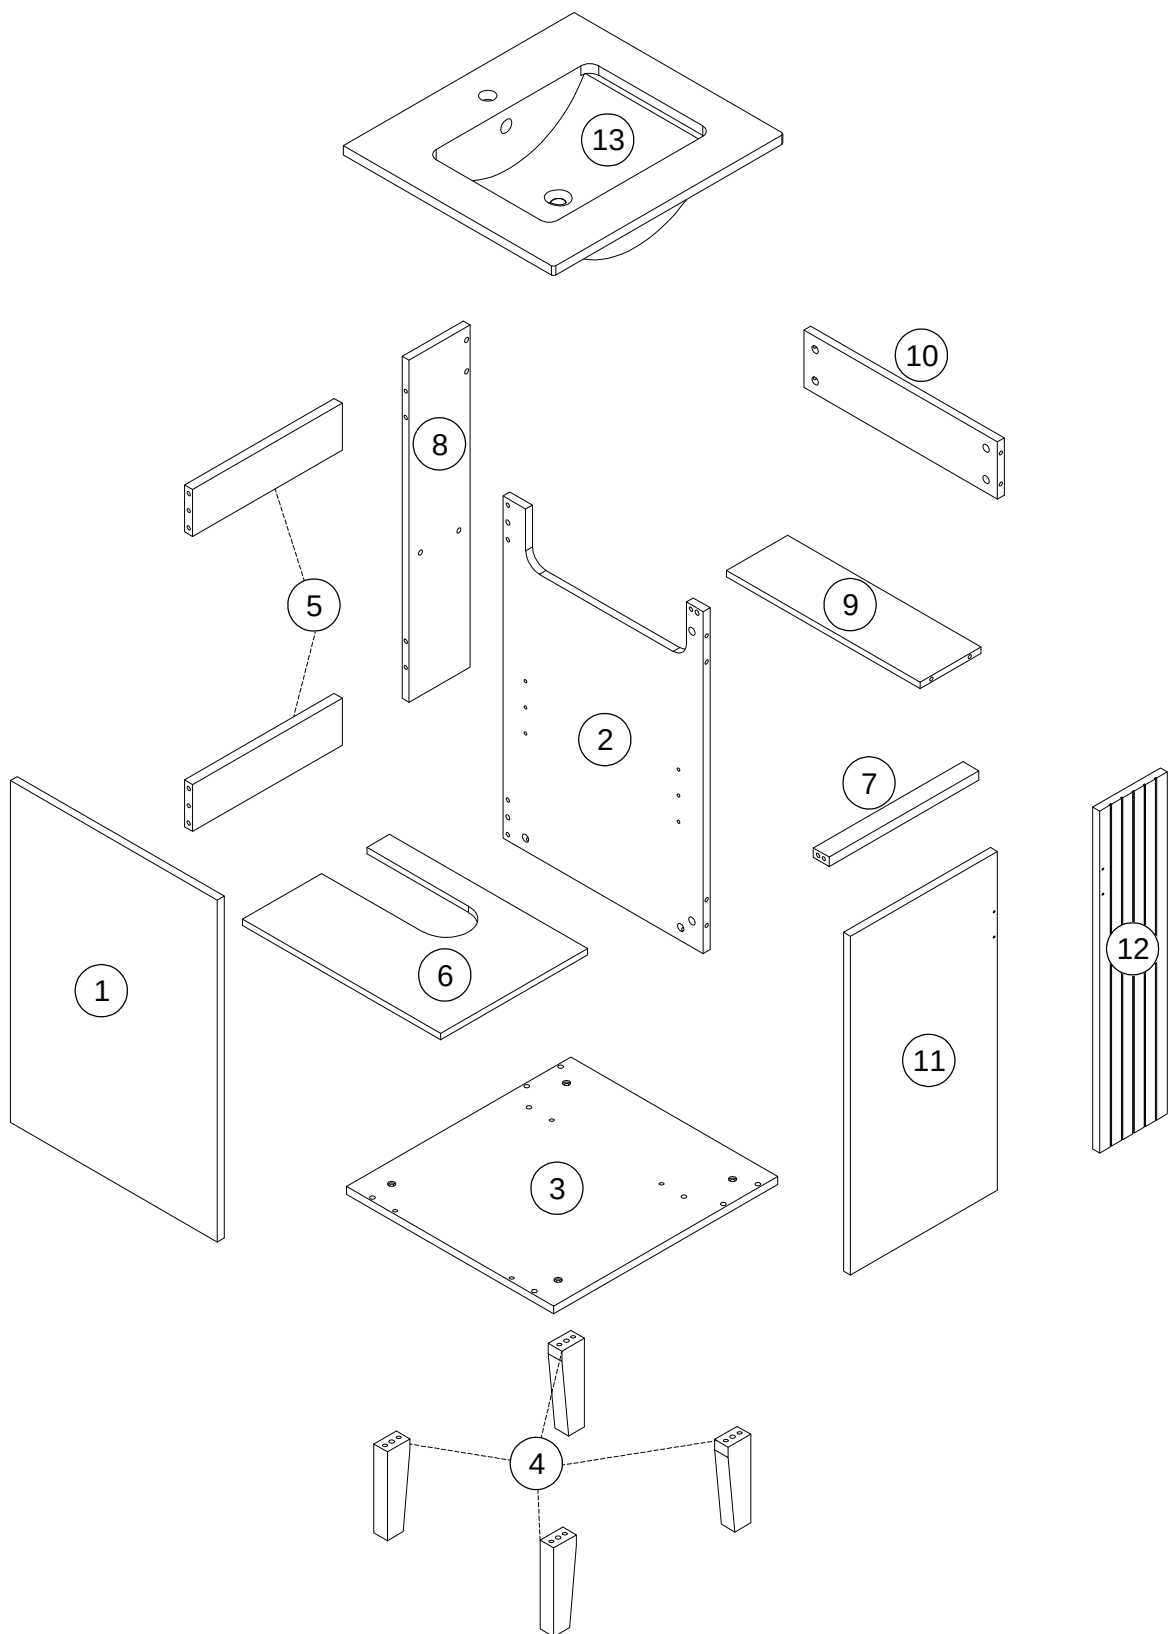


Identifying the Hardware-Identify the hardware using the illustrations below.

SKU - N710P330971

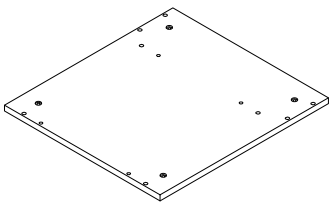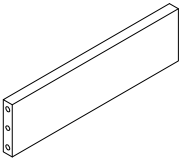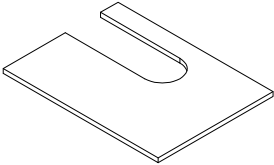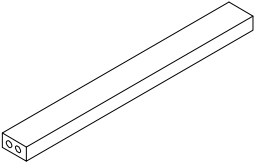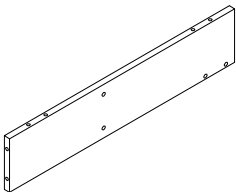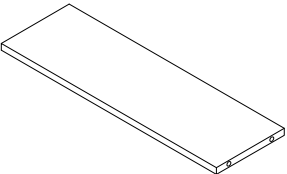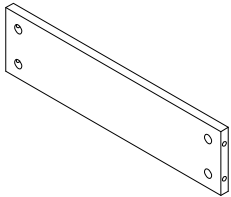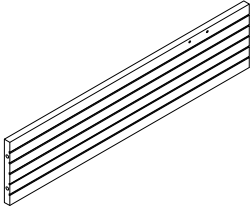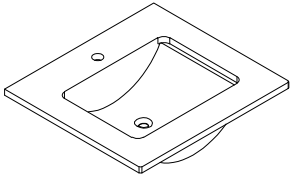
1  Side Panel (L) - 1pc	2  Middle Panel - 1pc	3  Bottom Panel - 1pc
4  Leg - 4pcs	5  Top + Bottom Rear Crossbar - 2pcs	6  Adjustable Shelf - 1pc
7  Top Front Crossbar - 1pc	8  Back Panel - 1pc	9  Shelf Board - 1pc
10  Top Right Side Panel - 1pc	11  Door Panel - 1pc	12  Front Panel - 1pc
13  Sink - 1pc		

Hardware Lists N710P330971







A  Ø8x30mm Wood dowel (26pcs)	B  Ø6*32mm Three in one bolts (22pcs)	C  Ø14.5*9.5mm Three in one locks (22pcs)
D  Damping hinge (2 sets)	E  M6x30mm Hex-Head bolt (8pcs)	F  Washers (4pcs)
G  K4mm Allen key (2pcs)	H  M4x15mm Handle screw (4pcs)	I  Handle (2pcs)
J  Plastic shock absorber (1pc)	K  Pin shelf (4pcs)	L  Ø3x15mm Round head screw (4psc)
M  Anti fall Hardware (2 sets)		

STEP:1


B



22pcs

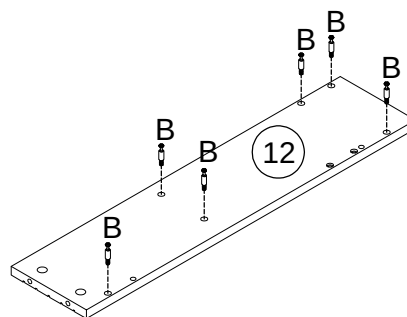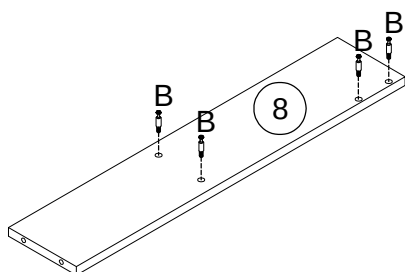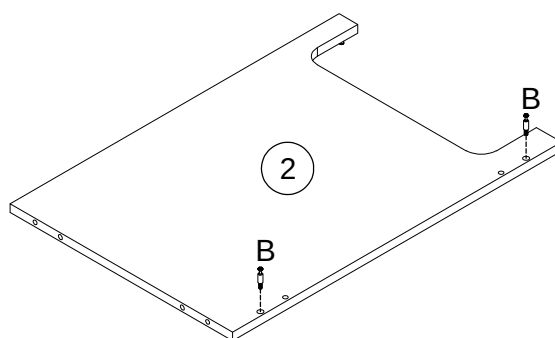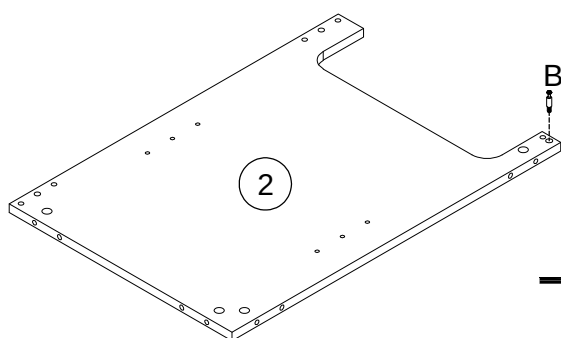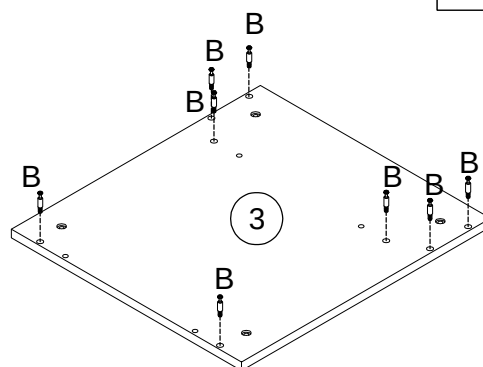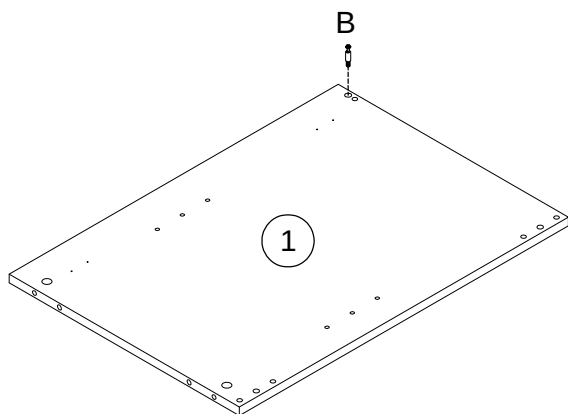


STEP:2

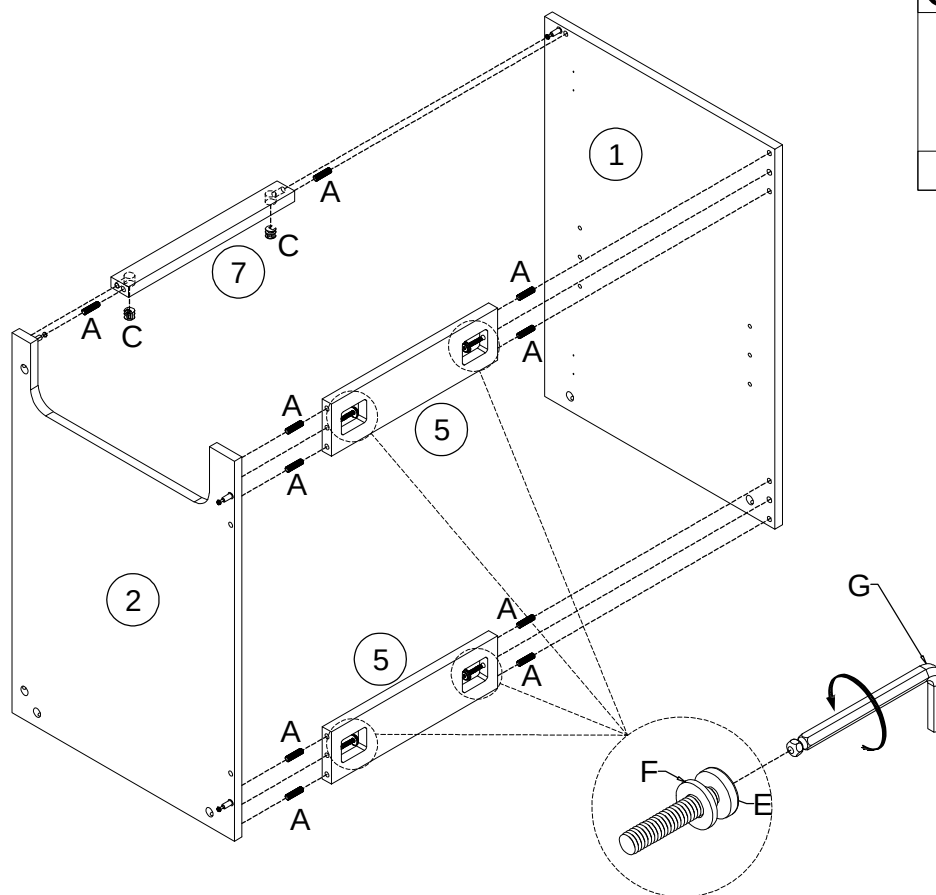

G		A	
2pcs		10pcs	
C			
			
2pcs			
E			
			
4pcs			
F			
			
4pcs			

STEP:3

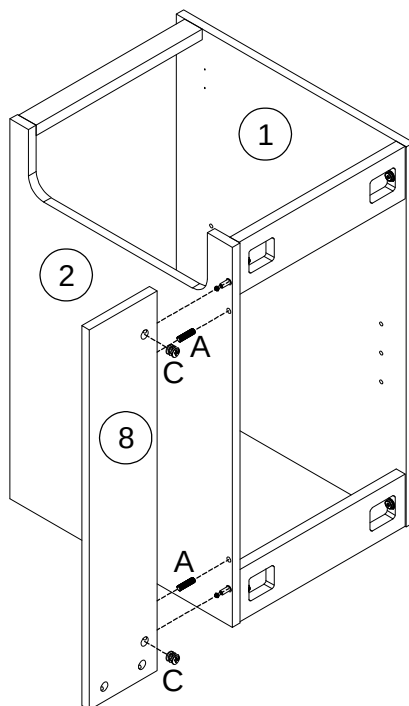


A	
2pcs	
C	
2pcs	

STEP:4

C



2pcs

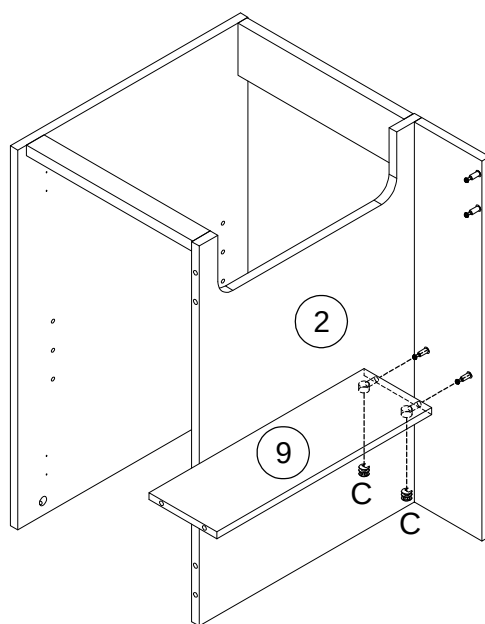


STEP:5


C




2pcs

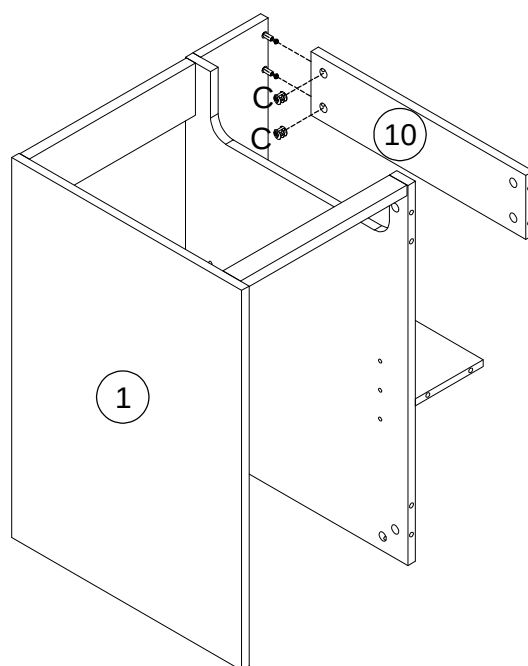

STEP:6

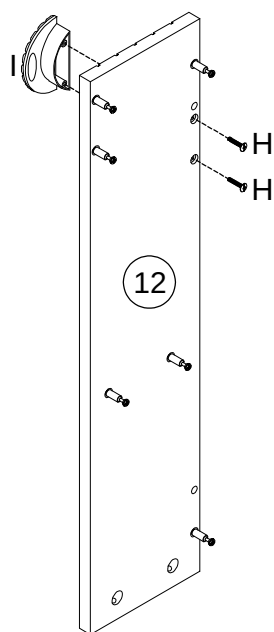


I




1pc

H



2pcs

STEP:7

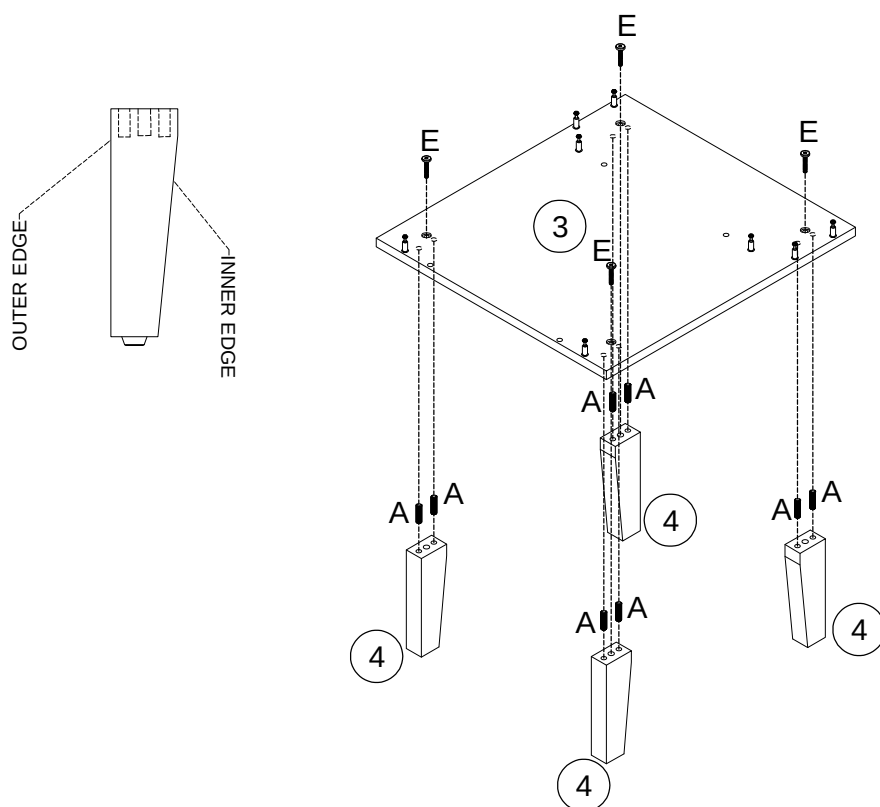

A



8pcs

E



4pcs

STEP:8

A




2pcs

C



6pcs

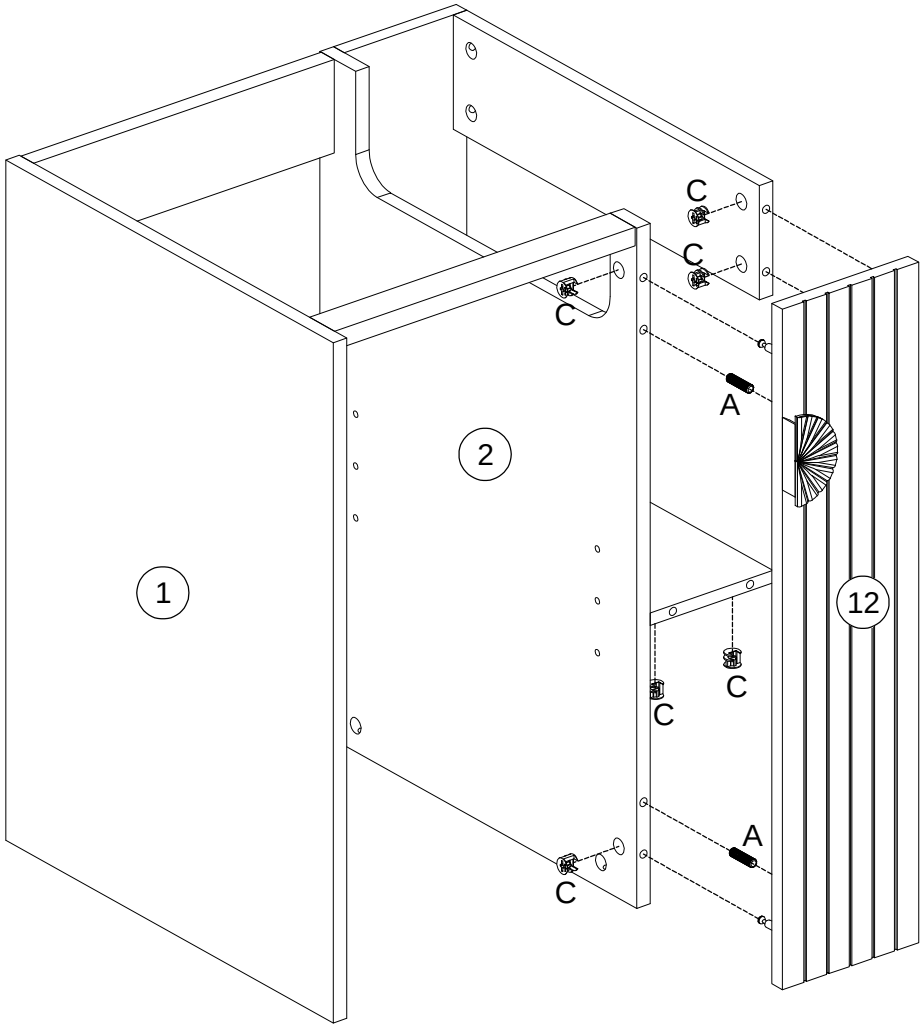

STEP:9

A





4pcs


C




8pcs

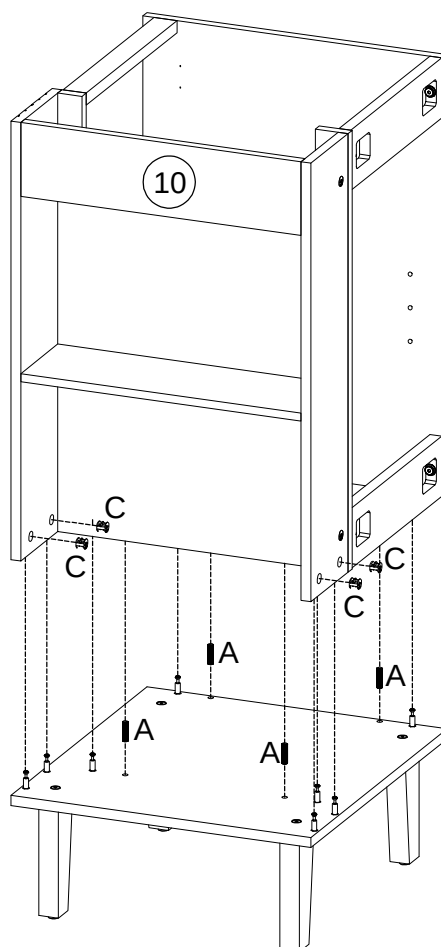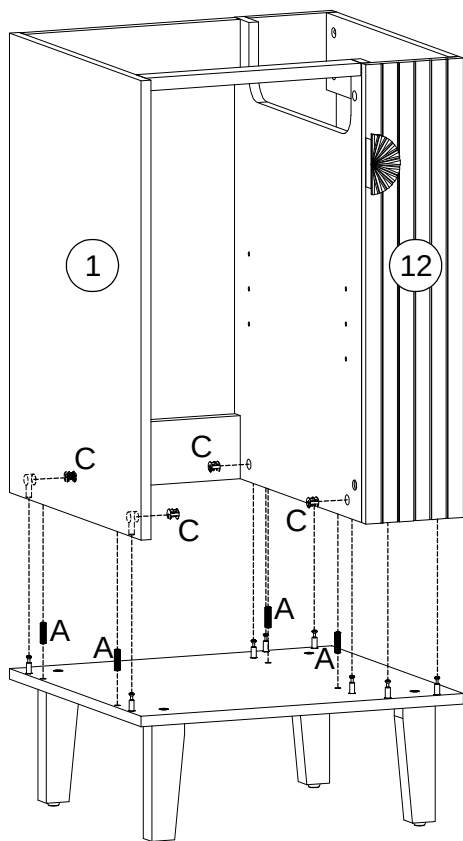


STEP:10


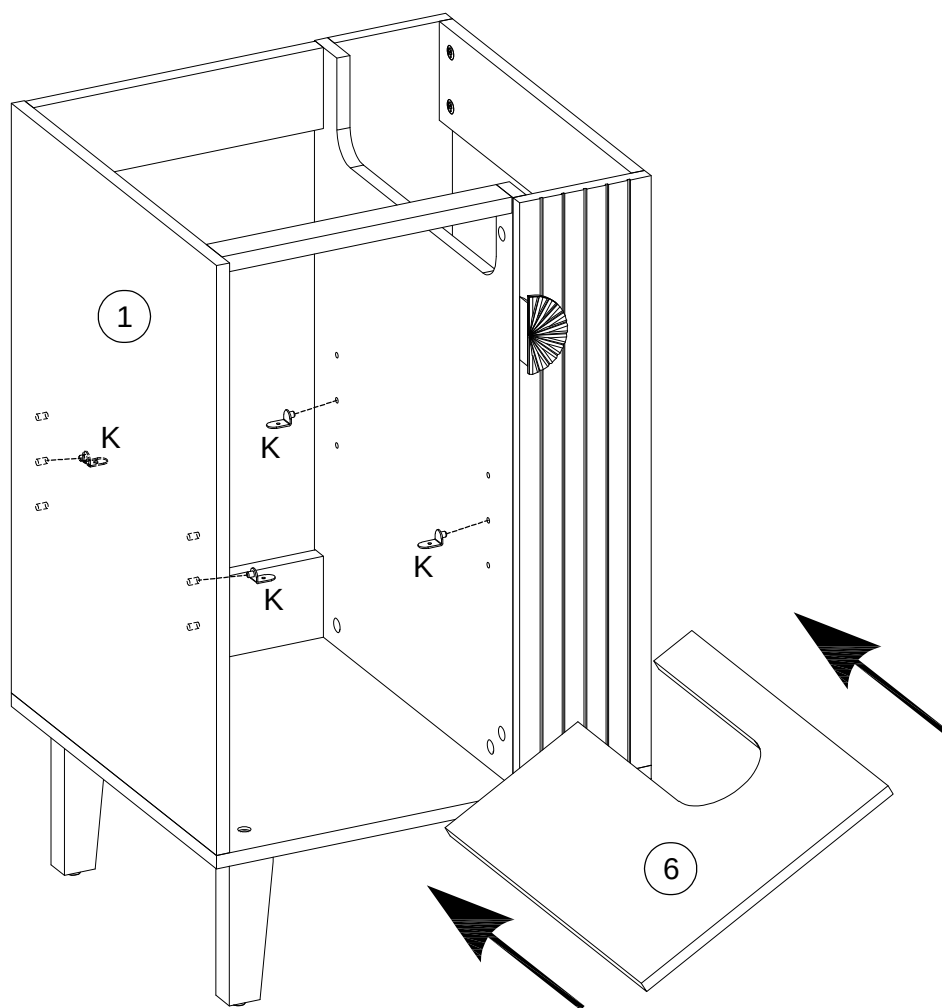


K

4pcs
L

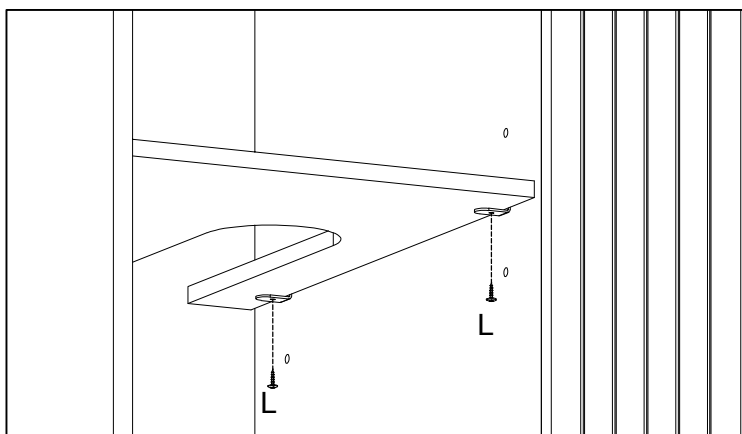4pcs

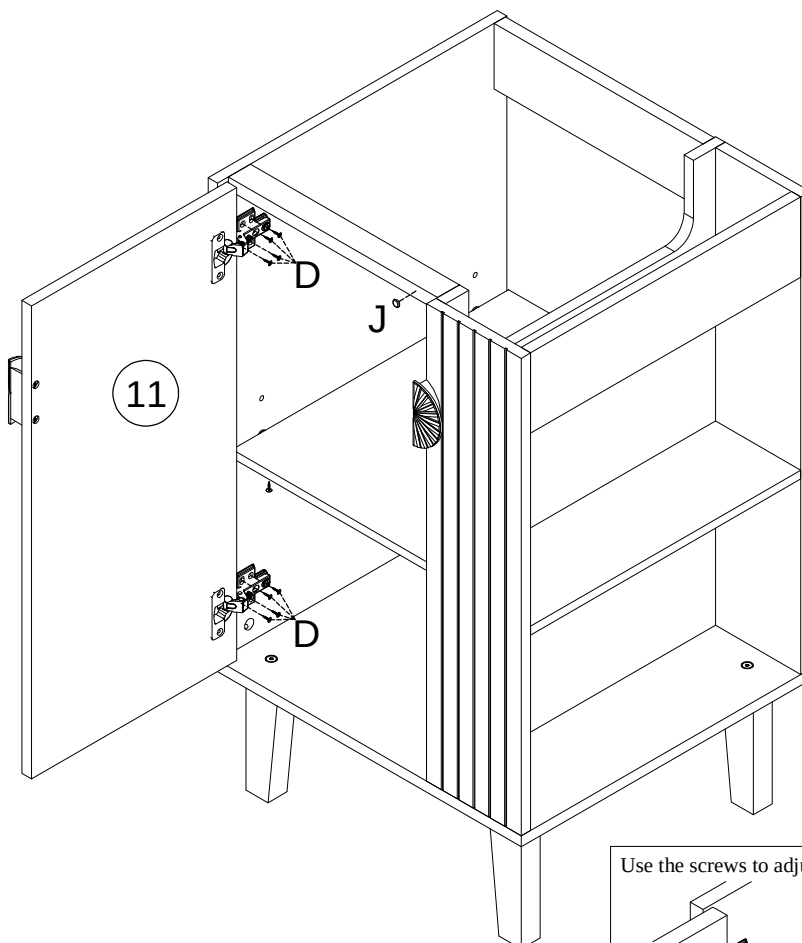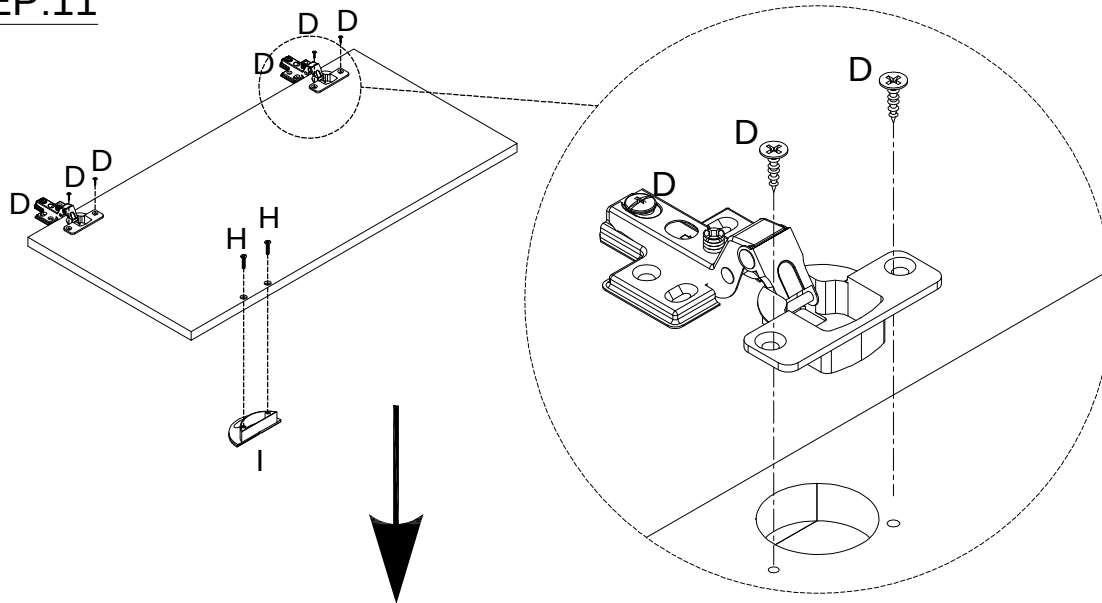

STEP:11




D	
2pcs	
D	
12pcs	
I	
1pc	
H	
2pcs	
J	
1pc	

Use the screws to adjust up or down

Use the screws to adjust in or out

Use the screws to adjust left or right

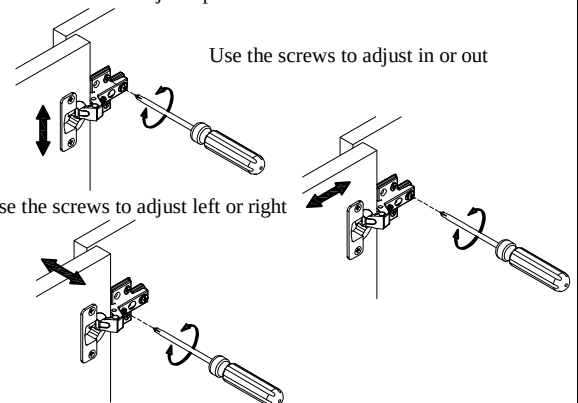

STEP:12

M




2pcs

Wall


M

M


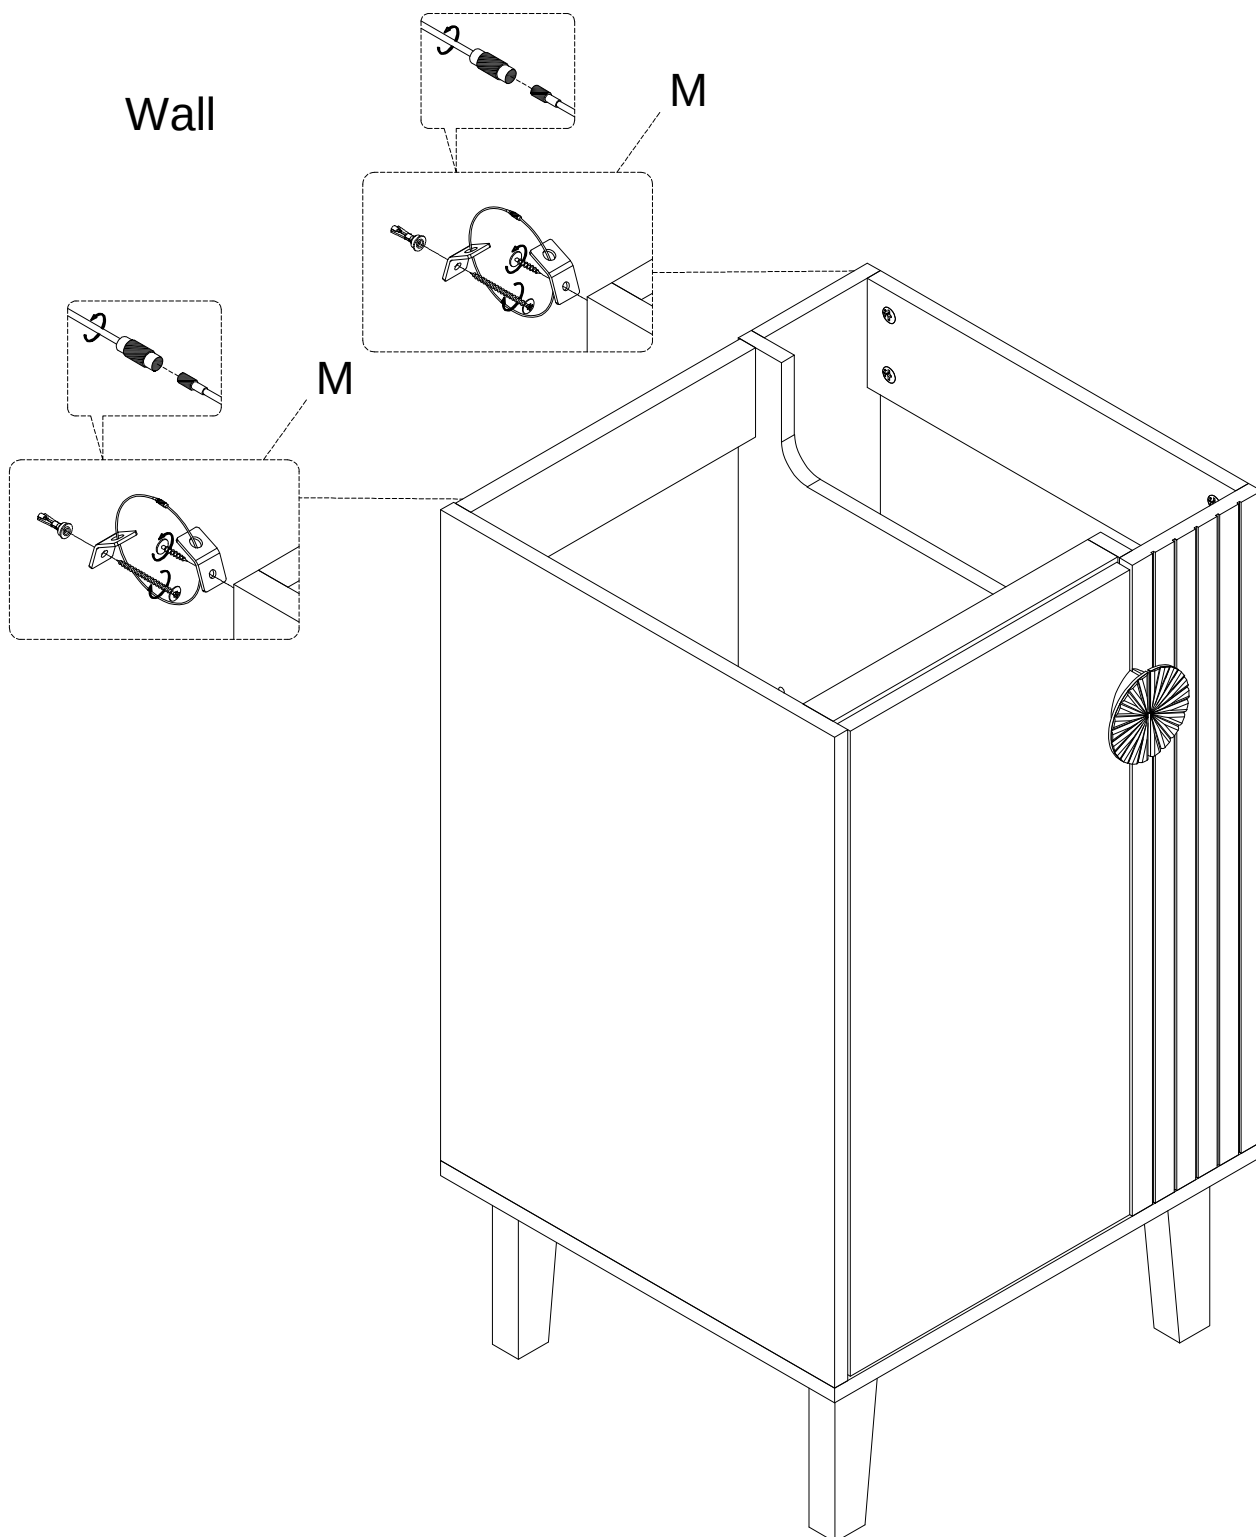


STEP:13


Install the sink on the cabinet with glue.
Let stand for 24 hours

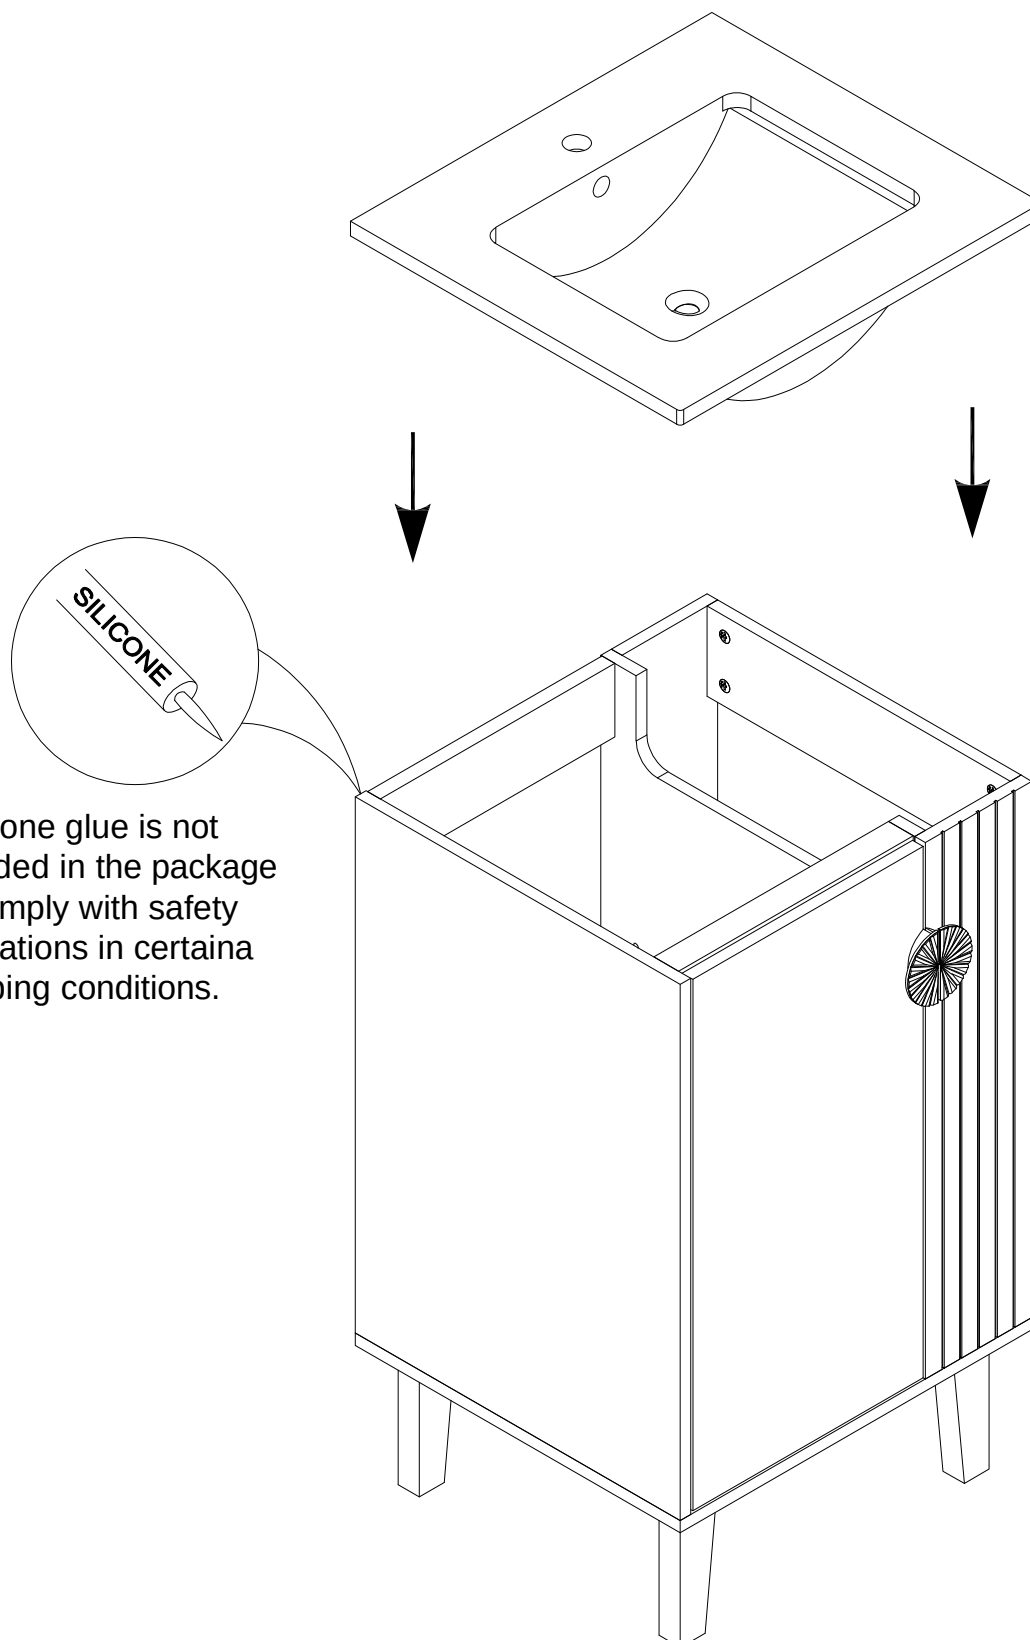

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

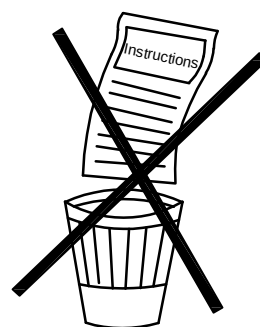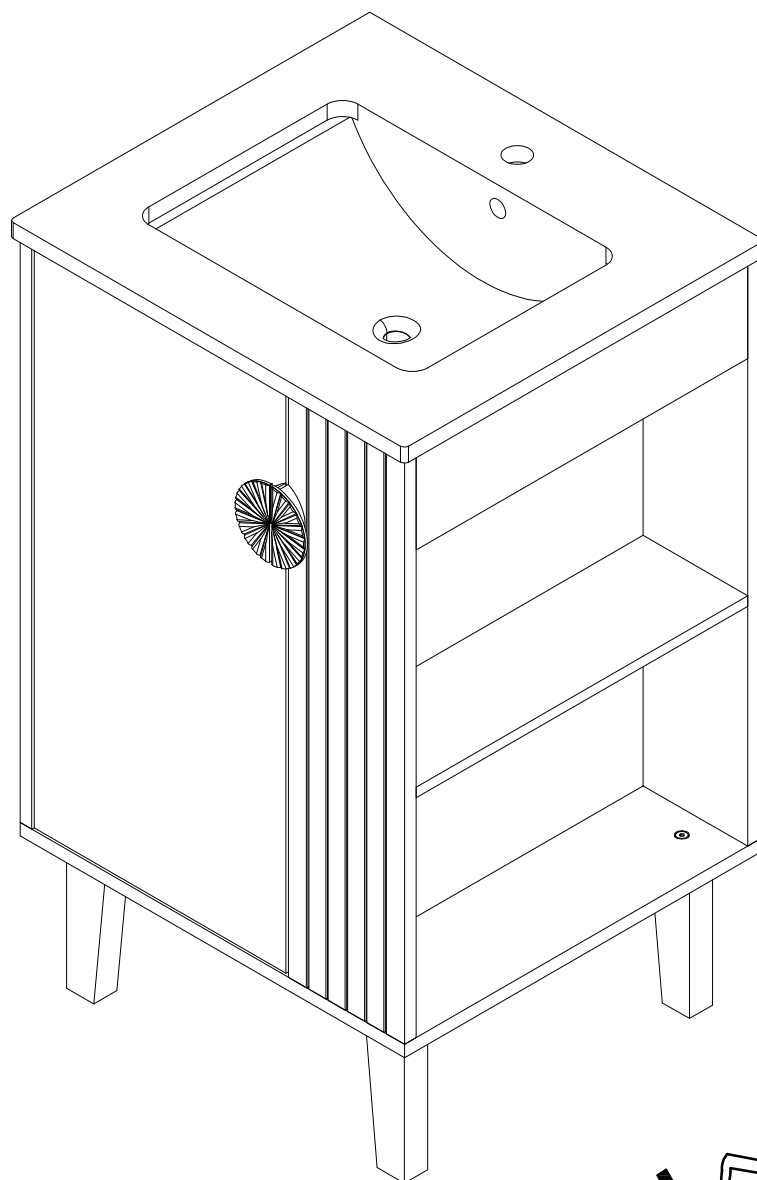

HINGE ADJUSTMENTS

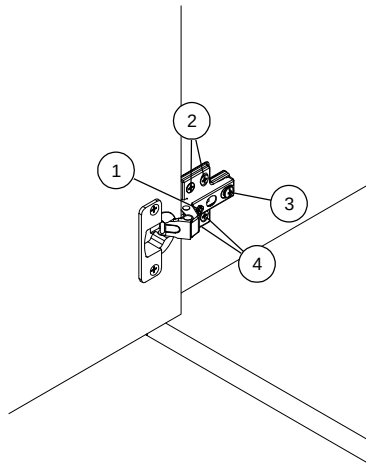


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

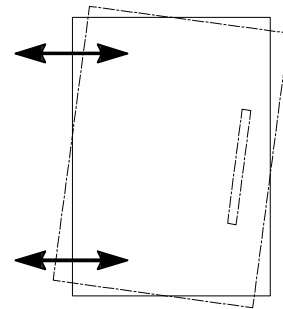


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

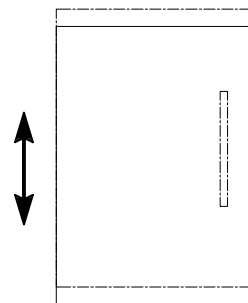

③ Forward and back adjustment

