




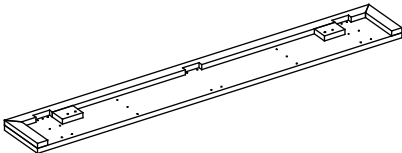
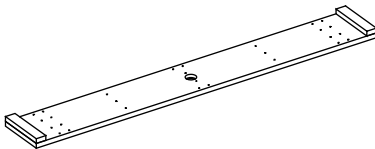
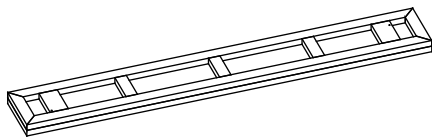





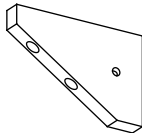








Component List


			
<div>1</div> <div>Big slat support x 2pcs</div>	<div>2</div> <div>Small slat support x 2pcs</div>	<div>3</div> <div>Middle slat support x 1pc</div>	
			
<div>4</div> <div>Side top x 2pcs</div>	<div>5</div> <div>Middle top x 1pc</div>	<div>6</div> <div>Bench seat x 2pcs</div>	
			
<div>7</div> <div>Seat apron x 2pcs</div>	<div>8</div> <div>Left Steel legs x 2pcs</div>	<div>9</div> <div>Right Steel legs x 2pcs</div>	
			
<div>10</div> <div>Corner support x 4pcs</div>	<div>11</div> <div>Parasol hole cap x 1pc</div>		
			
<div>A</div> <div>M4X25 Bolt x82 pcs</div>	<div>B</div> <div>M5X50 Bolt x8 pcs</div>	<div>C</div> <div>M5X60 Bolt x6 pcs</div>	<div>D</div> <div>M6X60 Bolt x8 pcs</div>
			
<div>E</div> <div>M6X10 Cross dowel x8 pcs</div>	<div>F</div> <div>M6X25 Vis x28 pcs</div>	<div>G</div> <div>Allen key x2 pcs</div>	<div>H</div> <div>M6X35 Tools 2 pcs</div>




Tips

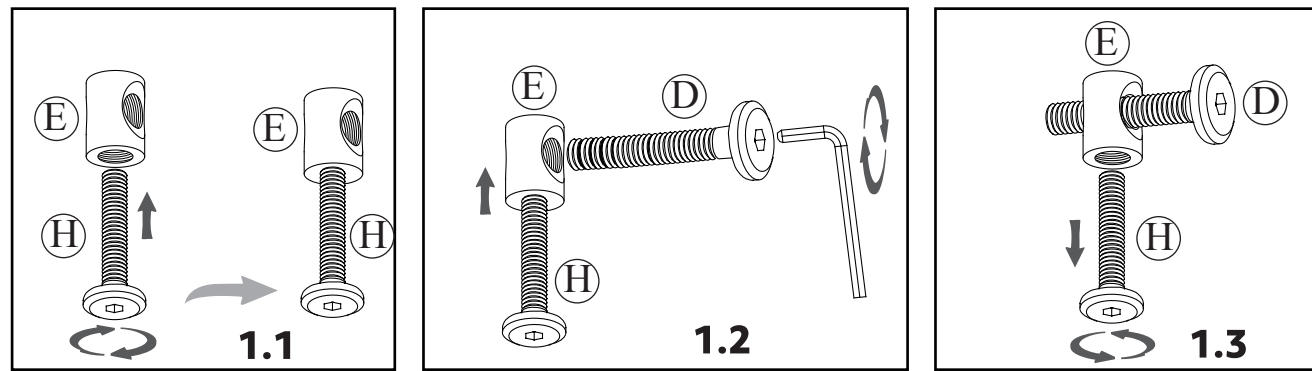- 1.1 Insert Cross dowels (E) into the holes using the Tools (H),
- 1.2 fix and tighten Bolt (D)
- 1.3 Remove Tools (H) and replay for another one


STEP 1

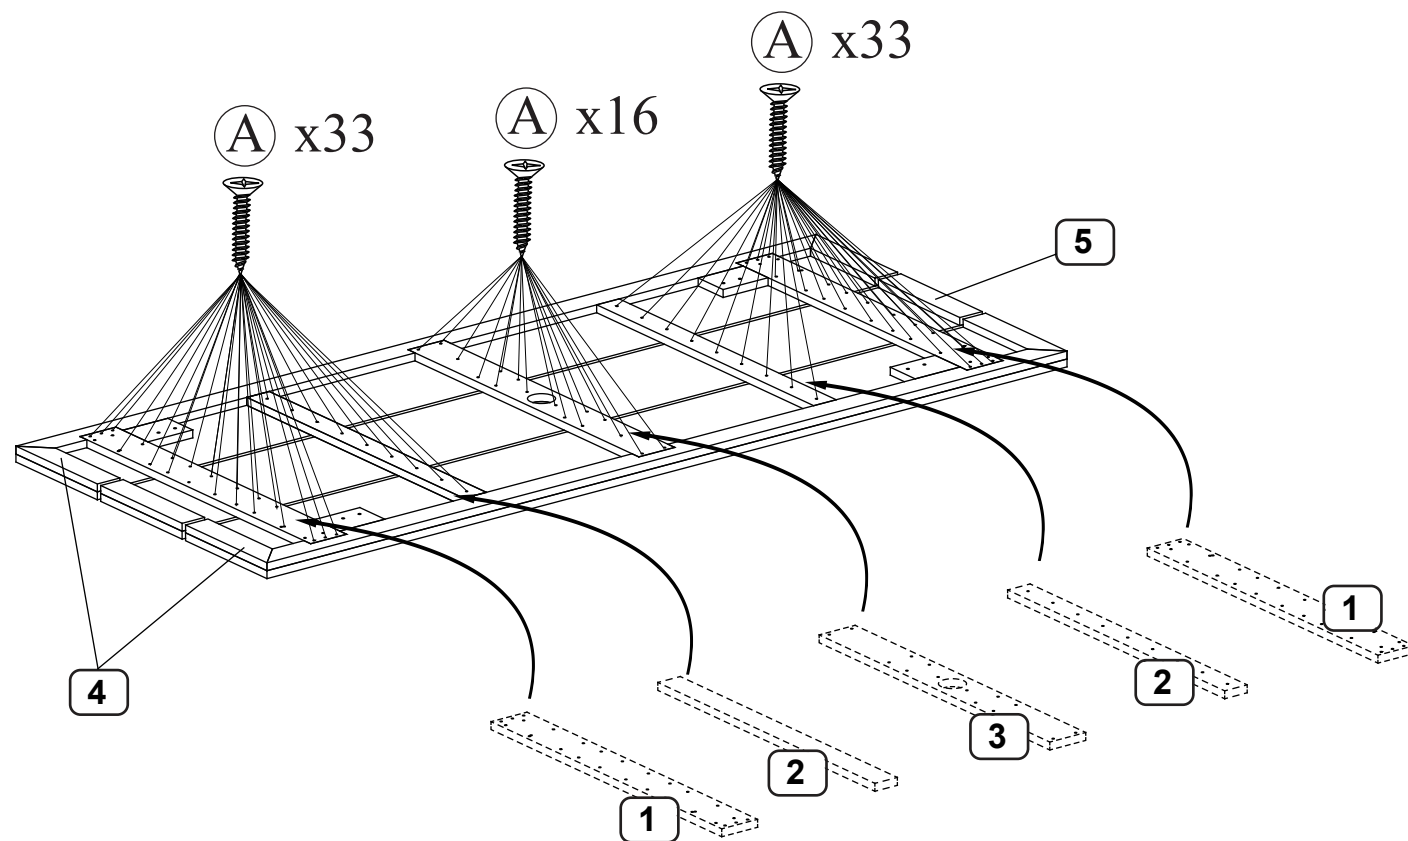


STEP 2

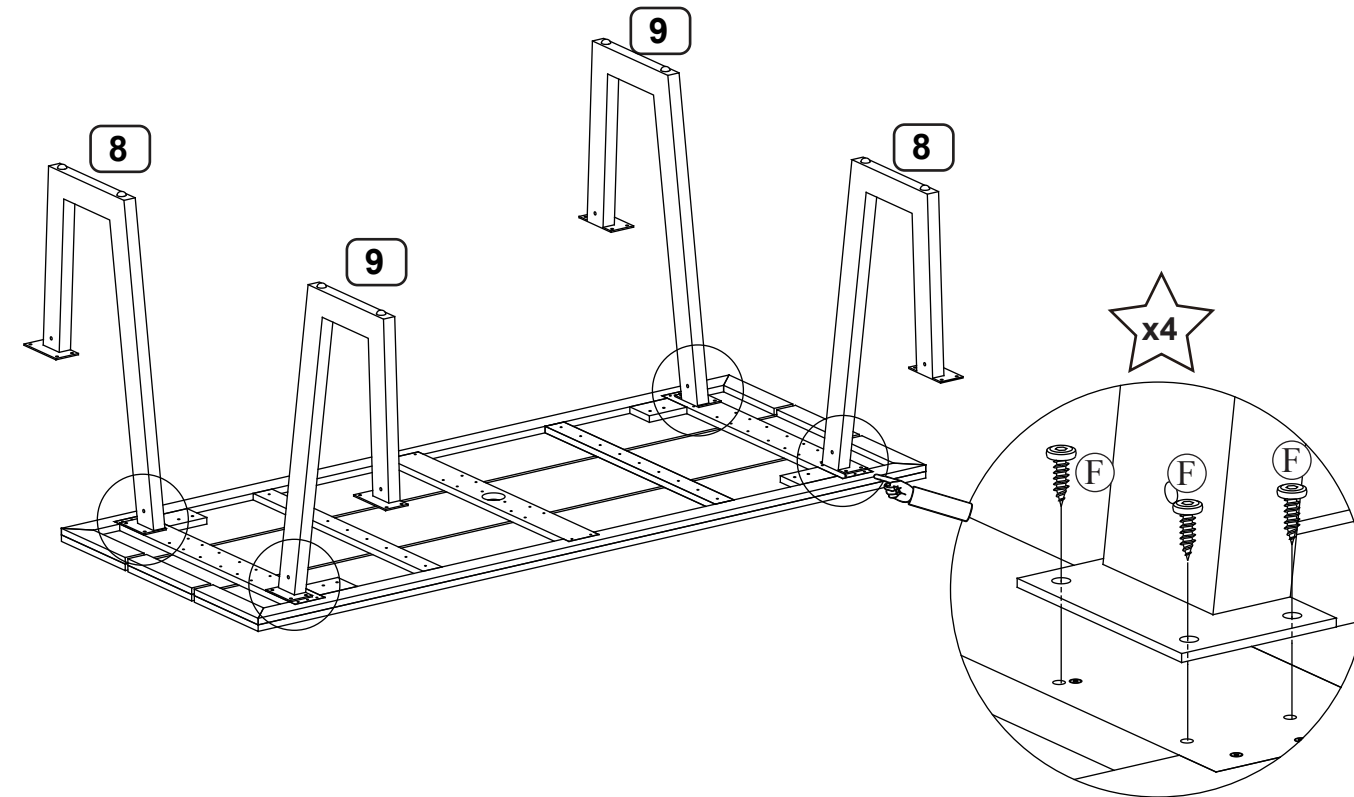


STEP 3

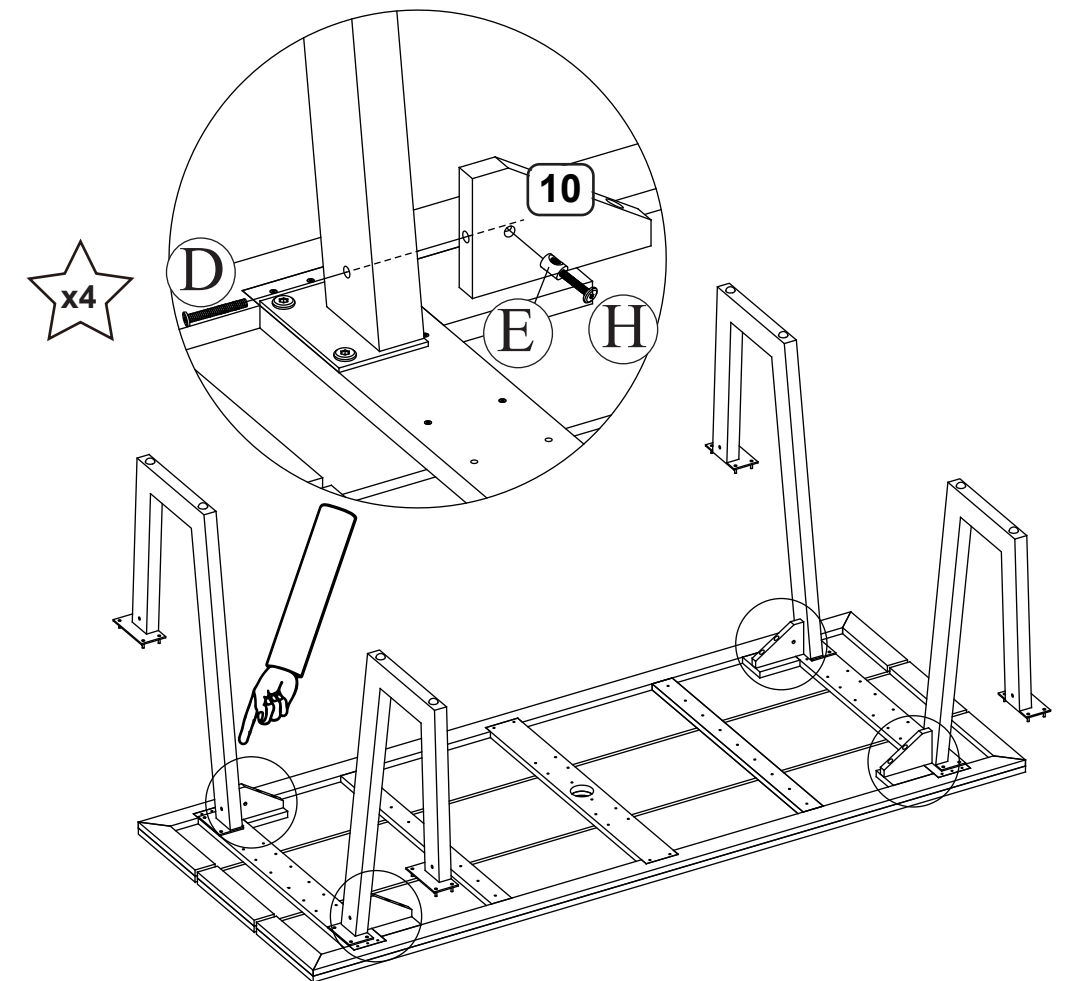




STEP 4

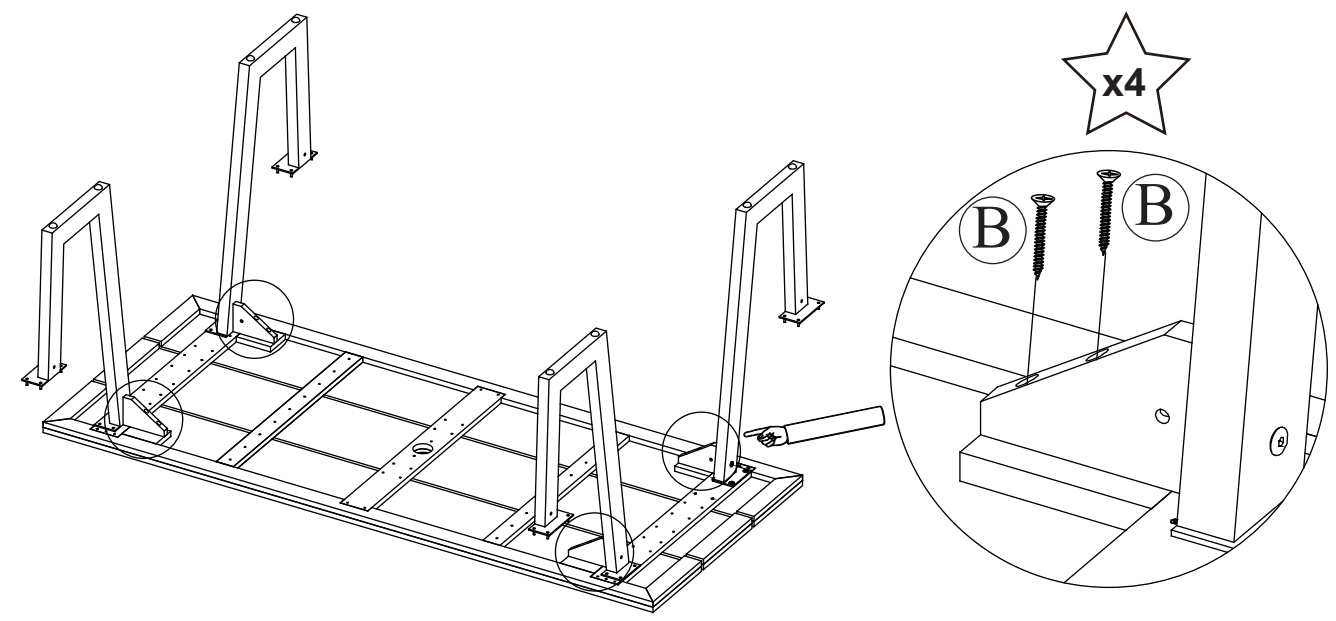

STEP 5

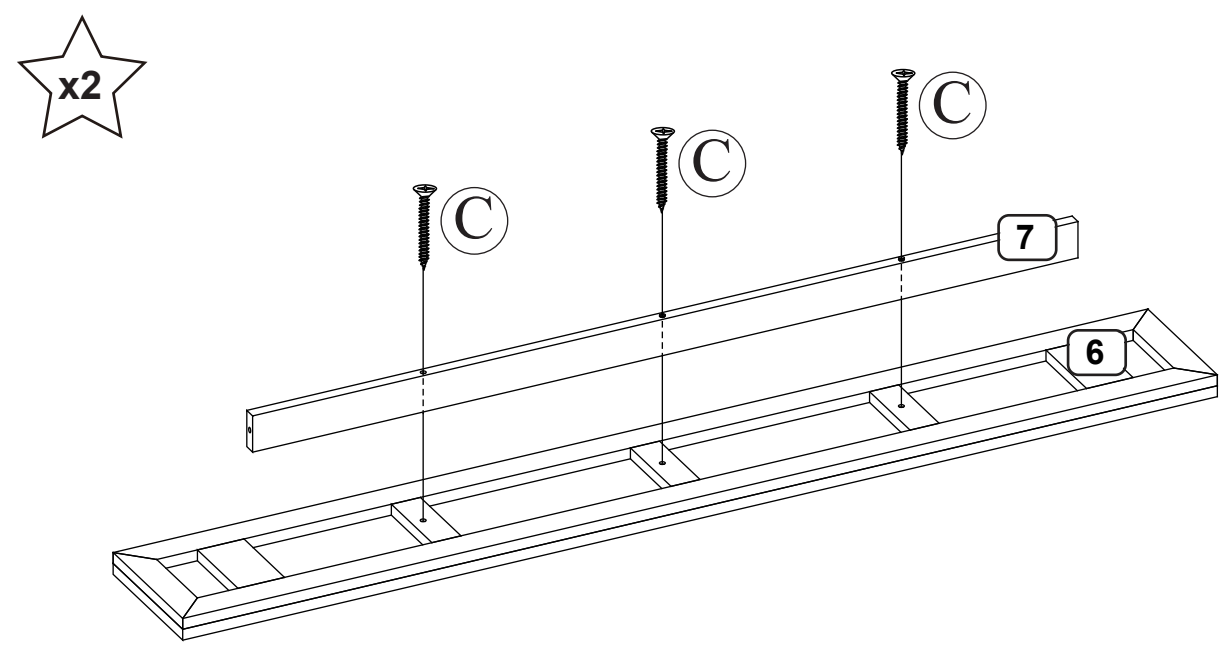

STEP 6

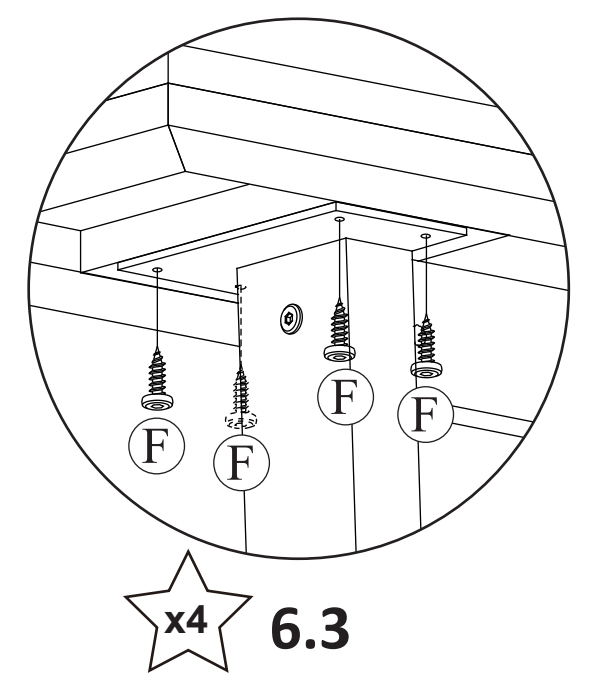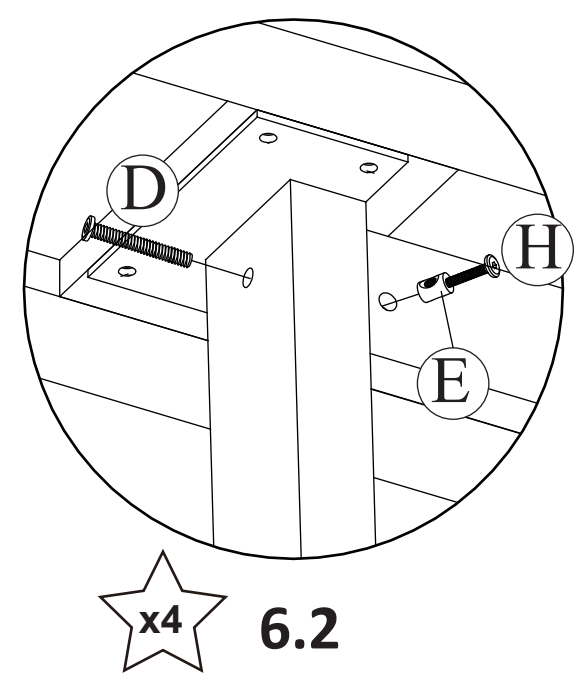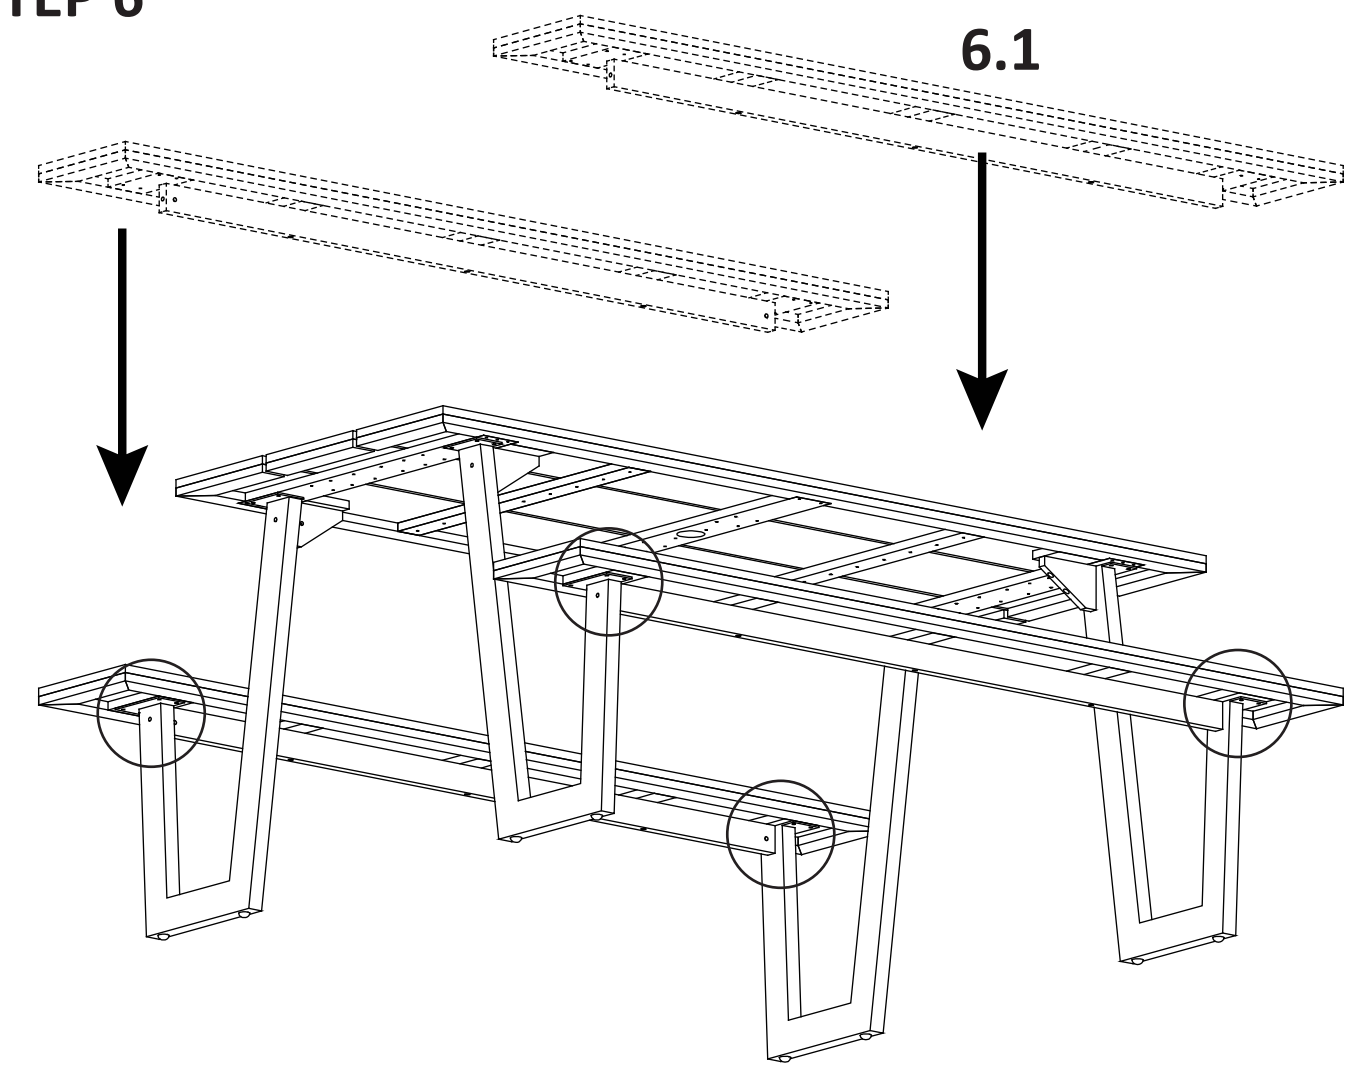

STEP 7

