



ASSEMBLY INSTRUCTION

TWIN BED (1000 x 1905)MM

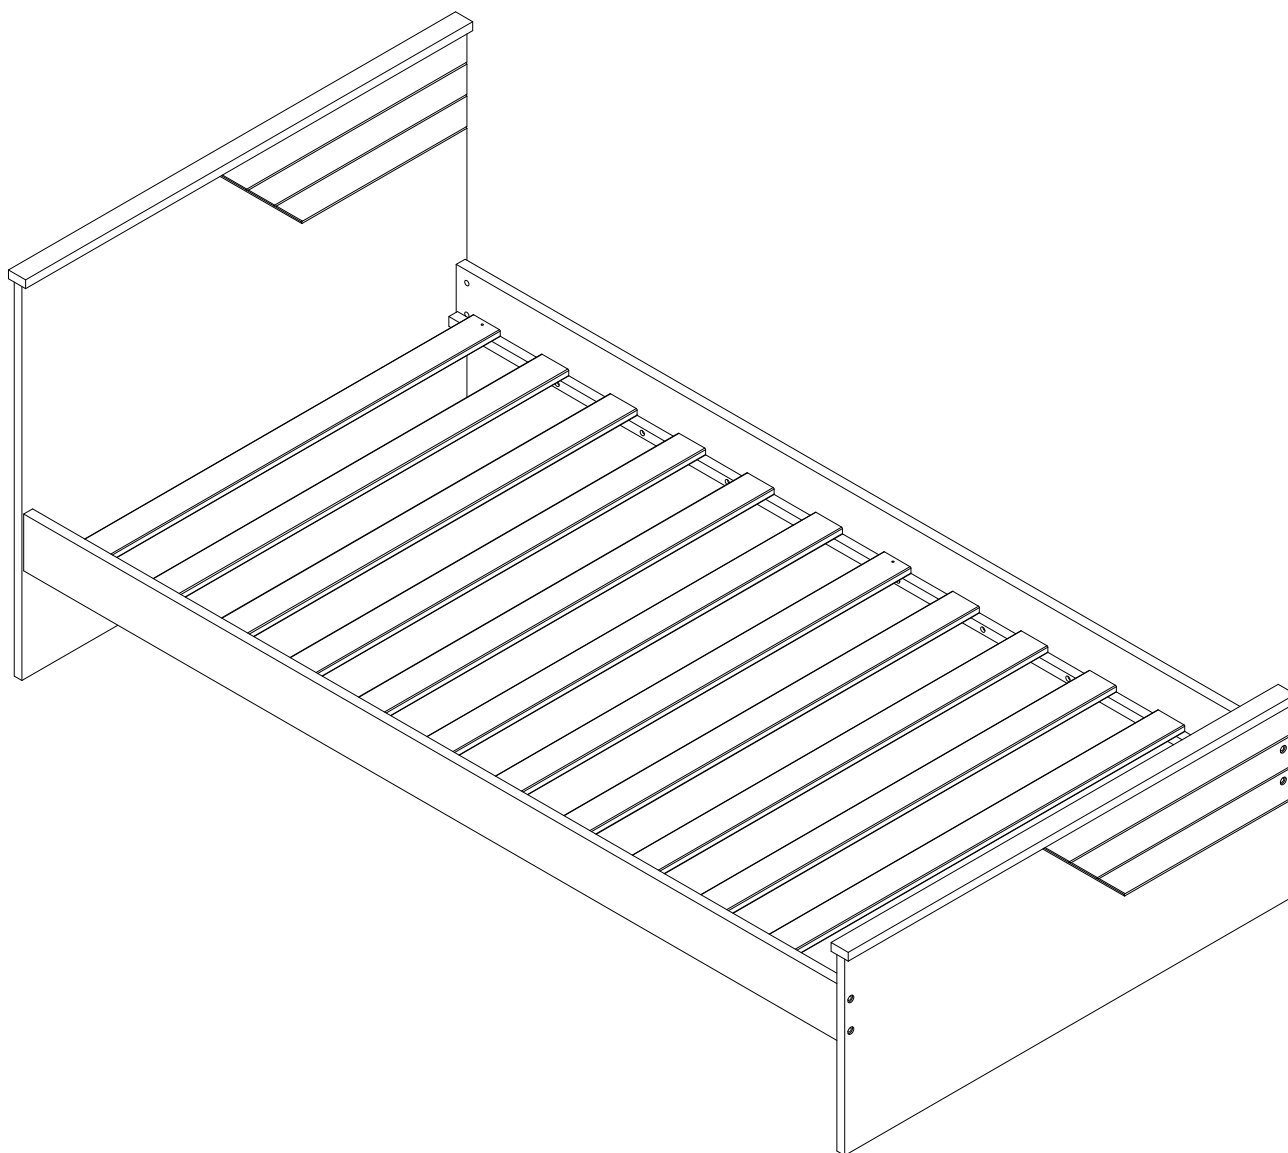


HARDWARE LIST

A4 PCS




PLASTIC DOWEL (M8 x 30MM)

B4 PCS



PLASTIC DOWEL (M10 x 35MM)

C8 PCS



JCBC BOLT (M6 x 50MM)

D8 PCS



JRN NUT (M6 x 13MM)

E6 PCS



CONNECTING BOLT (34MM)

F6 PCS




MINIFIX (12MM)

G6 PCS



CSK C/B SCREW (M4 x 32MM)


H1 PC




ALLEN KEY (M4 x 60MM)

Tools Required :
Crosshead Screw Driver,
Rubber Hammer


PART LIST

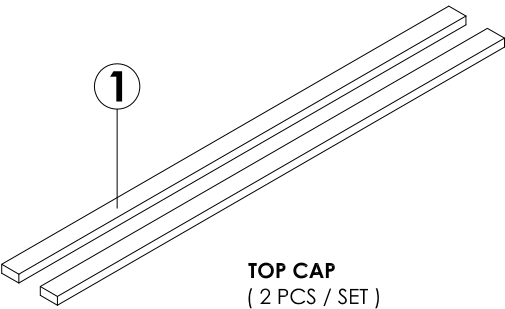


TOP CAP
(2 PCS / SET)
CARTON 1 OF 2

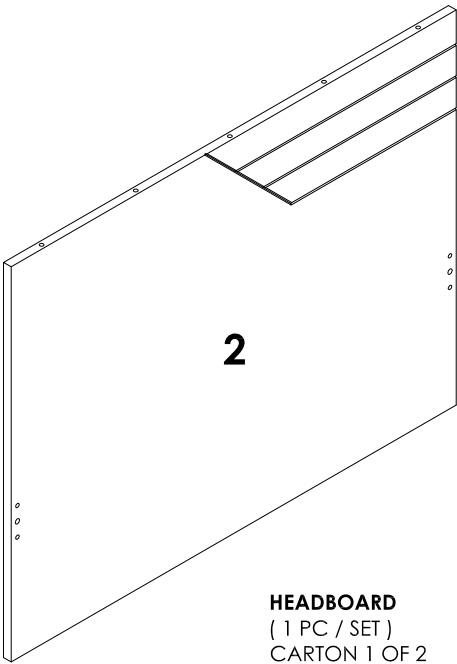


HEADBOARD
(1 PC / SET)
CARTON 1 OF 2

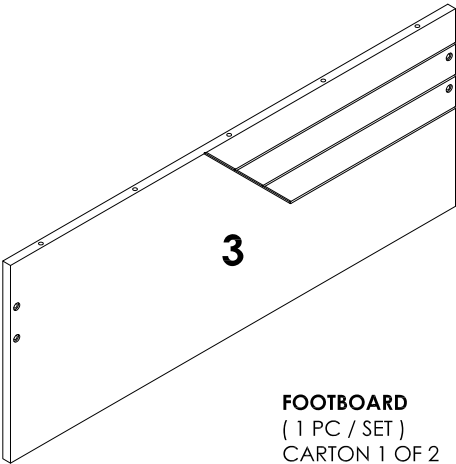


FOOTBOARD
(1 PC / SET)
CARTON 1 OF 2

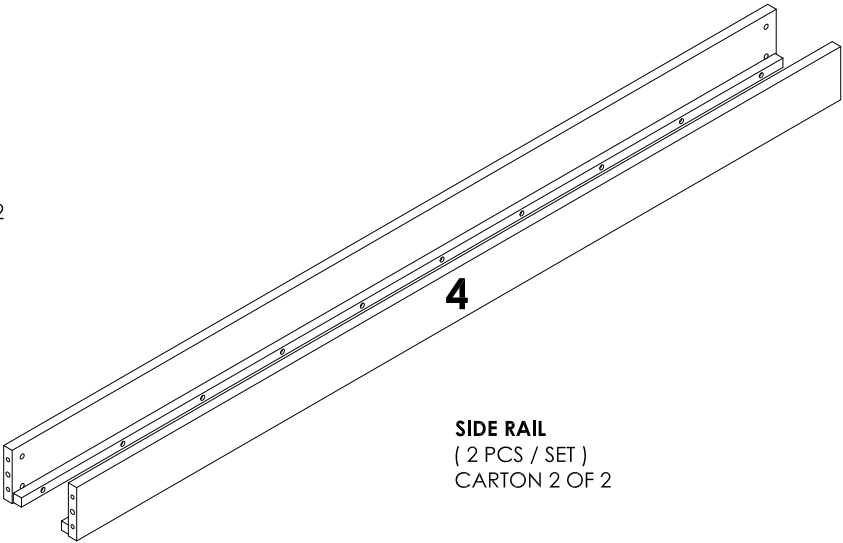

SIDE RAIL
(2 PCS / SET)
CARTON 2 OF 2

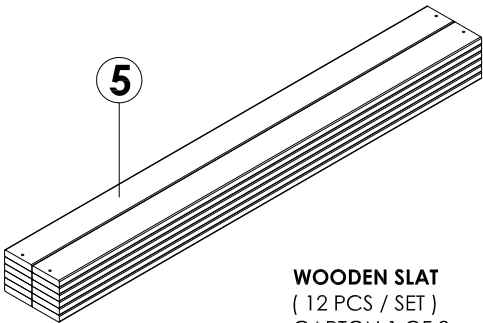


WOODEN SLAT
(12 PCS / SET)
CARTON 1 OF 2

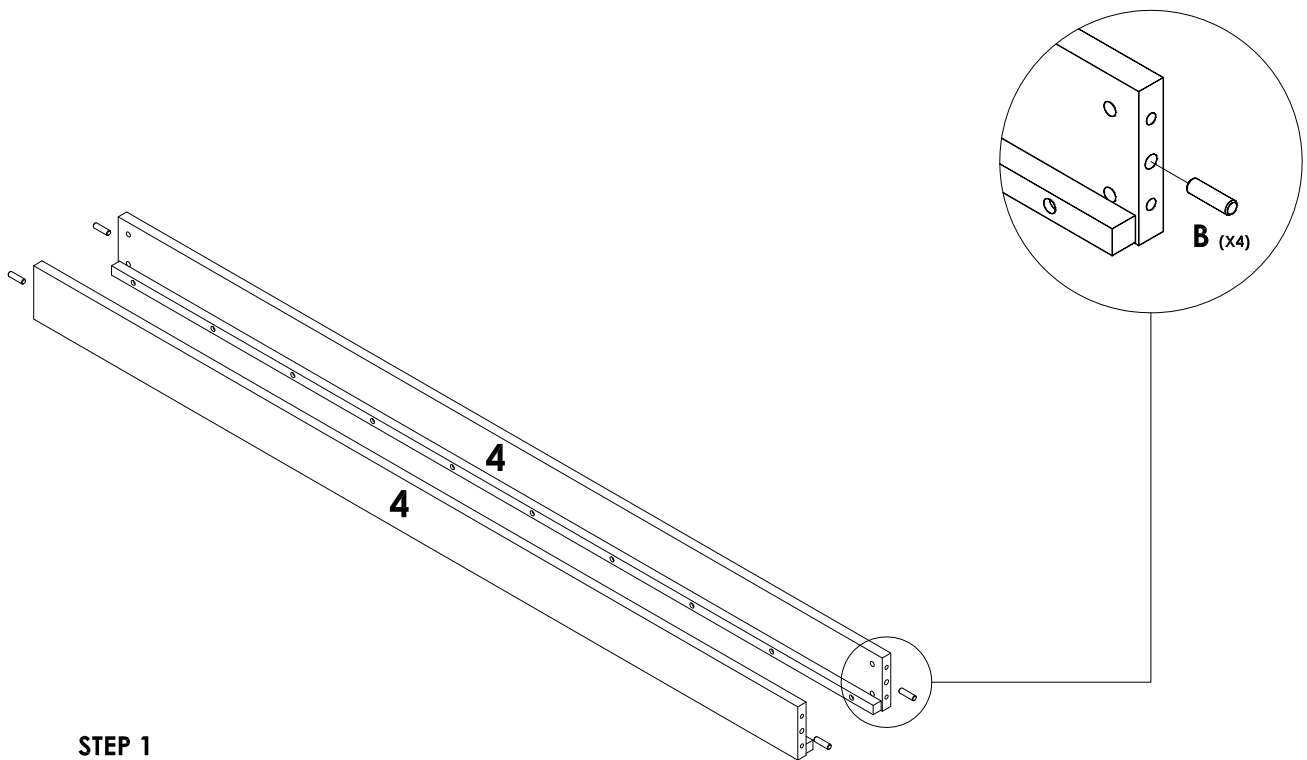



STEP 1

Insert **(B)** into Ø10MM holes on **Side Rail** by using a Rubber Hammer.

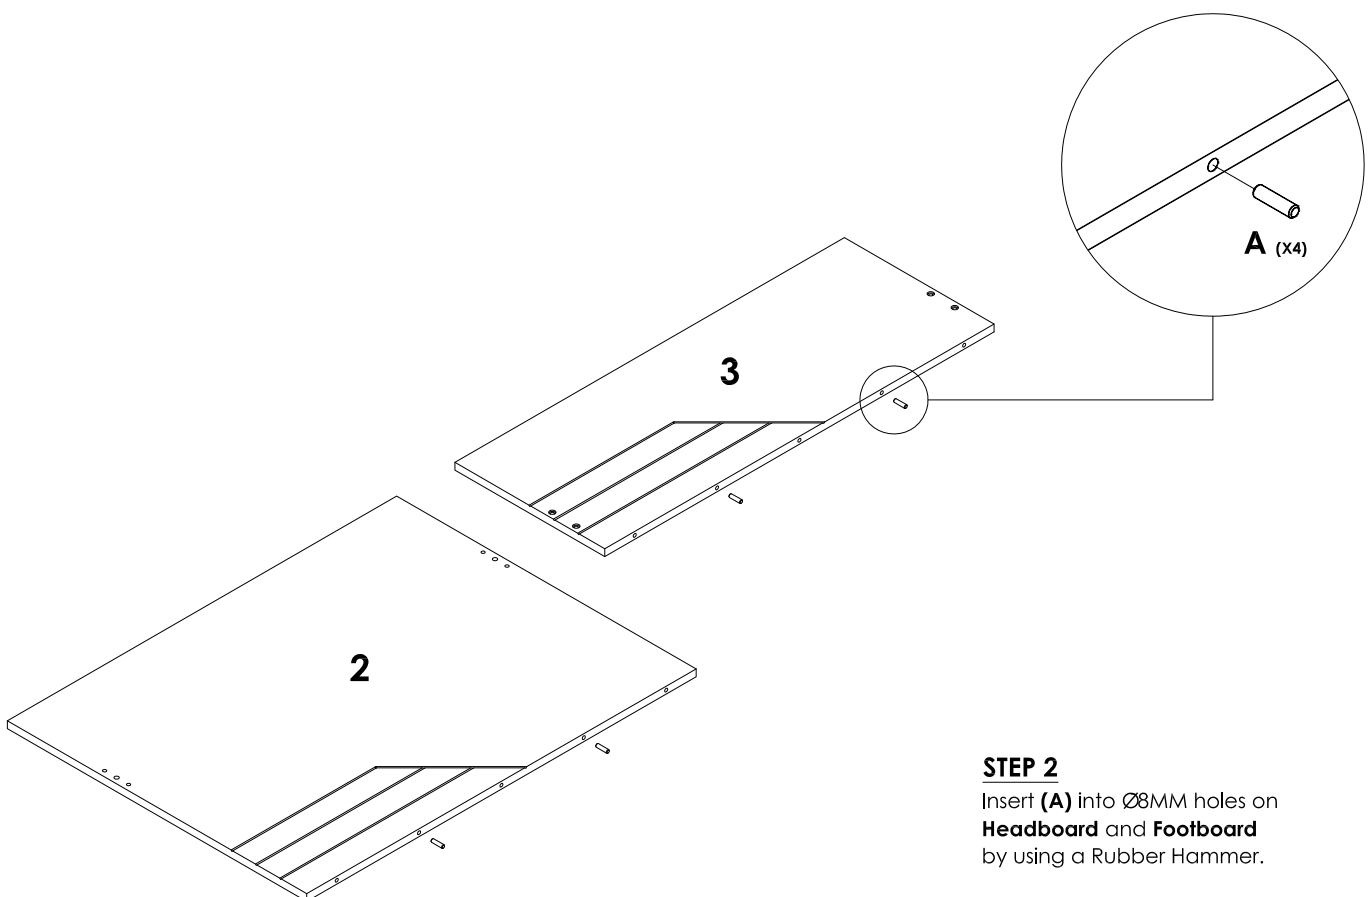




STEP 2

Insert **(A)** into Ø8MM holes on **Headboard** and **Footboard** by using a Rubber Hammer.

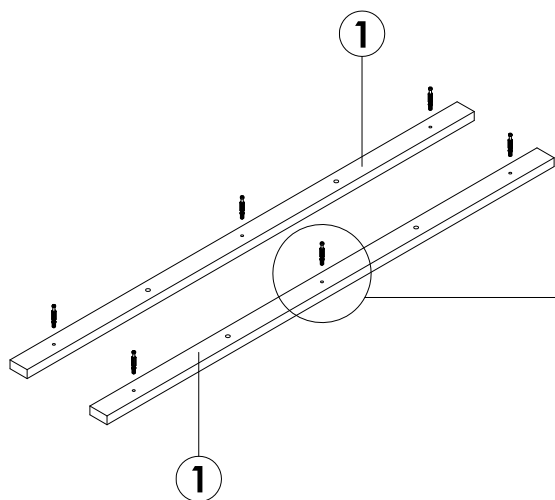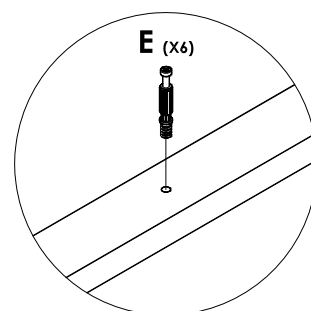


STEP 3

Insert **(E)** into specified Ø5MM holes on **Top Cap** by using a Rubber Hammer.

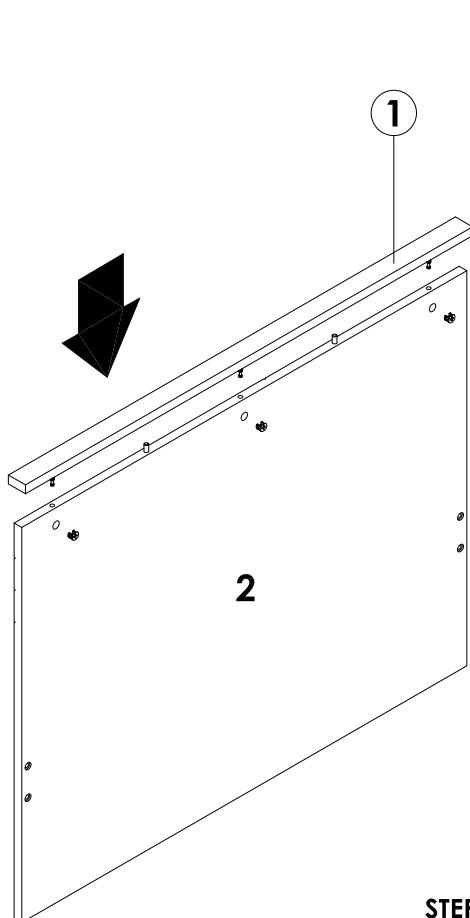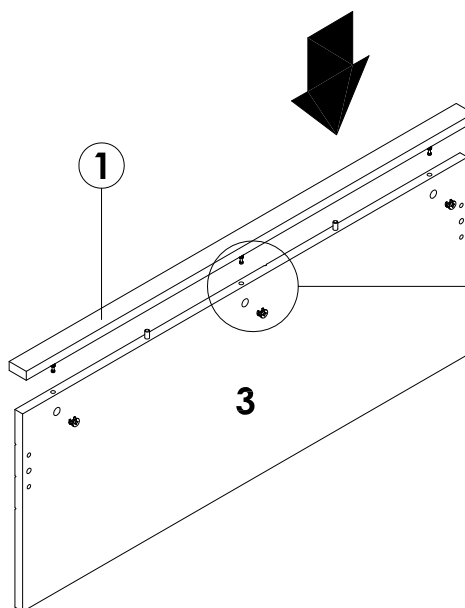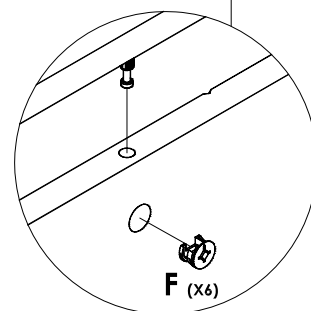


STEP 4

Attach and secure both **Top Cap** onto **Headboard** and **Footboard** by using **(F)**, tighten it up by using a Crosshead Screw Driver.

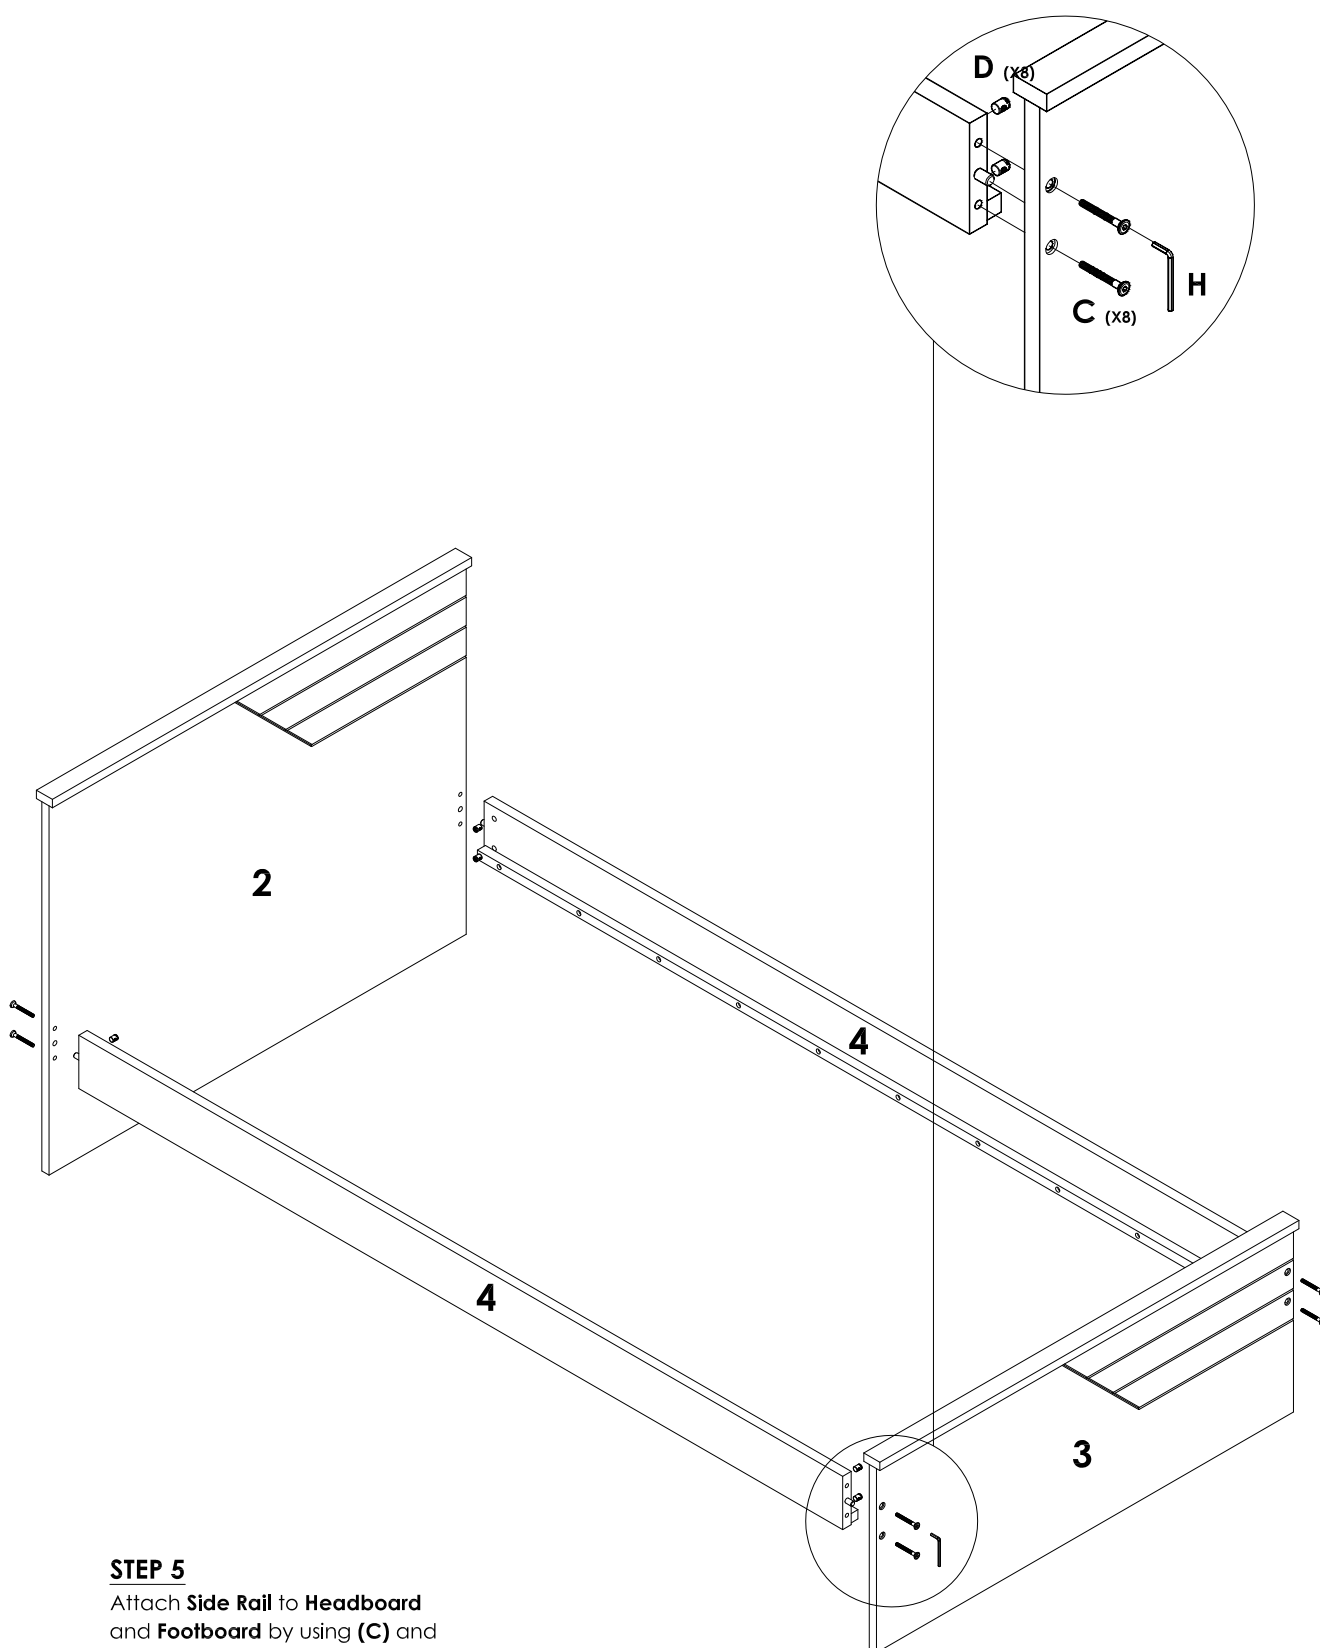

STEP 5

Attach **Side Rail** to **Headboard** and **Footboard** by using **(C)** and **(D)**, tighten it up by using **(H)**.

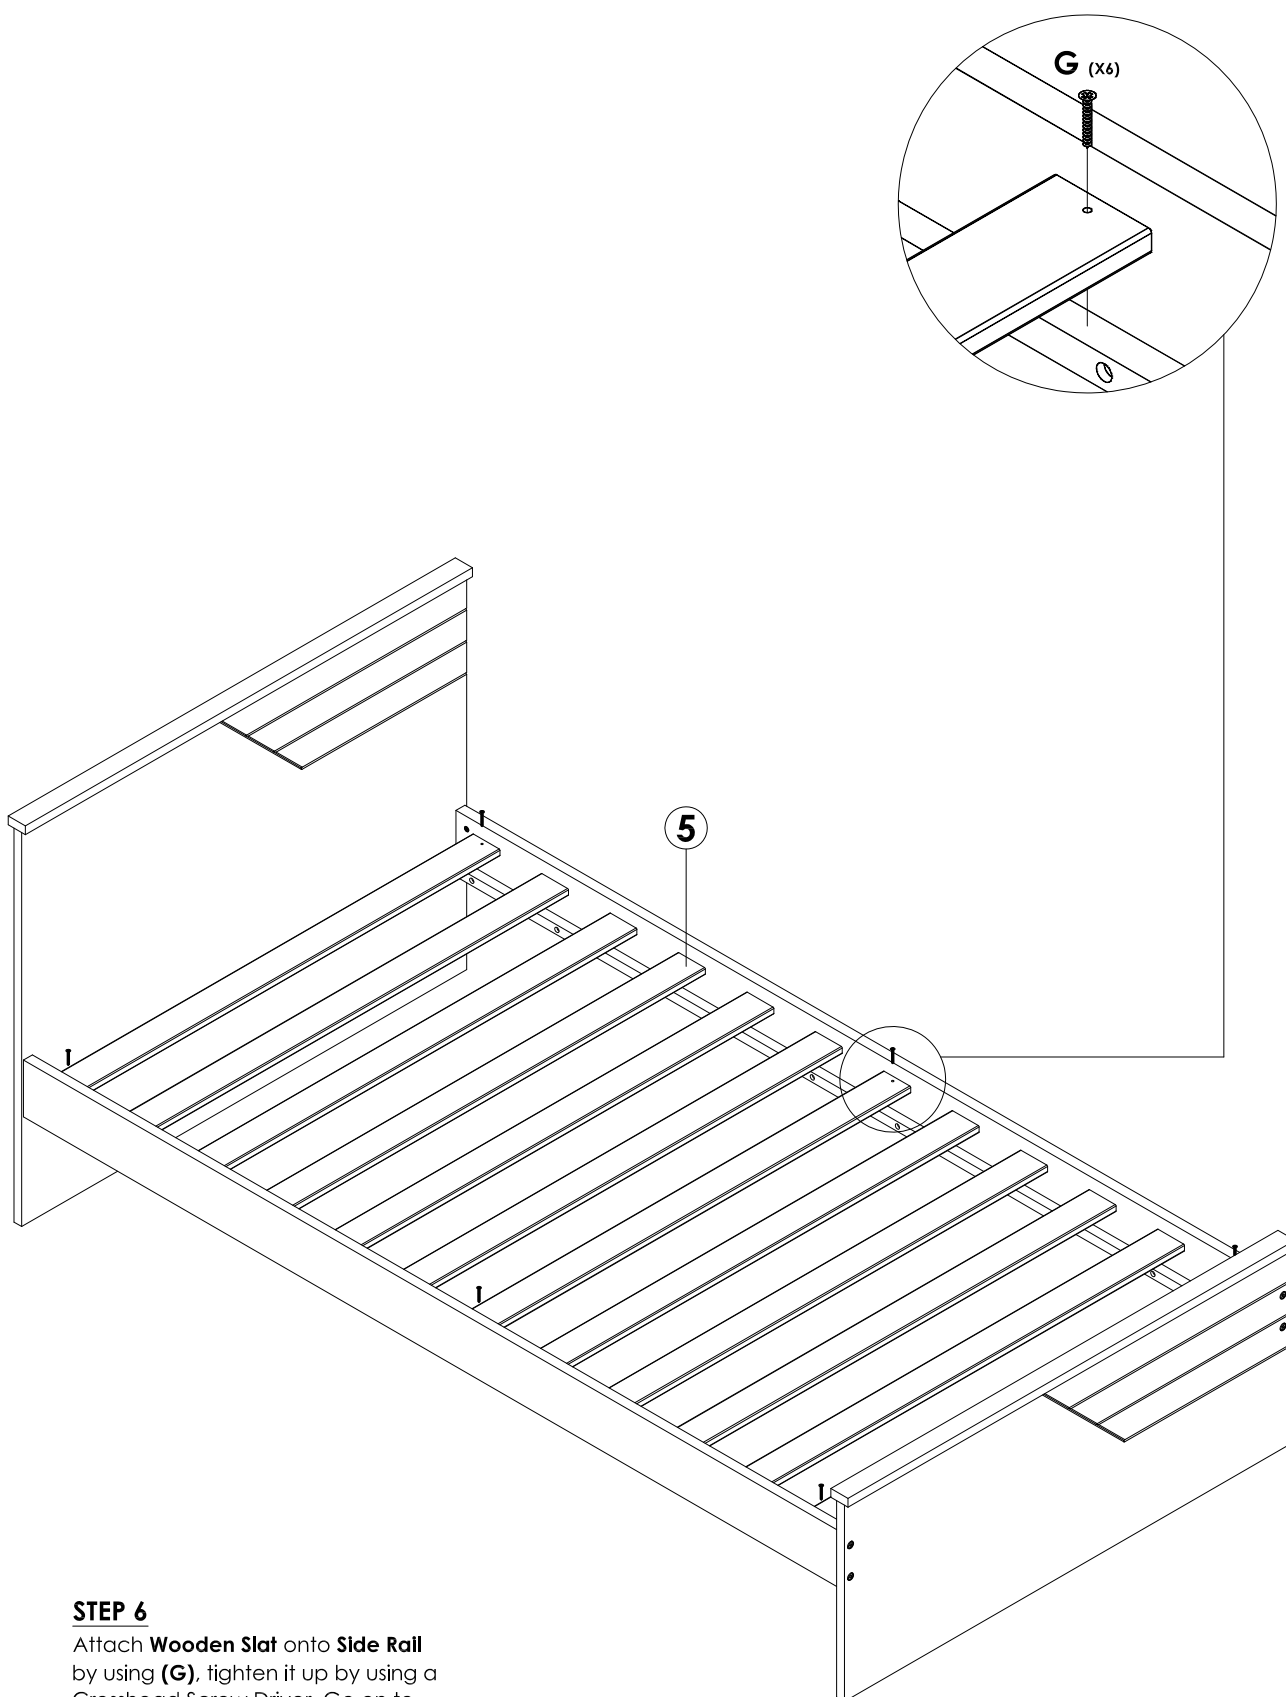

STEP 6

Attach **Wooden Slat** onto **Side Rail** by using **(G)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the entire assembly.