

## *ASSEMBLY INSTRUCTIONS*



Dining Table

# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!





1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.









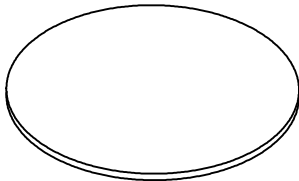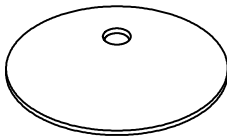


ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION


| B1 (BOX 1)       |   | B2 (BOX 2)  |     |
|------------------|---|---|-----|
| A TOP            |  | 1PC   |     |
| B POST           |   |   | 1PC |
| C BASE           |   |  | 1PC |
| D MOUNTING PLATE |   |  | 1PC |

## HARDWARE IDENTIFICATION


| Z | HARDWARE PACK            | Hardware pack is located in 192061B2   |      |
|---|--------------------------|--|------|
| 1 | ALLEN WRENCH M10-SR      |                 | 1PC  |
| 2 | ALLEN WRENCH M6-SR       |                 | 1PC  |
| 3 | ALLEN WRENCH M5-SR       |                 | 1PC  |
| 4 | BOLT M12" *80MM-BLK      |  | 1PC  |
| 5 | BOLT M8" *30MM-BLK       |  | 3PCS |
| 6 | BOLT Ø5/16" *15MM-RBW    |  | 4PCS |
| 7 | LOCK WASHER Ø17 *Ø 13-SR |                 | 1PC  |
| 8 | FLAT WASHER Ø17 *Ø8.3-SR |                 | 7PCS |
| 9 | WASHER Ø5/16 *15MM-SR    |                 | 1PC  |

ASSEMBLY INSTRUCTIONS

STEP 1

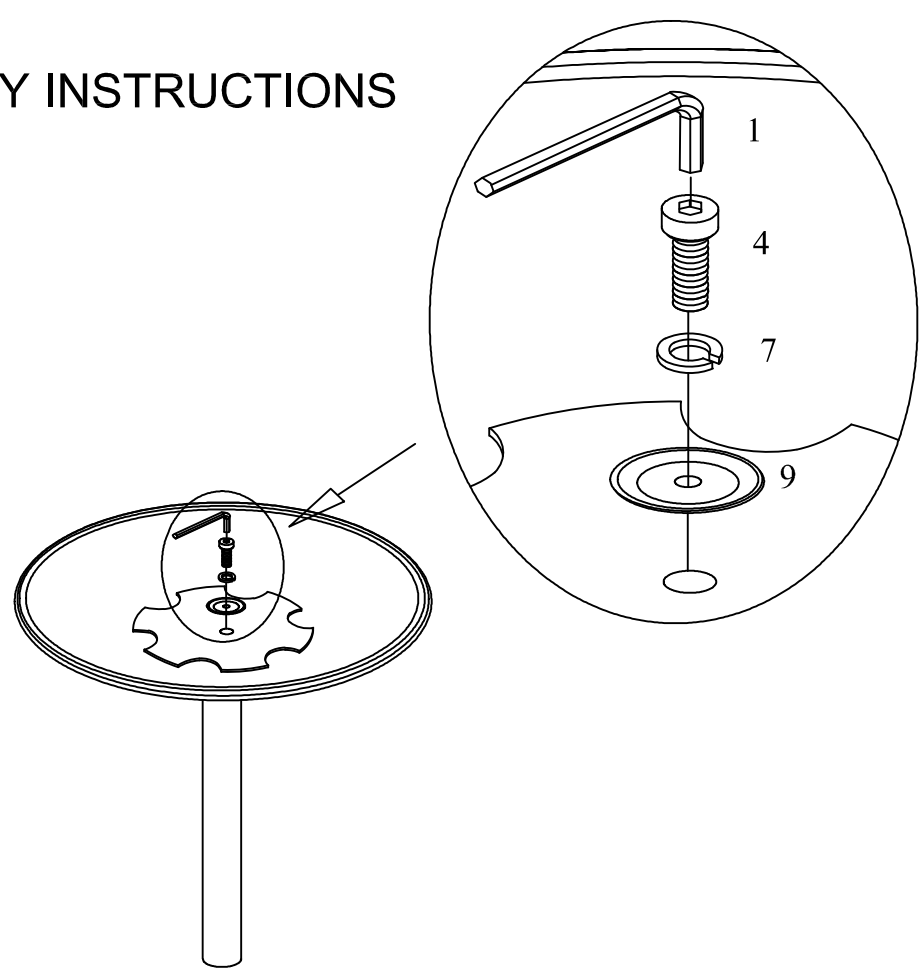


STEP 2

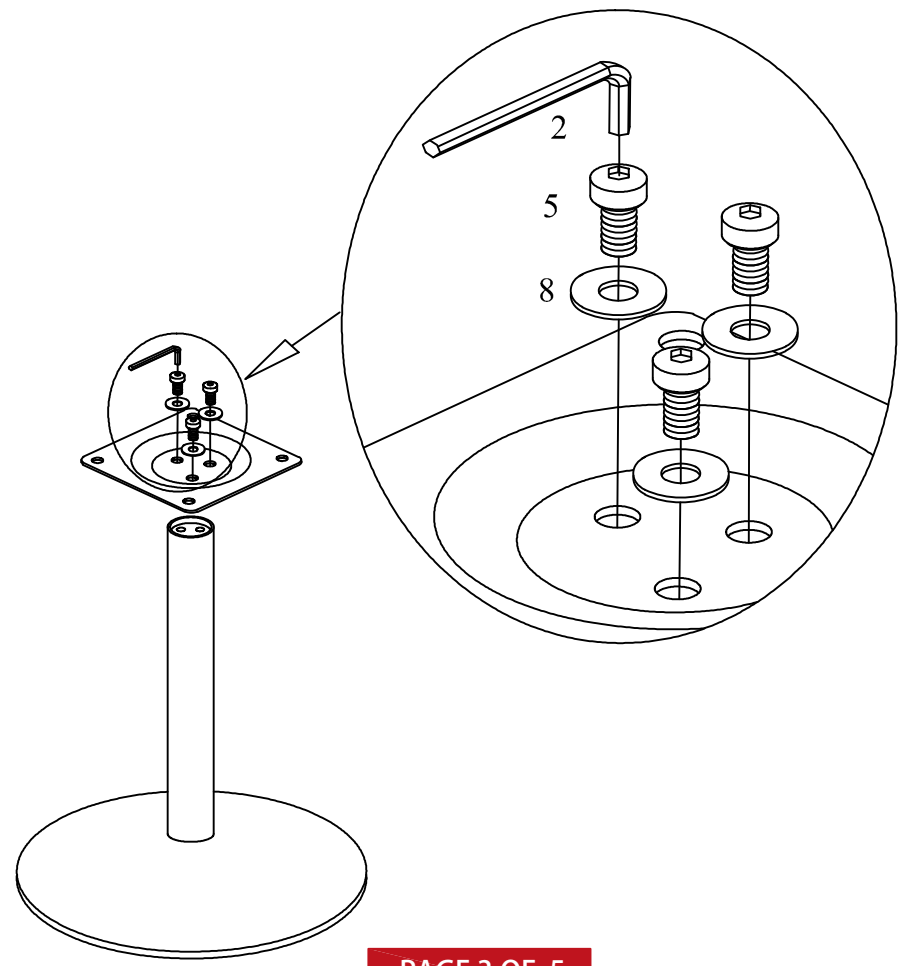


# ASSEMBLY INSTRUCTIONS


## STEP 3

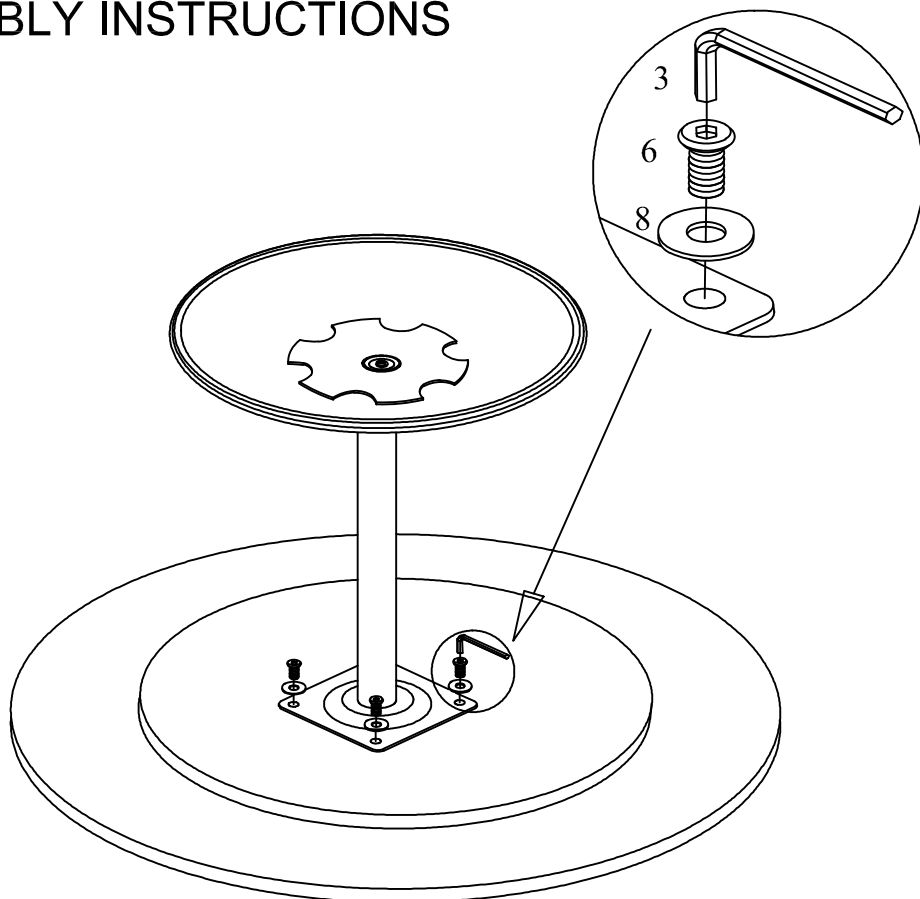

## STEP 4

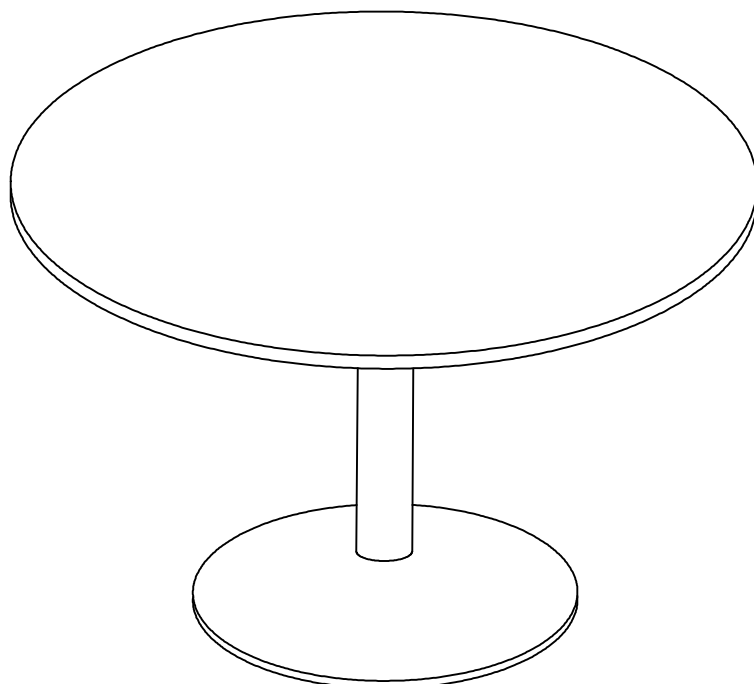

# ASSEMBLY INSTRUCTIONS

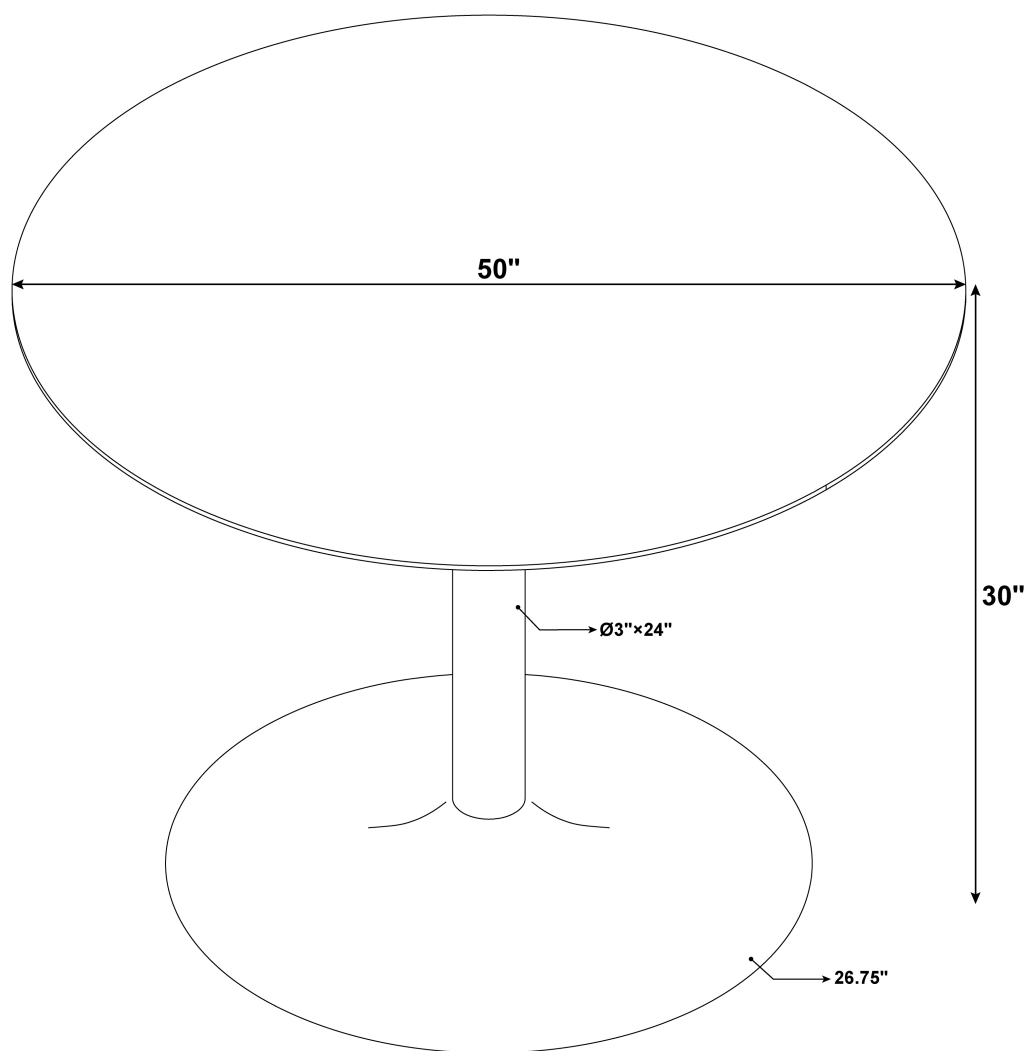

Note :Dimension tolerance  $\pm 5\%$

