



Curaté

HOME COLLECTION

INSTALLATION INSTRUCTIONS

STAINLESS STEEL UNDERMOUNT KITCHEN SINK

WC-64 | WC-6416 | WC-50 | WC-5016
WC-73 | WC-SBL | WC-SBL16 | WC-SB3218
WC-Bar-S | WC-Bar-M | WC-SBD | WC-SBM
WC-2318R | WC-5050R | WC-3118R | WC-3018R
WC-H1520 | WC-H2319 | WC-H3219 | WC-H5050

IMPORTANT INFORMATION

- Read these instructions carefully before you begin this installation.
- Observe all applicable local plumbing and building codes.
- CURATÉ recommends all sinks are installed by experienced and professional installers. To ensure safety and damage-free installation, this sink should be installed by two people. CURATÉ reserves the right to revise the design of products without notice.

BEFORE YOU BEGIN

- CURATÉ recommends that all undermount sinks be installed by an experienced, professional installer.
- **IMPORTANT:** The enclosed cutout template will create a countertop opening with a minimal (1/8" or less) reveal. It is recommended that you discuss with your installer and agree that the finished appearance is the desired effect. CURATÉ is not responsible for improper sink or countertop installations.
- **IMPORTANT:** The cabinet must be installed, secured, and leveled. Failure of this step can lead to product damage.
- CURATÉ undermount sinks should only be fastened to a solid surface countertop (i.e. granite, Corian® or Silestone®).
- CURATÉ is not responsible for sink or countertop if damaged during installation. Be sure to inspect the sink for damage prior to beginning installation.
- Metal edges may be sharp – use caution when handling.
- Follow all local plumbing and building codes.



CAUTION:


Risk of personal injury or product damage. Handle with care.
Product can break, chip, cause injury or product damage.

WARNING:

This product can expose you to chemicals, including lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm.

For more information go to p65warnings.ca.gov



RECOMMENDED TOOLS

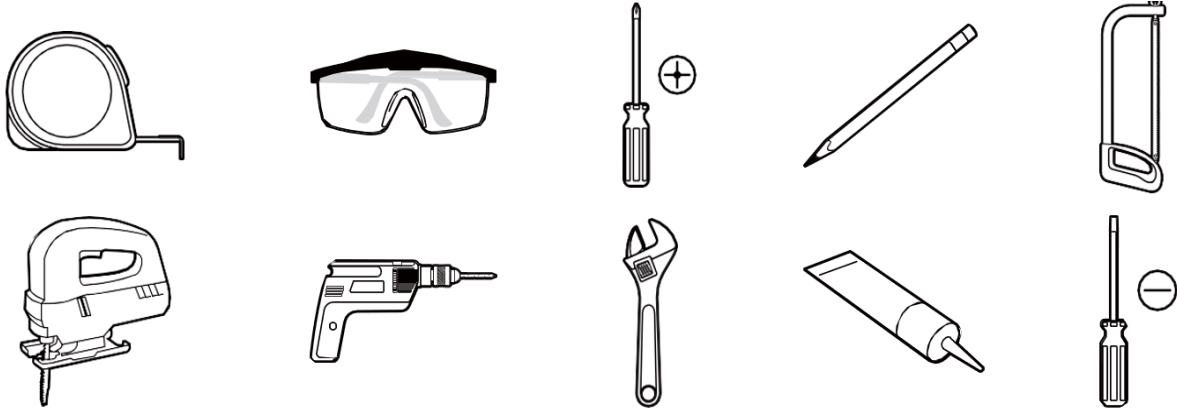

- Tape Measure
- Safety Glasses
- Painter's Tape
- Level
- Ear Protection
- Hacksaw/Jigsaw
- Pencil (Non-permanent marker)
- Shims or Cabinet Fillers
- Denatured Alcohol
- Clamps
- Construction Adhesive
- Silicone Adhesive Sealant
- Support Framing Material (1 1/4" (32mm) Max Thickness)
- Screws (recommended by countertop manufacturer)

UNDERMOUNT SINK INSTALLATION INSTRUCTIONS


STEP 1: COUNTERTOP PREPARATION

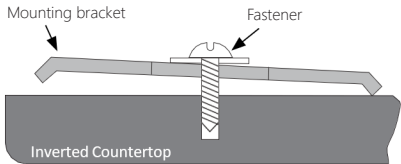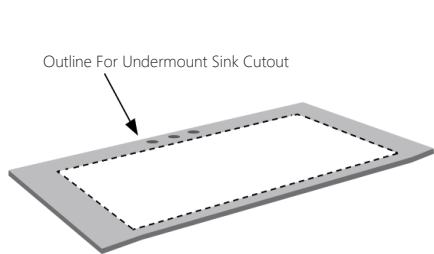


- Position the template (provided with your sink) front to rear so the sink will not interfere with the cabinet; secure with tape.
- Trace the template and remove. Dry fit the sink to verify the measurements.
- Following the counter top manufacturer's instructions, carefully cut the counter top on the inside of the traced line.
- Locate and drill the mounting holes, following the counter top manufacturer's instructions. Holes should allow even spacing of mounting brackets around the sink.
- With the counter top inverted (upside down), fasten the mounting brackets to the counter top loosely.
- **IMPORTANT:** The cabinet must be installed, secured, plumb, and level BEFORE installing the sink.
- **IMPORTANT:** CURATÉ undermount sinks should only be fastened to a solid surface counter top (i.e. granite, Corian® or Silestone®).

STEP 2: COUNTERTOP INSTALLATION

Apply Silicone Sealant after Cleaning the Sink Edge and Countertop

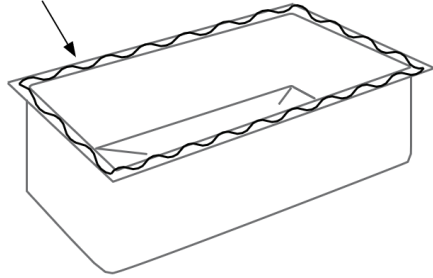

Verify Sink is Centered within the Countertop Opening before Tightening Fasteners

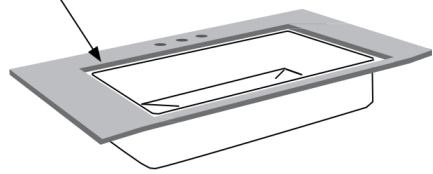

- Clean the bottom of the counter top and the top flange (or lip) of the sink with denatured alcohol.
- Apply a narrow bead of silicone adhesive sealant evenly all around the top of the sink flanges.
- Position and align the sink over the counter top opening. Press silicone onto counter top.
- Tighten fasteners until mounting brackets are snug against sink. Check alignment of sink to the counter top opening.
- Tighten down fasteners evenly. Be careful not to over-tighten.
- Immediately remove excess sealant.
- **IMPORTANT:** The enclosed cutout template will create a counter top opening with a minimal (1/8" or less) reveal. It is recommended that you discuss this with your installer and agree that this finished appearance is the desired effect. CURATÉ is not responsible for improper sink or counter top installations.
- **IMPORTANT:** CURATÉ is not responsible for sink or counter-top if damaged during installation. Be sure to inspect the sink for damage prior to beginning installation.

FINAL STEP

- Following all local plumbing and building codes, install the faucet according to the manufacturer's instructions.
- Connect the drain and piping.
- Run water into the sink and check all connections for leaks.