


Two-Post Installation



Step 1:
Use level and position template on wall.

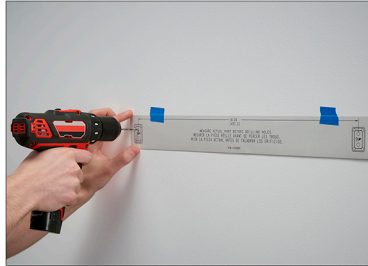

Step 2:
Using template, drill holes for mounting plate and screw placement.



Step 3:
Position and mount template to wall, using screws, drywall anchors or ceramic anchors, depending on wall composition.



Step 4:
Loosen the set screw in the accessory.



Step 5:
Mount the accessory onto the secured wallplates.
Tighten set screws to secure accessory to wall plate.



KOHLER® accessories make it easy for even the most casual DIY-er to update the beauty and function of their bathroom space.

THE BOLD LOOK
OF **KOHLER**®