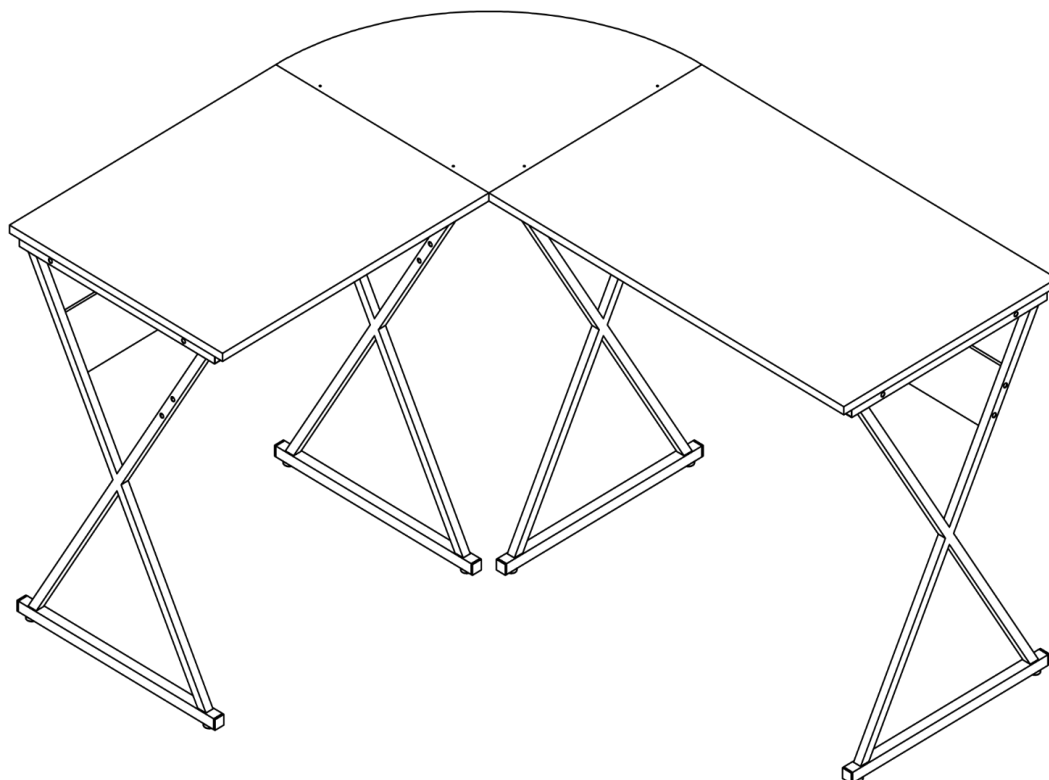
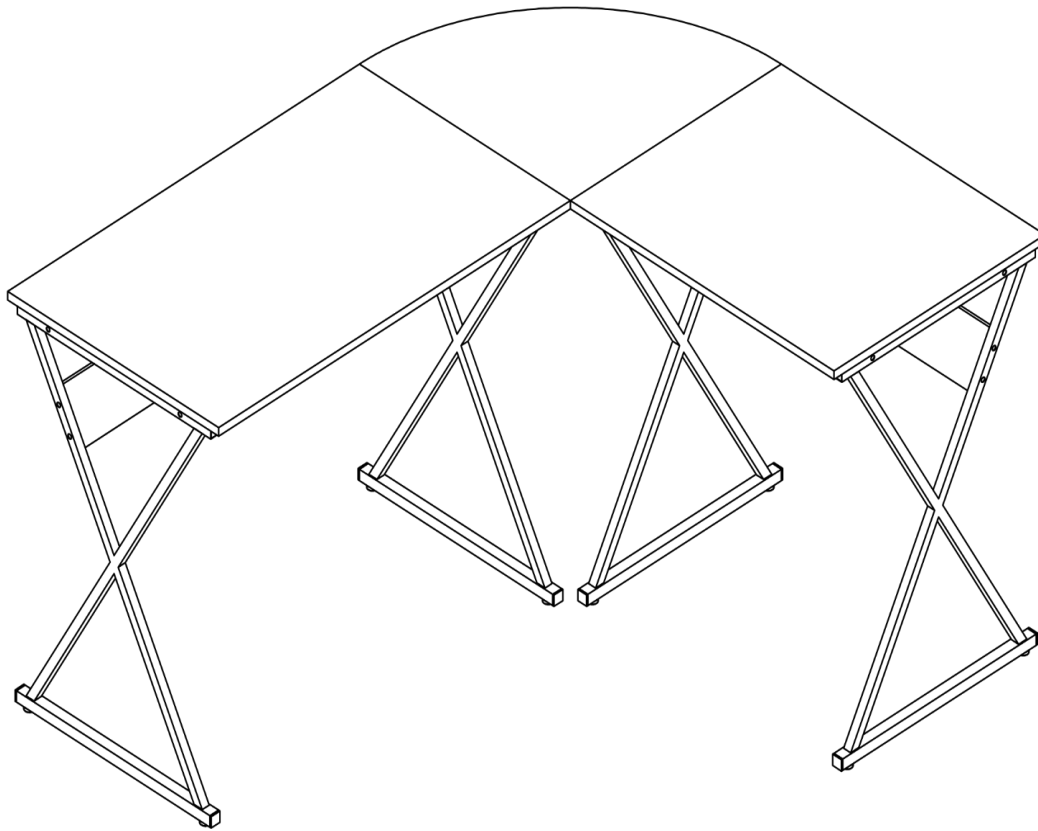











ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL# 92810 92812 92814







Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.



**** Do not fully tighten screws until fully assembled *****

COMPONENT PARTS		
DESCRIPTION	PART NAME	QTY(PCS)
①	DESKTOP 	1
②	SIDE DESKTOP 	1
③	CORNER PANEL 	1
④	REAR PANEL (LARGE) 	1
⑤	REAR PANEL (SMALL) 	1
⑥	X-SHAPE FRAME 	4
⑦	HORIZONTAL BAR 	2
⑧	HORIZONTAL BAR 	2
⑨	L-SHAPE SUPPORT 	4

HARDWARE REQUIRED

Ⓐ		ALLEN BOLT	M6x38MM	8	PCS
Ⓑ		ALLEN SCREW	M5x50MM	8	PCS
Ⓒ		ALLEN BOLT	M6x25MM	8	PCS
Ⓓ		ALLEN SCREW	M4x12MM	4	PCS
Ⓔ		STUD		8	PCS
Ⓕ		ALLEN WRENCH		1	PCS

Attention

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

