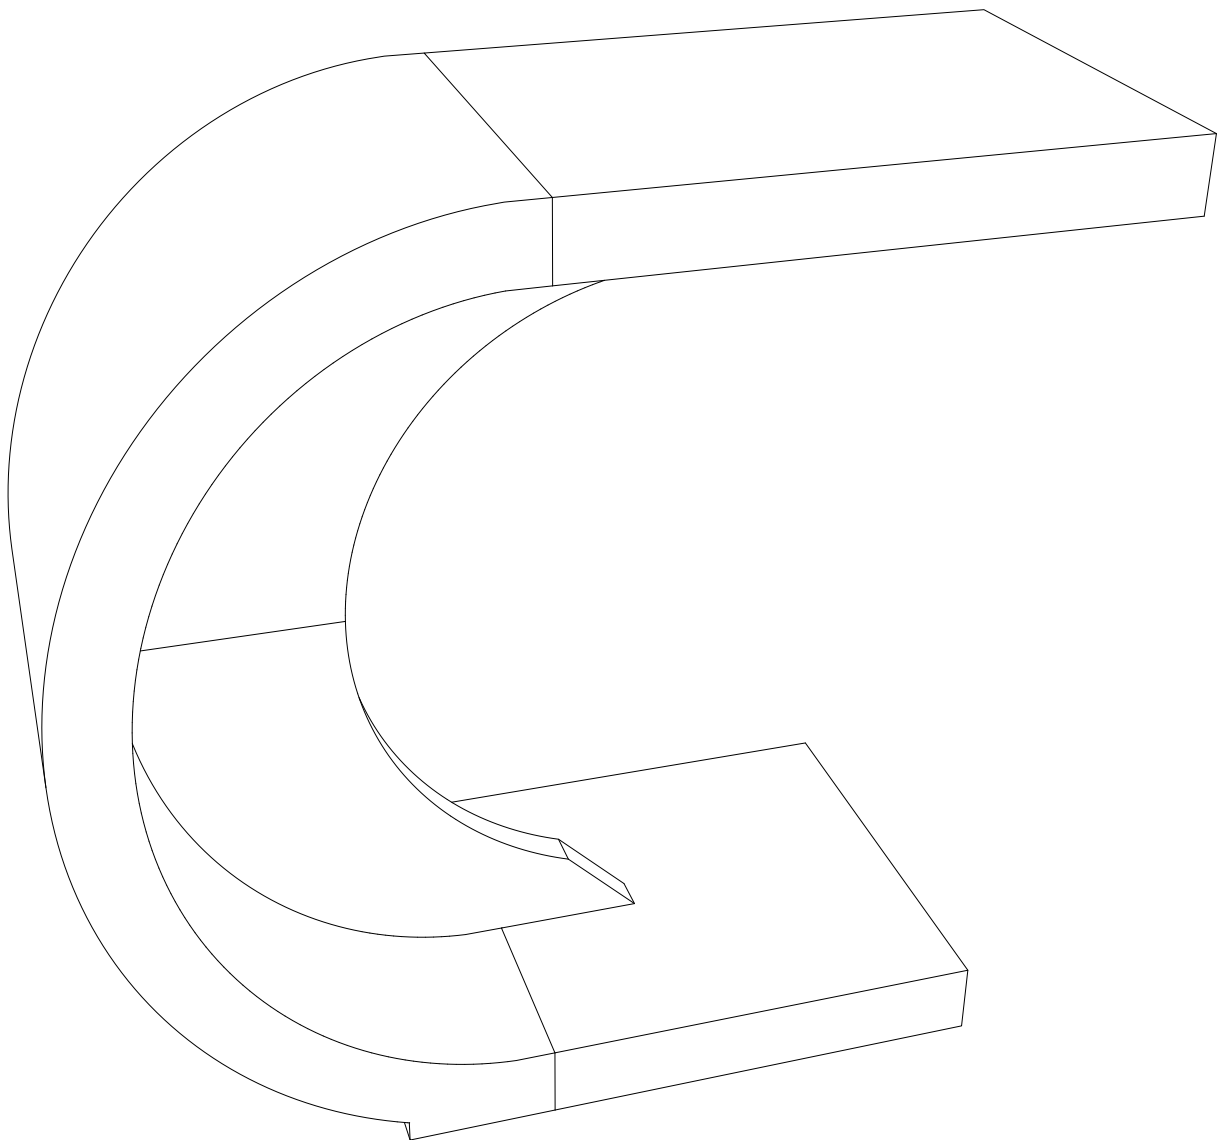




DESIGNED FOR LIFE

Assembly Instructions



Bedside Table

Model No.
HOGA-YS0312/YS0338

 **LITTLE TREE**
Little Tree by Tribesigns
www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1

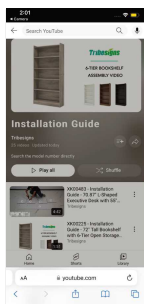
Scan the QR code.



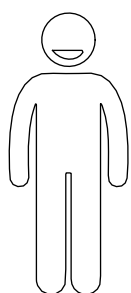
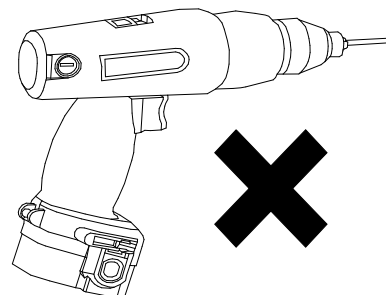
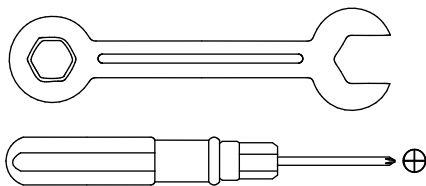
Installation Video

Step 2

Search with the Model No.
(on the bottom left corner of the title page)

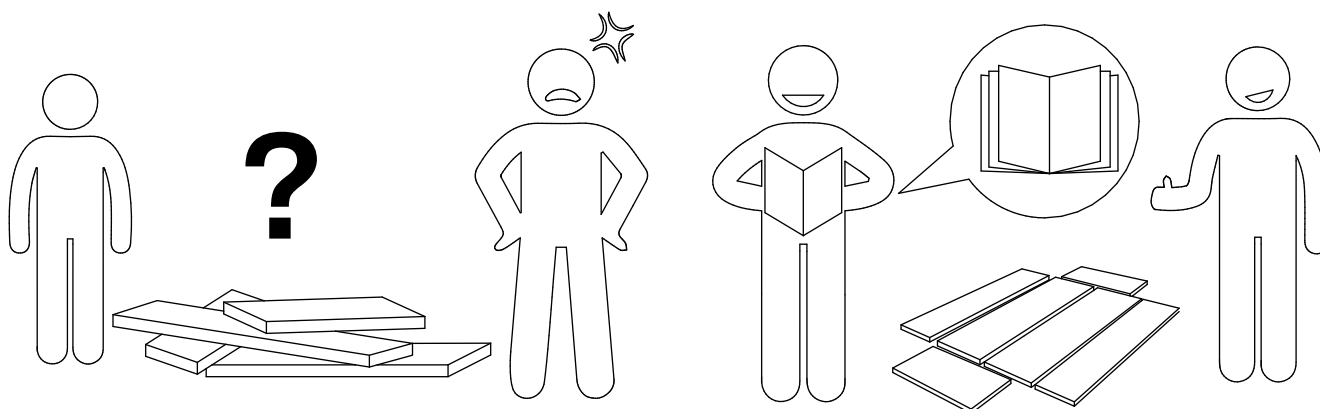


Note: If you can't find the assembly video, please contact us.


X2


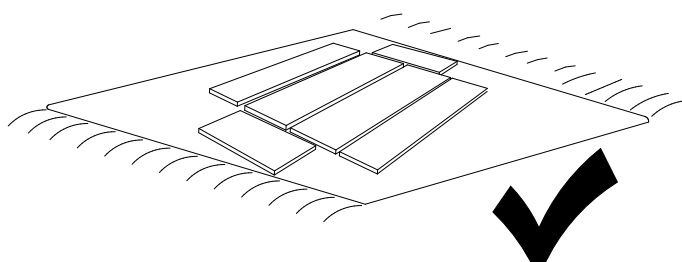
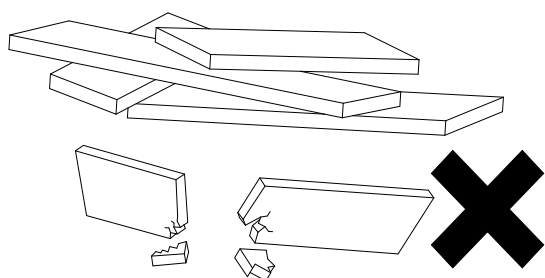
We recommend using hand tools for assembly.

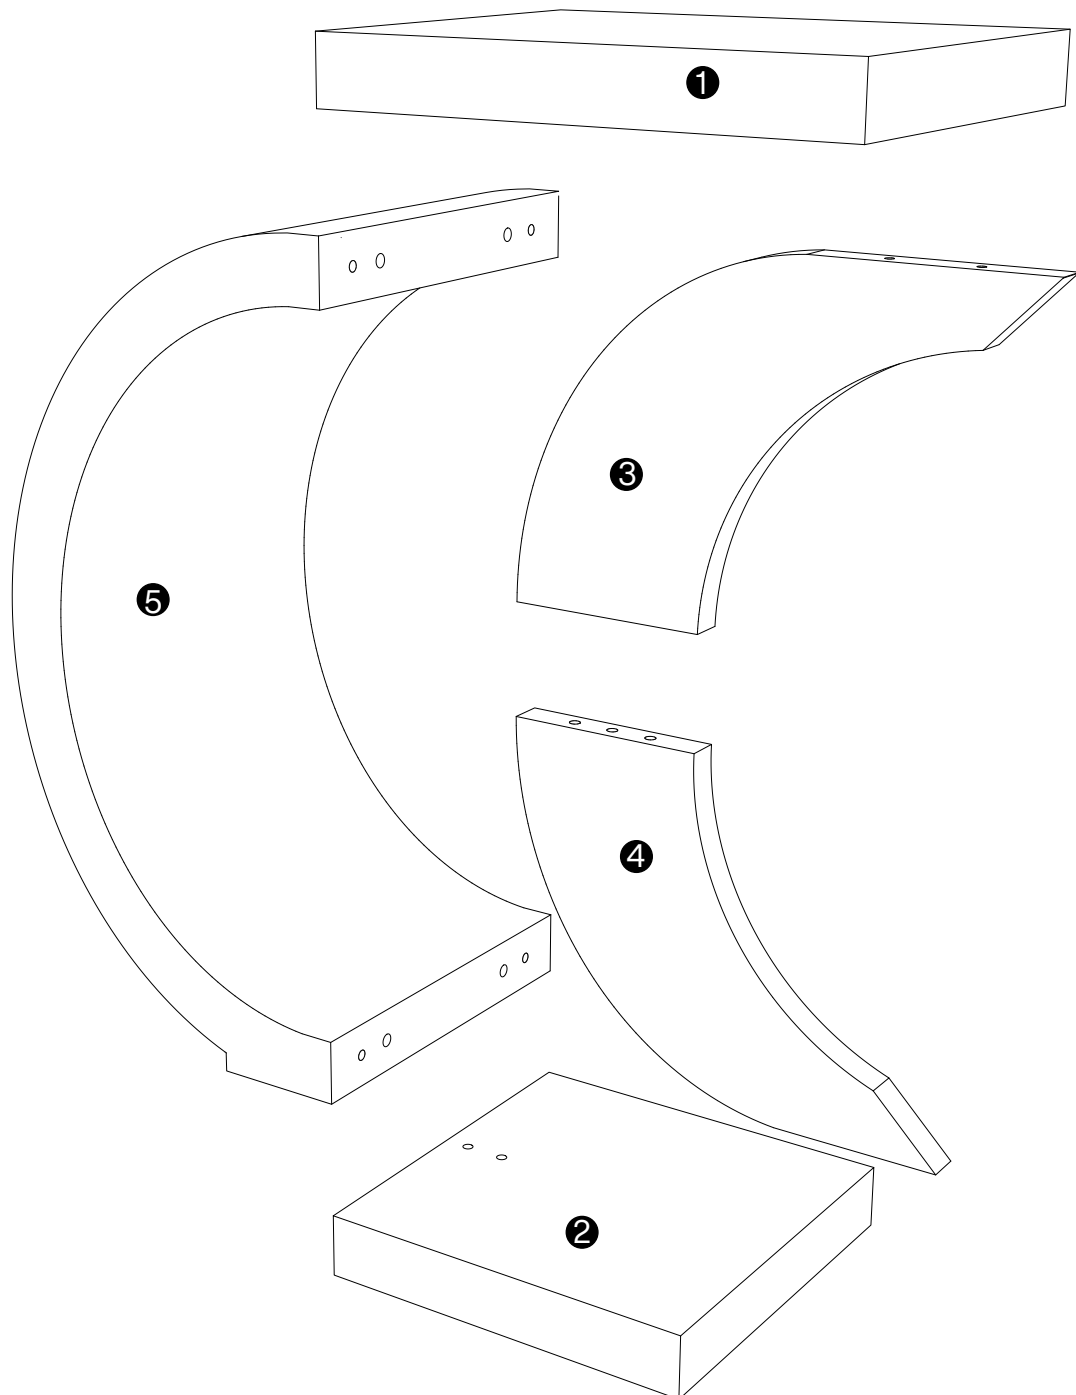
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

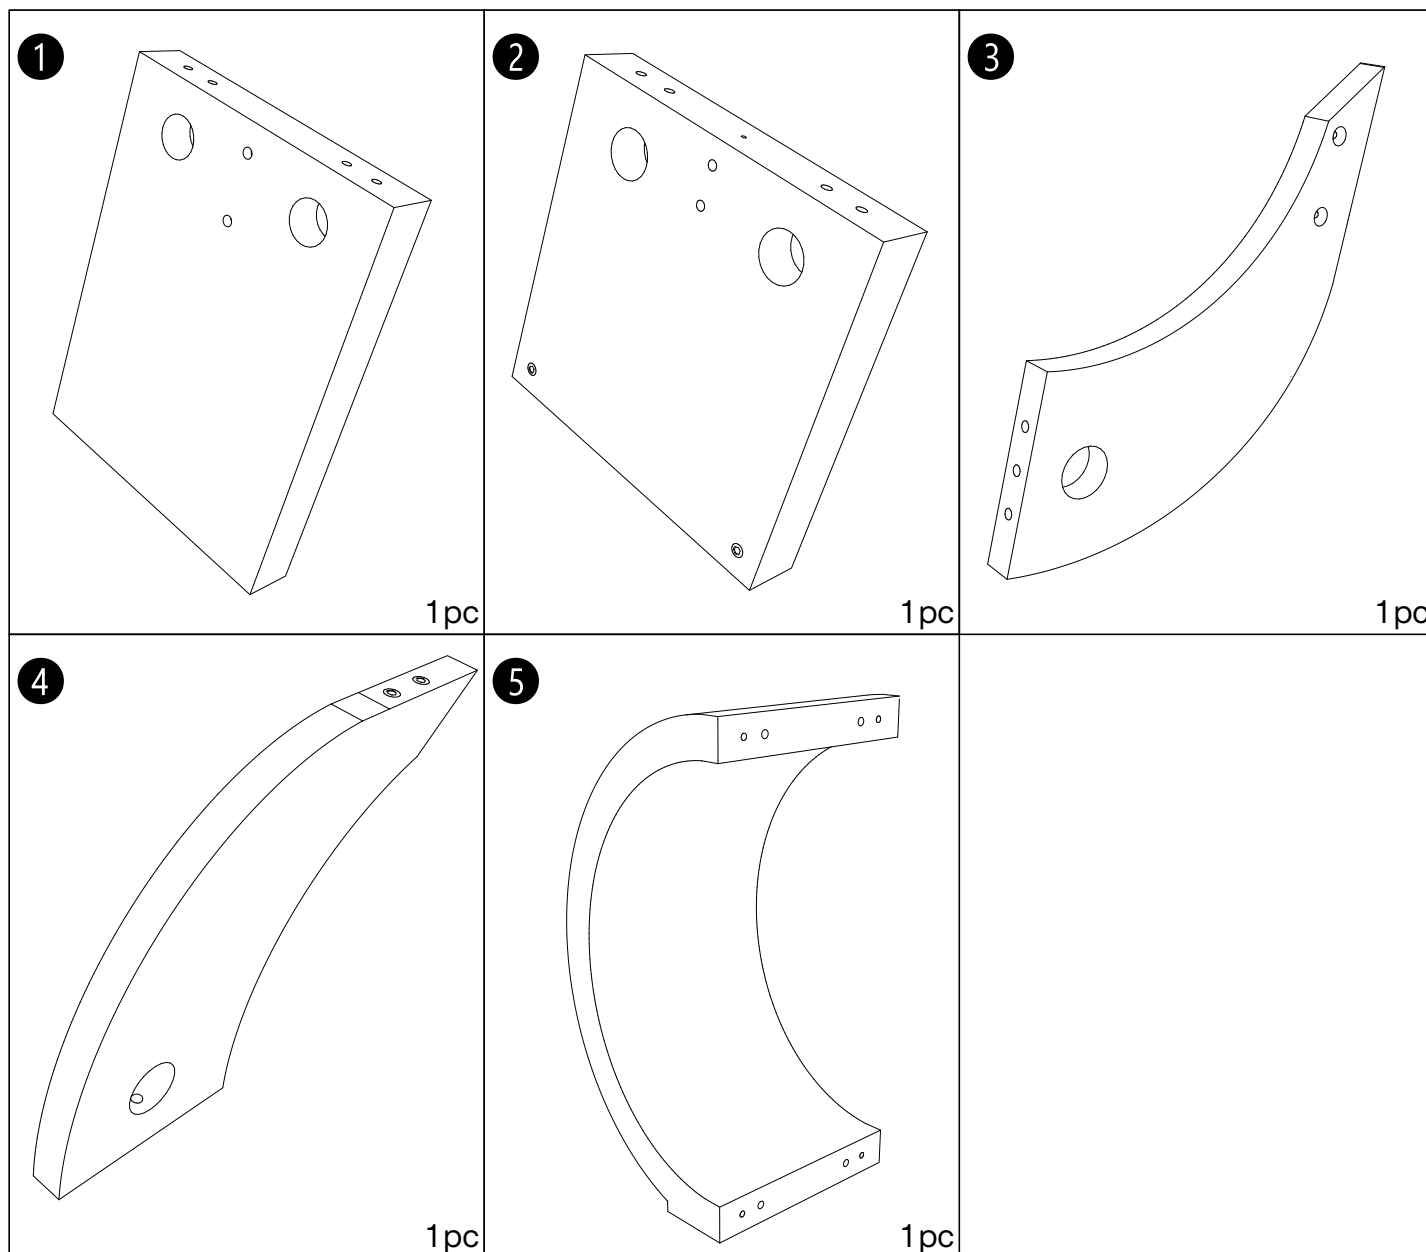




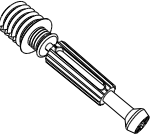
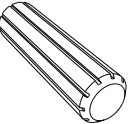

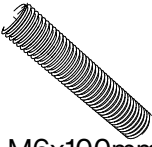
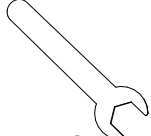
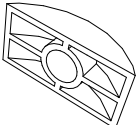


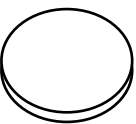
⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

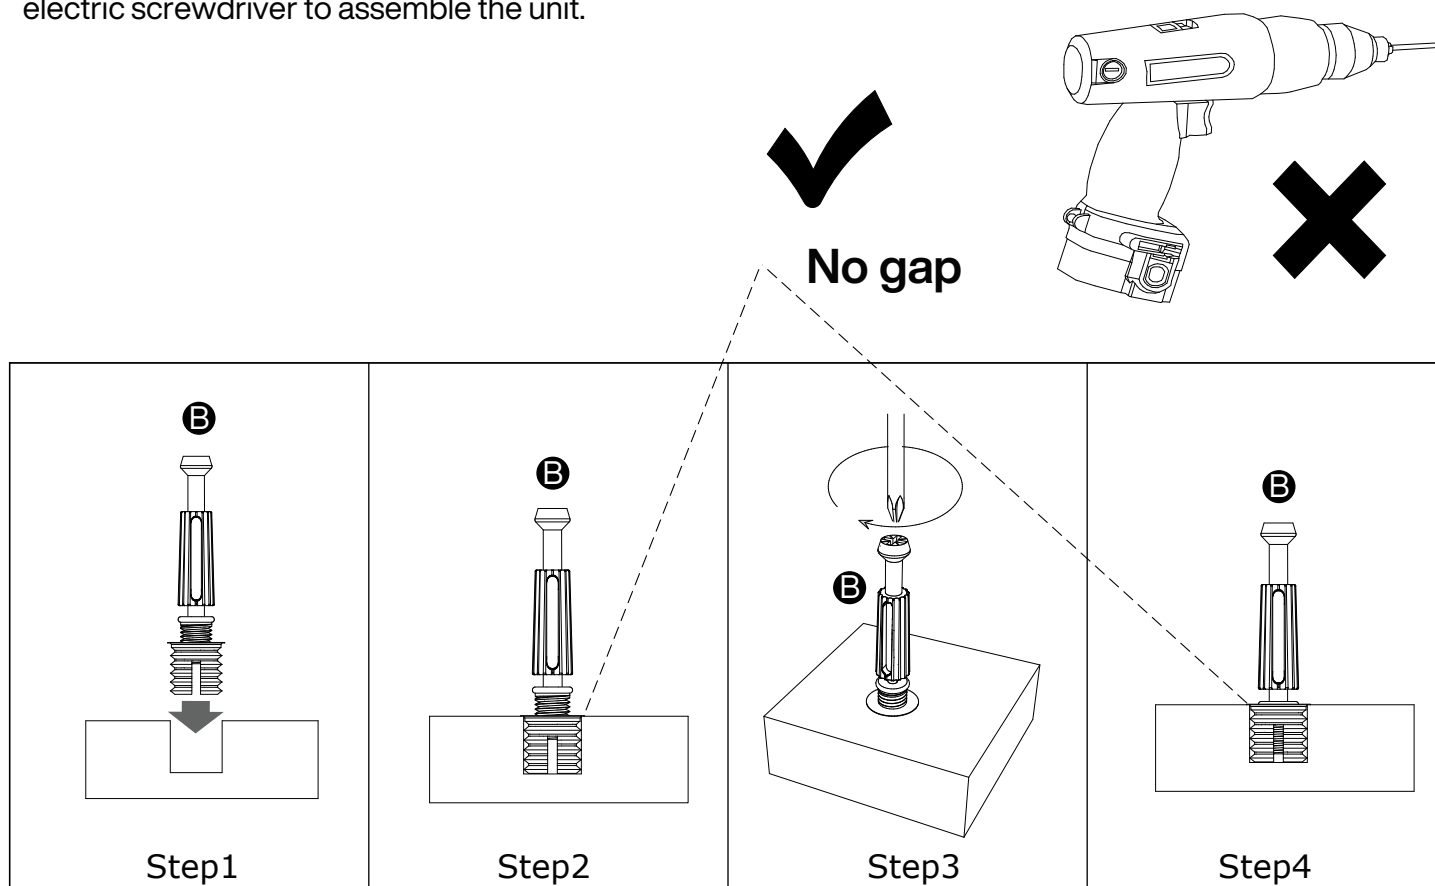


Hardware List

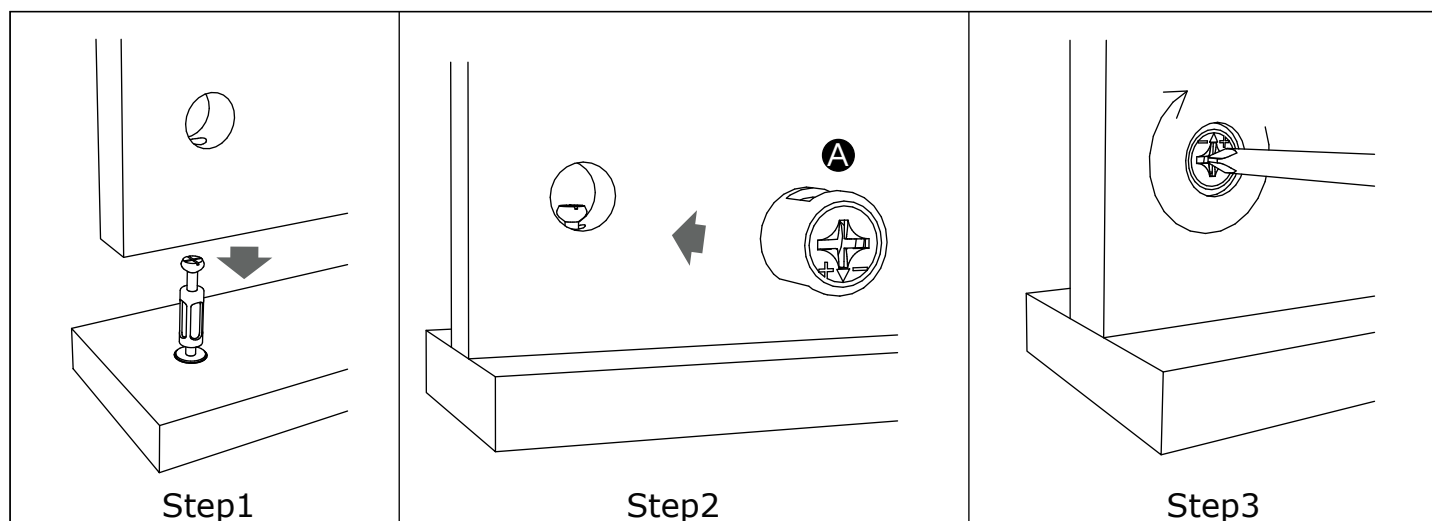
A	B	C	D	E	F	G
						
Ø15x12mm	M6x40mm	Ø8x30mm	M6x55mm	M4		M6x100mm
2 pcs	2 pcs	6 pcs	2 pcs	1pc	4 pcs	1pc
H	I	J	K	L	M	N
						
M6x70mm	M8			M8		
4 pcs	1pc	6 pcs	6 pcs	6 pcs	2 pcs	4 pcs

Installation of Cams and Pins

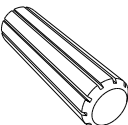
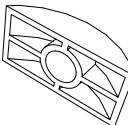


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

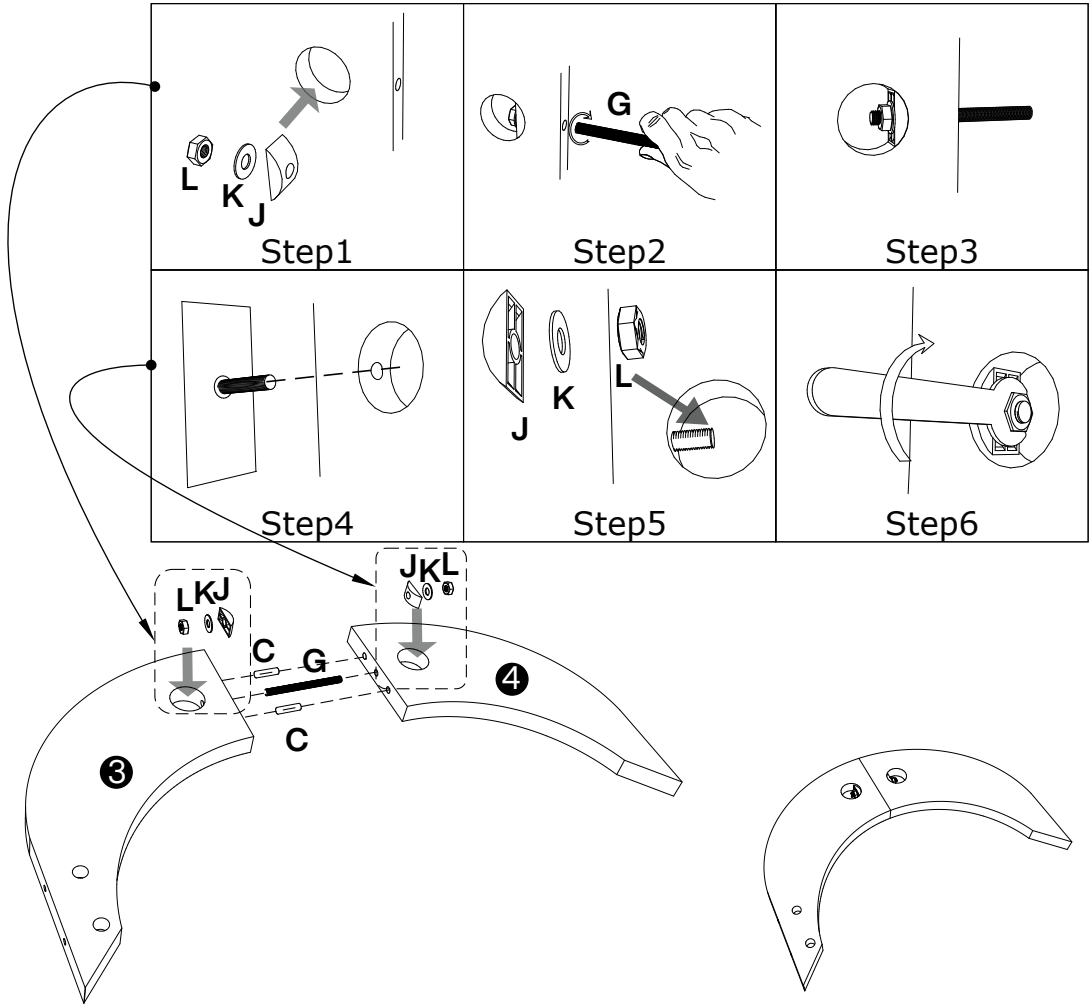


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

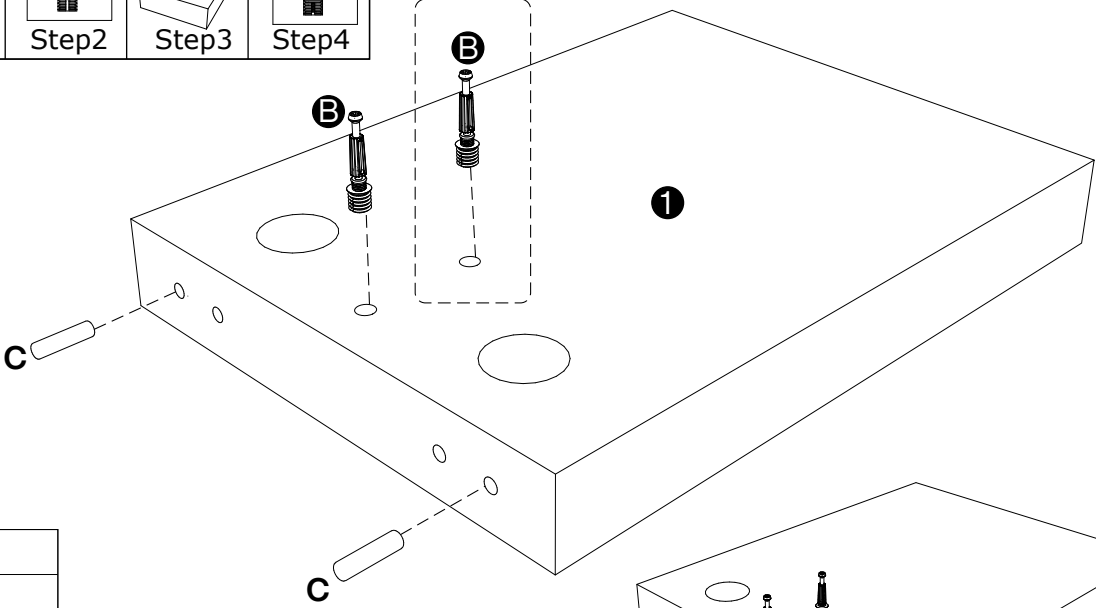
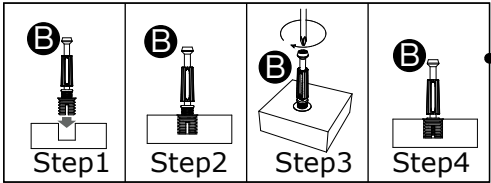


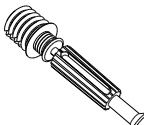
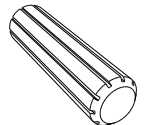
1

C	G
	
Ø8x30mm	M6x100mm
2 pcs	1 pc
J	K
	
2 pcs	2 pcs
L	
	
M8	
2 pcs	

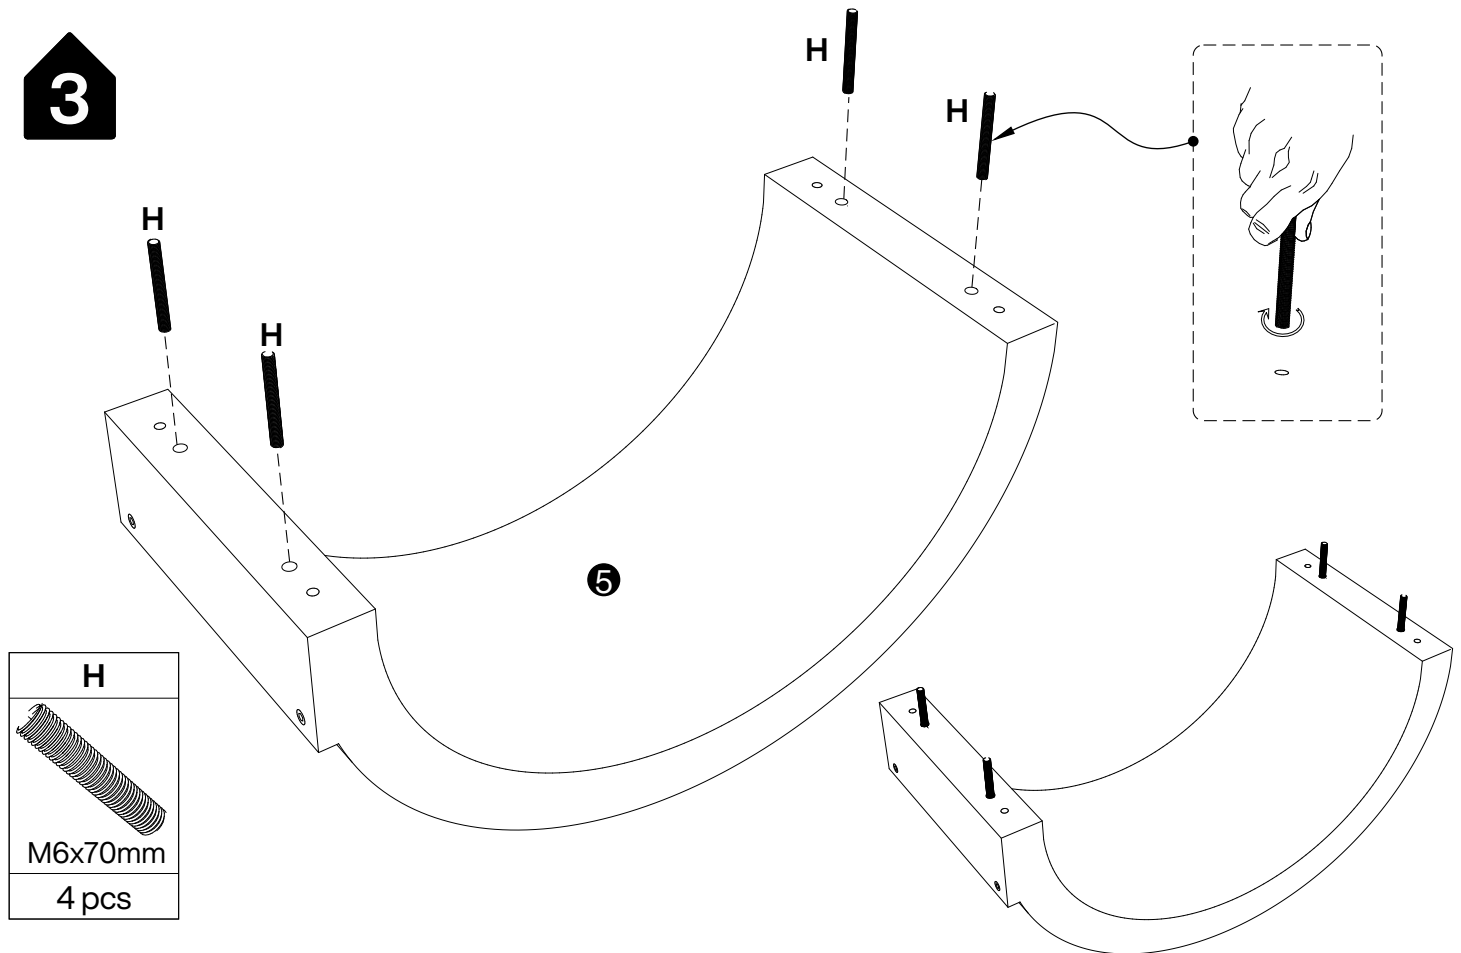


2

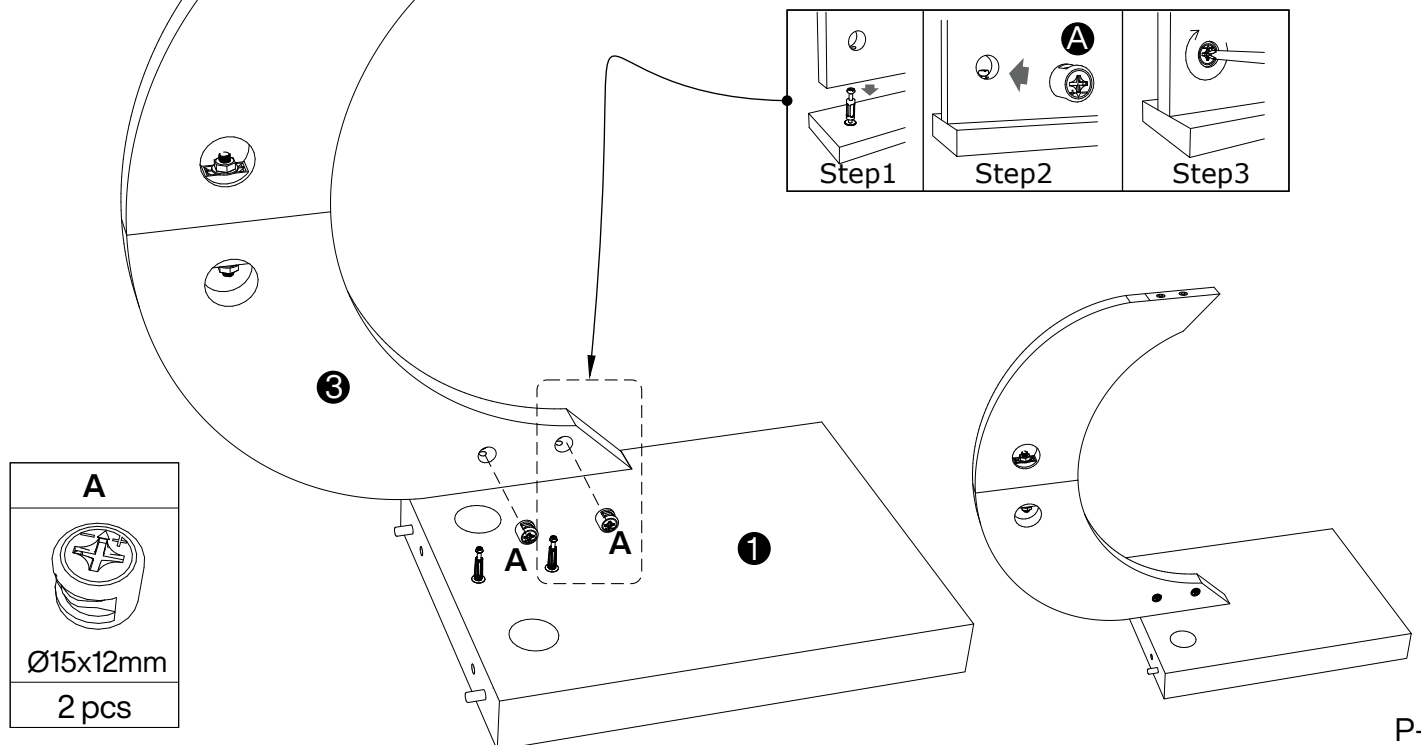
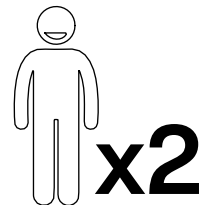


B	C
	
M6x40mm	Ø8x30mm
2 pcs	2 pcs

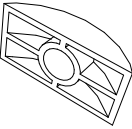


3

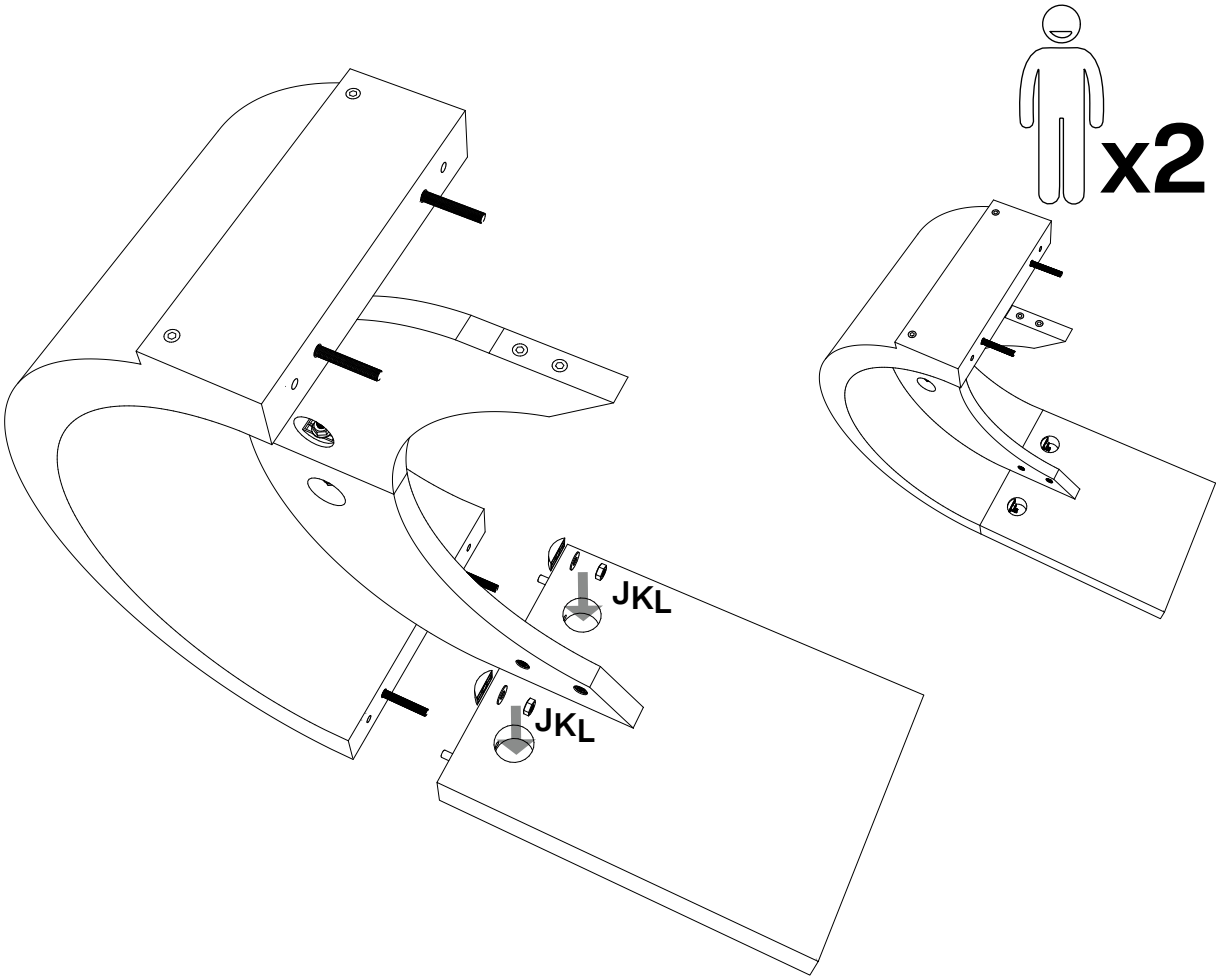


4

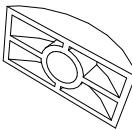


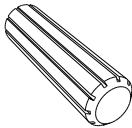


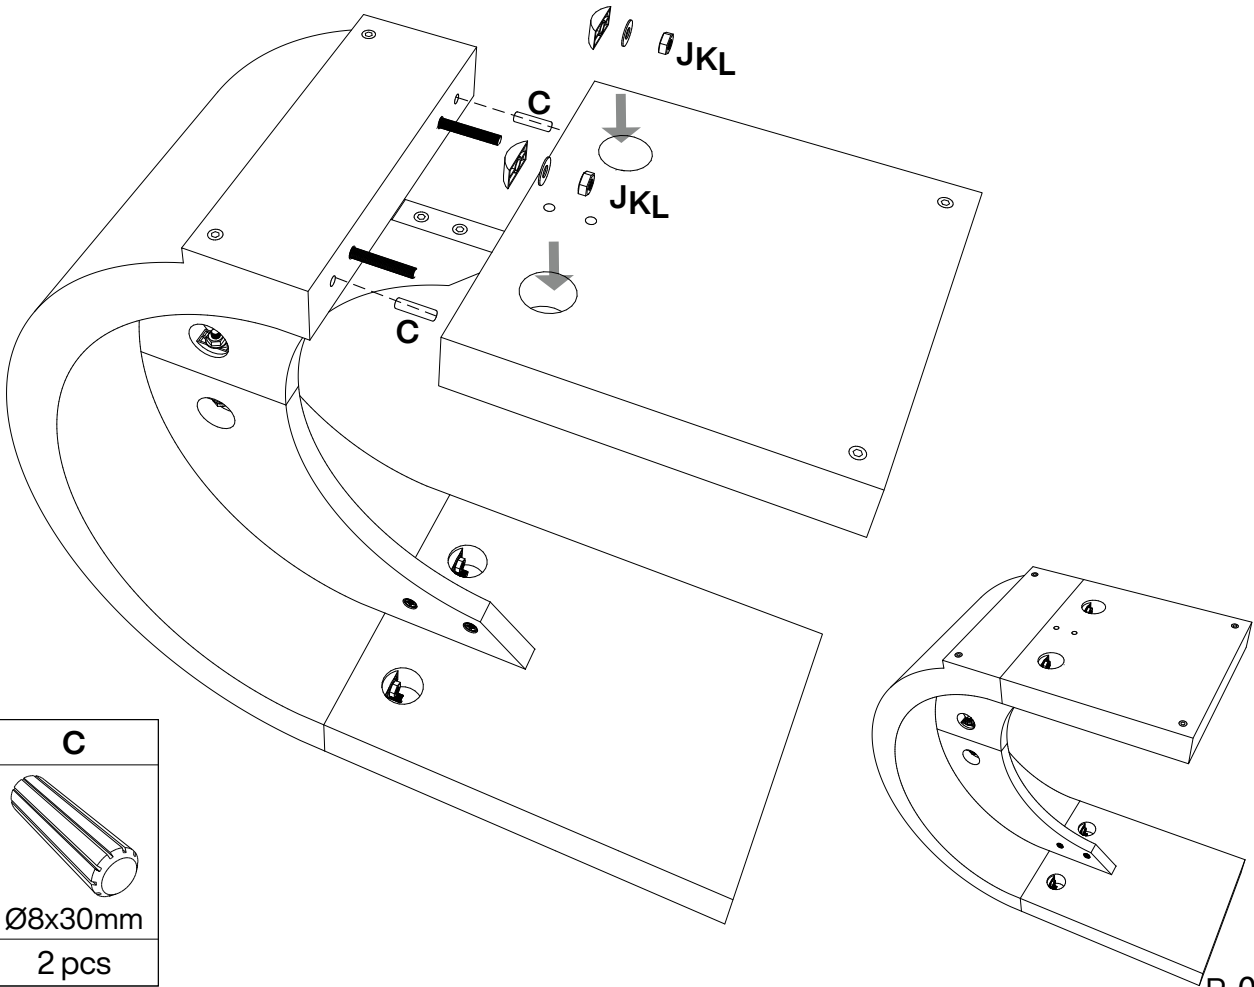
5

J

2 pcs
K

2 pcs
L

M8
2 pcs



6

J	
	
2 pcs	
K	
	
2 pcs	
L	C
	
M8	Ø8x30mm
2 pcs	2 pcs

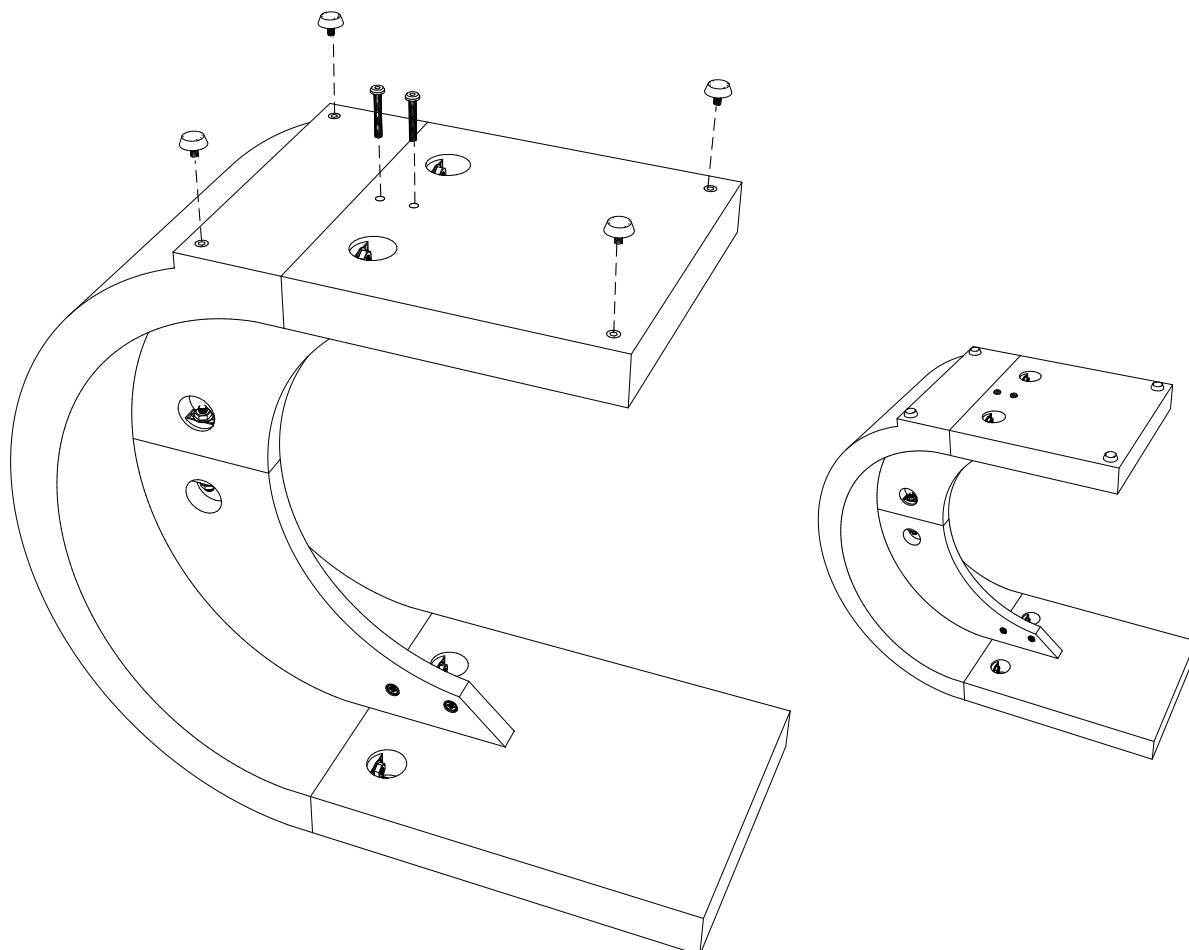


7

D


M6x55mm
2 pcs
F

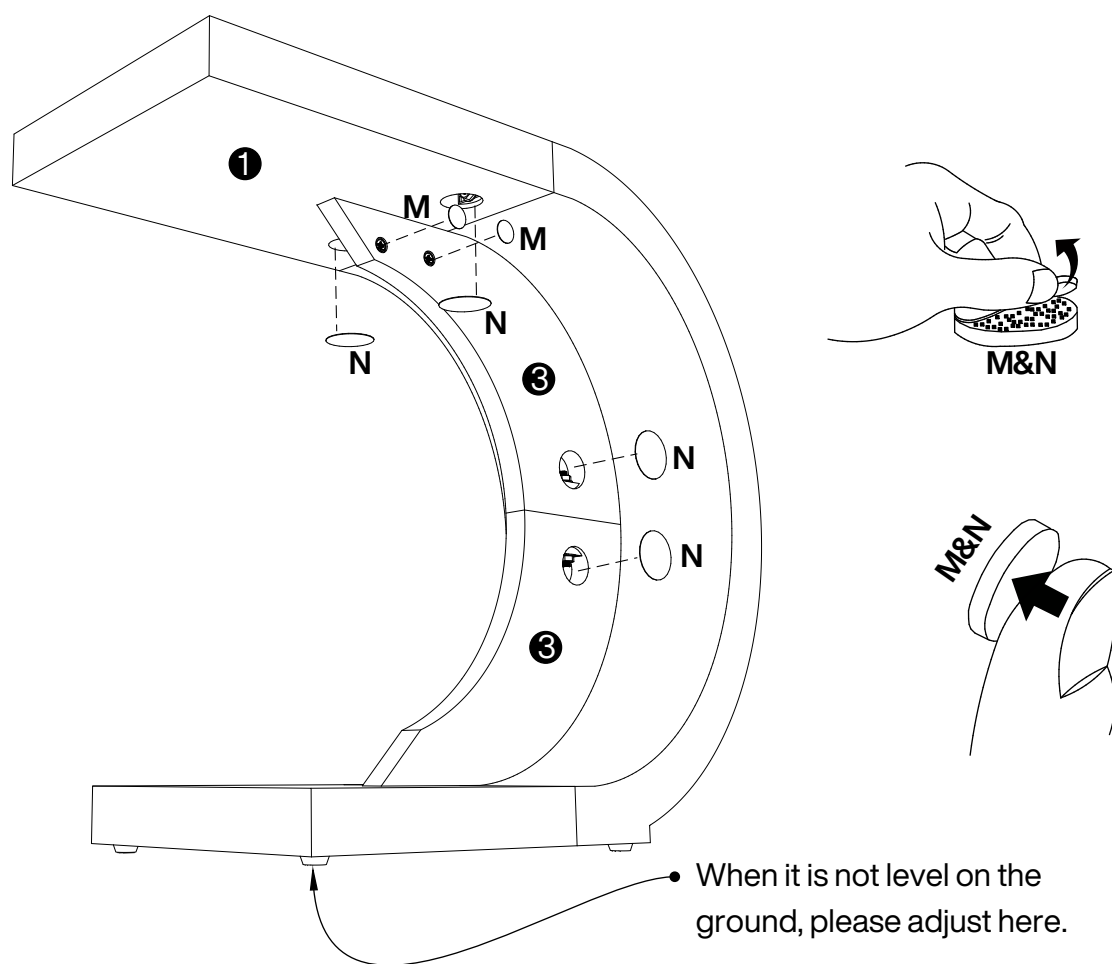
4 pcs



8

M

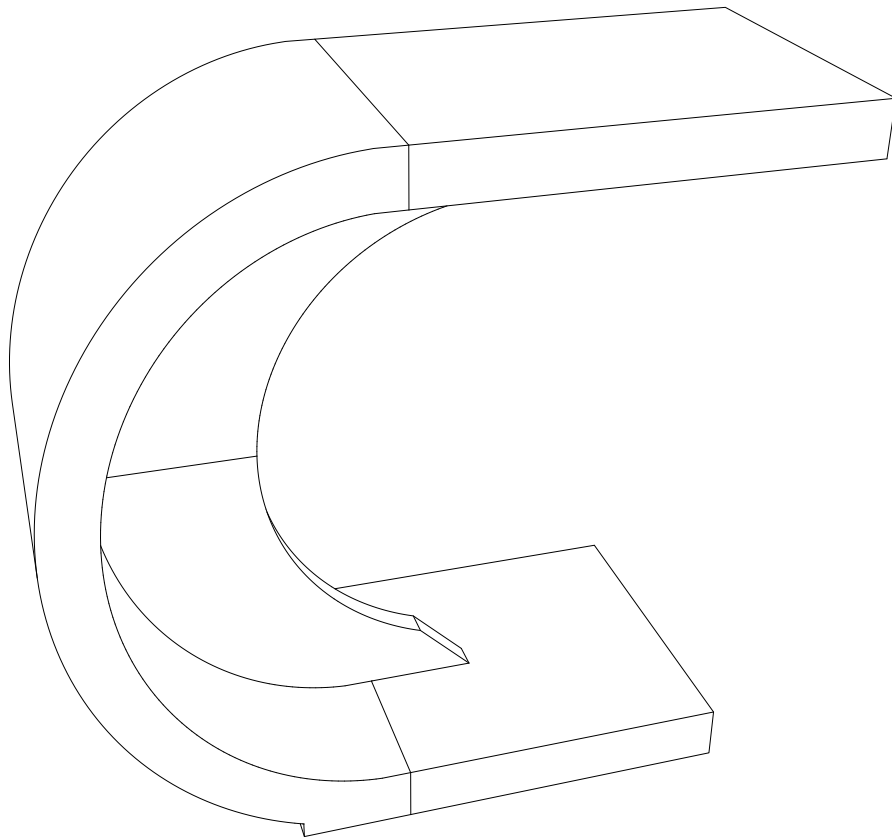
2 pcs
N

4 pcs





DESIGNED FOR LIFE

Thank you for your support!



Contact our customer service team



support@tribesigns.com

www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday.



Facebook



Instagram



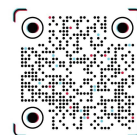
Pinterest



Twitter



YouTube



TikTok



WhatsApp