

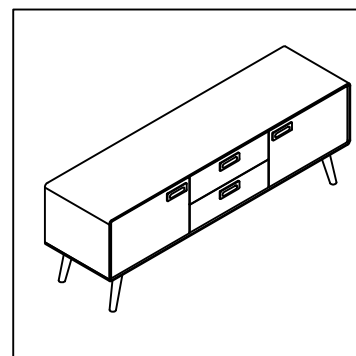
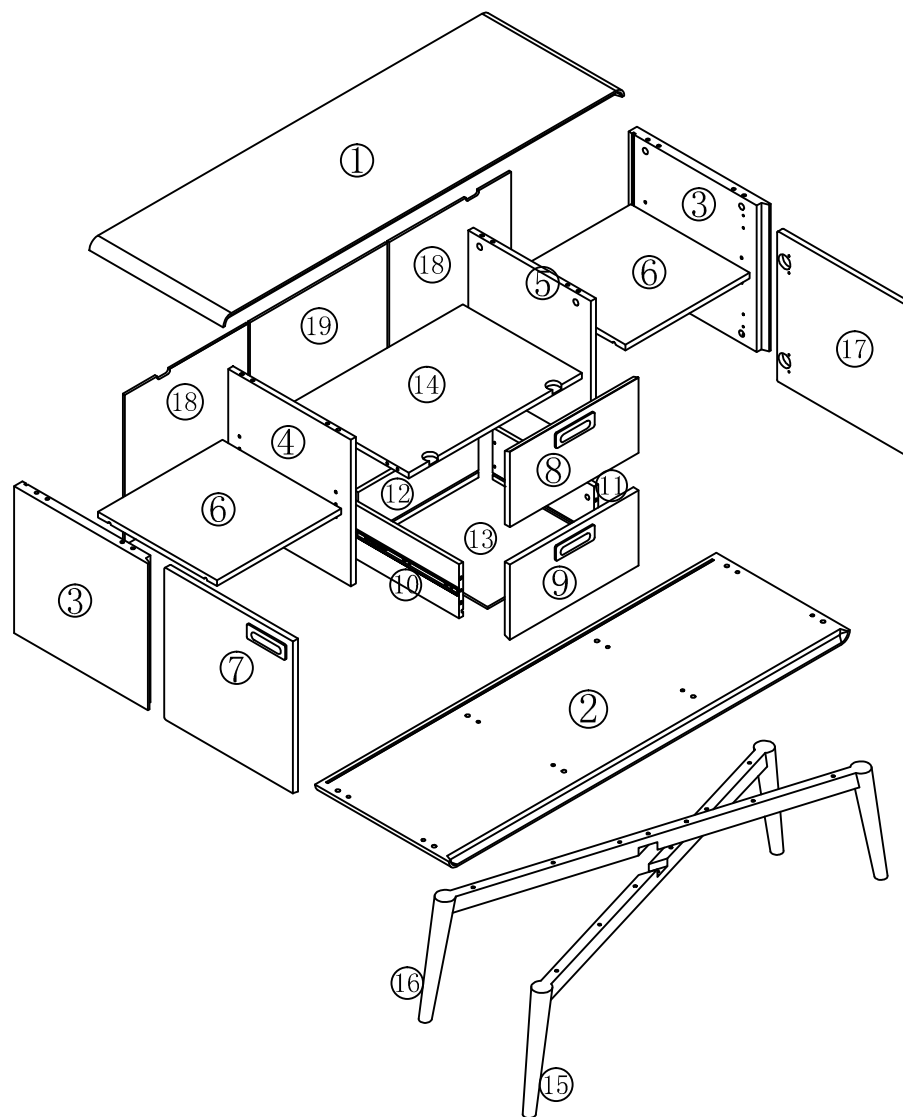

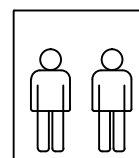






DO NOT TIGHTEN ALL THE SCREWS BEFORE YOU FINISH ASSEMBLY





OUTILLAGE. TOOLS. WERKZEUG. HERRAMIENTA. ATTREZZATURA



(A) x20 	(B) x20 	(C) x16 	(D) x20  ø8x30	(E) x1 	(F) x4 
(G) x34  ø4x15	(H) x8  ø6x45	(I) x1 	(J) x8  ø6*18mm	(K) x2 	(L) x12  ø3x18
(M) x4  ø6x50	(N) x2  L=150mm	(O) x8  ø10	(P) x6  ø4x30	(Q) x1 	

QUINCAILLERIE. HARDWARE. BESCHLAGE. FERRETERIA. CHINCAGLIERIA



1 ▶

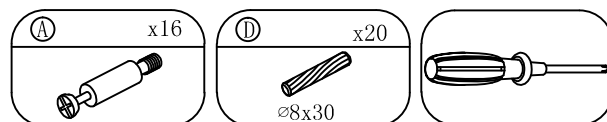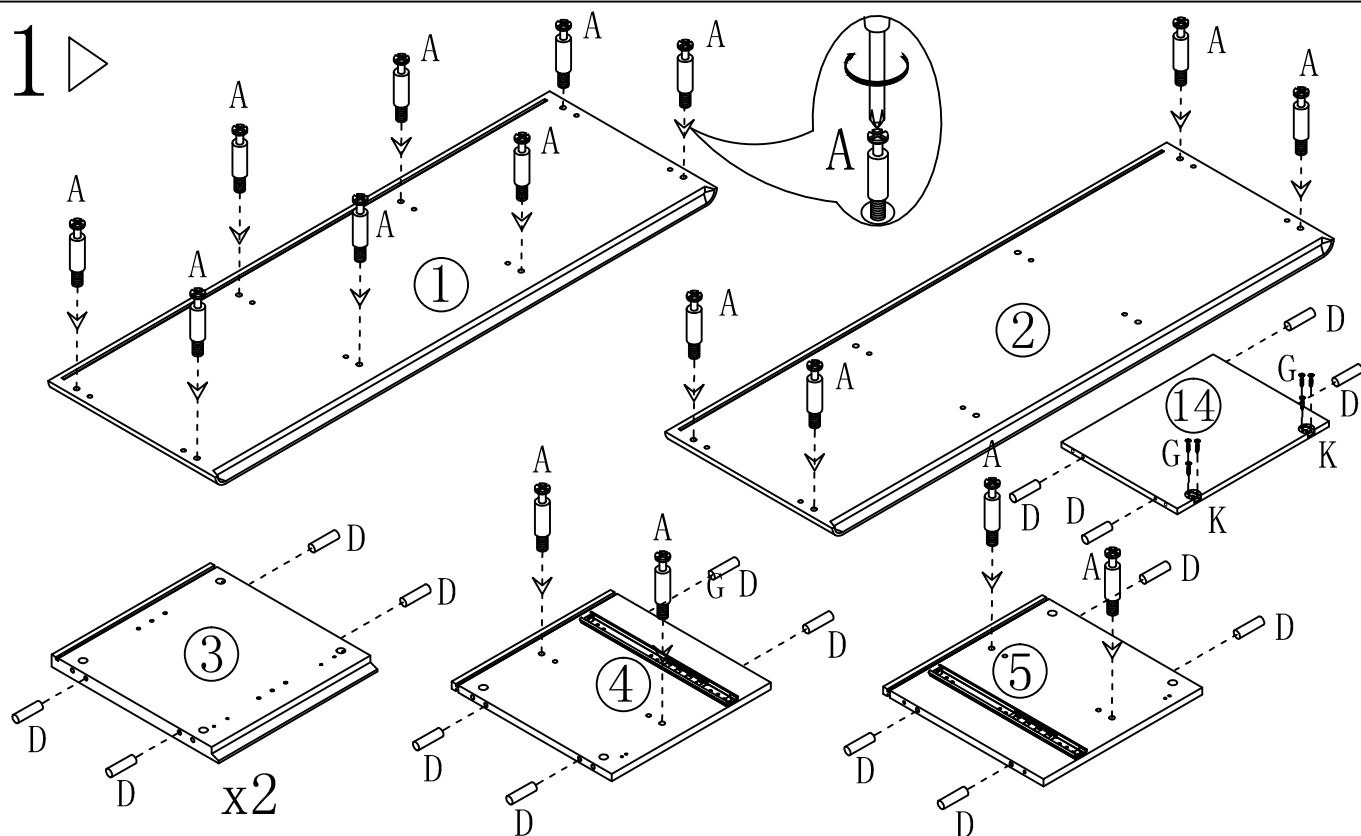


2 ▶

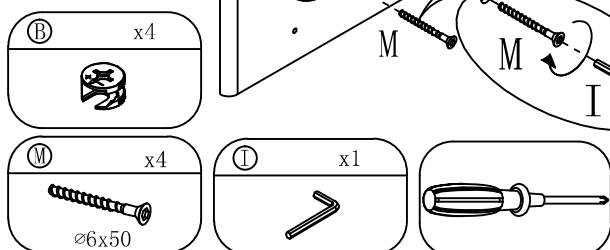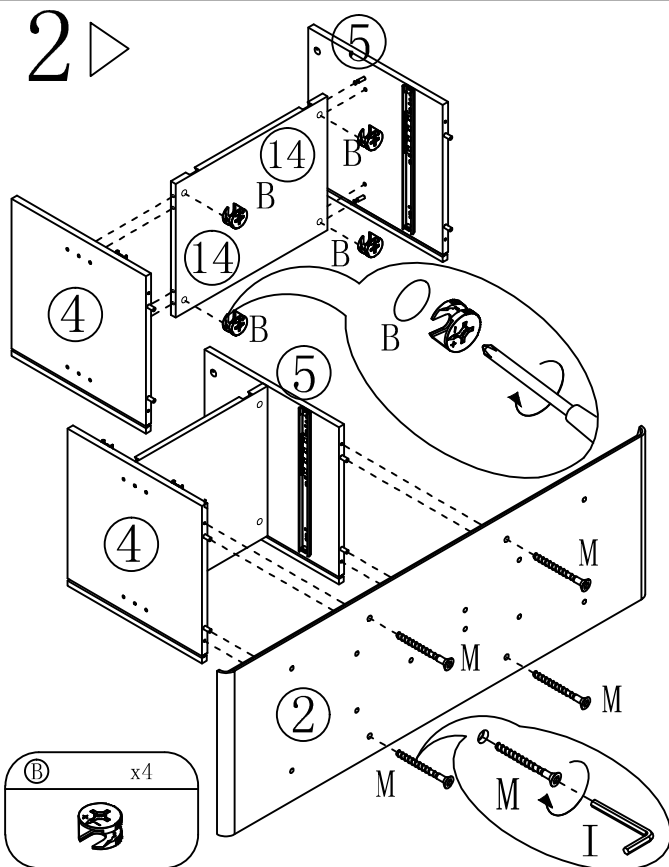



3 ▶

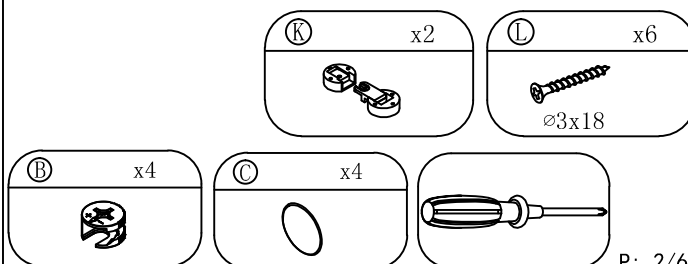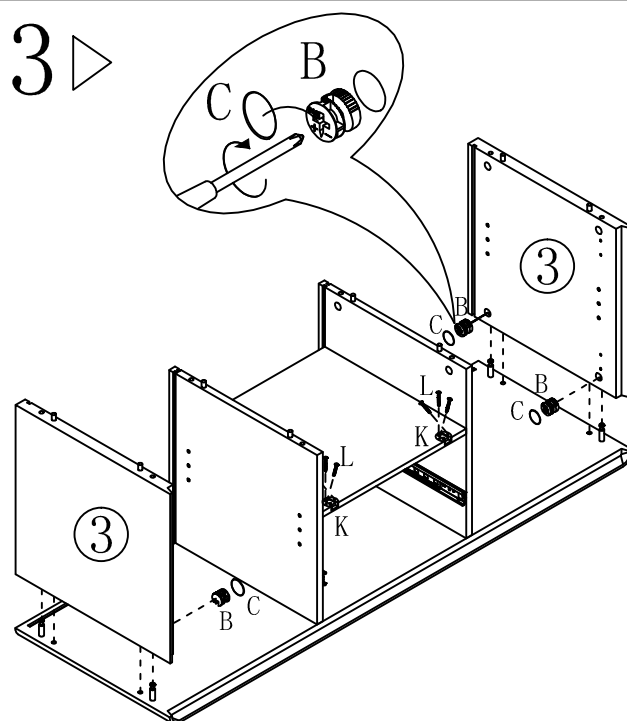



4 ▶

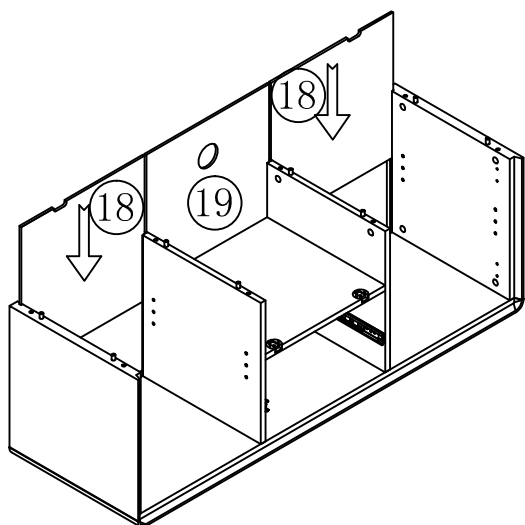





5 ▶

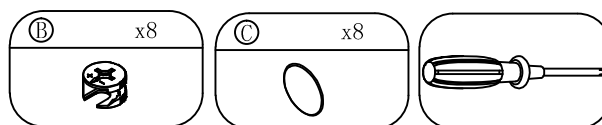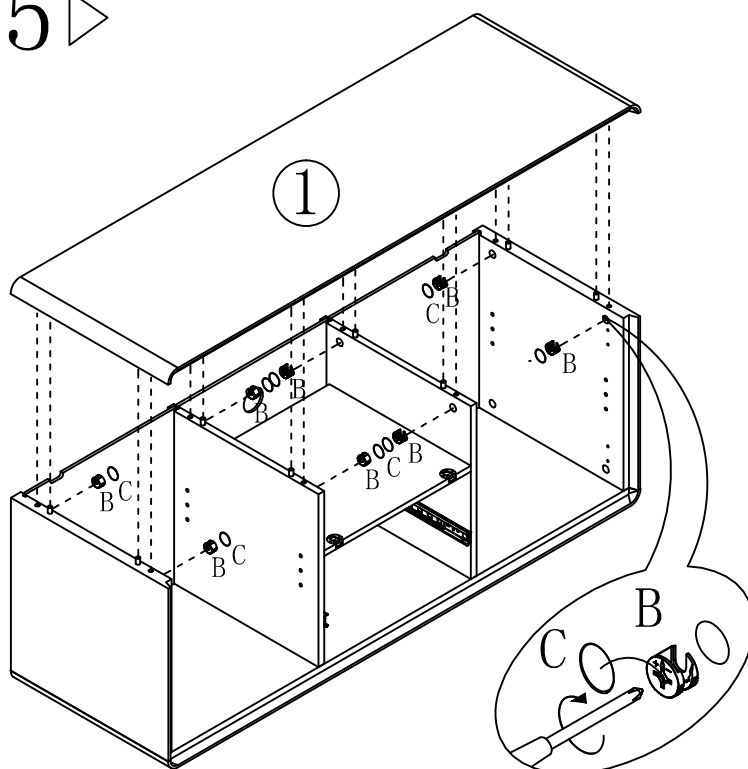








6 ▶

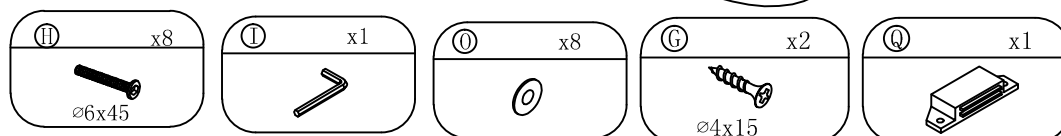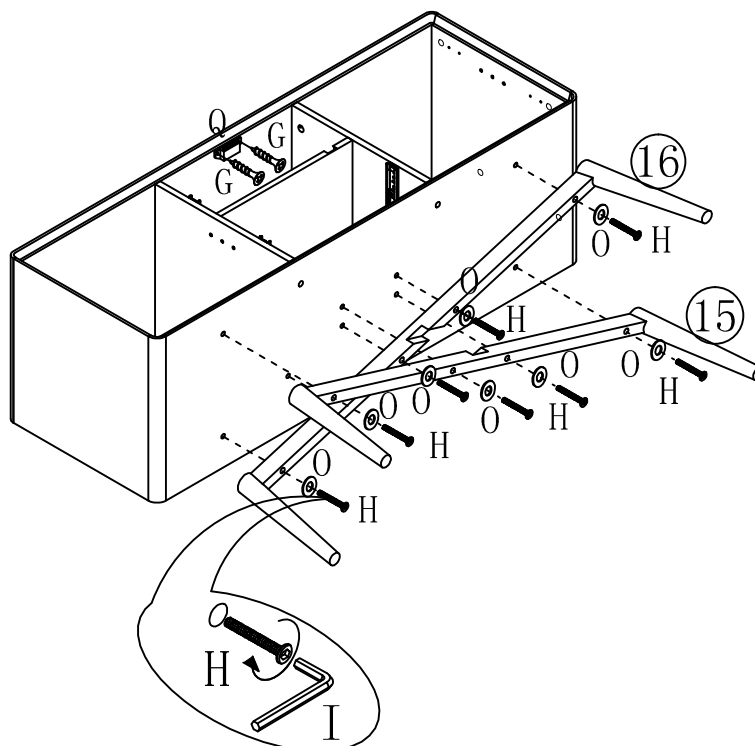

7 ▷

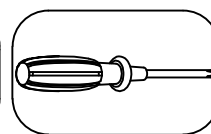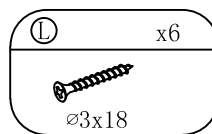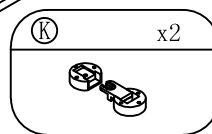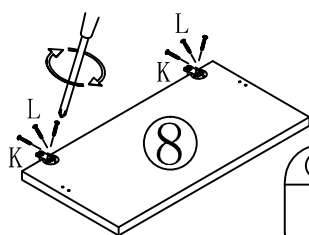


8 ▷

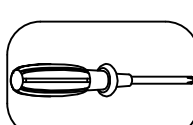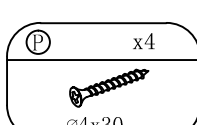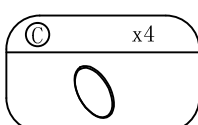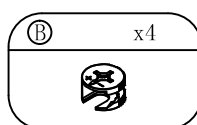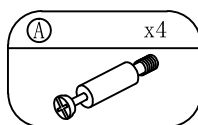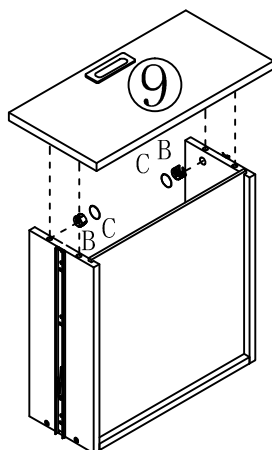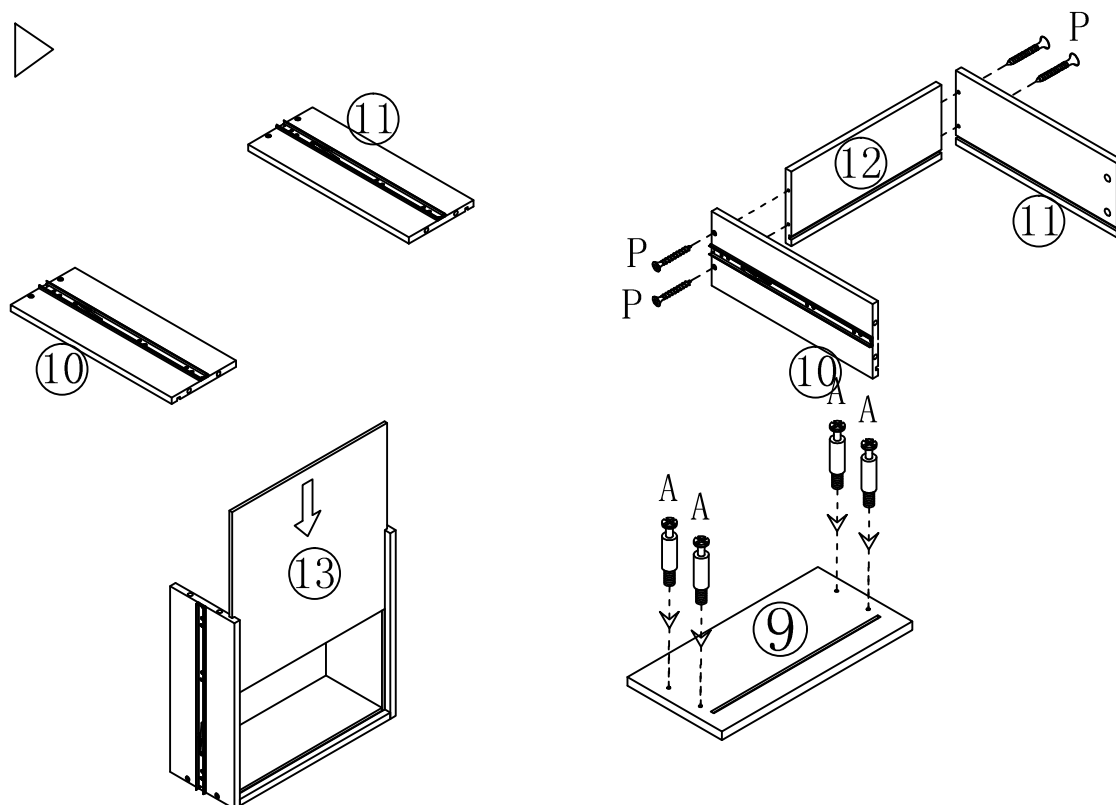


9


OPTIONAL

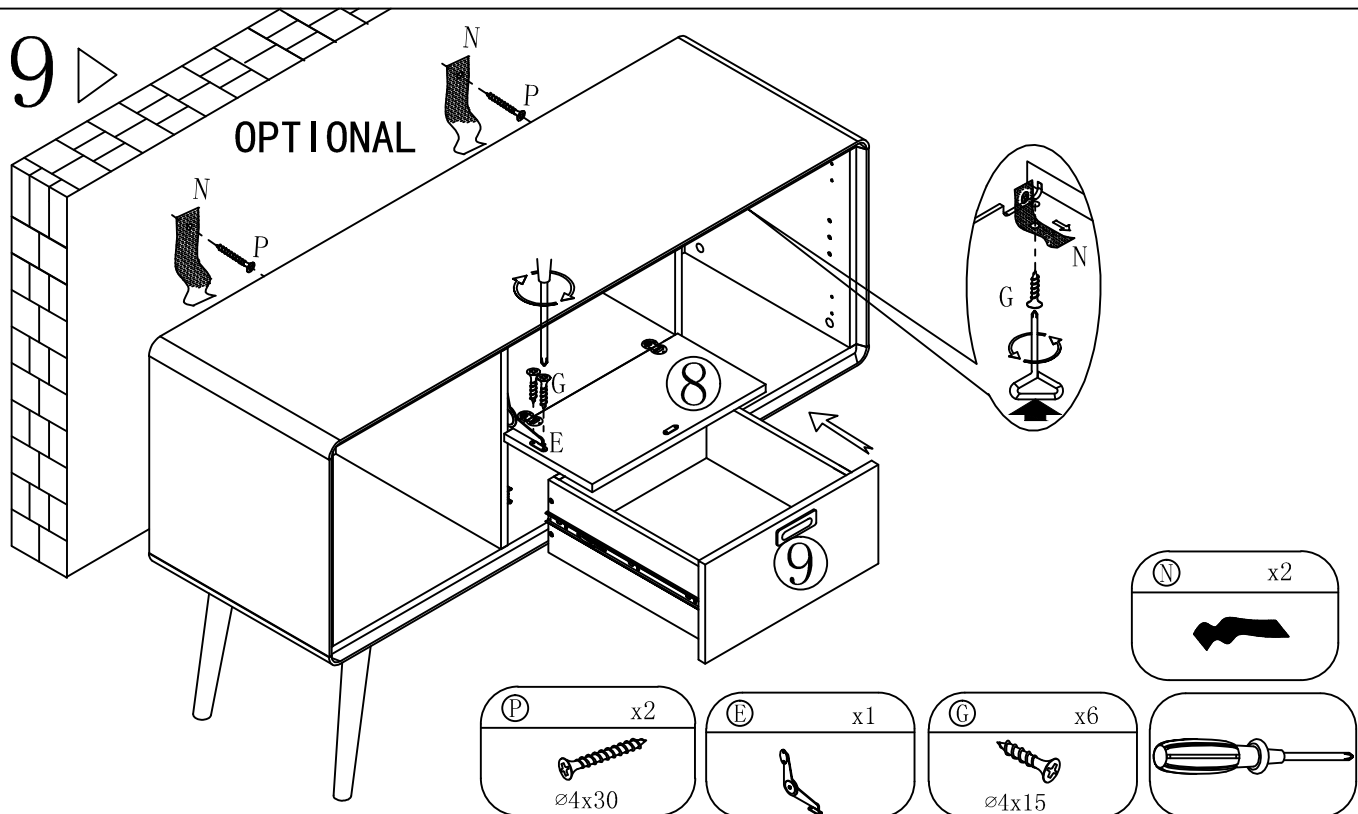


10

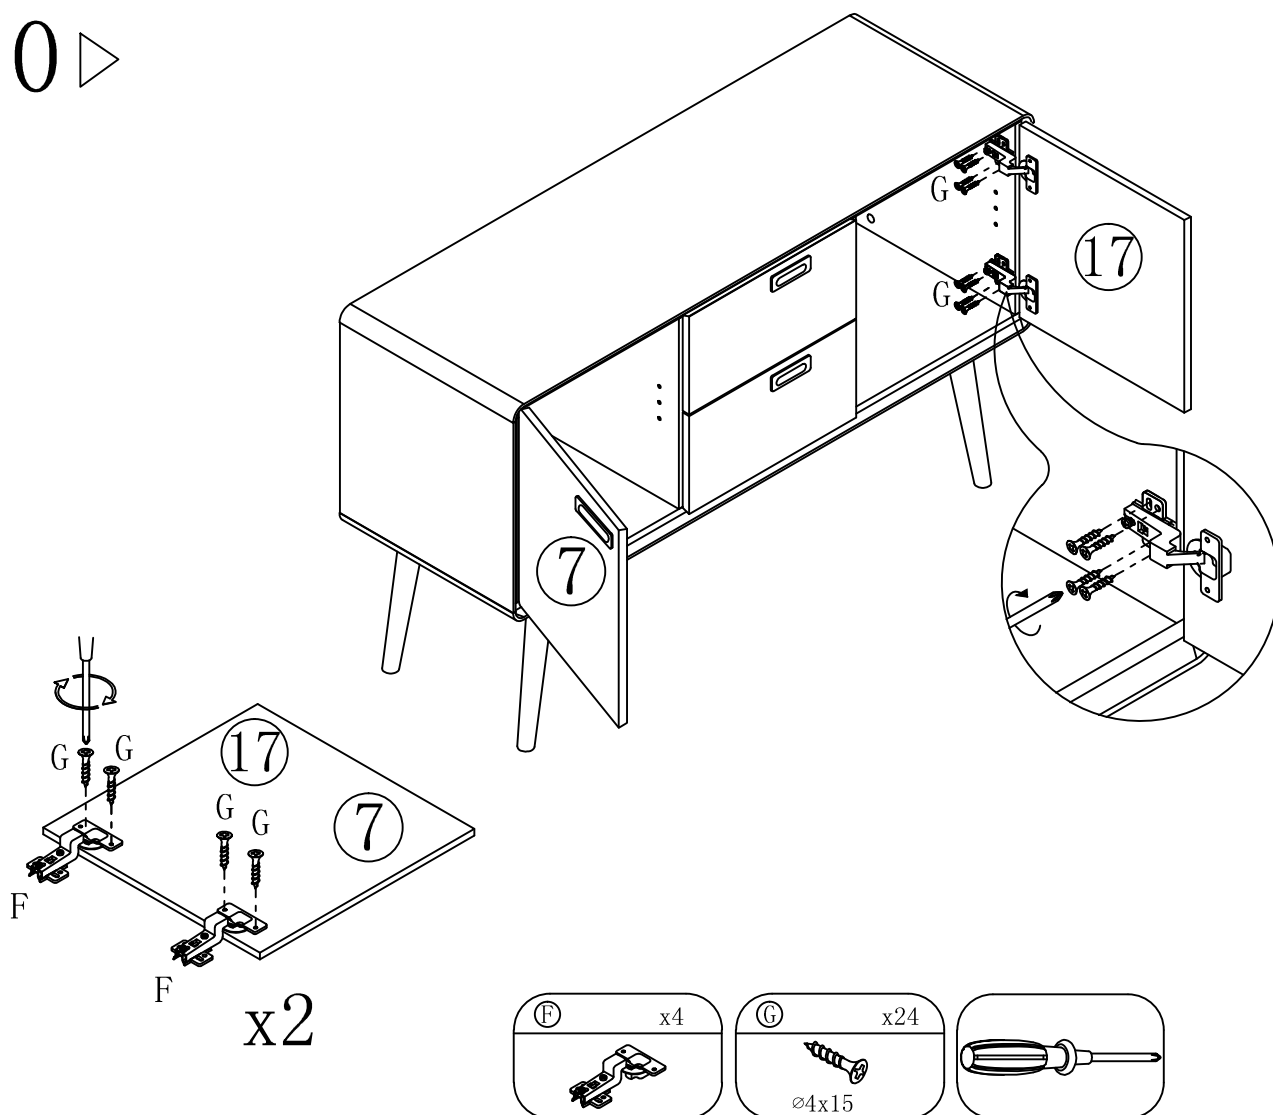

11 ▷

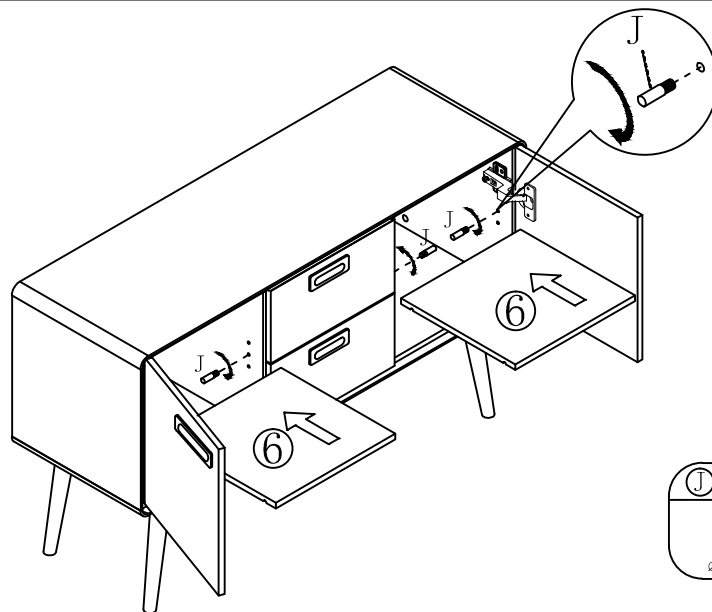

12 ▷

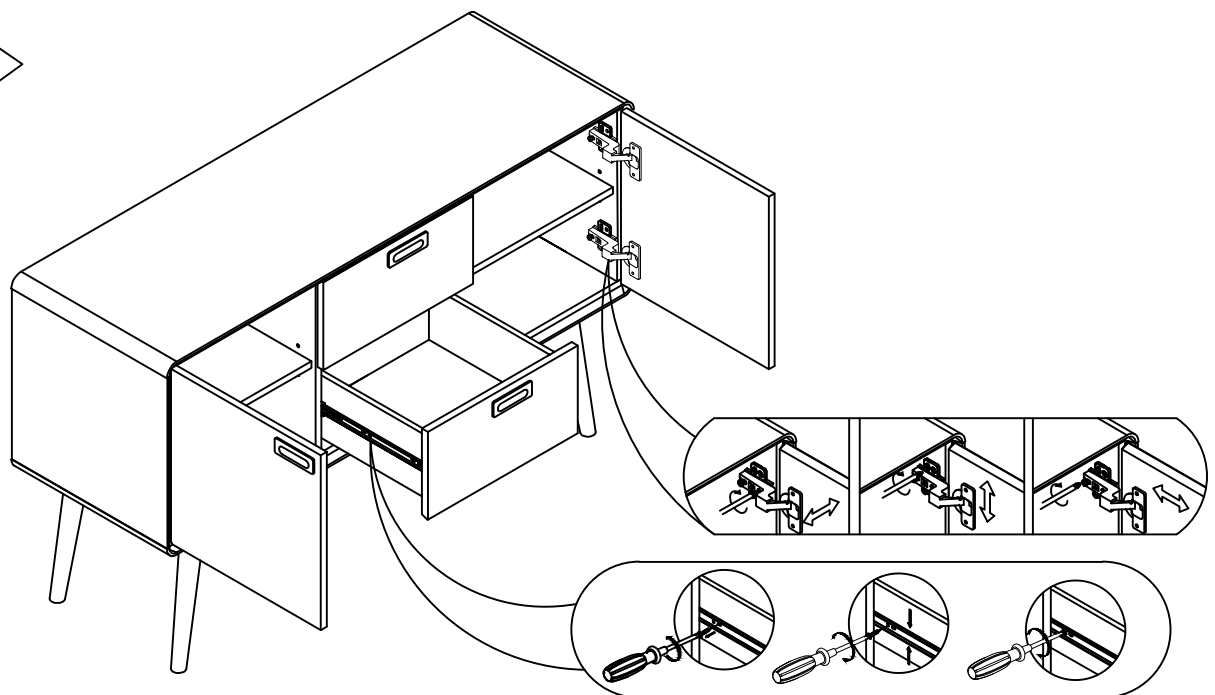

13 ▷

