

Pot Lid Organizer



What is in Box



8 PACK



8 PACK



2 PACK



8 PACK




8 PACK

2 Installation Methods

No Drilling Installation (Suitable for smooth, non-perforated walls)




1 Thread the adhesive screws into the bracket

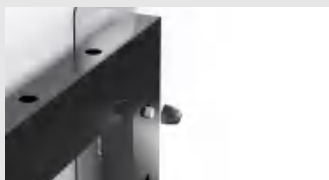

2 Tighten the screw cap




3 Select an appropriate position to remove the adhesive backing, press and stick

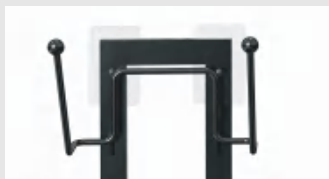

4 Insert W racks into the base successively

Drilling Installation

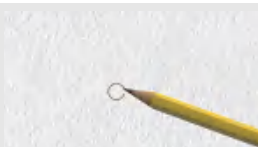

1 Measure and determine the hole position



2 Drill the hole



3 Screw in the screws



4 Insert W racks into the base successively