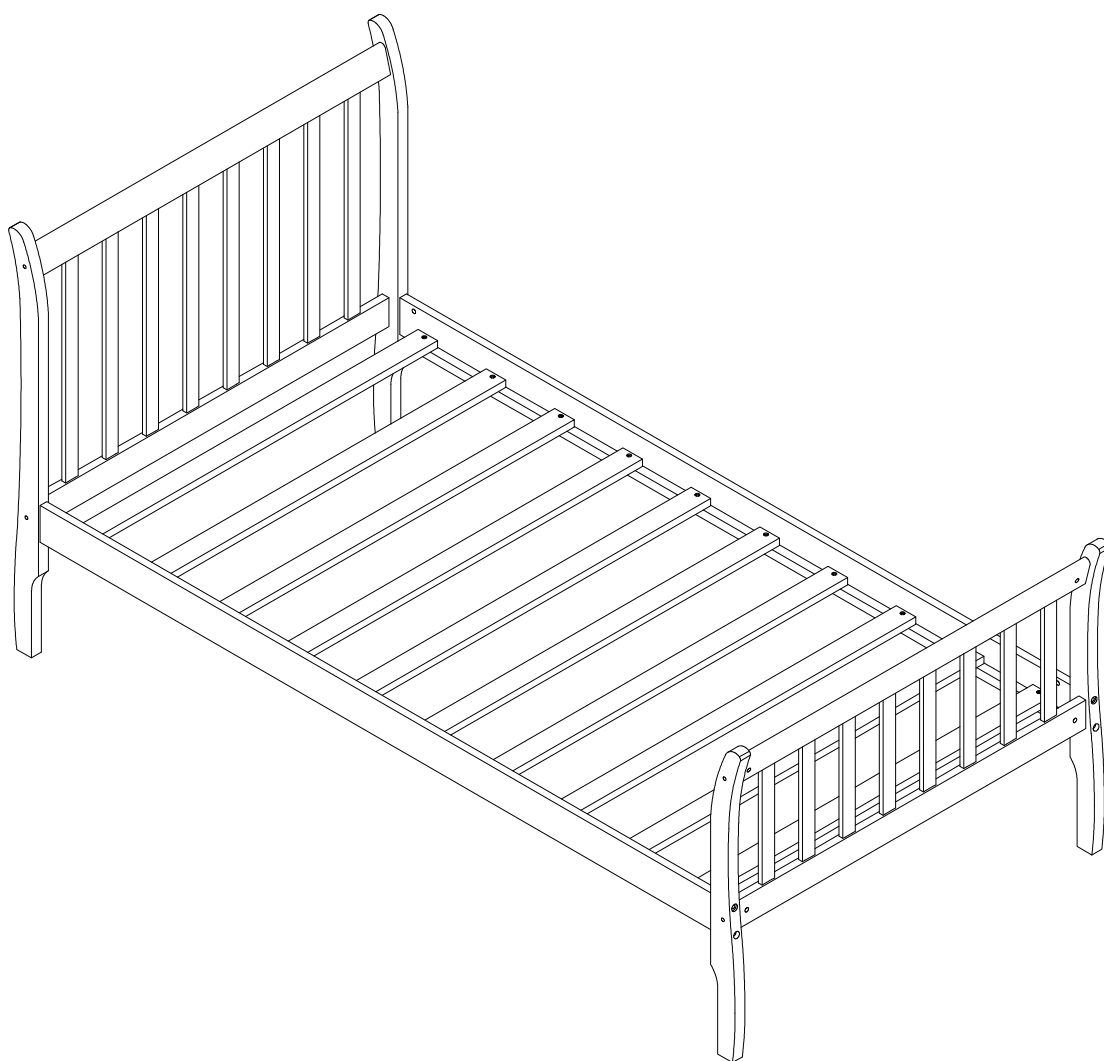



ASSEMBLY INSTRUCTIONS

TWIN BED










WF187441



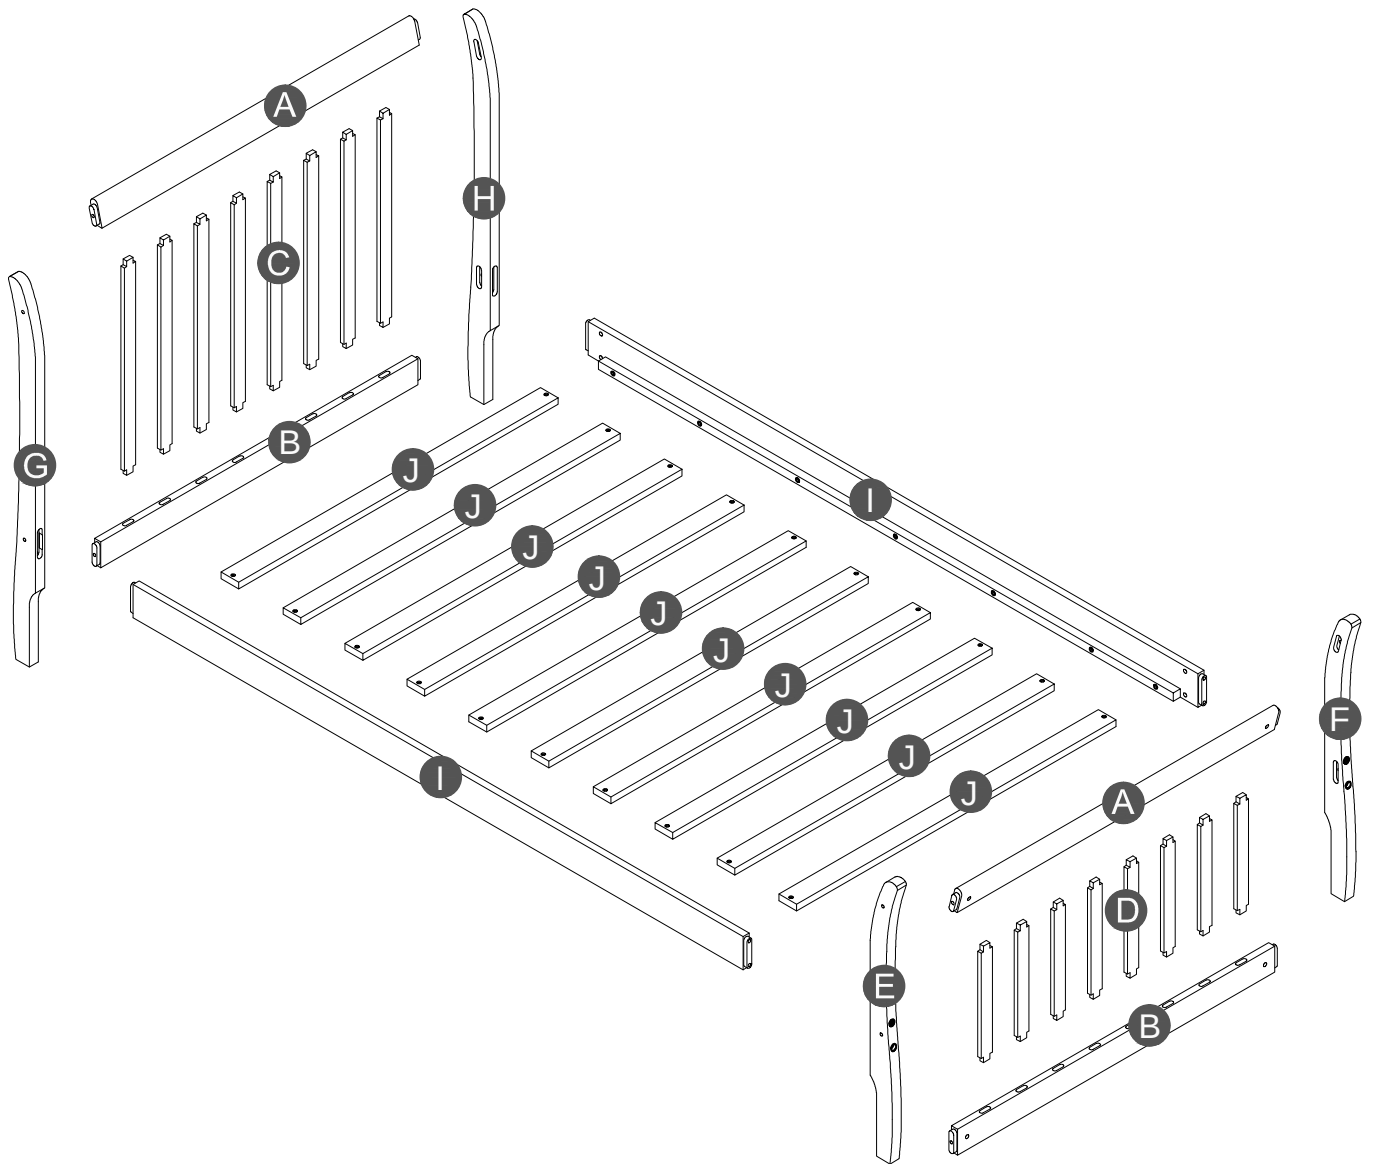
Detail View




Part List

A		B		C	
Horizontal bar - 2pcs		Horizontal bar - 2pcs		Headboard -8pcs	
D		E		F	
Footboard -8pcs		Leg Footboard(Right) - 1pc		Leg Footboard(Left) - 1pc	
G		H		I	
Leg Headboard(Left) - 1pc		Leg Headboard(Right) - 1pc		Side Rail - 2pcs	
J					
Slats - 10pcs					

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	2  (Ø15)1/4"*70mm Hex-Head bolts (8pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(16pcs)
4  Ø4*30mm Wood screws (20pcs)	5  (1/4")4.5*58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

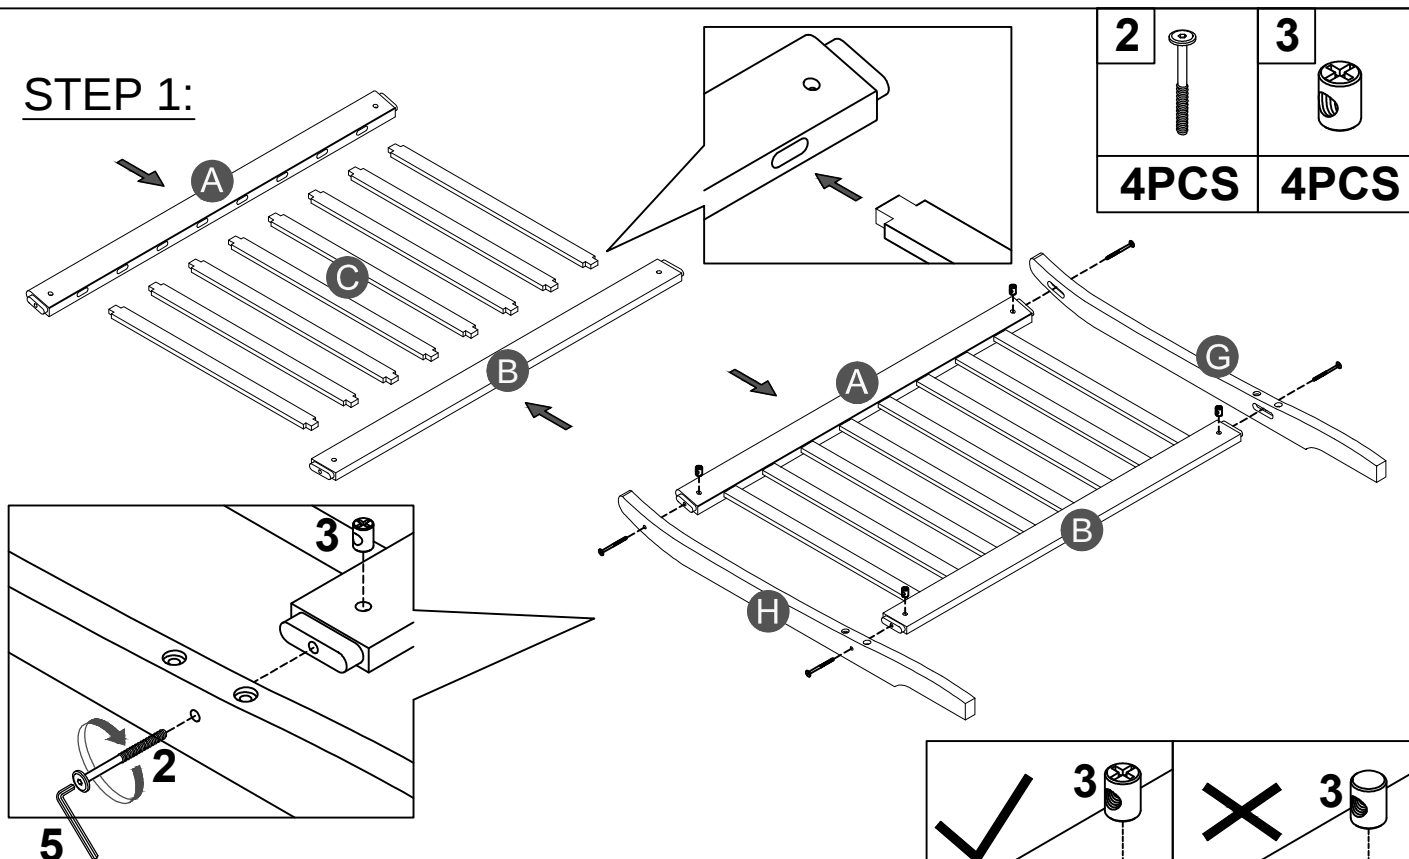STEP 1:




Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

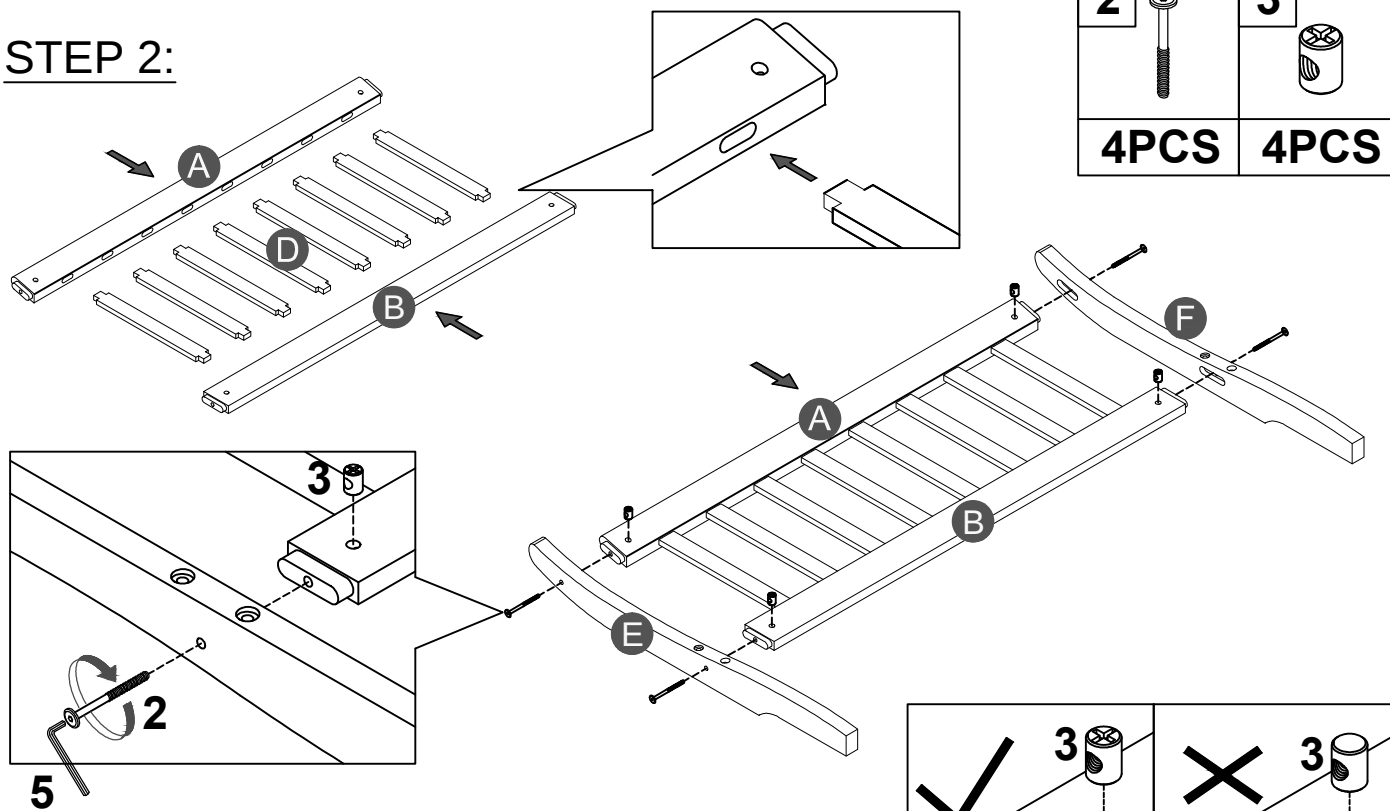STEP 2:



Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

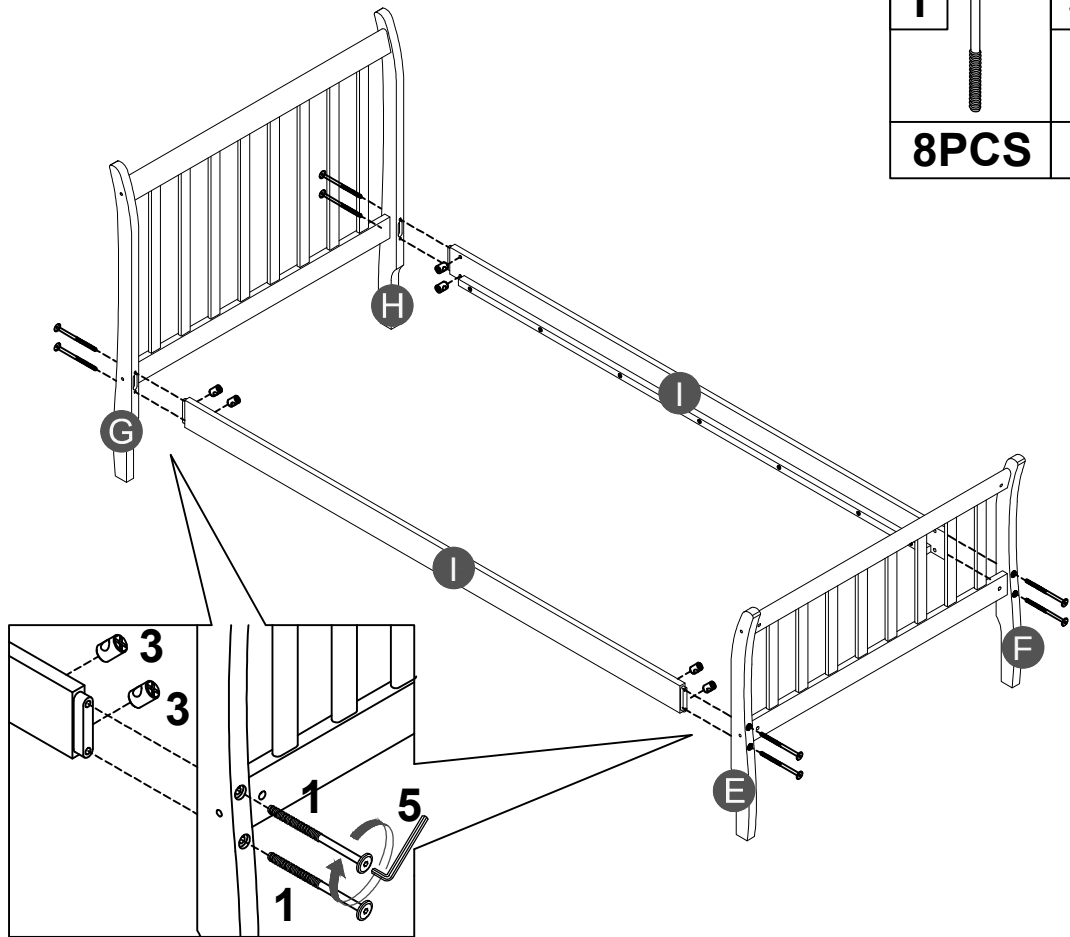STEP 3:



1



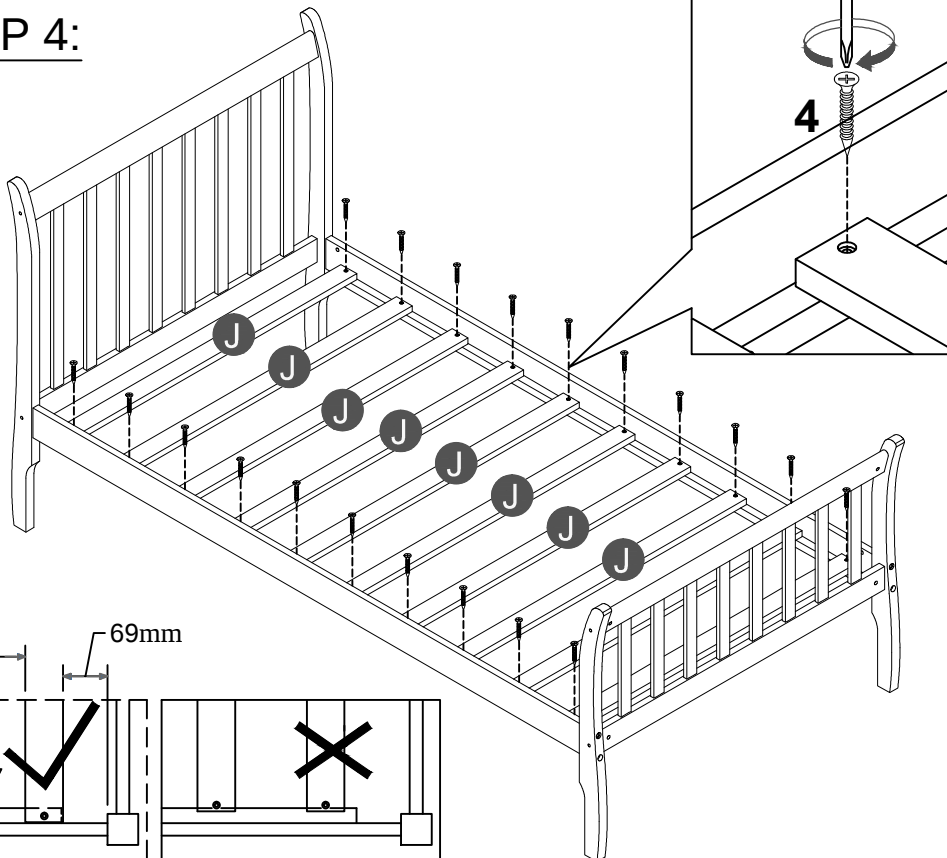
8PCS

3



8PCS

STEP 4:




4



20PCS

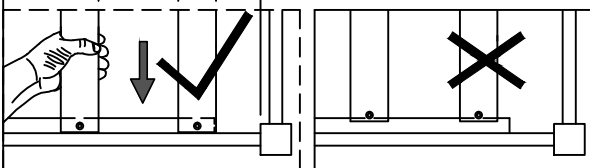138mm 69mm



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.