
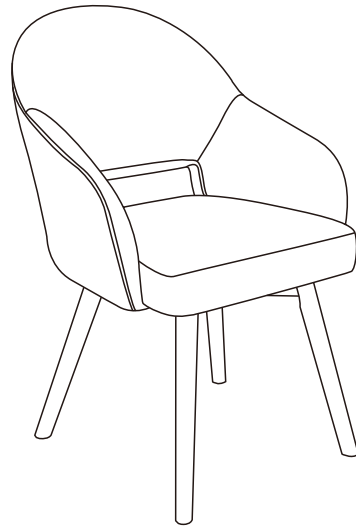
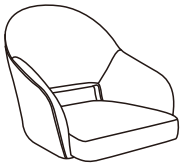





LIRWOOD

DINING CHAIR (SET OF 2)




No.	Description		QTY
A	Seat		2
B	Upper Leg		2
C	Lower Leg		2
D	Cross Metal Plate		2
E	Bolt M6*65mm + Gasket +Flat Washer	 6x65mm	8
F	Bolt M6*40mm + Gasket +Flat Washer	 6x40mm	2
G	Bolt M6*14mm	 6x14mm	8
I	Allen Key		1

1

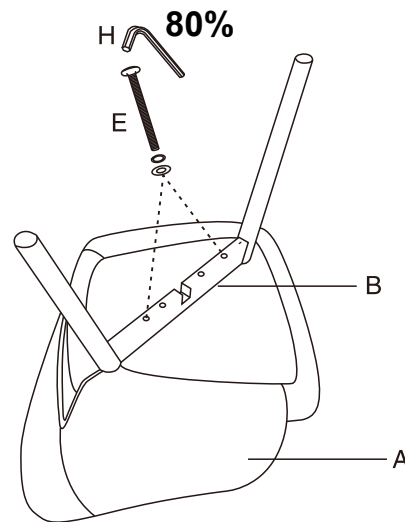


Place the seat (A) up-side-sown. Attach the upper leg (B) under the seat. Loosely tighten the bolt, gasket and flat washer (E) to the two holes close to the leg using allen key (H).

3

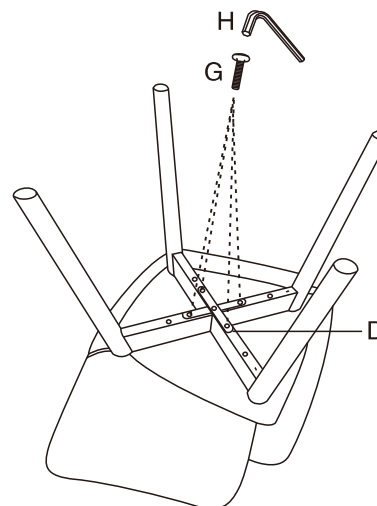

Put Cross Metal Plate (D) to the centre and tighten the bolt (G) to the remaining four holes.

2

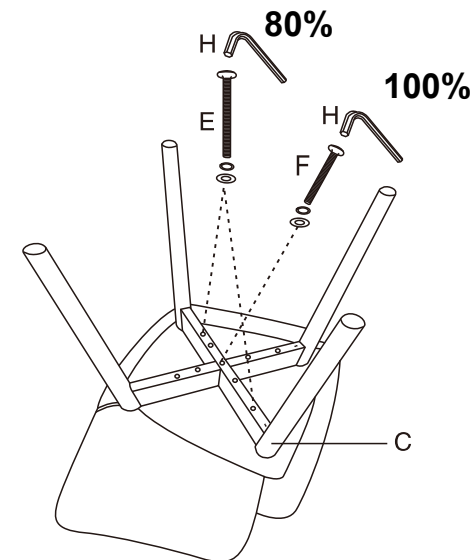

Loosely tighten the lower leg (C) as well. Install bolt (F) at the centre.



Loosely tighten the bolts to fix the positions first.

Securely tighten the bolts until everything is put together.