
ASSEMBLING INSTRUCTION

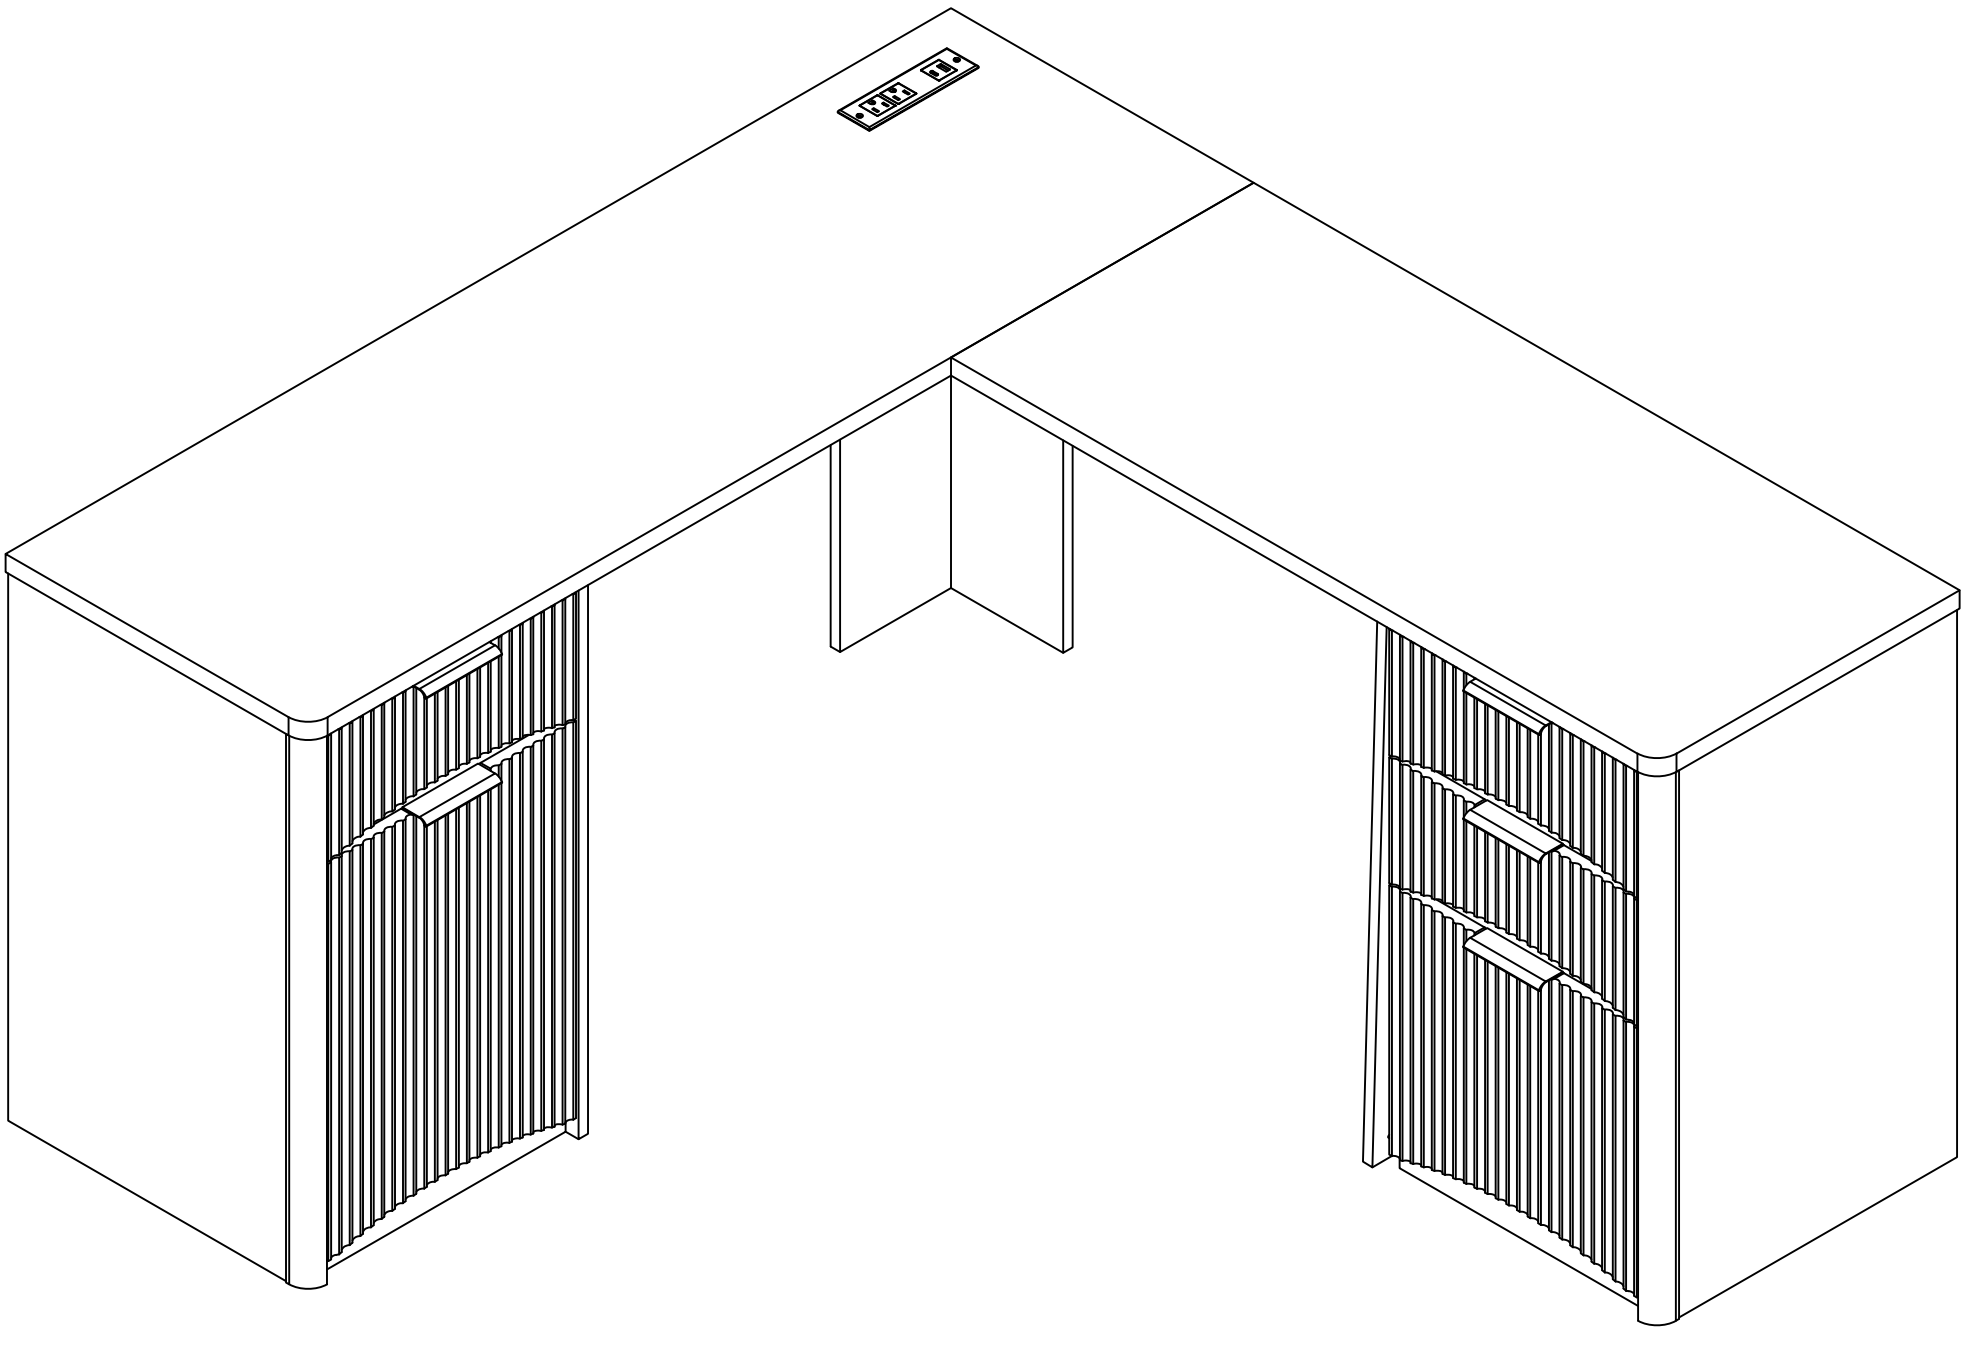

Warm Tips:

If you experience any issues with damaged or missing parts,or notice a quality defect,we kindly ask you to share the part number along with photos of the issue,Once wu have reviewed and confirmed the details.we will provide appropriatesolutions,including arranging a replacement.We sincerely appreciate your understanding and patience! This instruction booklet contains important safety information.please read and keep for future reference.

TIPS BEFORE YOU STAR

1. Before assembling your furniture, please check that all parts are present and laid out.

2. Before initiating each assembly step, please confirm required parts are identified.

3. Please ensure adequate space and assistance for safe assembly of large items.

4. We recommend assembling the product near its intended placement area to avoid relocation after assembly.

5. We recommend to place components on sort surfaces (e.g.,carpet,blanket)during assembly to prevent damage of the item.

6. Please do not overtighten any fittings, as this may damage the product. We recommend hand-tightening rather than using power tools.

7. Please position fully assembled product on flat, stable surfaces with even support.

8. Please do not stand on or use this product as a step ladder.

9. Product is designed exclusively for indoor household use in non-industrial environments.

10. Please lift with proper body mechanics to prevent injury and product damage.

CARE AND MAINTENANCE OF YOUR FURNIT

☑ Periodically inspect and retighten all fittings as needed to maintain structural integrity.

☑ Periodically inspect all screws and retighten if necessary to maintain product stability.

☑ For optimal glass cleaning, apply a dedicated glass cleaner using a microfiber cloth to prevent streaks.

☑ Avoid liquid contact to prevent structural warping and surface delamination; immediately wipe any spills.

☑ Avoid placing hot objects (e.g., hot beverages) directly onto surfaces to prevent thermal shock and permanent discoloration.

☑ Lift the unit with multiple personnel using proper technique; dragging or pushing risks structural failure and injury


ASSEMBLY REQUIREMENTS


☑ Equipment: phillips head screwdriv


☑ 2 x adults required.

☑ 2m x 2m assembly space require


☑ 1.5 hour assembly time approx.

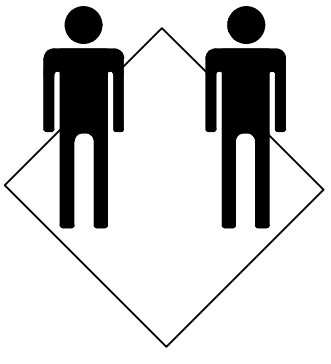

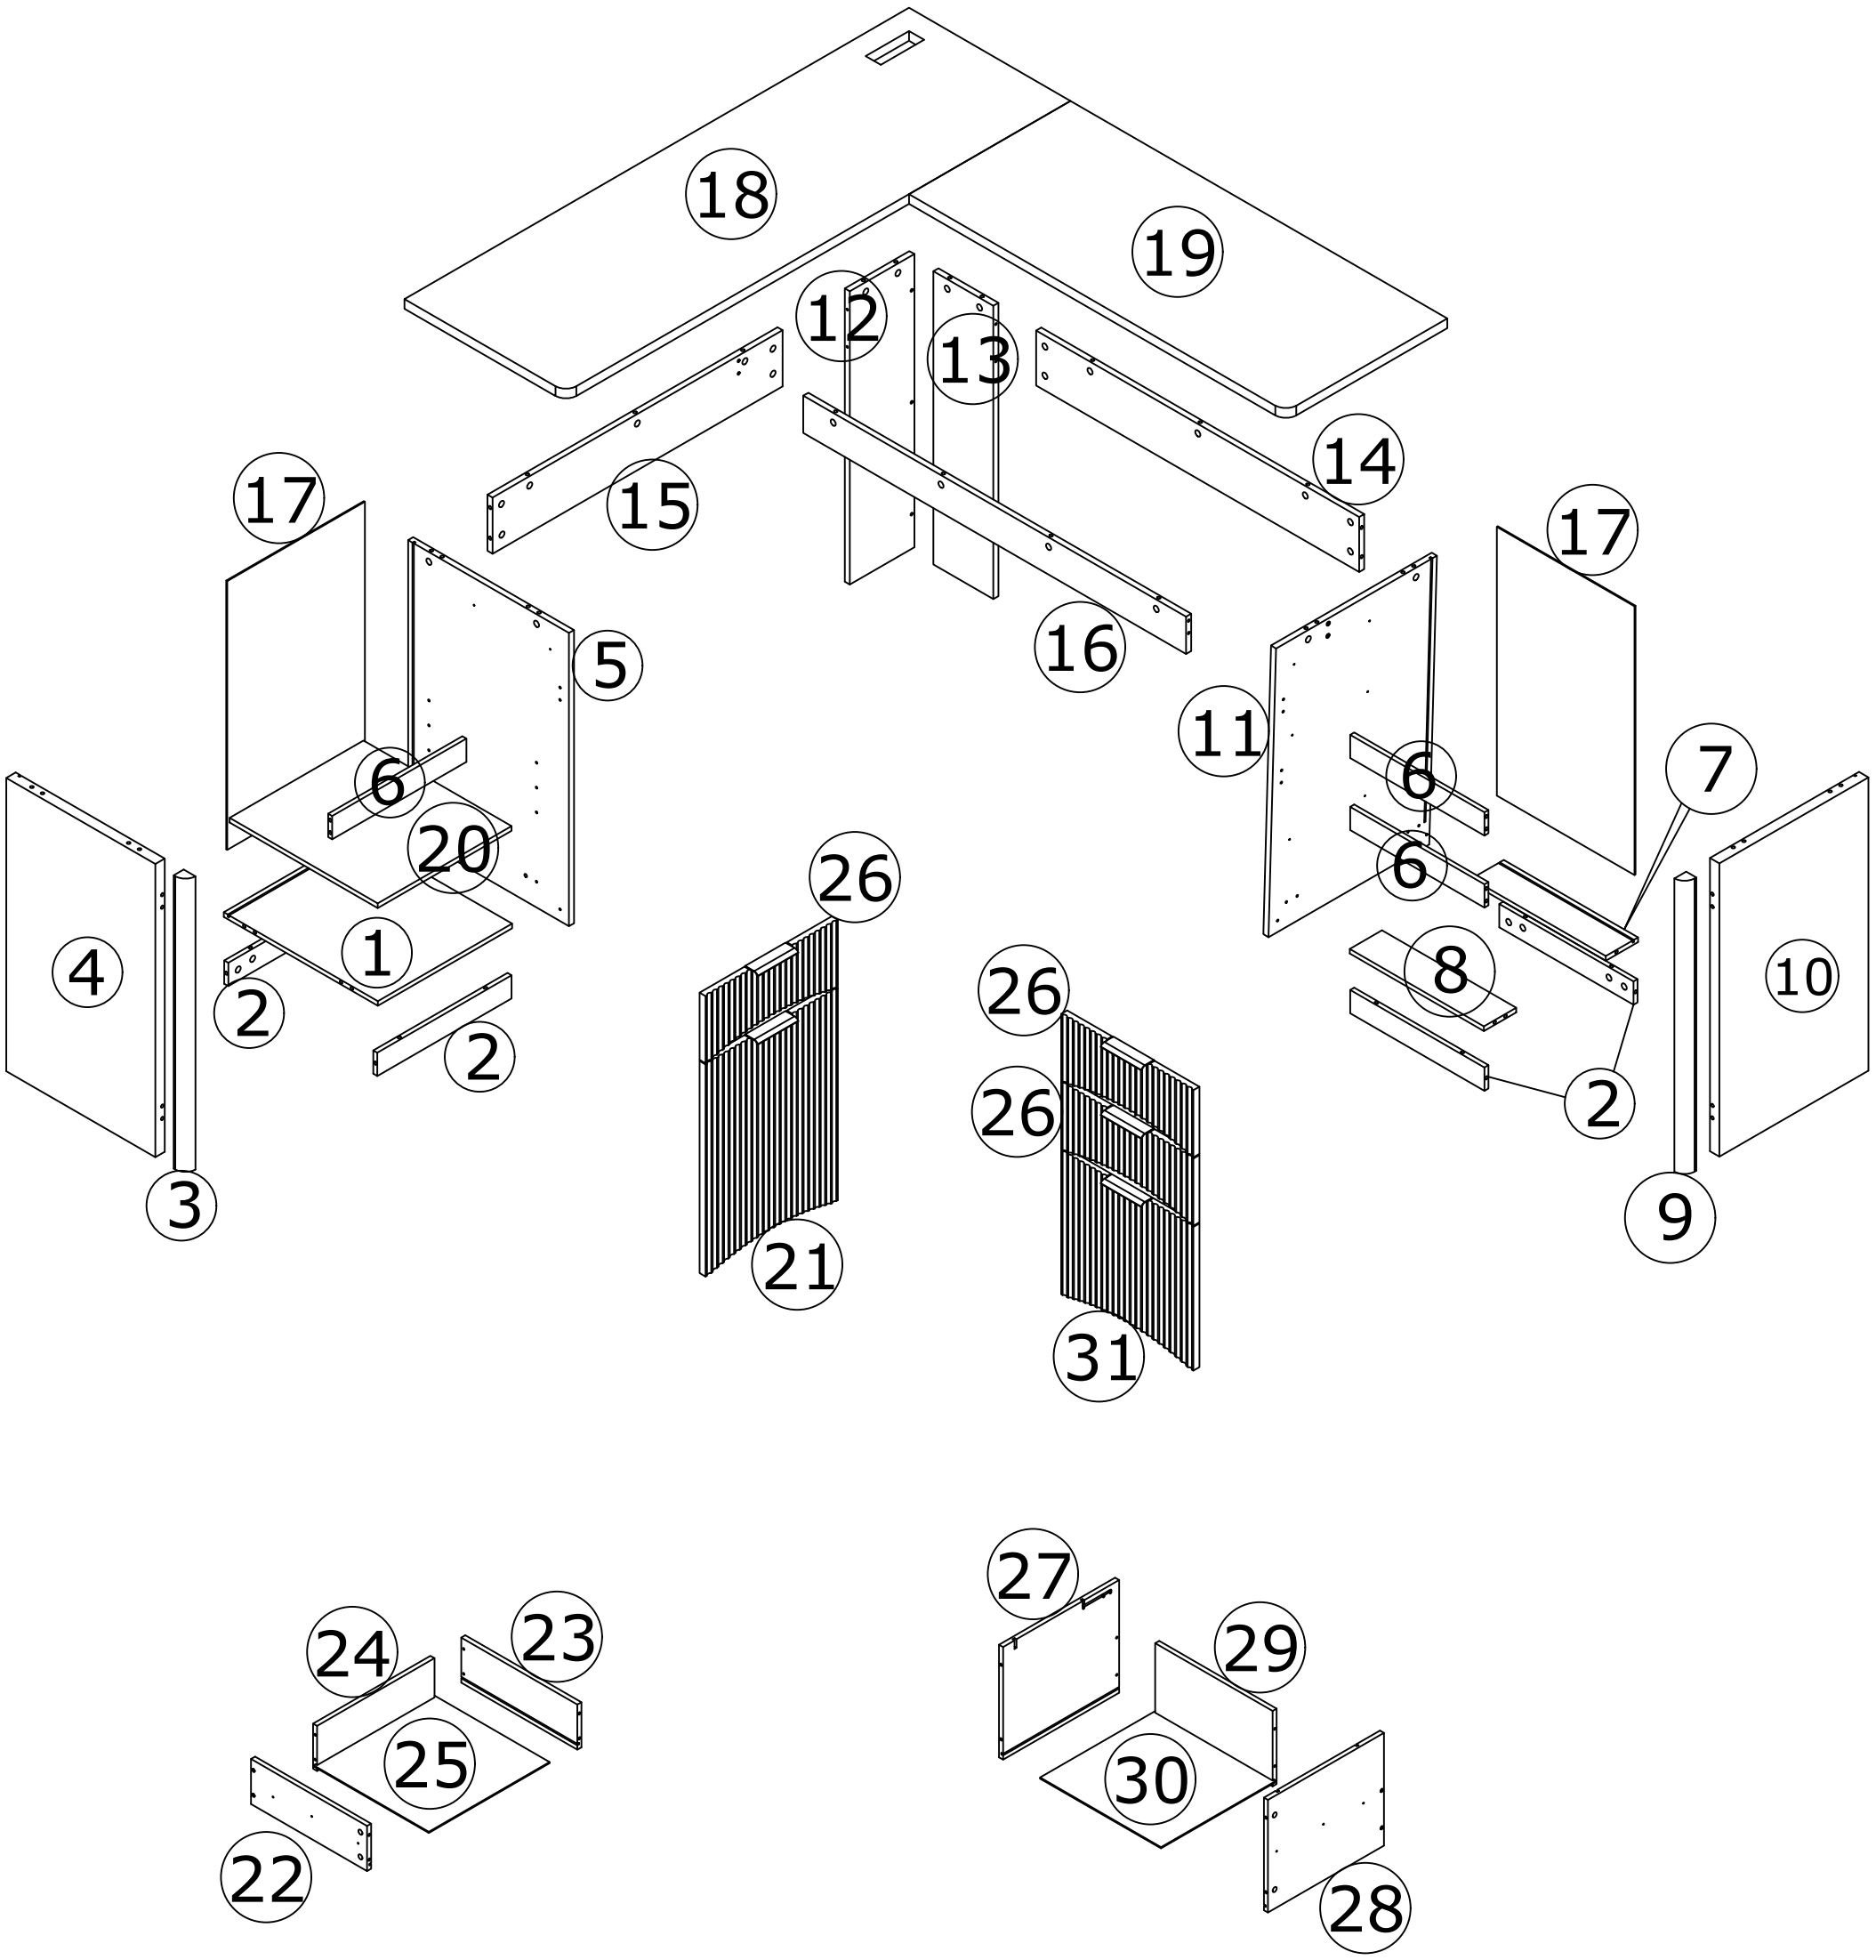

18
19
12
13
15
14
17
17
5
16
11
6
7
6
20
6
26
4
1
8
10
2
2
2
26
26
3
21
9
31
24
23
27
29
25
30
22
28
X3




A Ø6*40	X90

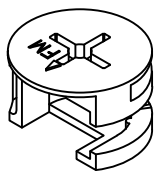


B Ø15*12	X34

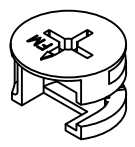


C Ø12*10	X56




D Ø8*30	X12

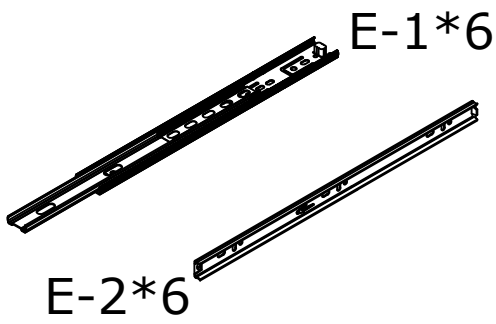


E 14``	X3

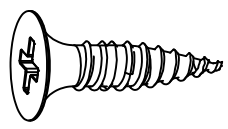


F Ø3.5*12	X58

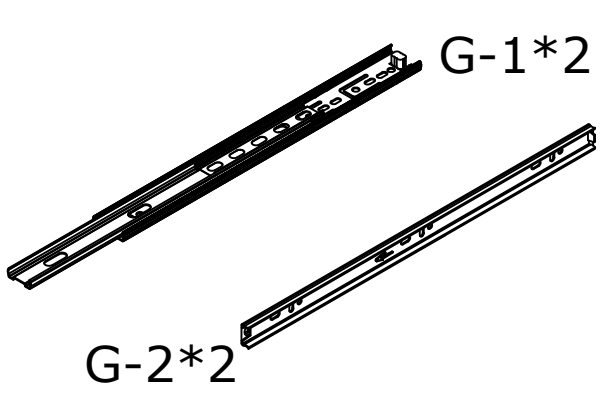


G 16``	X1

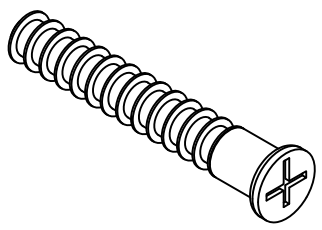


H Ø7*38	X7

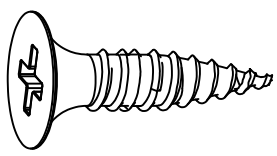


I Ø3.5*16	X18

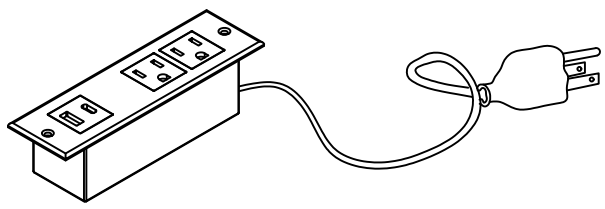


J	X1

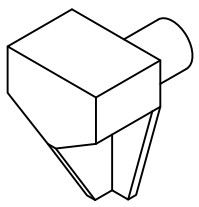


K	X4

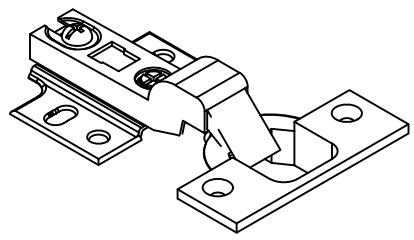


L	X2

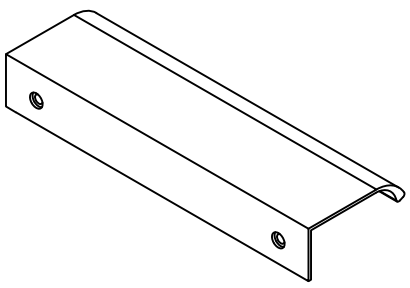


M	X5

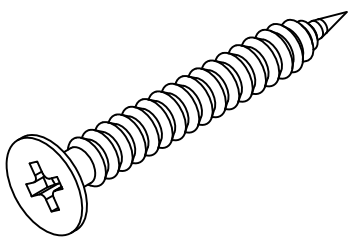



N Ø4*40	X16

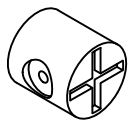



O Ø10*9.5	X16

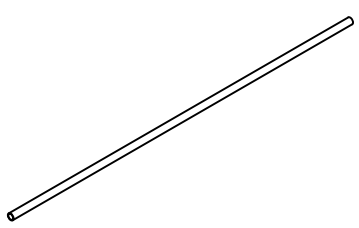
	
P Ø4*359	X2

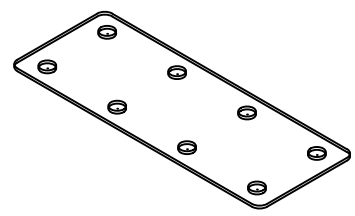
	
Q 100*38*1mm	X2


	
R	X16

	
S Ø6*30	X4


	
T	X16

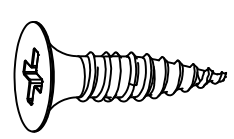	
U Ø3.5*14	X28

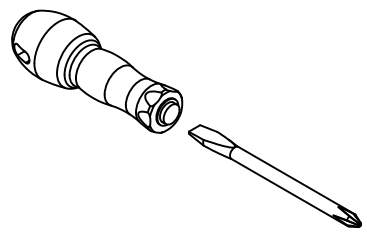
	
V	X1

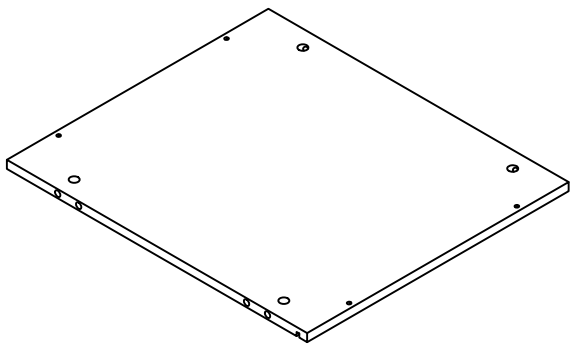


1	X1

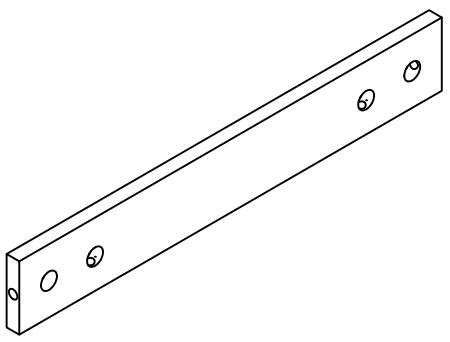


2	X4

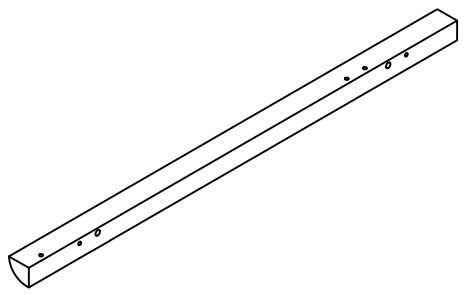


3	X1

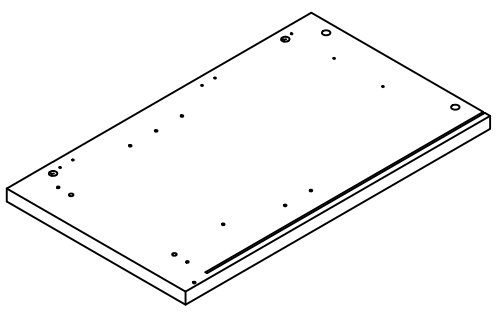


4	X1

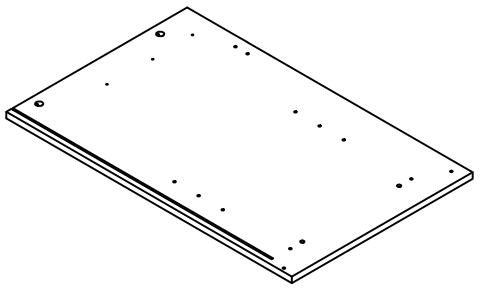


5	X1

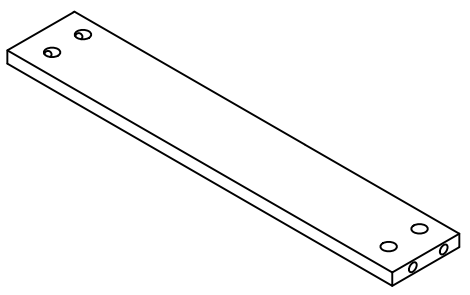


6	X3

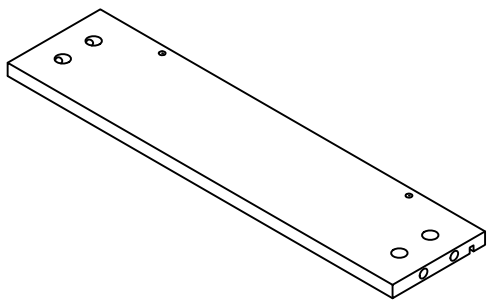


7	X1

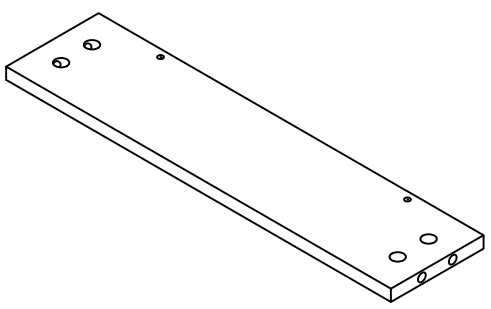


8	X1

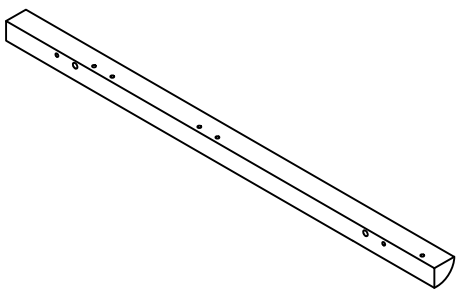


9	X1

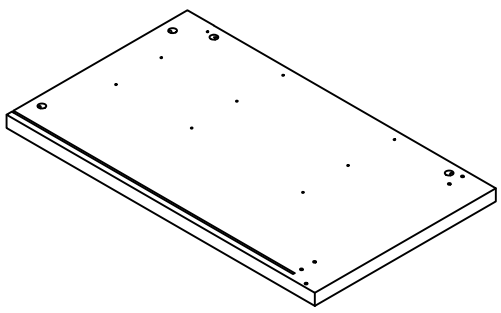


10	X1

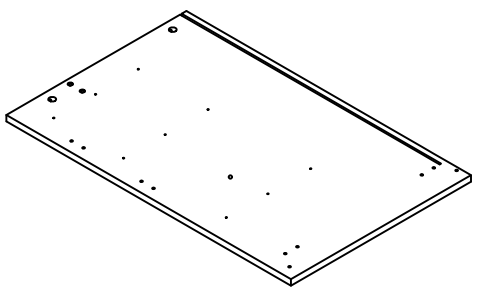


11	X1

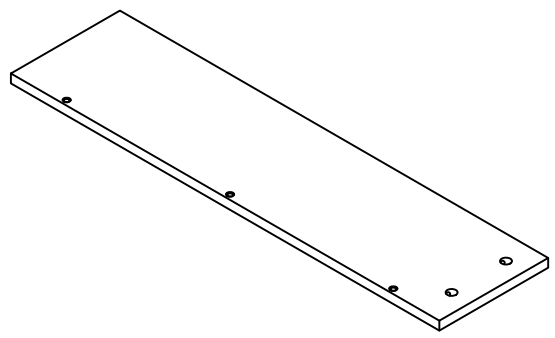


12	X1

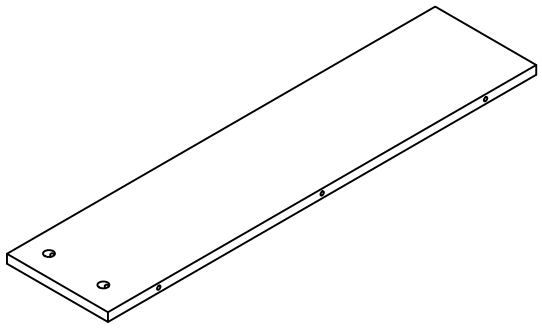


13	X1

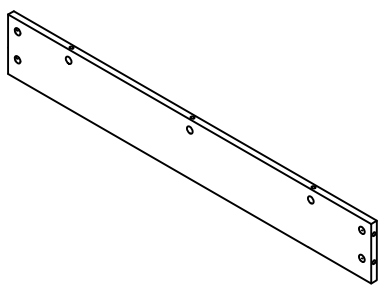


14	X1

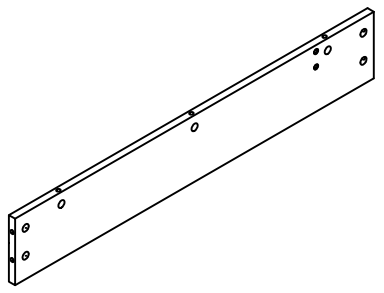


15	X1

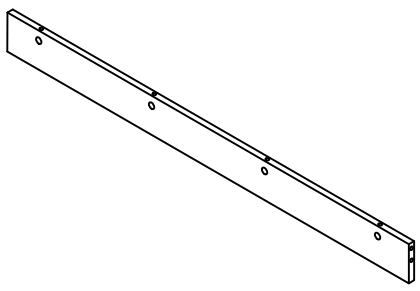


16	X1

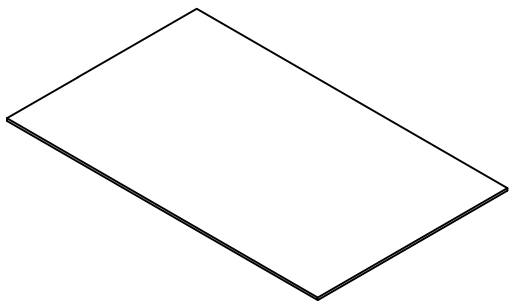


17	X2

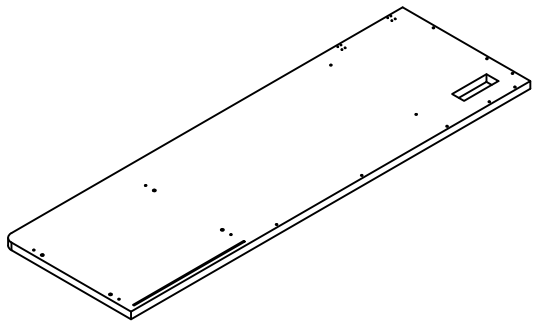


18	X1

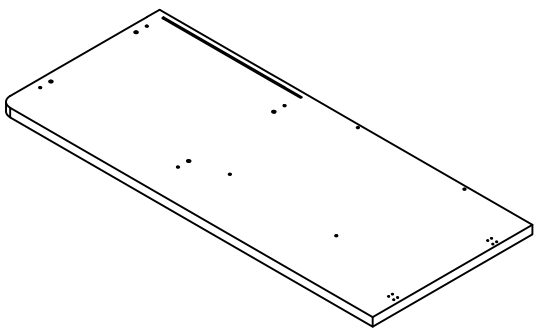


19	X1

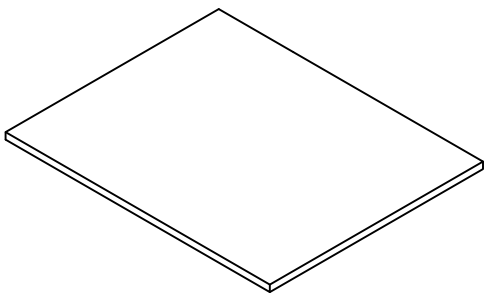


20	X1

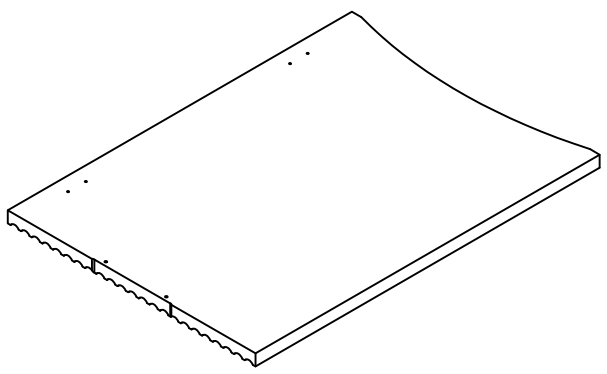


21	X1

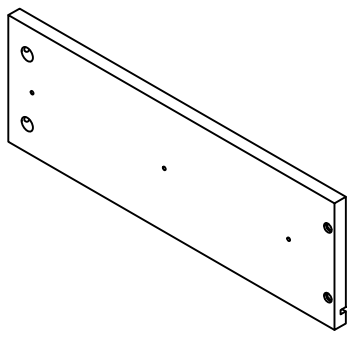


22	X3

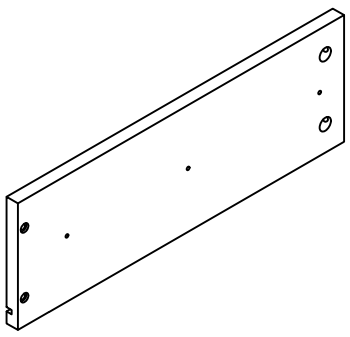


23	X3

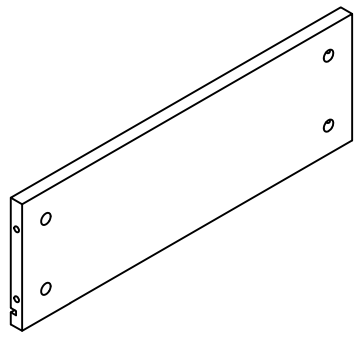


24	X3

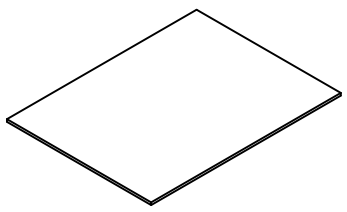


25	X3

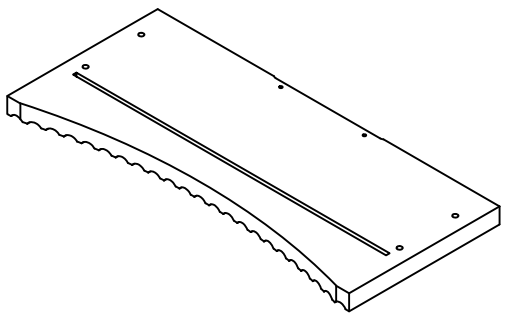


26	X3

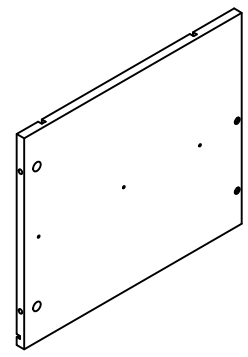


27	X1

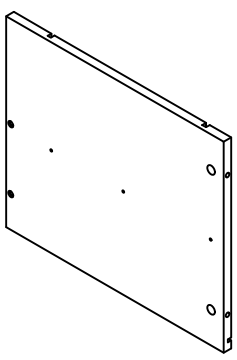


28	X1

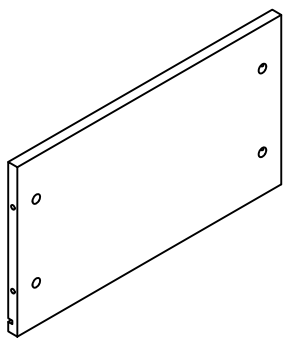

29	X1

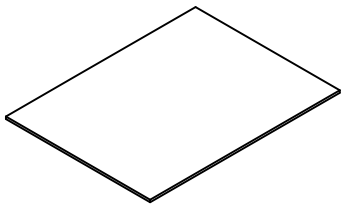



30	X1

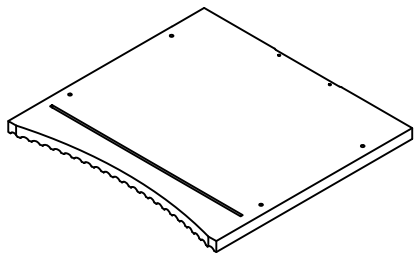


31	X1


Step:1

A		x4
S		x4

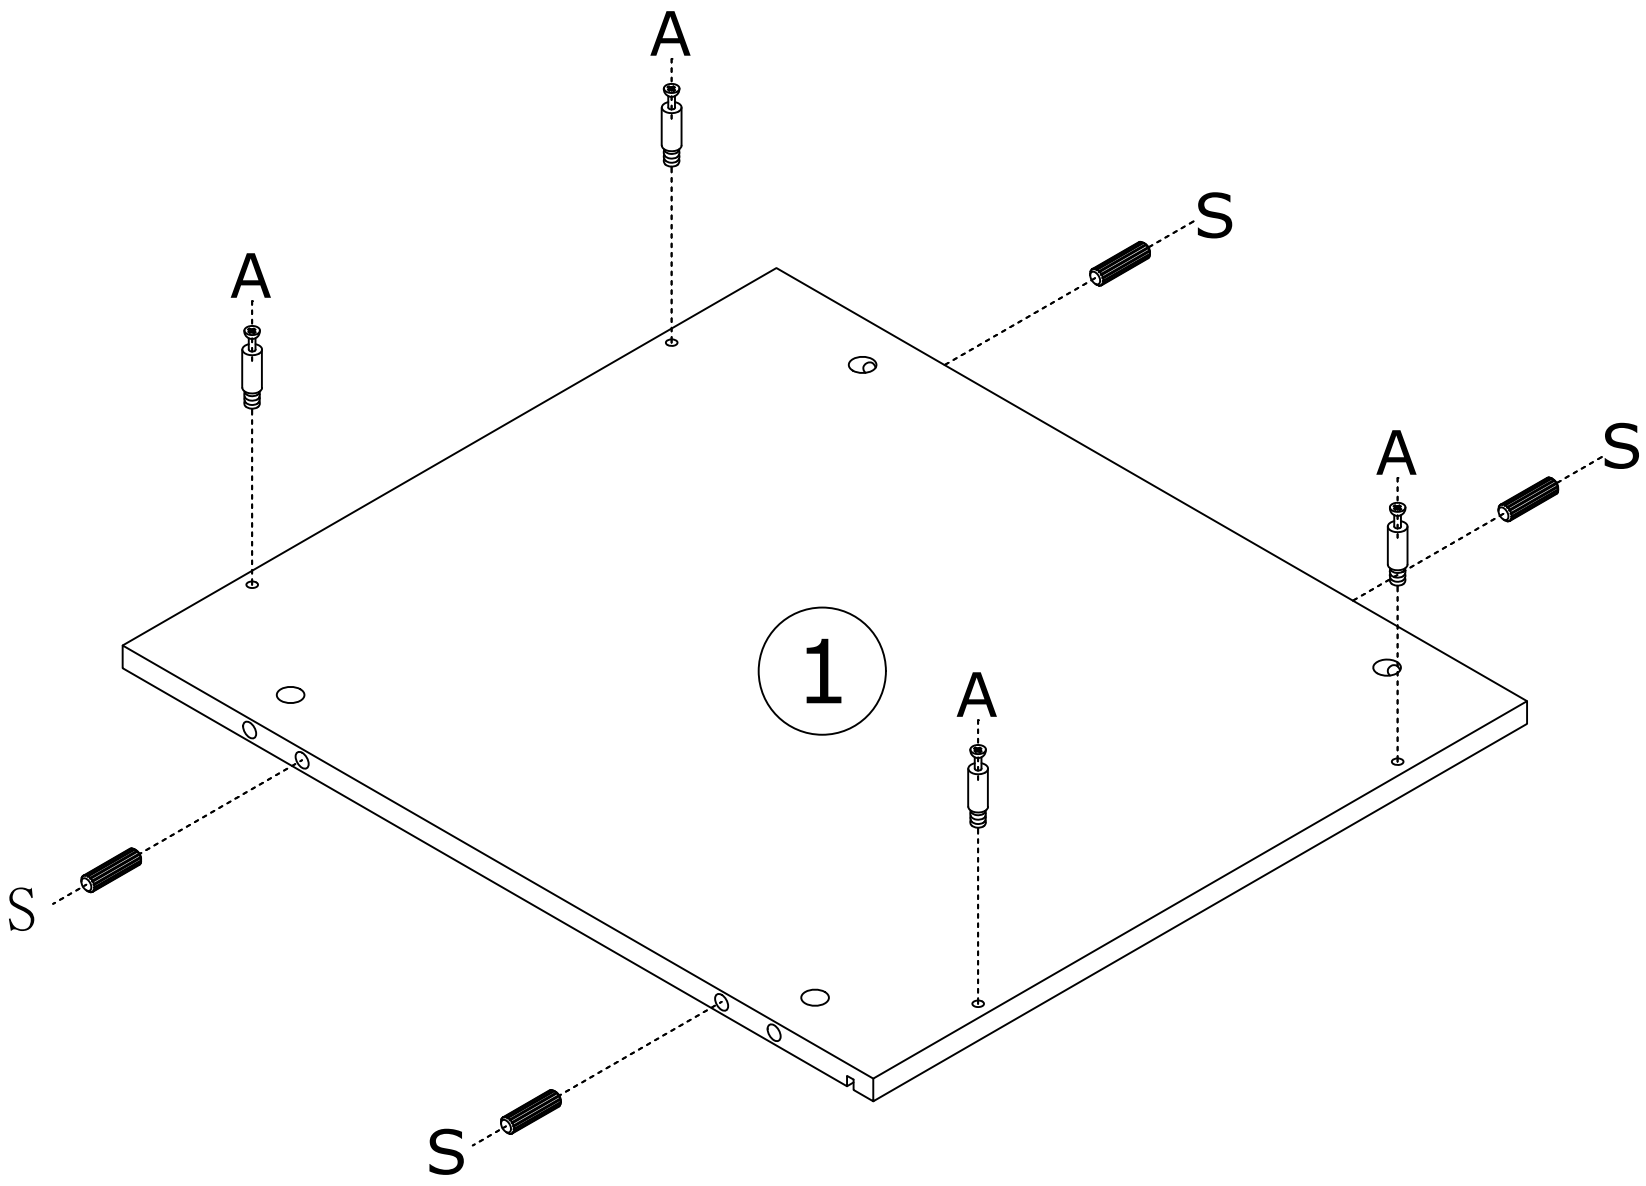



Step:2

C		x4

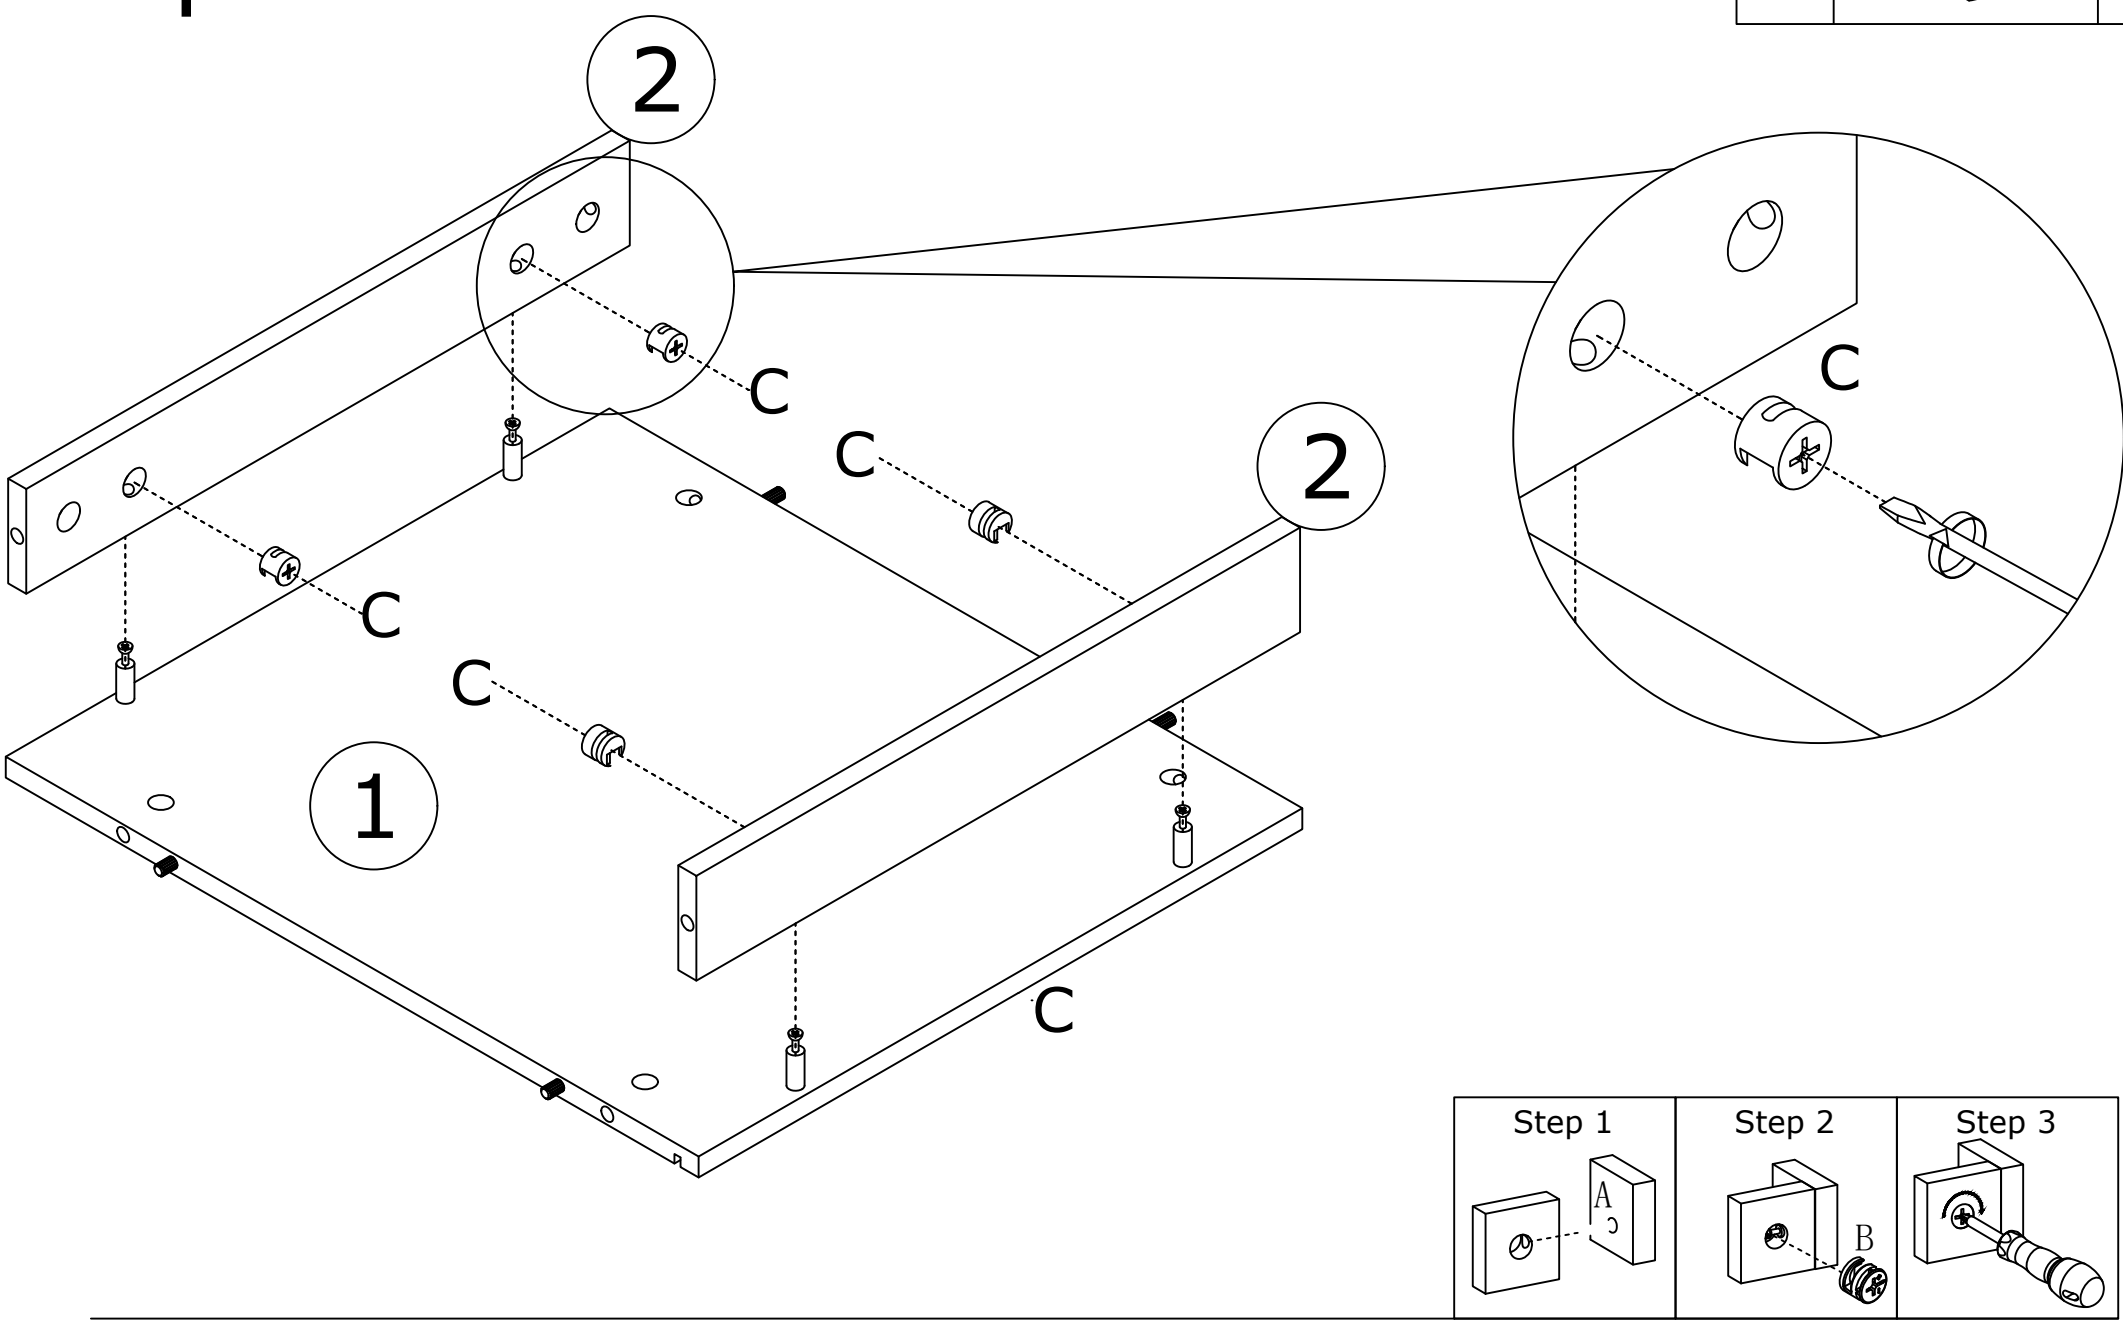


Step:3


A		x2
D		x2

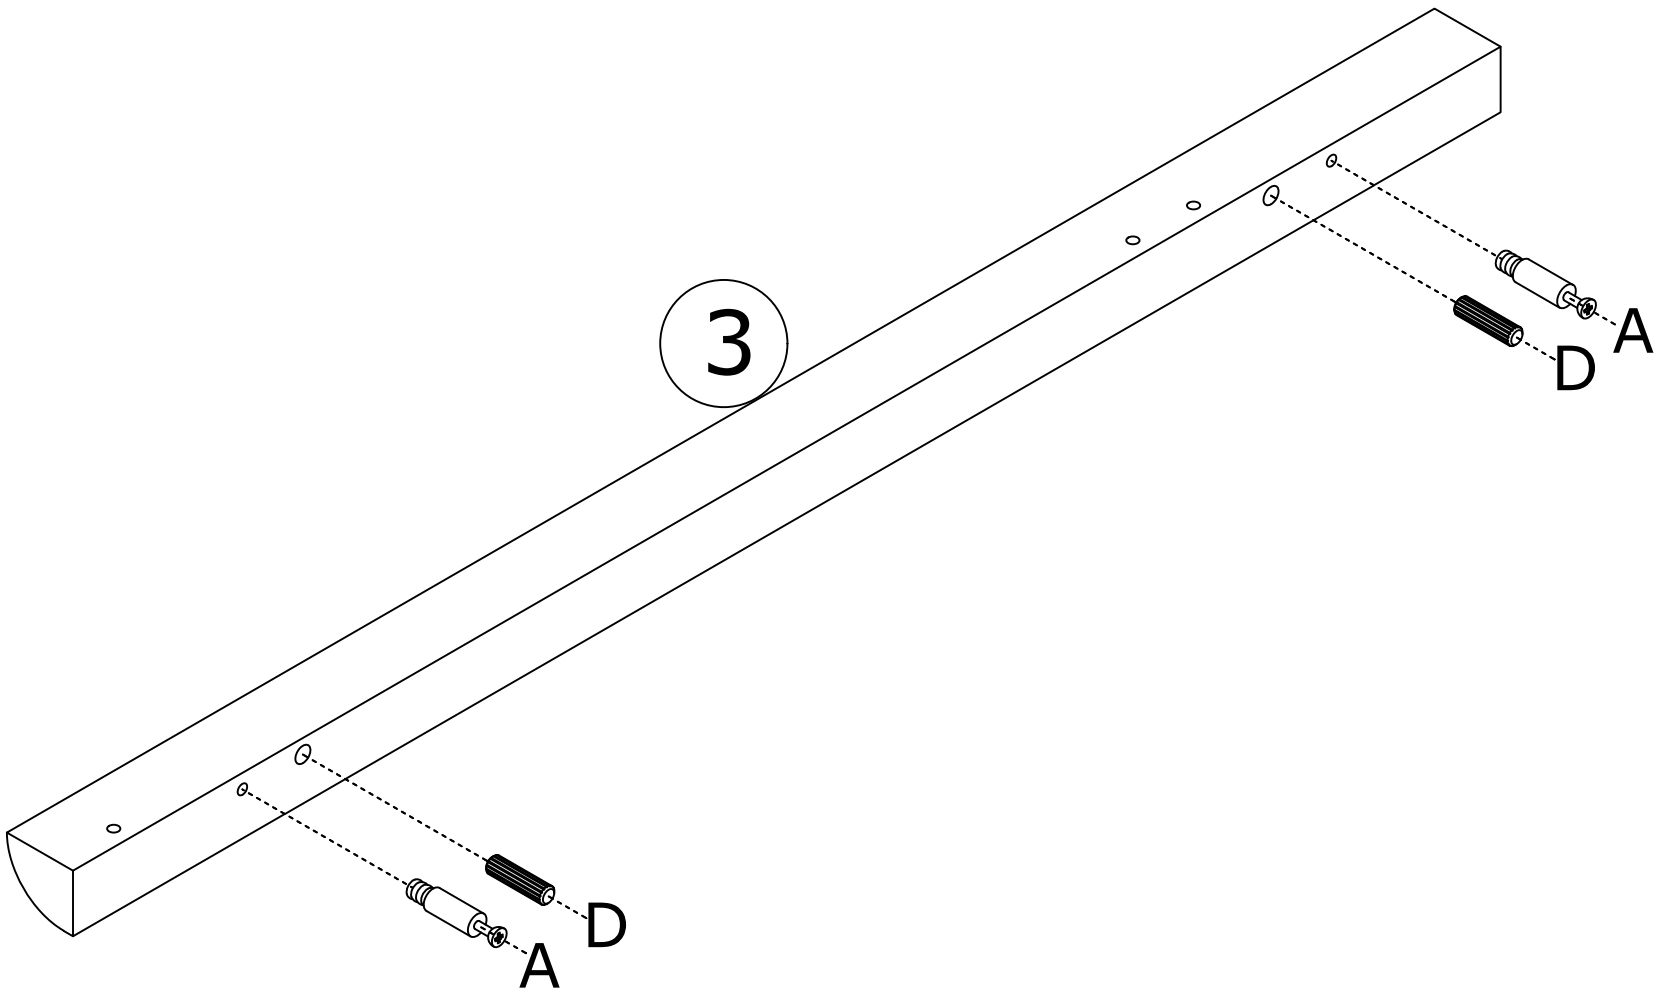


Step:4


B		x2

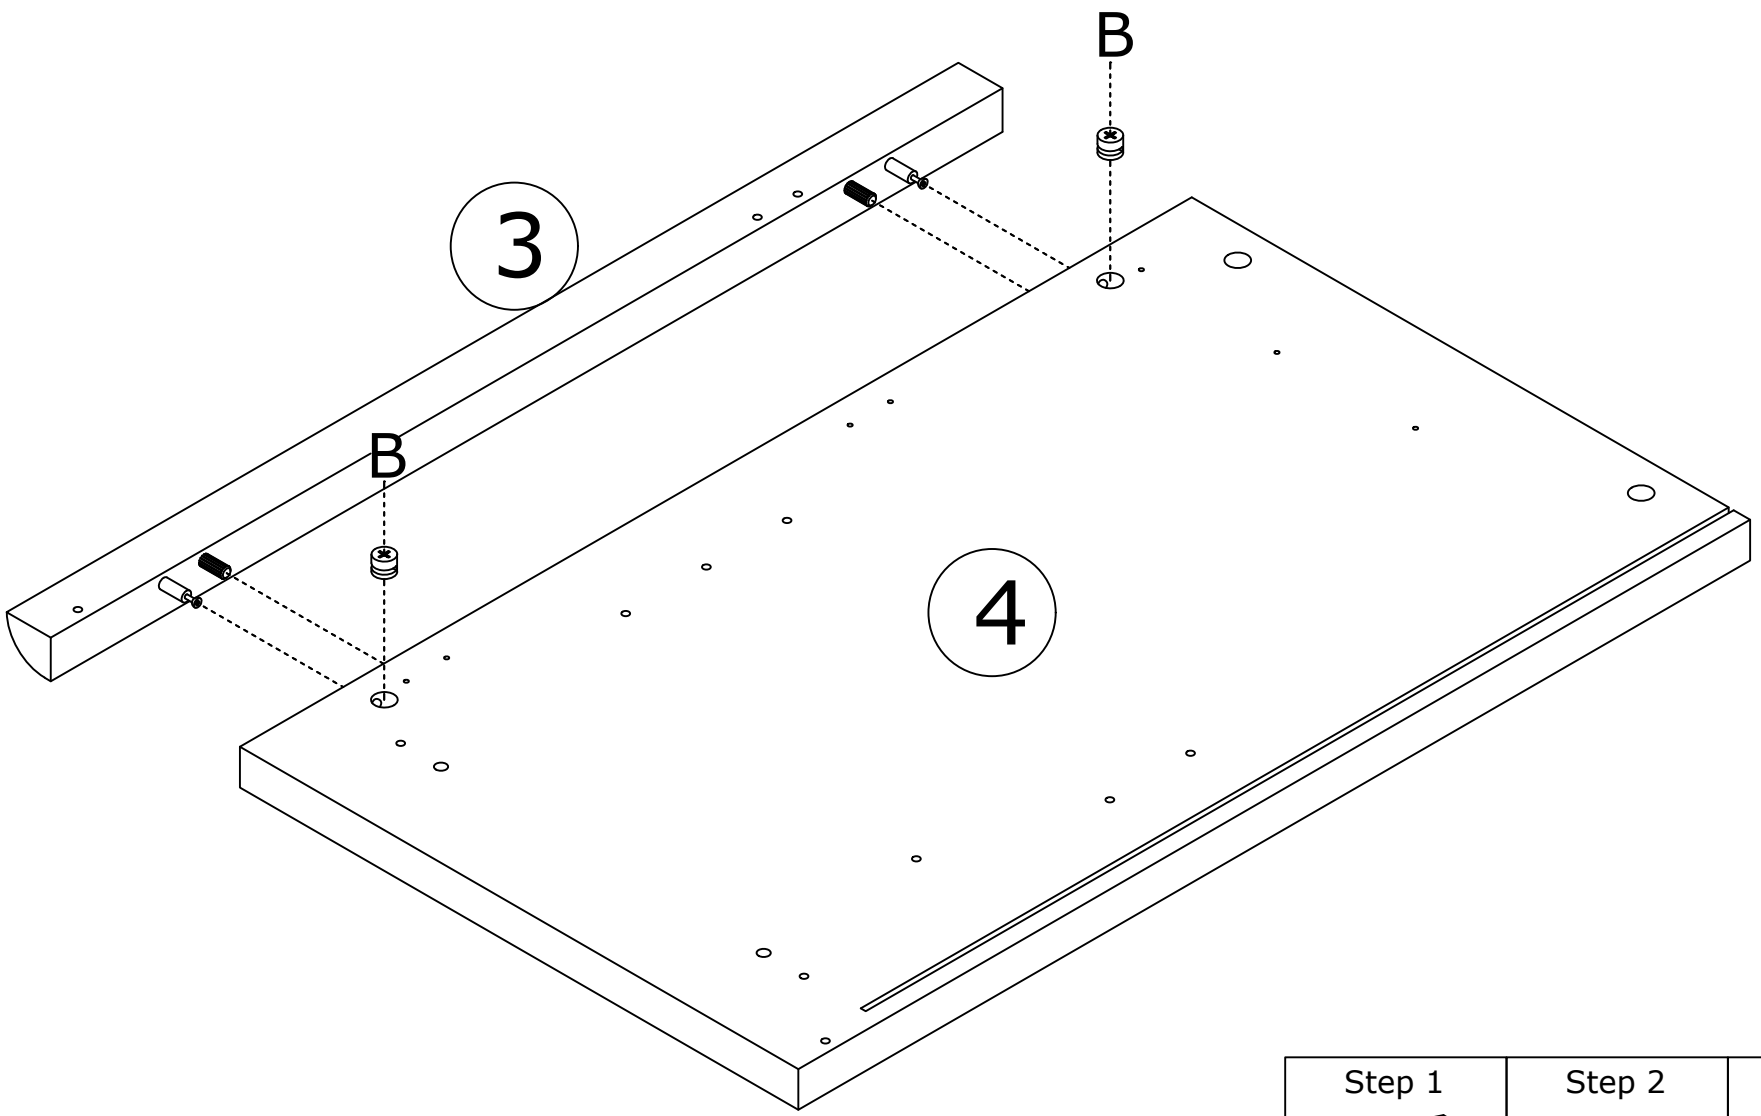

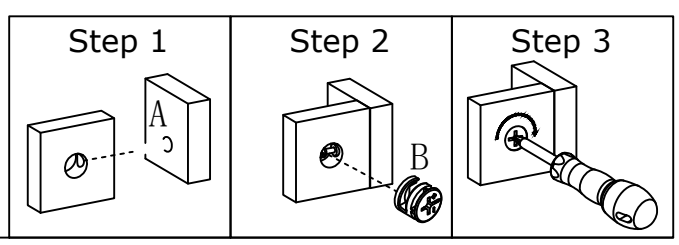

Step:5


A		x6

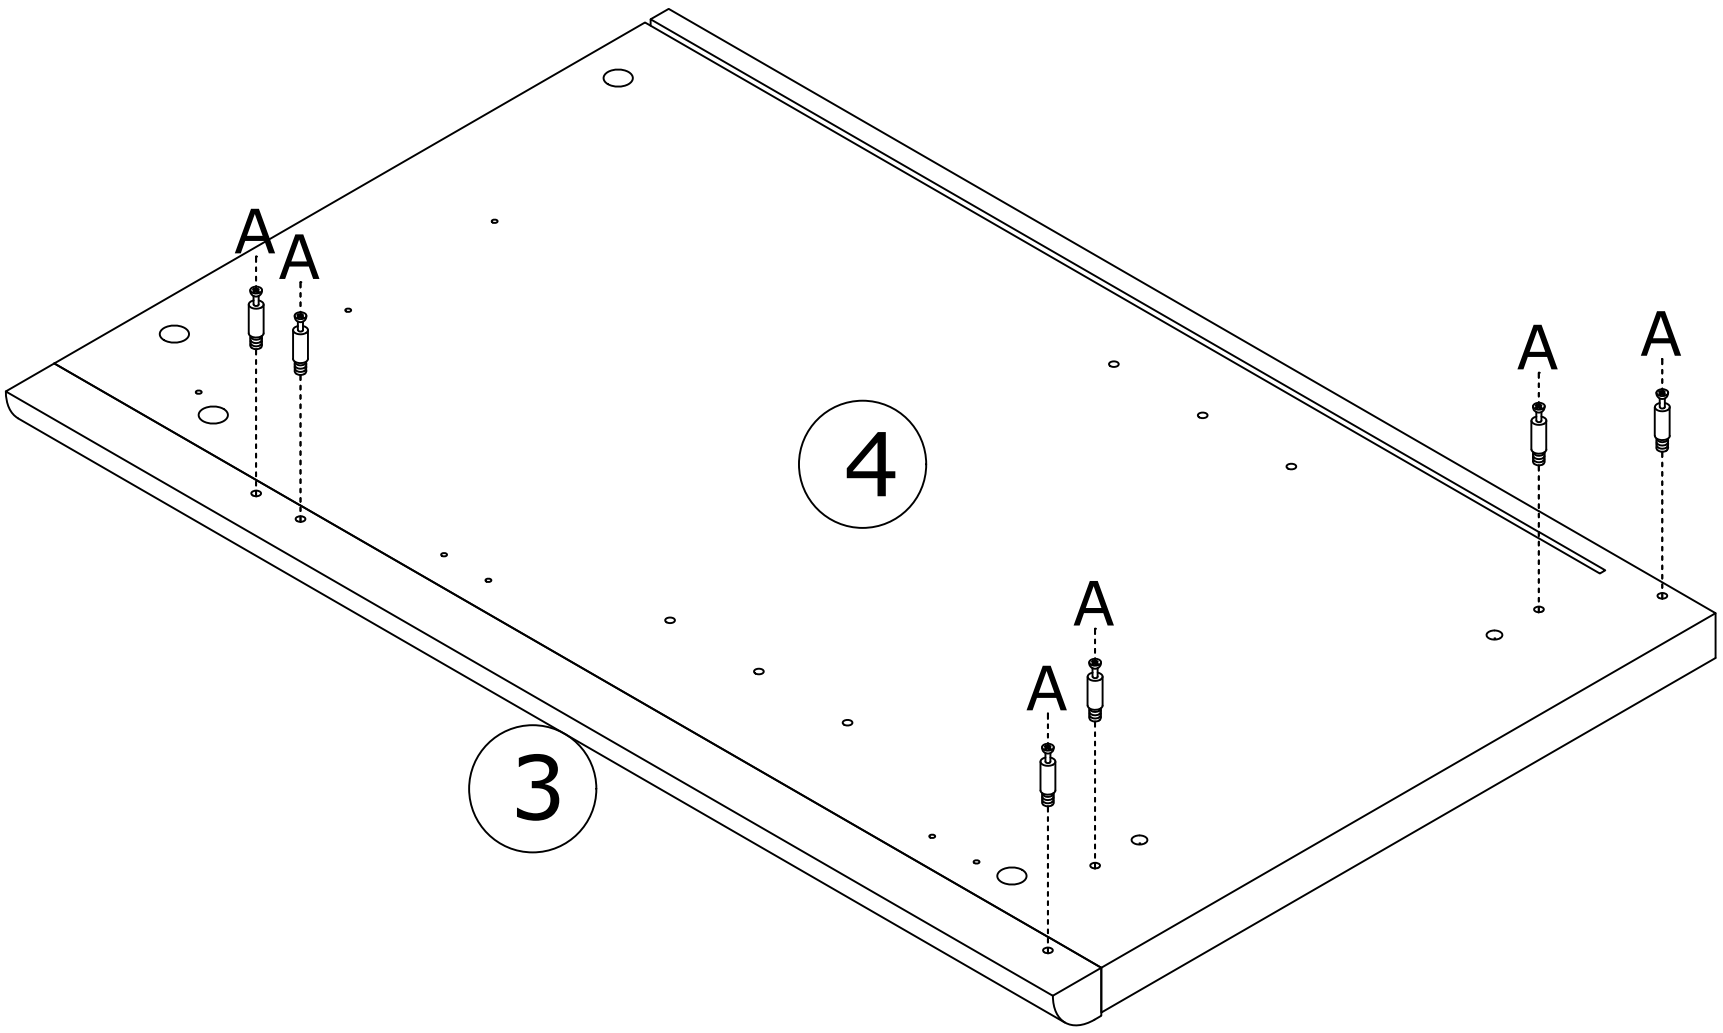



Step:6

To separate slide rail,


1) Pull the slide fully open so levers are visible.
2) Push DOWN the lever as shown.
3) Holding levers in place, pull two sections until separa

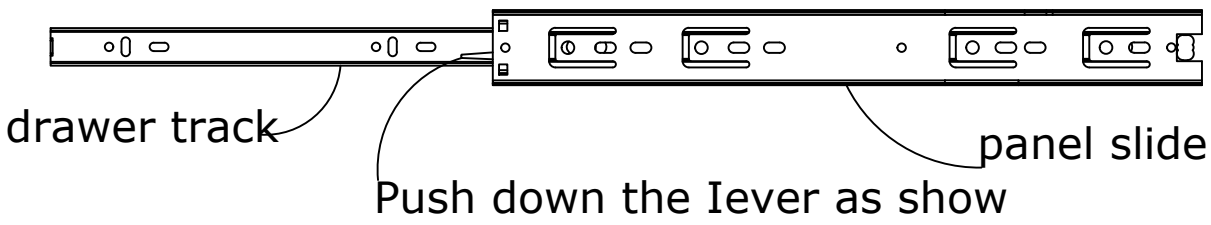


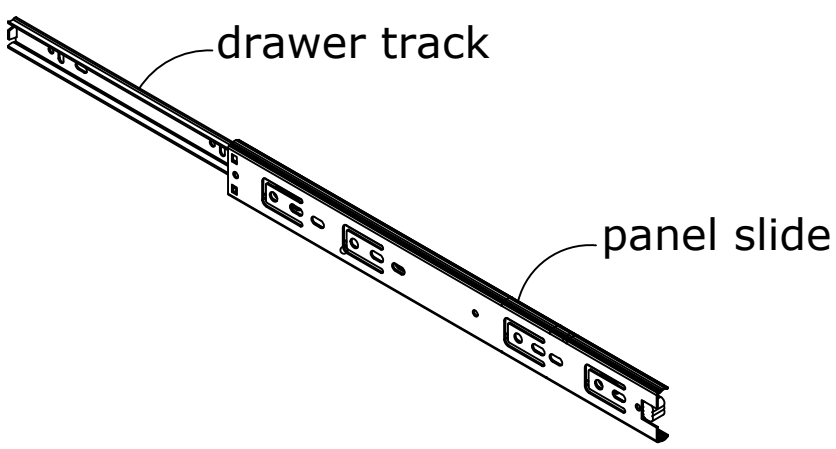


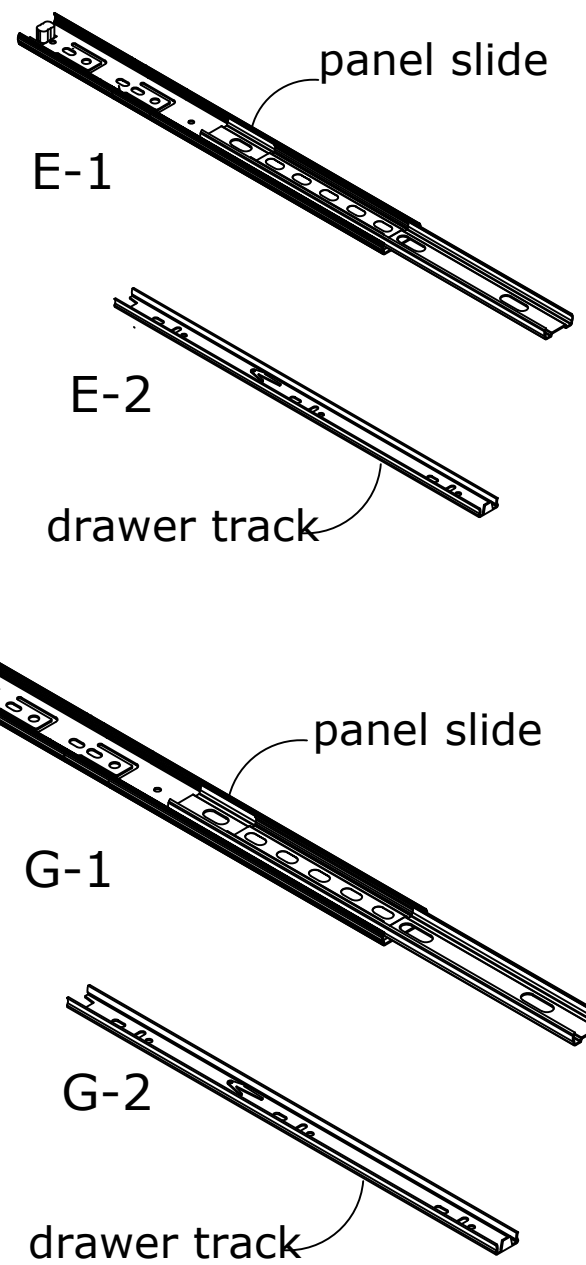


Step:7

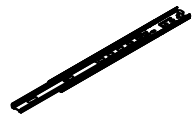
E-1		x1
F		x3

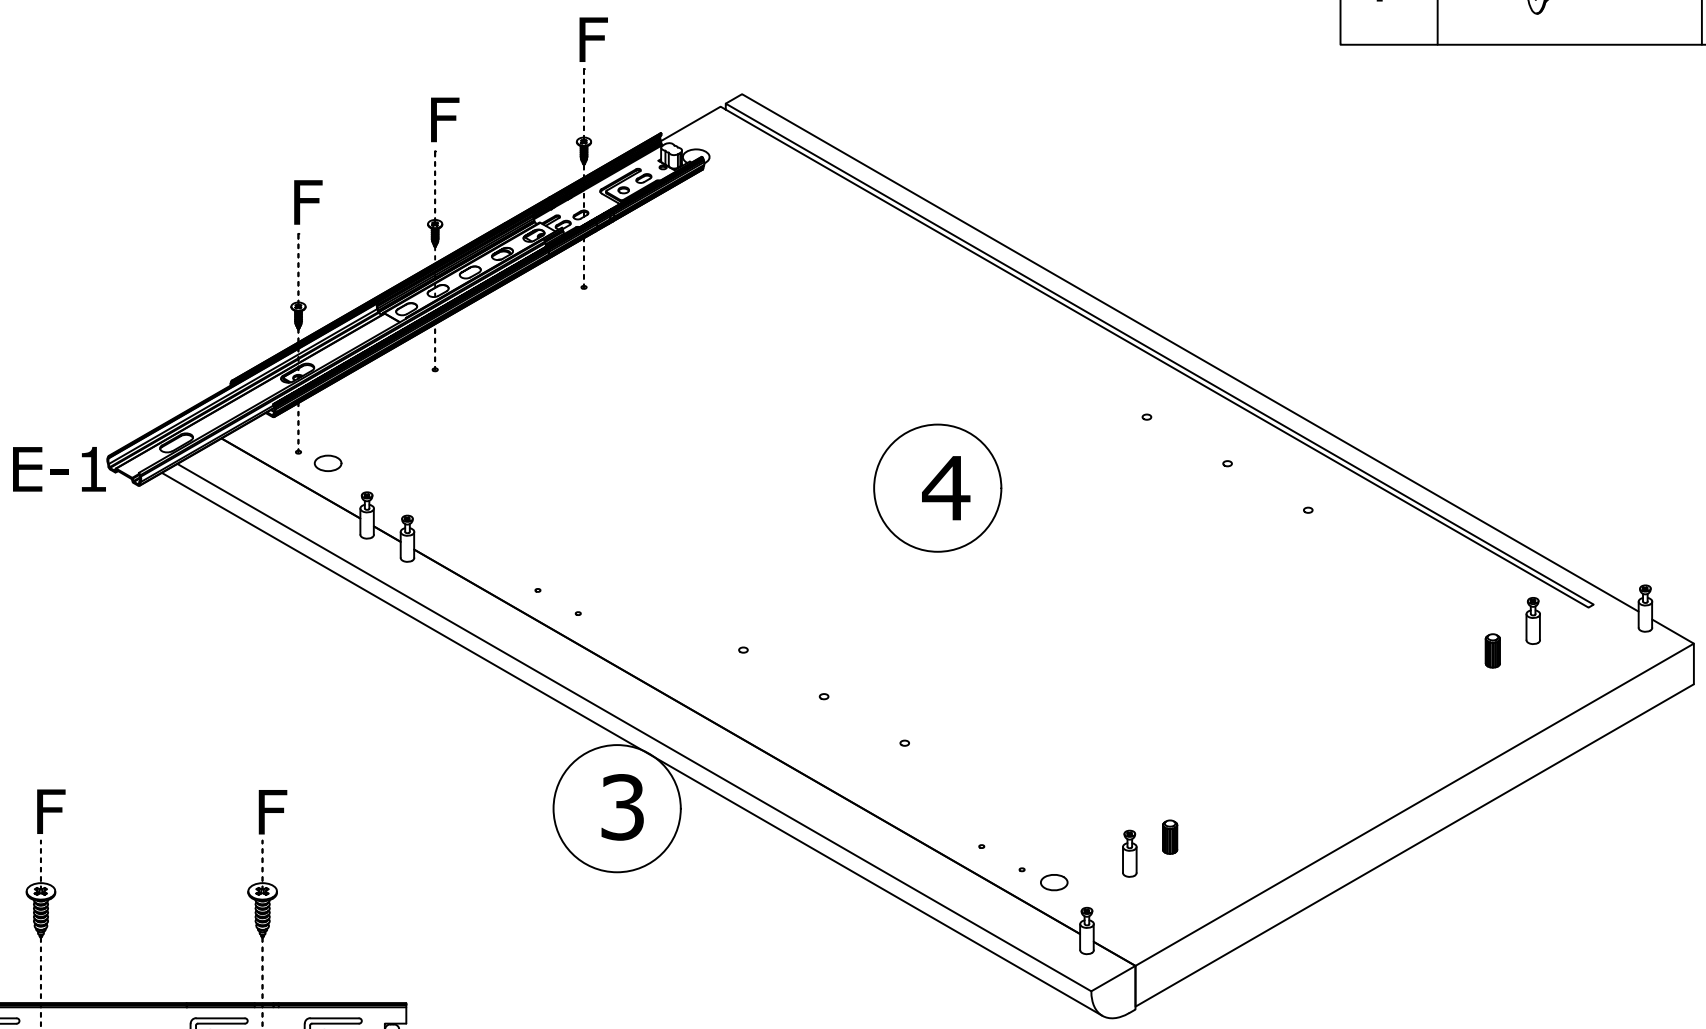


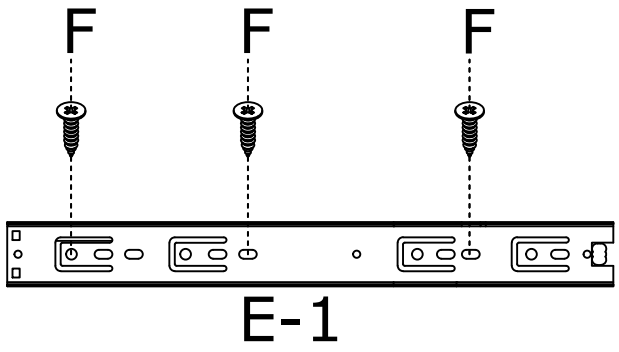



Step:8

A		x6

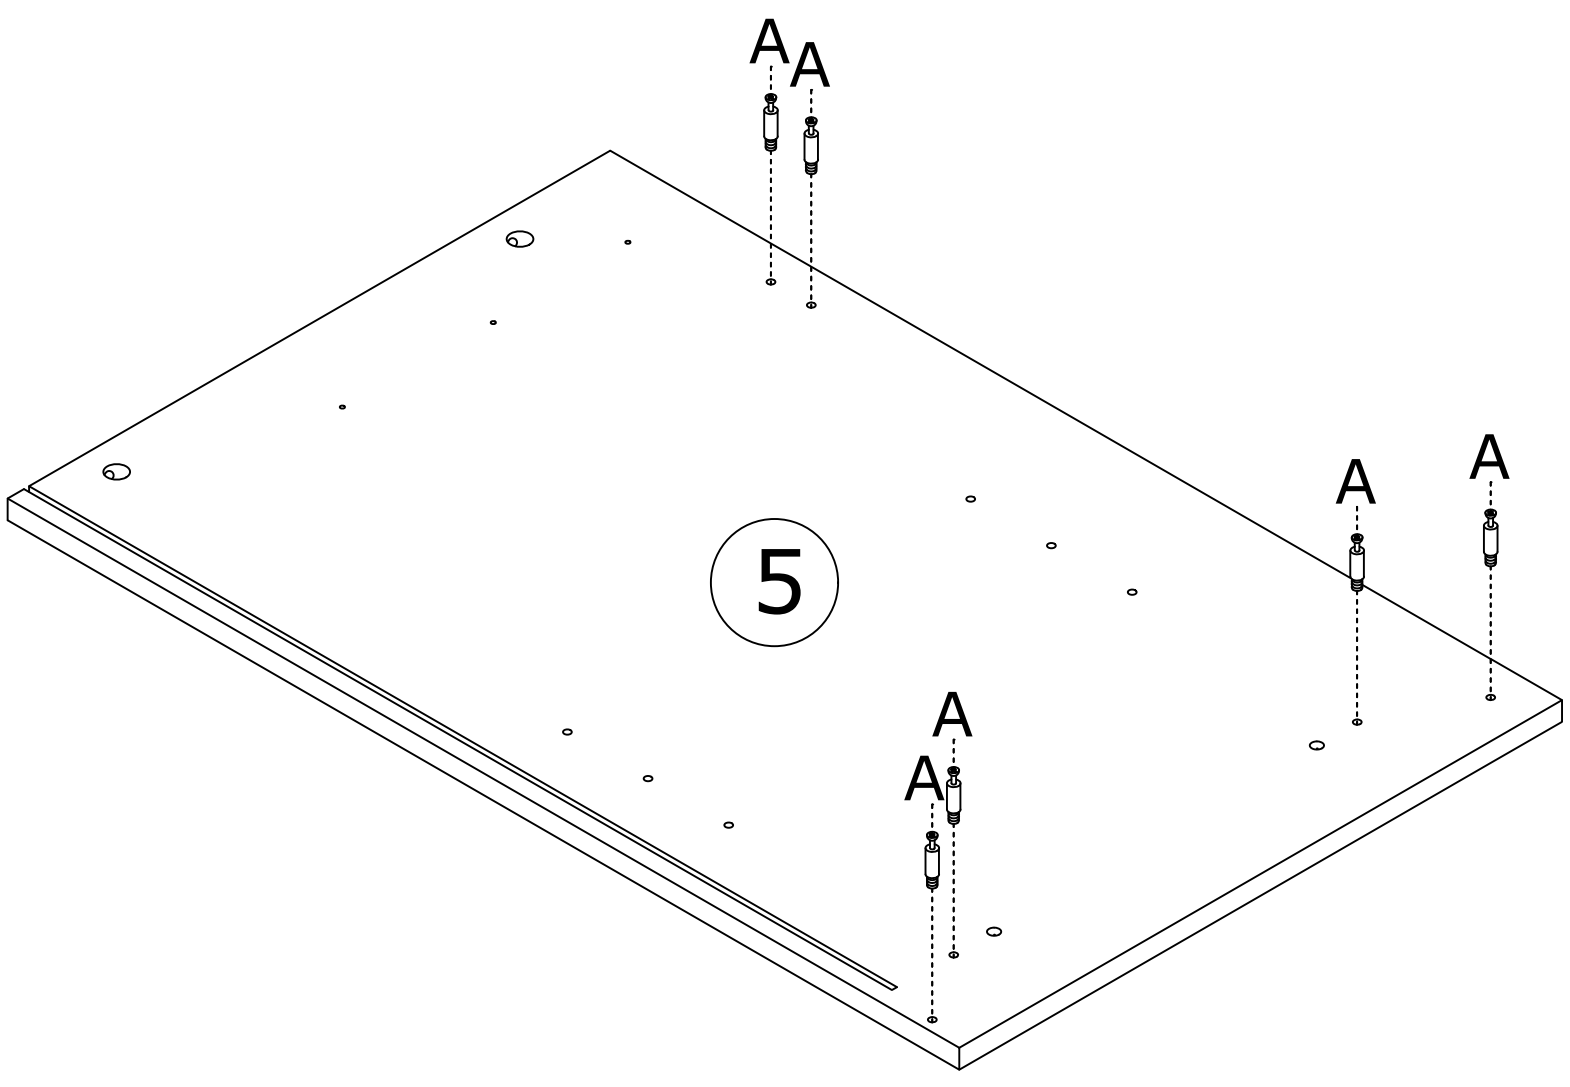


Step:9

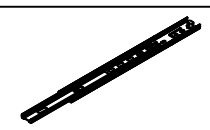
E-1		x1
F		x3

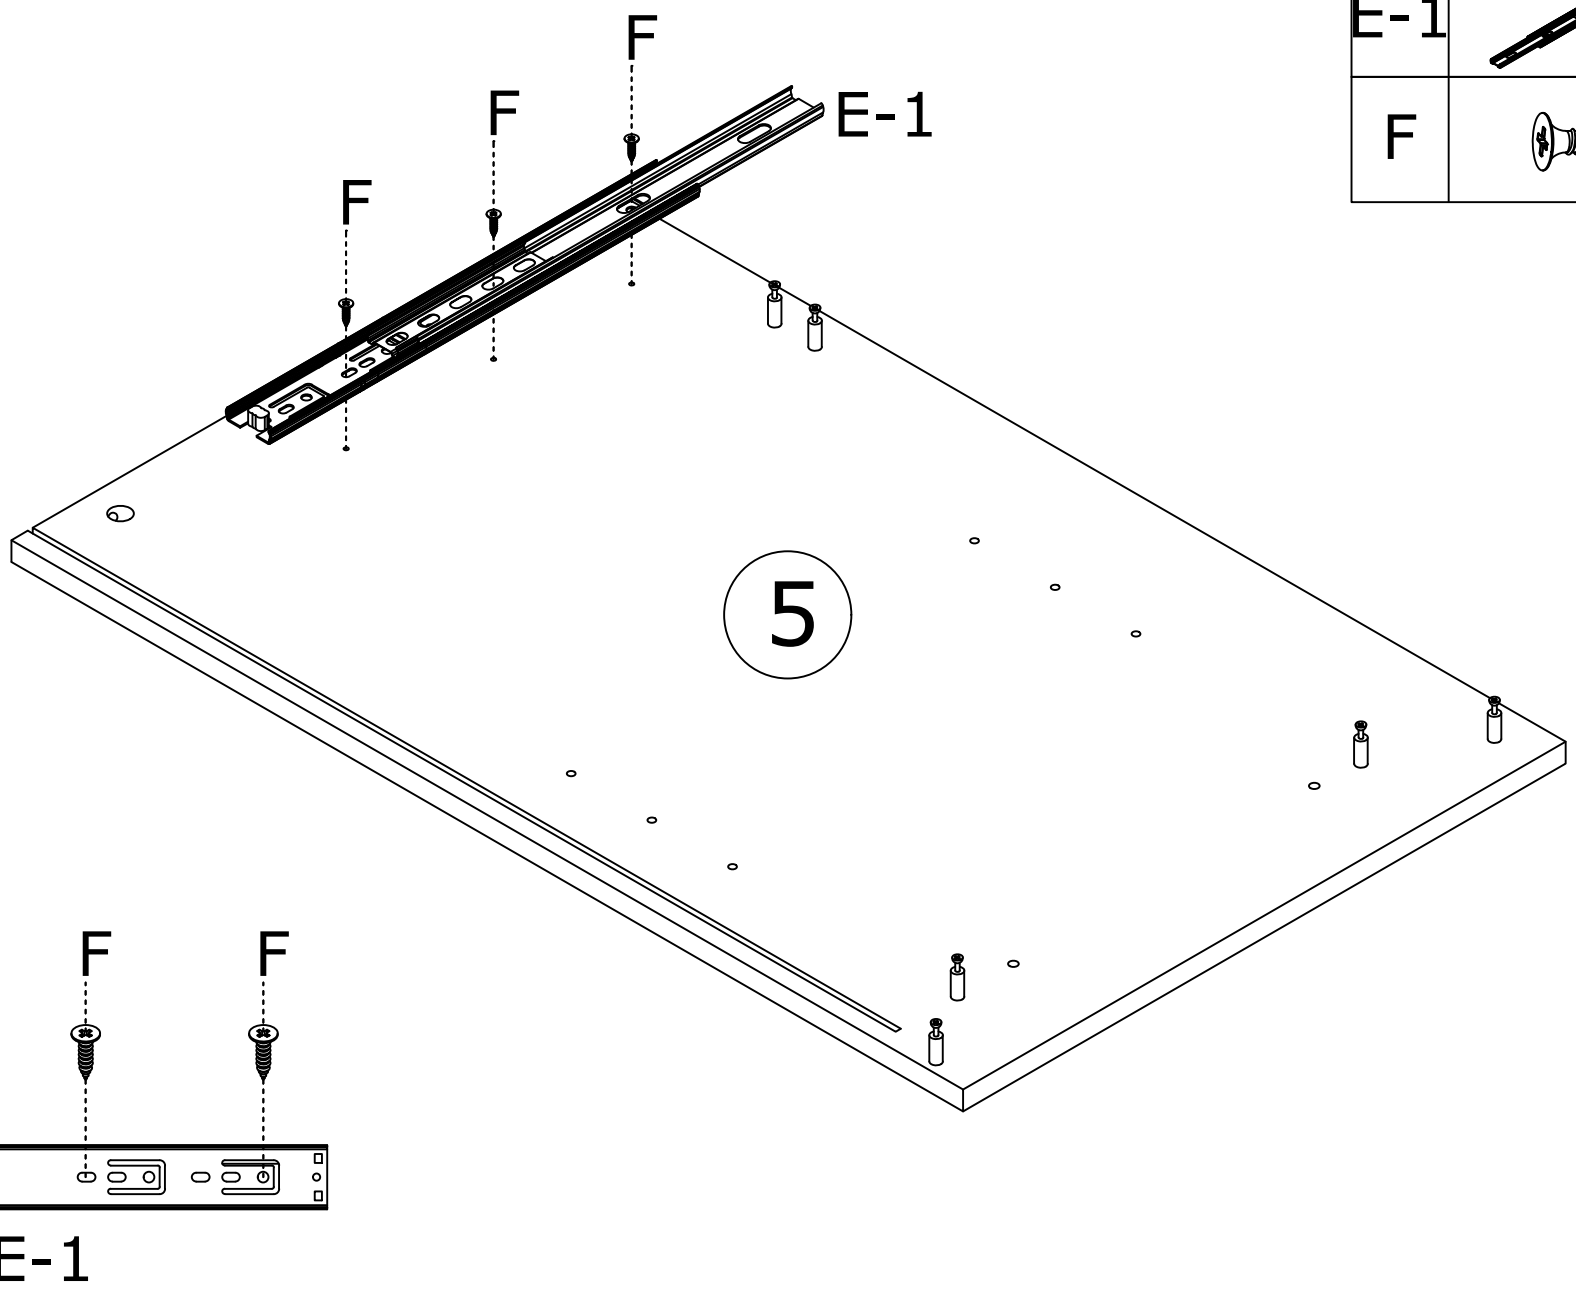


Step:10


C		x12

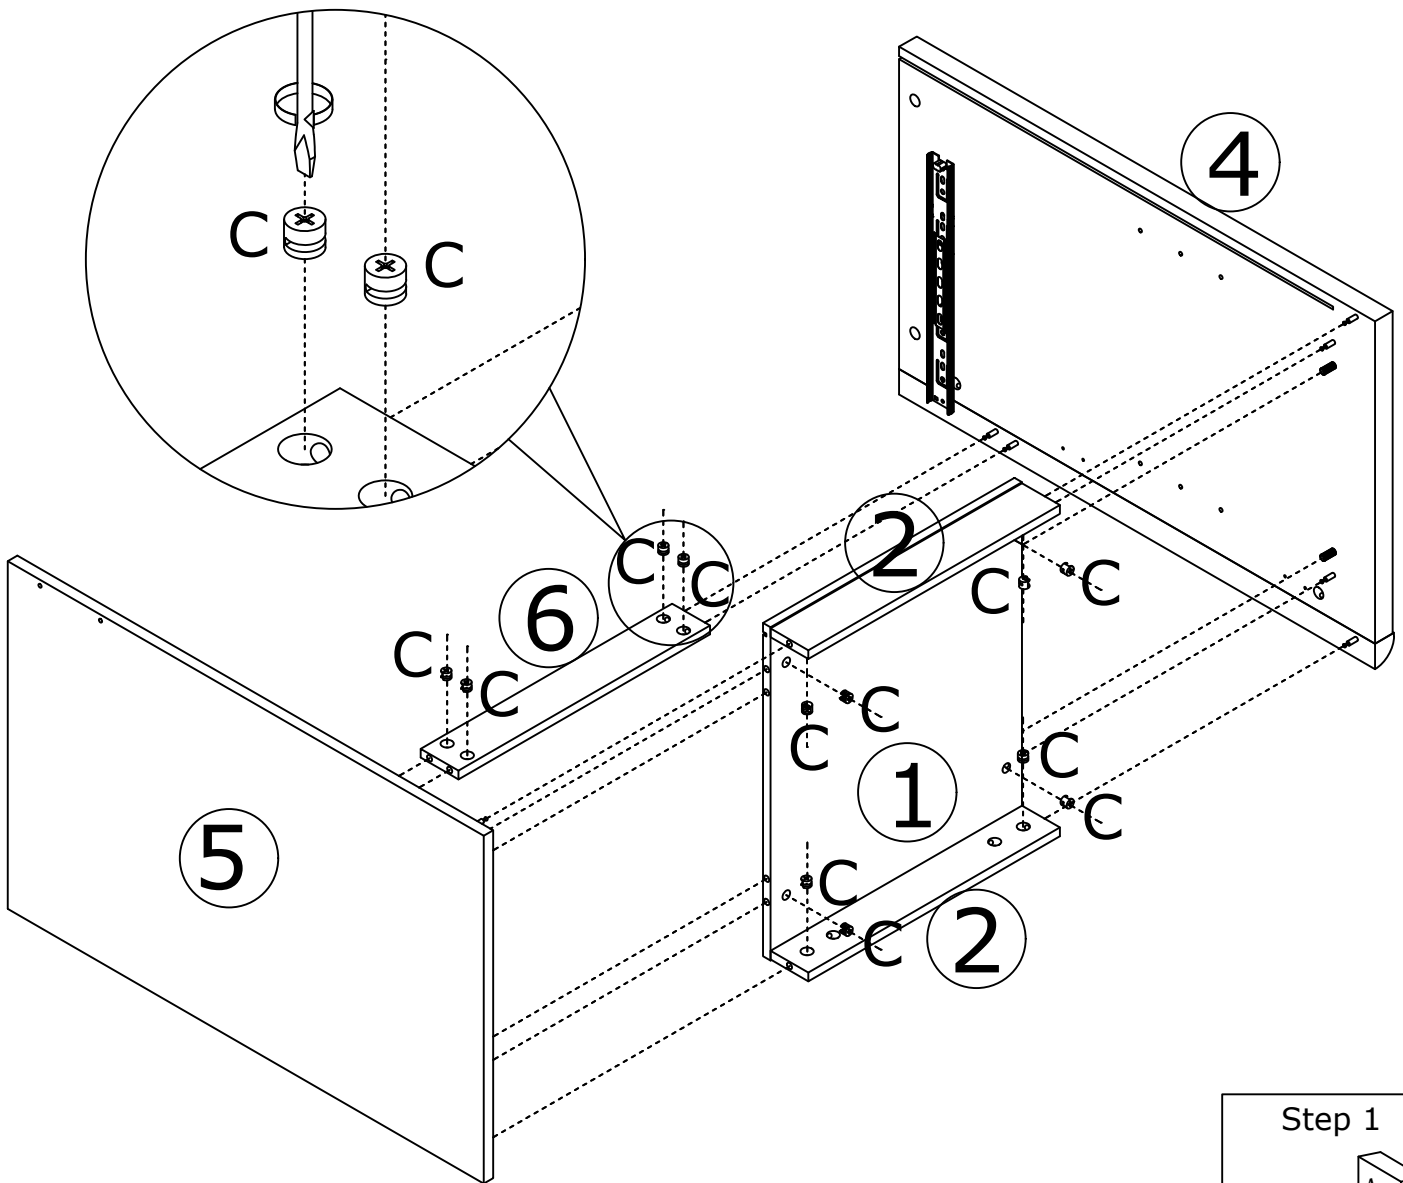

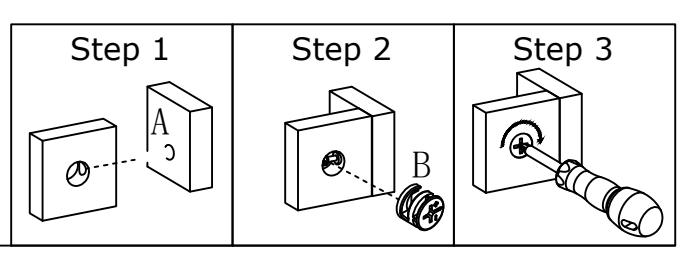



Step:11

A		x2

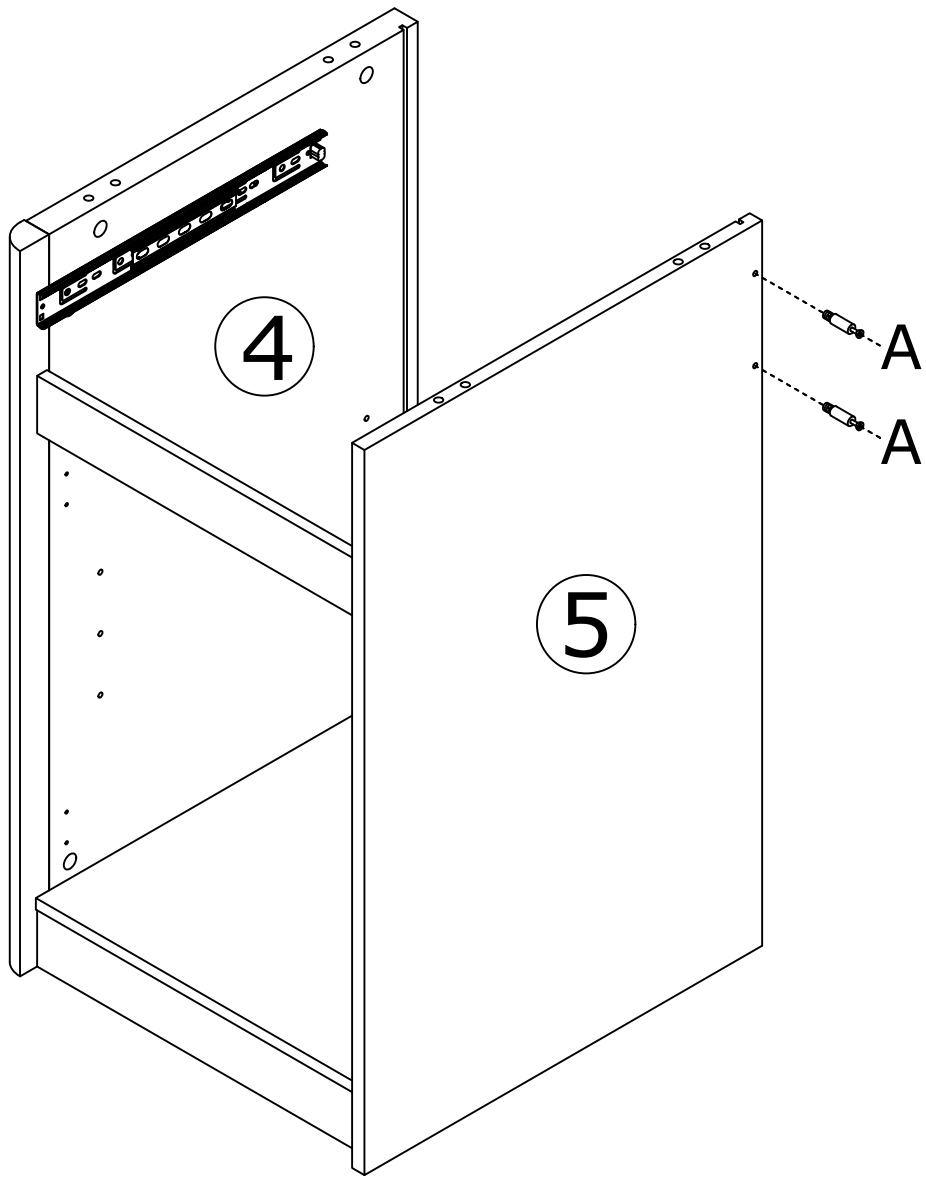

Step:12

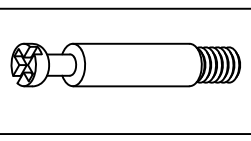
A		x4

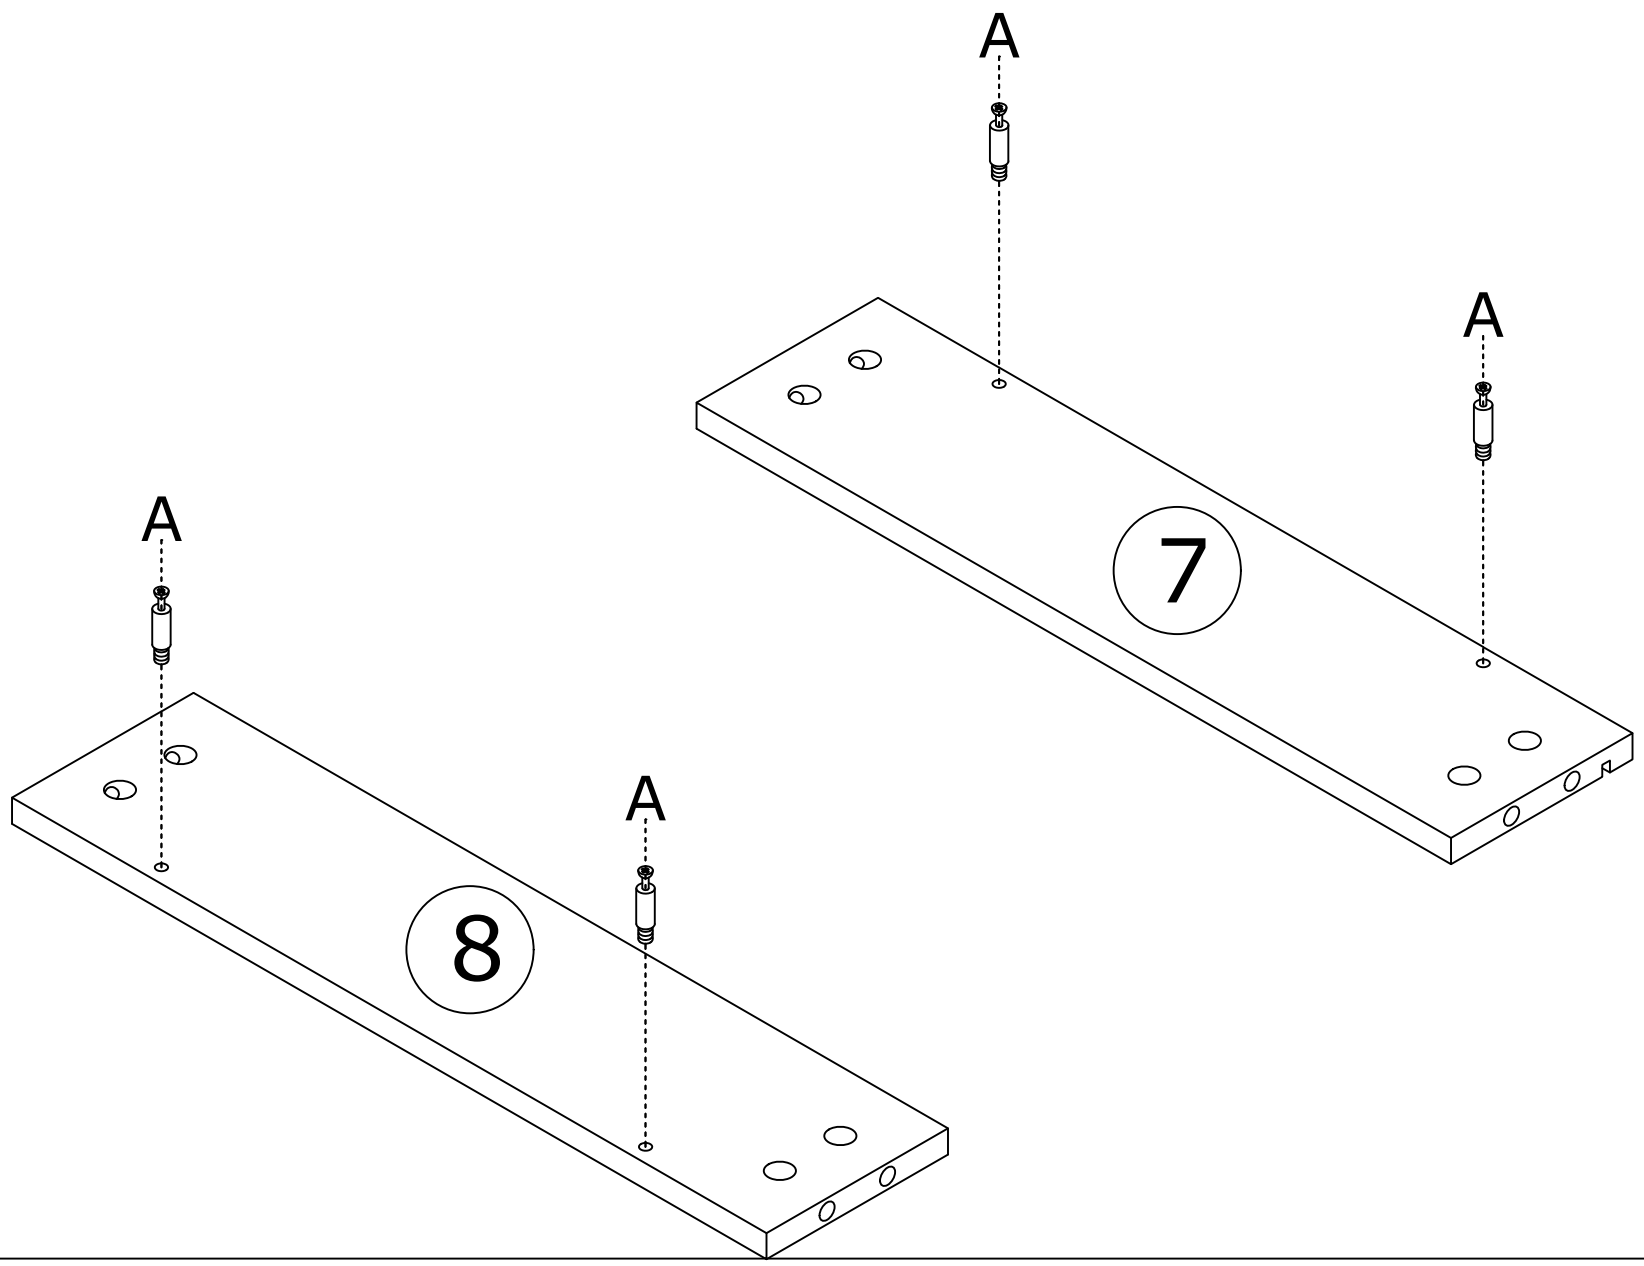


Step:13


C		x4


Step:14


A		x2
D		x2

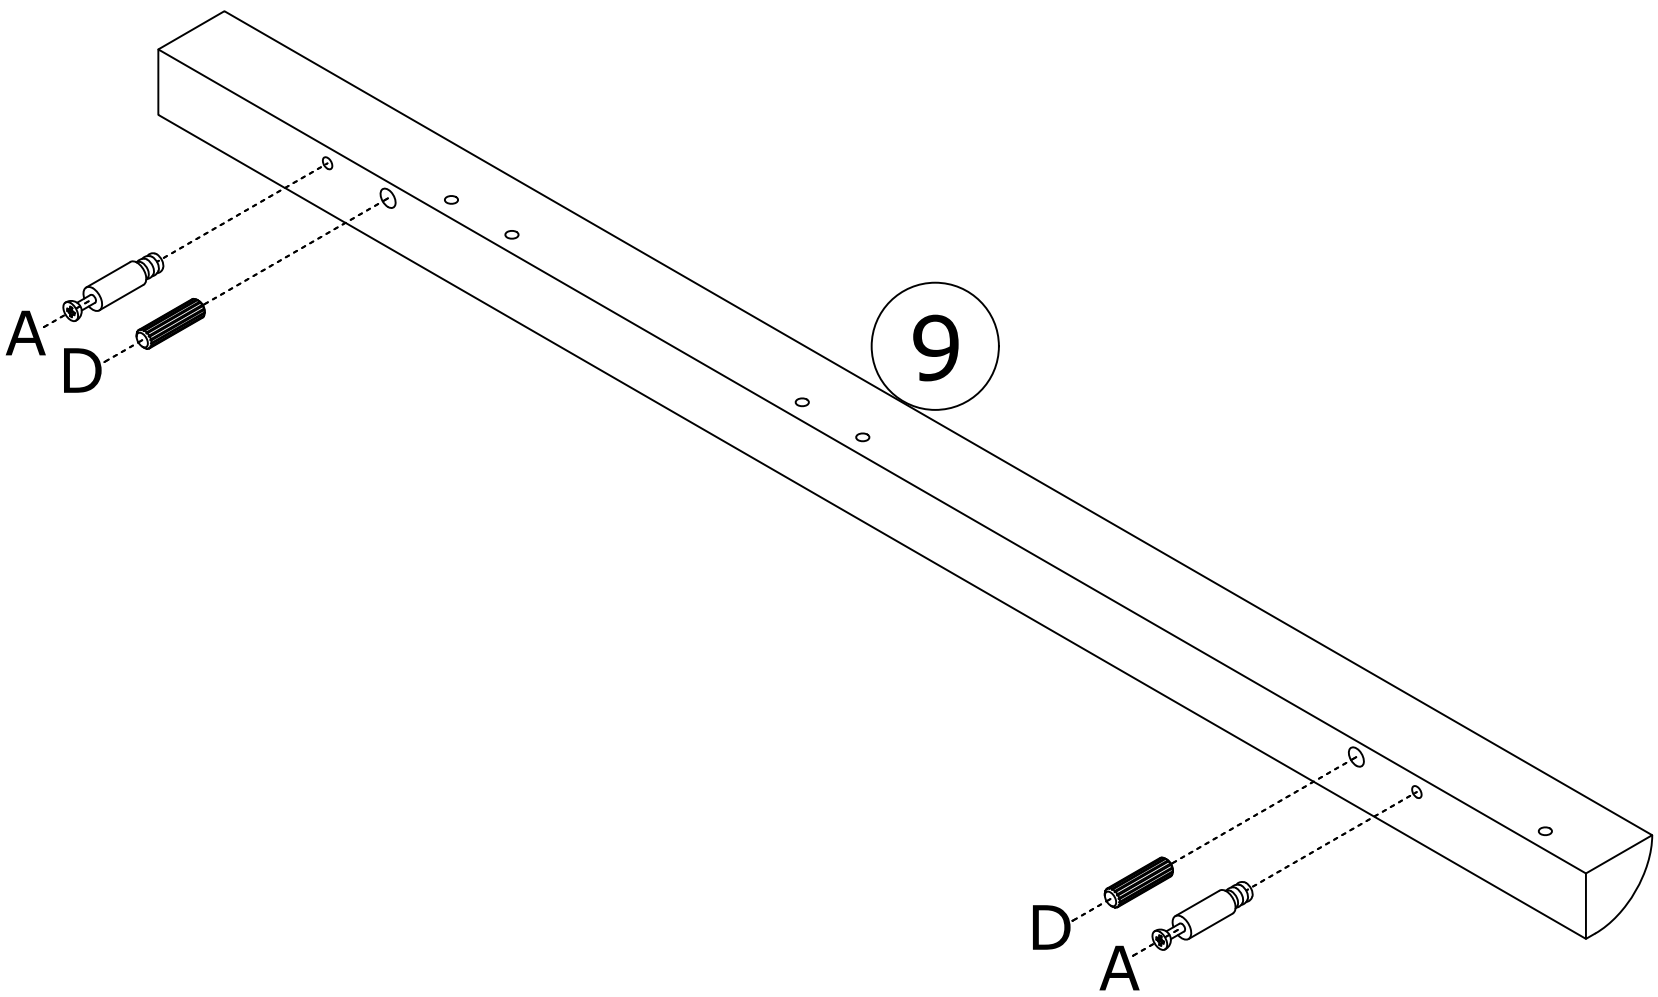


Step:15


B		x2

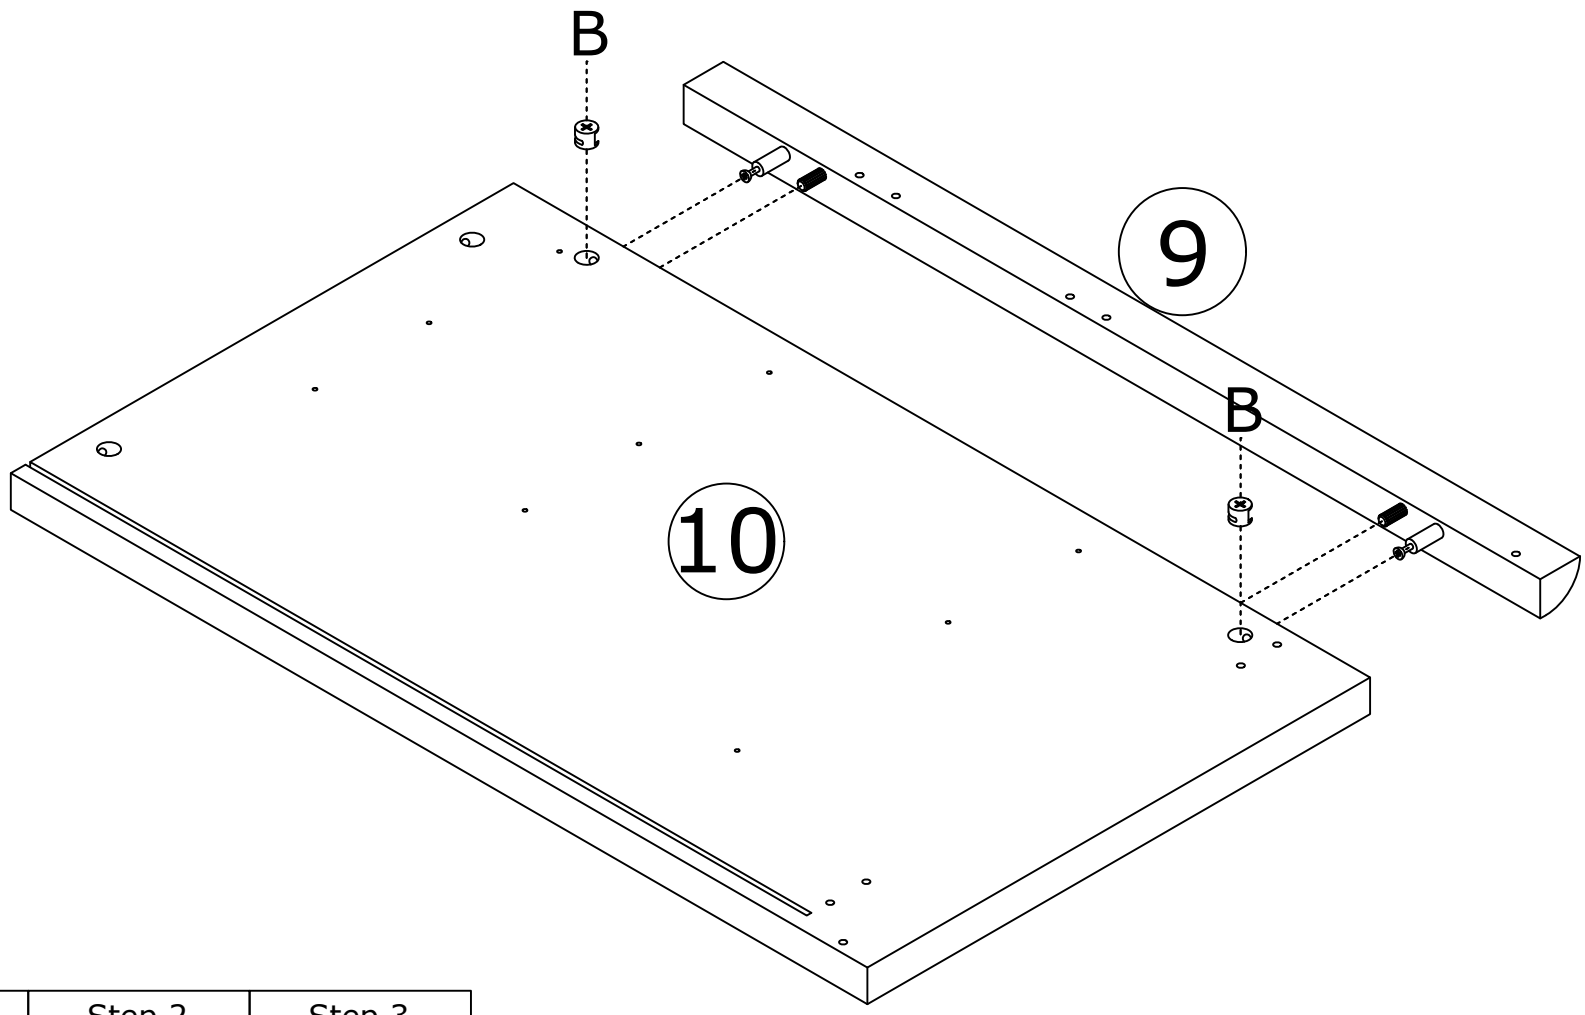

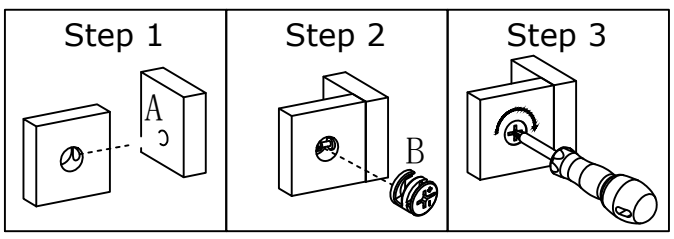



Step:16


A		x10

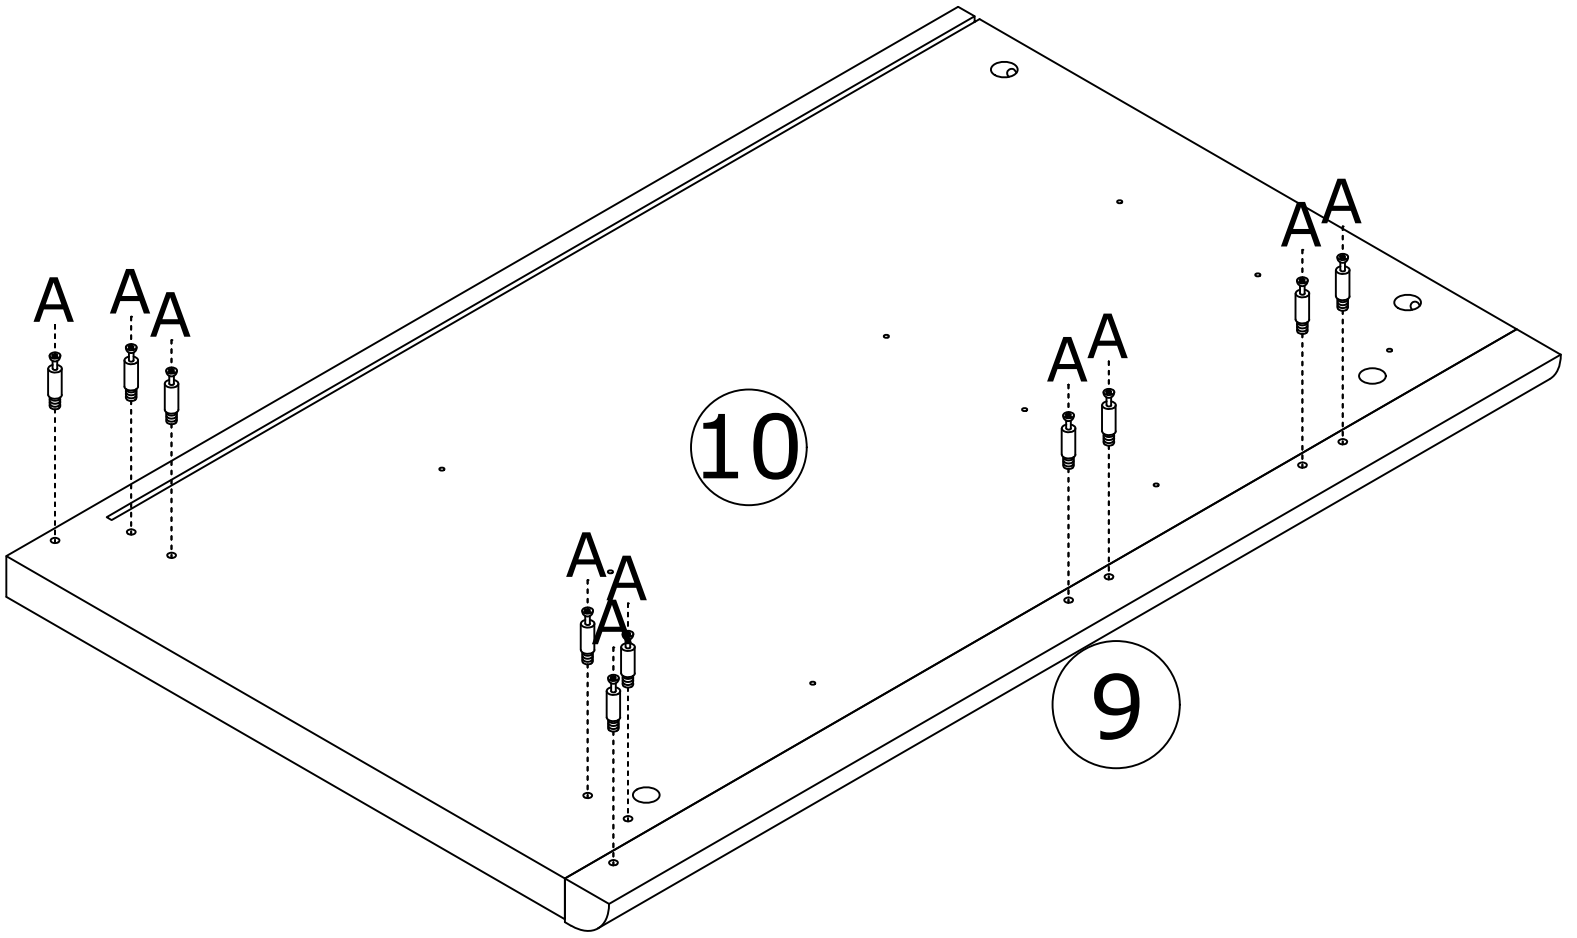


Step:17

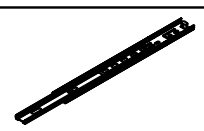E-1		x2
G-1		x1
F		x9

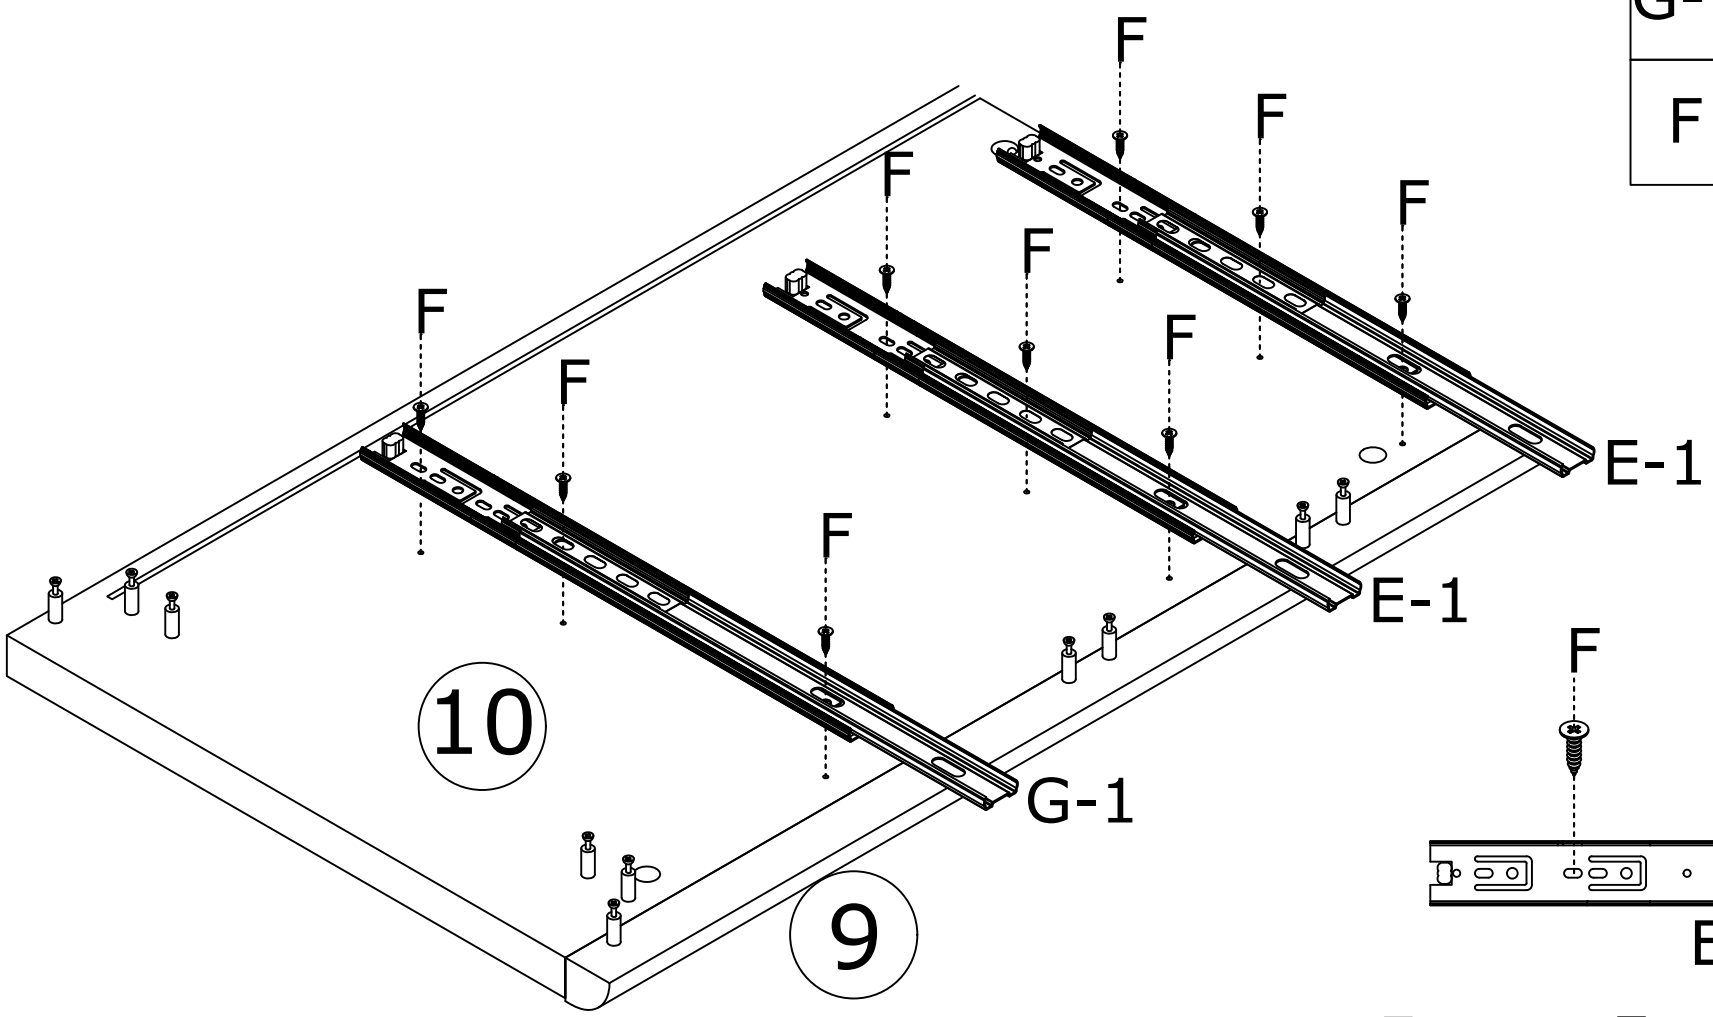


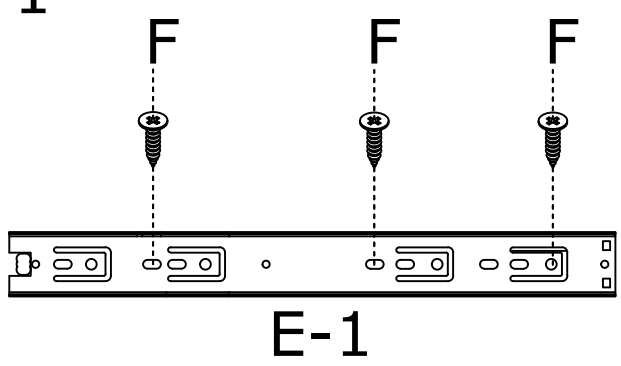


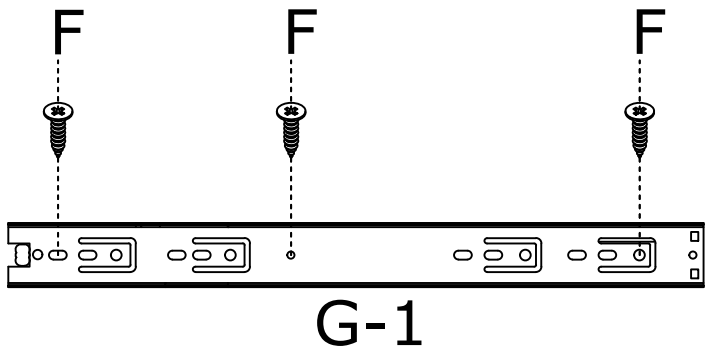



Step:18


A		x10

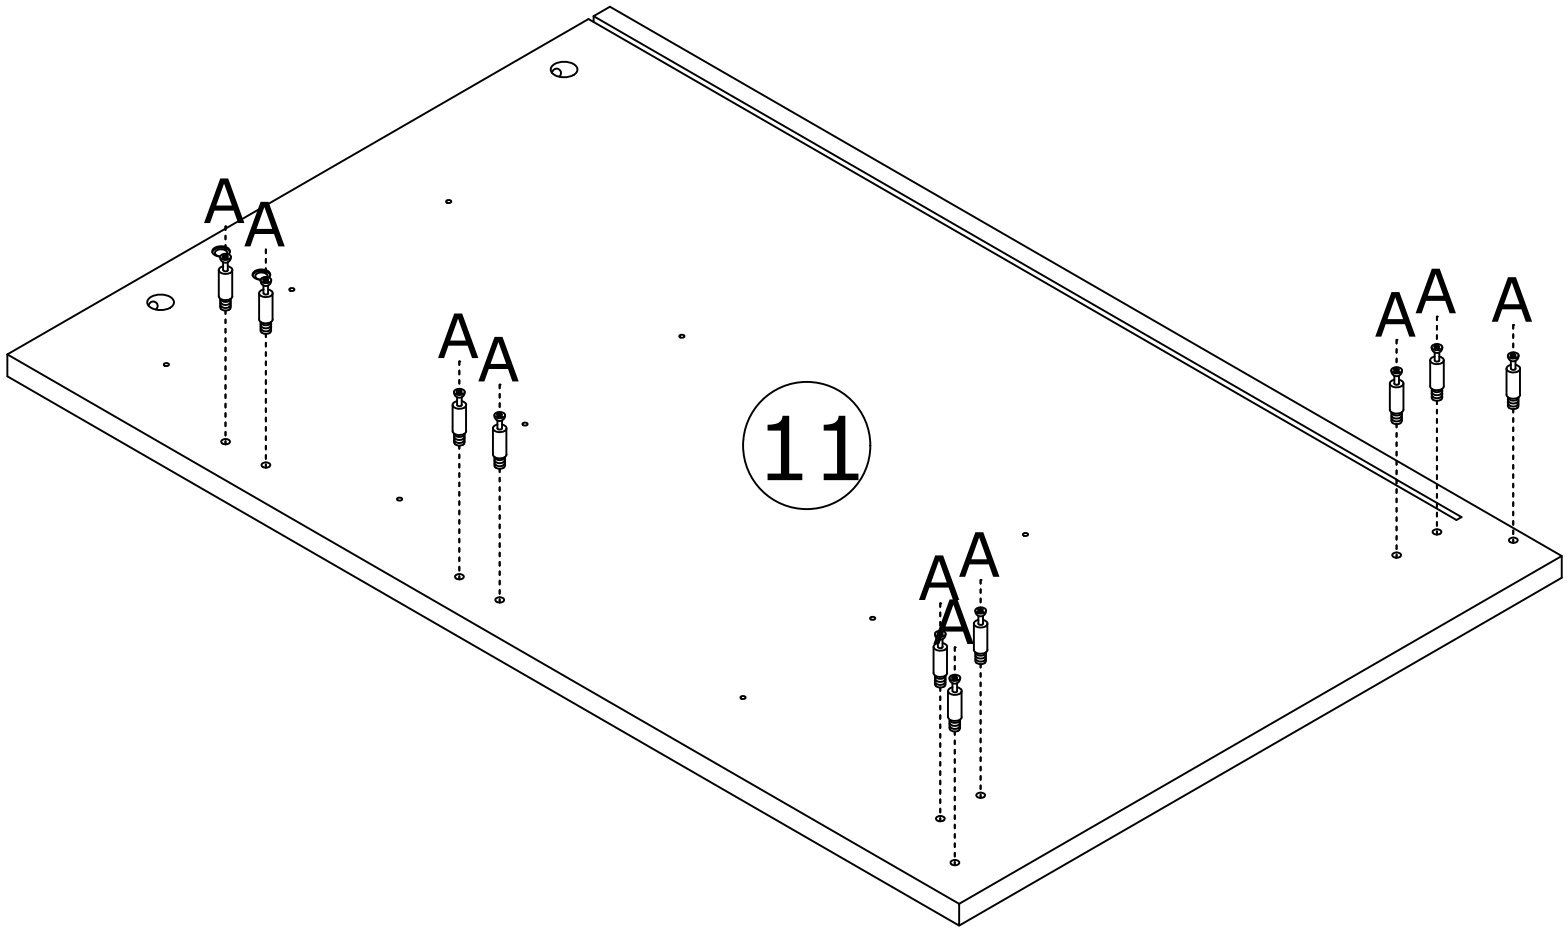

Step:19

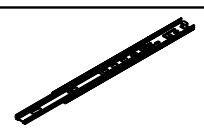
E-1		x2
G-1		x1
F		x9

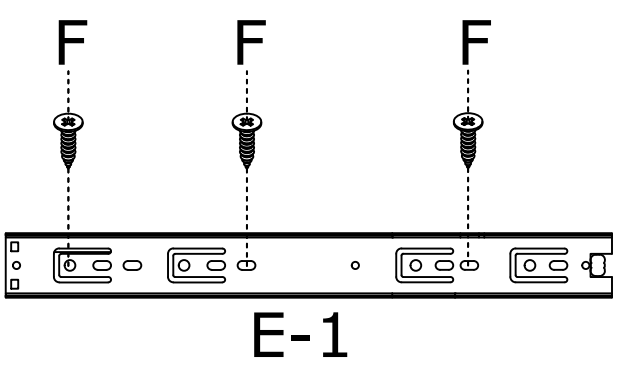

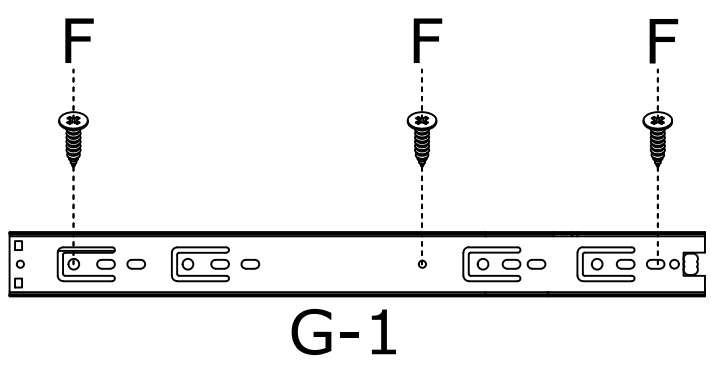



Step:20

C		x20

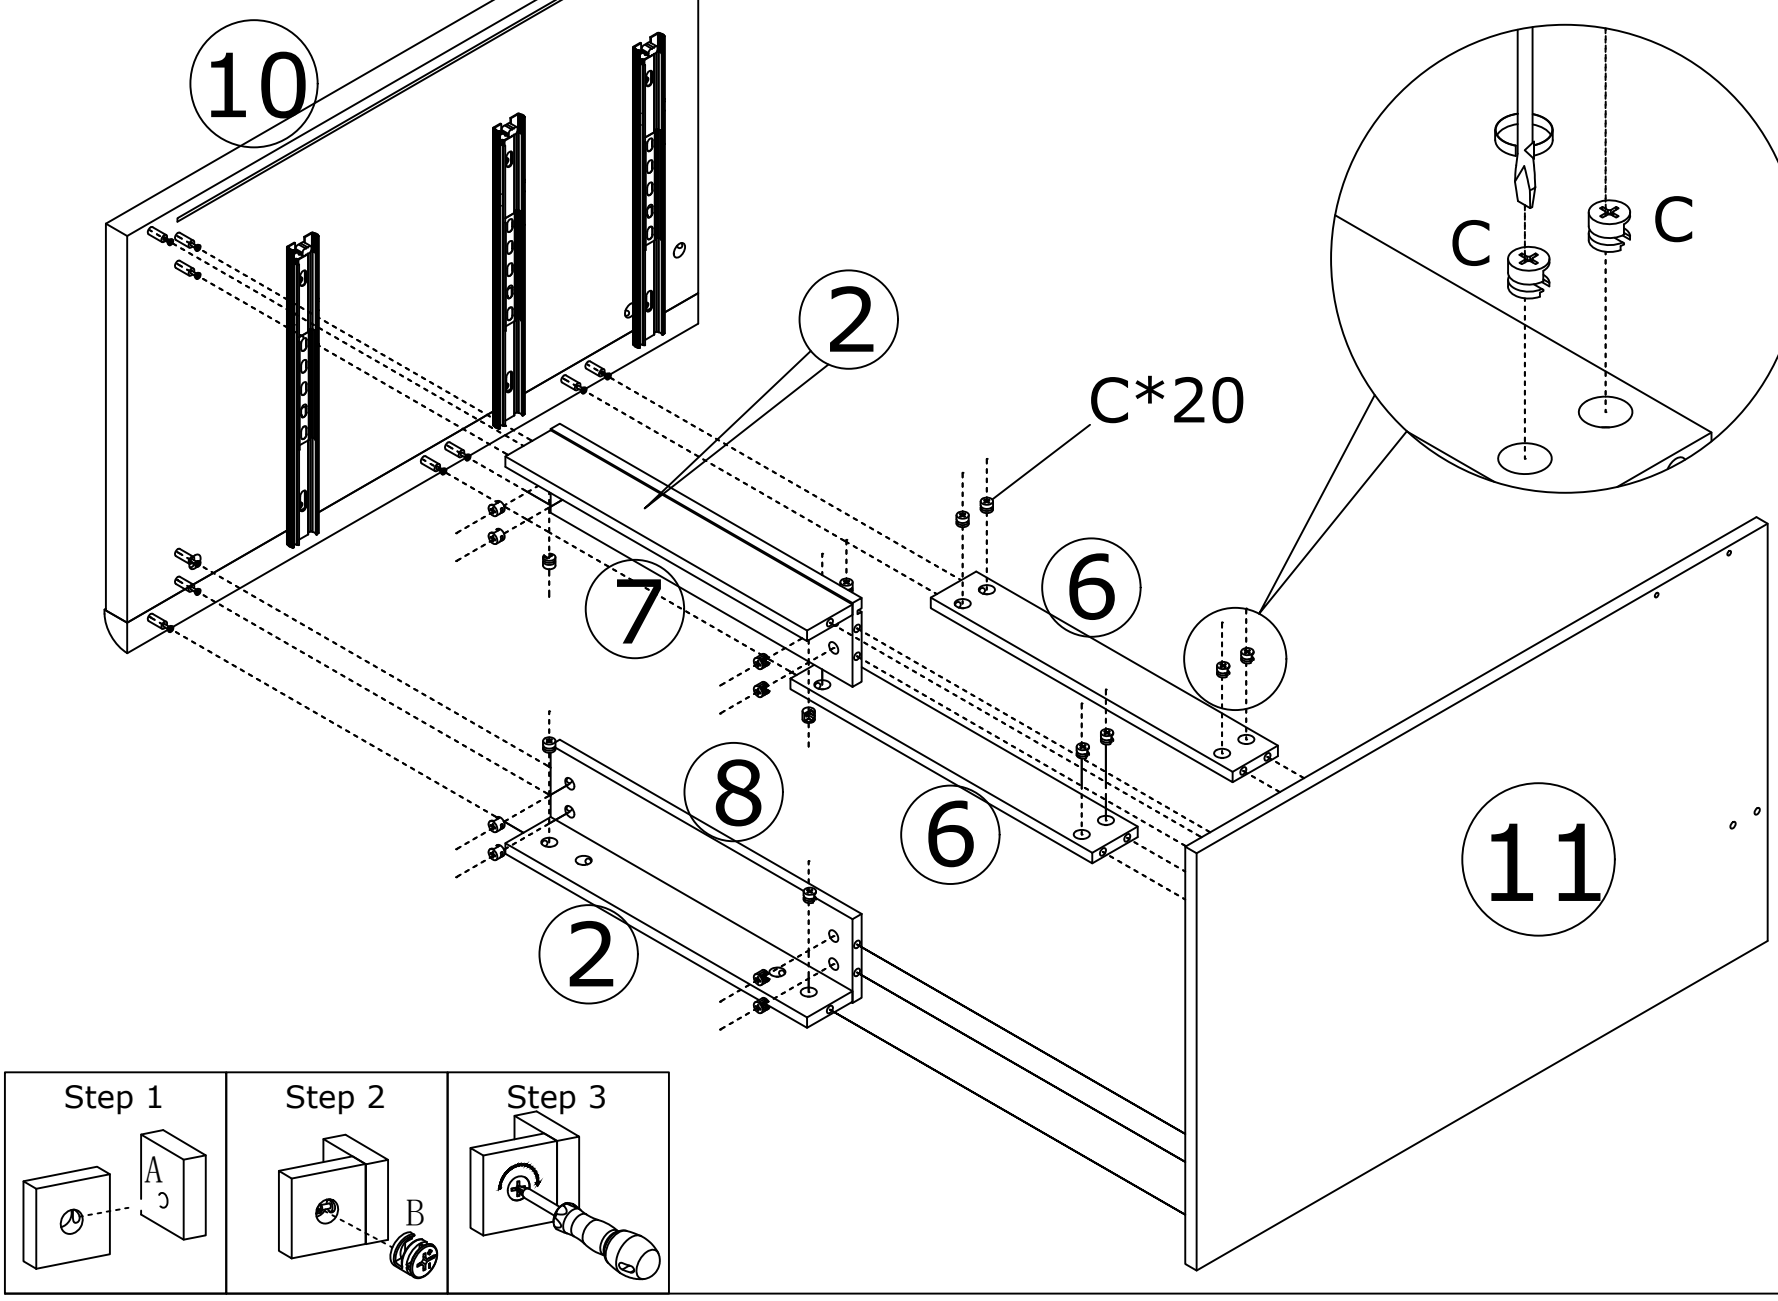


Step:21

A		x2

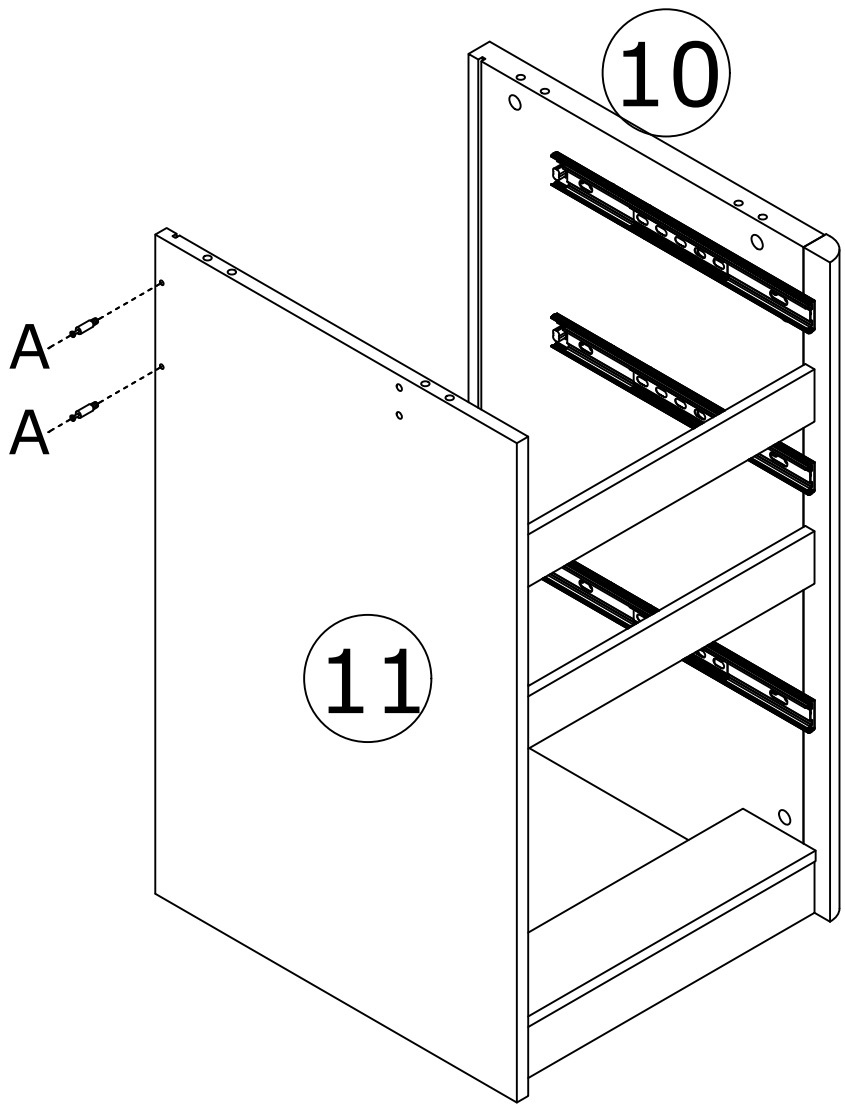



Step:22

H		x3

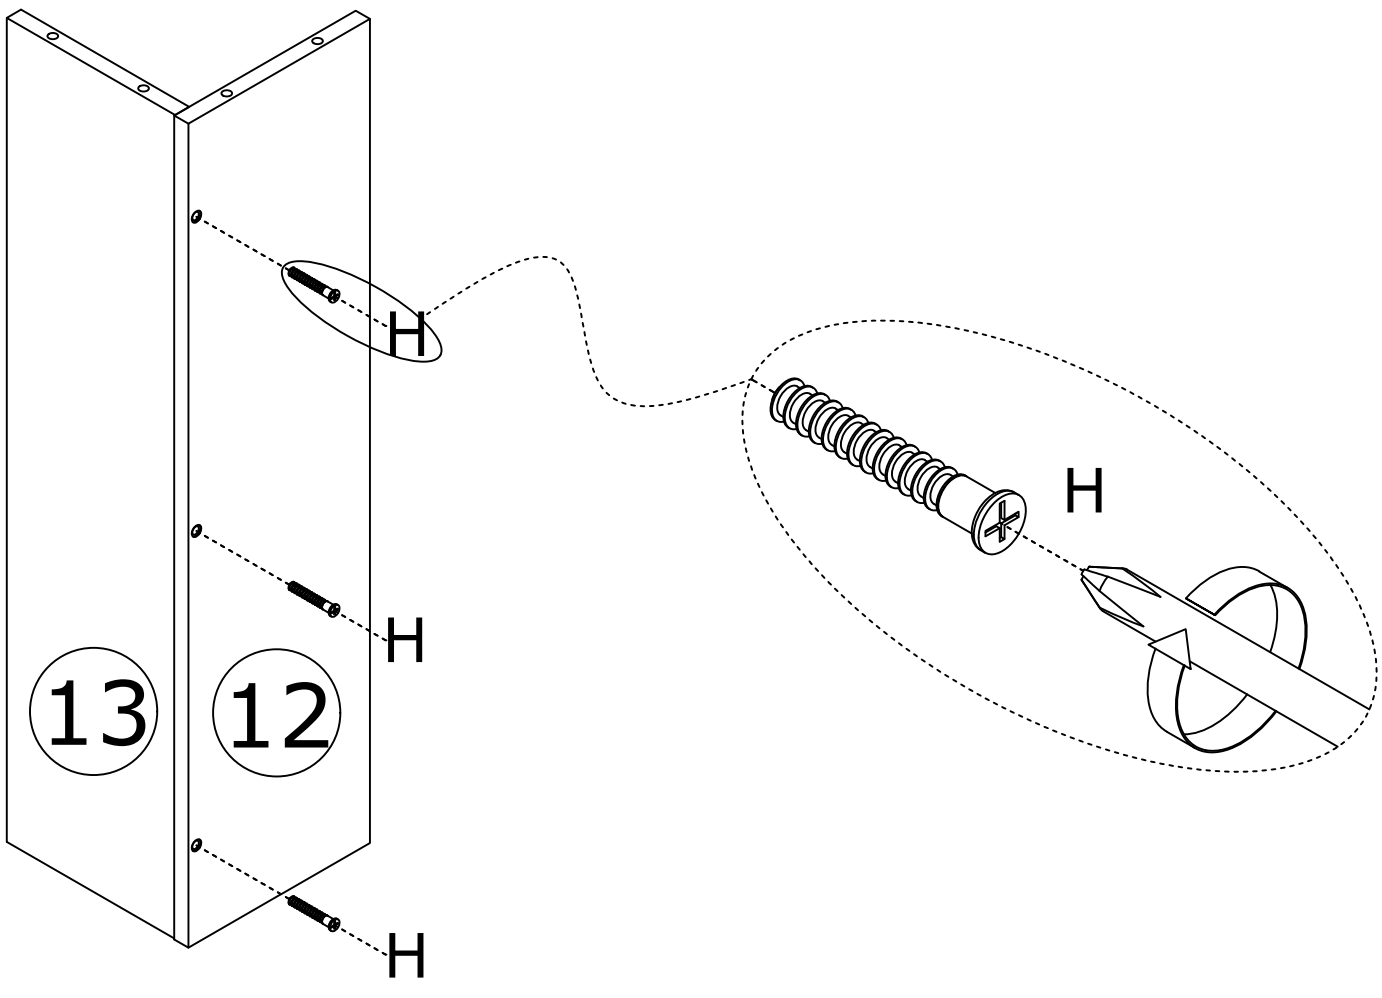


Step:23


A		x4

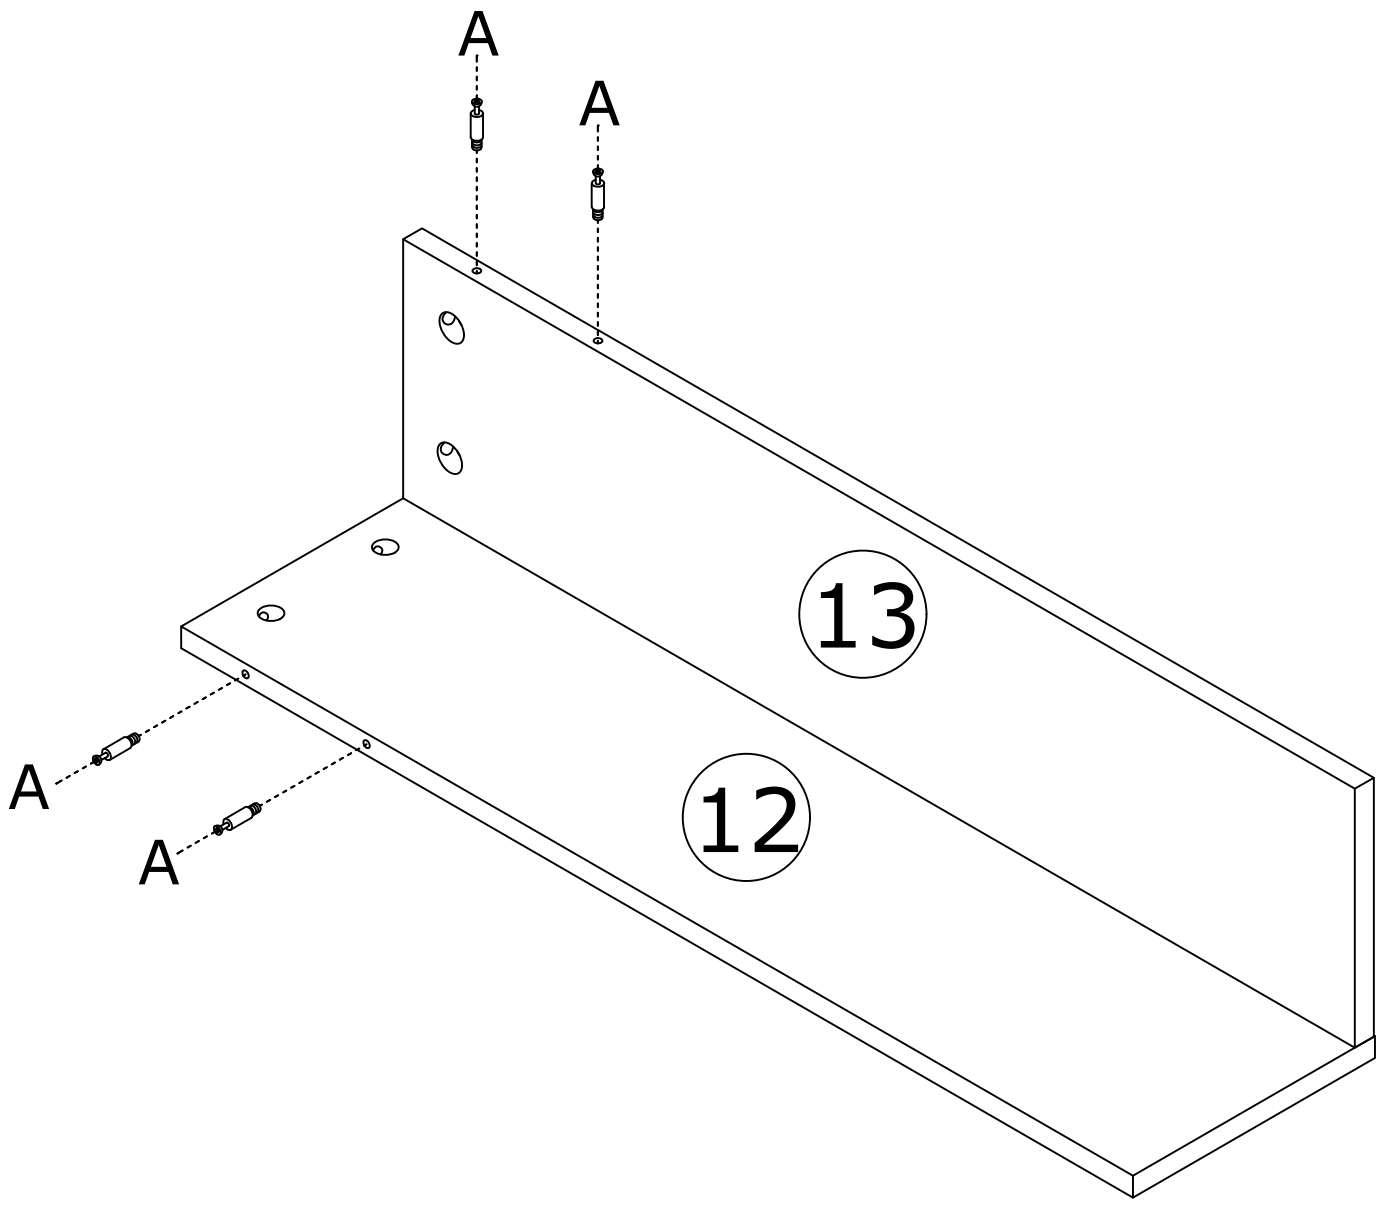


Step:24


B		x4

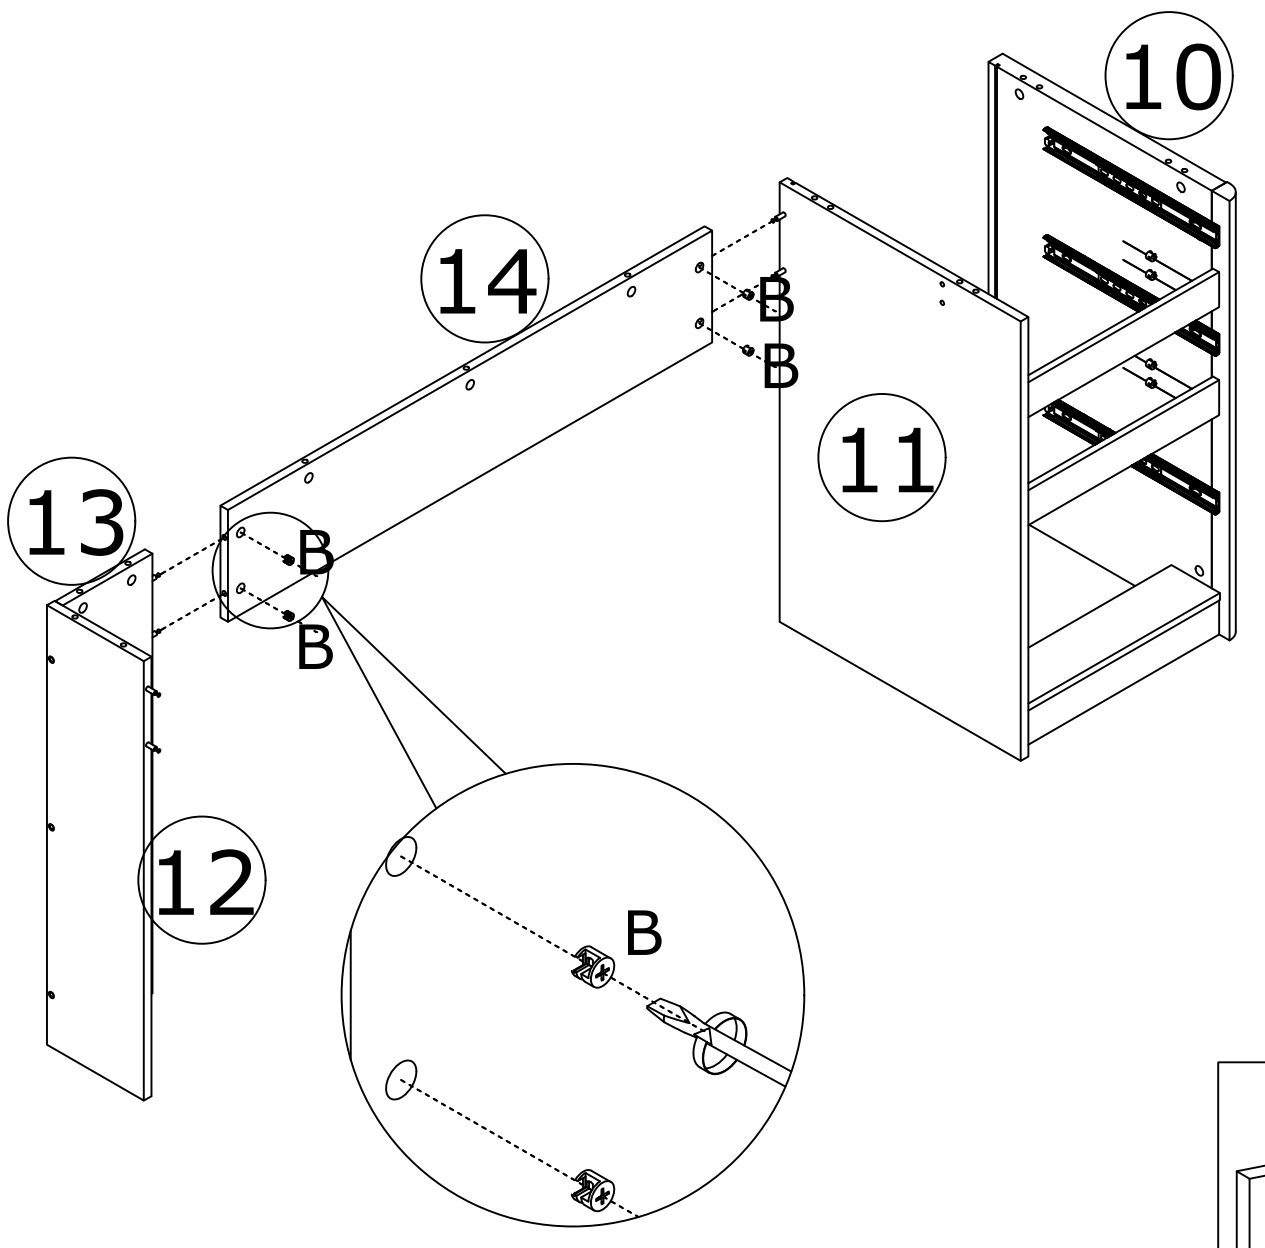

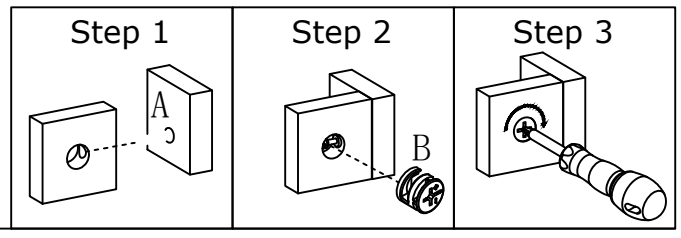


Step:25

B		x4

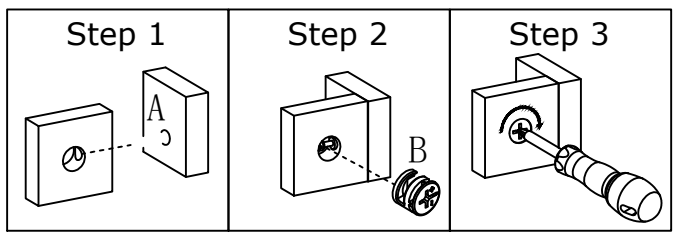


Step:26


H		x4

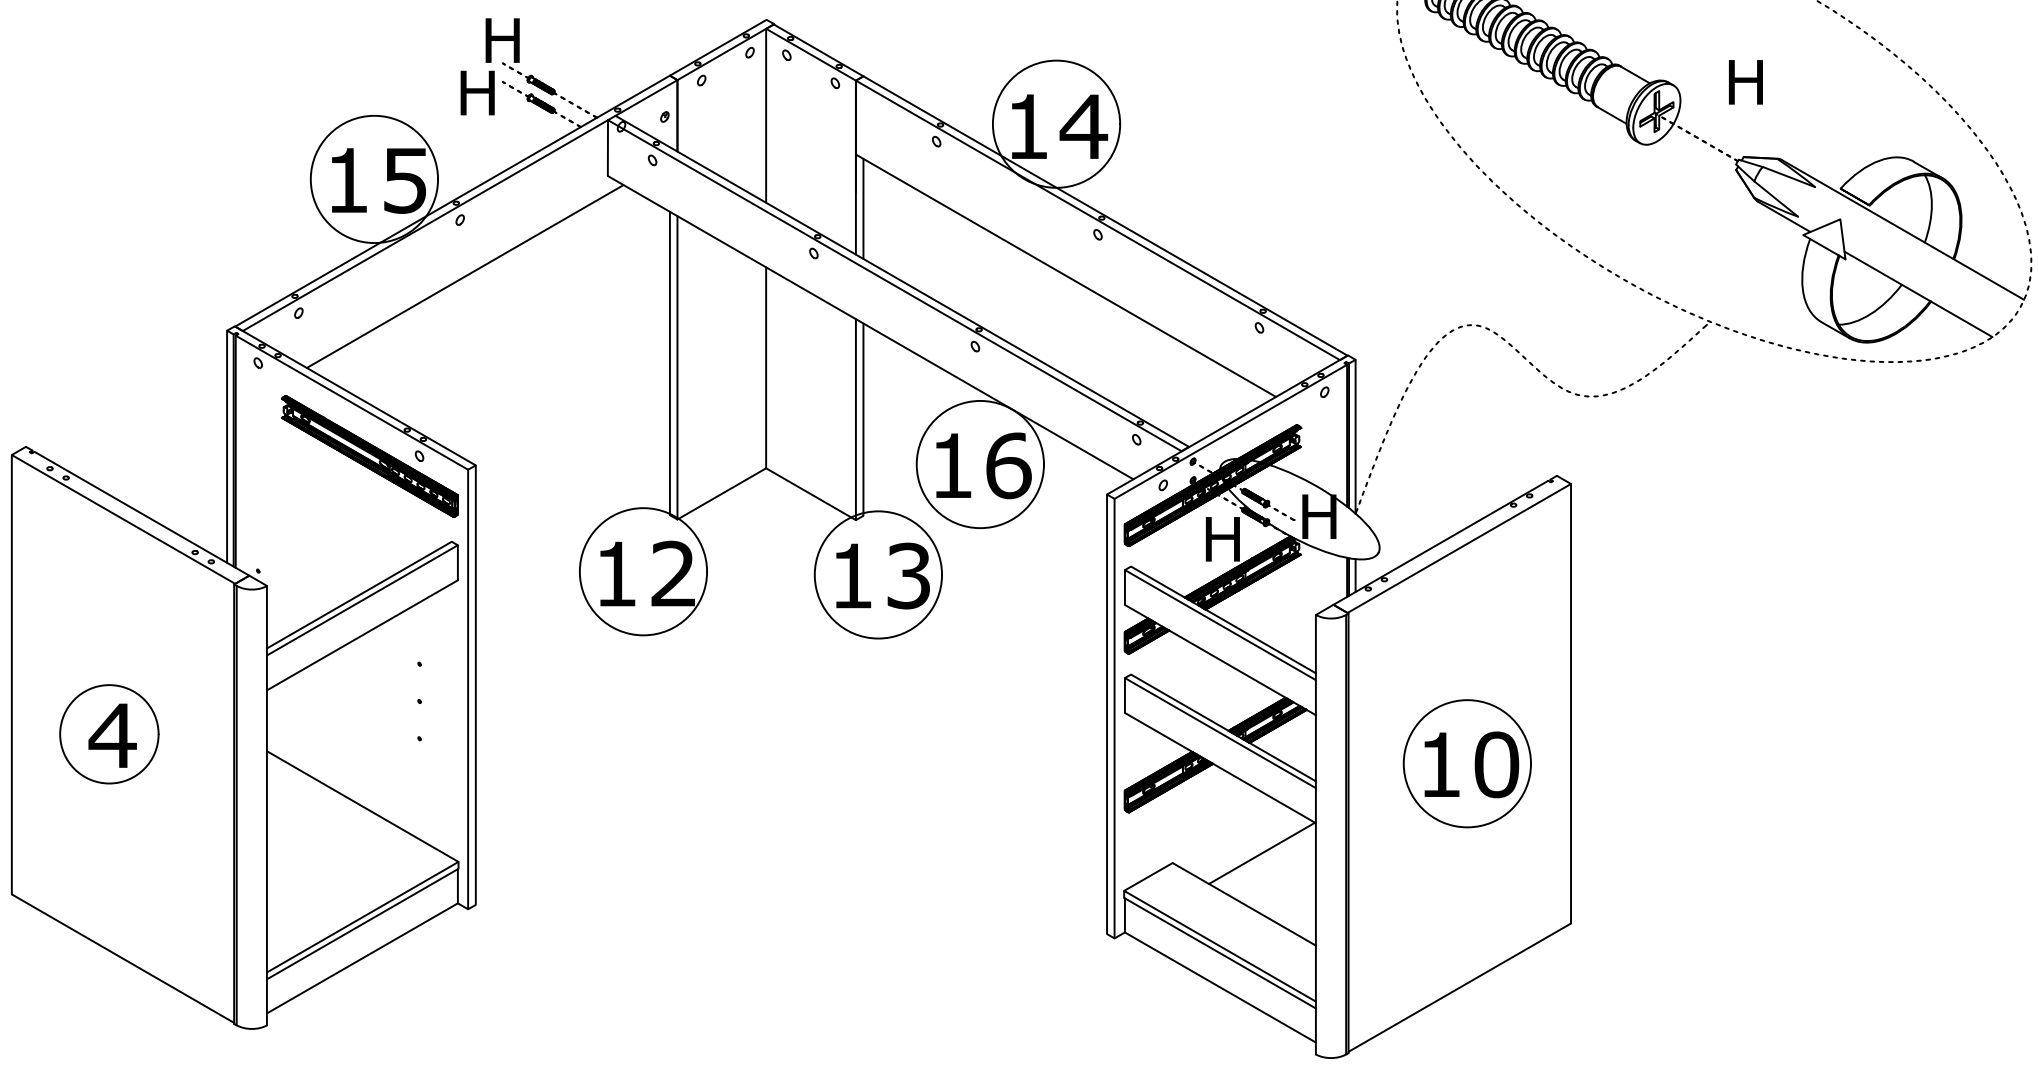


Step:27

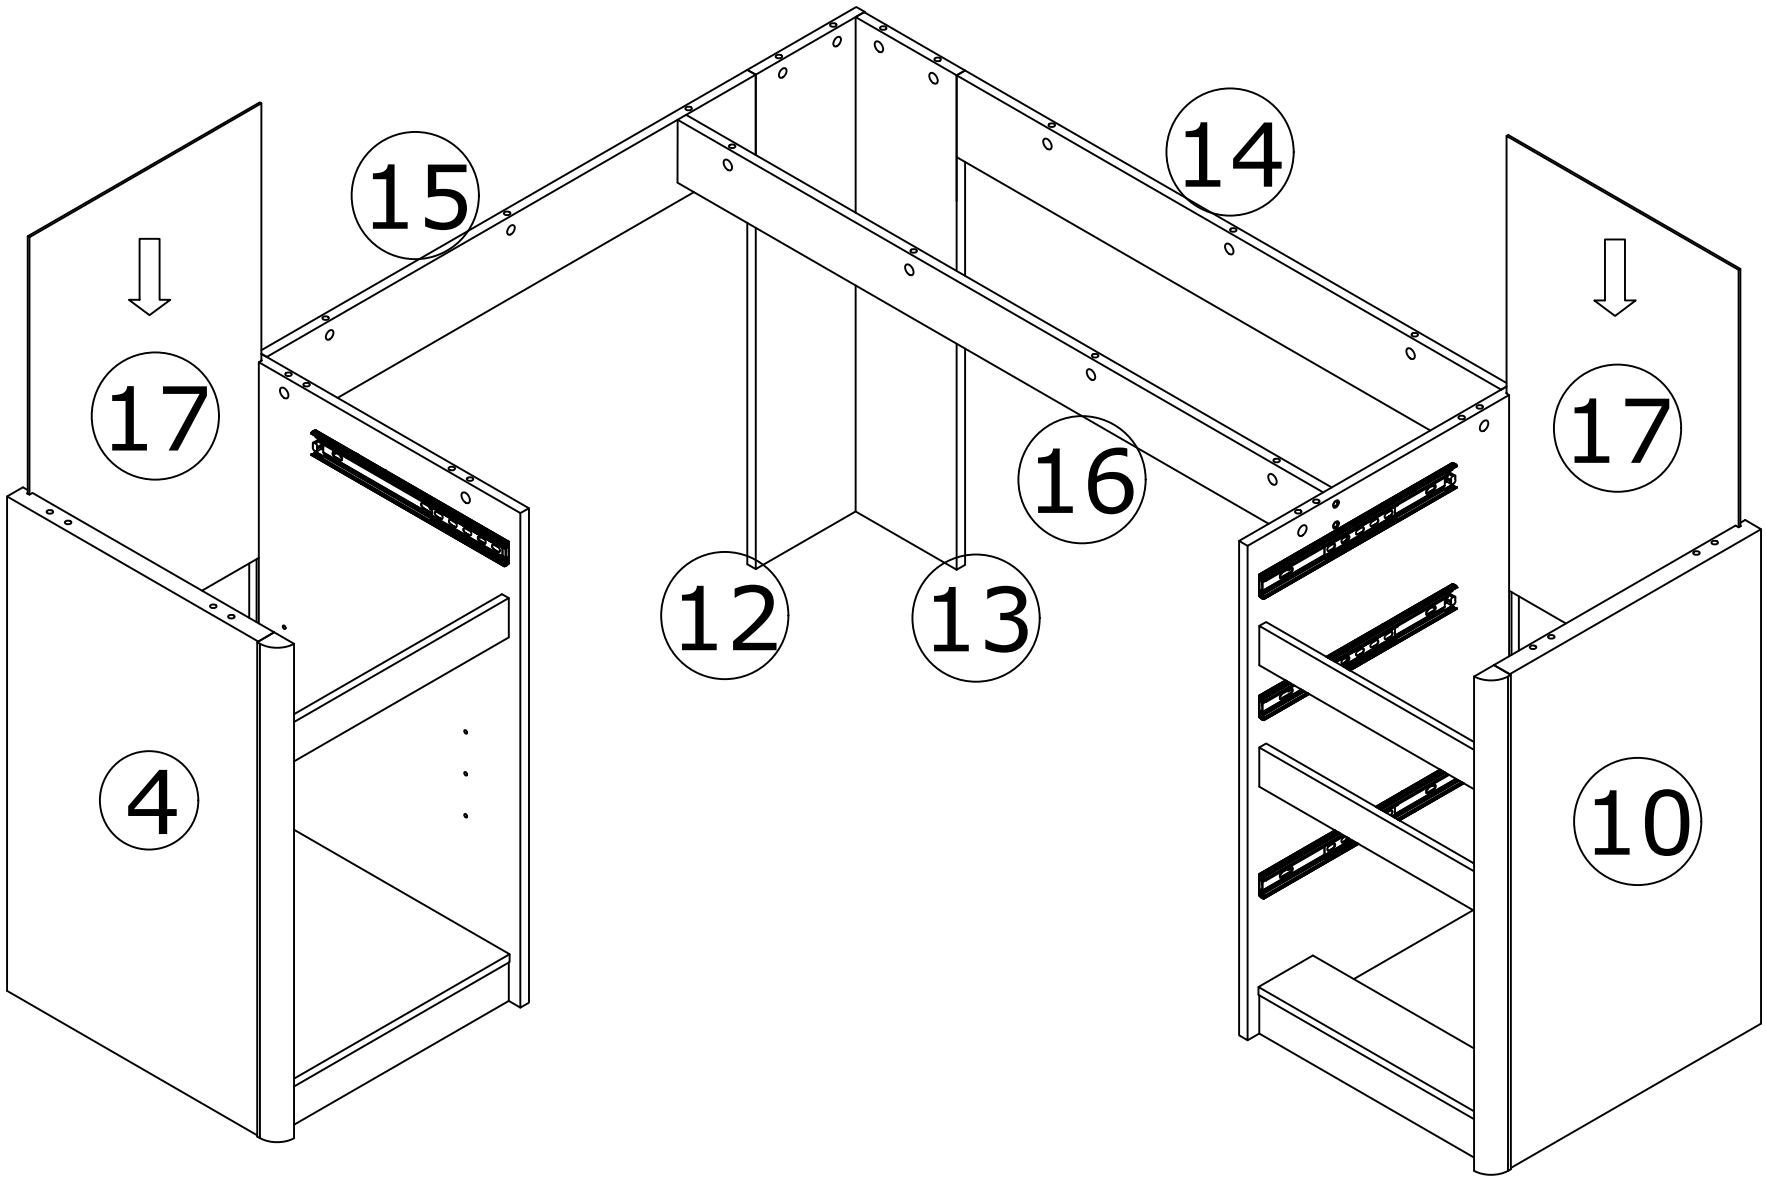



Step:28


A		x14

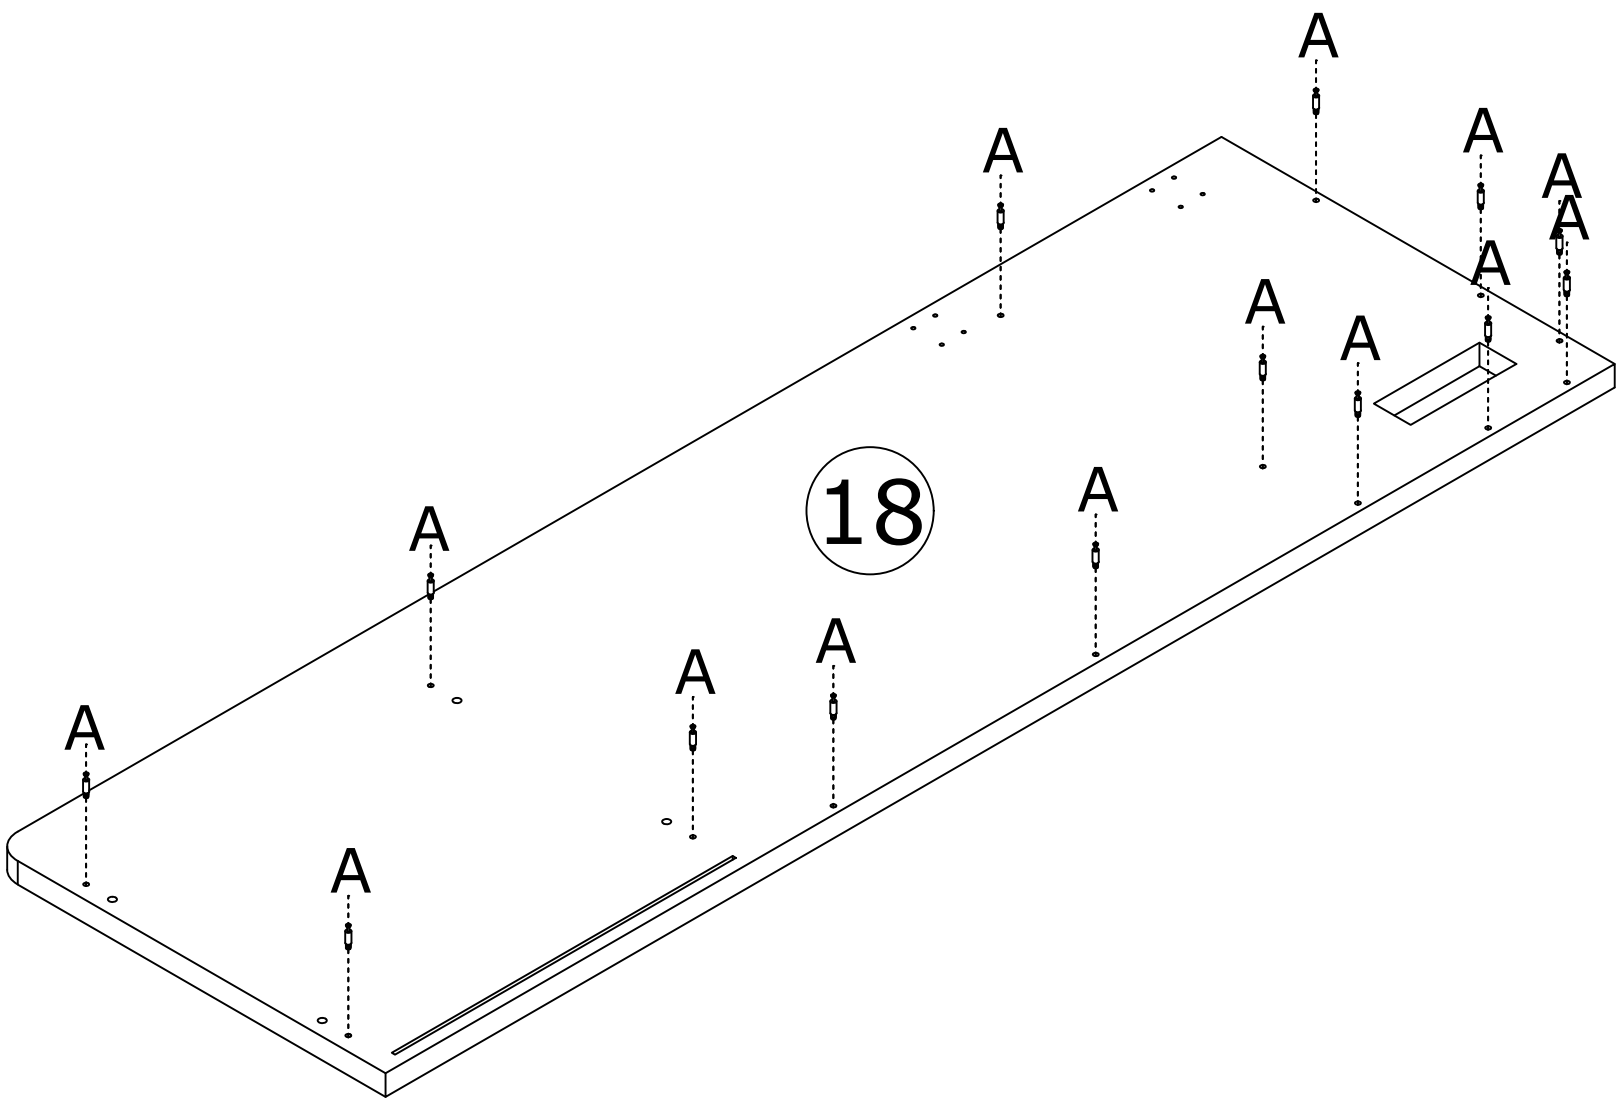


Step:29


B		x14
D		x4

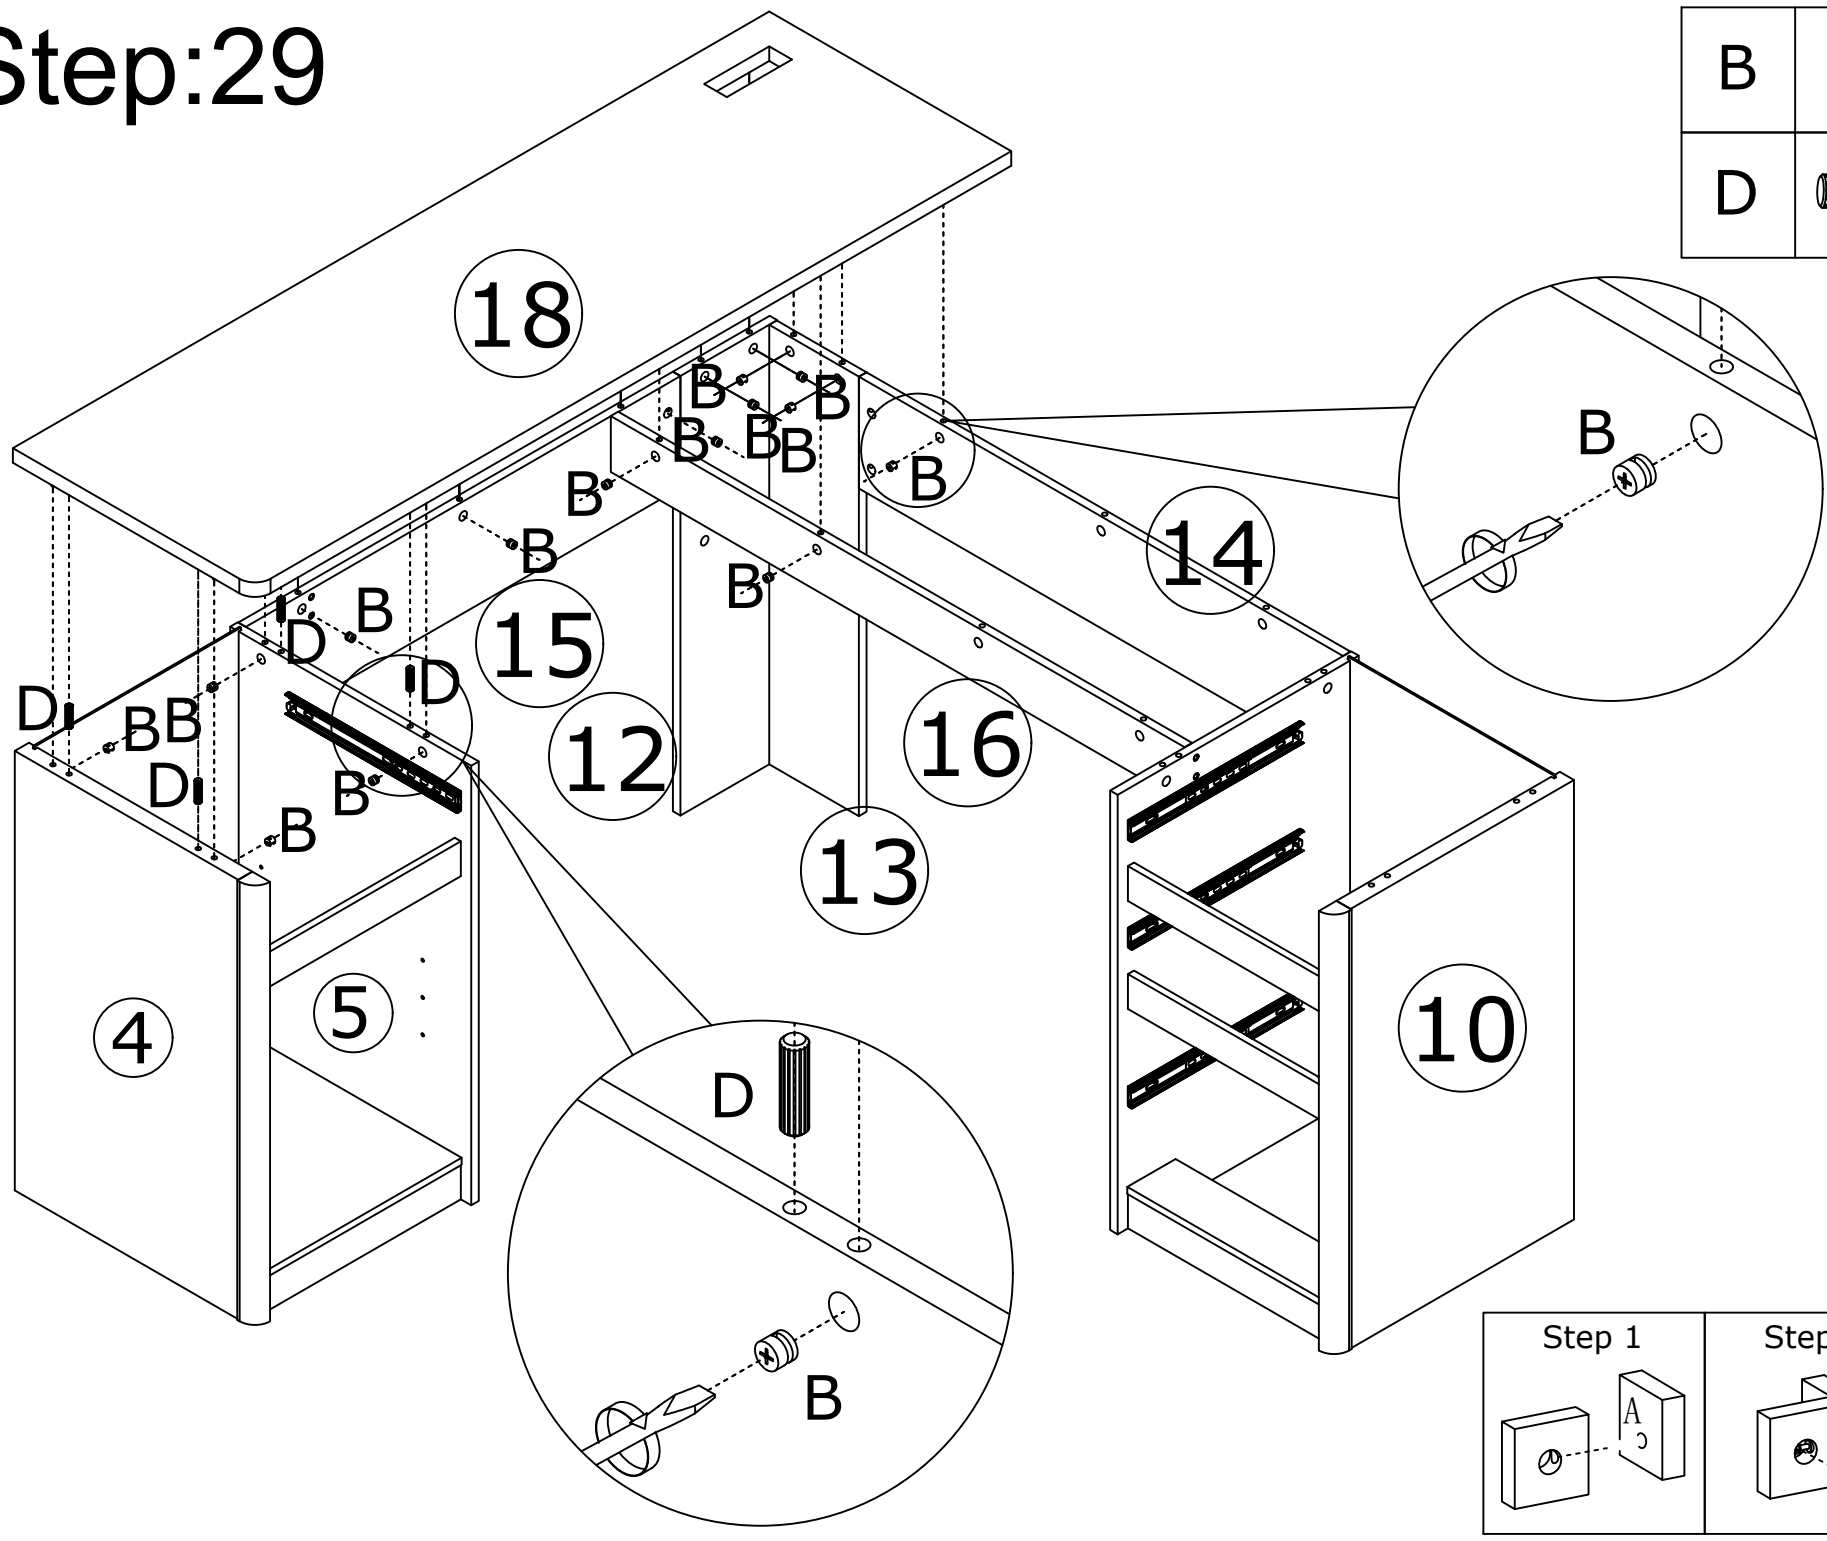

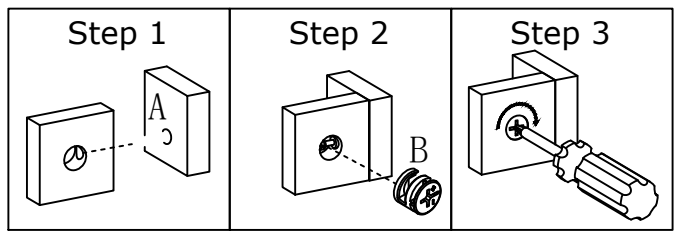


Step:30

A		x8

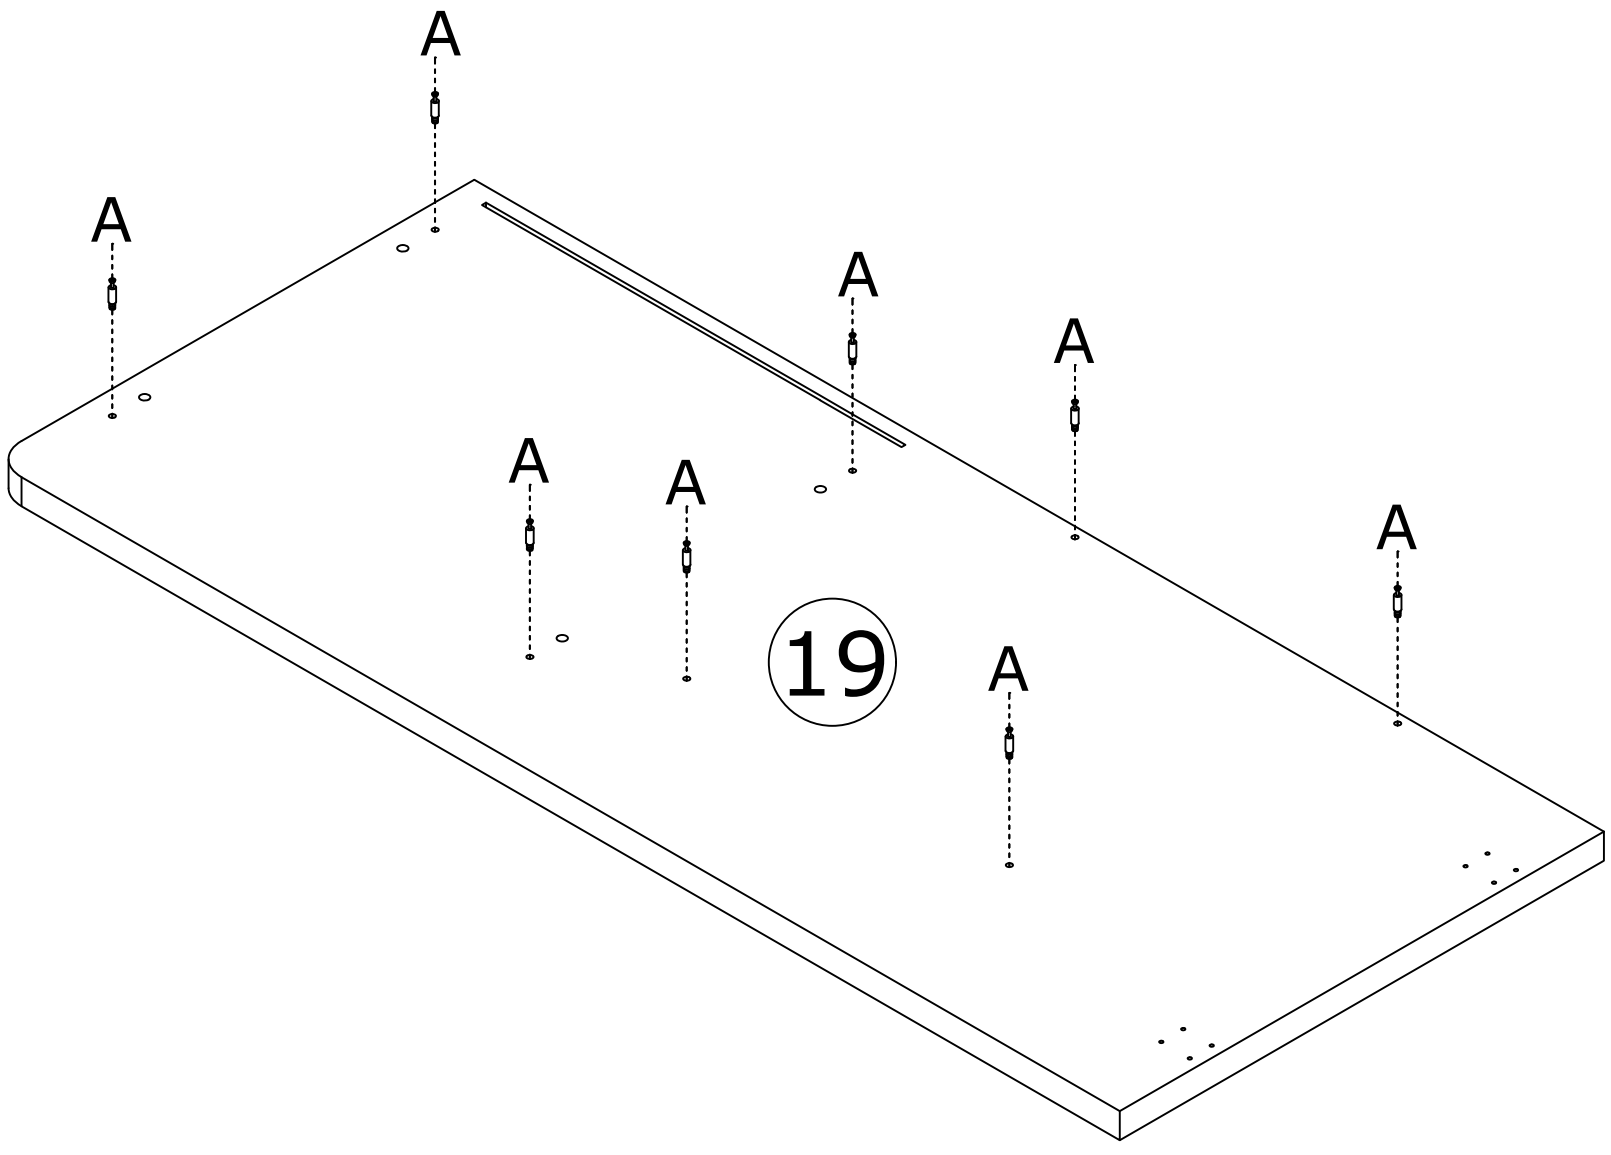


Step:31

B		x8
D		x4

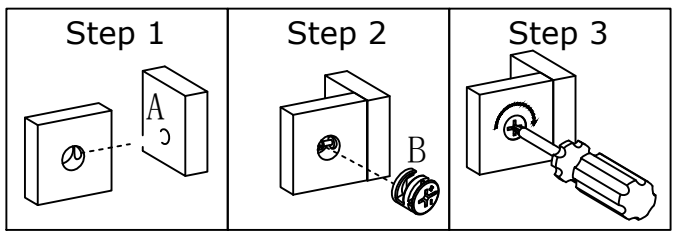


Step:32

I		x2
J		x1


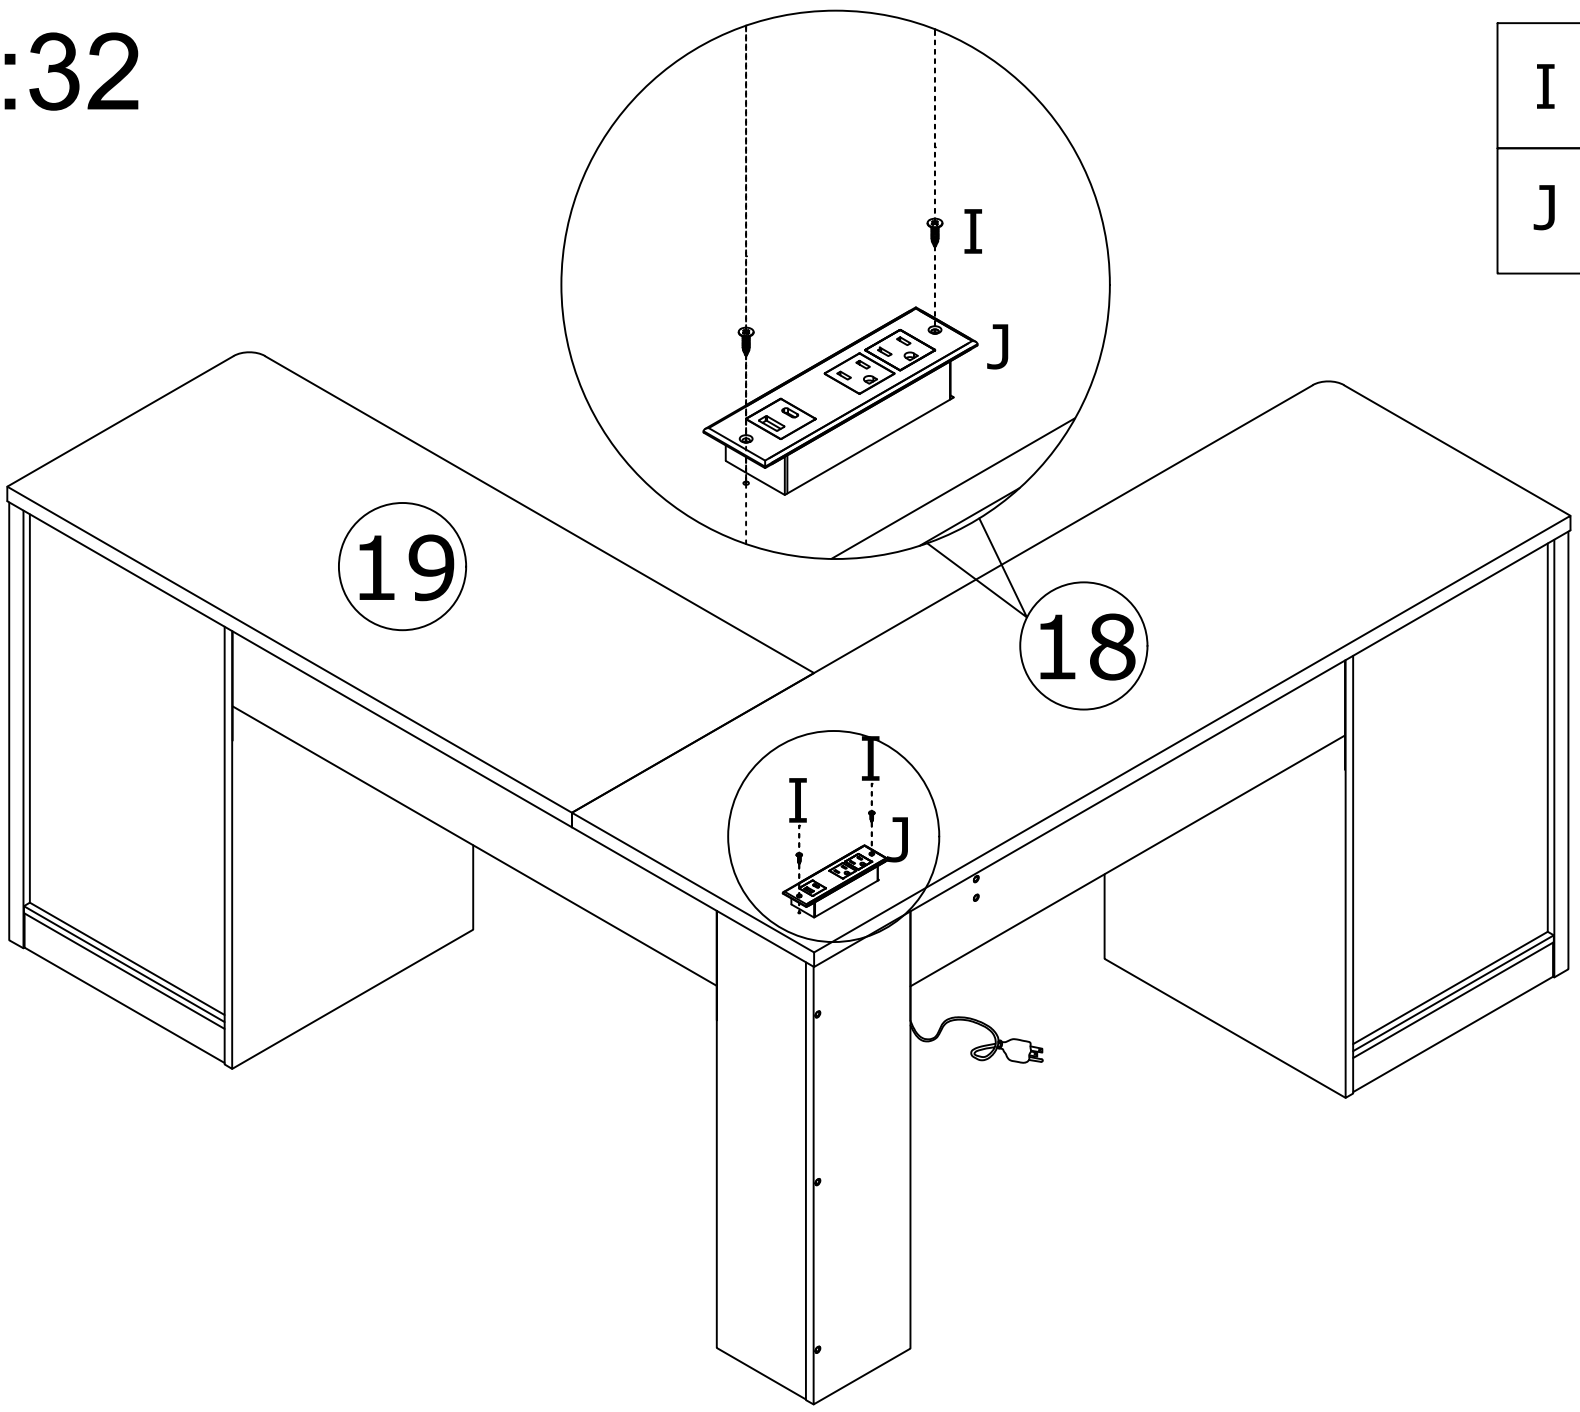



Step:33

K		x4



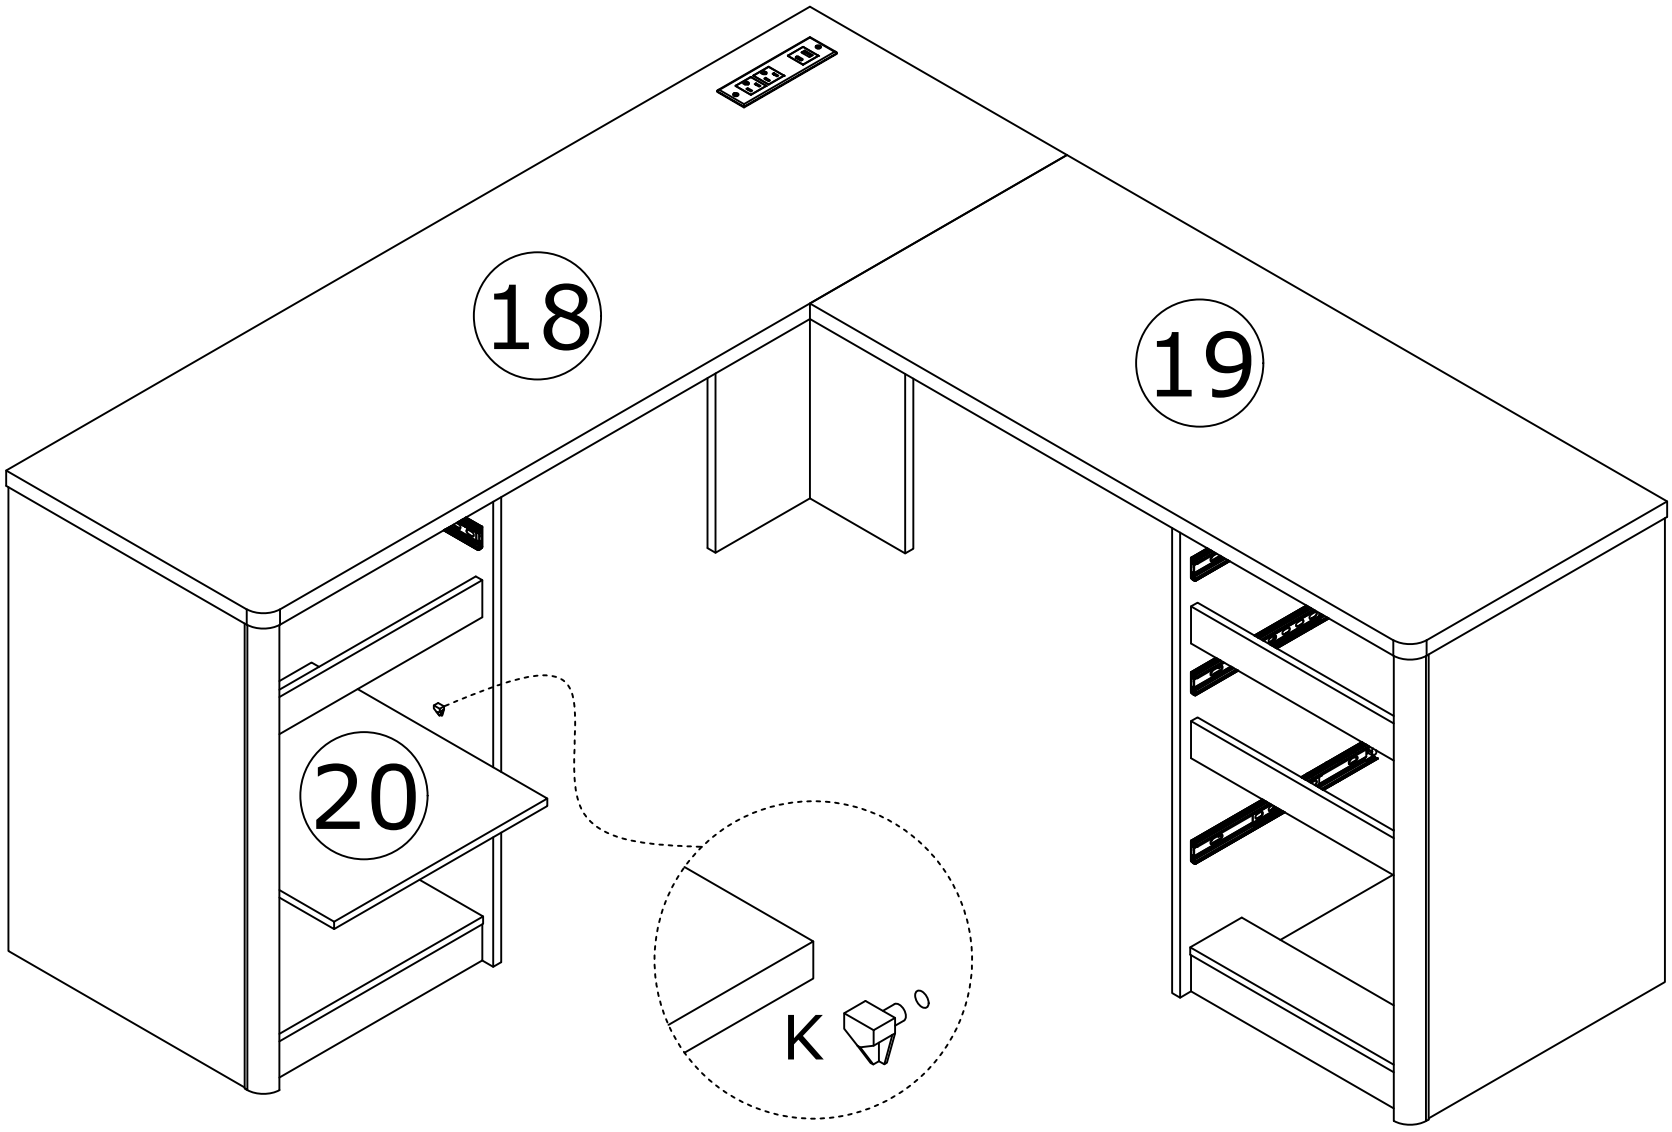


Step:34

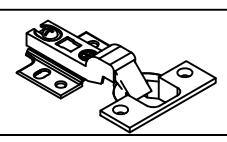
L		x2
U		x4

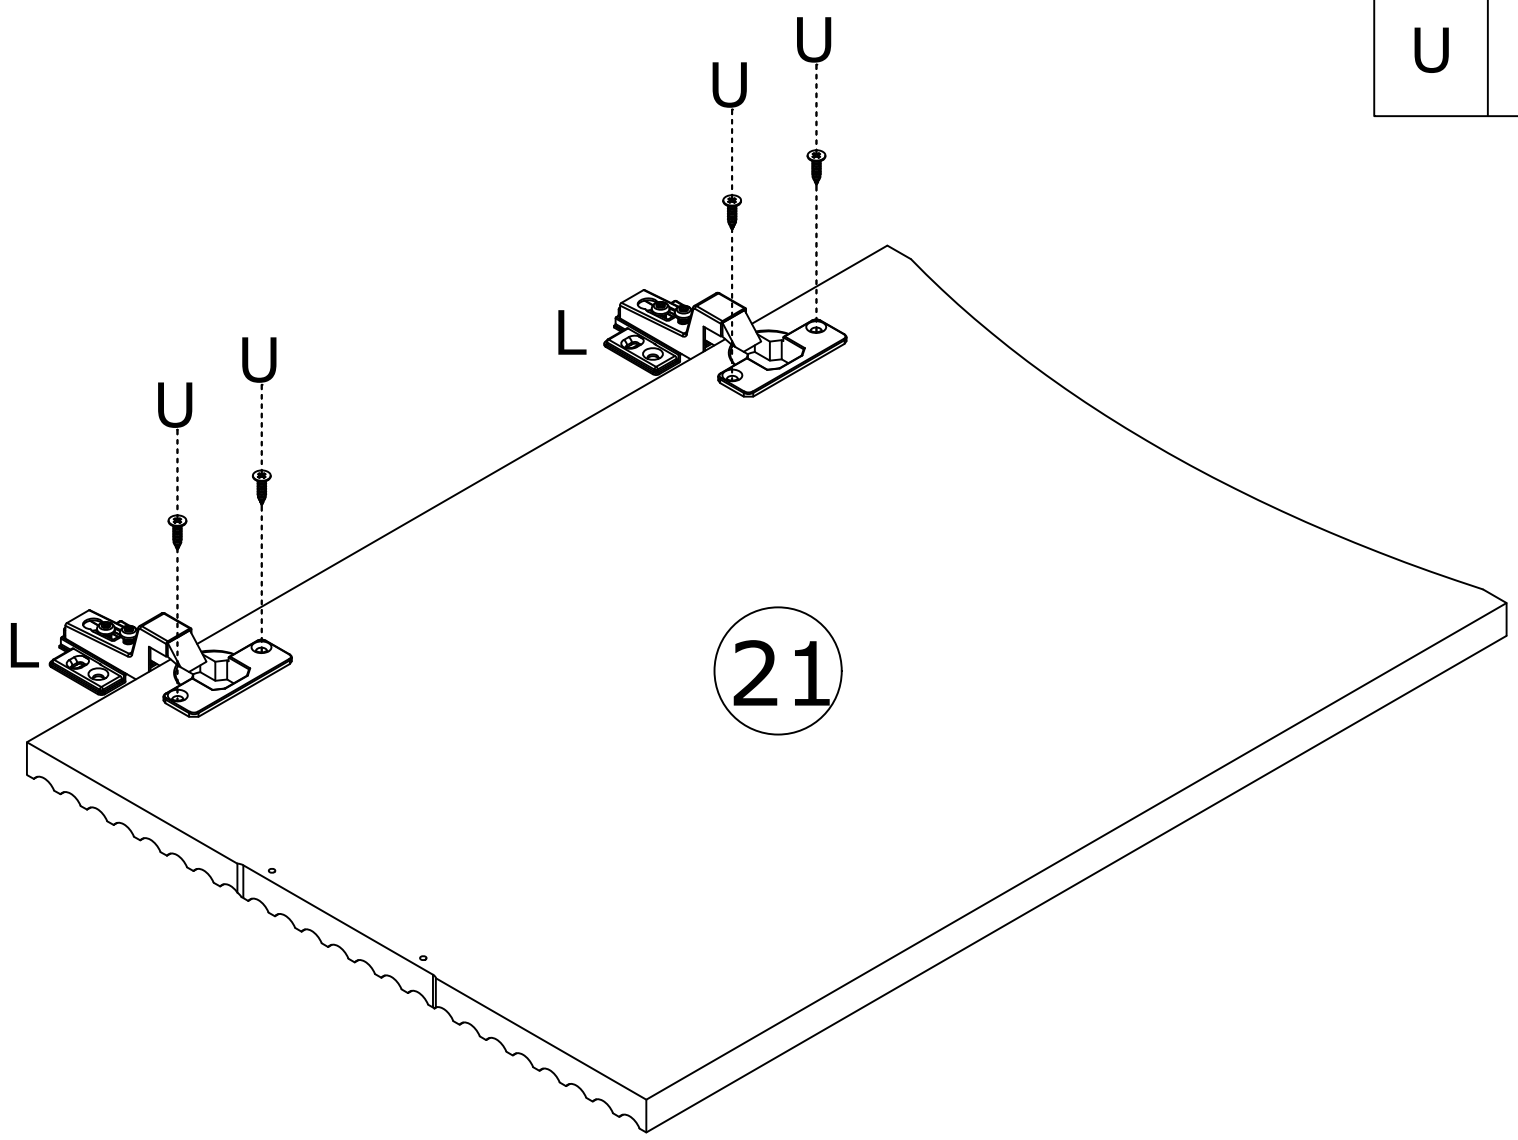

Step:35

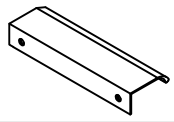U		x8
F		x2
M		x1

By turning this screw, the distance between the door gap can be adjusted to the left and right

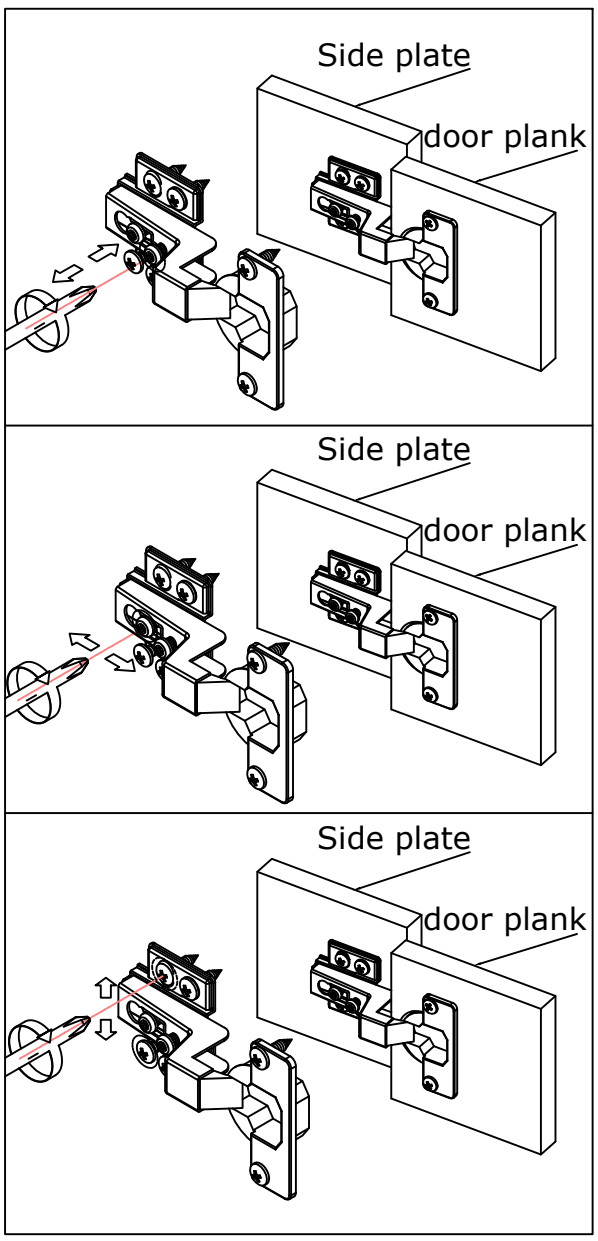


By turning this screw, the distance between the front and rear of the door panel can be adjusted


This screw is a fixed screw that can be adjusted up and down

Step:36

N		x12
O		x12

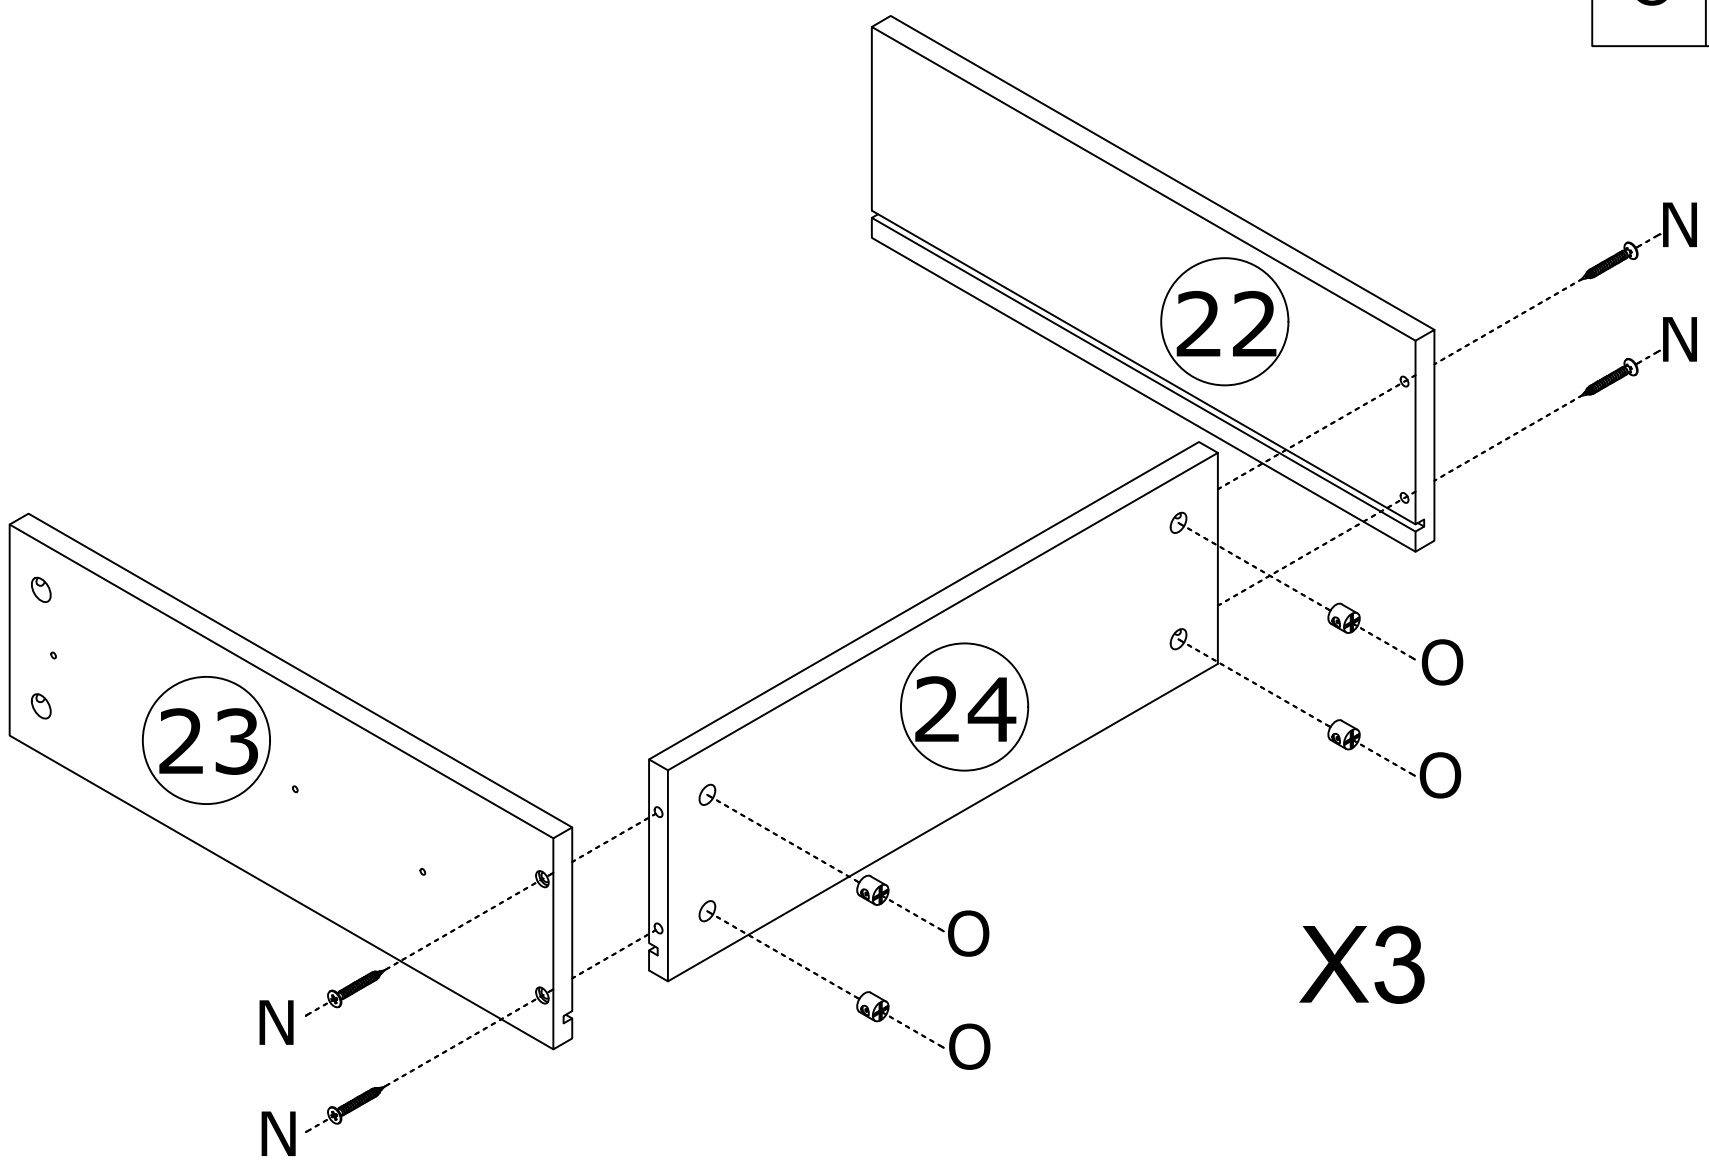



Step:37

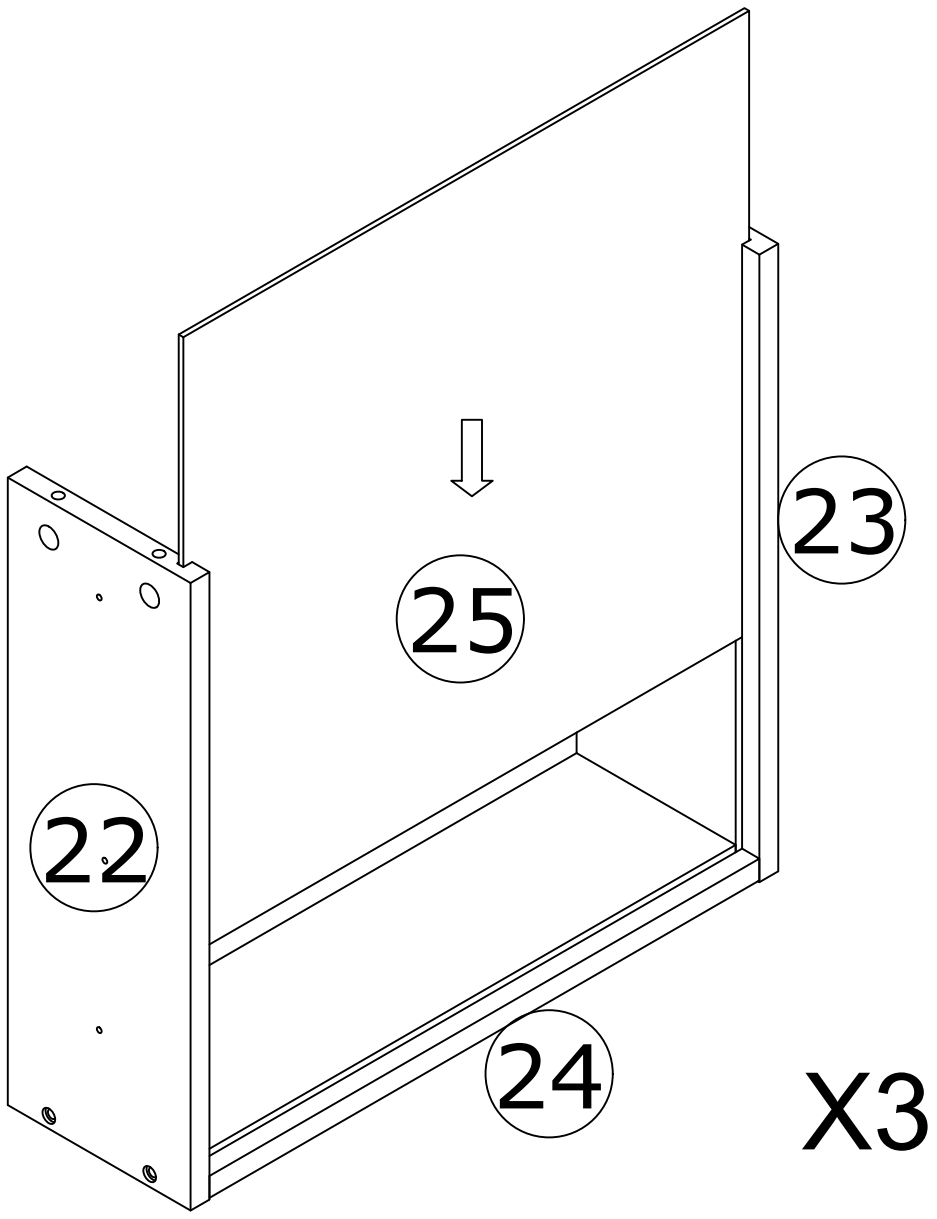

X3


Step:38

A		12
C		12

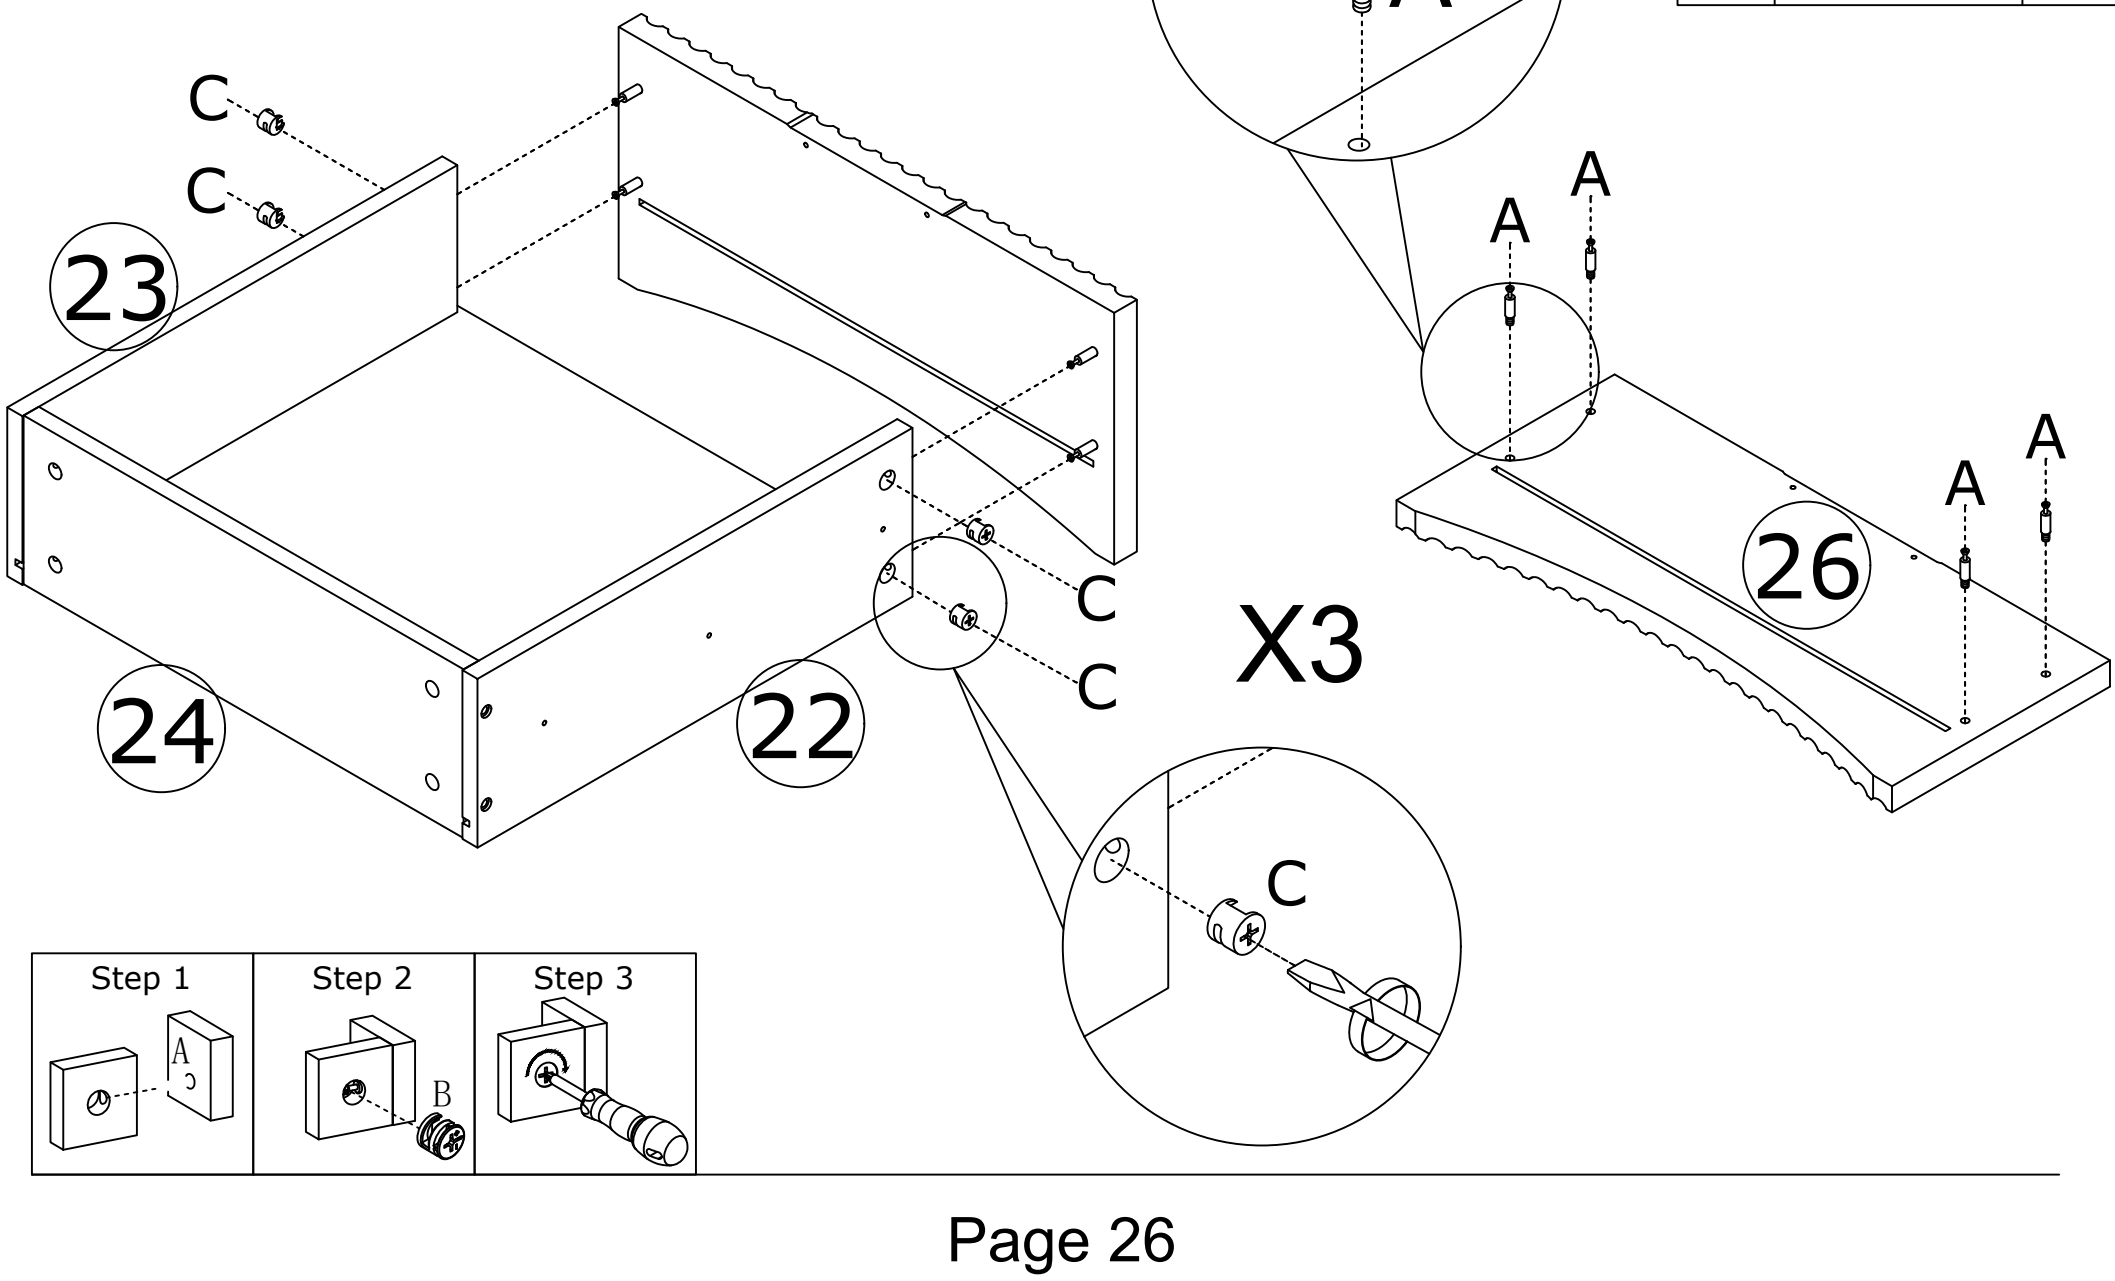


Step:39


T	⬭	x12

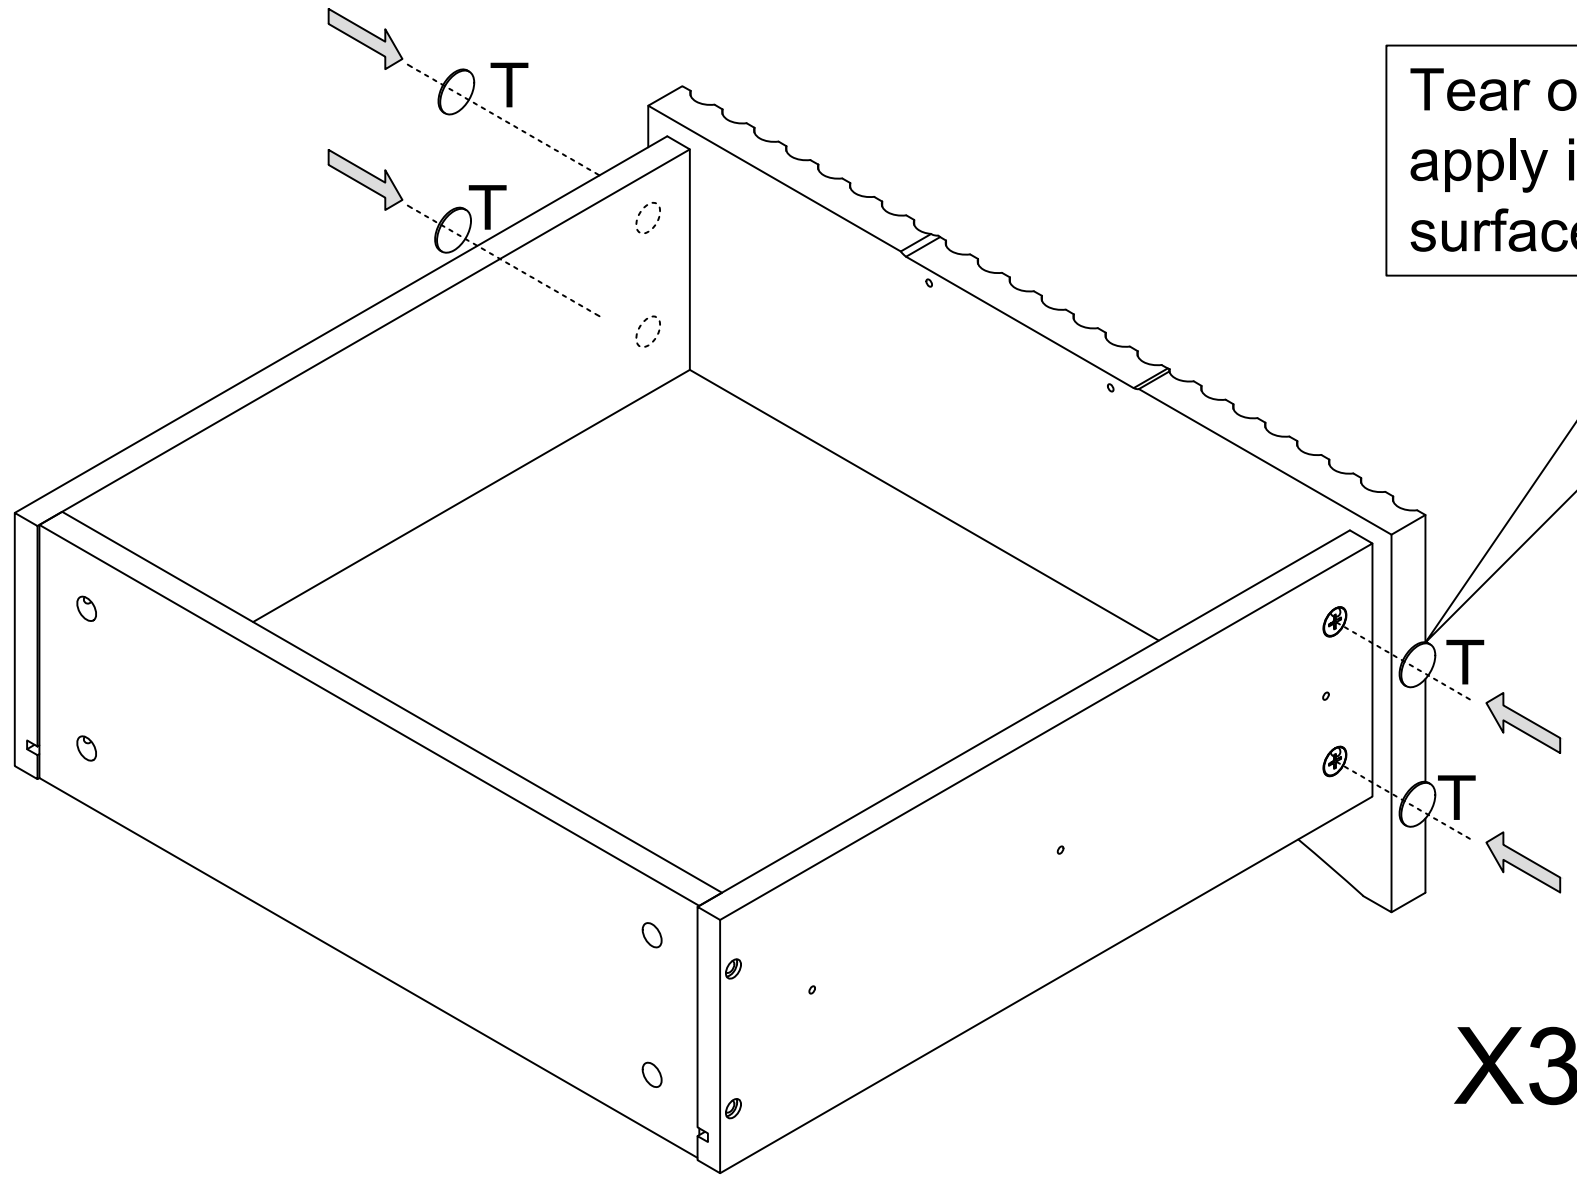


X3

Step:40

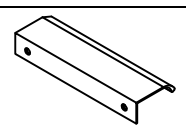F		x24
M		x3
E-2		x6

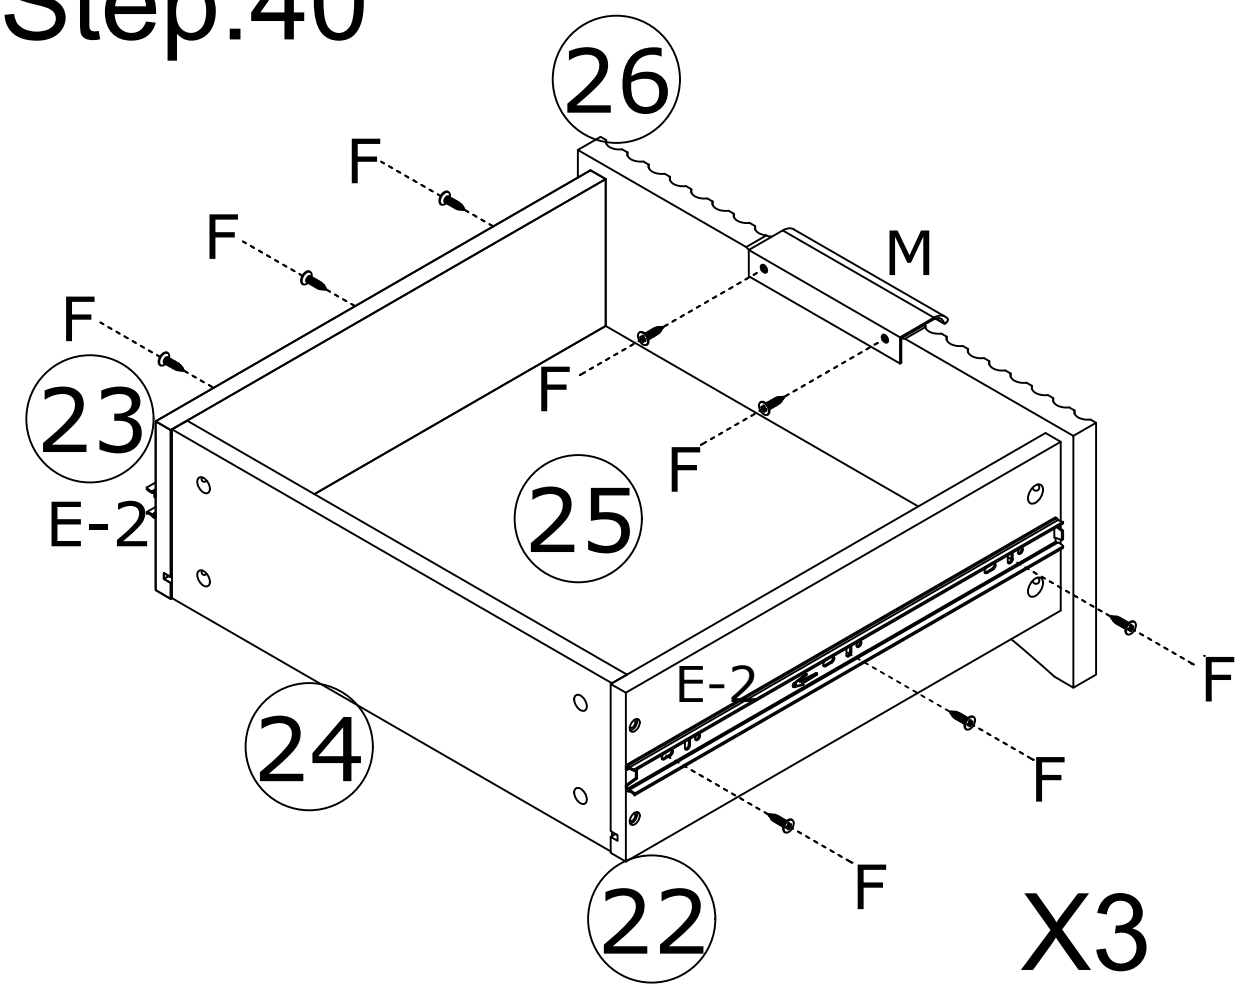


X3

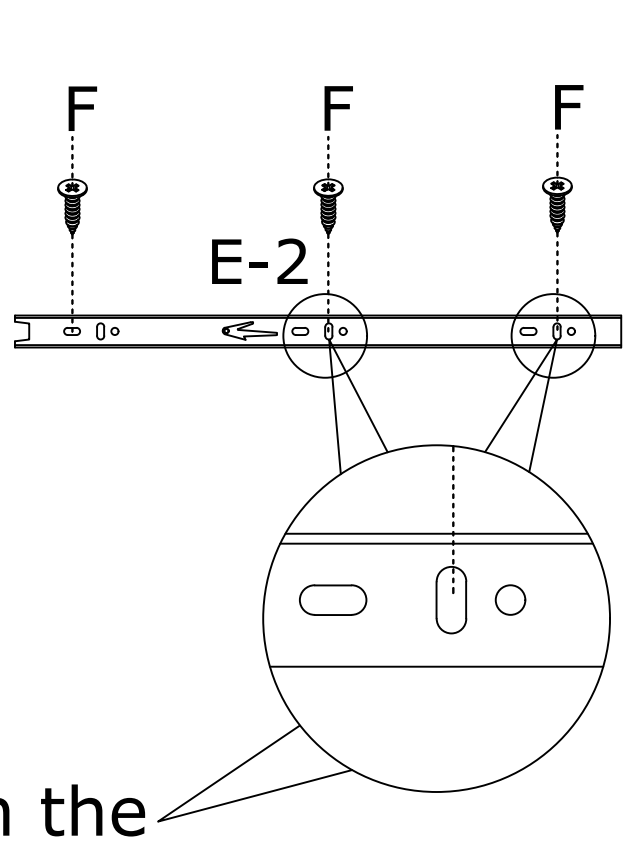


Warm Reminder: Fasten the screw in the middle of the oblong hole, which allows vertical height adjustment.

Step:41


N		x4
O		x4

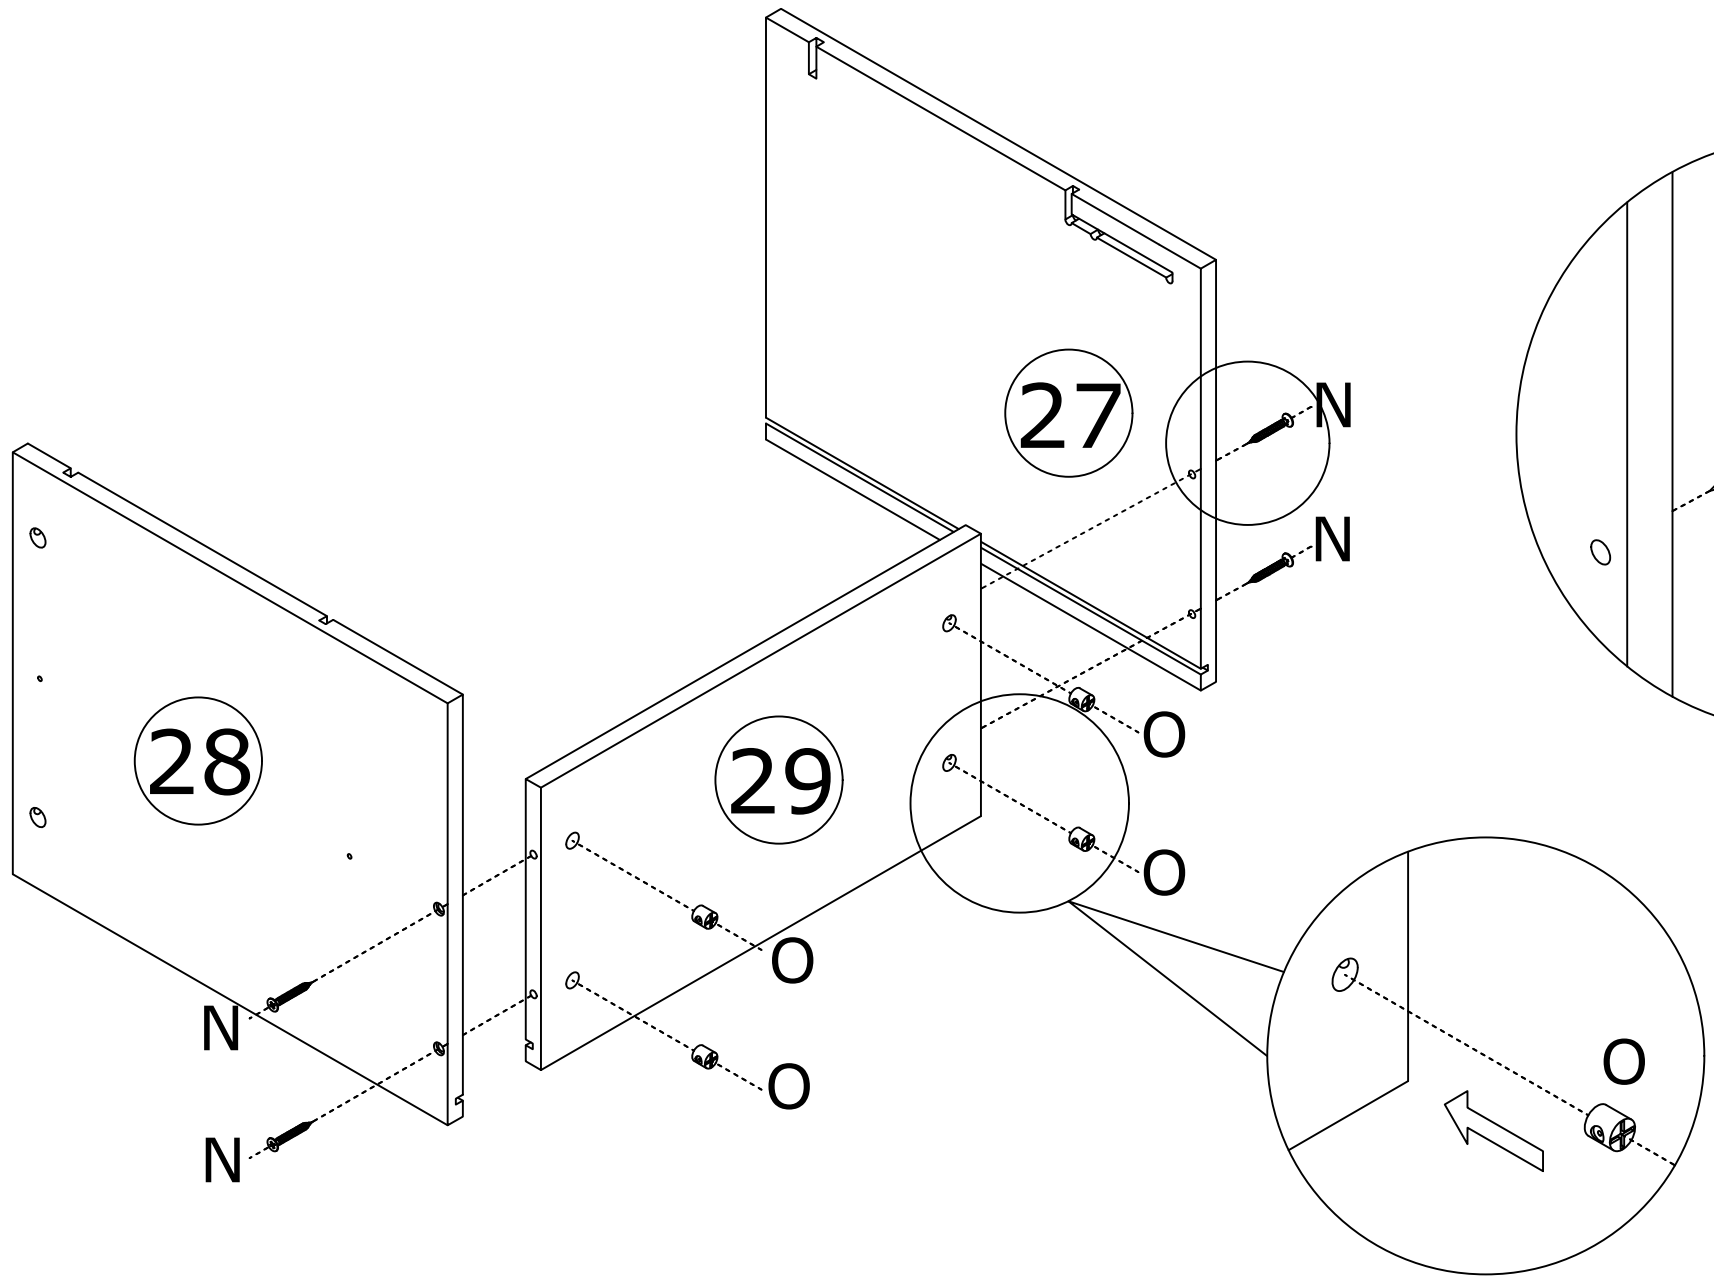



Step:42

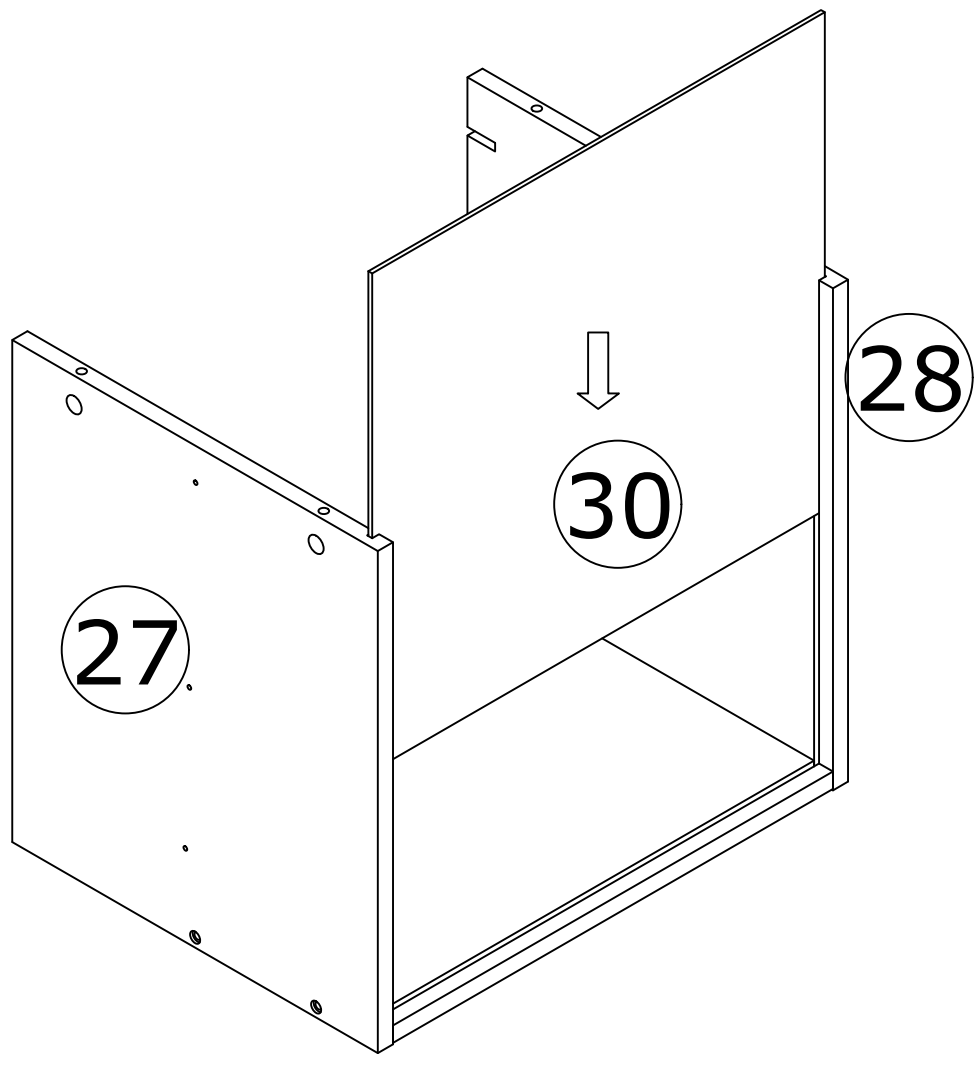

Step:43


A		4
C		4

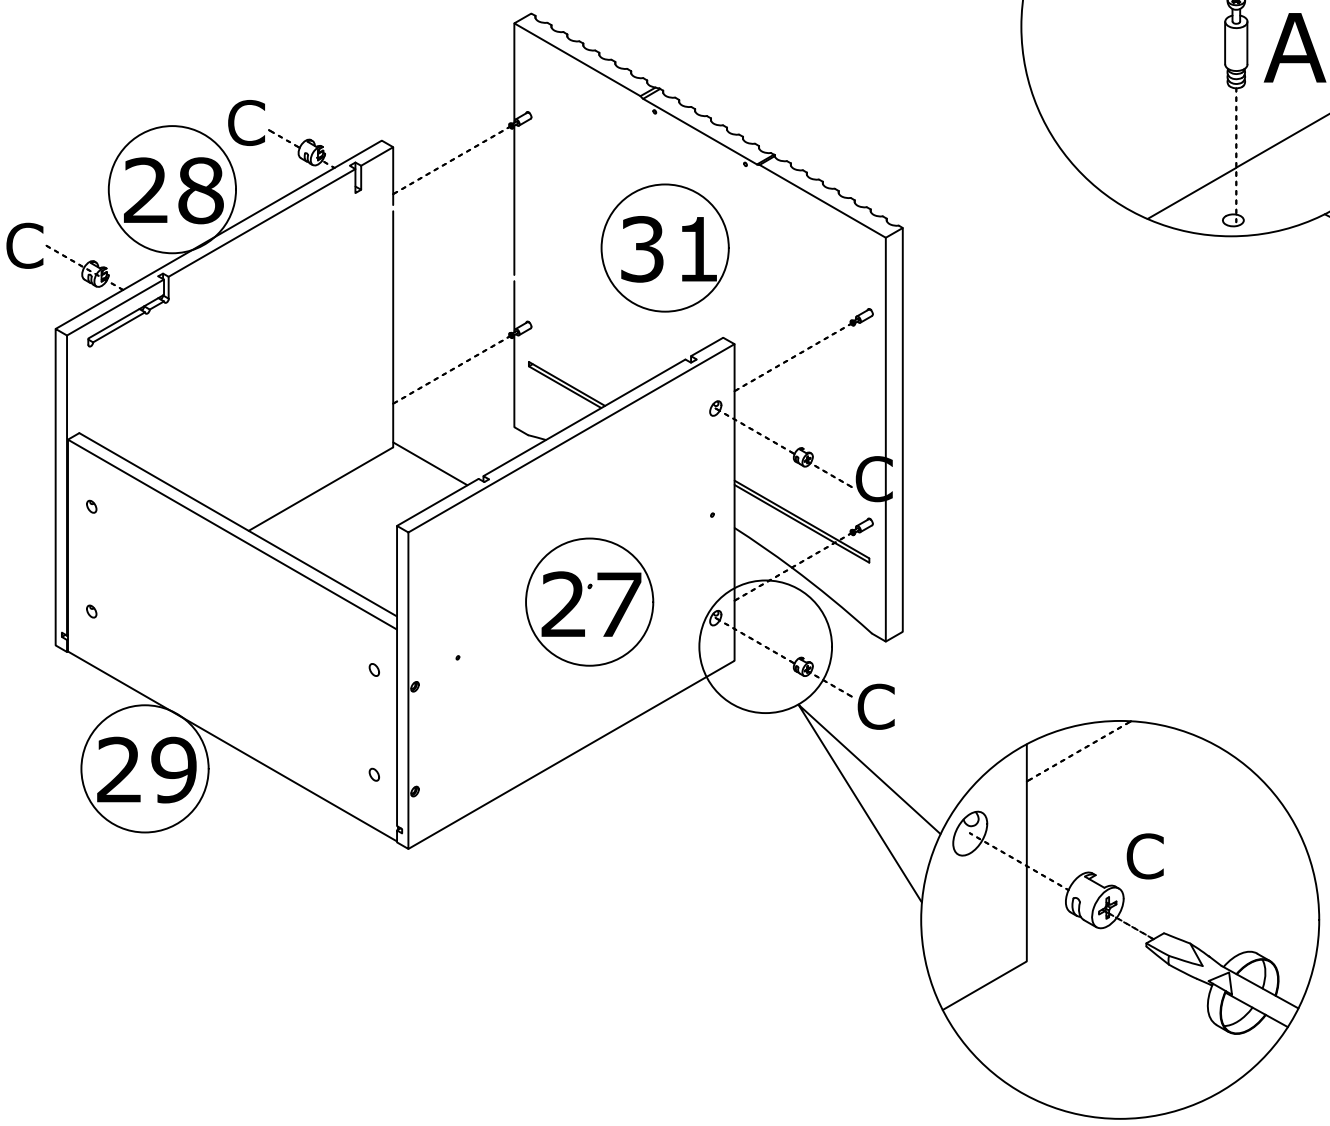

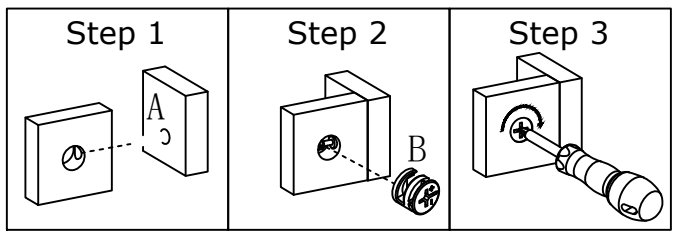


Step:44


T		x4

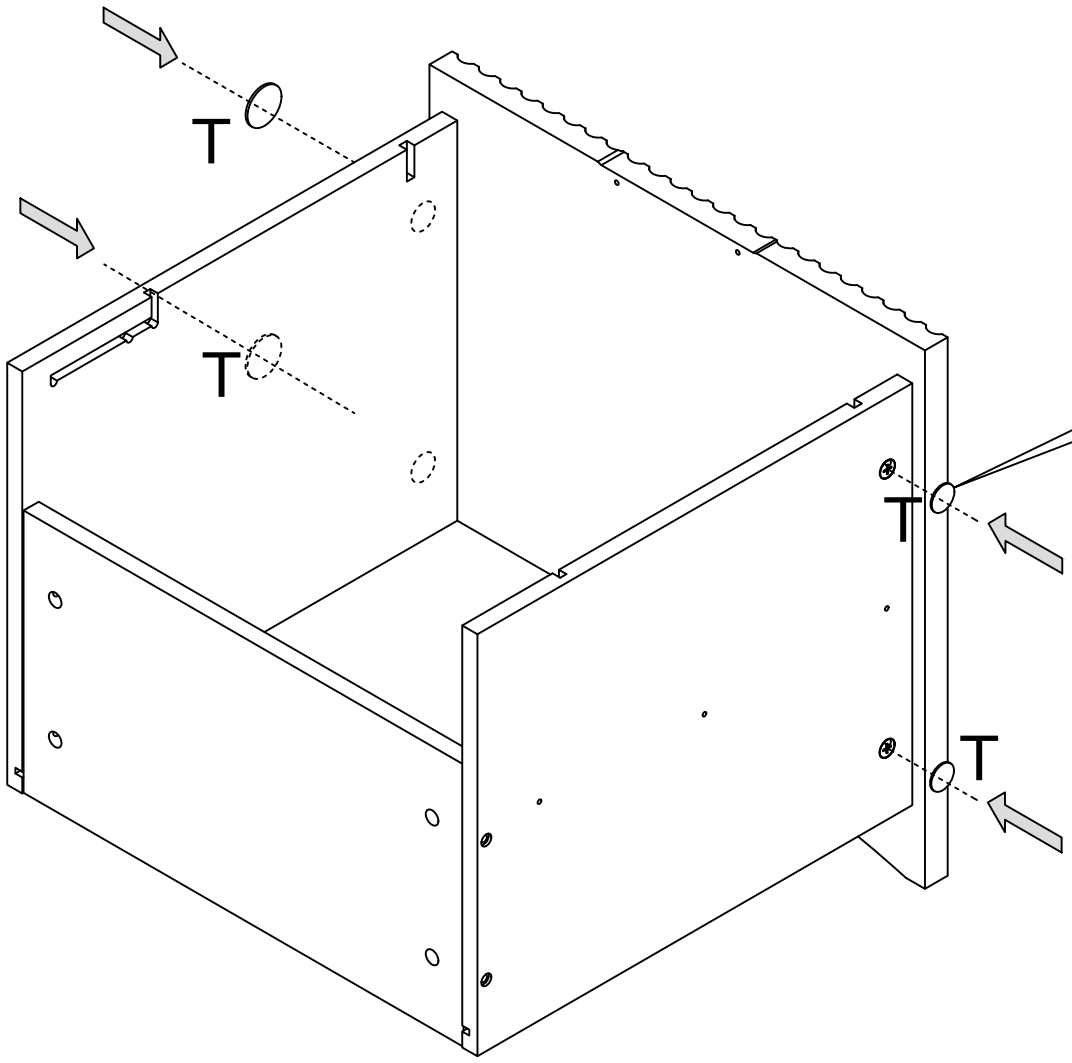


Tear off the pore strip and apply it to the lock handle surface as shown.

Step:45

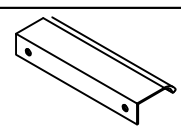
F		x8
M		x1
G-2		x2

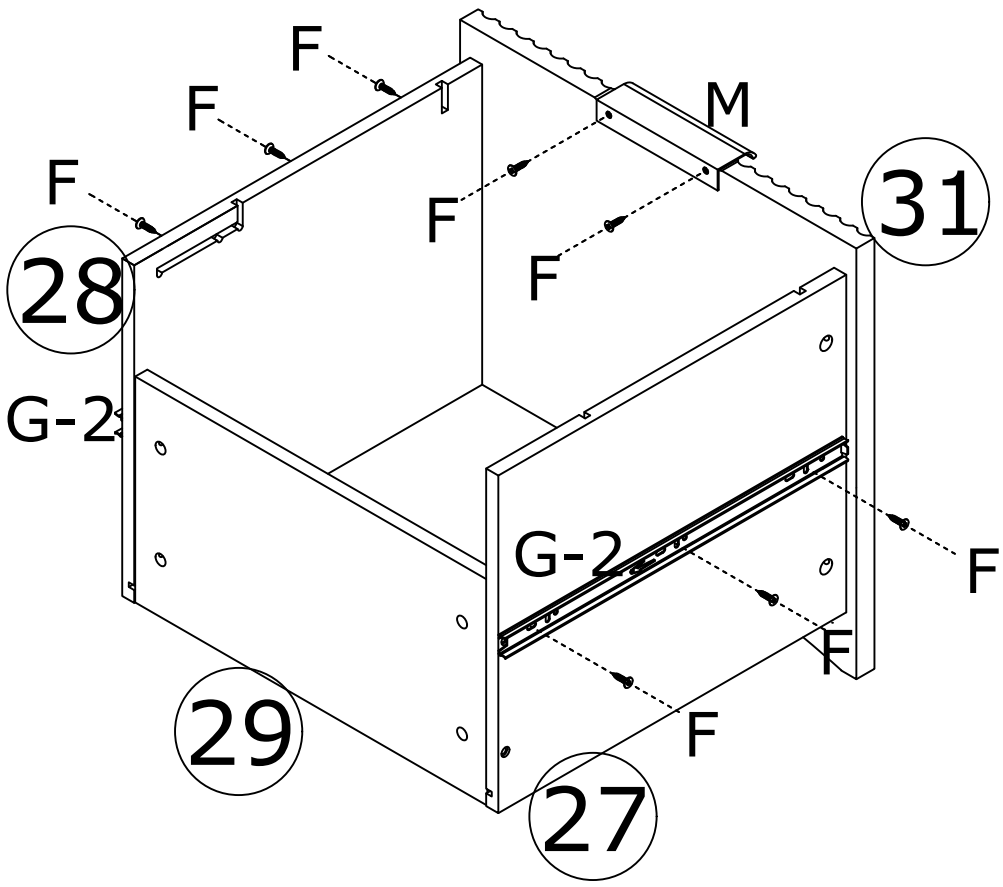


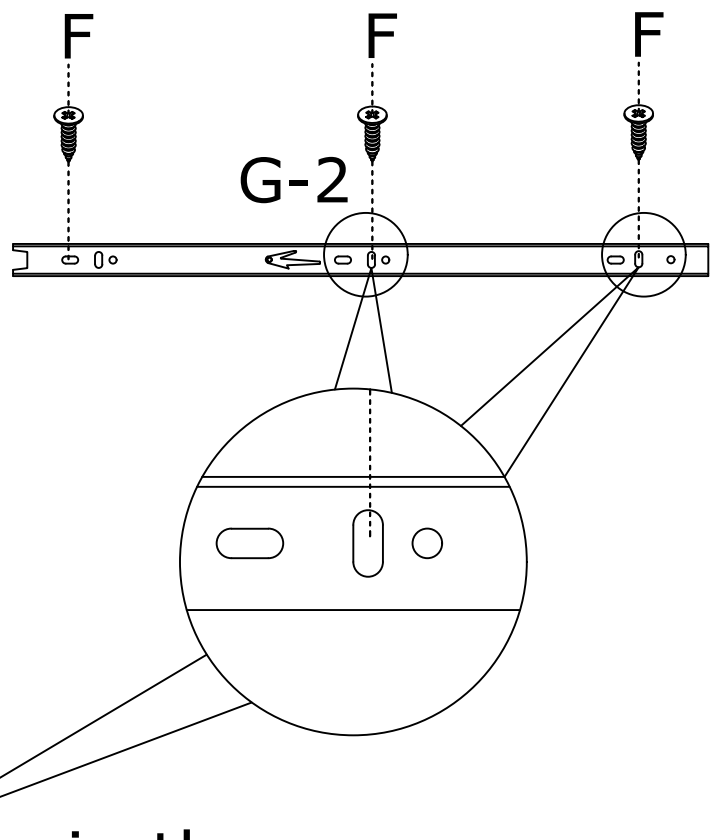


Warm Reminder: Fasten the screw in the middle of the oblong hole, which allows vertical height adjustment.


Step:46

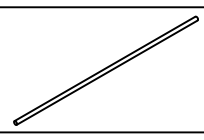P		x2

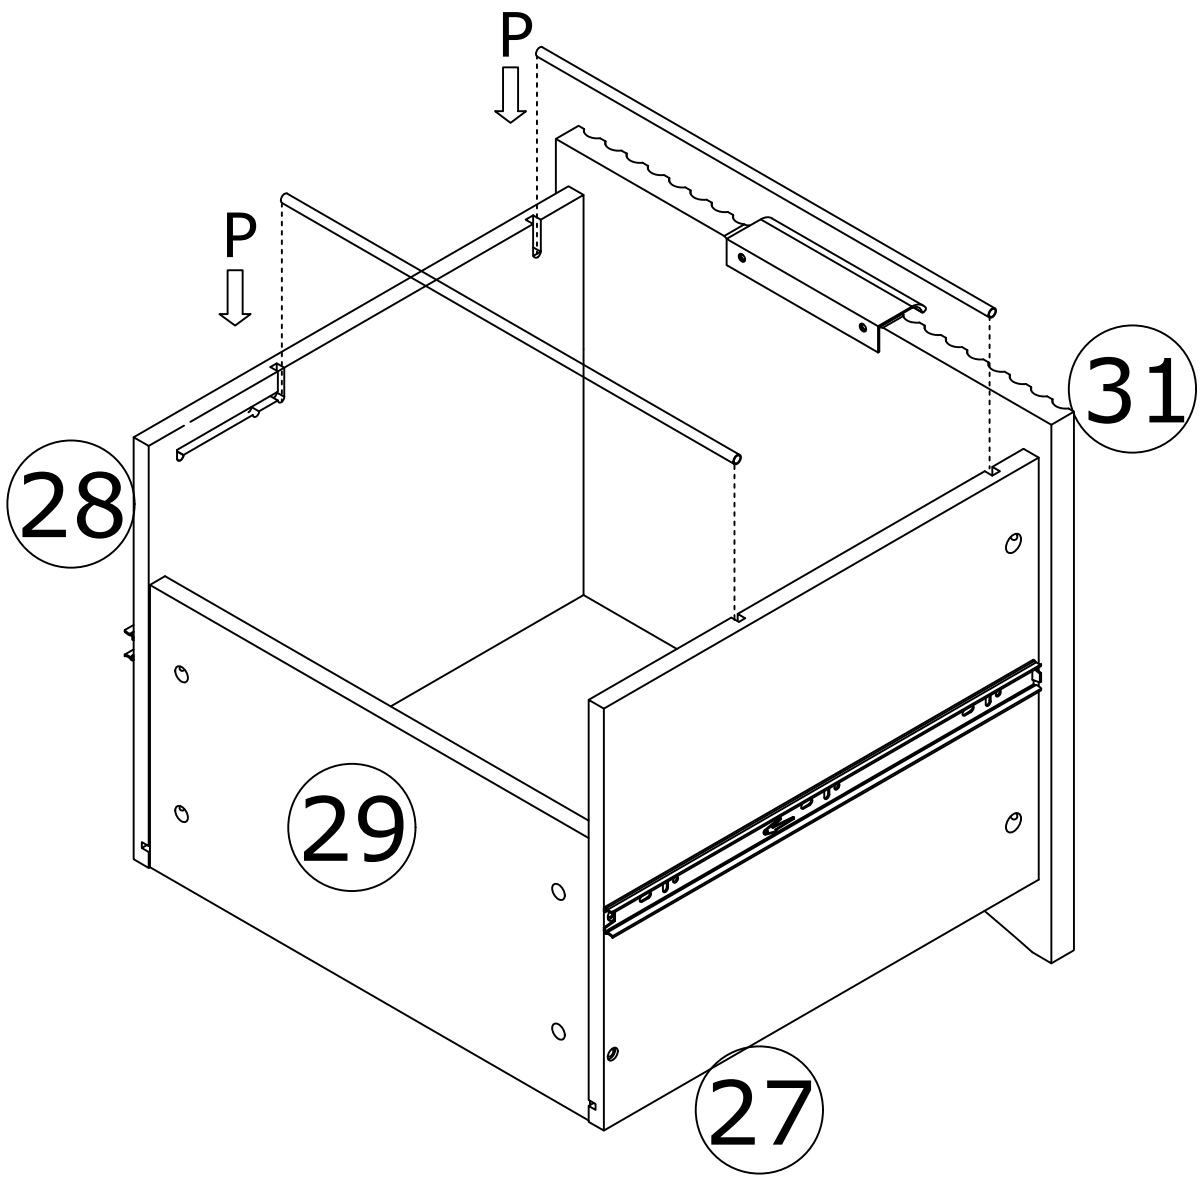


Step:47


I		x16
Q		x2

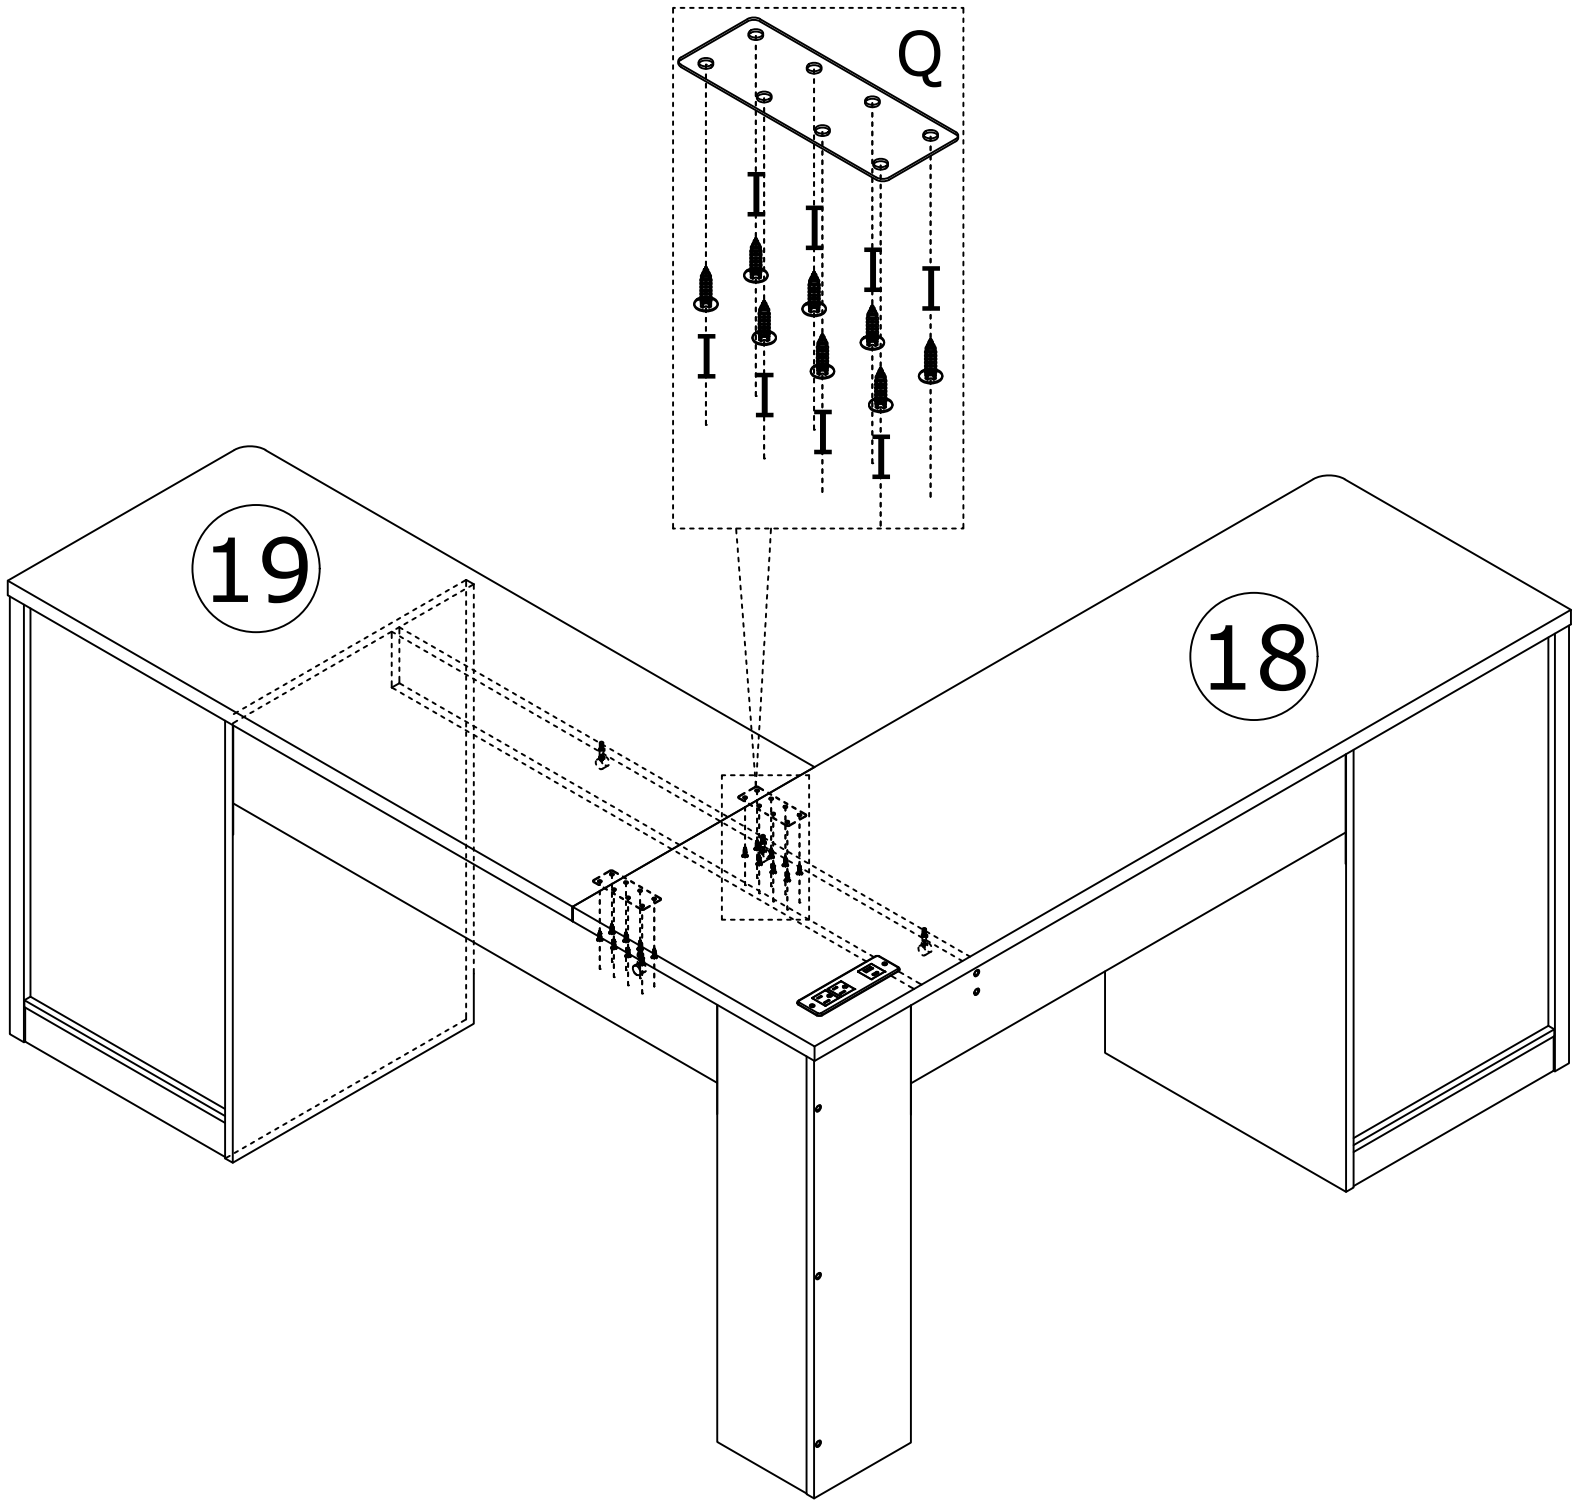


Step:48

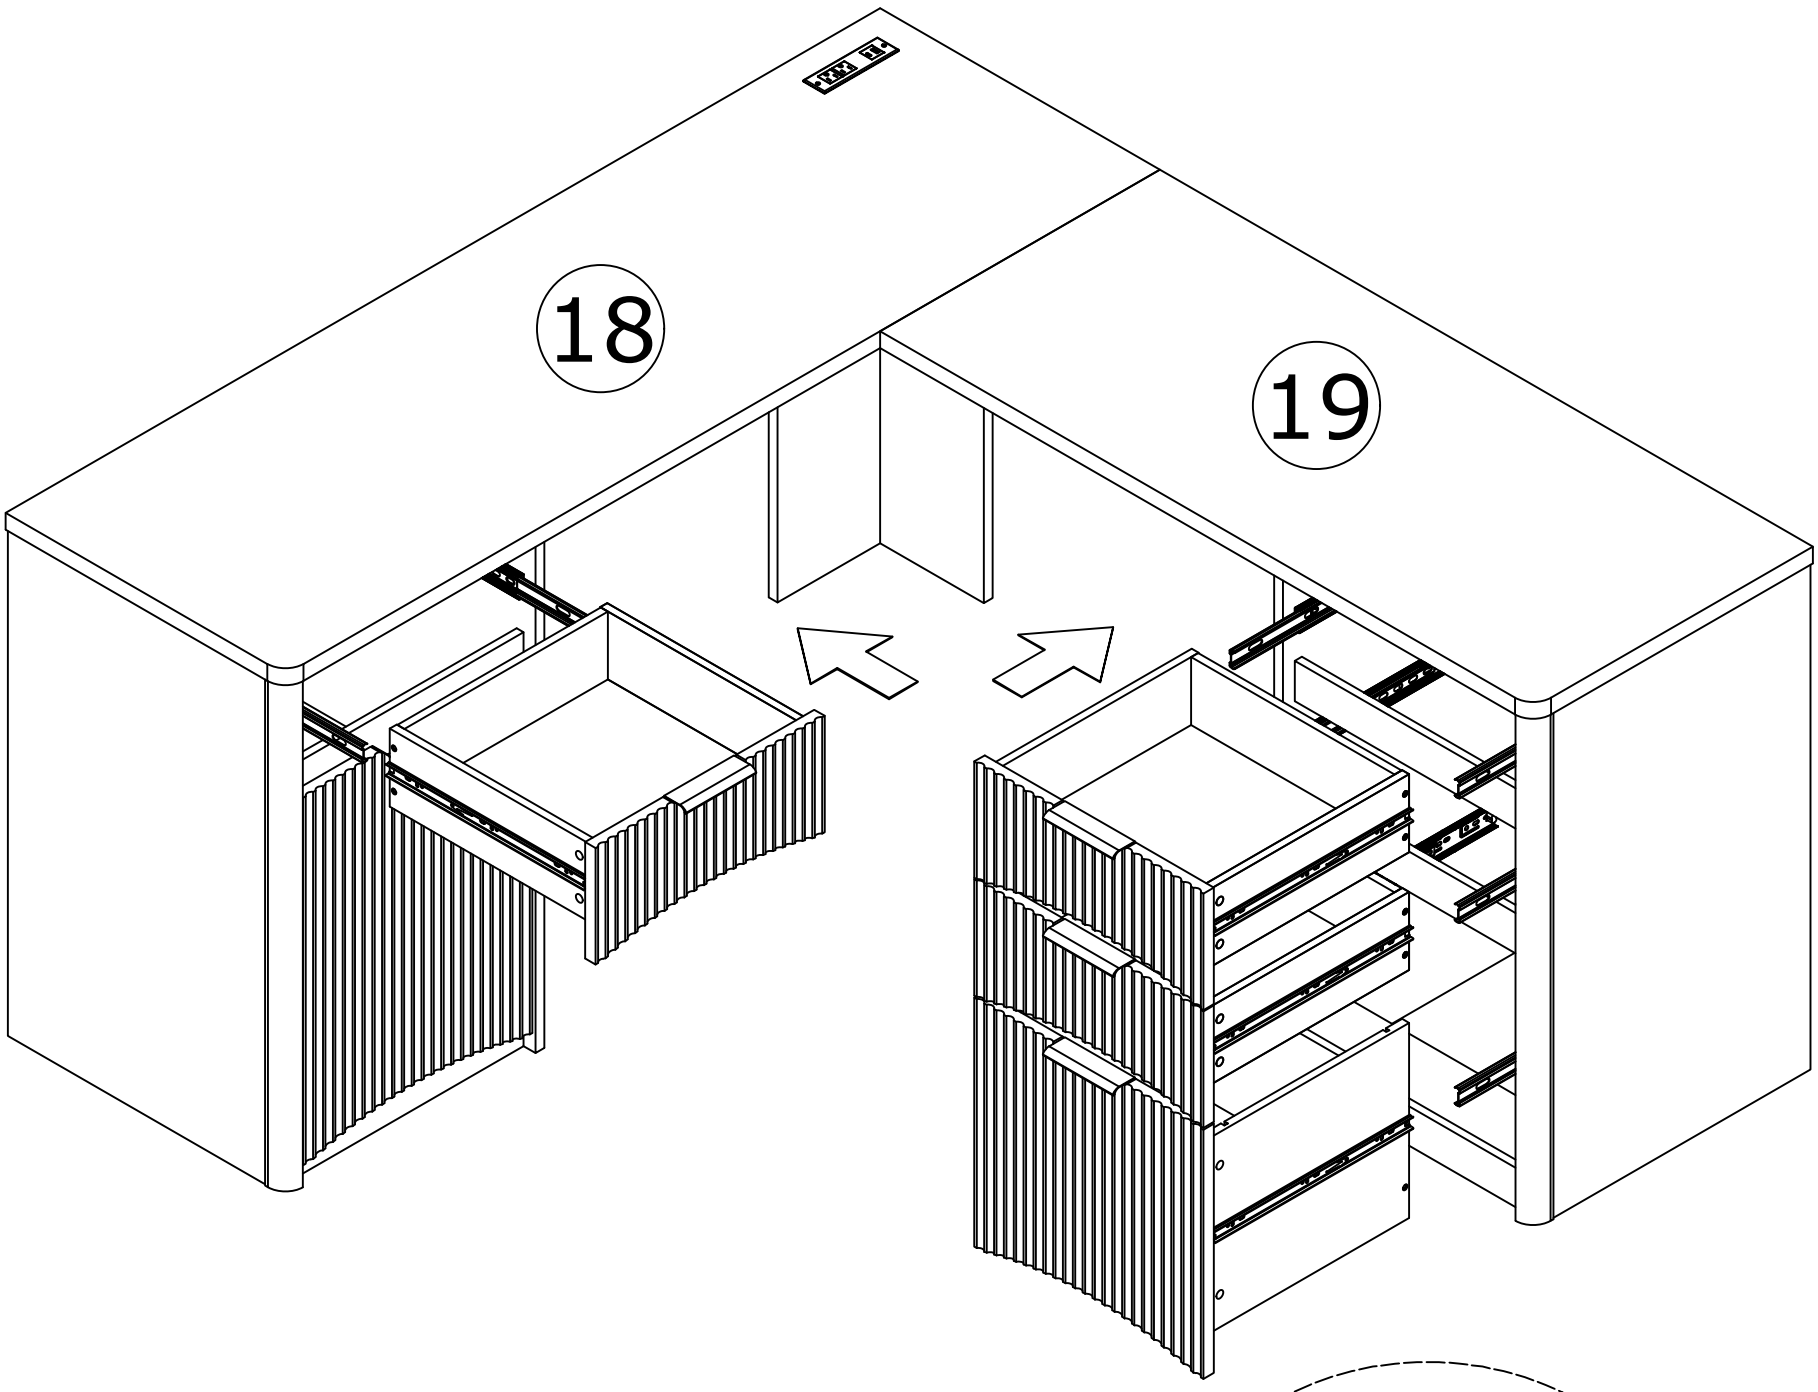


How to Remove drawer if Needed
1) Fully extend the drawer until the leversbecomevisible.
2) Simultaneously press
UPWARD on theleft-side lever and
DOWNWARD on theright-side lever to
disengage the lockingmechanism.
3) Holding the levers in place, extend thedrawer.

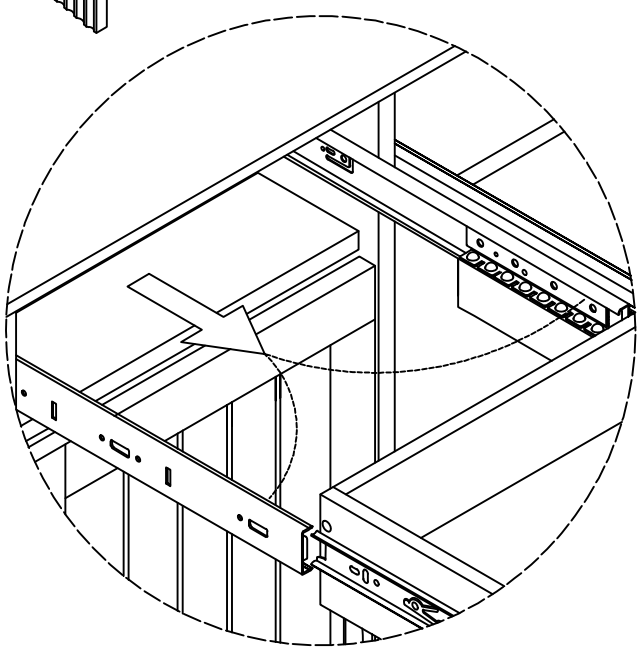

Left Side

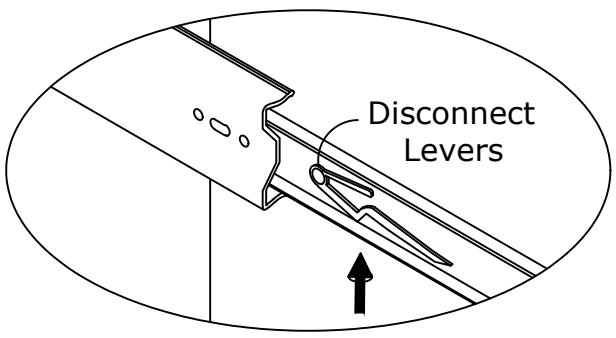

Right Side

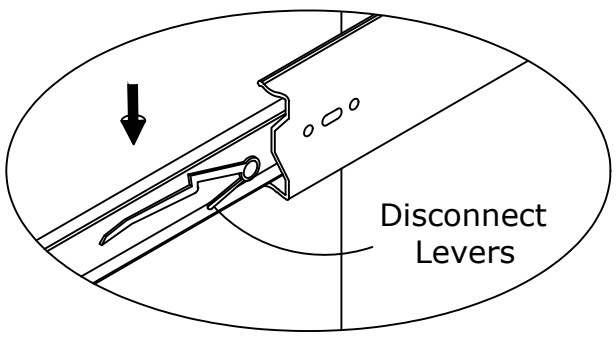

ToInsert Drawer Into Cabinet

1) Slide the ball bearing retainer fully forward along the guide rail, as shown.
2) With two-person coordination, stabilize the cabinet slide while aligning and inserting the drawer slide through the ball bearing retainer channel as shown.
3) Apply controlled forward pressure to insert the drawer, you may encounter slight resistance until both slides fully engage, after which the drawer should glide smoothly.
NOTE: Avoid using excessive force during drawer insertion; improper alignment may damage slide mechanisms.

Step:49

U		x16
R		x16

