



ASSEMBLY INSTRUCTION

- Read the assembly instructions carefully before beginning assembly.
- Ensure the safety of the glass during assembly.
- Do not over tighten the screws and bolts as this may damage the threads.
- Insert the screw into the hole as shown in the figure, follow the arrow in the picture, and then rotate 90° or 180° clockwise.
- Keep the small accessories in the accessory bag away from children.
- The remaining parts are spare parts.
- Kind tips: when installing the white backboard, install the white side inward.
- The operating instruction of RGB light is included in the package.
Read it carefully when assembling .


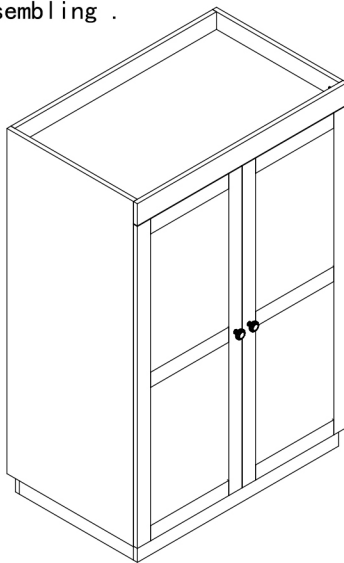


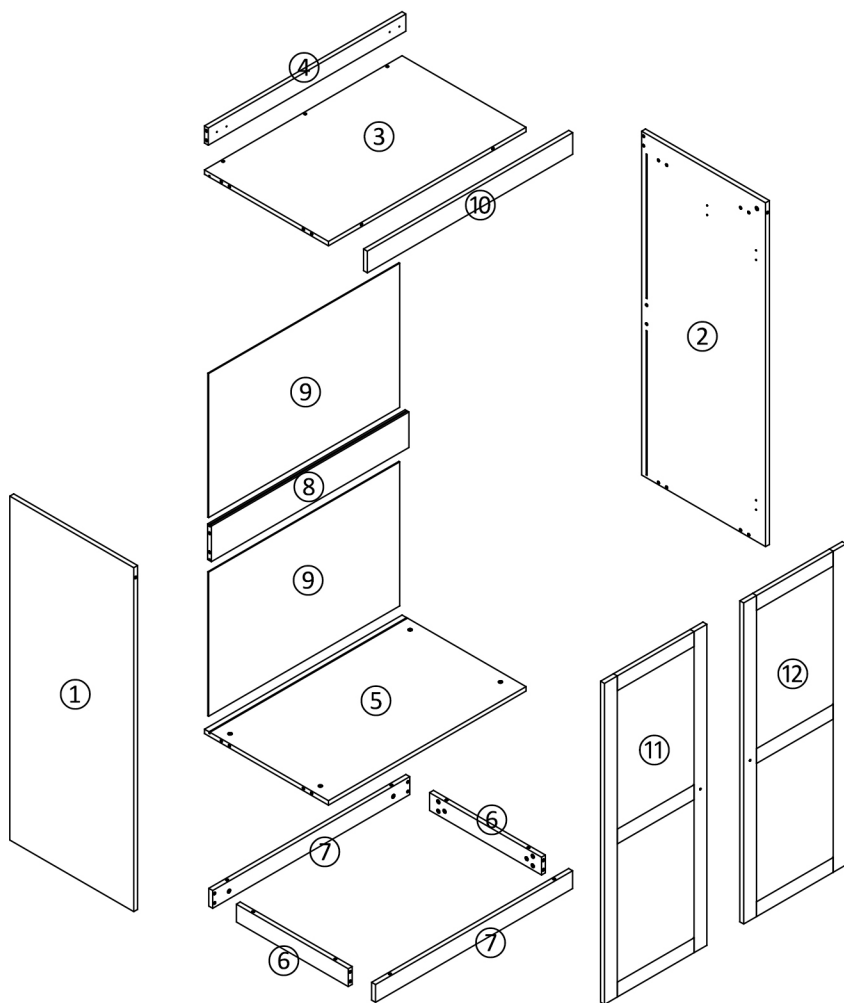

A  39pcs	B  39pcs	C  3.5*14 48pcs	D  4pcs	E  8*40 8pcs	F  2pcs	F1  4*18 2pcs	O  2pcs	X  2pcs	Y  12pcs
AM  Decorative paper 30pcs	AQ  2pcs	AR  1pcs	AG  1pcs						



WARNING

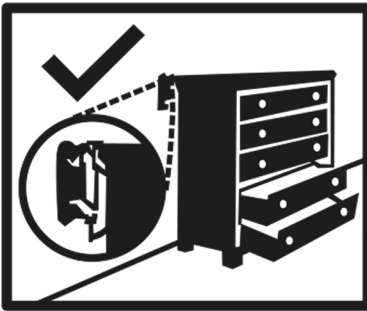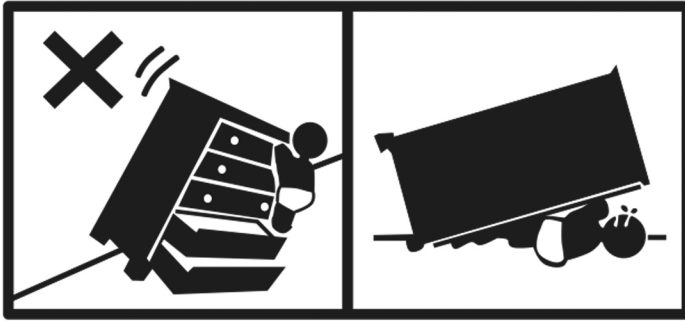

Children have died from furniture tip over. To reduce the risk of tip over:

- ALWAYS secure this furniture to the wall using an anti-tip device.
- NEVER allow children to stand, climb, or hang on drawers, doors or shelves.

Do not defeat or remove the drawer interlock system.



Place heaviest items in the lowest drawers.

NEVER put a TV on this furniture.



Hardware installation demonstration


- Please make sure "A" hardware tightened and can't be pulled out

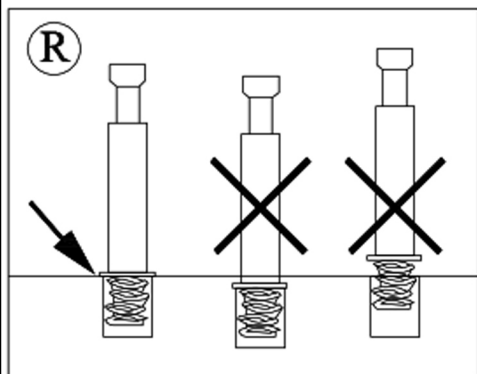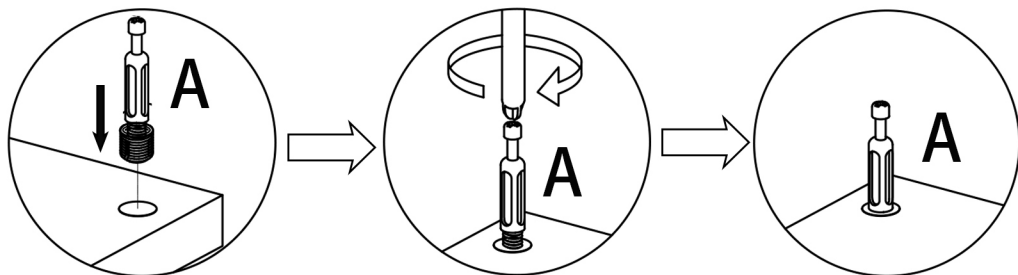



Hardware installation demonstration



- When inserting cam ensure arrowhead on cam points toward the hole on the panel edge

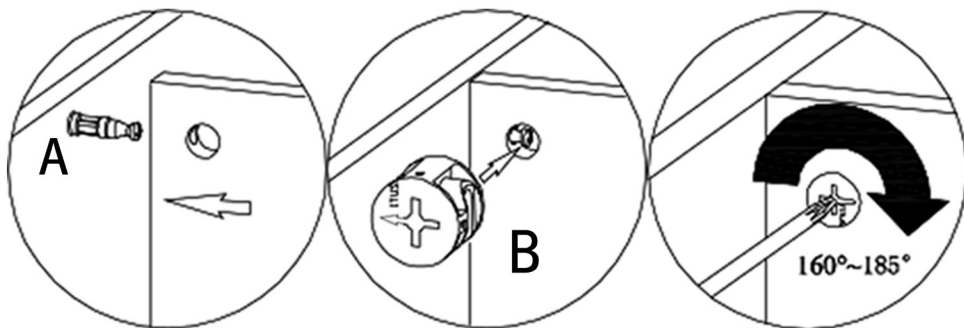





Hardware installation demonstration

Cabinet door front and rear adjustment

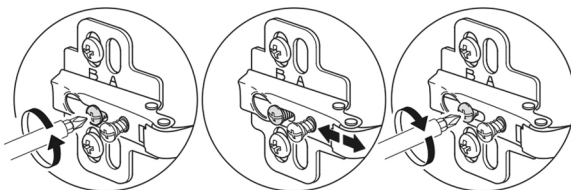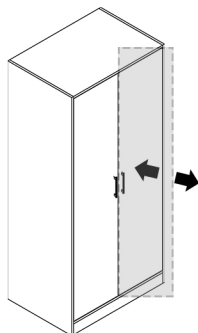



Adjusting screws can change the gap between the door panel and the cabinet side

Cabinet door left and right adjustment

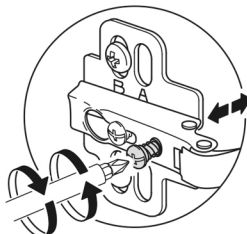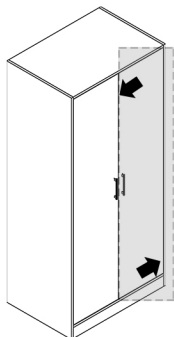



Adjusting screws can change the door panel relative to the cabinet next to the coverage

Cabinet door up and down adjustment

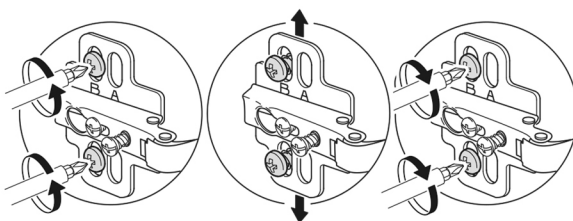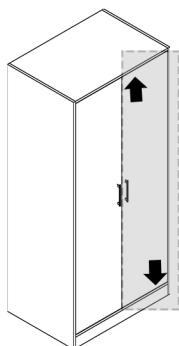



Adjusting screws can correct the upper and lower clearance of the door panel

STEP 1

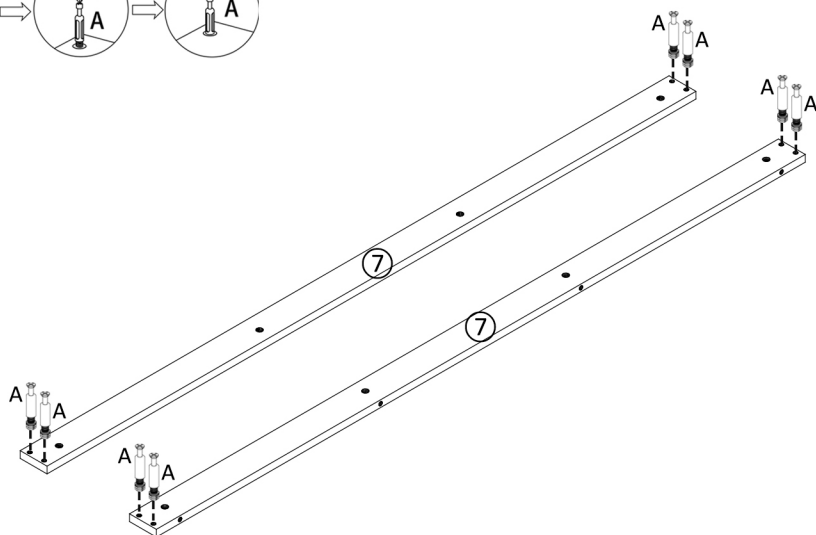



A*8

STEP 2

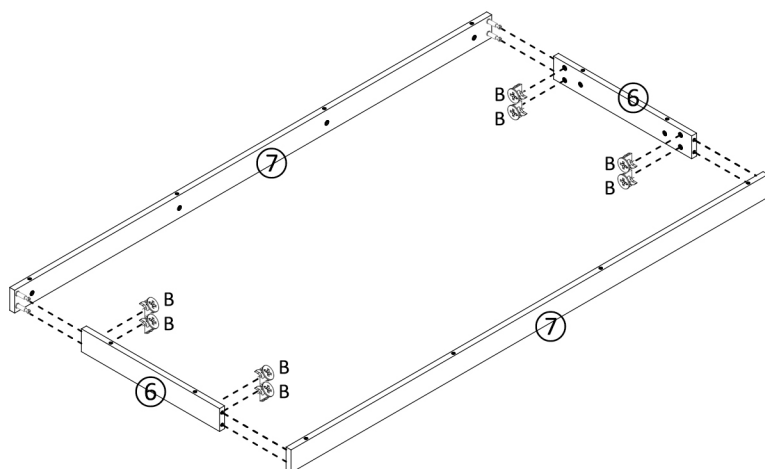



B*8

STEP 3

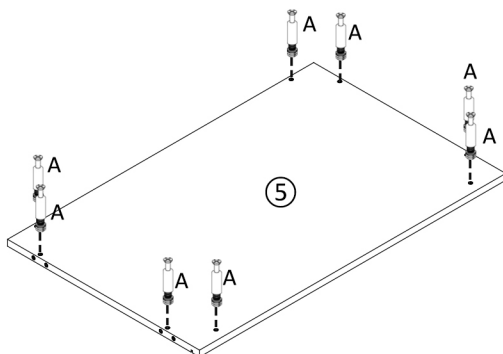


A*8

STEP 4

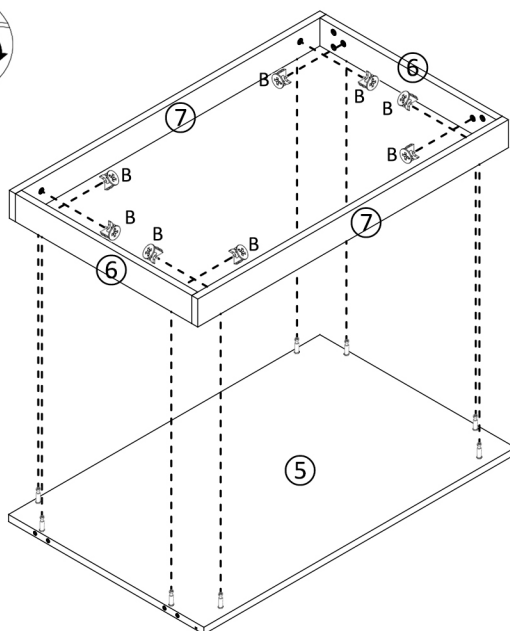


B*8


STEP 5

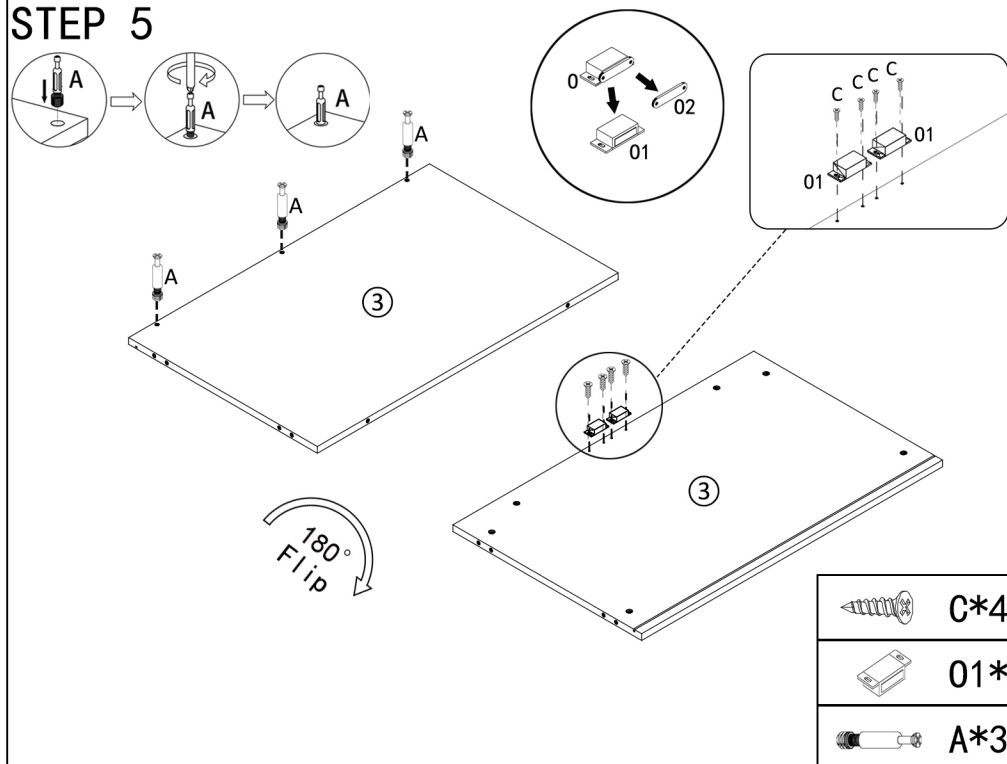


STEP 6

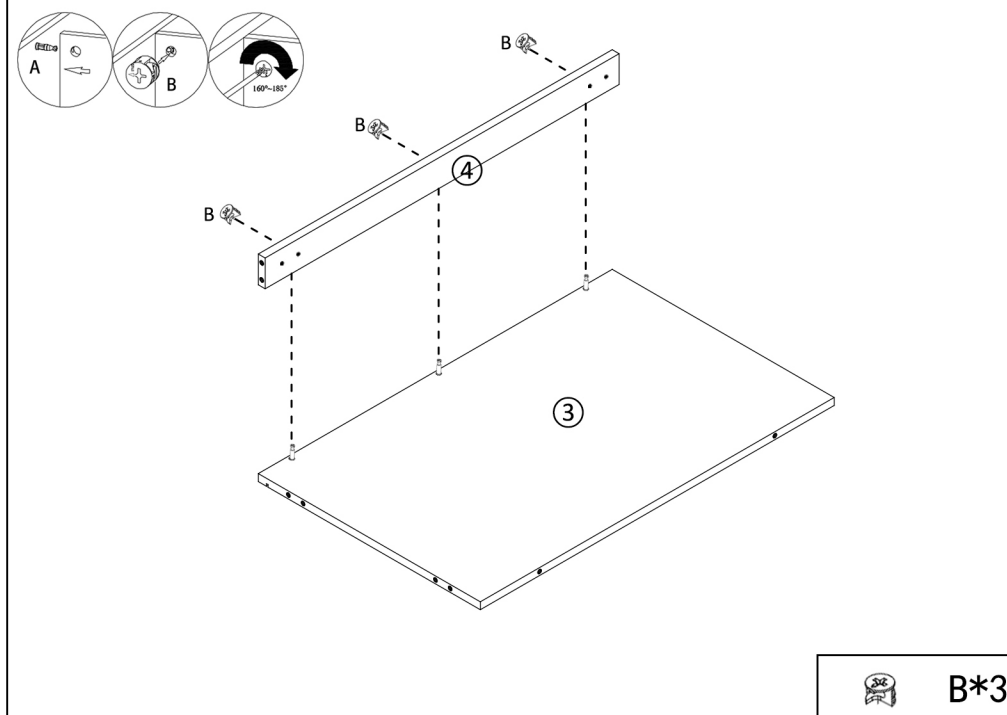



STEP 7

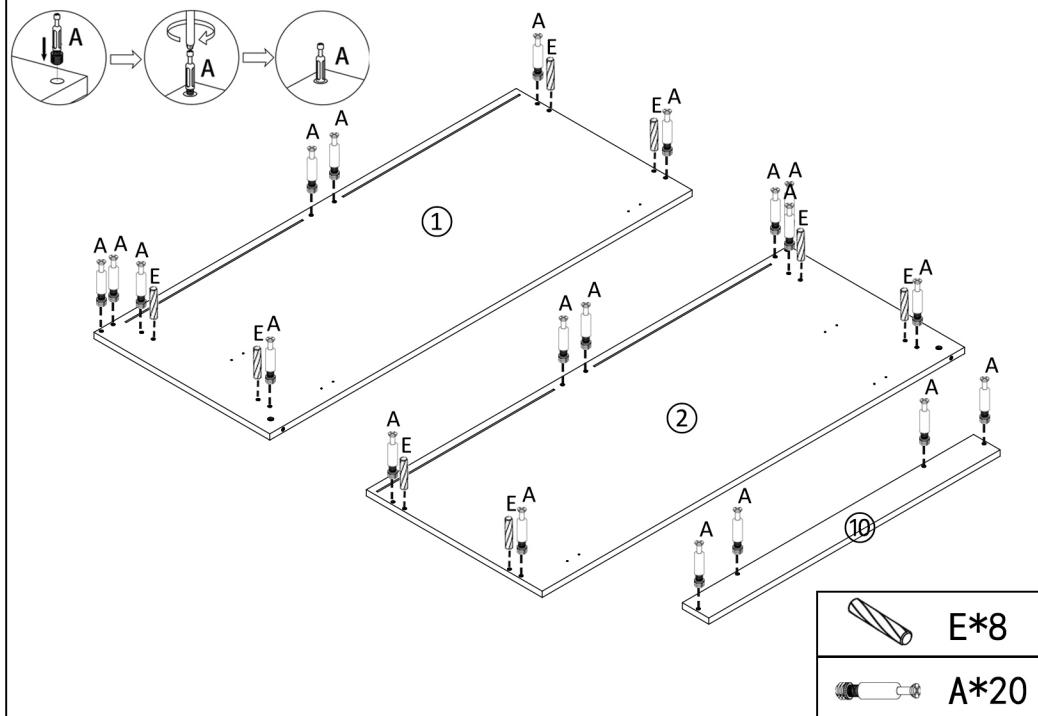

STEP 8


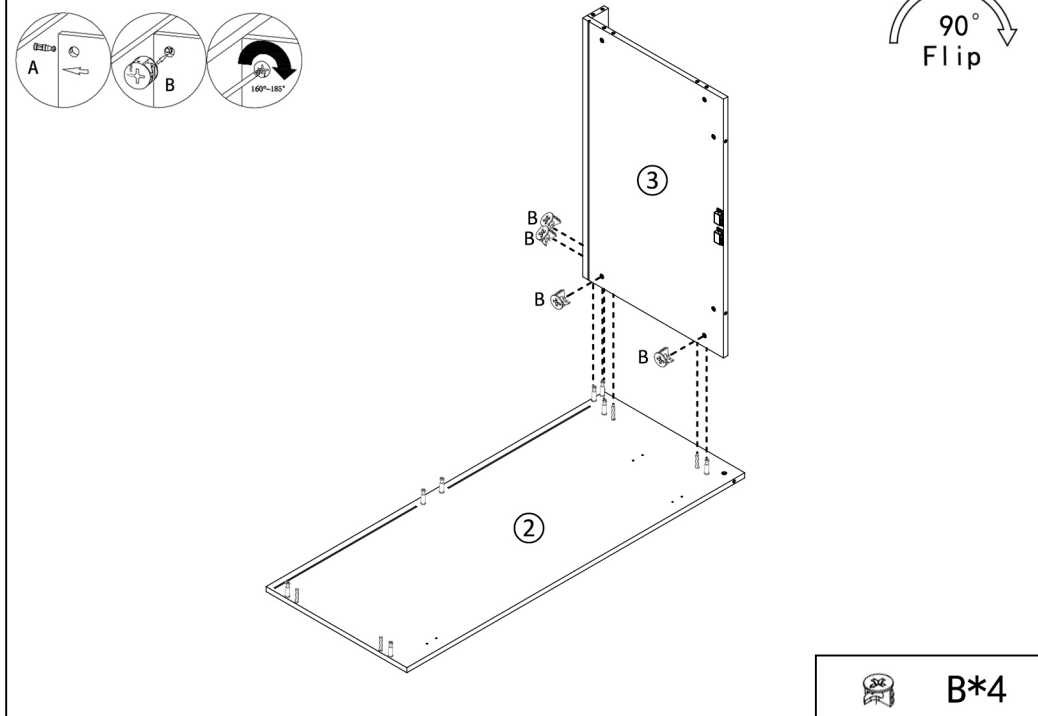


STEP 9

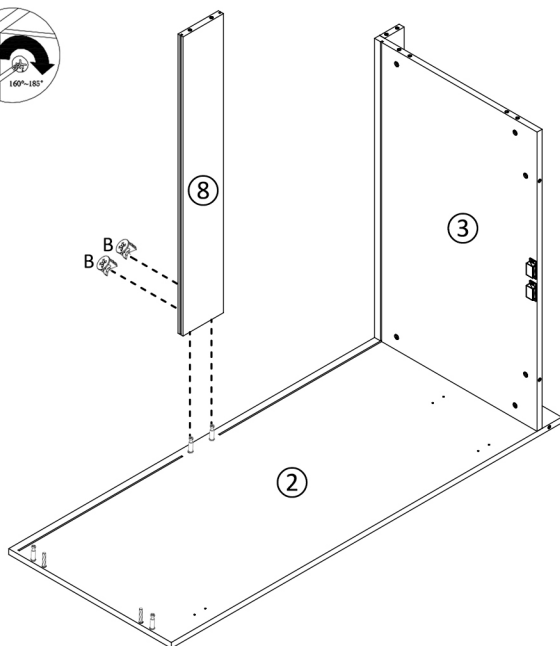


B*2

STEP 10

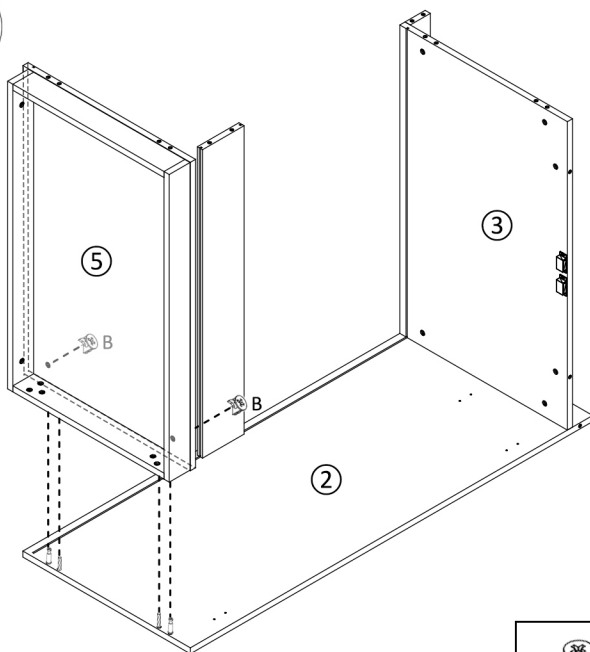



B*2

STEP 11


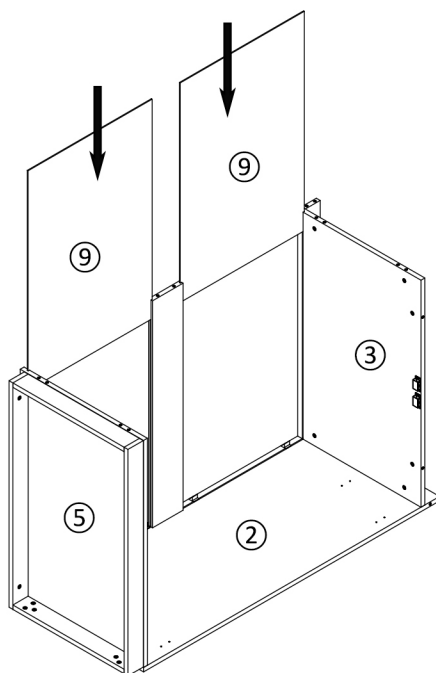


STEP 12

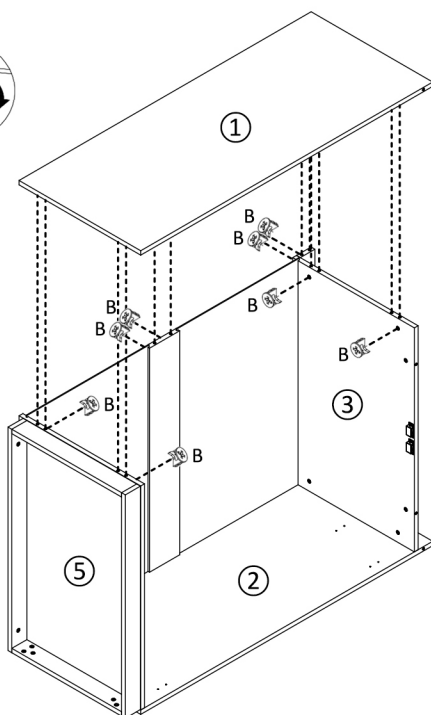





B*8

STEP 13

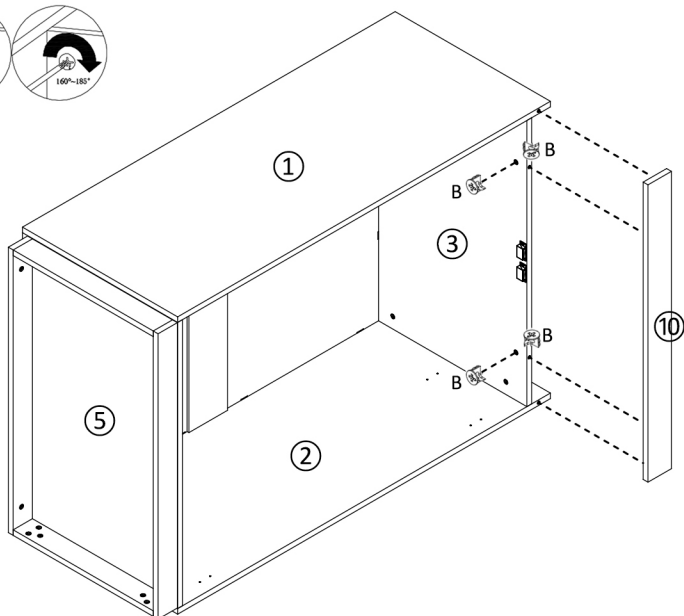

B*4

STEP 14

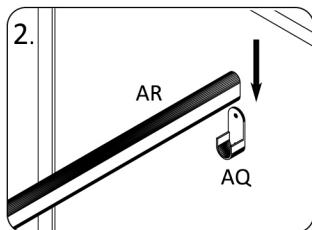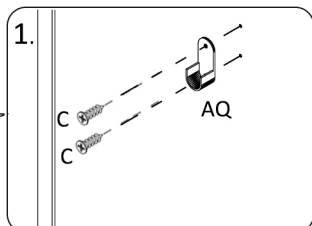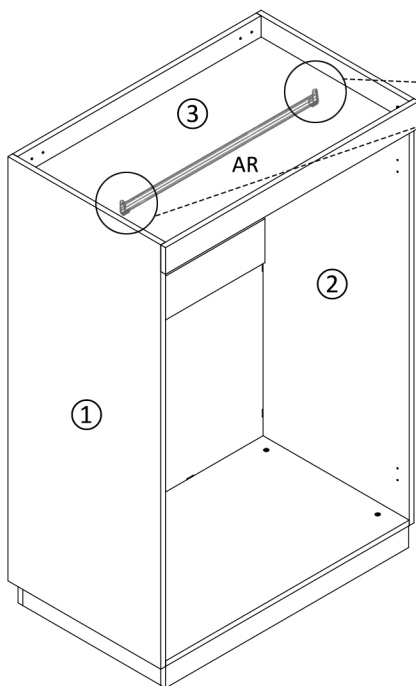

C*4





AQ*2



AR*1



short

STEP 15

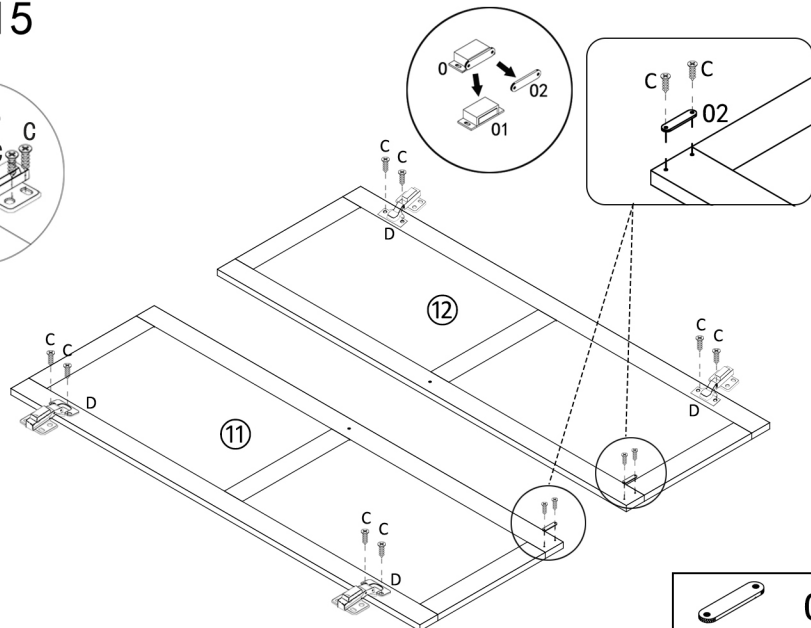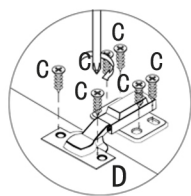



	02*2
	D*4
	C*12

STEP 16

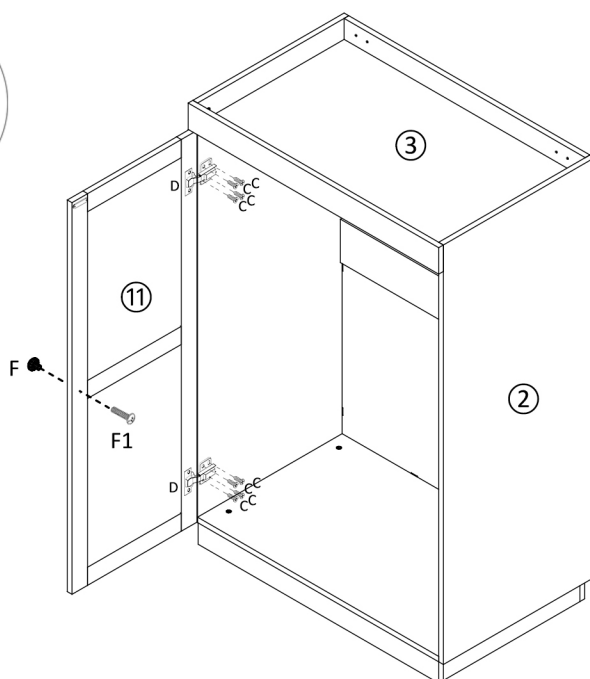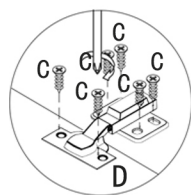






	F*1
	F1*1
	C*8

STEP 17

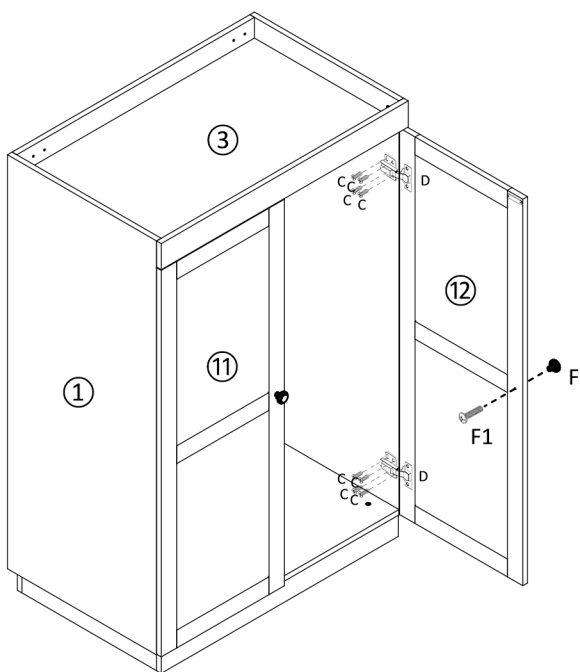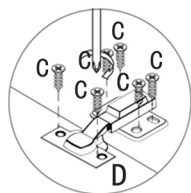

	F*1
	F1*1
	C*8




STEP 18

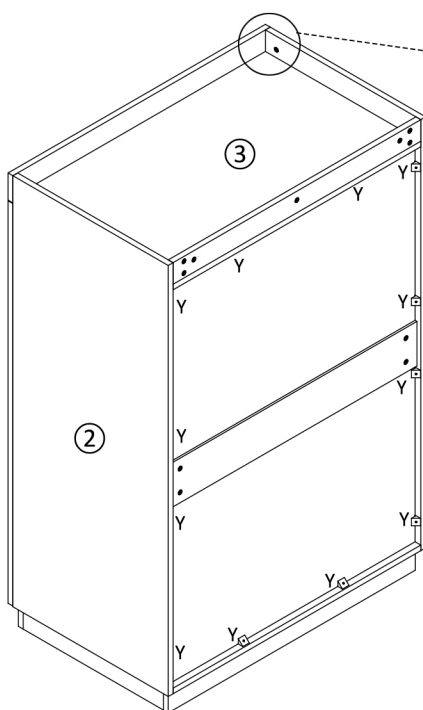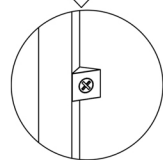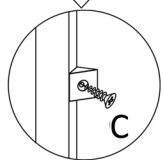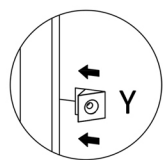

	AM*30
	Decorative paper
	Y*12
	C*12

Use tools to install if necessary

STEP 19

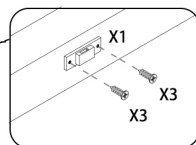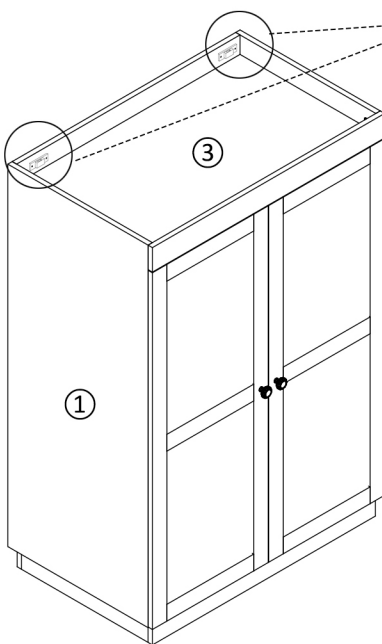
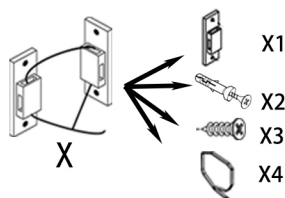


Please separate the parts in bag No.X according to the picture and mark them as X1, X2, X3, and X4.


	X3*4
	X1*2

STEP 20


1. One side of the anti-toppling safety belt is installed on the cabinet body
2. The other side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened

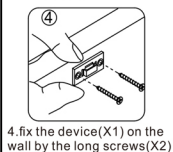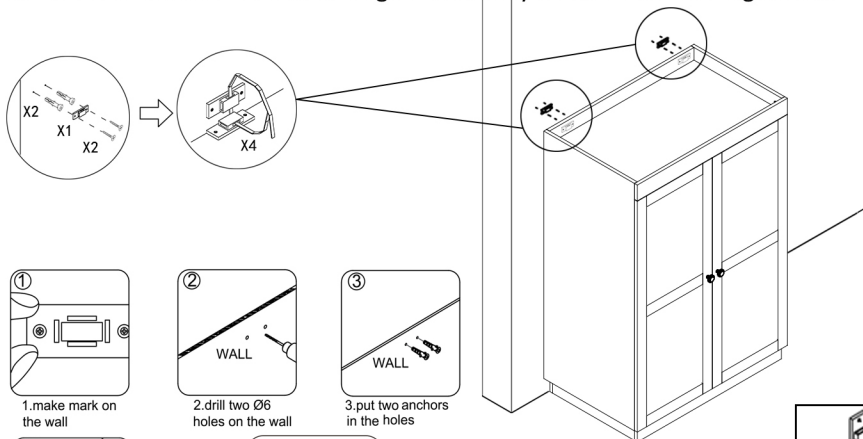


1. make mark on the wall

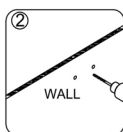


2. drill two Ø6 holes on the wall

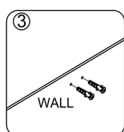

3. put two anchors in the holes



4. fix the device(X1) on the wall by the long screws(X2)



5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on belt (X4) to tighten it.

	X1*2
	X4*2
	X2*4