

kubeez Assembly Instructions

1. Hand screw pins into 4 places on each of the 2 cabinet ends.



Note: Fully tighten pins so flange is flush with material face.


2. Hand screw pins into 2 places on each of the 2 cabinet shelves.




3. Place one end onto shelf by aligning pins with plastic cams. Be sure the groove in ends is in line with the groove in shelf. Tighten cam lock onto pins holding screwdriver about 25 degrees from vertical position as shown.



4. Repeat for other end.

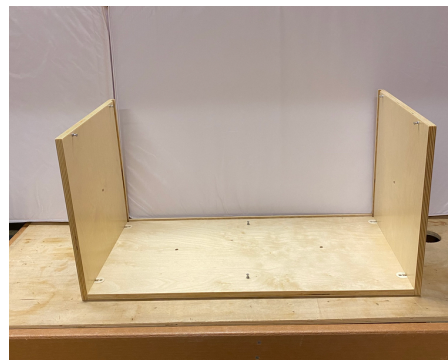

5. Insert back by sliding in from the top side through the groove. Make sure it goes all the way down into bottom groove.

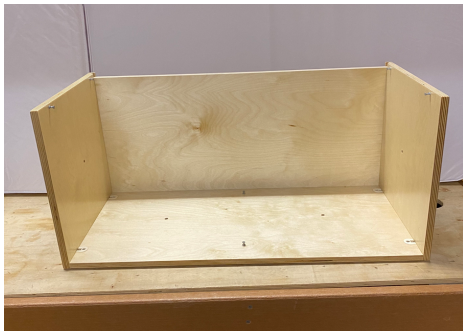

6. Place the remaining shelf on top and align with pins and slot/back. Tighten all 4 plastic cams to secure top shelf.



7. Insert divider panel onto pins in center of shelves. The side of divider with shortest distance between cam and edge is inserted toward back of cabinet. Tap into place with hand. Fullt tighten cams.



Parts List:

(2) shelves with cams

(2) ends

(1) back (1) divider w/cams

(12) assembly pins



WARNING:

ADULT ASSEMBLY REQUIRED

Assembly kit contains parts with sharp points.

Manufactured by: Factory Select
22829 US-72, Athens, AL 35613
call 800-594-9346 with any problems.