




# IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



① x1




② x1



③ x1



④ x1



⑤ x2



⑥ x6



⑦ x1



⑧ x1



⑨ x1




⑩ x1




⑪ x1




⑫ x3



⑬ x1

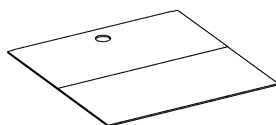

⑭ x1



⑮ x3








⑯ x3













⑰ x3













⑱ x3


A	x33	B	x21	C	x30	D	x8	E	x33
									
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø8x20mm		Ø30mm	

F	x24	G	x12	H	x1	I	x4	J	x3
									
Ø4x32mm		Ø15x9mm		M4x57mm		M6x12mm		L300mm	


K	x3	L	x3	M	x3	N	x8	O	x3
									
L300mm		L300mm		L300mm		Ø4x25mm		Ø4x44mm	

P	x36	Q	x2	R	x1	S	x2	T	x6
									
Ø3.5x12mm		59x59x14mm				58x20x20mm			

U	x6	V	x3	W	x3	Y	x2	Z	x8
									
Ø3x17mm		Ø4x8mm				Ø3.5x12mm		Ø3.5x12mm	

AA	x1
	


# 1




① x1



② x1



③ x1




④ x1




⑤ x2




⑪ x1



Ⓐ x21

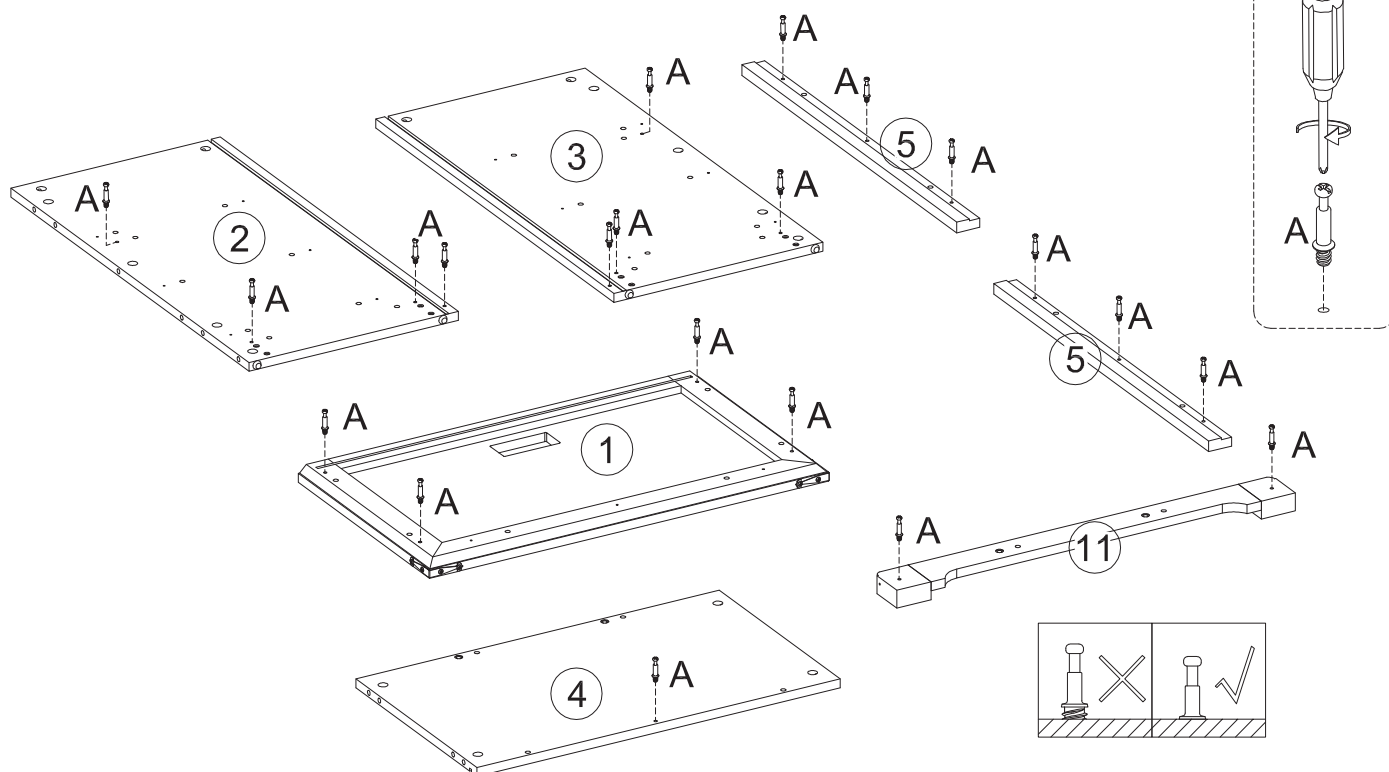

# 2




① x1




⑦ x1




Ⓒ x2



⓪ x3

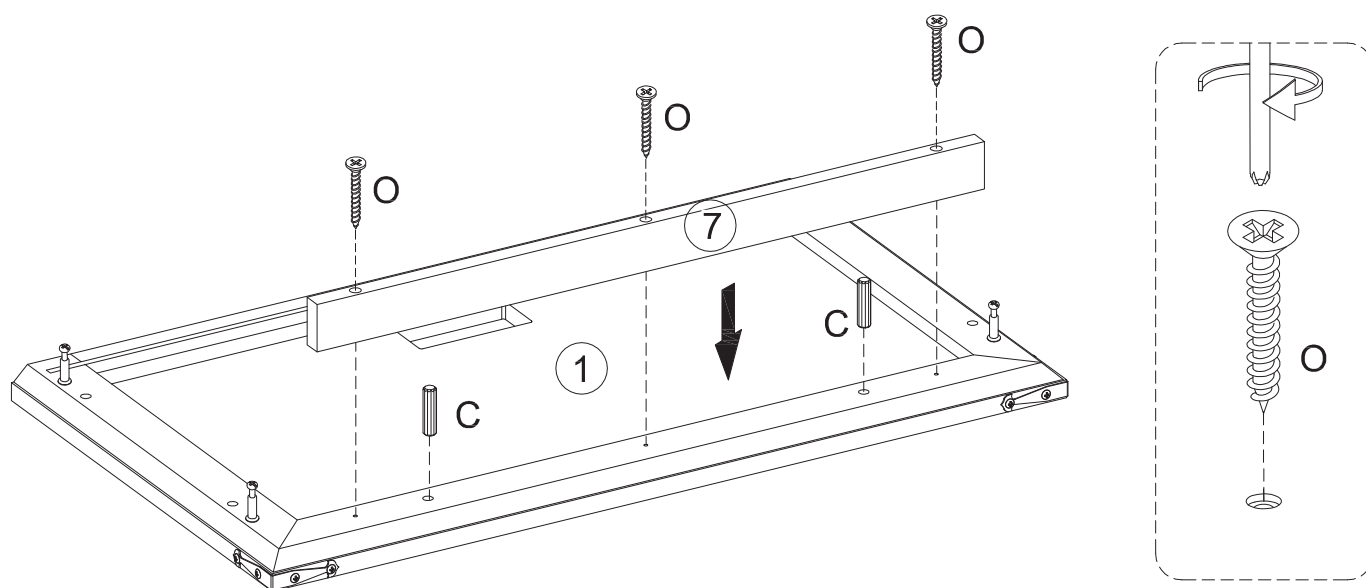

# 3



3 x1






5 x1




C x2



B x3

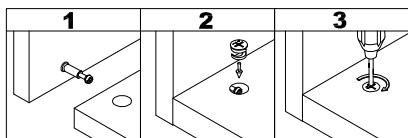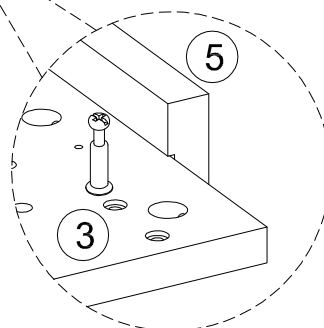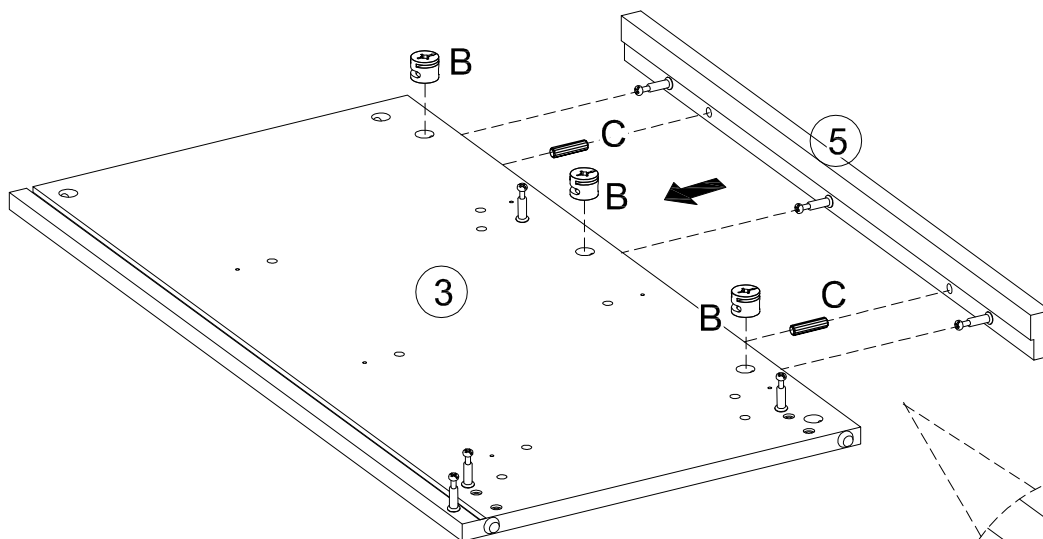

# 4



2 x1






5 x1




C x2



B x3

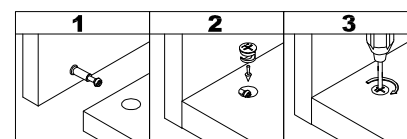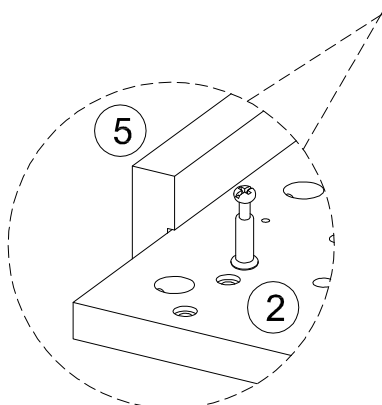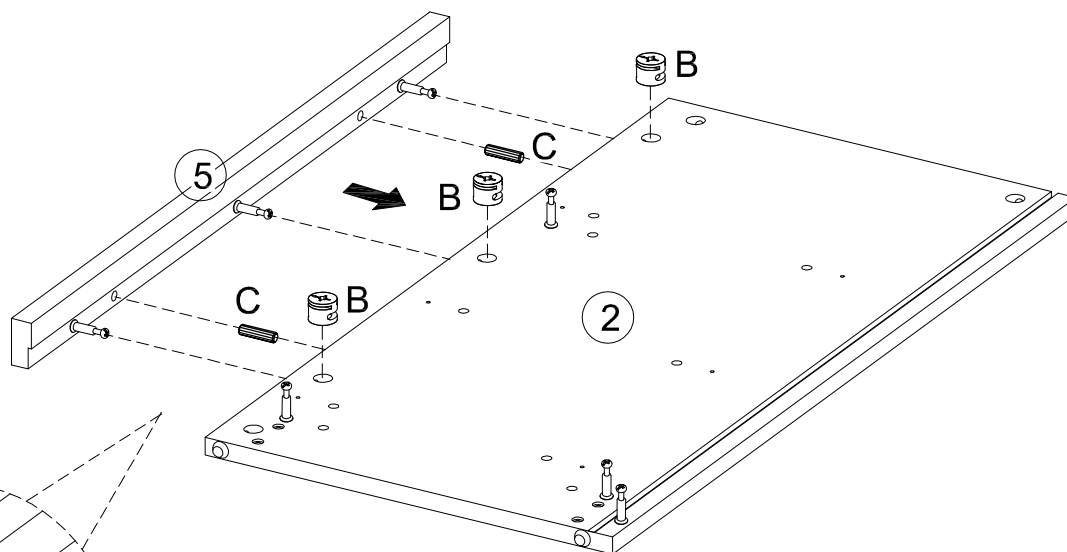


# 5

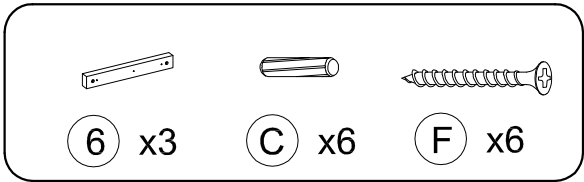


Pay attention to the orientation of the hole.


Finished edges

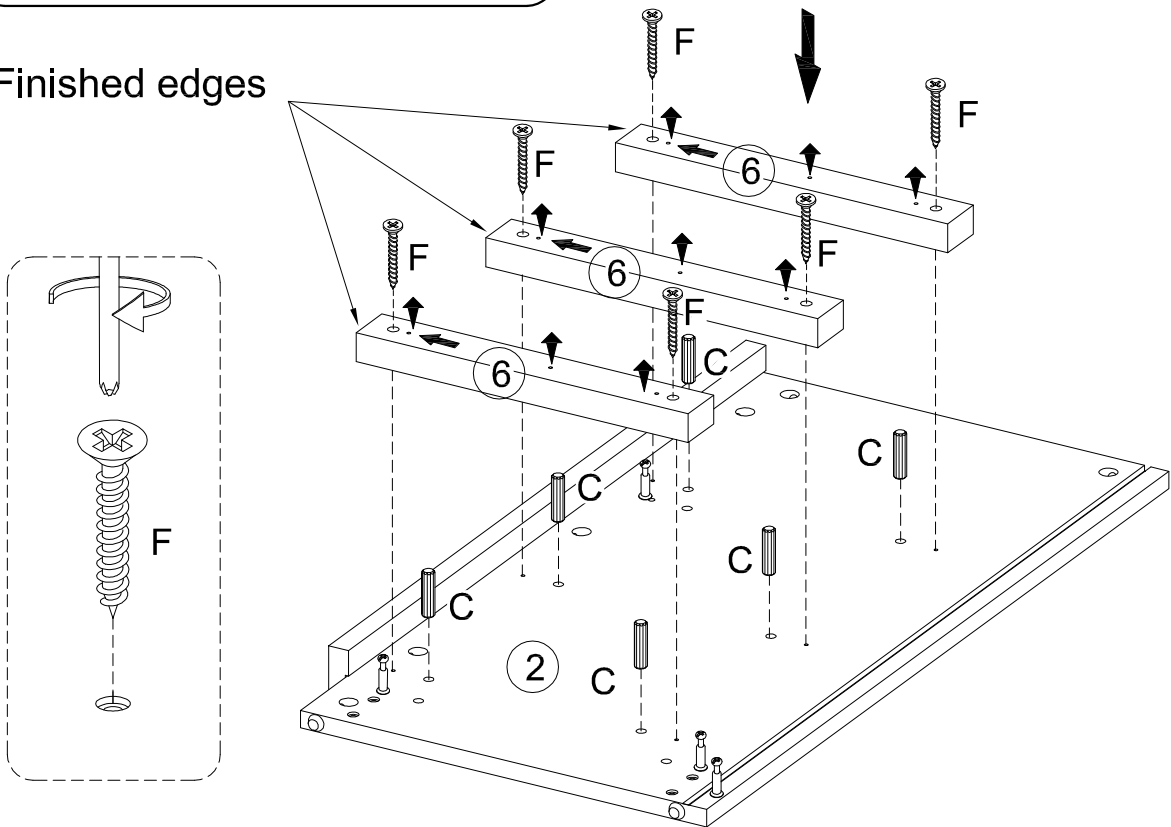

# 6

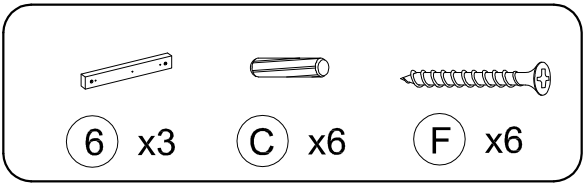

Finished edges

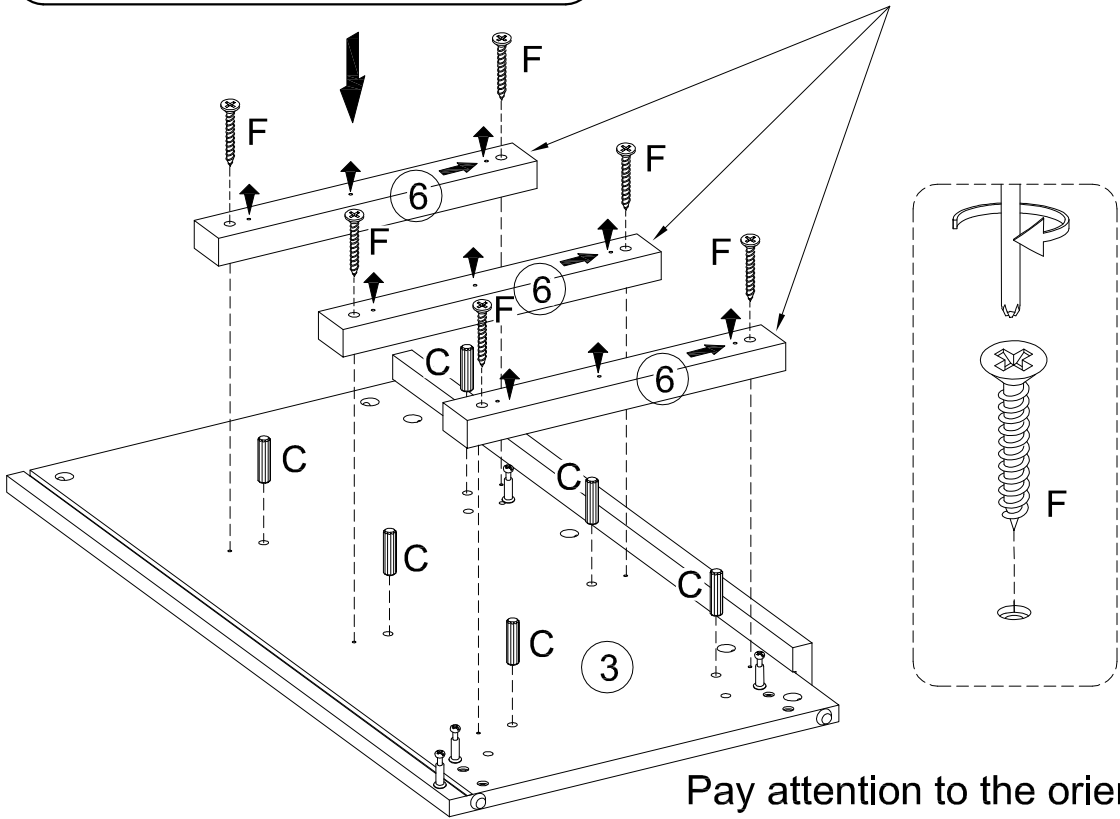

Pay attention to the orientation of the hole.





# 7



(K) x3



(P) x9

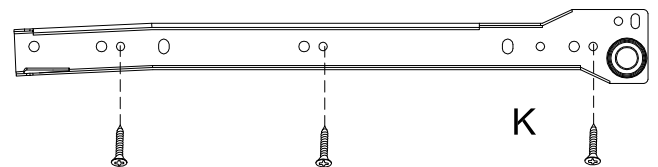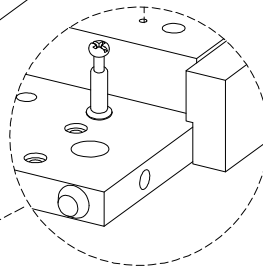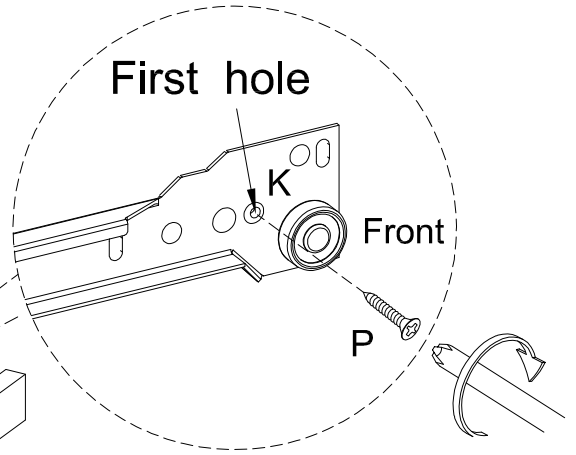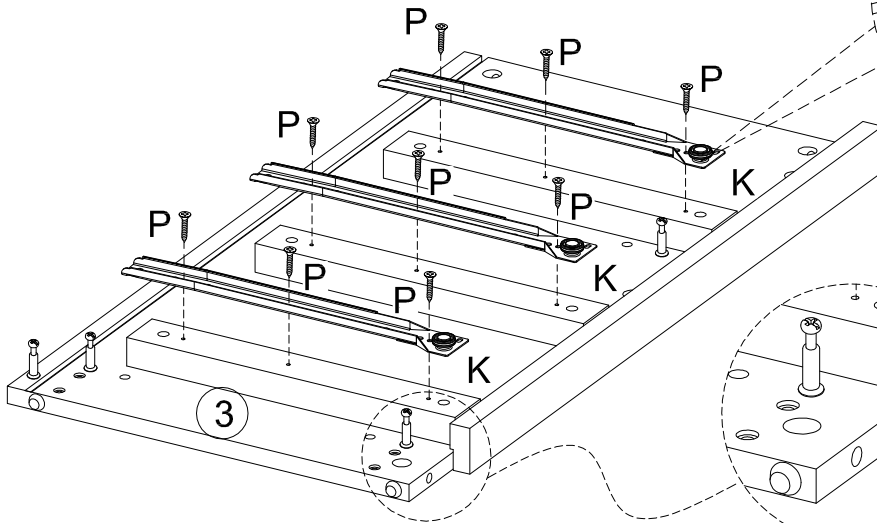





# 8





(J) x3





(P) x9

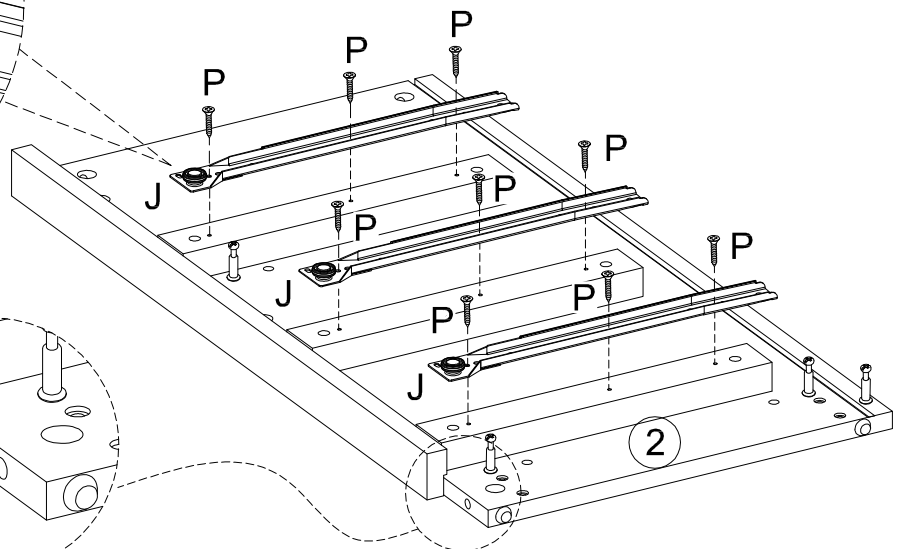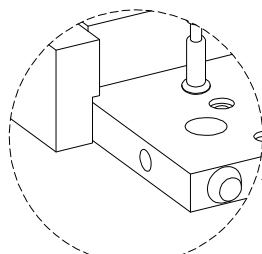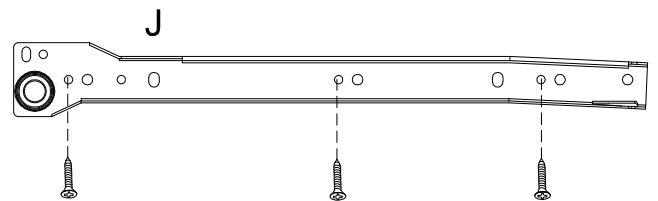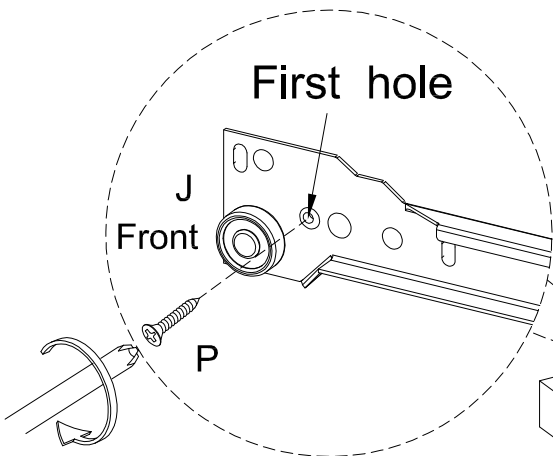

# 9

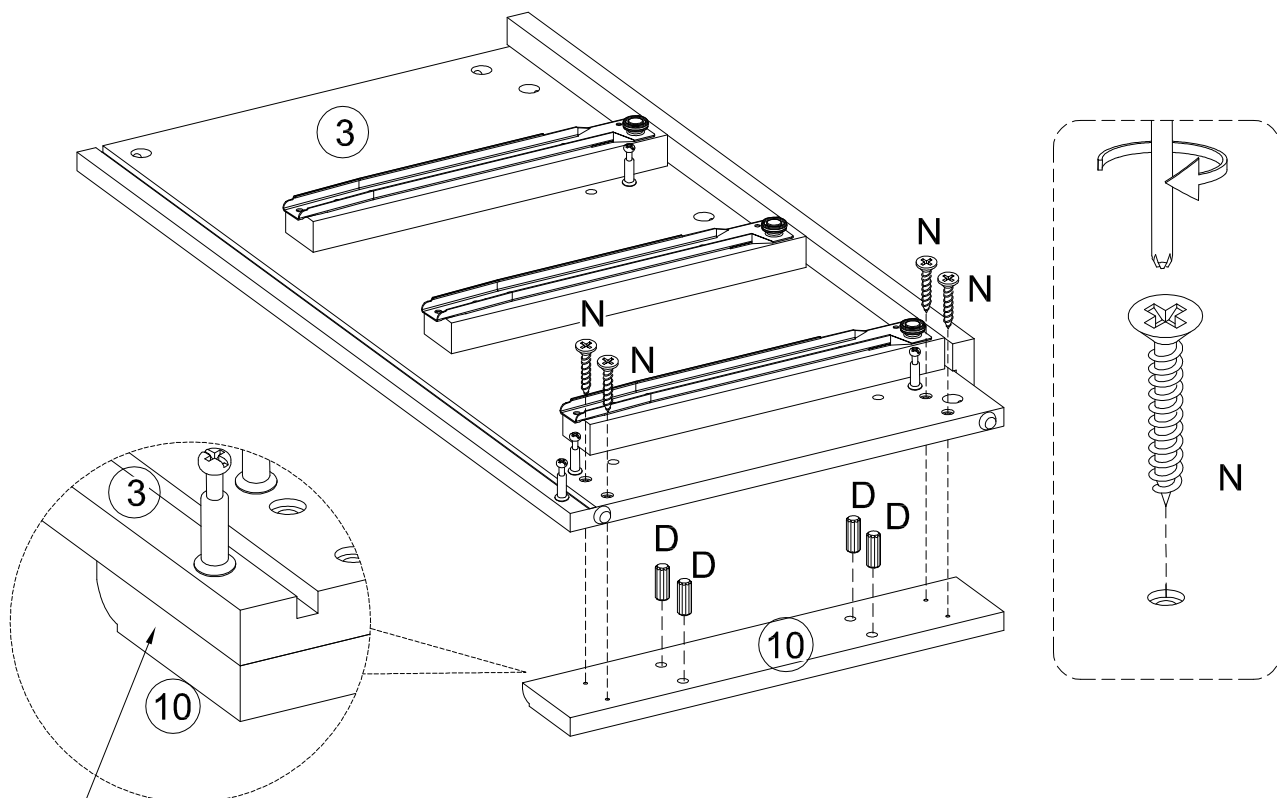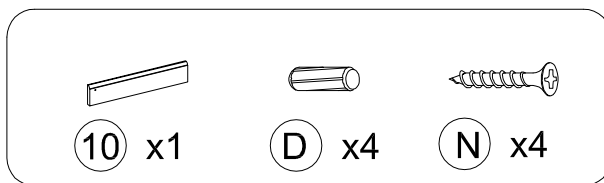

# 10

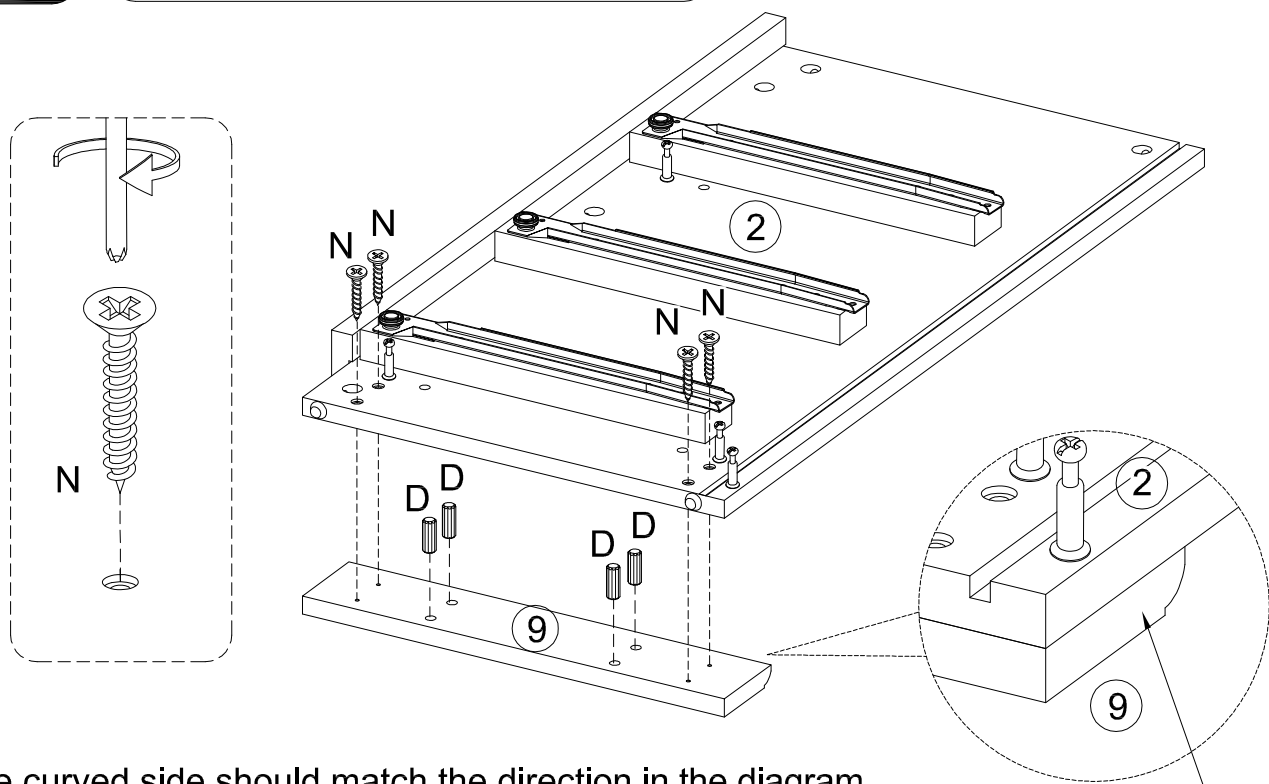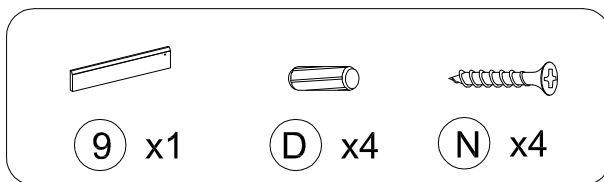



# 11



④ x1



⑬ x1



Ⓢ x2



ⓗ x1




ⓖ x2



Ⓢ x2



Ⓑ x1

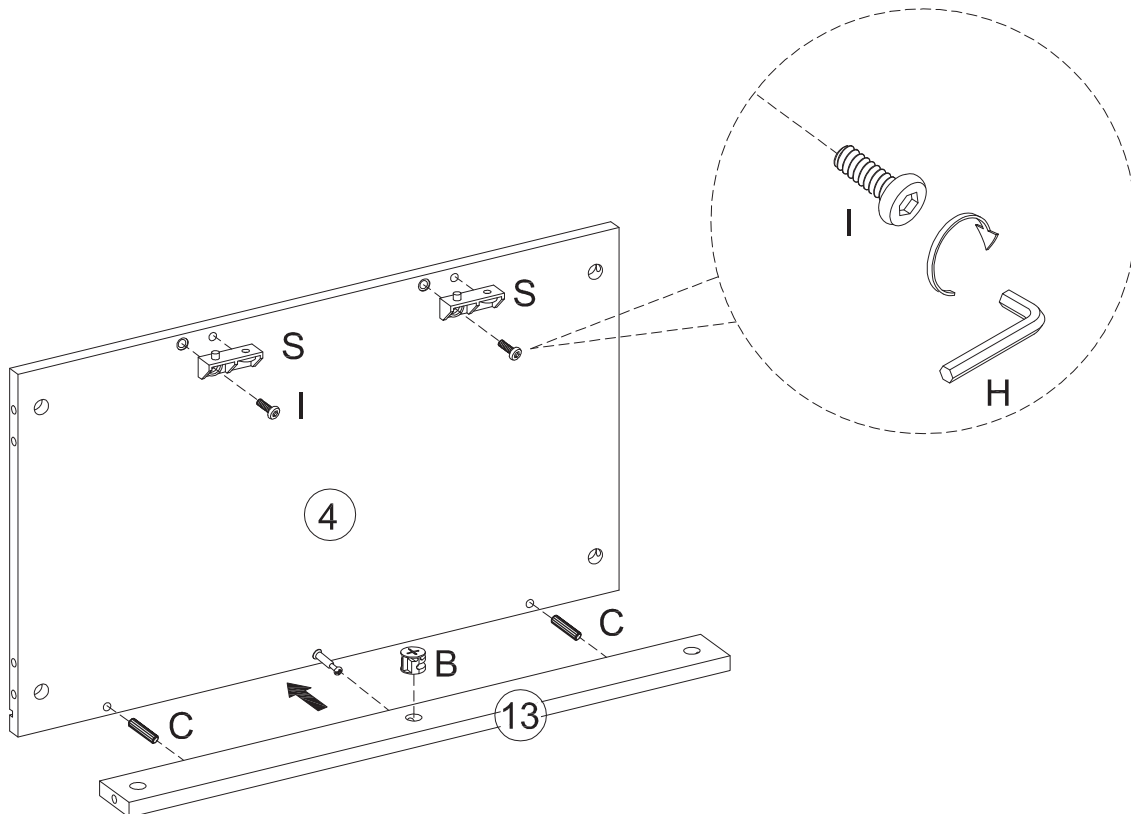

# 12





⑧ x1



Ⓢ x3



Ⓑ x4

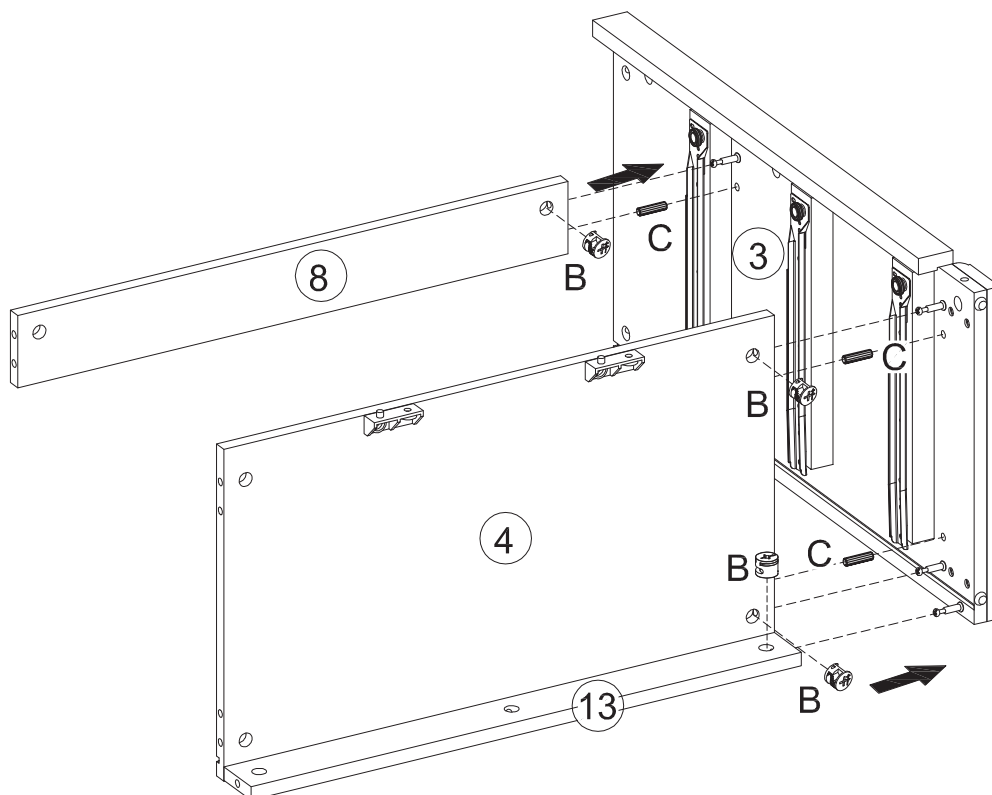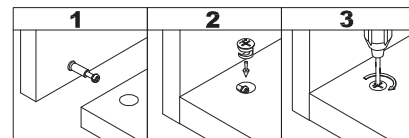



# 13



(C) x3



(B) x4

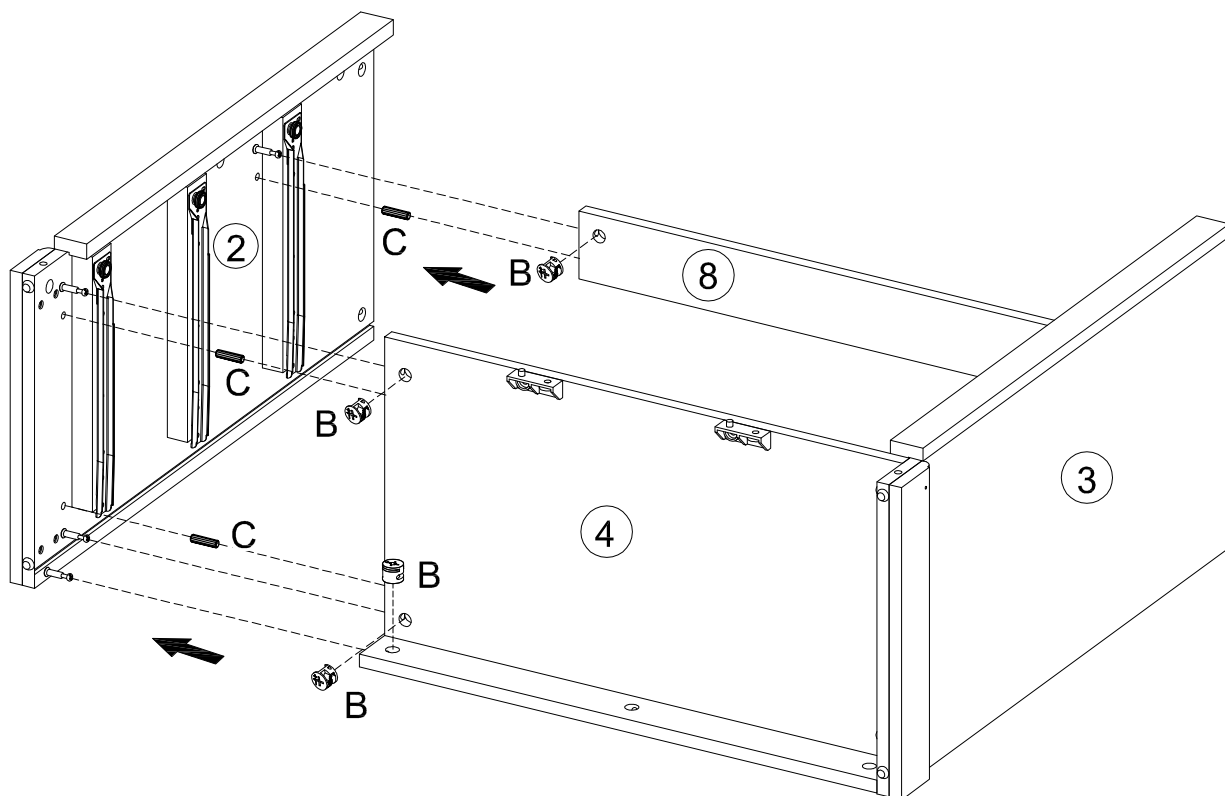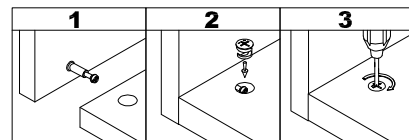

# 14



(11) x1






(B) x2



(I) x2




(H) x1

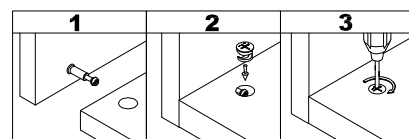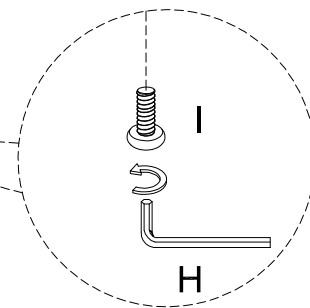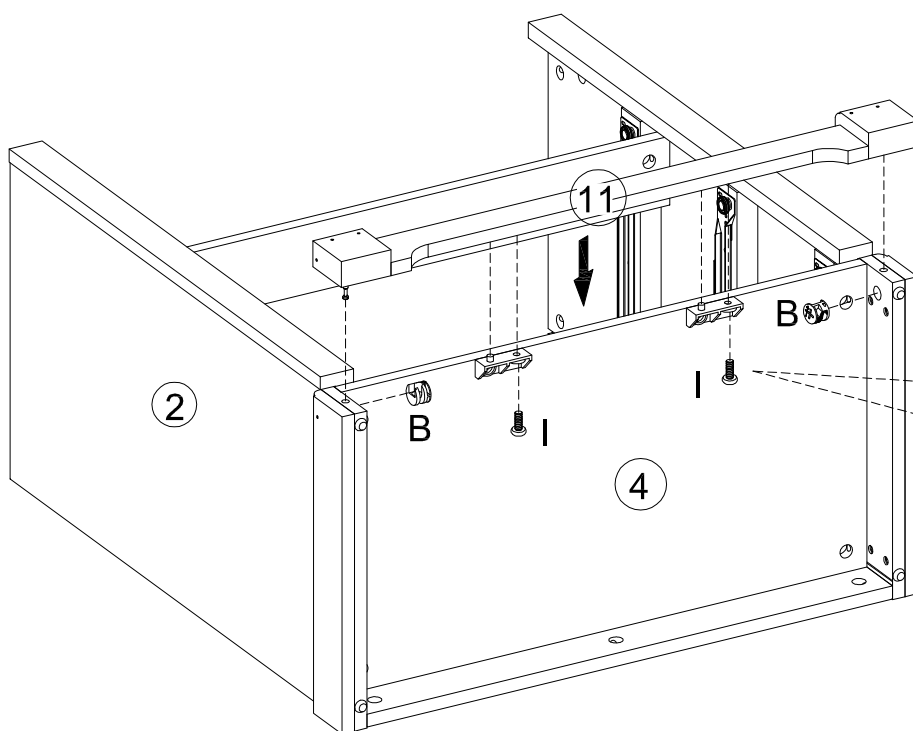


# 15




(Z) x8



(Q) x2

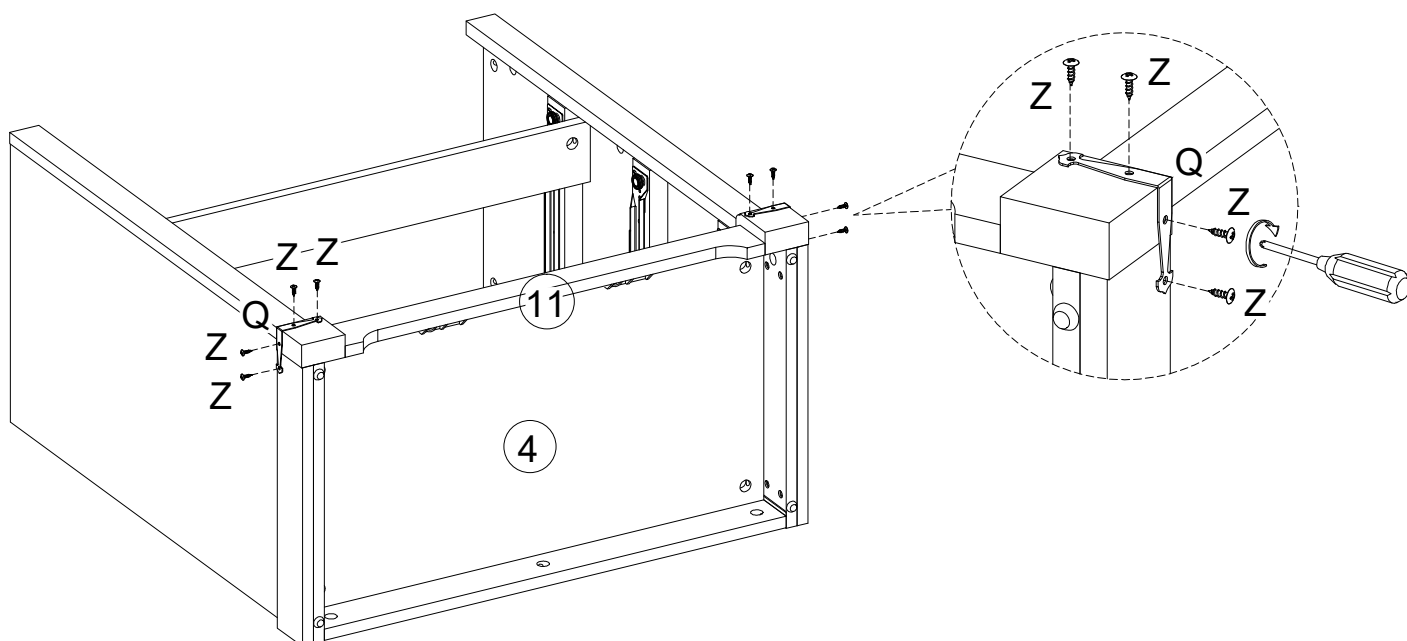


# 16






(14) x1

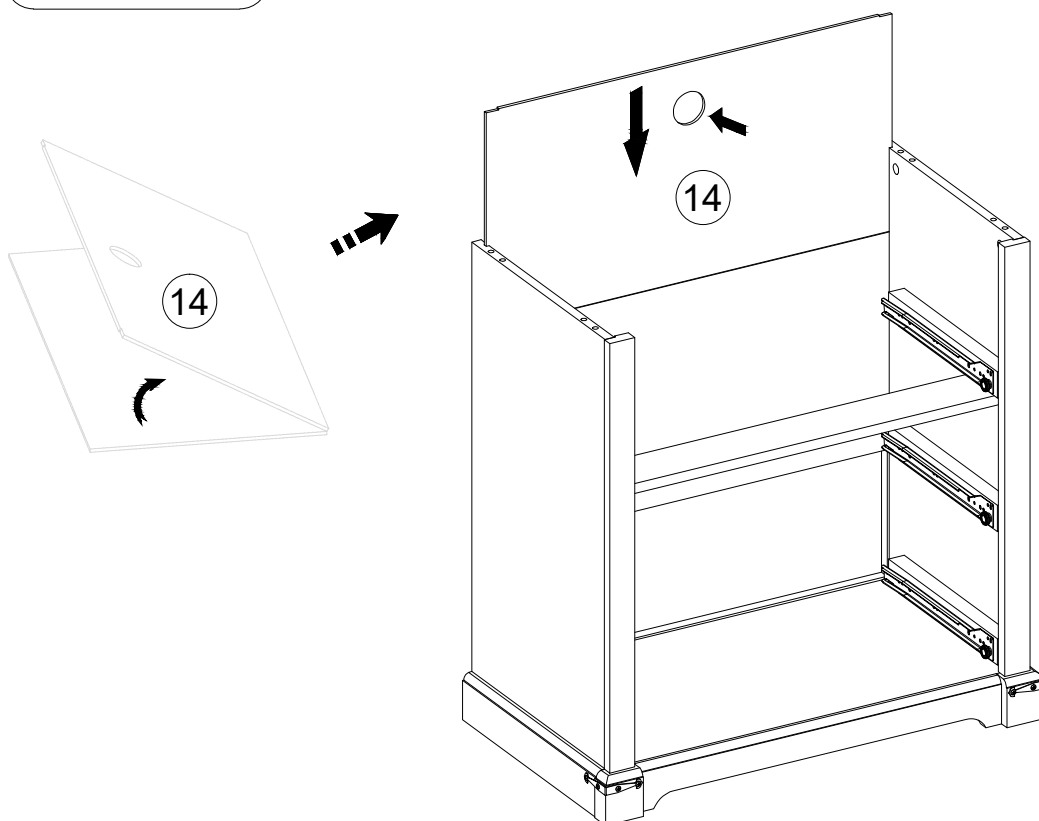Pay attention to the orientation of the hole.





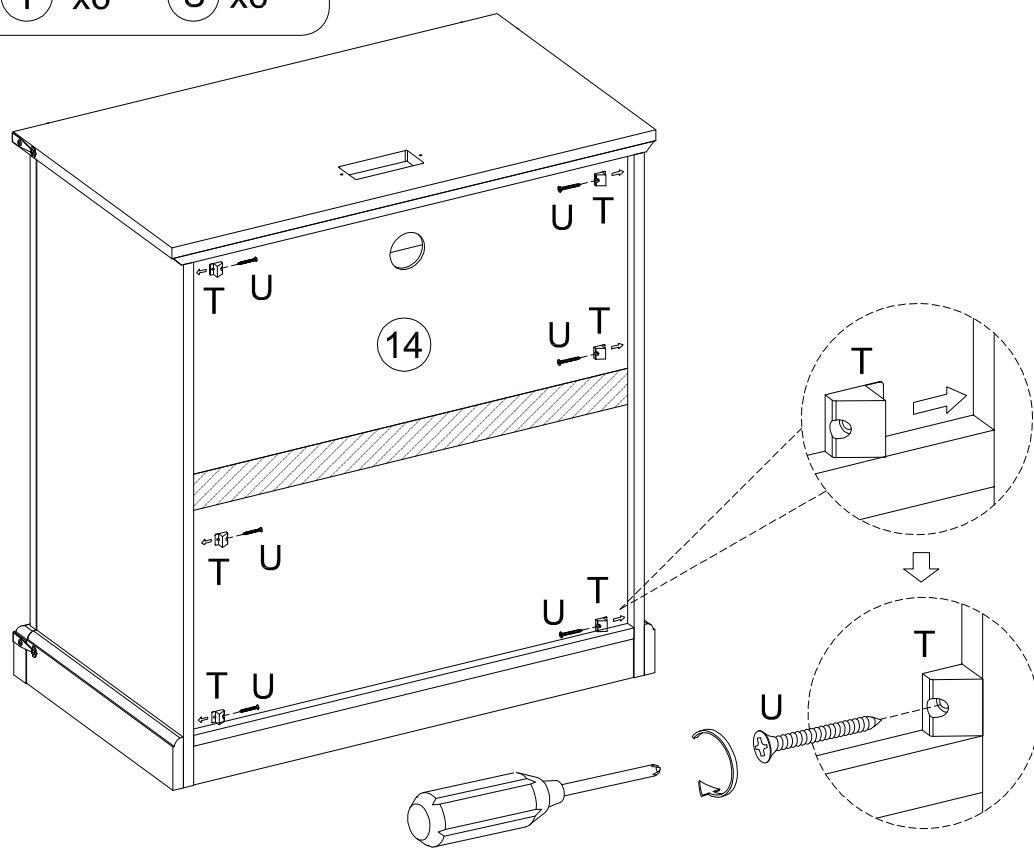
# 17


  
 (C) x4    (B) x4

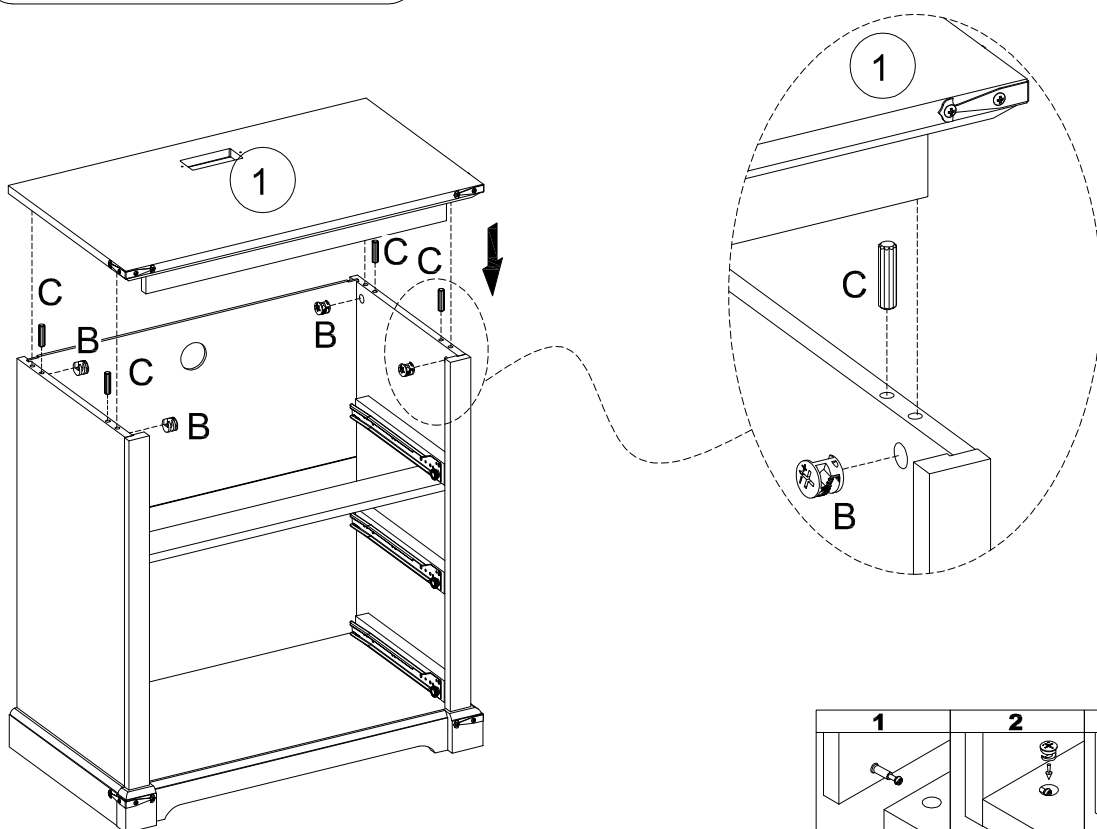







# 18


  
 (T) x6    (U) x6





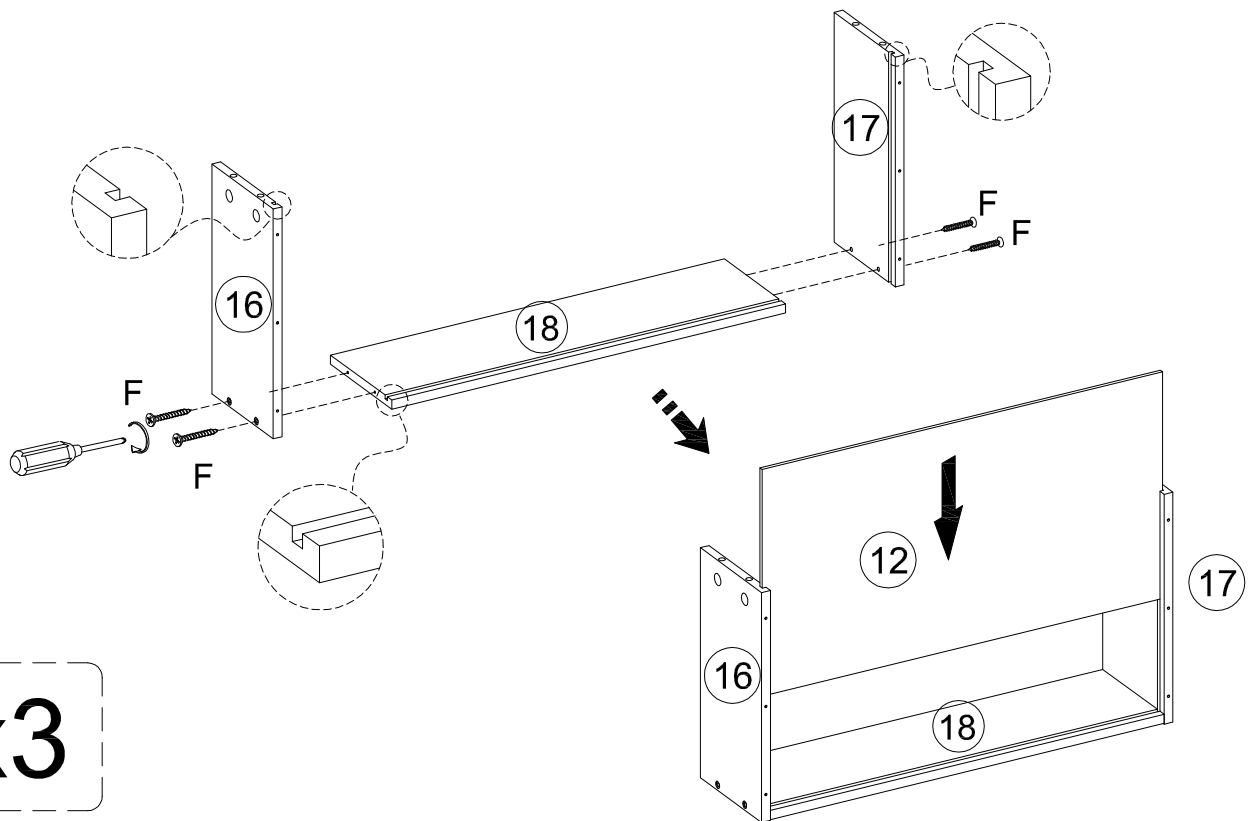

# 19

-  16 x3
-  17 x3
-  18 x3
-  12 x3
-  F x12






x3


# 20

-  15 x3
-  A x12
-  V x3
-  W x3

x3

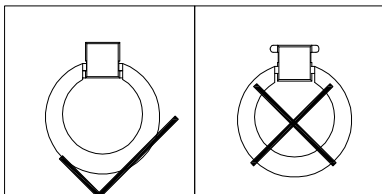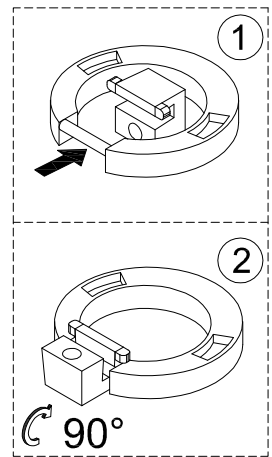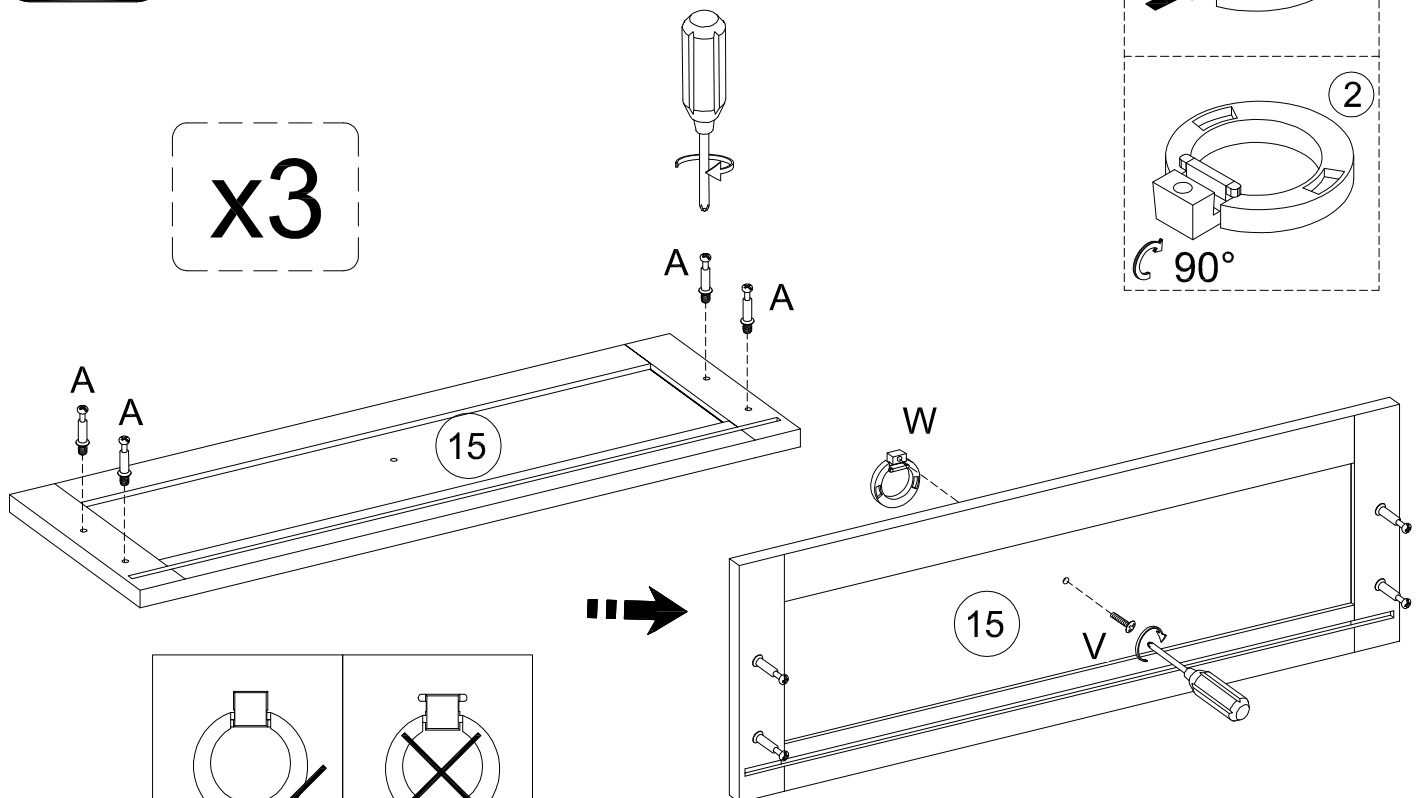

# 21





(L) x3

(M) x3

(G) x12

(P) x18

x3

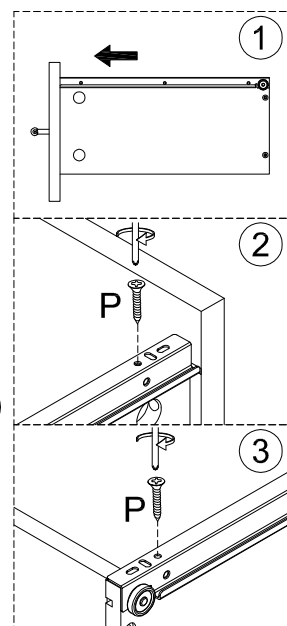
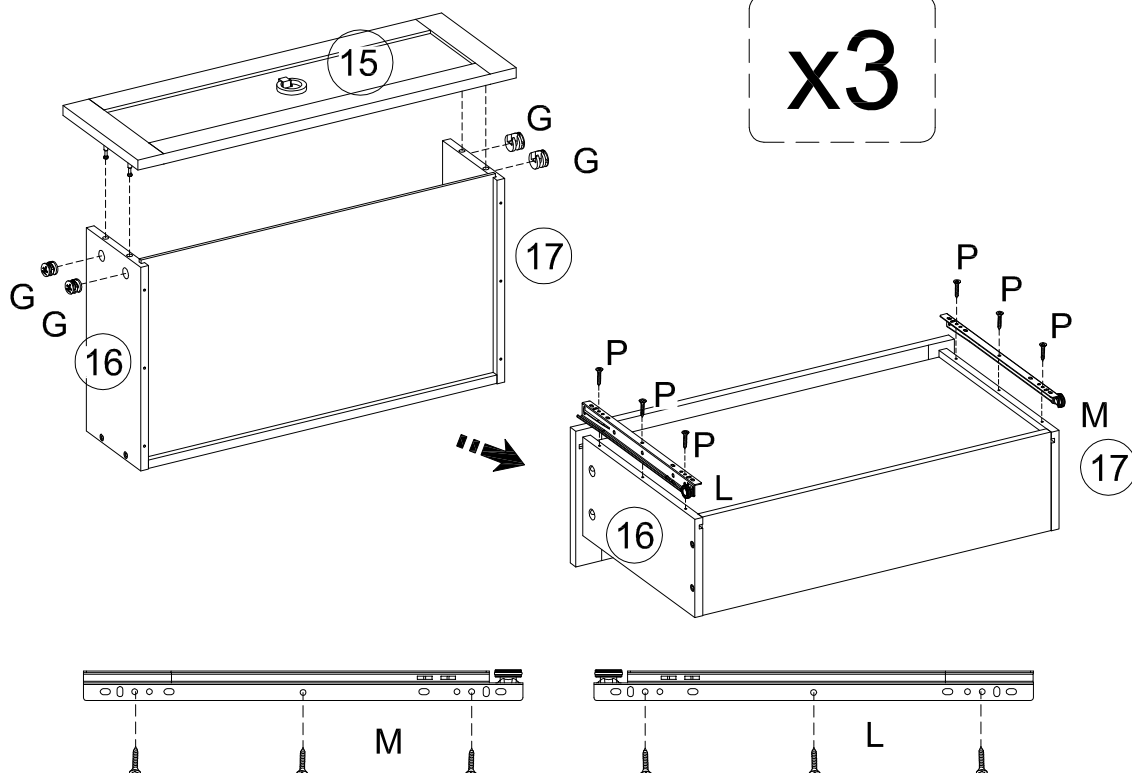


# 22





(Y) x2



(AA) x1

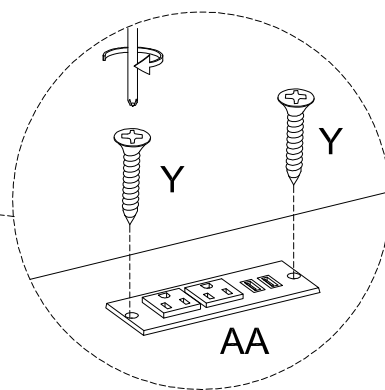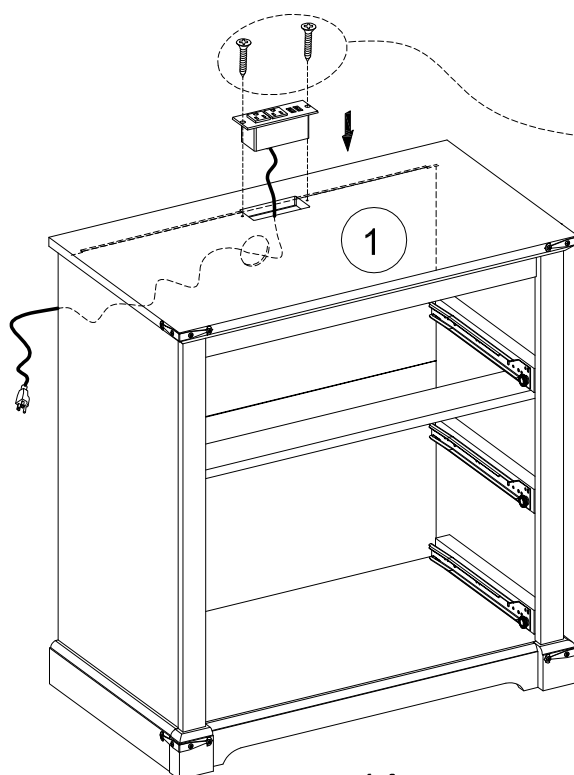

# 23

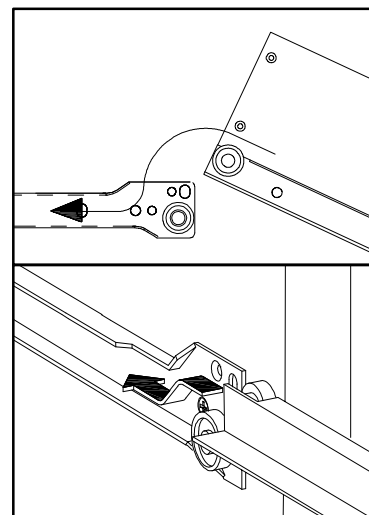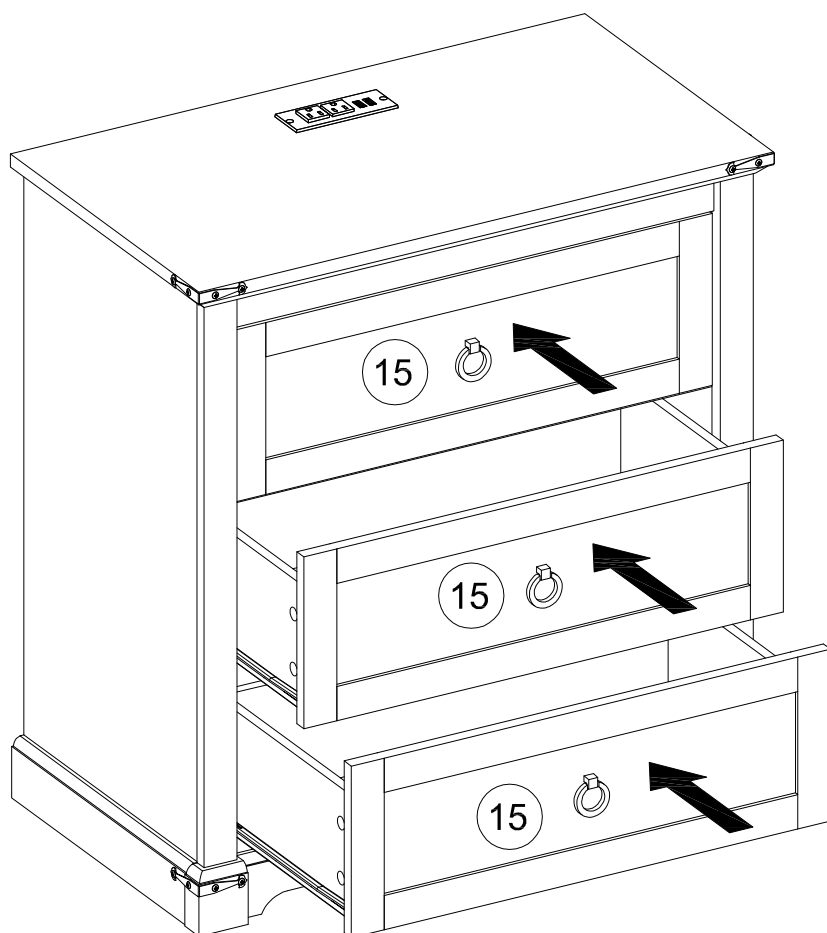


# 24

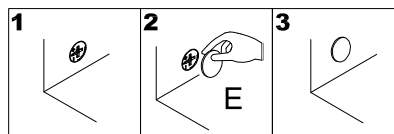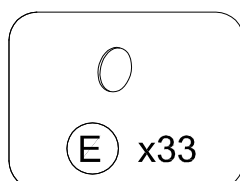

.Stick stickers (E) on cam locks (B)/(G).

# 25

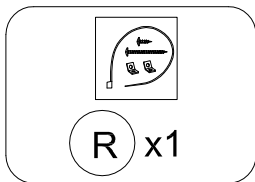


## WARNING

You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.



Short Screw

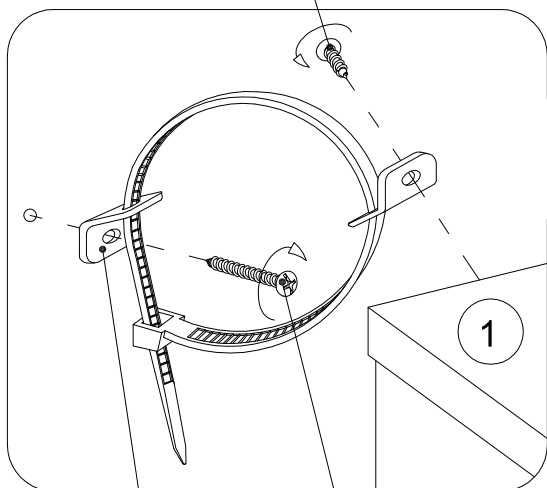

Metal Bracket


Long Screw

1

Wooden Stud

Wall

R

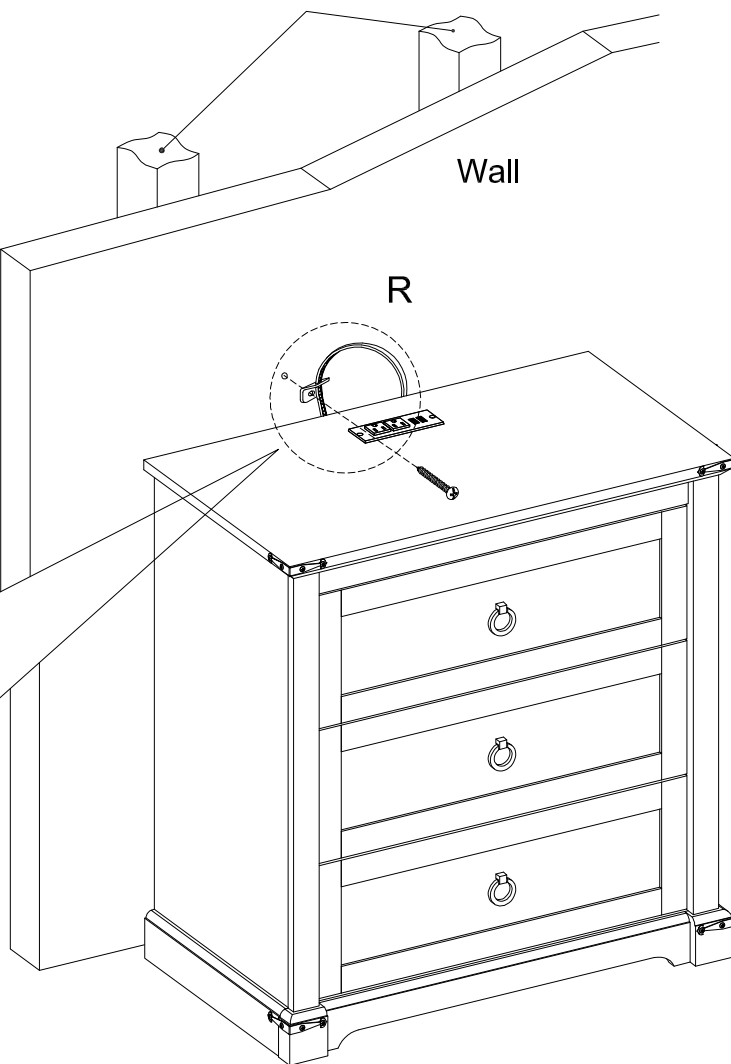

Installation Completed