
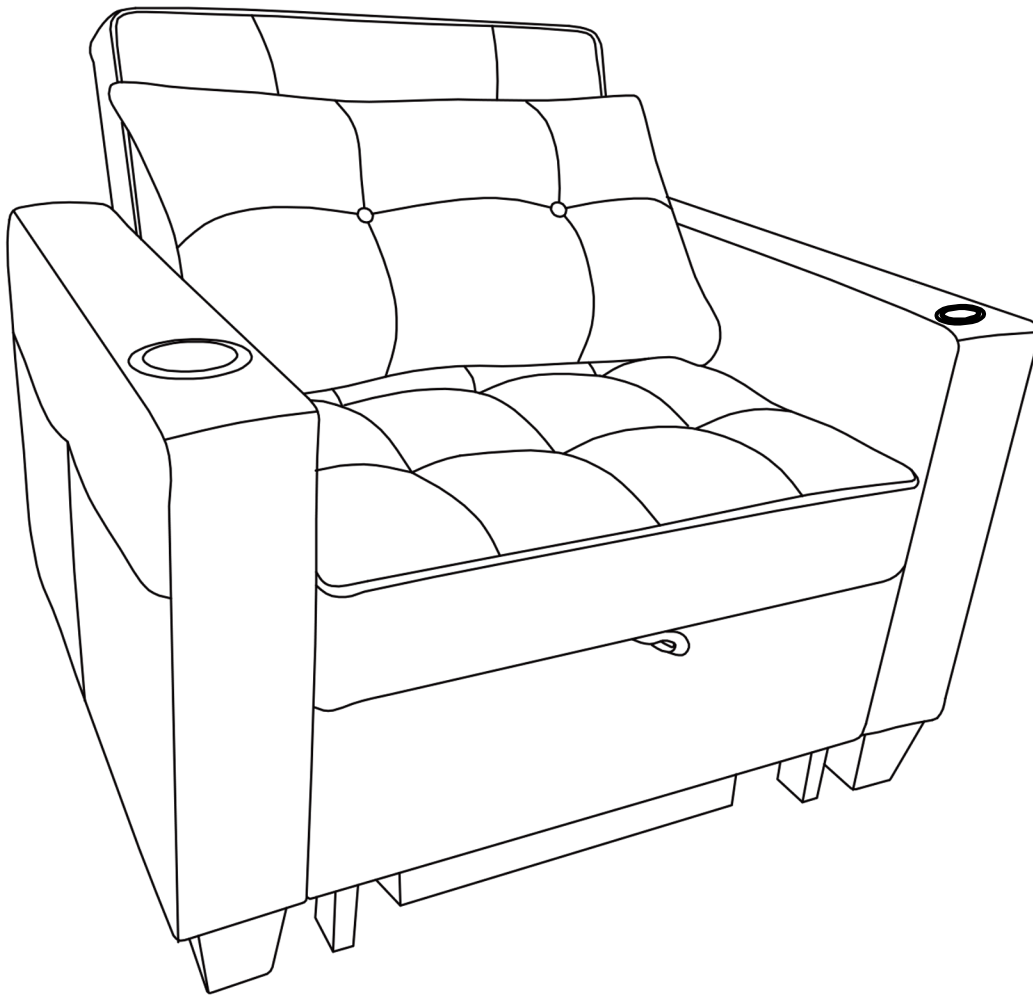

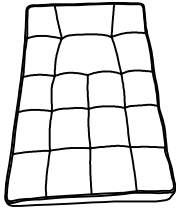
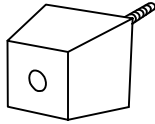


# SOFA CHAIR








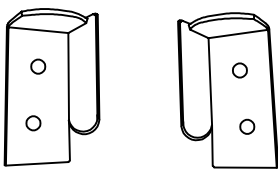









# Assembly instructions

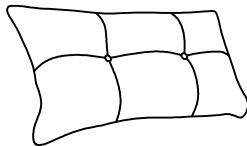


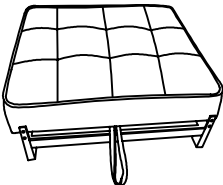

## Box A Parts List


<div data-bbox="97 392 140 436">A</div> <div data-bbox="156 421 207 459">AL</div>  <div data-bbox="220 638 279 676">1pc</div>	<div data-bbox="419 392 462 436">B</div>  <div data-bbox="550 638 609 676">1pc</div>	<div data-bbox="802 392 845 436">C</div>  <div data-bbox="941 638 1018 676">4pcs</div>	<div data-bbox="1169 392 1212 436">D</div>  <div data-bbox="1332 638 1391 676">1pc</div>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Box B Parts List






<div data-bbox="97 851 140 896">E</div>  <div data-bbox="236 1102 295 1140">1pc</div>	<div data-bbox="451 851 494 896">F</div> <div data-bbox="662 878 710 913">AR</div>  <div data-bbox="574 1102 633 1140">1pc</div>	<div data-bbox="802 851 845 896">G</div>  <div data-bbox="938 1102 997 1140">1pc</div>	<div data-bbox="1157 851 1200 896">H</div>  <div data-bbox="1289 1102 1348 1140">1pc</div>
<div data-bbox="97 1153 140 1198">I</div>  <div data-bbox="247 1400 306 1438">1pc</div>	<div data-bbox="451 1153 494 1198">J</div>  <div data-bbox="598 1400 657 1438">1pc</div>	<div data-bbox="802 1153 845 1198">K</div>  <div data-bbox="949 1400 1008 1438">1pc</div>	<div data-bbox="1157 1153 1200 1198">L1</div> <div data-bbox="1452 1153 1495 1198">L2</div>  <div data-bbox="1284 1400 1359 1438">2pcs</div>
<div data-bbox="97 1456 140 1500">M</div>  <div data-bbox="204 1713 279 1751">4pcs</div>	<div data-bbox="451 1456 494 1500">N</div>  <div data-bbox="513 1706 730 1744">4pcs M6*30mm</div>	<div data-bbox="802 1456 845 1500">O</div>  <div data-bbox="849 1706 1104 1744">18pcs M6*20mm</div>	<div data-bbox="1157 1456 1200 1500">P</div>  <div data-bbox="1244 1706 1460 1744">6pcs M8*60mm</div>
<div data-bbox="97 1769 140 1814">Q</div>  <div data-bbox="199 2033 343 2072">22pcs M6</div>	<div data-bbox="451 1769 494 1814">R</div>  <div data-bbox="545 2033 673 2072">6pcs M8</div>	<div data-bbox="802 1769 845 1814">S</div>  <div data-bbox="933 2038 997 2076">1pc</div>	

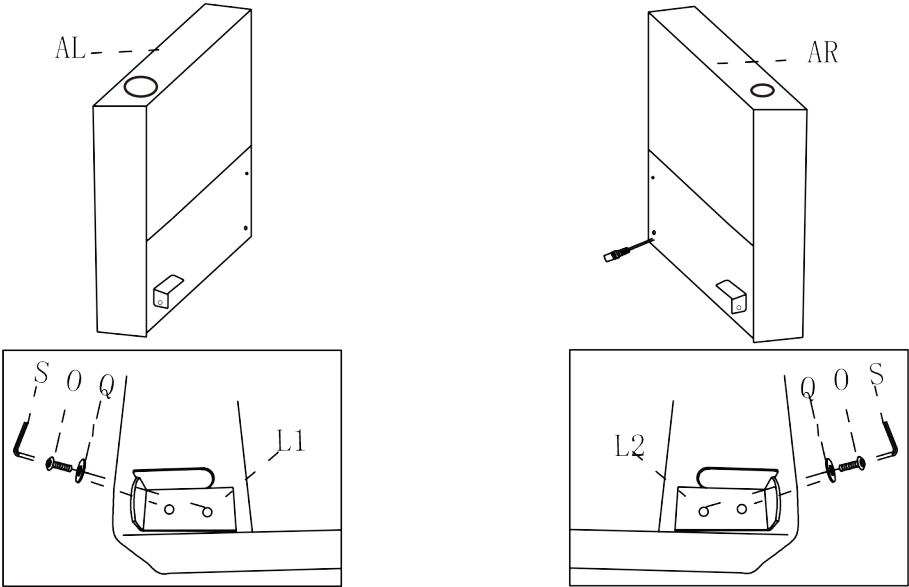
Step 1 Please follow the accessories direction in the figure for installation.

		2
L		2
O		4
Q		4
S		1





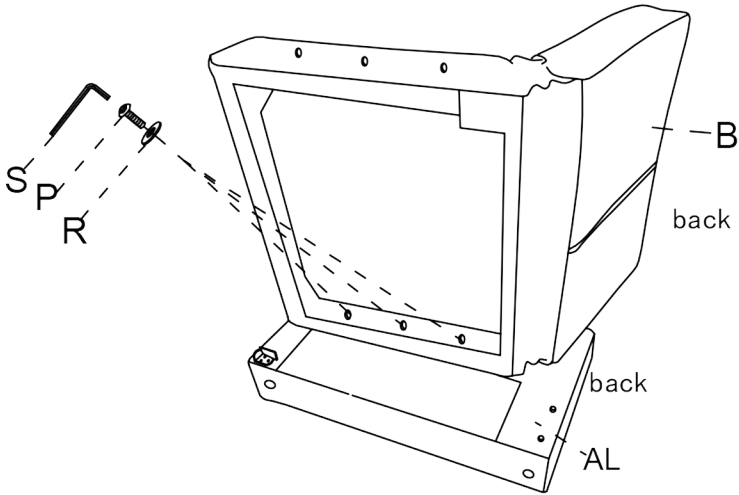



Step 2 Put the screws into the holes one by one. Please do not lock any one of the 3 screws before they are all aligned. After aligning them all and then tighten them with an electric screwdriver.

AL		1
B		1
P		3
R		3
S		1








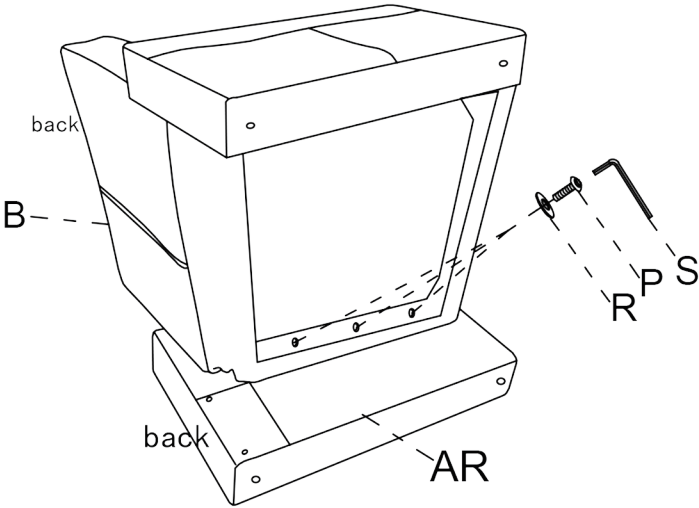
Step 3

AR		1
B		1
P		3
R		3
S		1






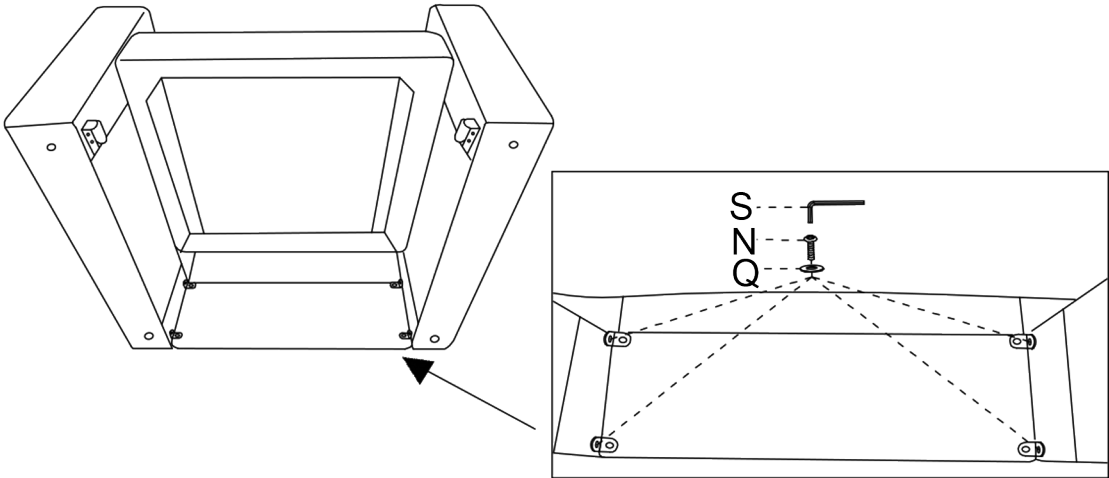
Step 4

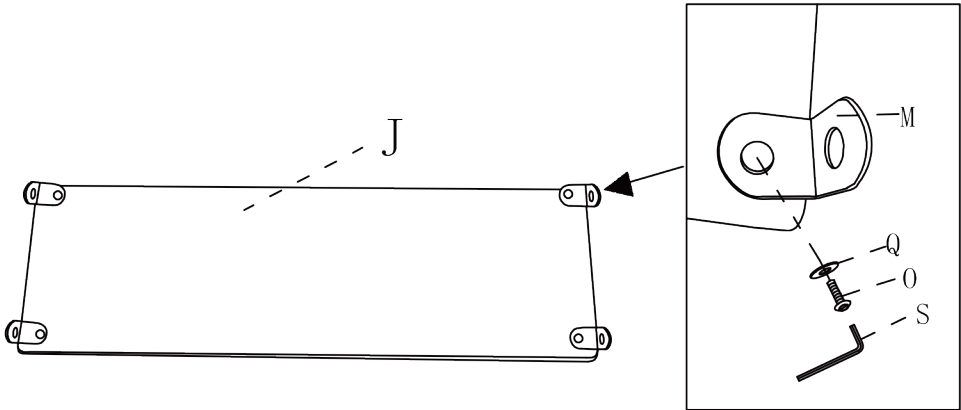J		1
M		4
O		4
Q		4
S		1




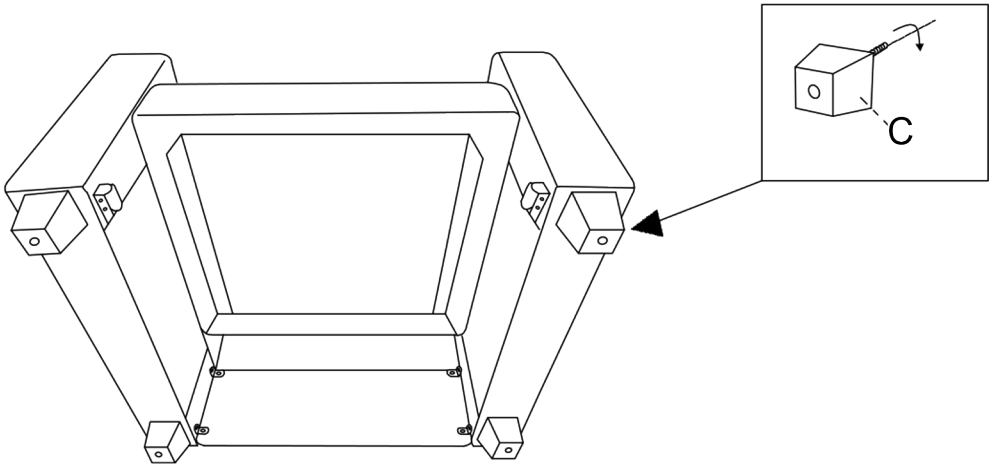
Step 5

N		4
Q		4
S		1




Step 6

C		4
---	-------------------------------------------------------------------------------------	---





## Step 7 Stepping on the iron frame, pull up the footrest with the help of the strip.

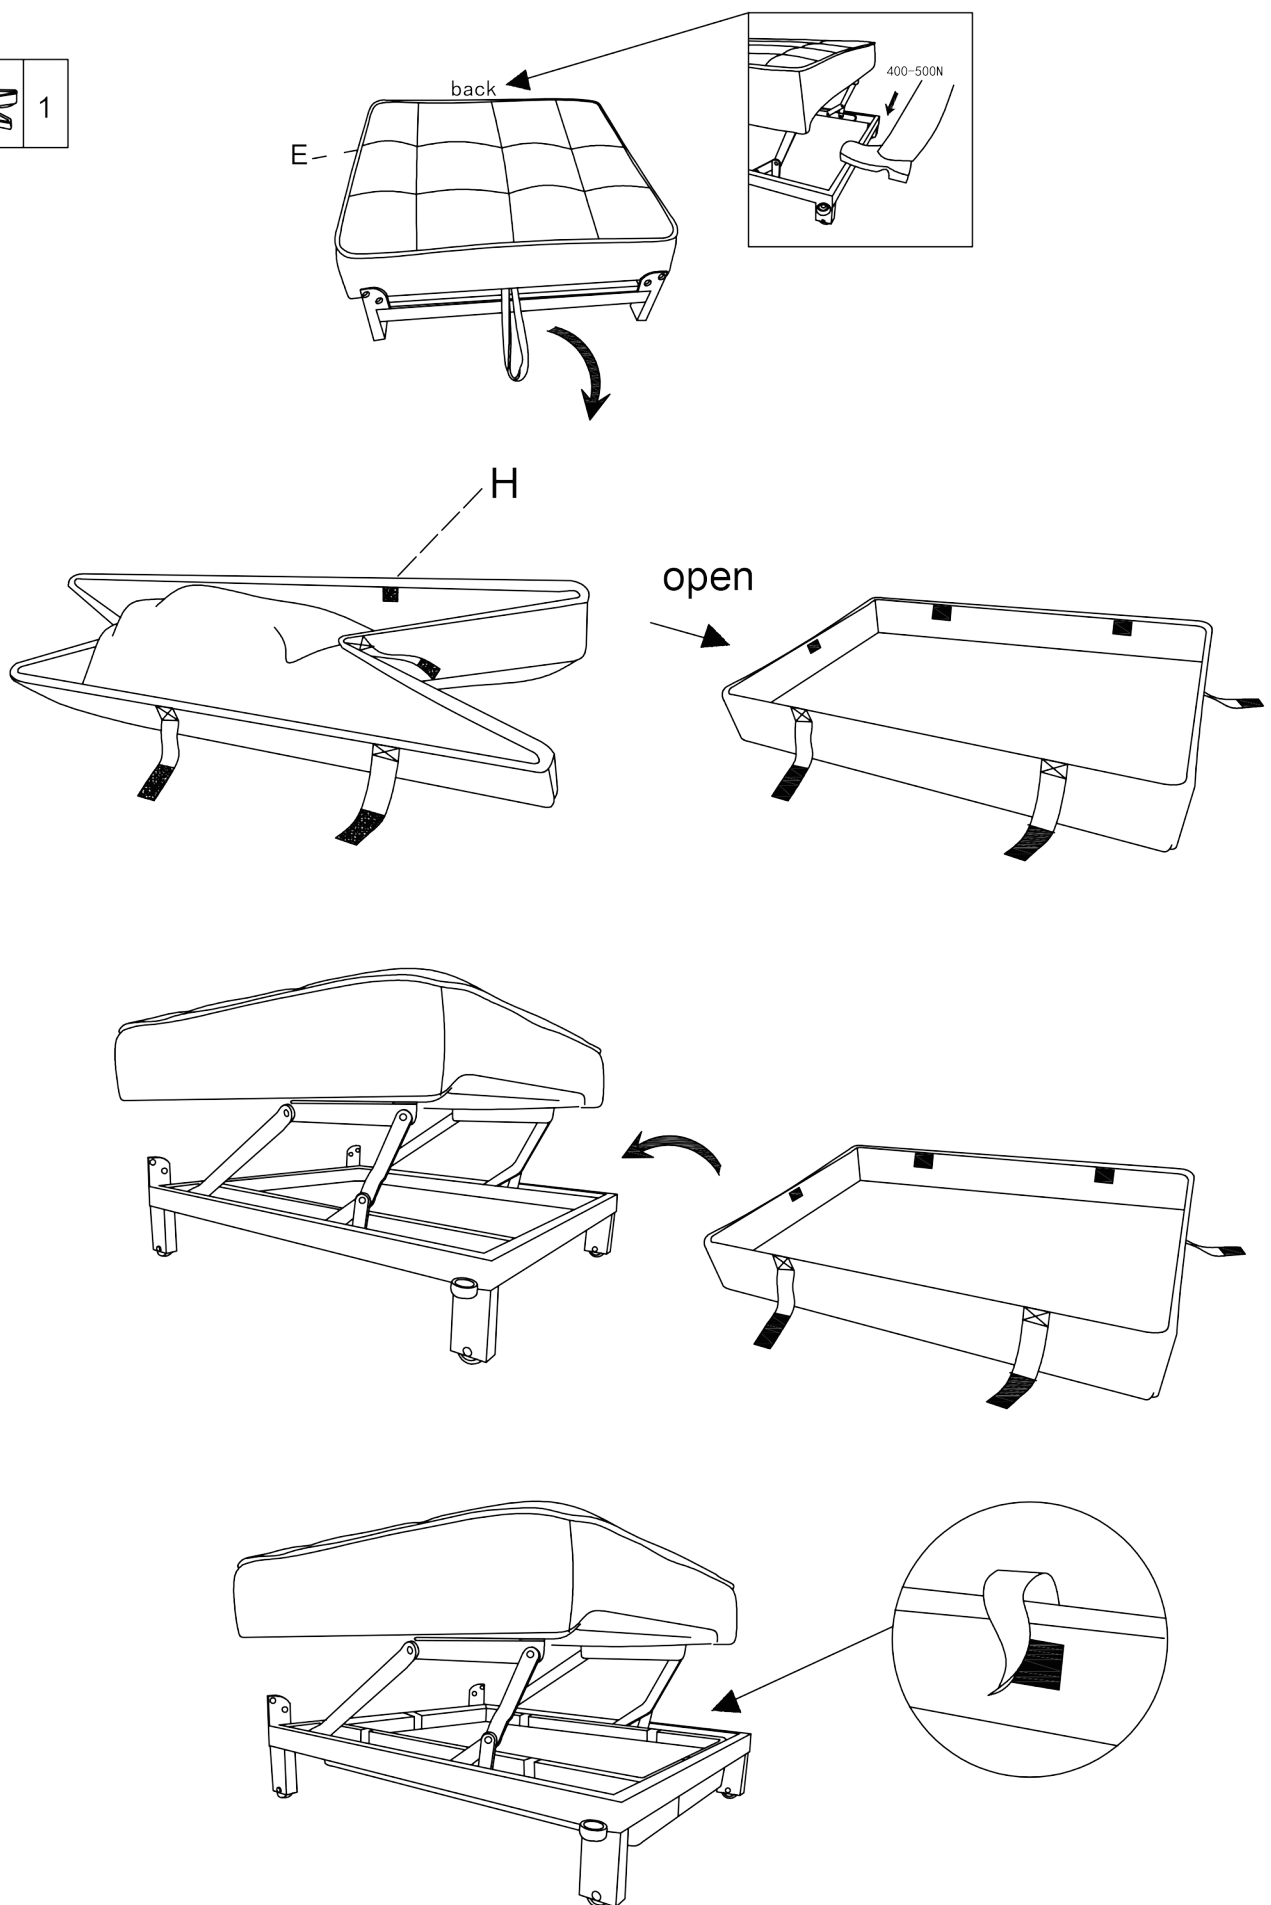



Wrapping the Velcro around the iron frame to secure the storage basket.

## Step 8

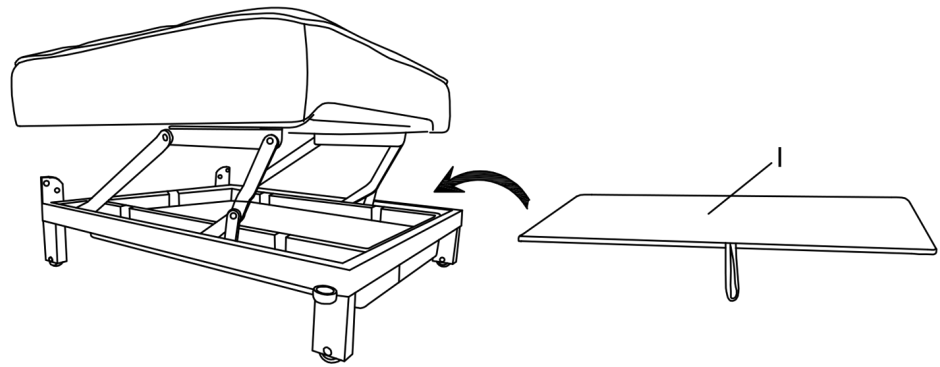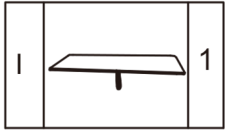






## Step 9

E		1
K		1
O		4
Q		4
S		1

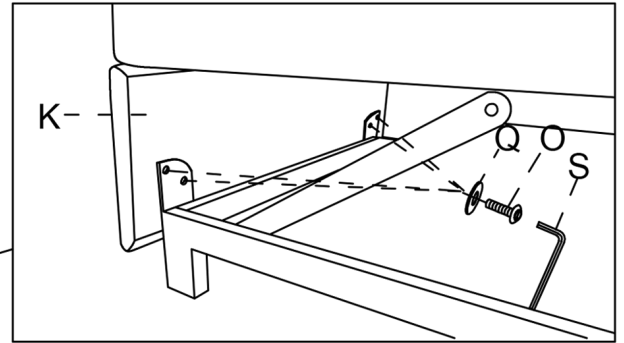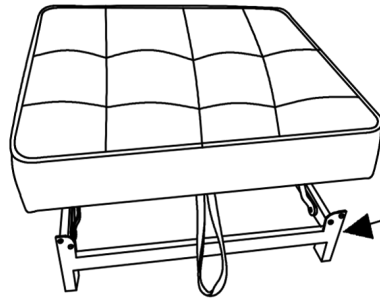


## Step 10


Please pay attention to the part K installation direction, this part is not next to the bottom, but 3.9 " height from the ground.

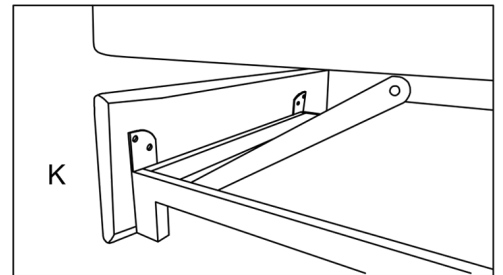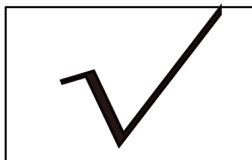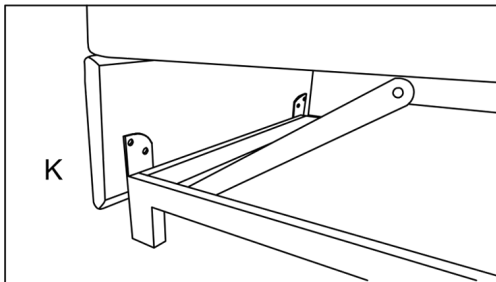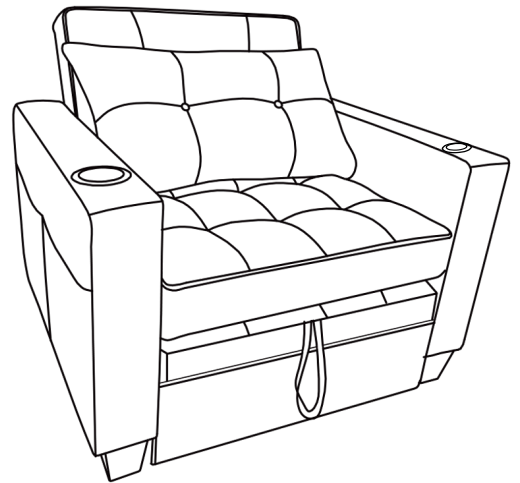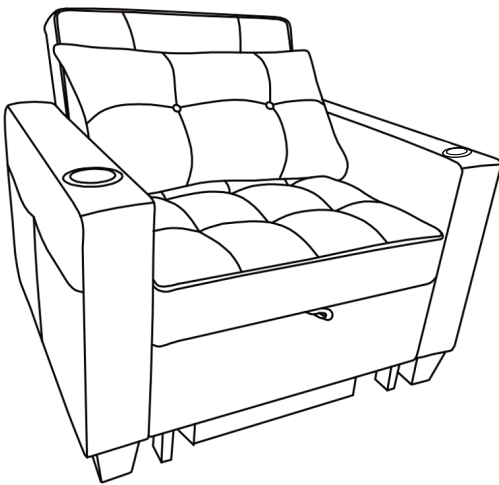

## Step 11

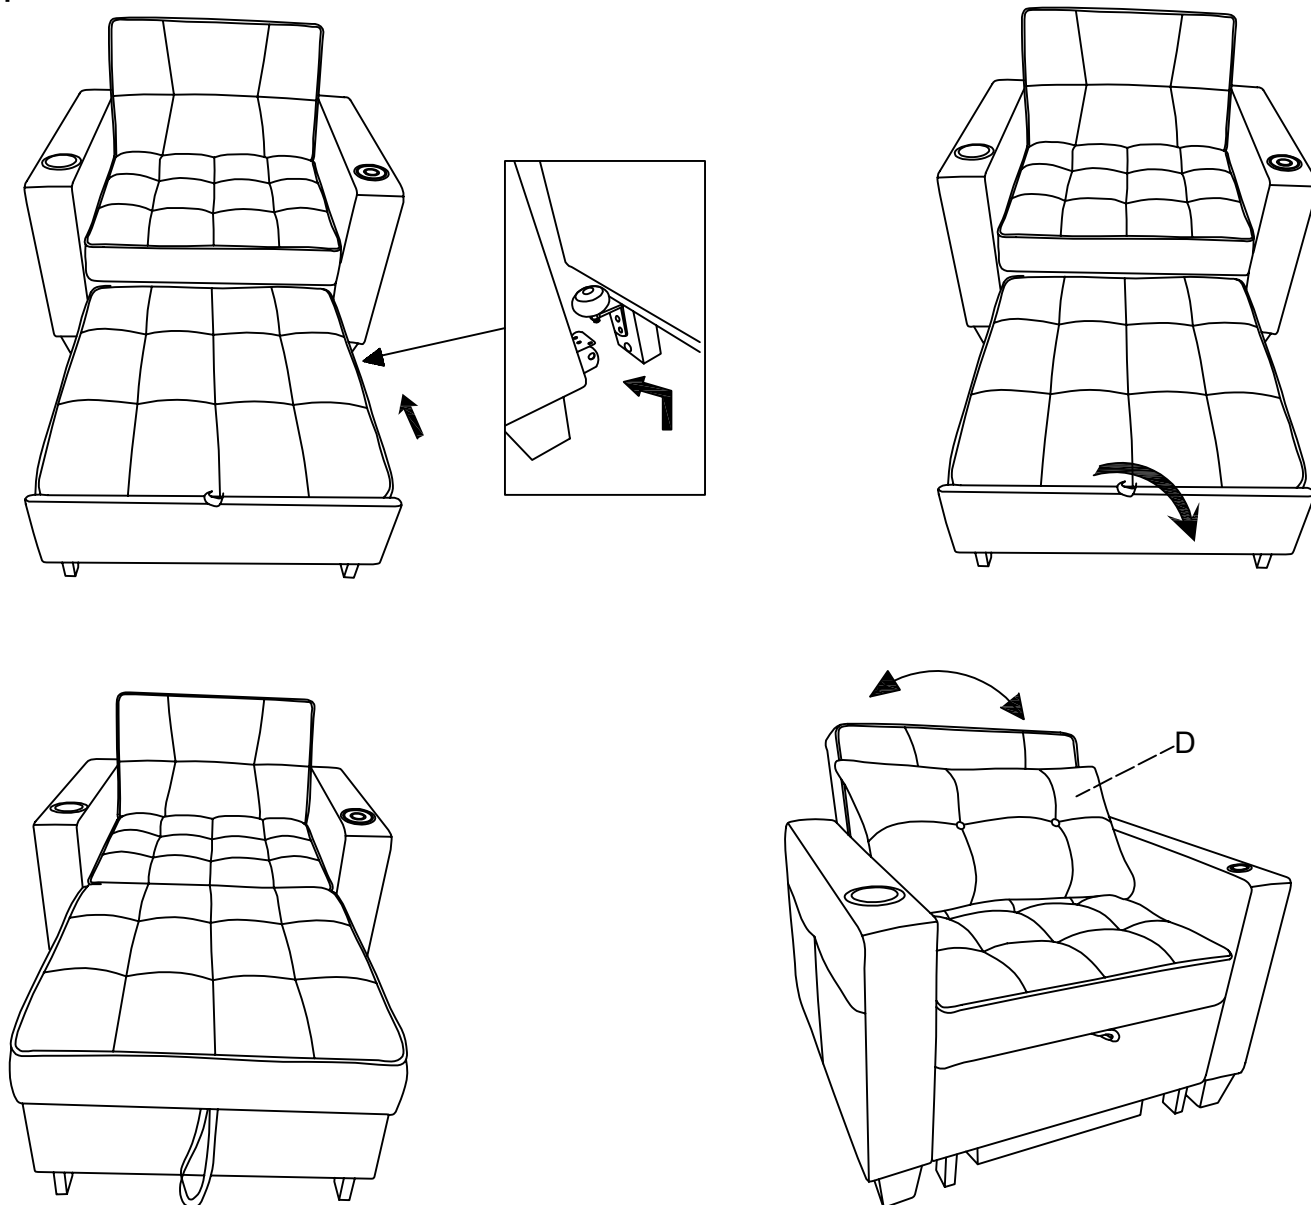


## Step 12

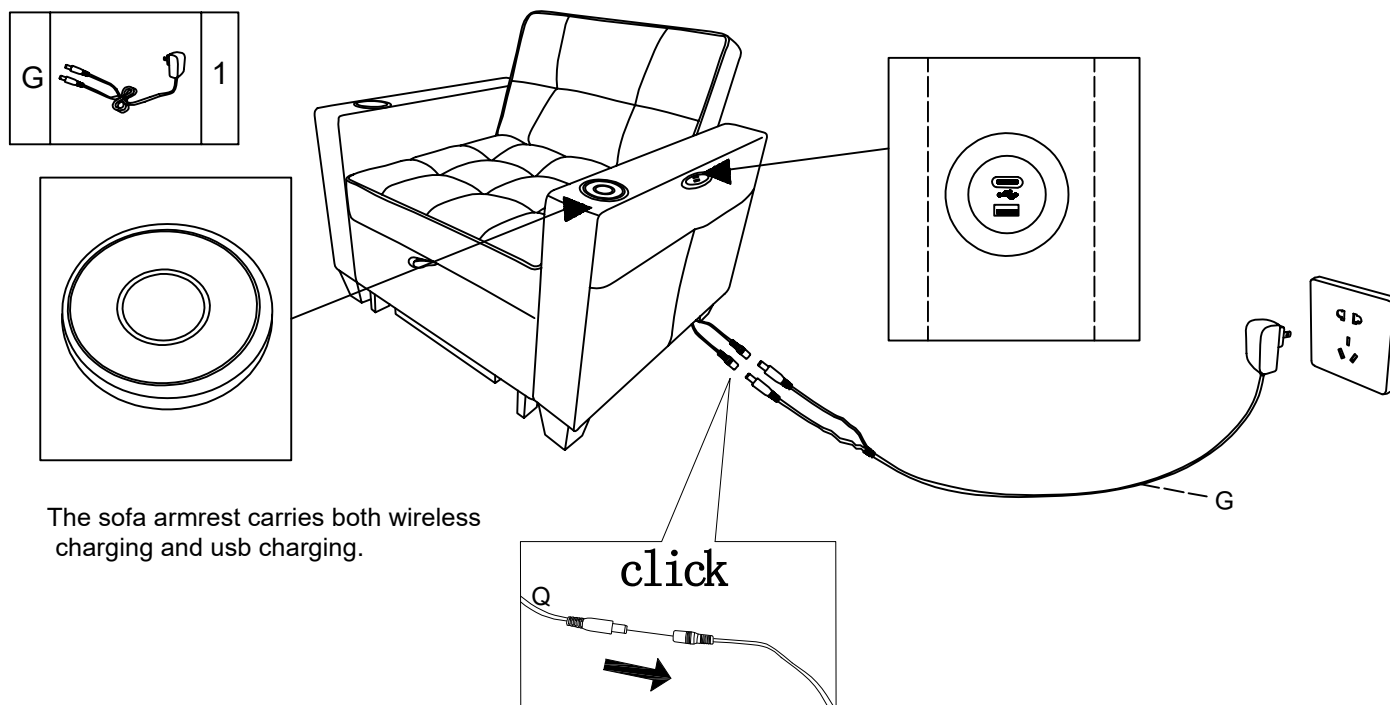


# HOW TO REPALCE CHARGERS?


## Step 1

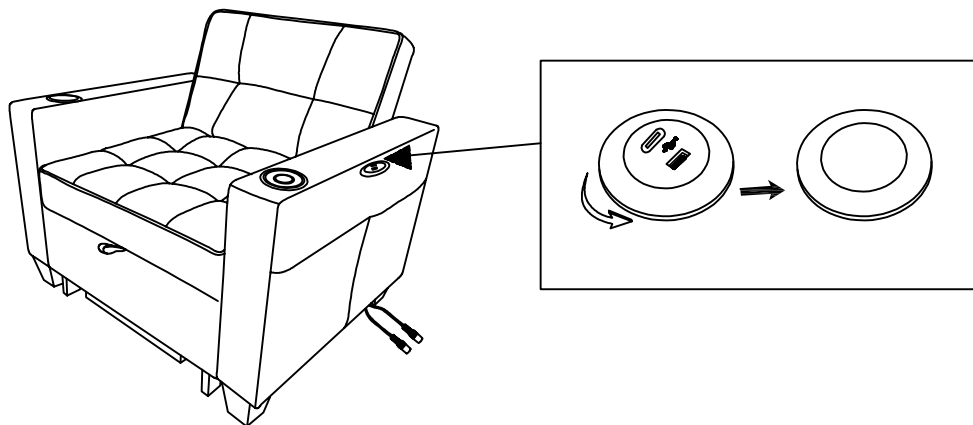

## Step 2

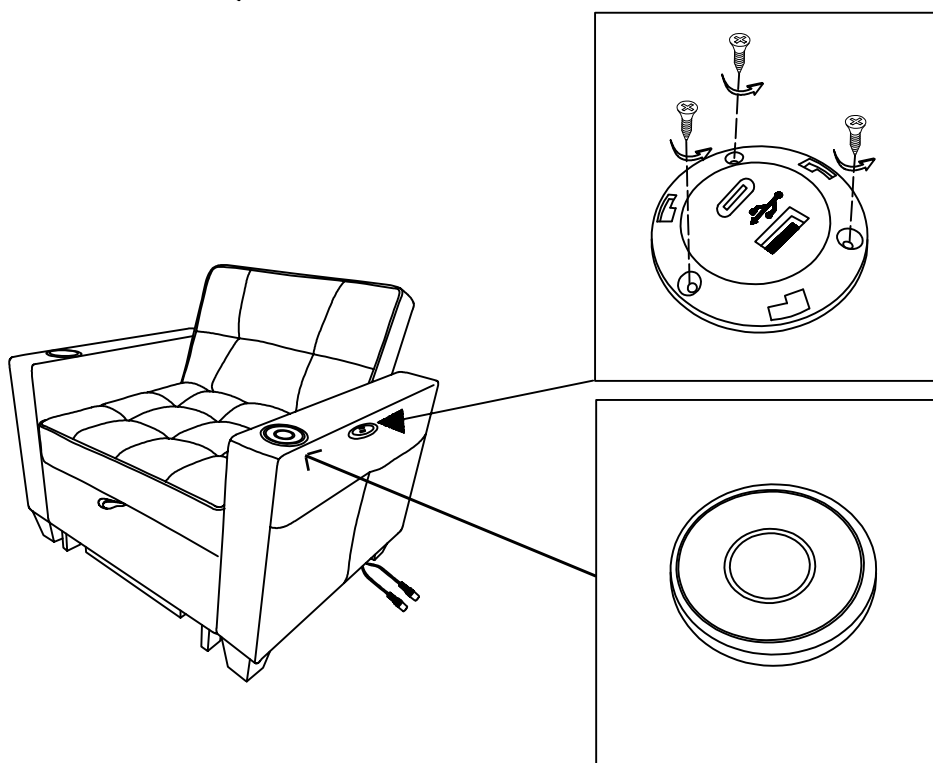


## Step 3

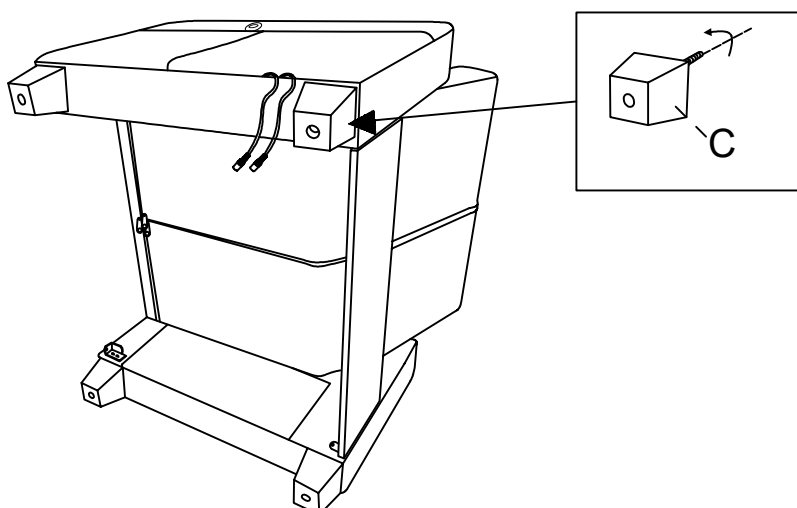





## Step 4

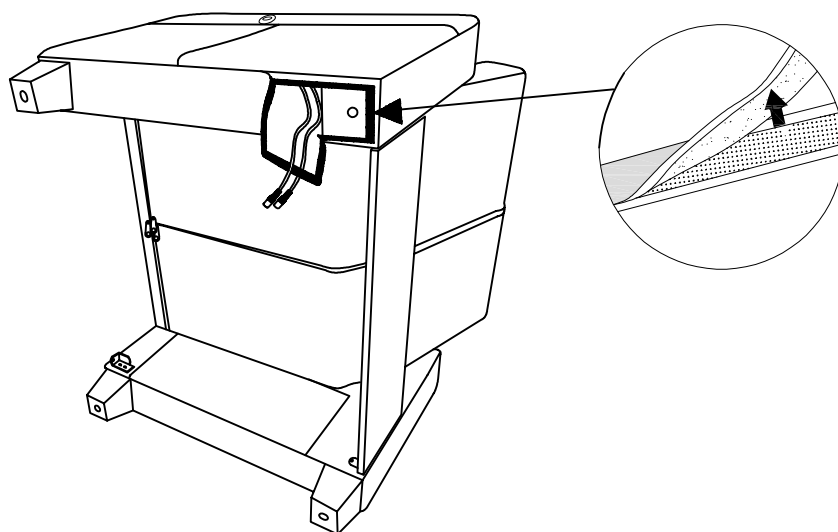



## Step 5

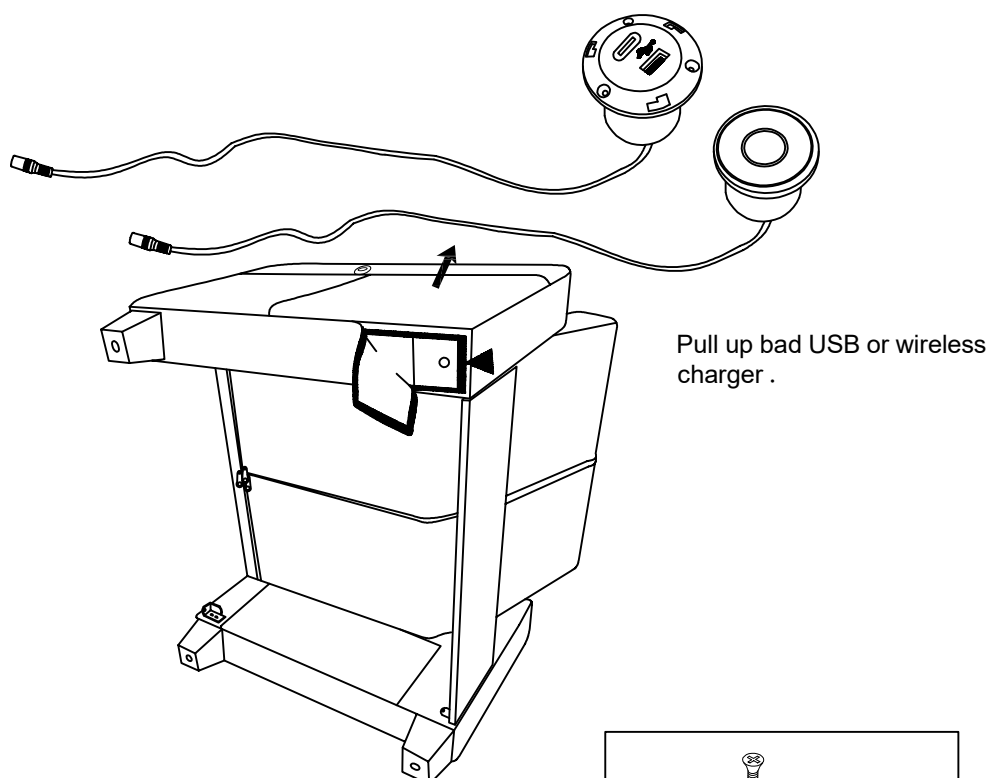


## Step 6

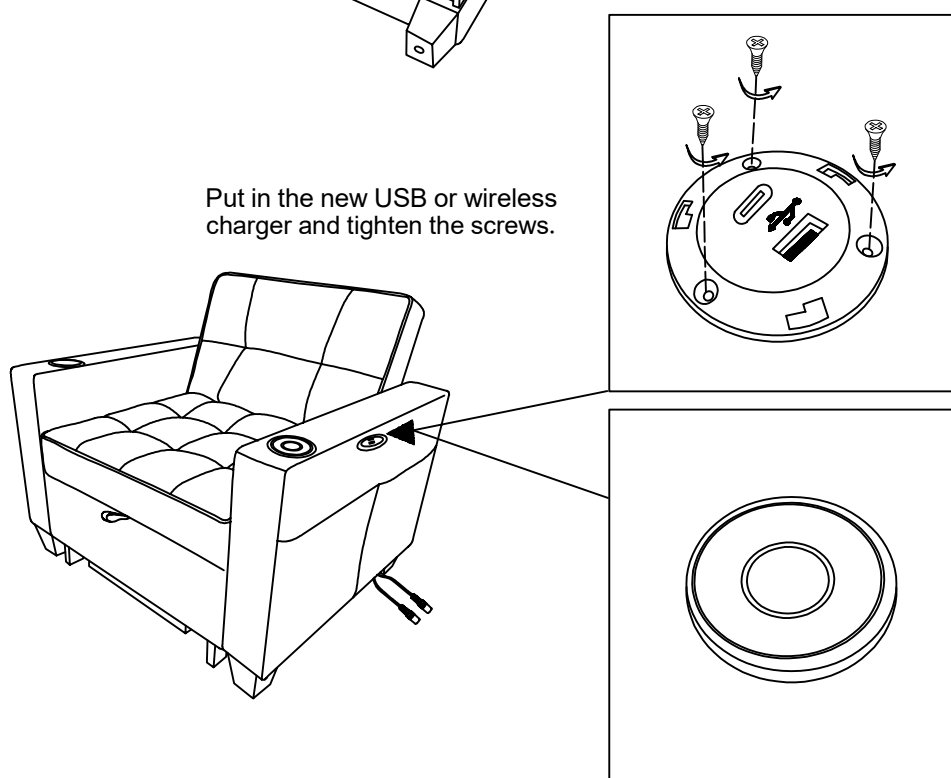

## Step 7

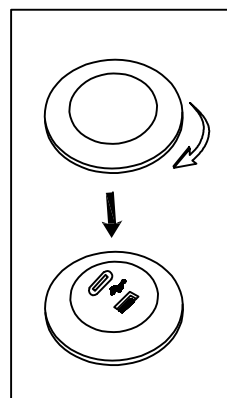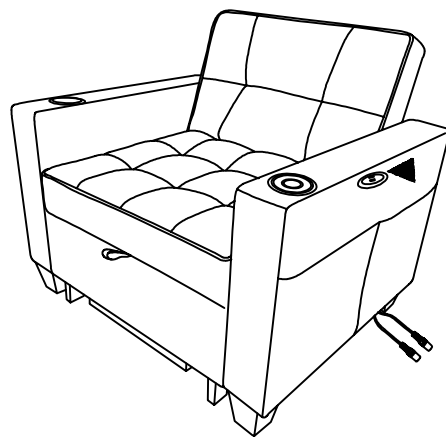


## Step 8

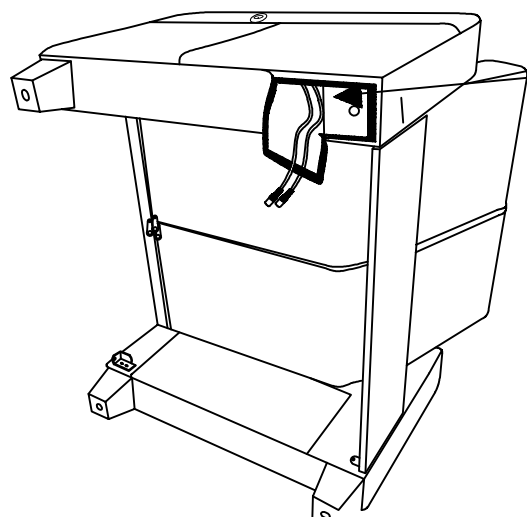

Find the USB cable and pull it out

## Step 9

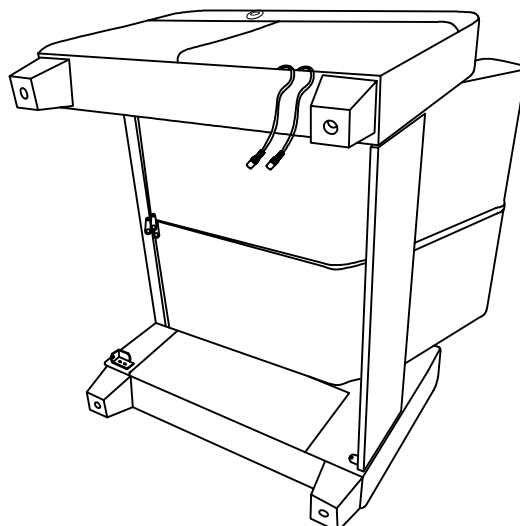

Finally installation of sofa feet

