



ASSEMBLY INSTRUCTION

- Read the assembly instructions carefully before beginning assembly.
- Ensure the safety of the glass during assembly.
- Do not over tighten the screws and bolts as this may damage the threads.
- Insert the screw into the hole as shown in the figure, follow the arrow in the picture, and then rotate 90° or 180° clockwise.
- Keep the small accessories in the accessory bag away from children.
- The remaining parts are spare parts.
- Kind tips: when installing the white backboard, install the white side inward.
- The operating instruction of RGB light is included in the package. Read it carefully when assembling.


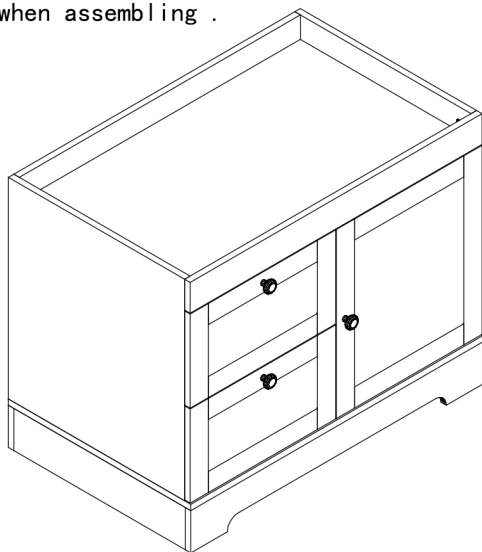


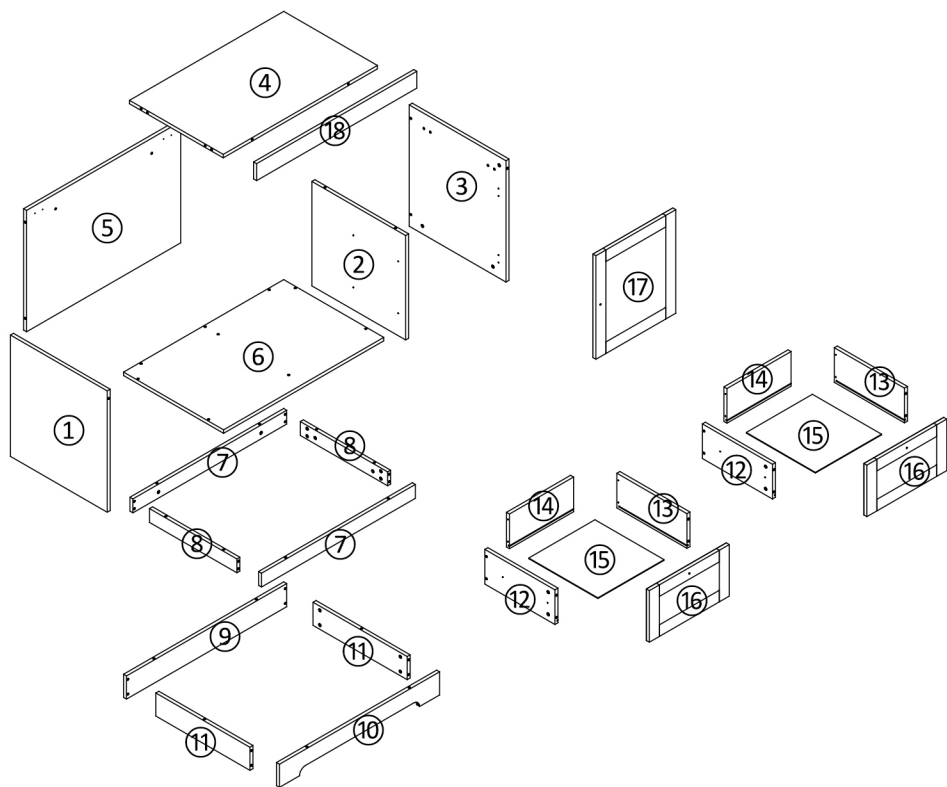

A  54pcs	B  54pcs	C  3.5*14 28pcs	C9  4*30 8pcs	D  2pcs	E  8*40 10pcs	F  3pcs	F1  4*18 3pcs	KA  4pcs	X  2pcs
AM  Decorative paper 26pcs	AG  1pcs								



WARNING

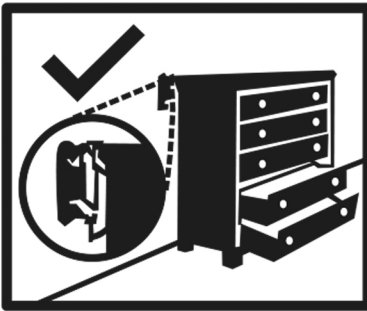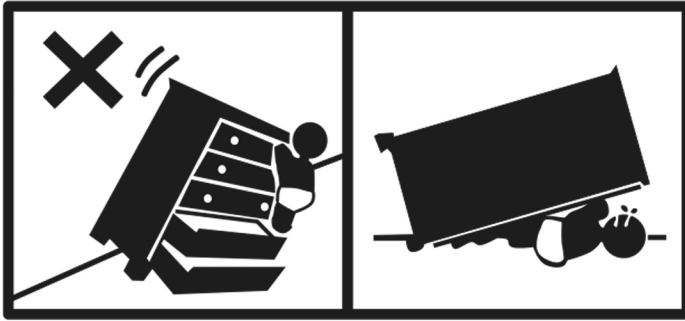

Children have died from furniture tip over. To reduce the risk of tip over:

- ALWAYS secure this furniture to the wall using an anti-tip device.
- NEVER allow children to stand, climb, or hang on drawers, doors or shelves.

Do not defeat or remove the drawer interlock system.



Place heaviest items in the lowest drawers.

NEVER put a TV on this furniture.



Hardware installation demonstration


- Please make sure "A" hardware tightened and can't be pulled out

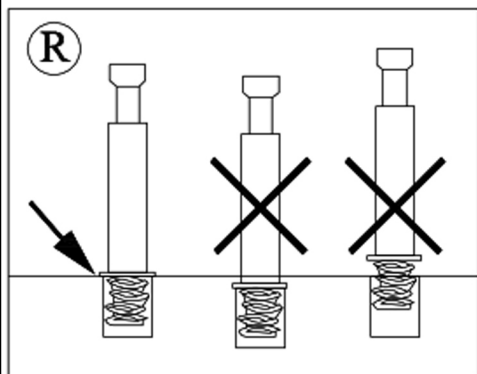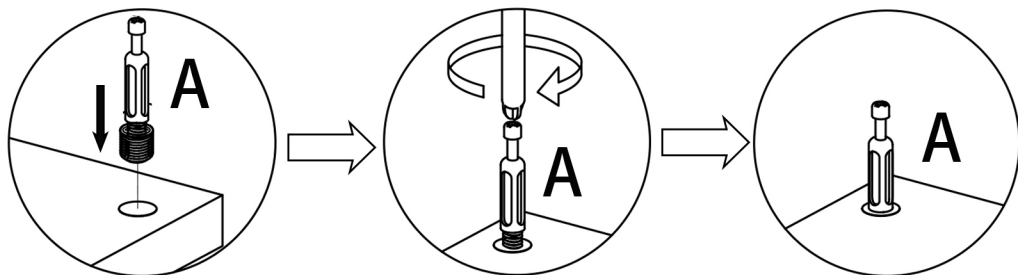



Hardware installation demonstration



- When inserting cam ensure arrowhead on cam points toward the hole on the panel edge

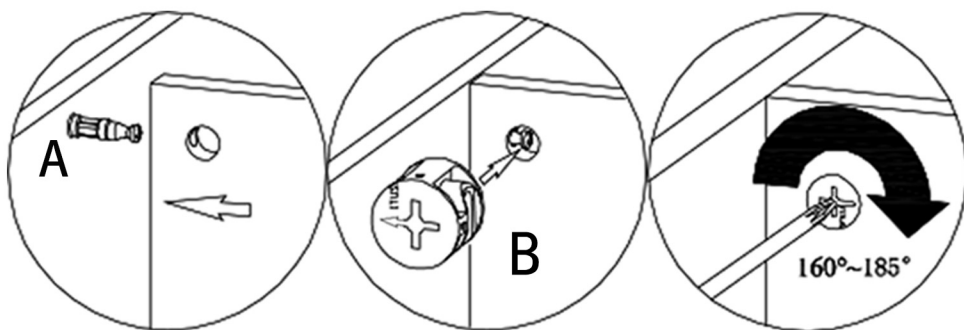





Hardware installation demonstration

Cabinet door front and rear adjustment

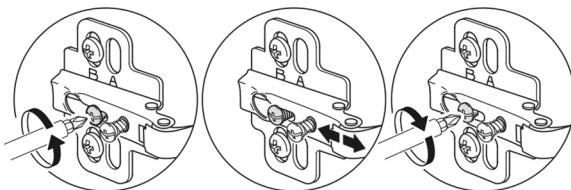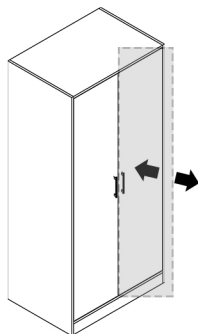



Adjusting screws can change the gap between the door panel and the cabinet side

Cabinet door left and right adjustment

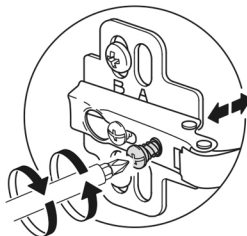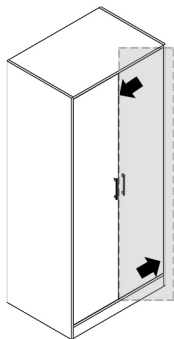

Adjusting screws can change the door panel relative to the cabinet next to the coverage

Cabinet door up and down adjustment

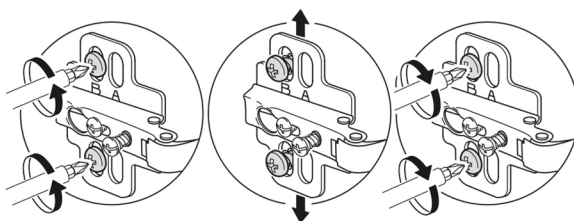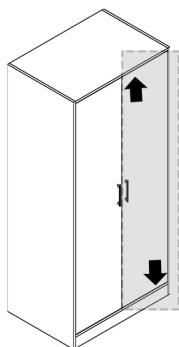


Adjusting screws can correct the upper and lower clearance of the door panel



Hardware installation demonstration

- Before installing the drawer rail, you need to separate the KA1 and KA2 first.

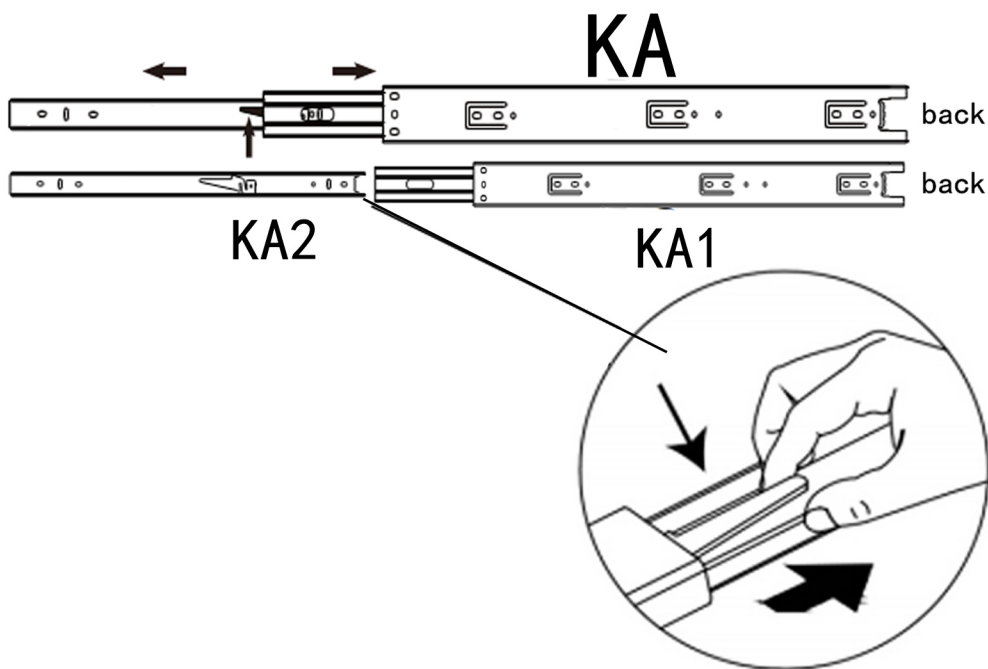


Warm Reminder: Press it and split




Hardware installation demonstration





The first screw hole should corresponded with the board location hole

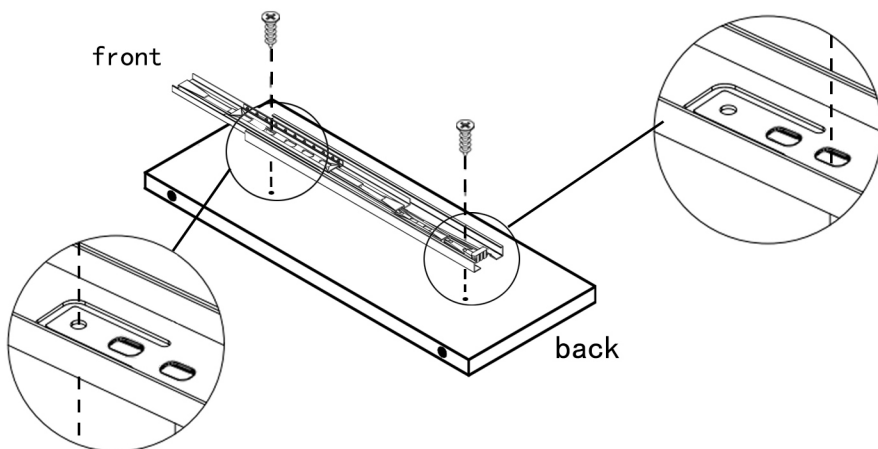

The first screw hole should corresponded with the board location hole


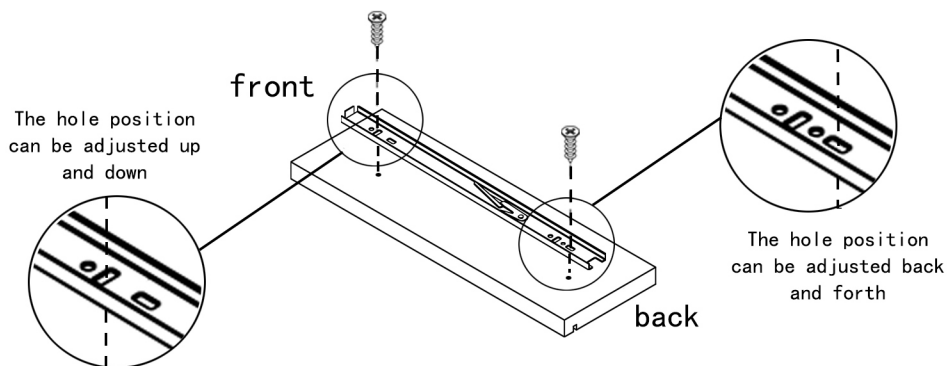


STEP 1

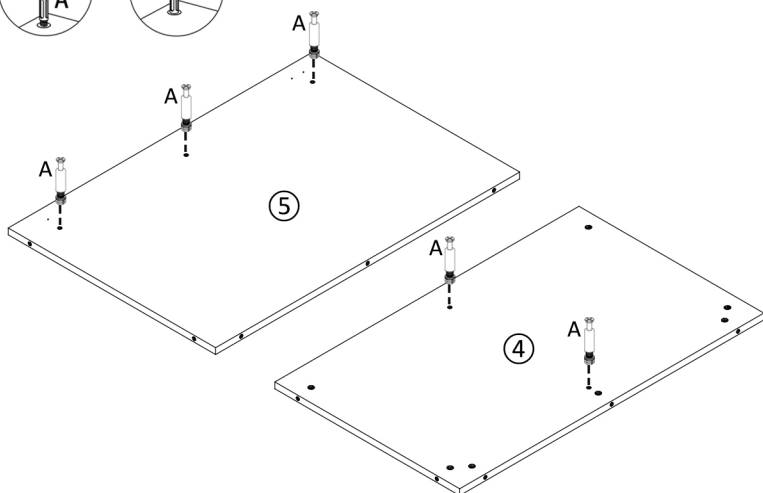




A*5

STEP 2

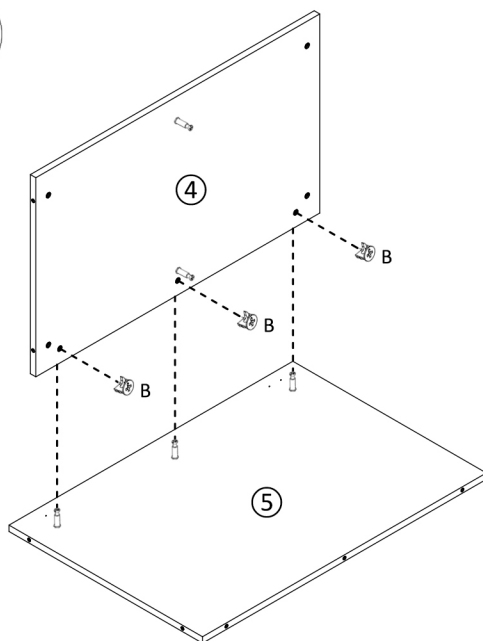



B*3

STEP 3

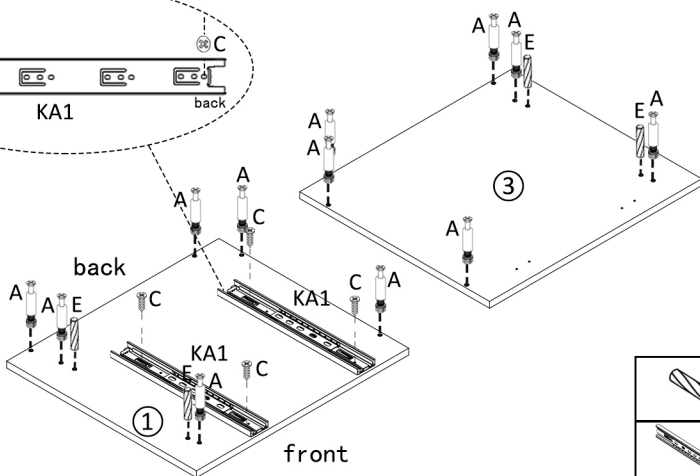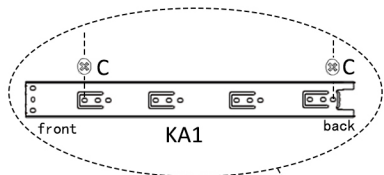



	E*4
	KA1*2
	C*4
	A*12

STEP 4

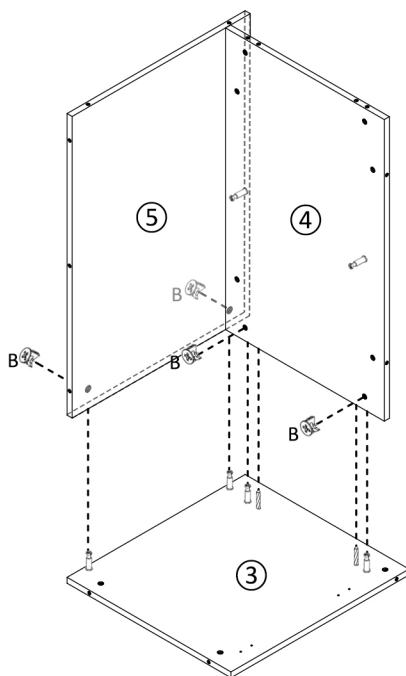


	B*4
---	-----

STEP 5

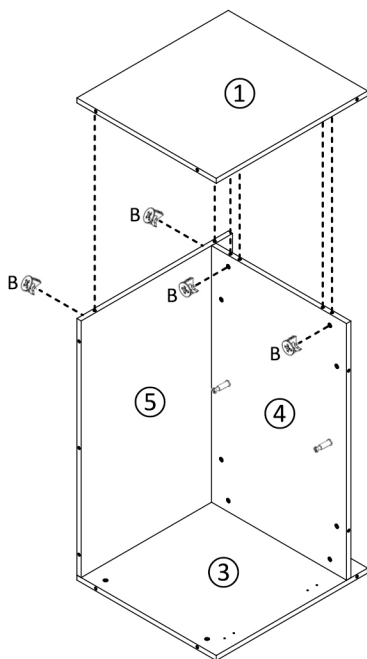

B*4

STEP 6


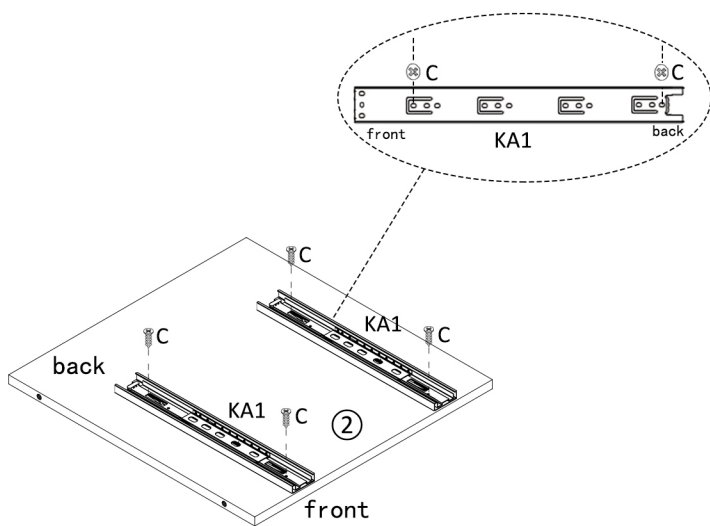


KA1*2





C*4

STEP 7

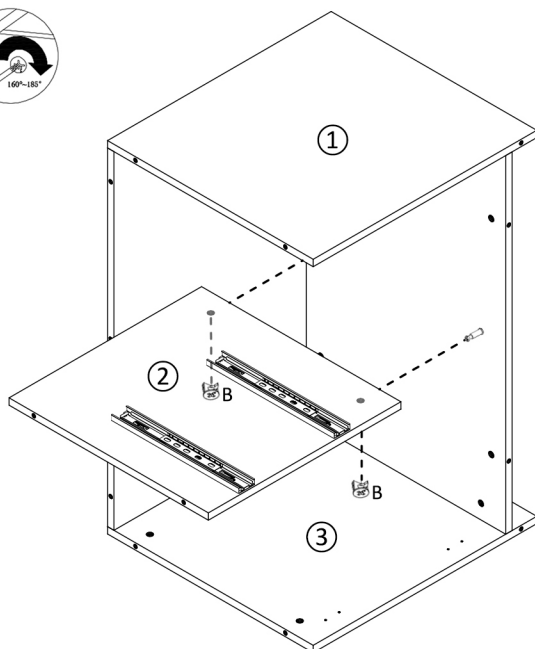



B*2

STEP 8

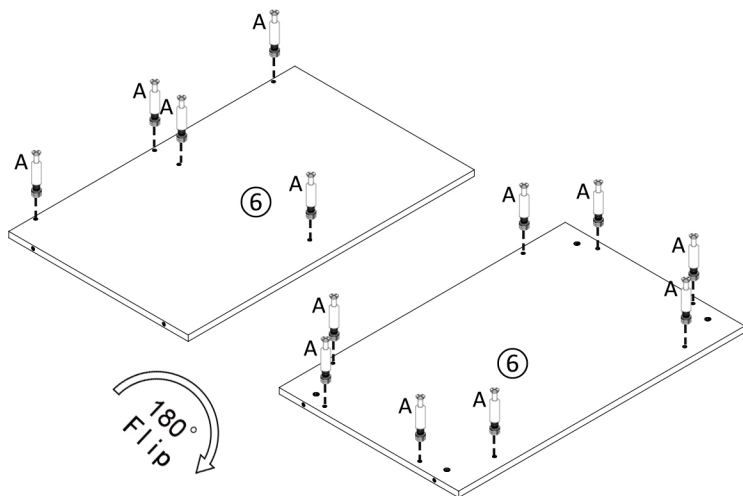



A*13

STEP 9

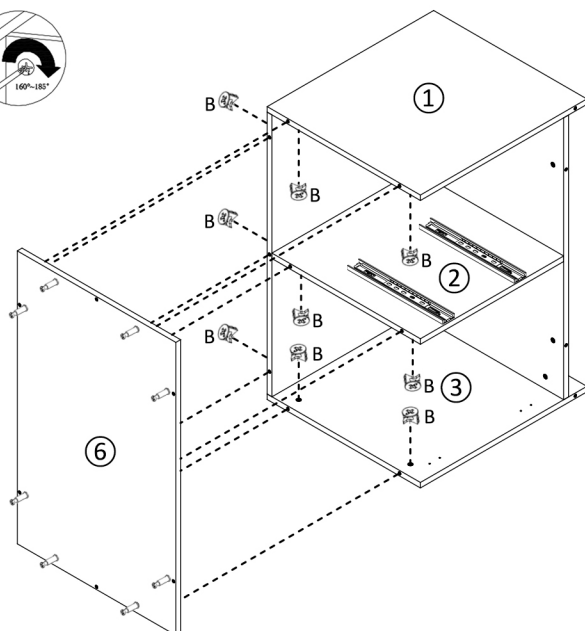



B*9

STEP 10

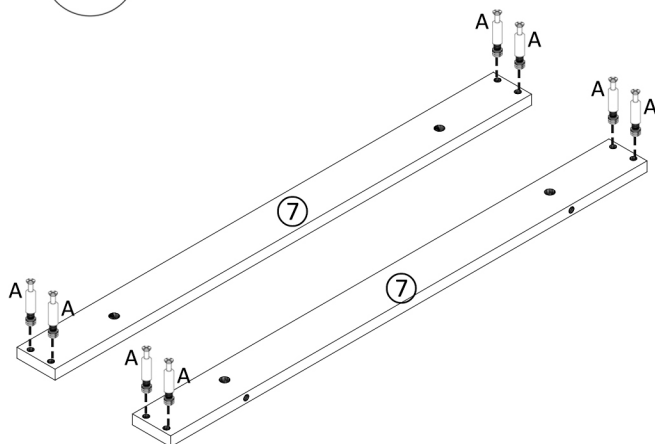



A*8

STEP 11

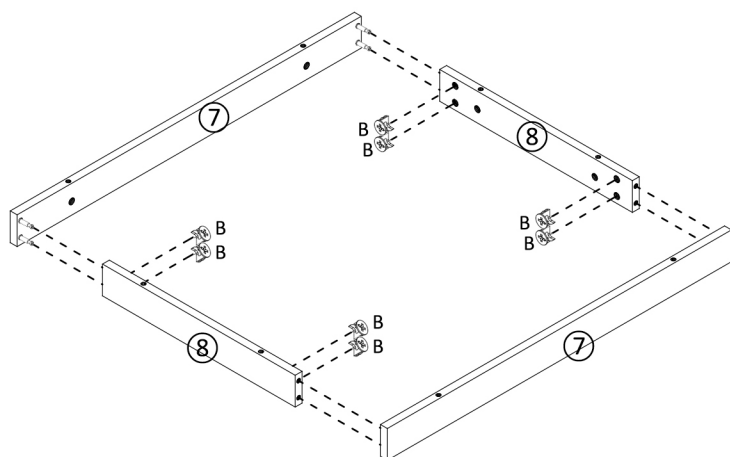



B*8

STEP 12

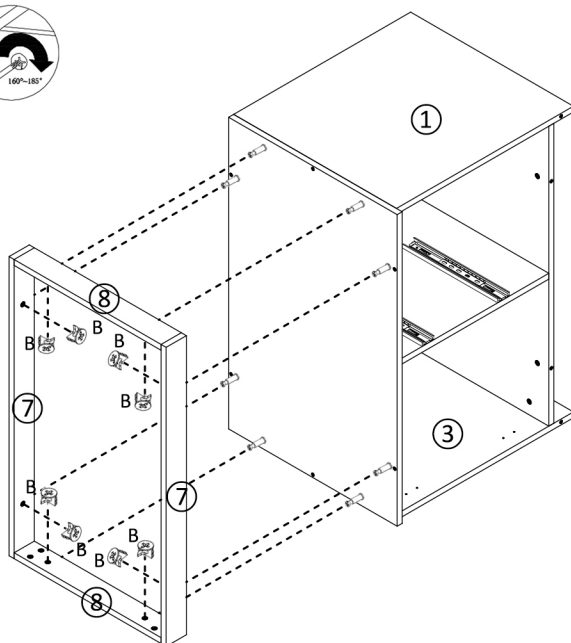



B*8

STEP 13

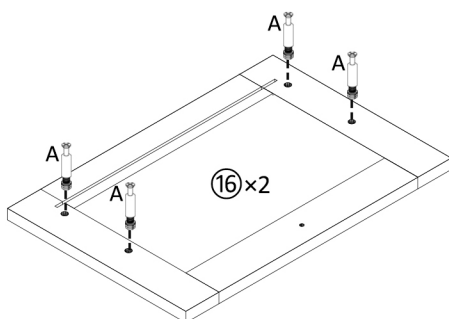


A*8

STEP 14


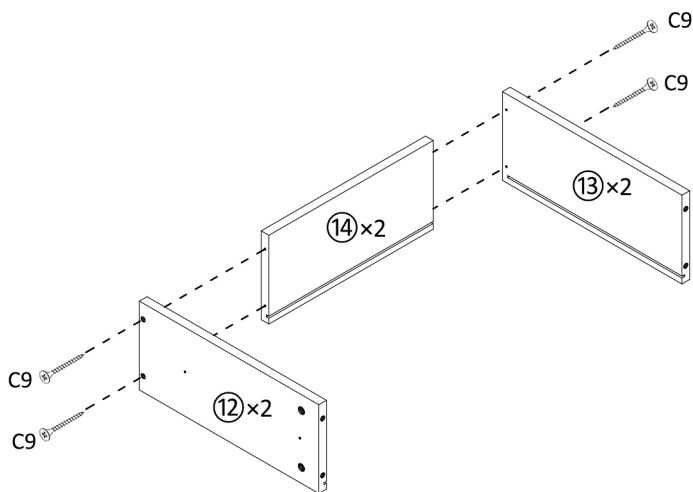


C9*8

STEP 15

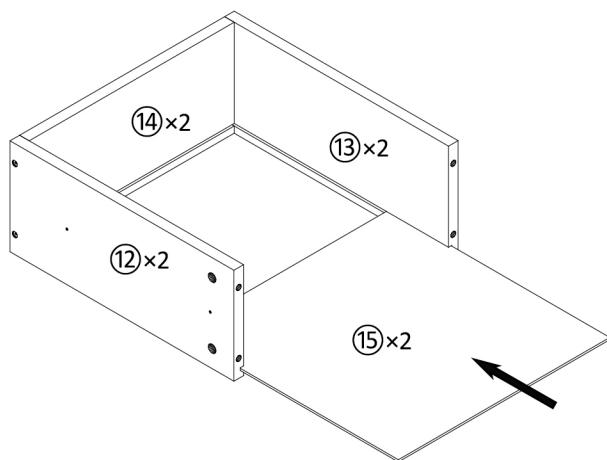


STEP 16

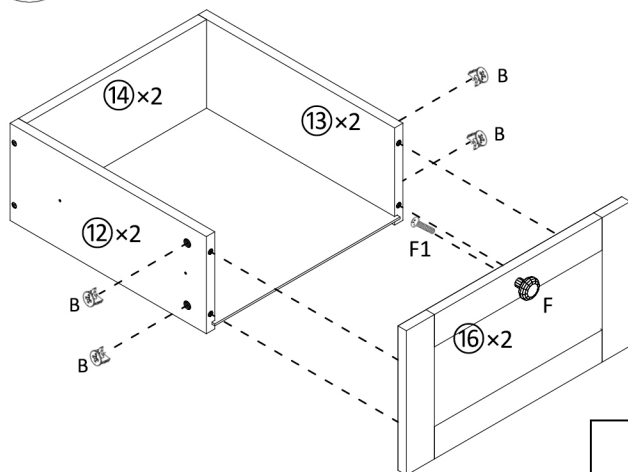

	F*2
	F1*2
	B*8


STEP 17

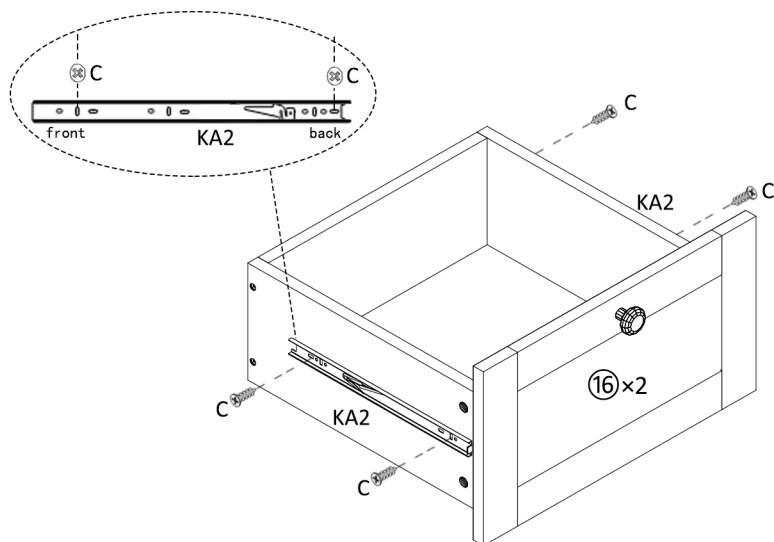

	KA2*4
	C*8



STEP 18

Note: When assembling the inner slide rail, it is necessary to place the inner slide rail on the steel ball component first, and push the inner rail parallel to the outer rail together. Direct violence will lead to the falling off or deformation of the rail steel ball.

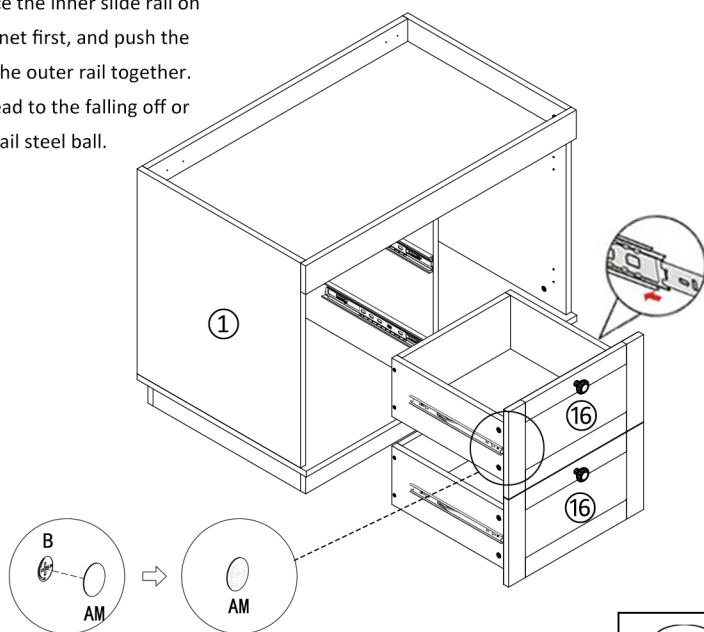



	AM*26
Decorative paper	

STEP 19

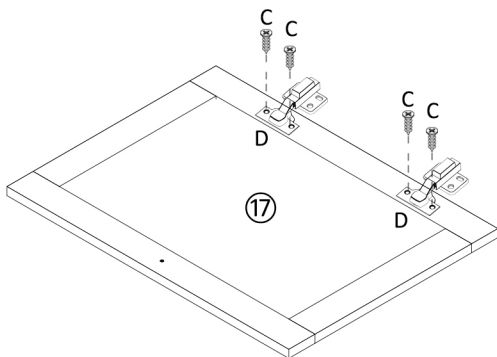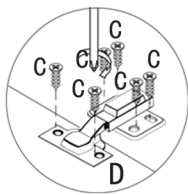

	C*4
	D*2


STEP 20

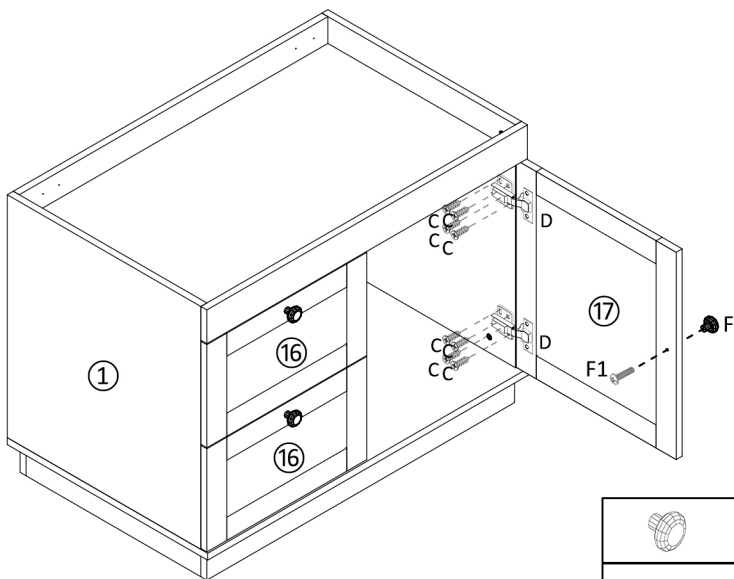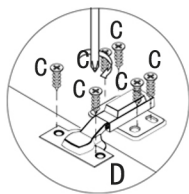

	F*1
	F1*1
	C*8


STEP 21

Plan 1

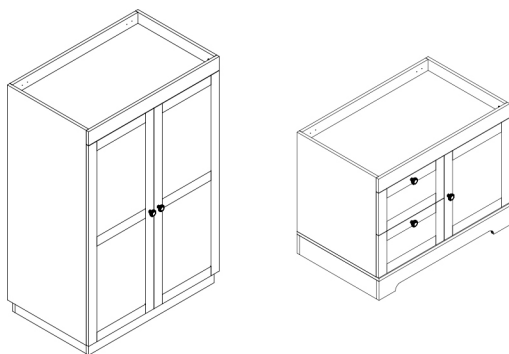



or

Plan 2

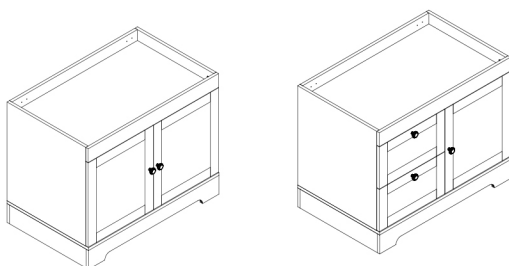



If you have purchased two cabinets, please follow the steps below to install them.

STEP 22

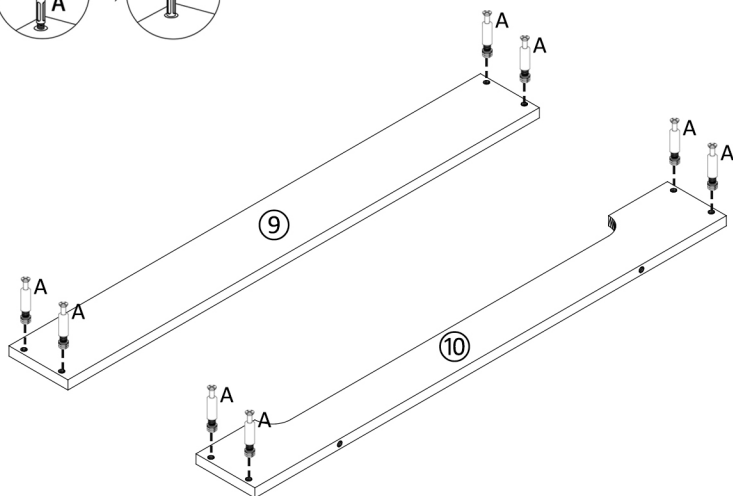


A*8

STEP 23

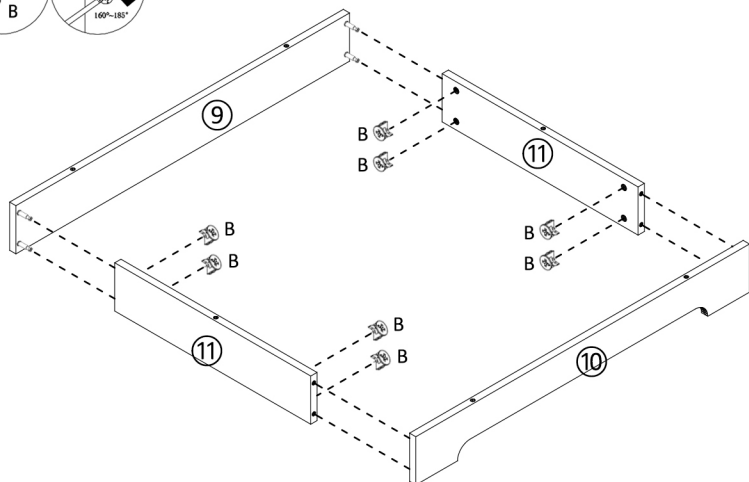


B*8

STEP 24

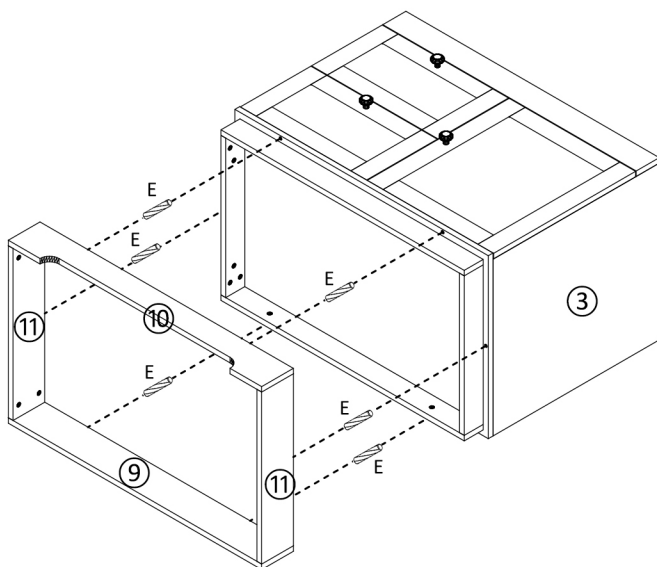

E*6


STEP 25

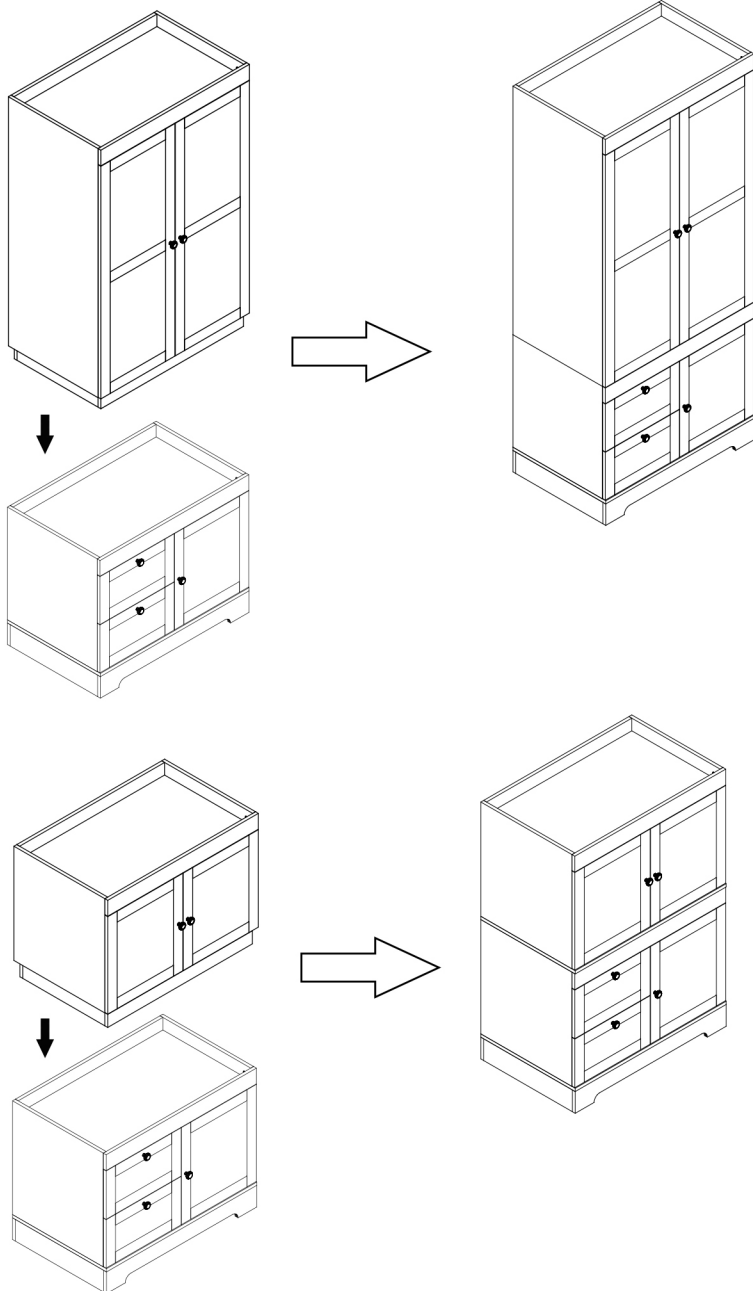



Note:

- 1.The cabinets located above do not need to be assembled with bases.
- 2.Install the anti-tipping devices after stacking the cabinets neatly.


STEP 26

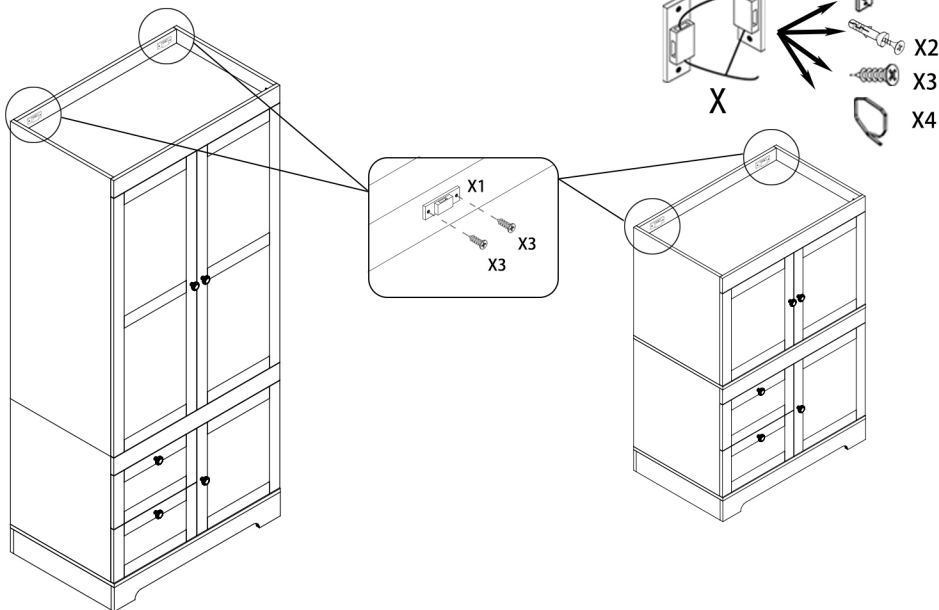


1. One side of the anti-toppling safety belt is installed on the cabinet body
2. The other side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened

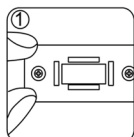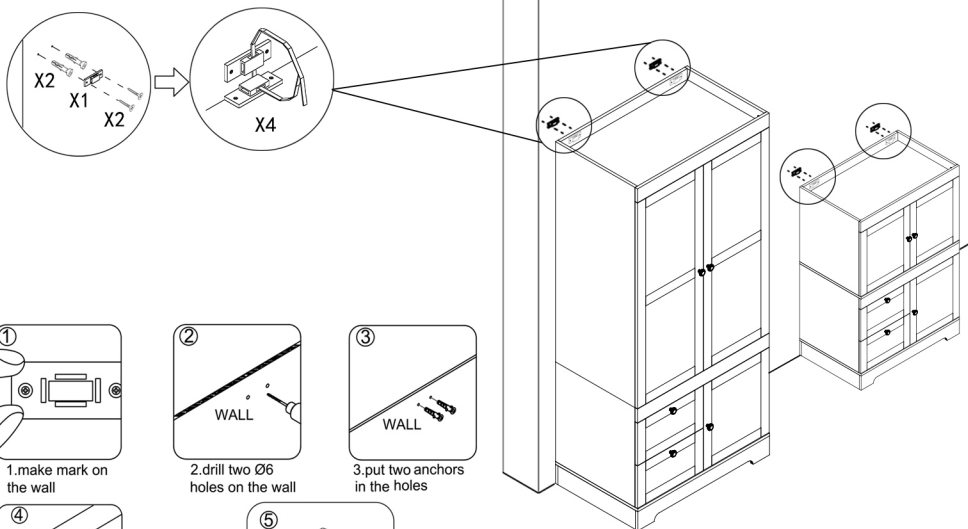


1. make mark on the wall

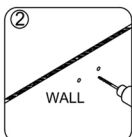


2. drill two $\varnothing 6$ holes on the wall

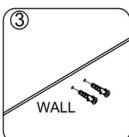

3. put two anchors in the holes

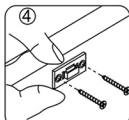

4. fix the device(X1) on the wall by the long screws(X2)

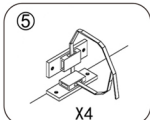

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on belt (X4) to tighten it.



X*2