


# HALL TREE

Assembly Instructions - Please keep for future reference

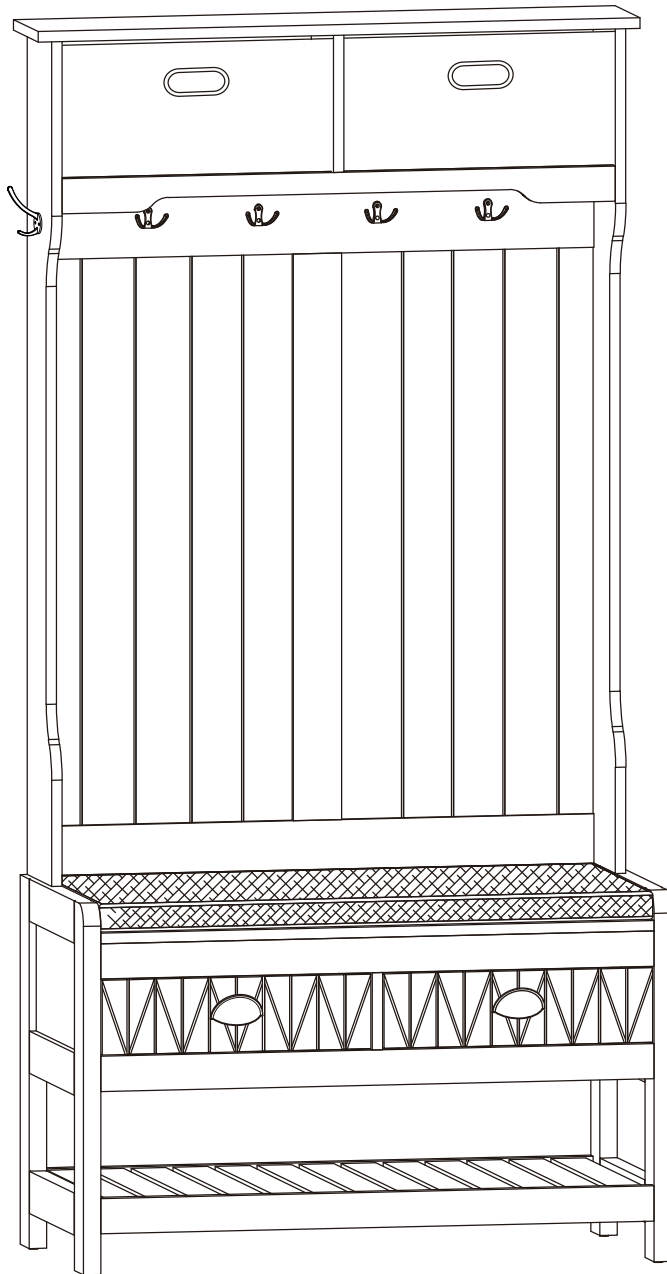

## Dimensions

Width- 33.46 inch

Depth- 16.14 inch

Height-68.90 inch

Important - Please read these instructions fully before starting assembly




# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

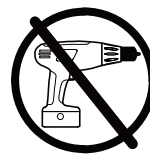

power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## WARNING

**In order to help prevent overturning – please follow these instructions**









To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose




# Components - Fittings

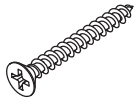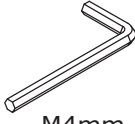Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
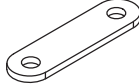
<b>Ax36</b>  Ø6x35mm	<b>Bx36</b>  Ø15x10mm	<b>Cx56</b>  Ø6x30mm	<b>Dx13</b>  Ø4x40mm
<b>Ex12</b>  Ø6x60mm	<b>Fx1</b>  M4mm	<b>Gx12</b>  Ø10x10mm	<b>Hx21</b>  Ø20mm
<b>Ix24</b>  Ø3.5x12mm	<b>Jx4</b>  Ø4x35mm	<b>Kx4</b>  Ø15mm	<b>Lx4</b>  
<b>Mx12</b>  	<b>Nx28</b>  	<b>Ox28</b>  Ø3x16mm	<b>Px3</b>  
<b>Qx8</b>  Ø4x14mm	<b>Rx2</b>  	<b>Sx4</b>  	<b>Tx2</b>  Ø6x30mm
<b>Ux2</b>  	<b>Vx4</b>  	<b>Wx2</b>  	<b>CLx2</b>  300mm
<b>CRx2</b>  300mm	<b>DLx2</b>  300mm	<b>DRx2</b>  300mm	

Tools required Not Included

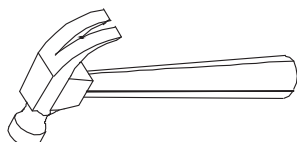

Phillips screwdriver  
(medium & large)


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

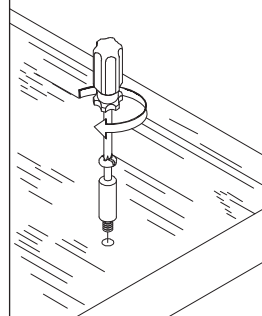

## Step 2

Push the male camlock into the entry hole.

2

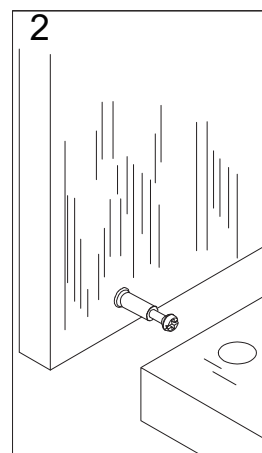


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

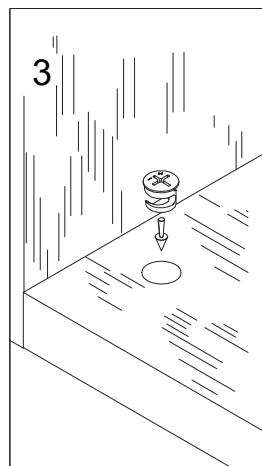


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4

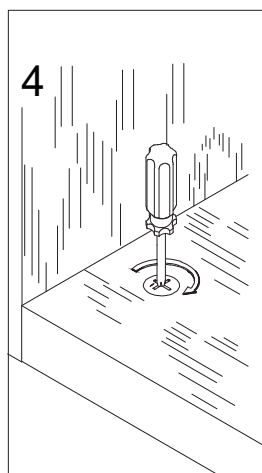



# Assembly Instructions

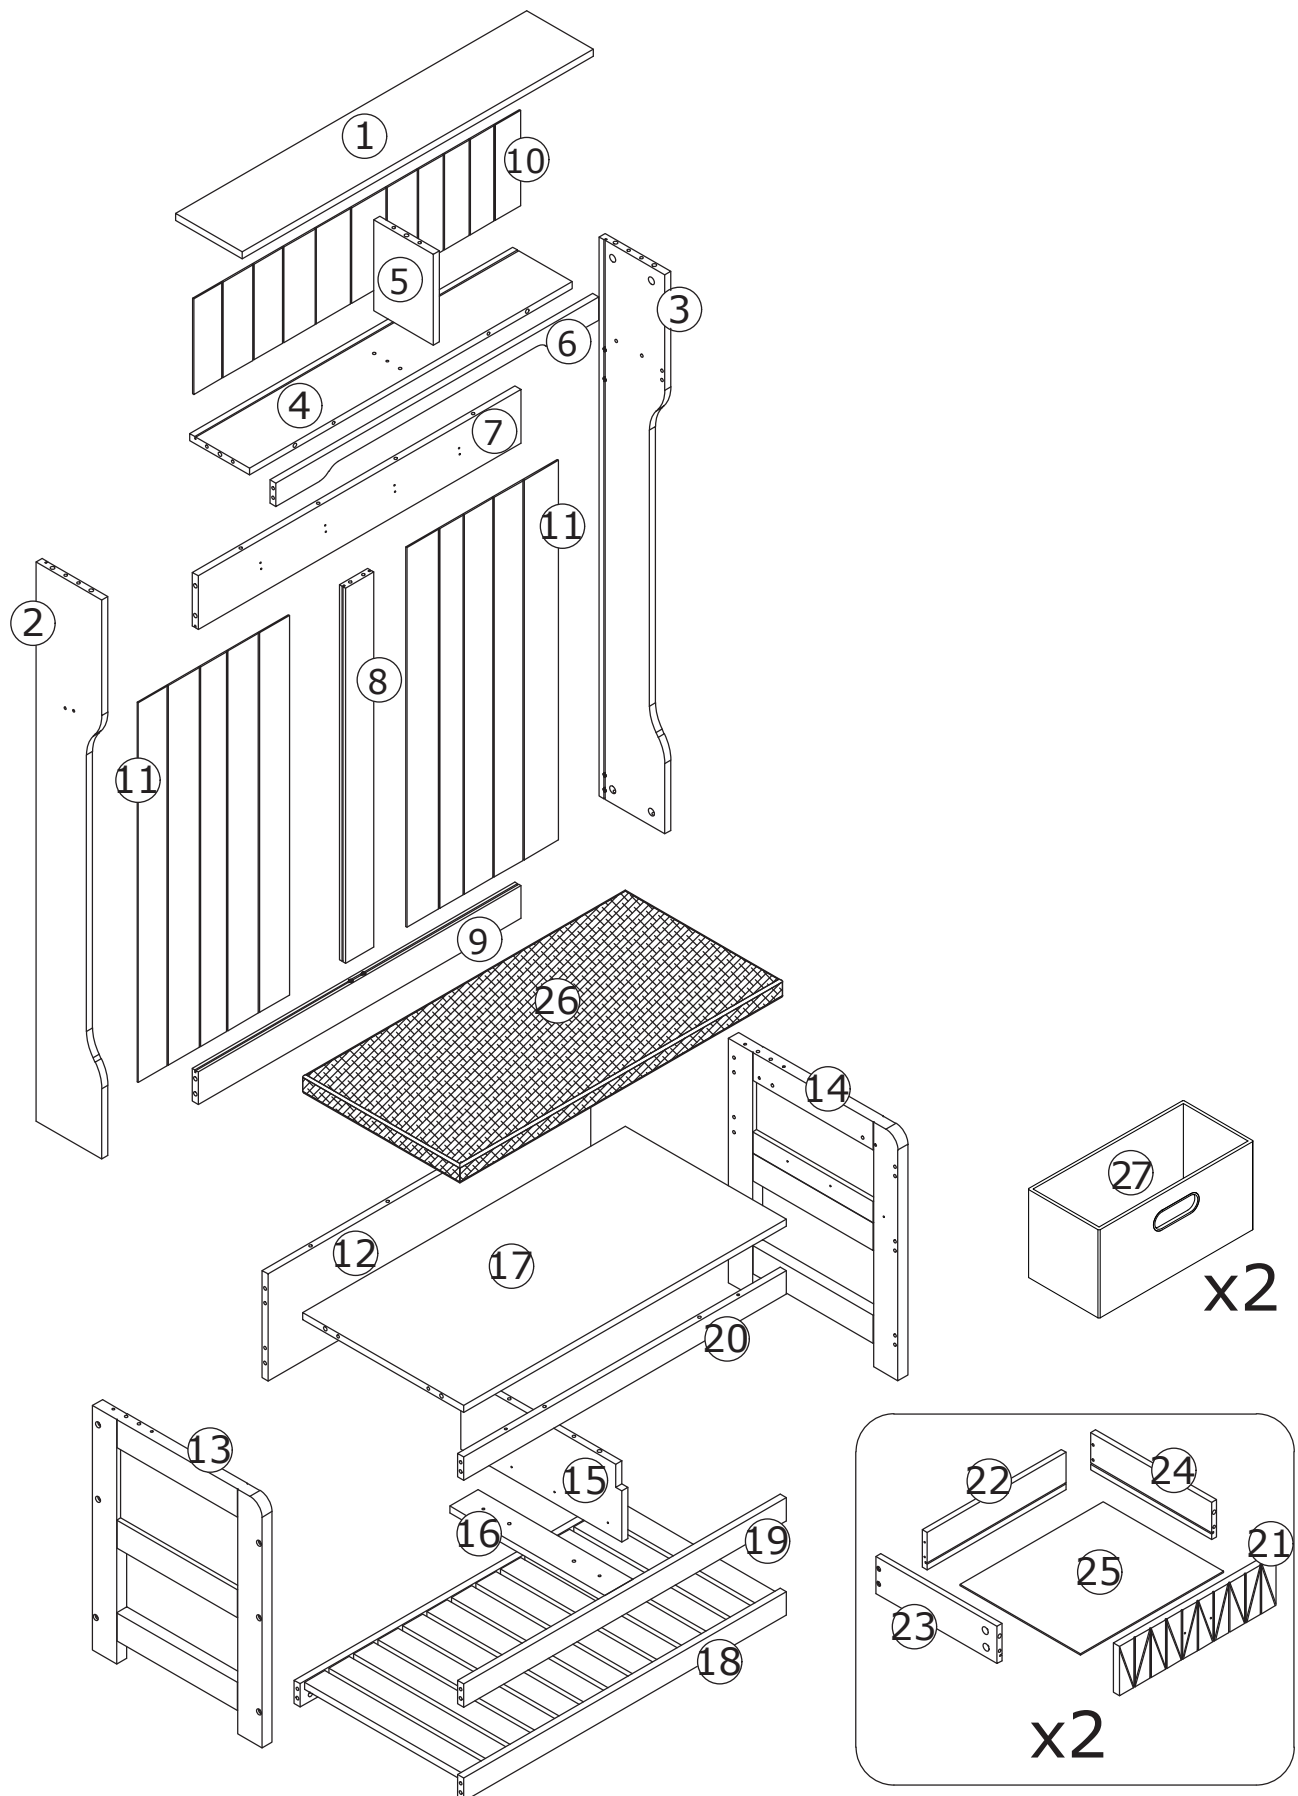

# 1

Ix6



Ø3.5x12mm

CLx1






L300mm


CRx1



L300mm

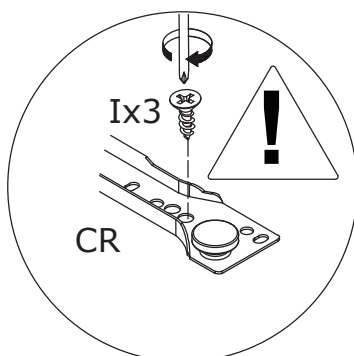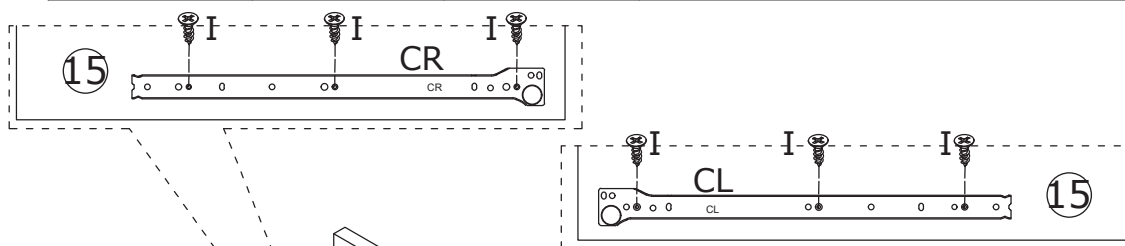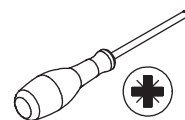

Attention,  
First hole

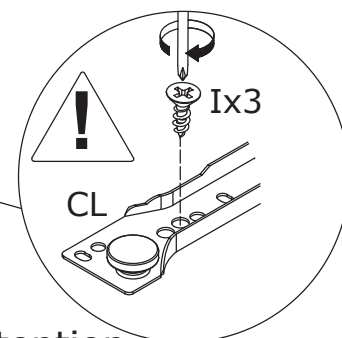

Attention,  
second hole

# 2

Cx2






Ø6x30mm

Dx2





Ø4x40mm

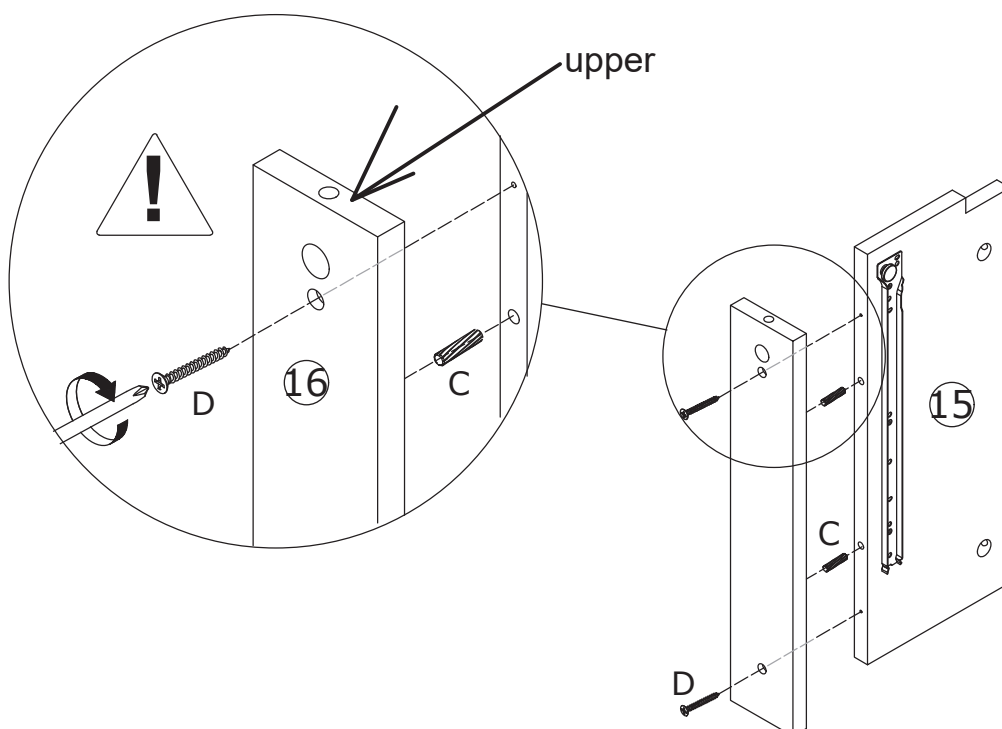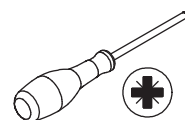

# 3

Dx2  
Ø4x40mm


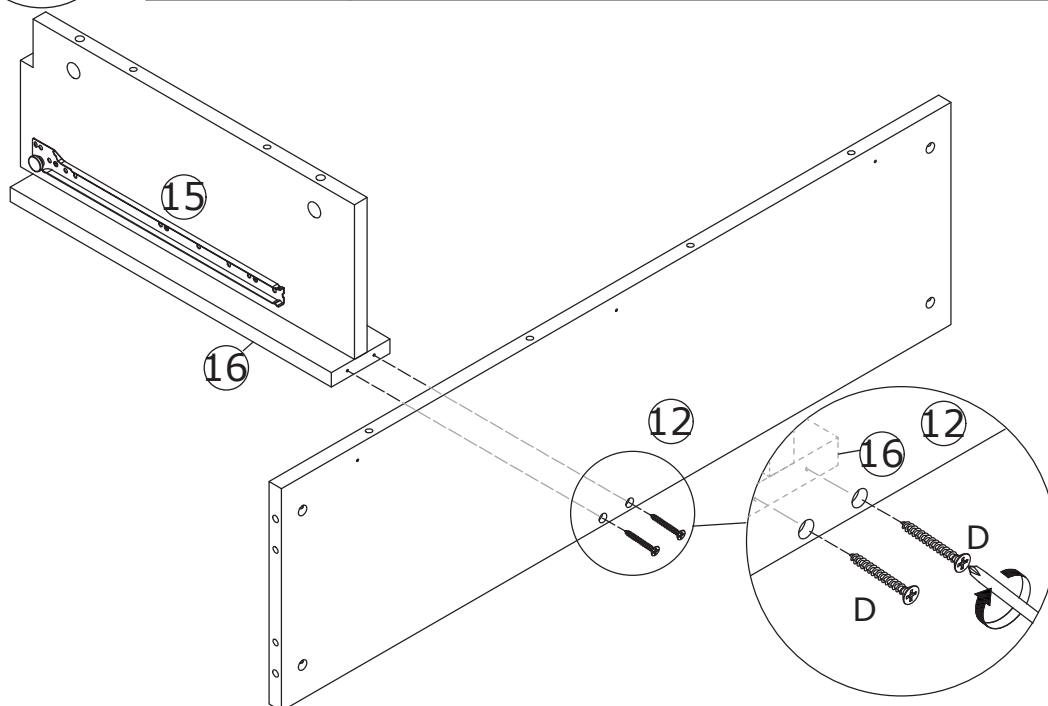
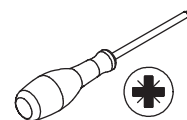


# 4


Ax2  
Ø6x35mm




Cx2  
Ø6x30mm

Jx2  
Ø4x35mm

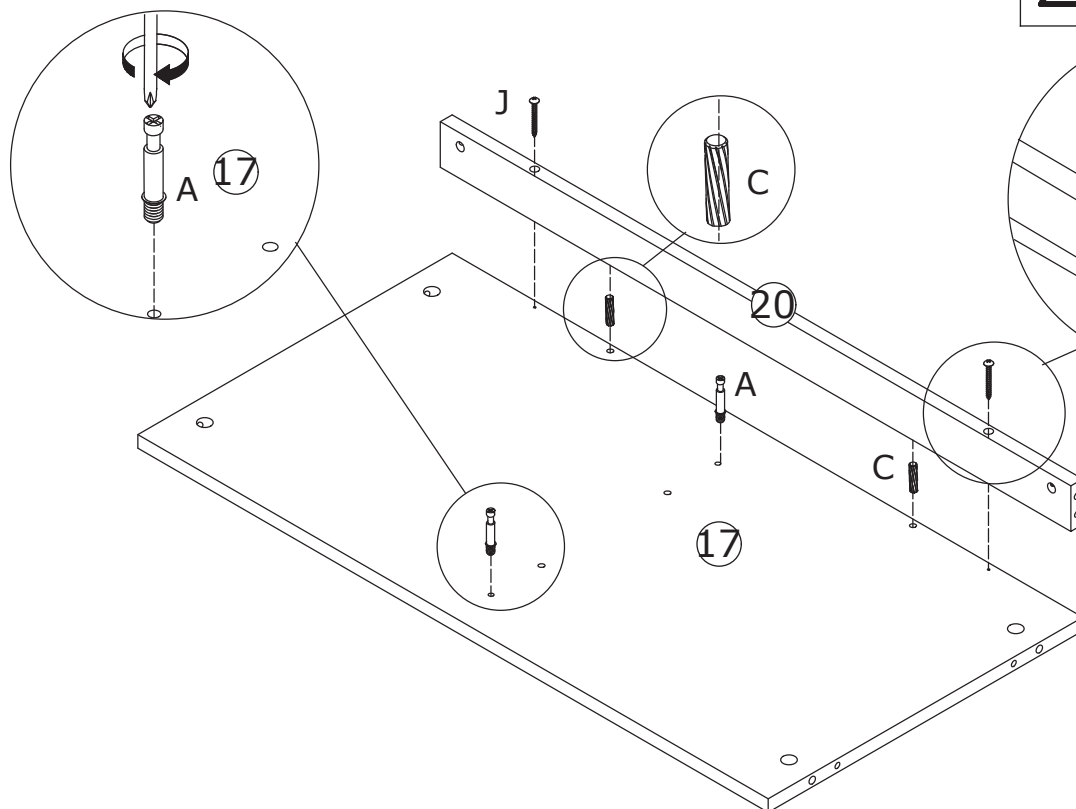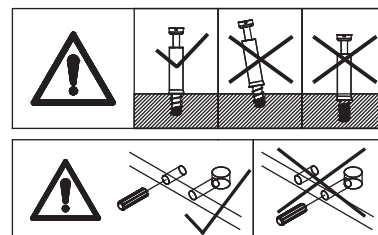




# 5

<p>Bx2</p>  <p>Ø15x10mm</p>	<p>Cx2</p>  <p>Ø6x30mm</p>	
--	---	---

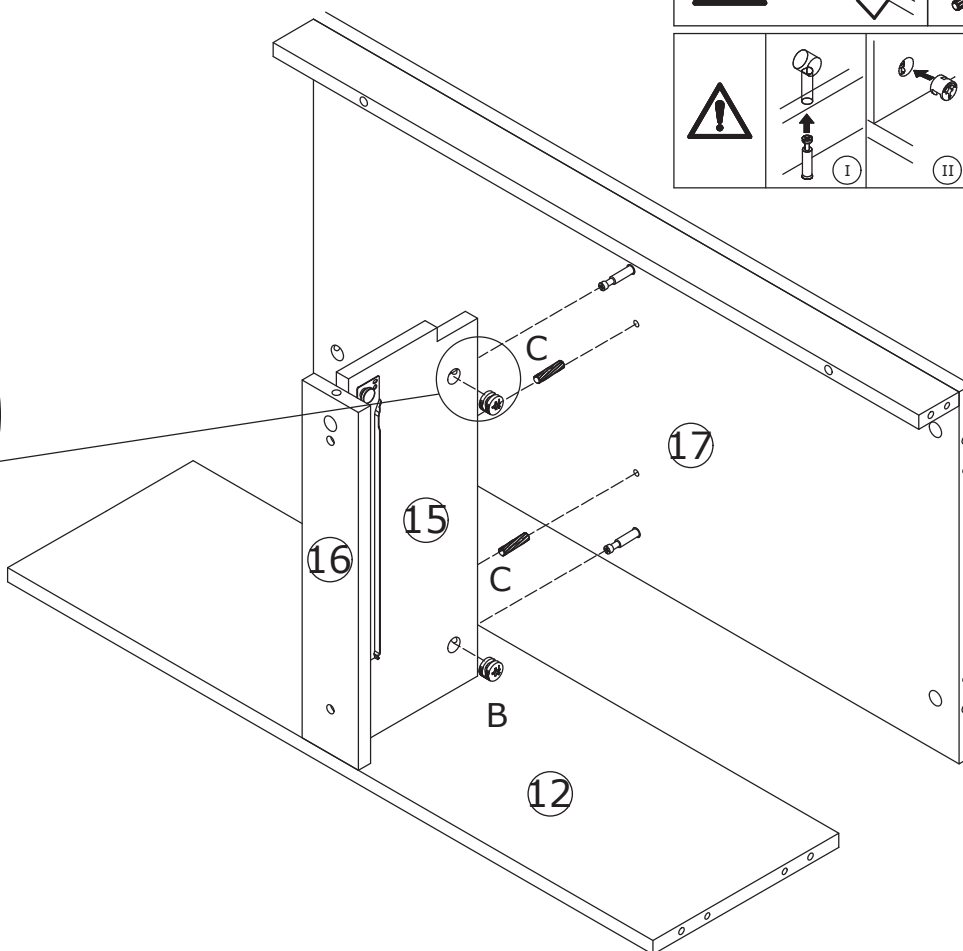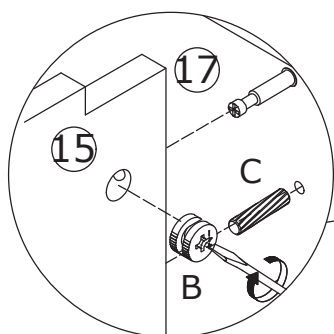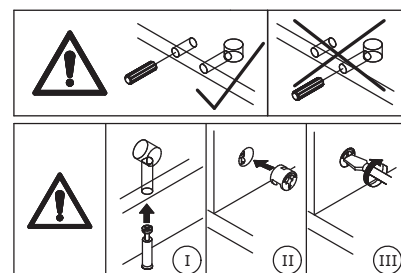





# 6
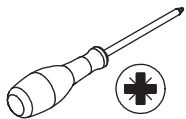
<p>Ax1</p>  <p>Ø6x35mm</p>	
---	---

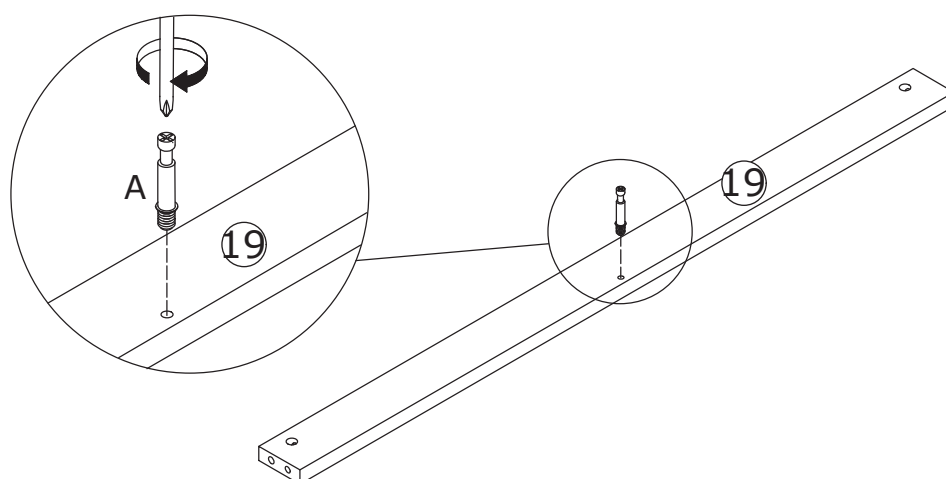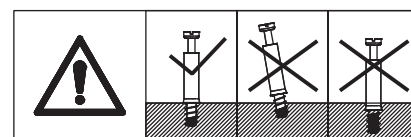



7
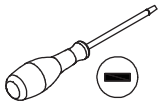
<p>Bx1</p>  <p>Ø15x10mm</p>	
--	---

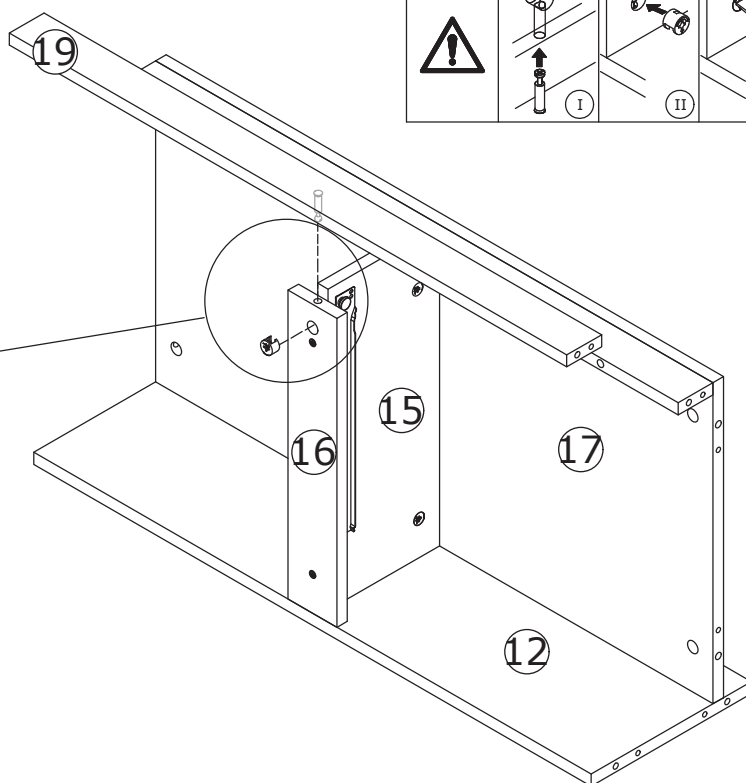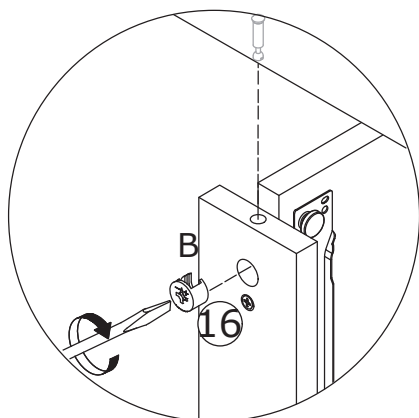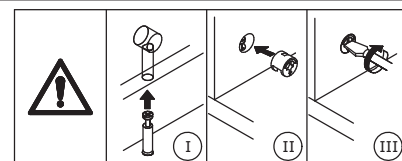

8

<p>Cx6</p>  <p>Ø6x30mm</p>	
---	--

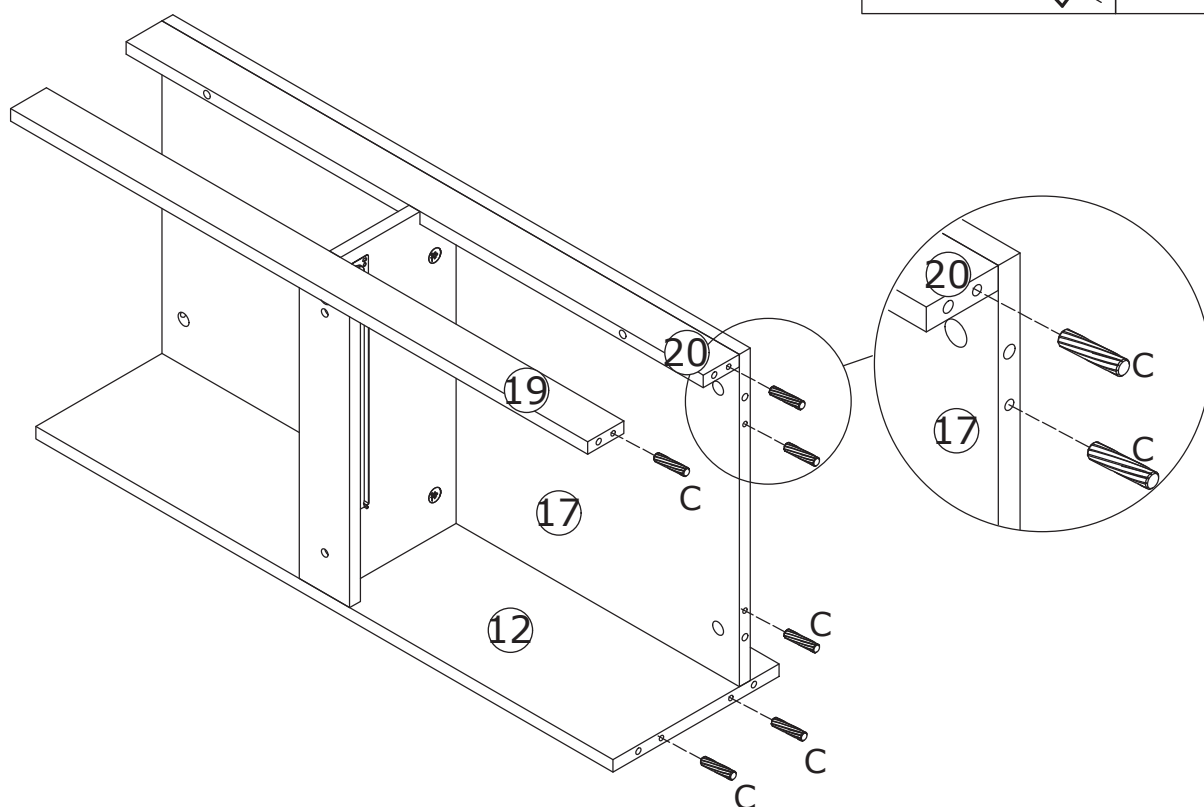


9

# 9




Ax2



Ix3



CRx1

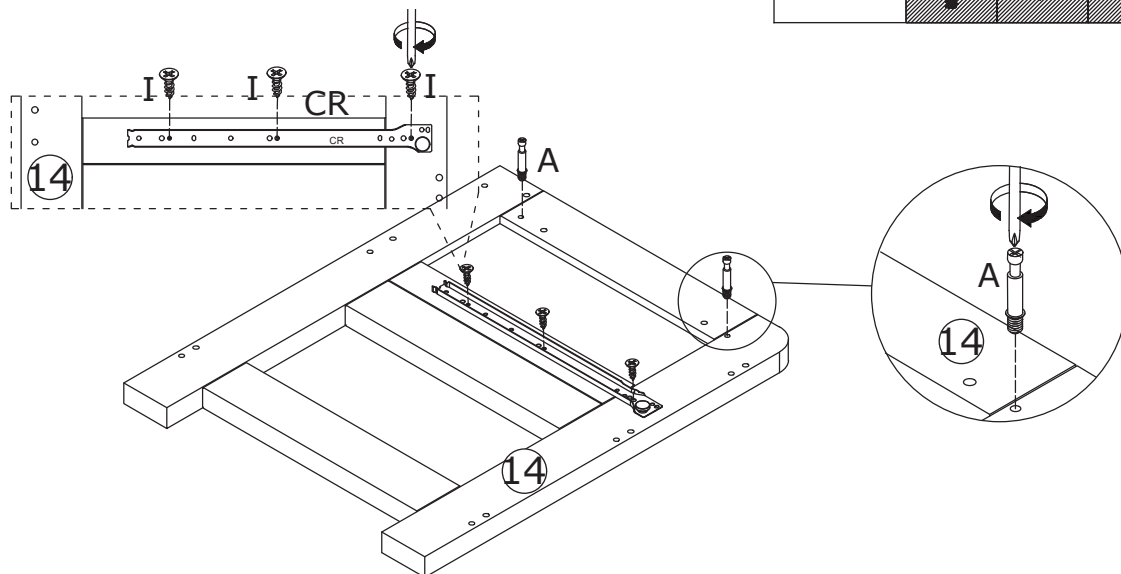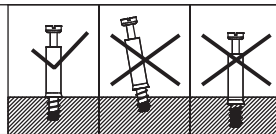

# 10

Bx2







Ex4



Fx1





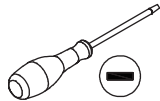


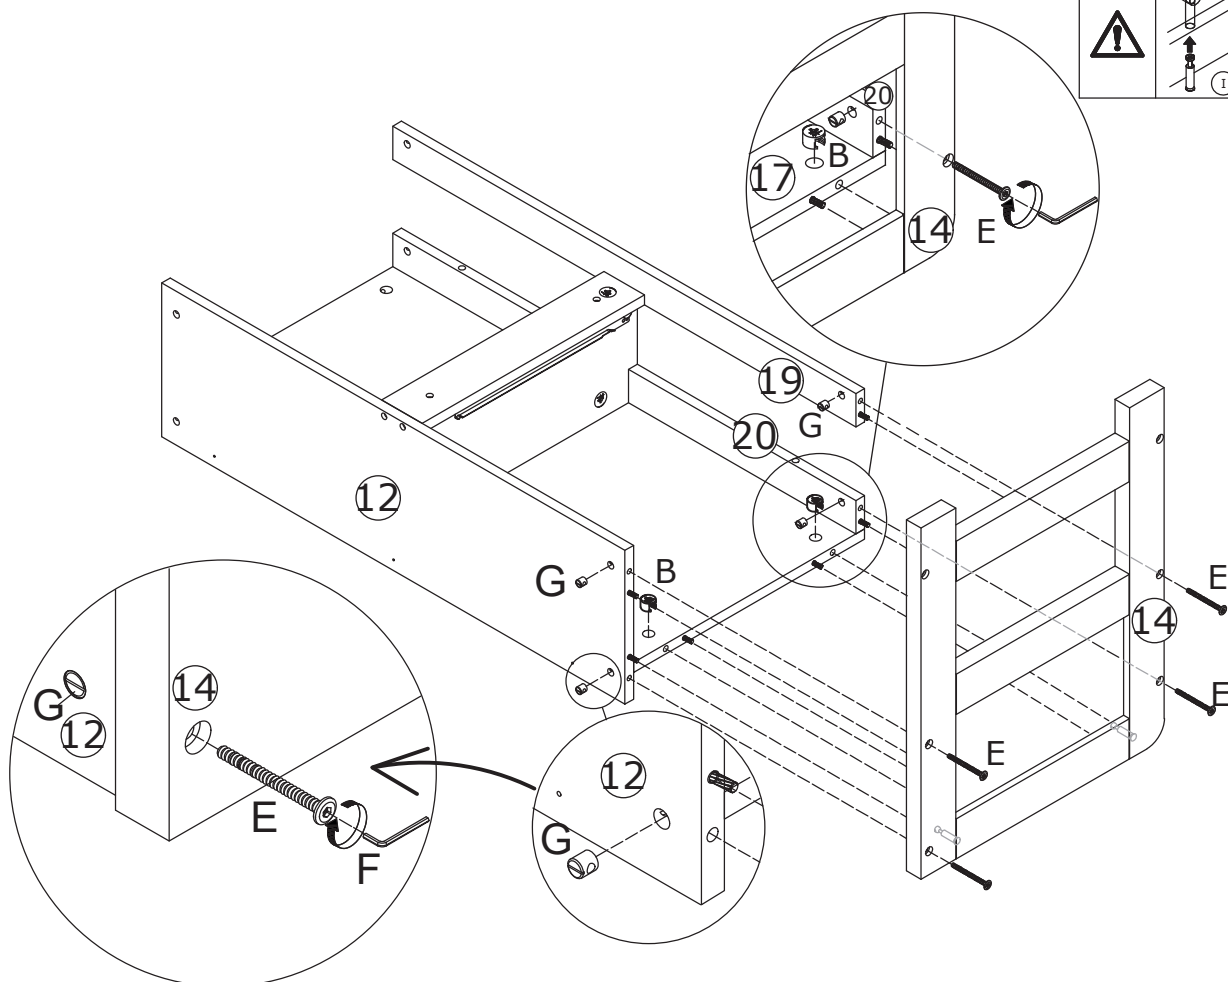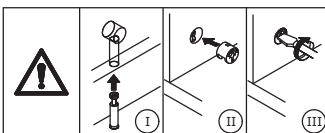

Gx4



10


# 11
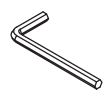
<p>Cx2</p>  <p>Ø6x30mm</p>	<p>Ex2</p>  <p>Ø6x60mm</p>	<p>Fx1</p>  <p>M4mm</p>	<p>Gx2</p>  <p>Ø10x10mm</p>	
---	---	--	---	---

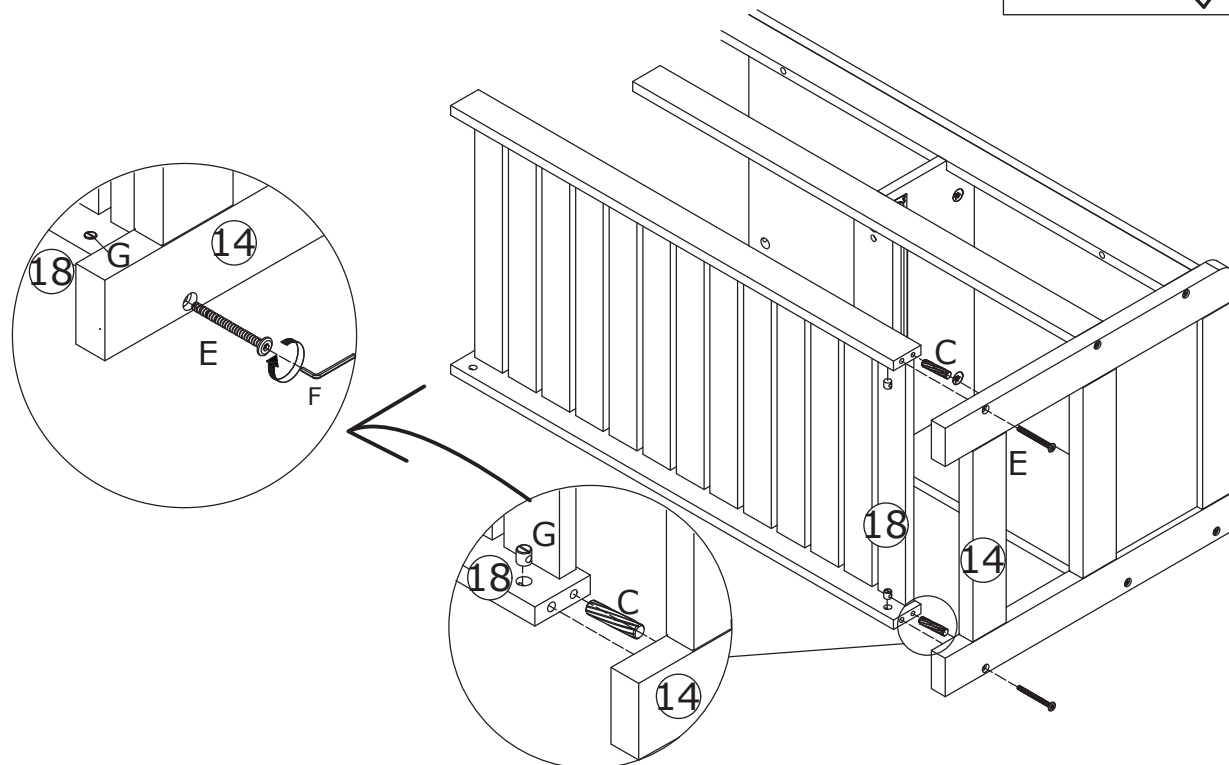




# 12

<p>Hx6</p>  <p>Ø20mm</p>	
---	--

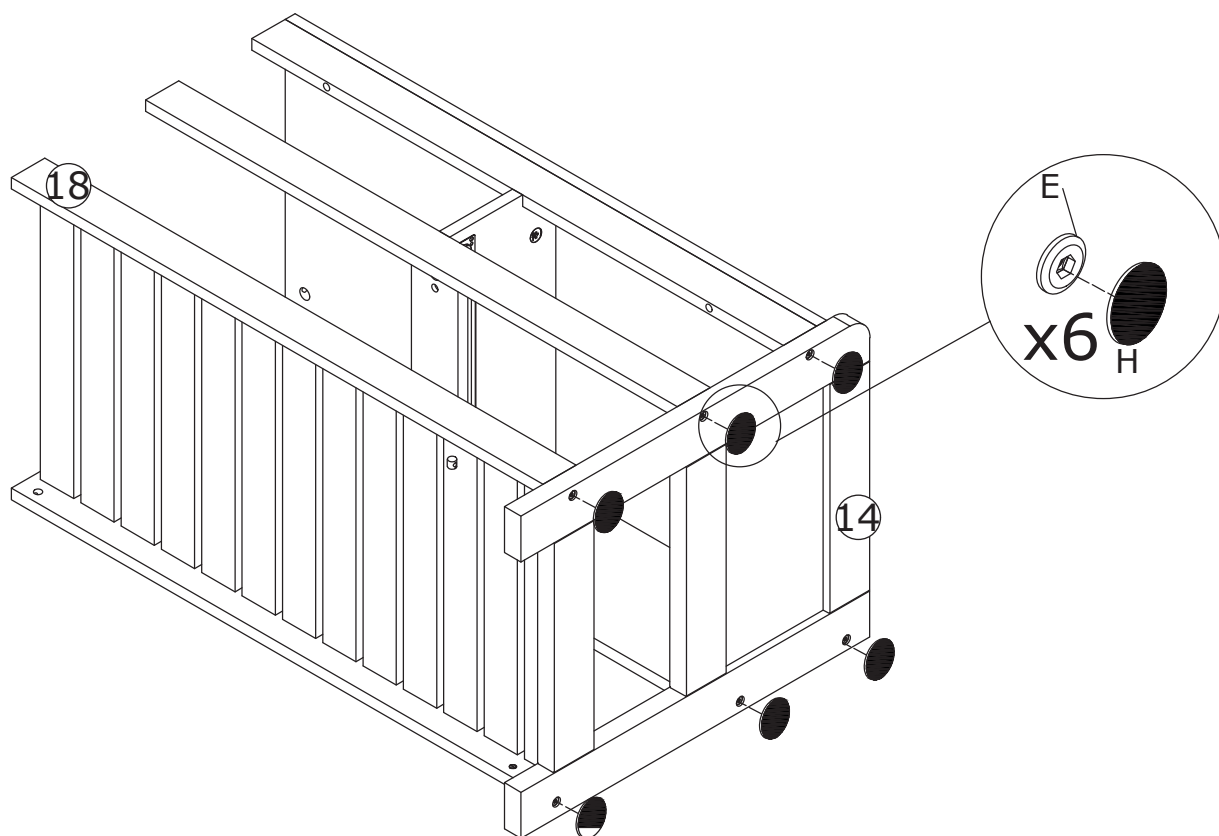

# 13

Cx8  
Ø6x30mm


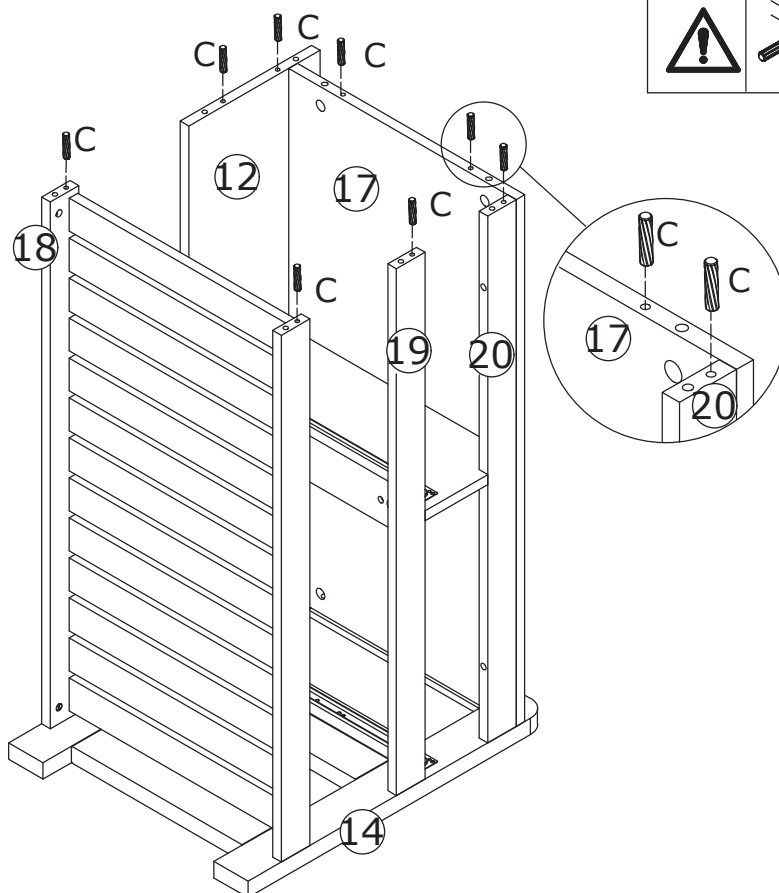




# 14

Ax2  
Ø6x35mm

Ix3  
Ø3.5x12mm

CLx1  
L300mm

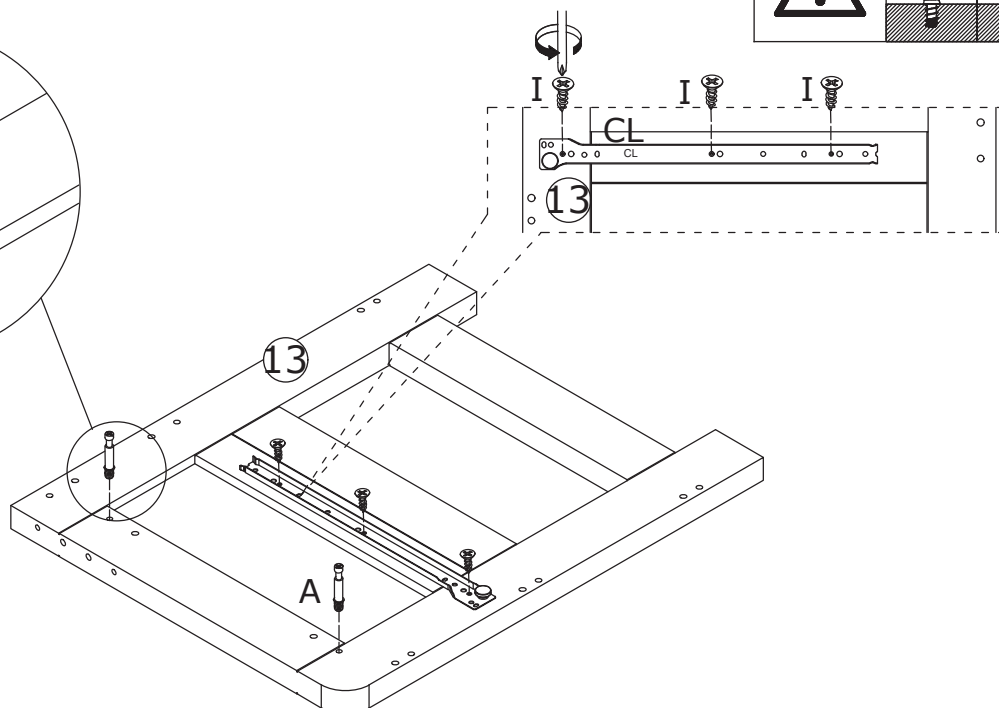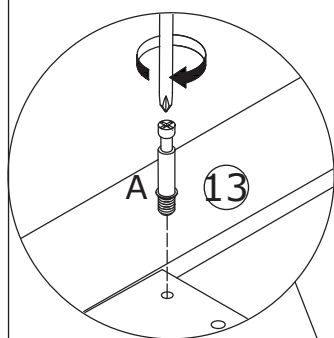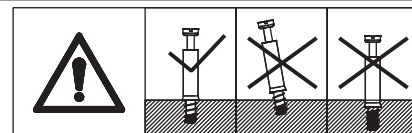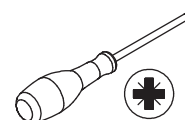



# 15

Bx2



Ø15x10mm

Ex6



Ø6x60mm

Fx1











M4mm

Gx6




Ø10x10mm

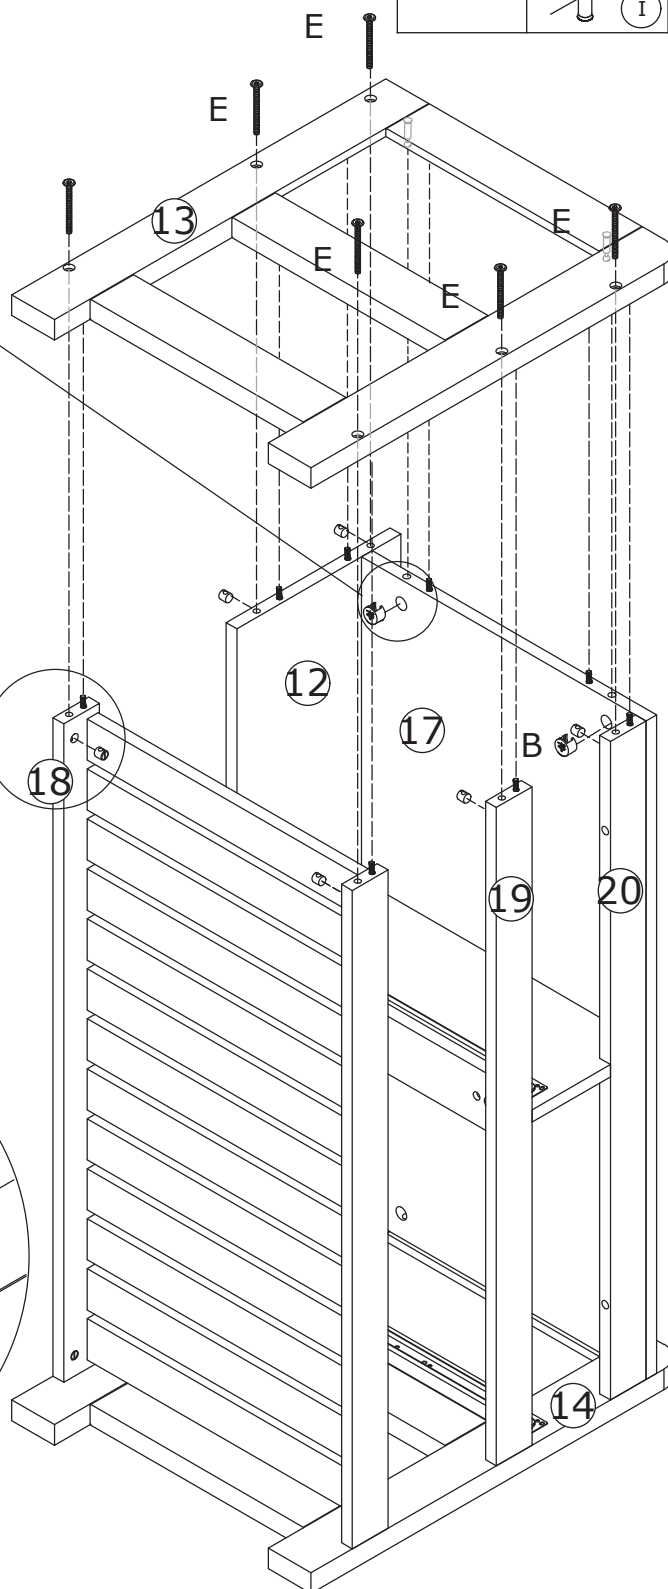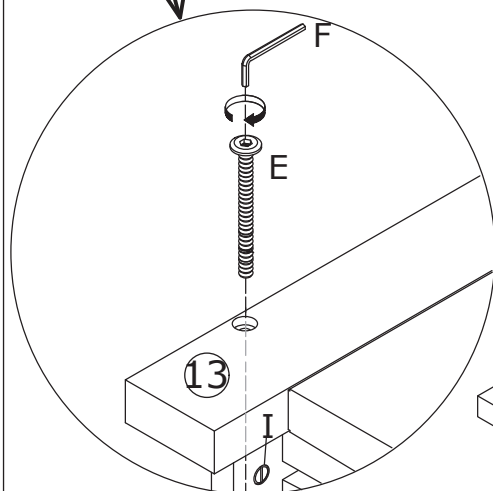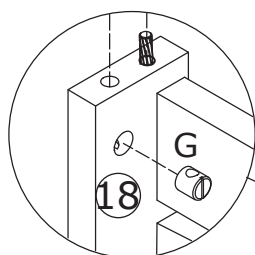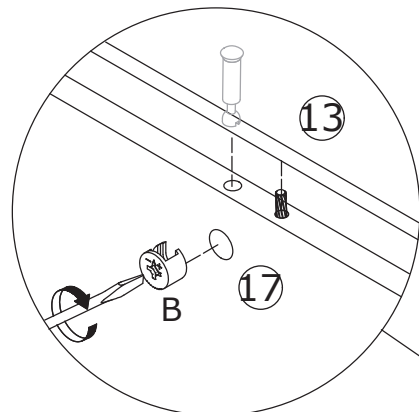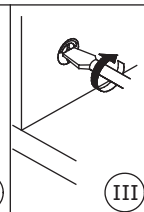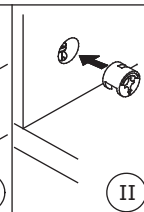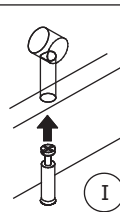




# 16

<p>Hx6</p>  <p>Ø20mm</p>	<p>Kx4</p>  <p>Ø15mm</p>	
---	---	---

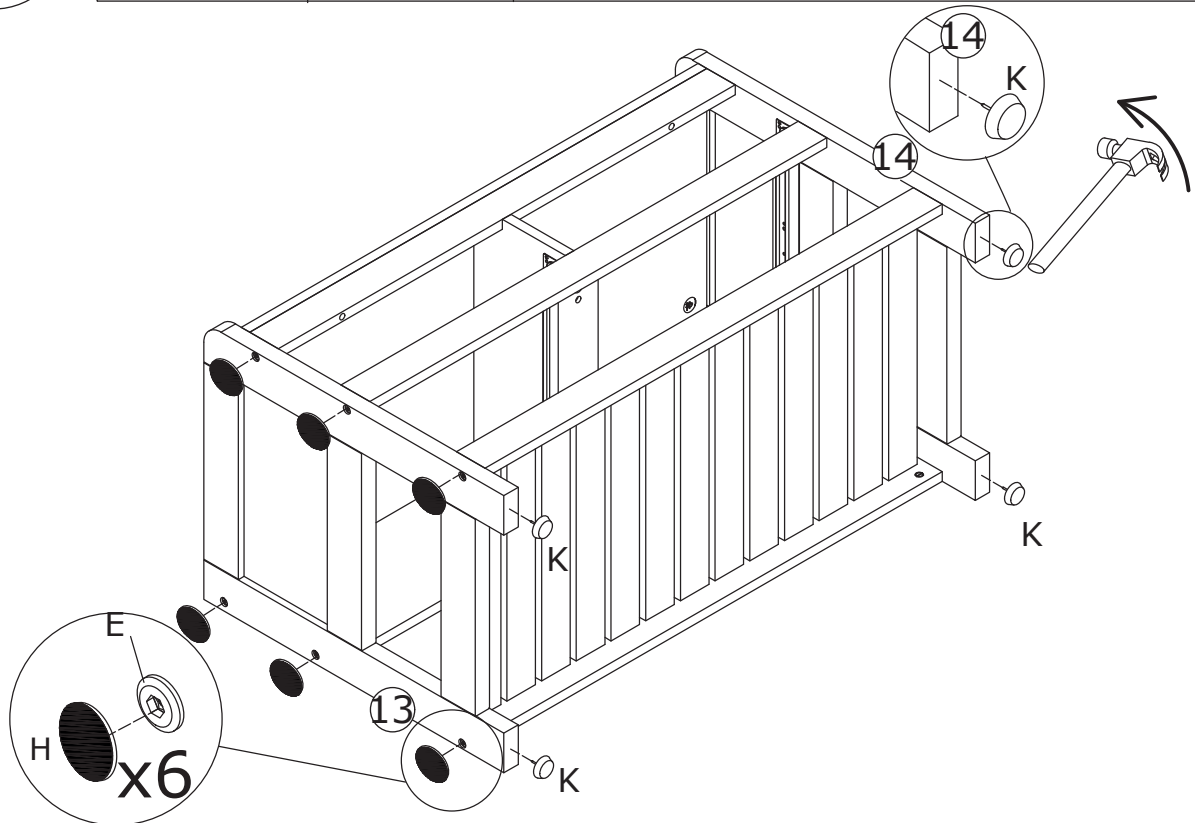

# 17





<p>Ax4</p>  <p>Ø6x35mm</p>	<p>Cx8</p>  <p>Ø6x30mm</p>	
---	---	---

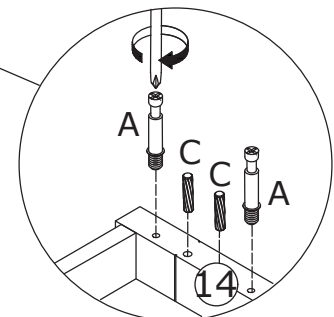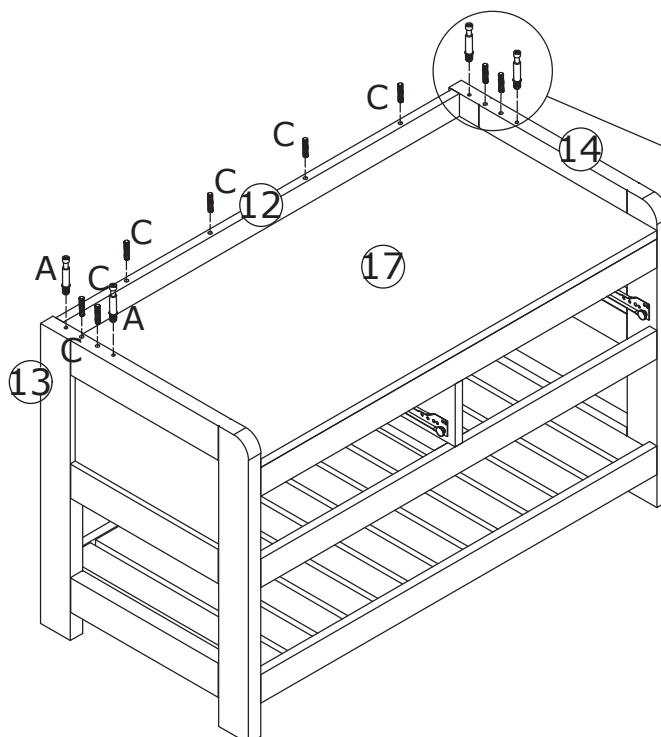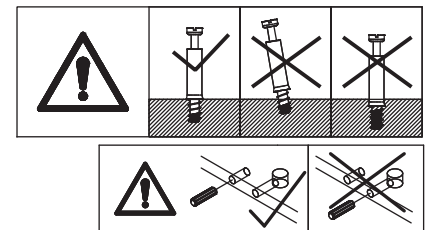

# 18




Cx2  
Ø6x30mm

Dx1  
Ø4x40mm

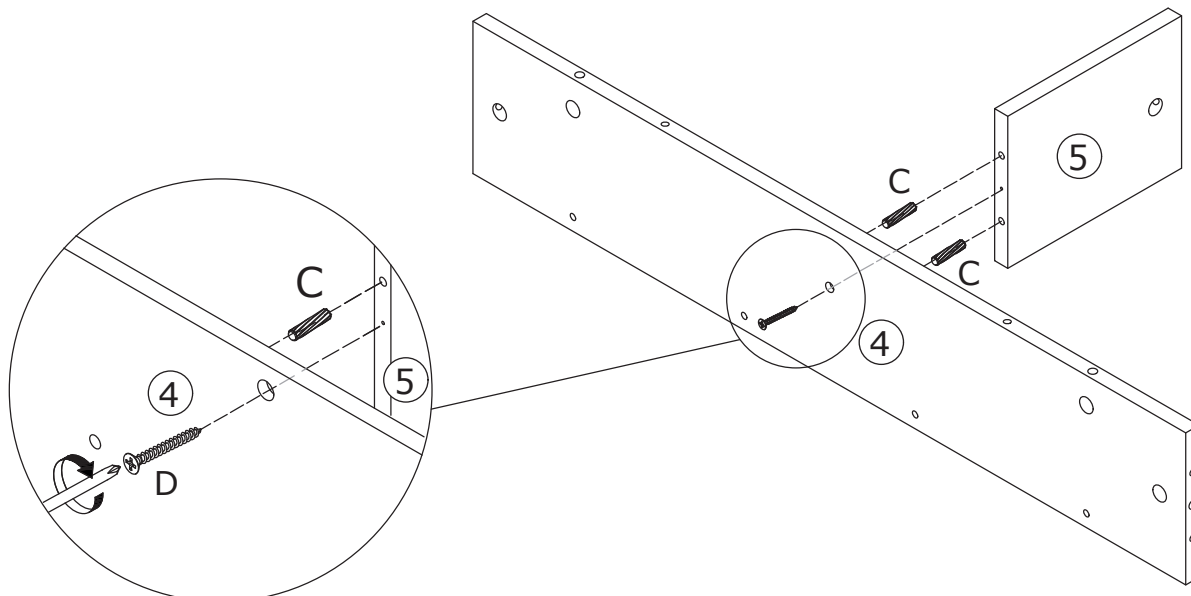




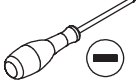


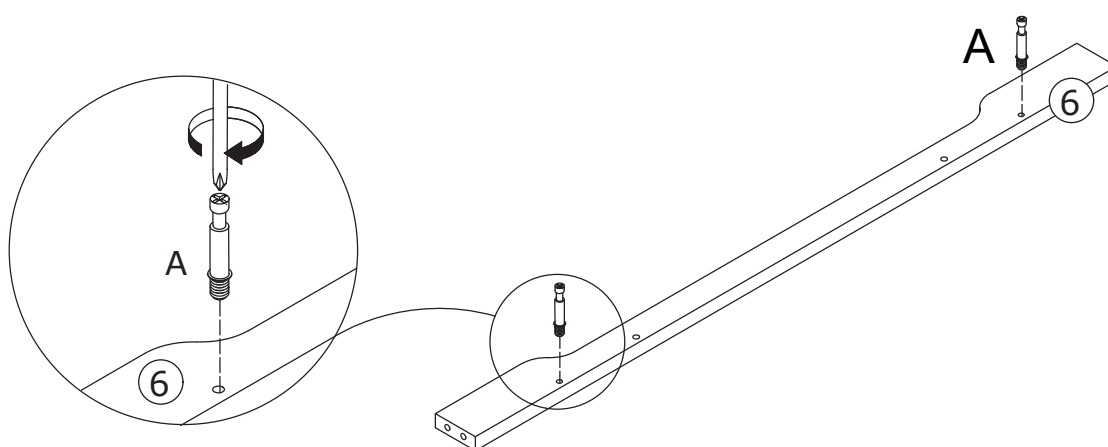

# 19

Ax2  
Ø6x35mm



# 20




<p>Bx2</p>  <p>Ø15x10mm</p>	<p>Cx2</p>  <p>Ø6x30mm</p>	<p>Lx4</p> 	<p>Mx8</p> 	 
--	---	--	---	---

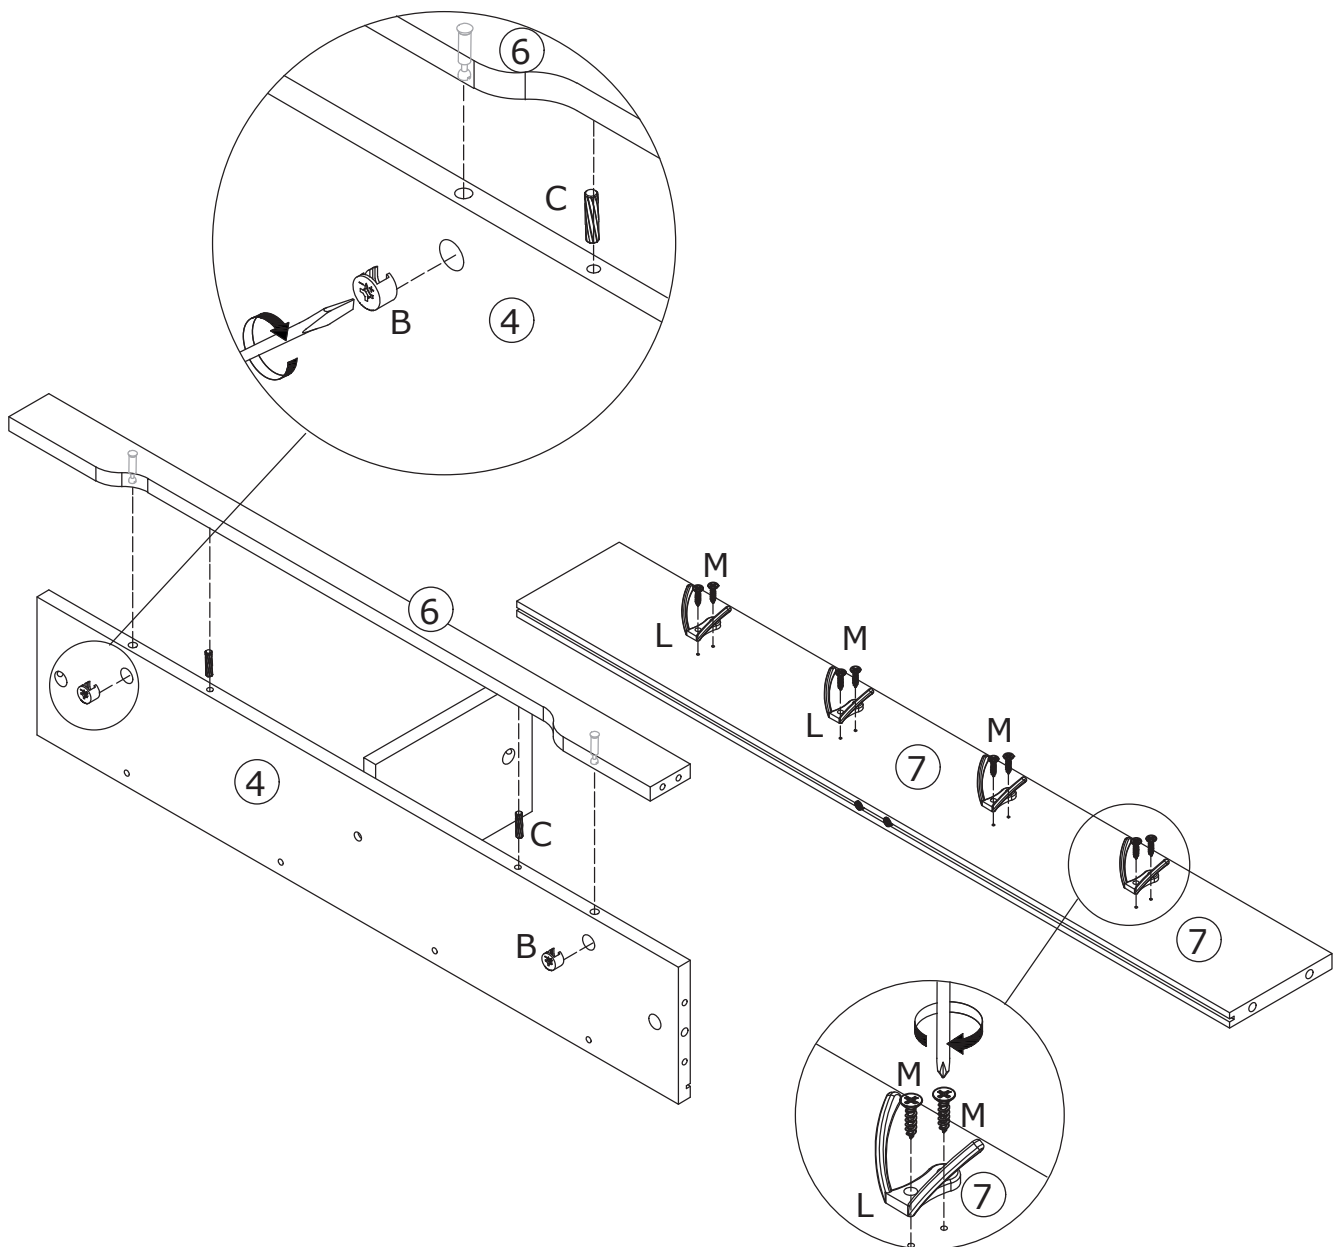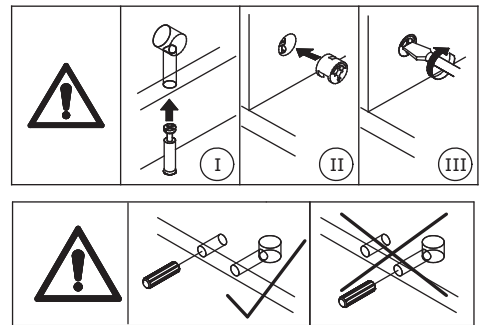

# 21

Cx4




Ø6x30mm

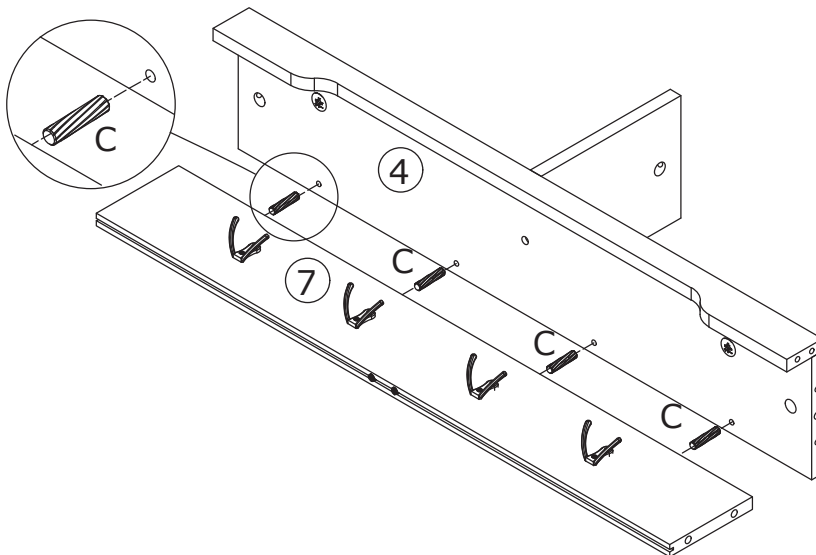

# 22

Cx4

Ø6x30mm

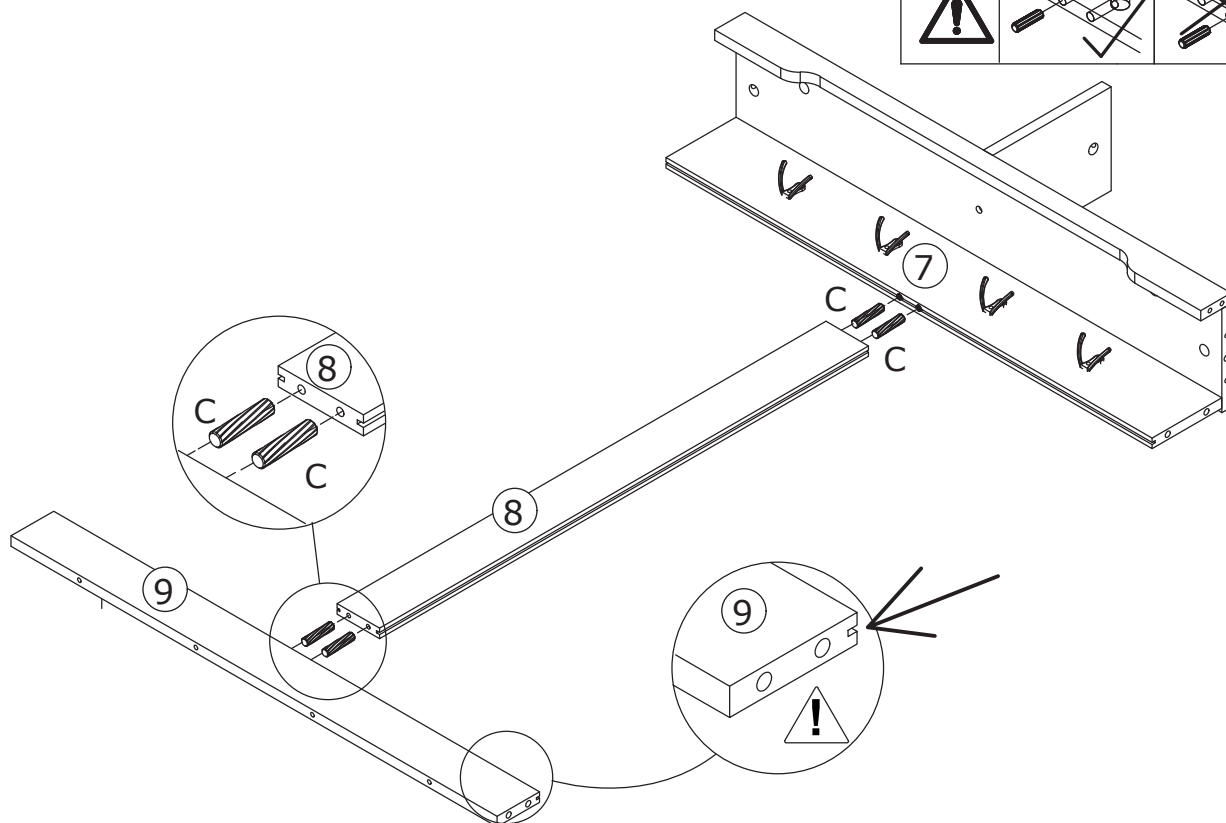




# 23

Cx4



Ø6x30mm


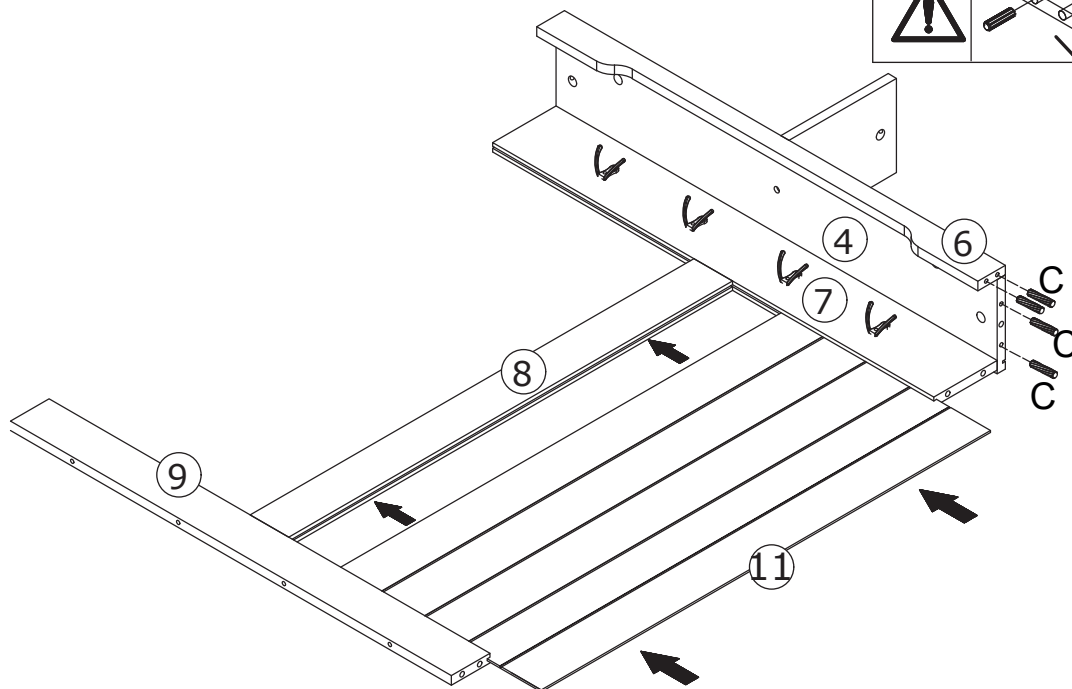




# 24

Ax5



Ø6x35mm

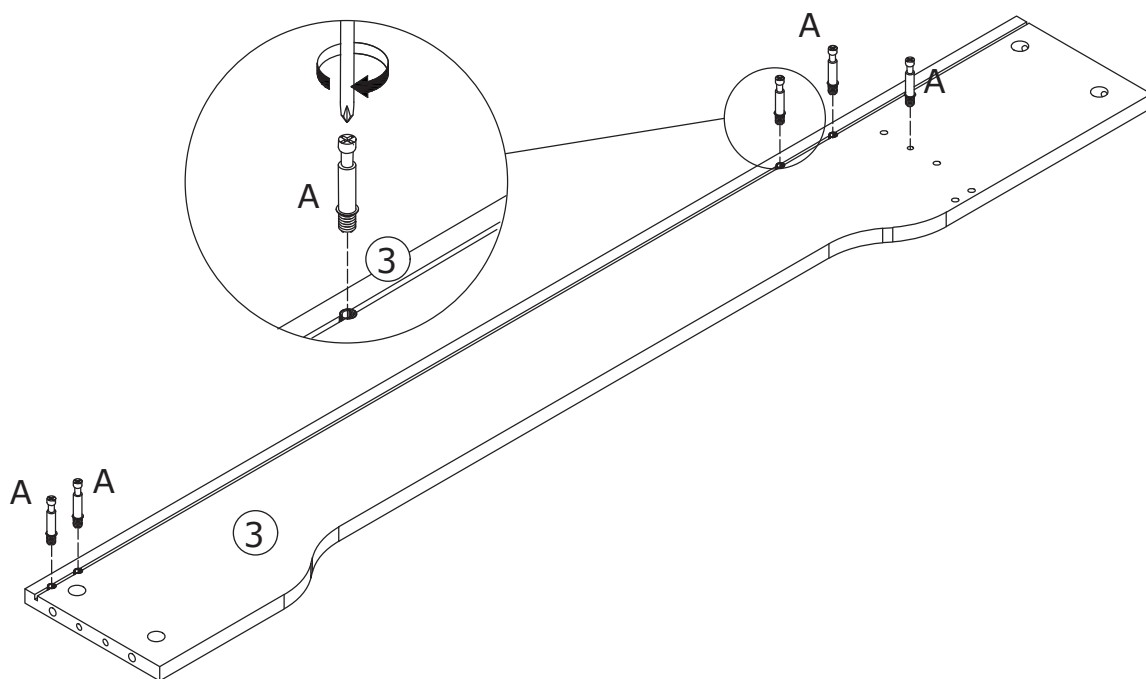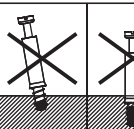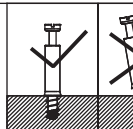

# 25

Bx5









Ø15x10mm

Cx4






Ø6x30mm

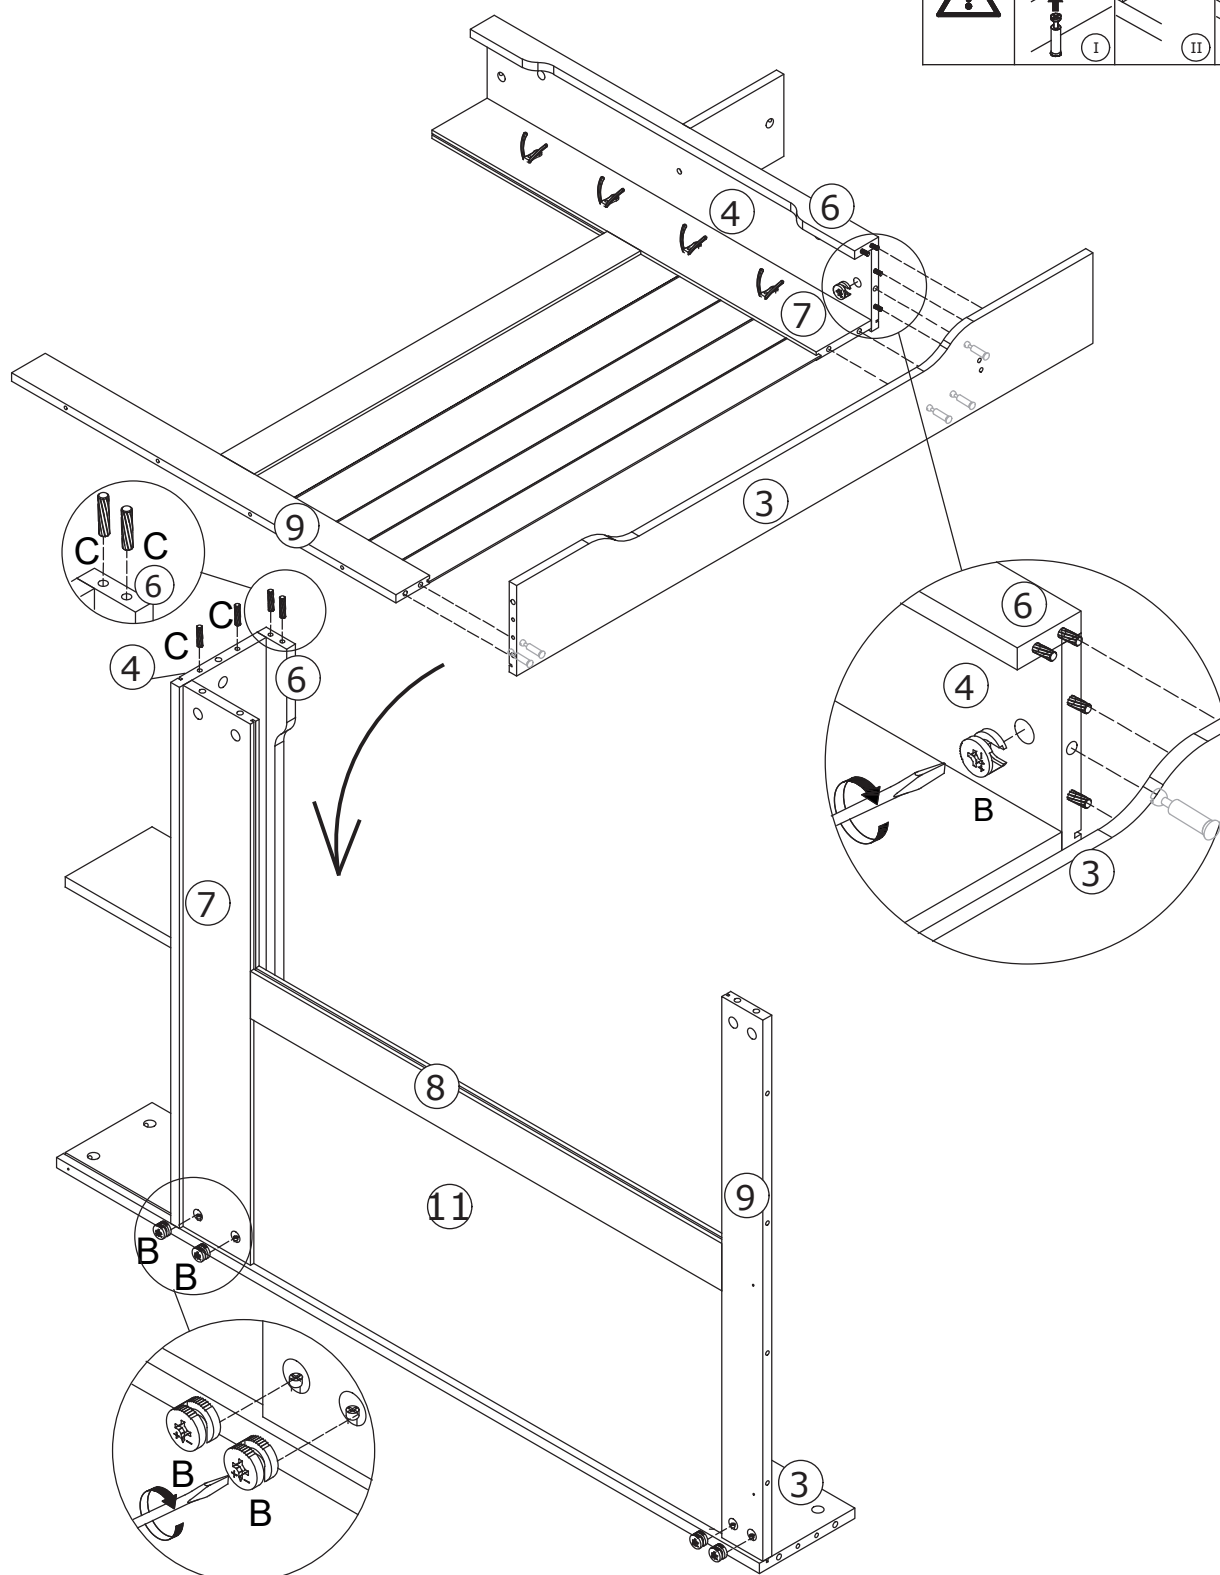

# 26

Ax5  
Ø6x35mm

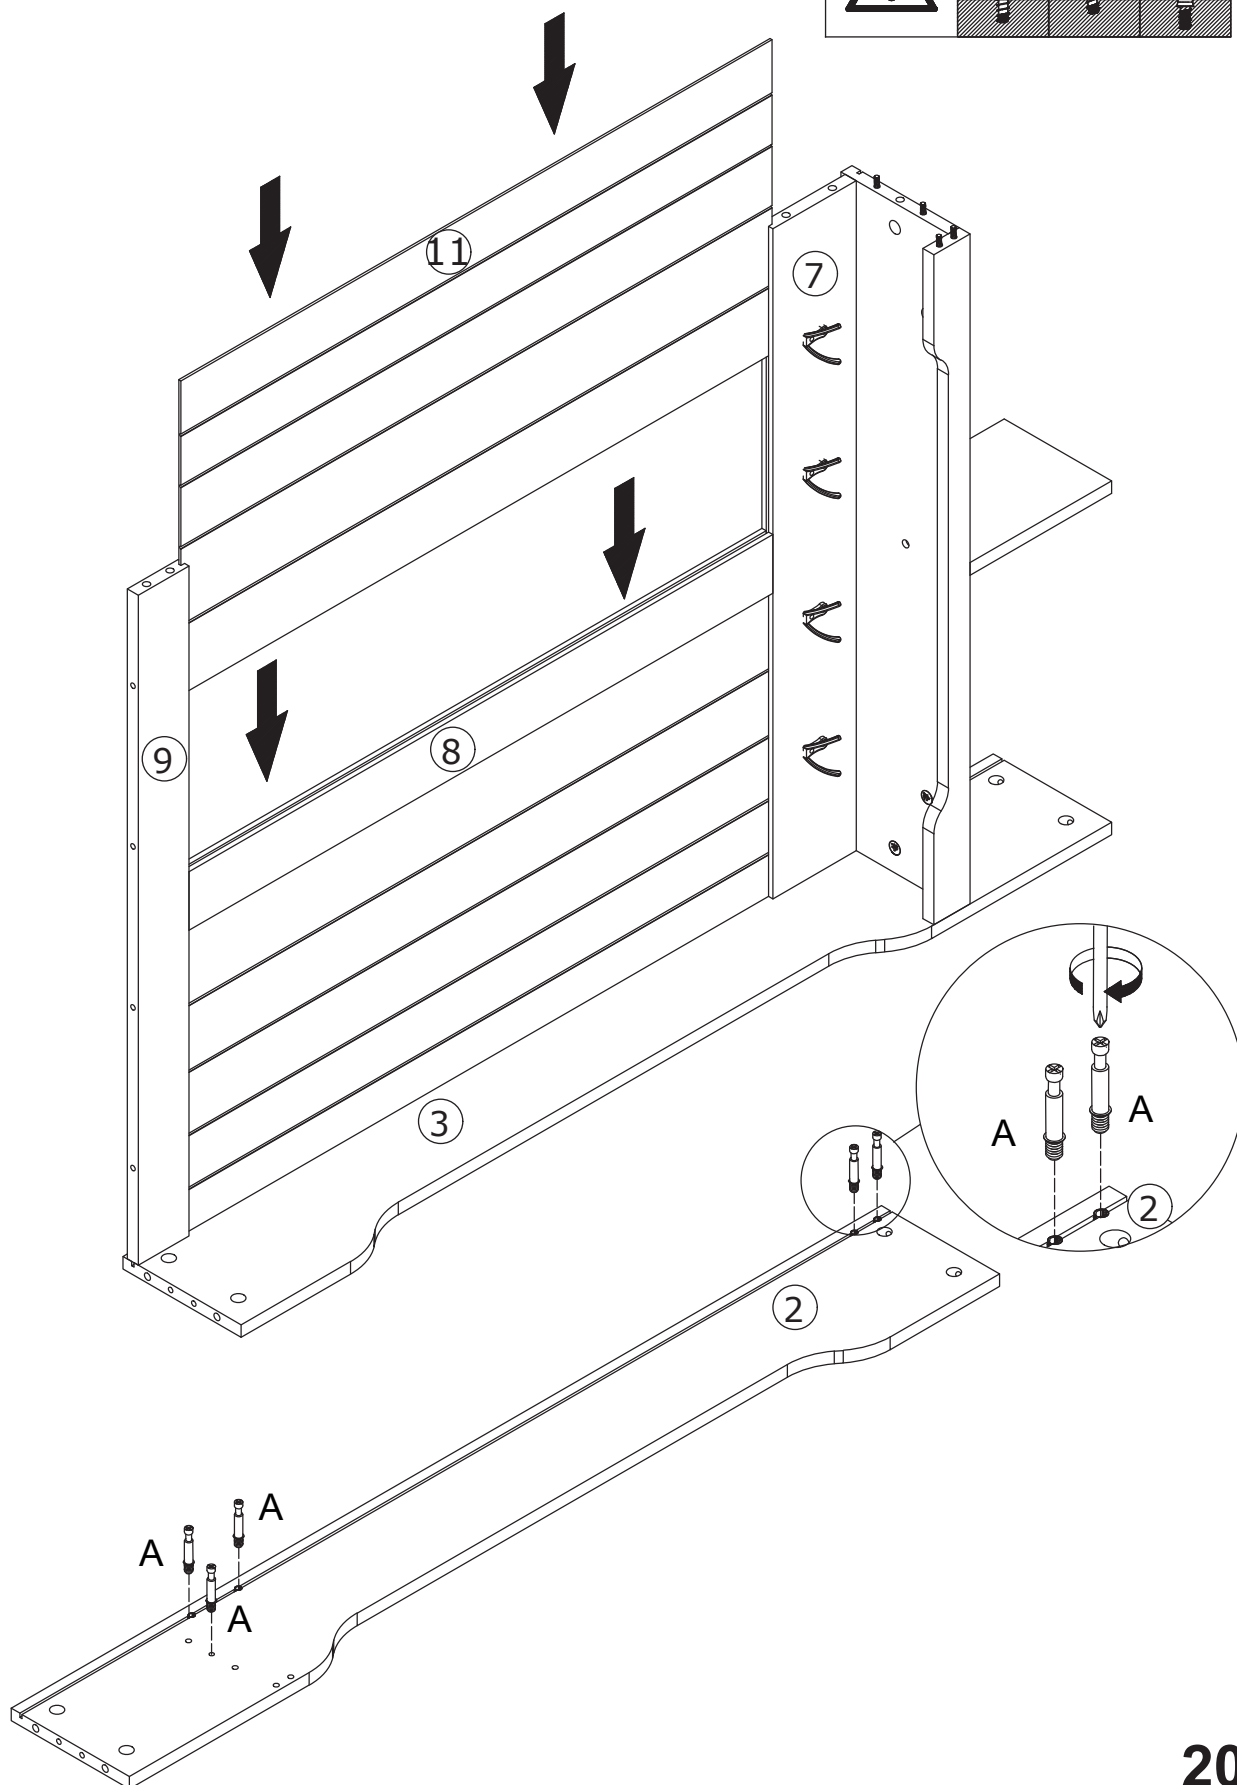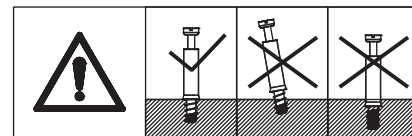





# 27






Bx5



Ø15x10mm

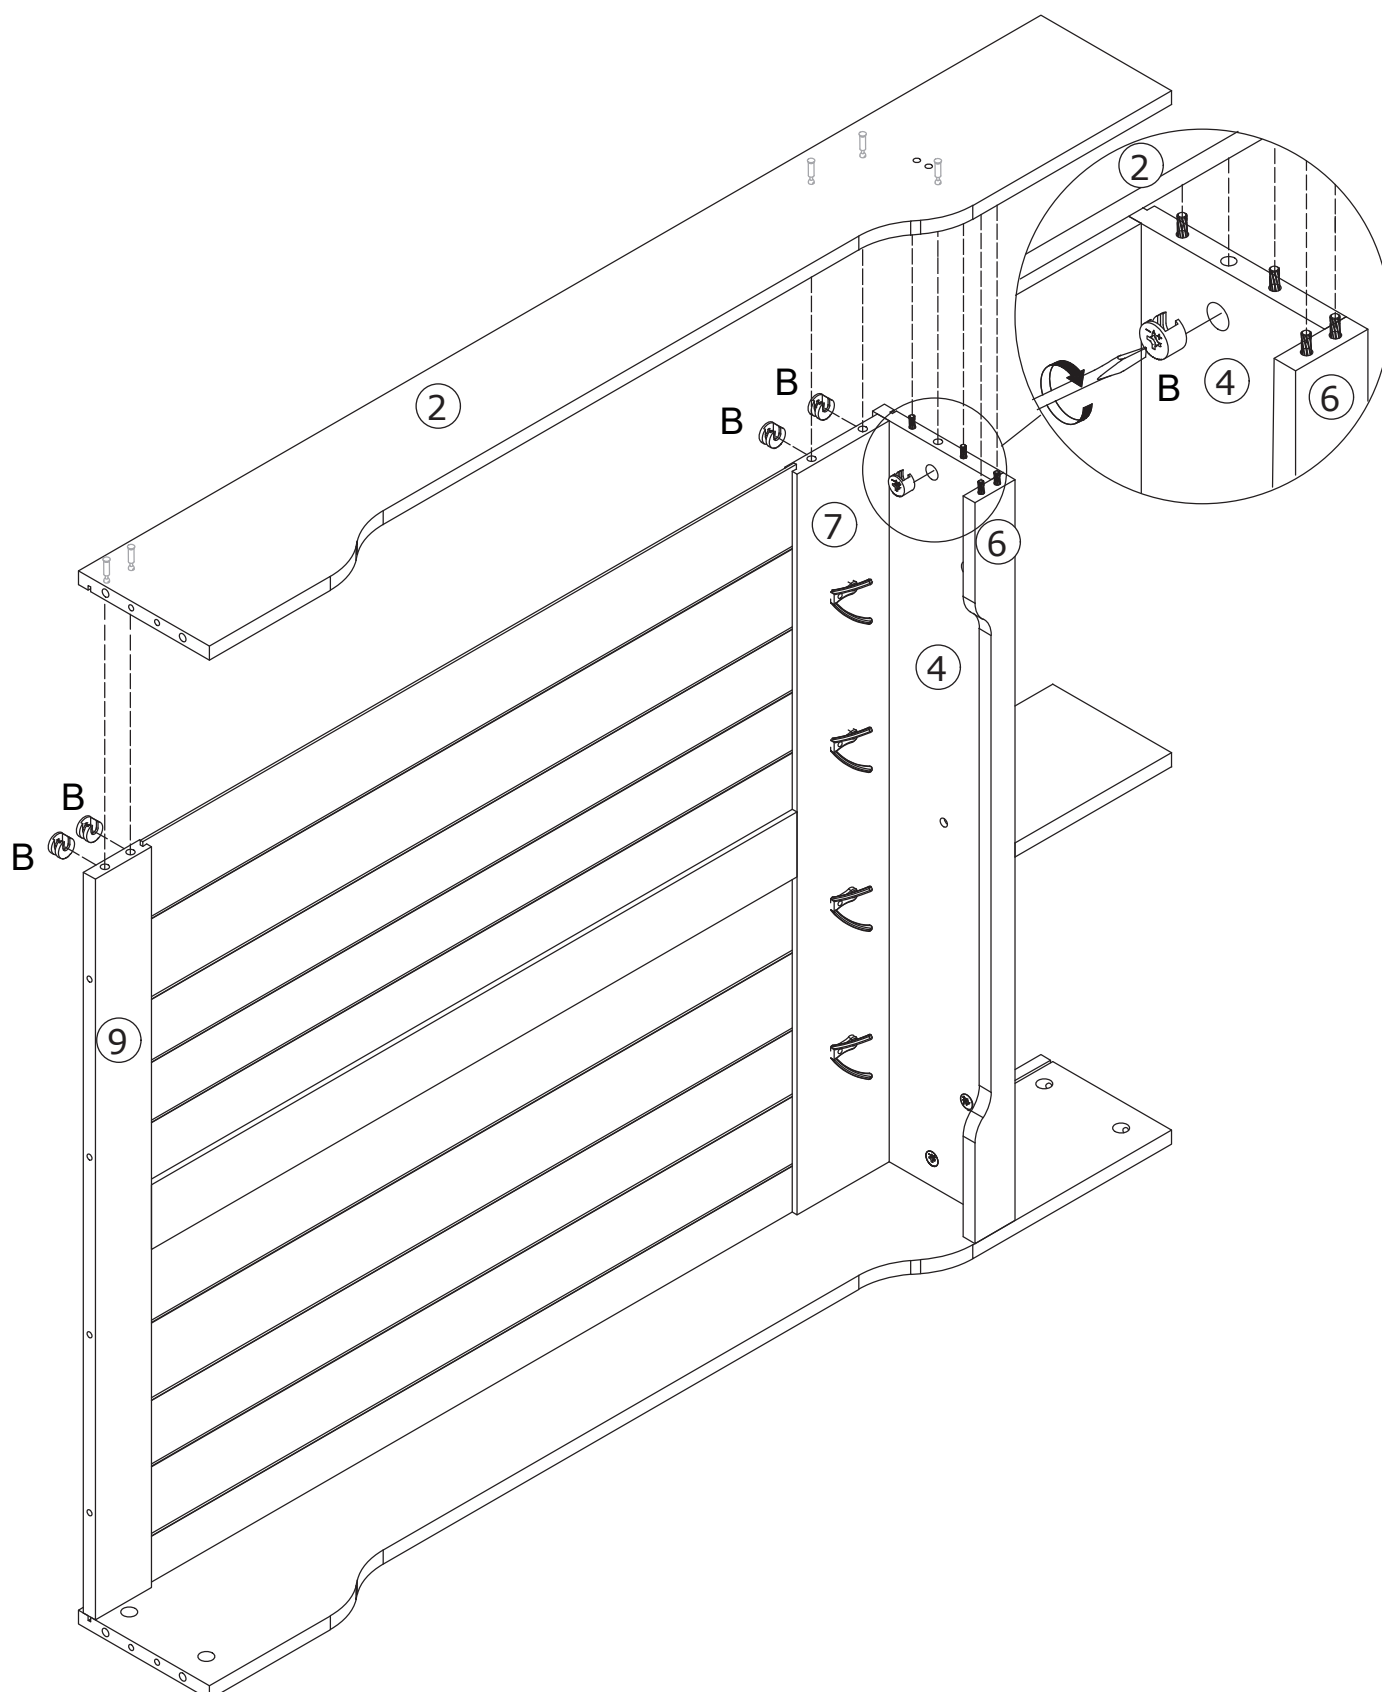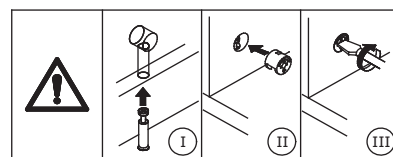

28

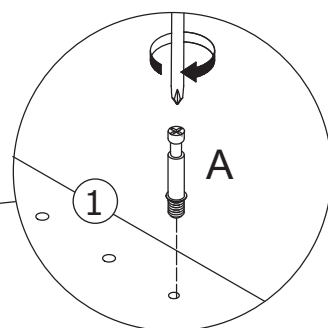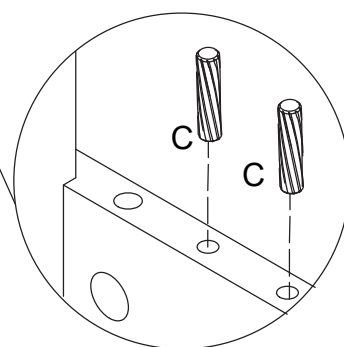
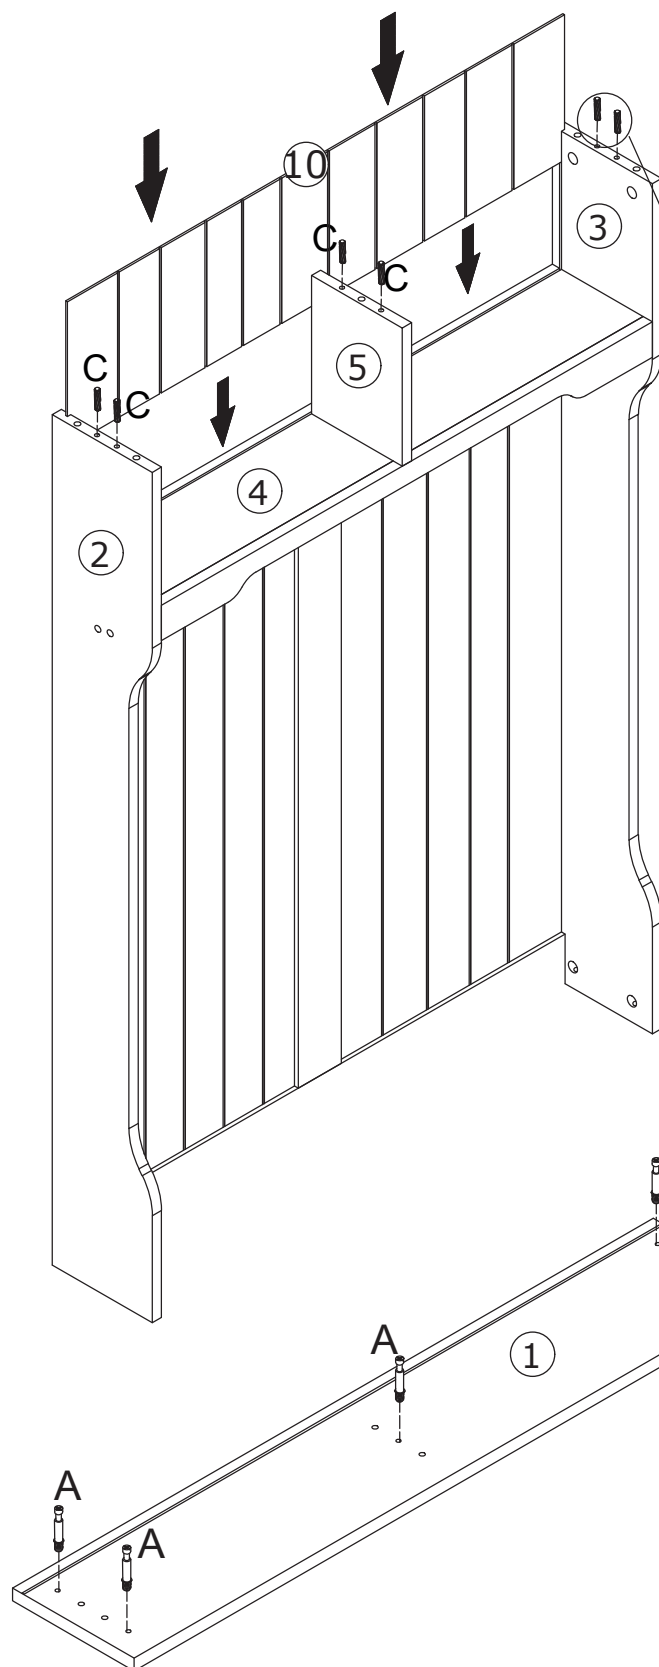
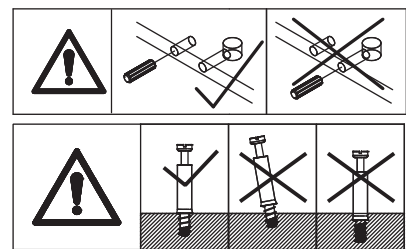
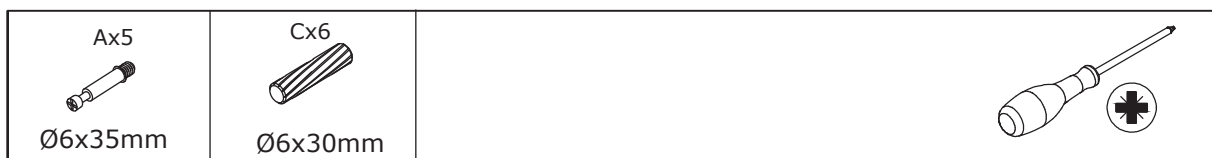


29










Ø15x10mm

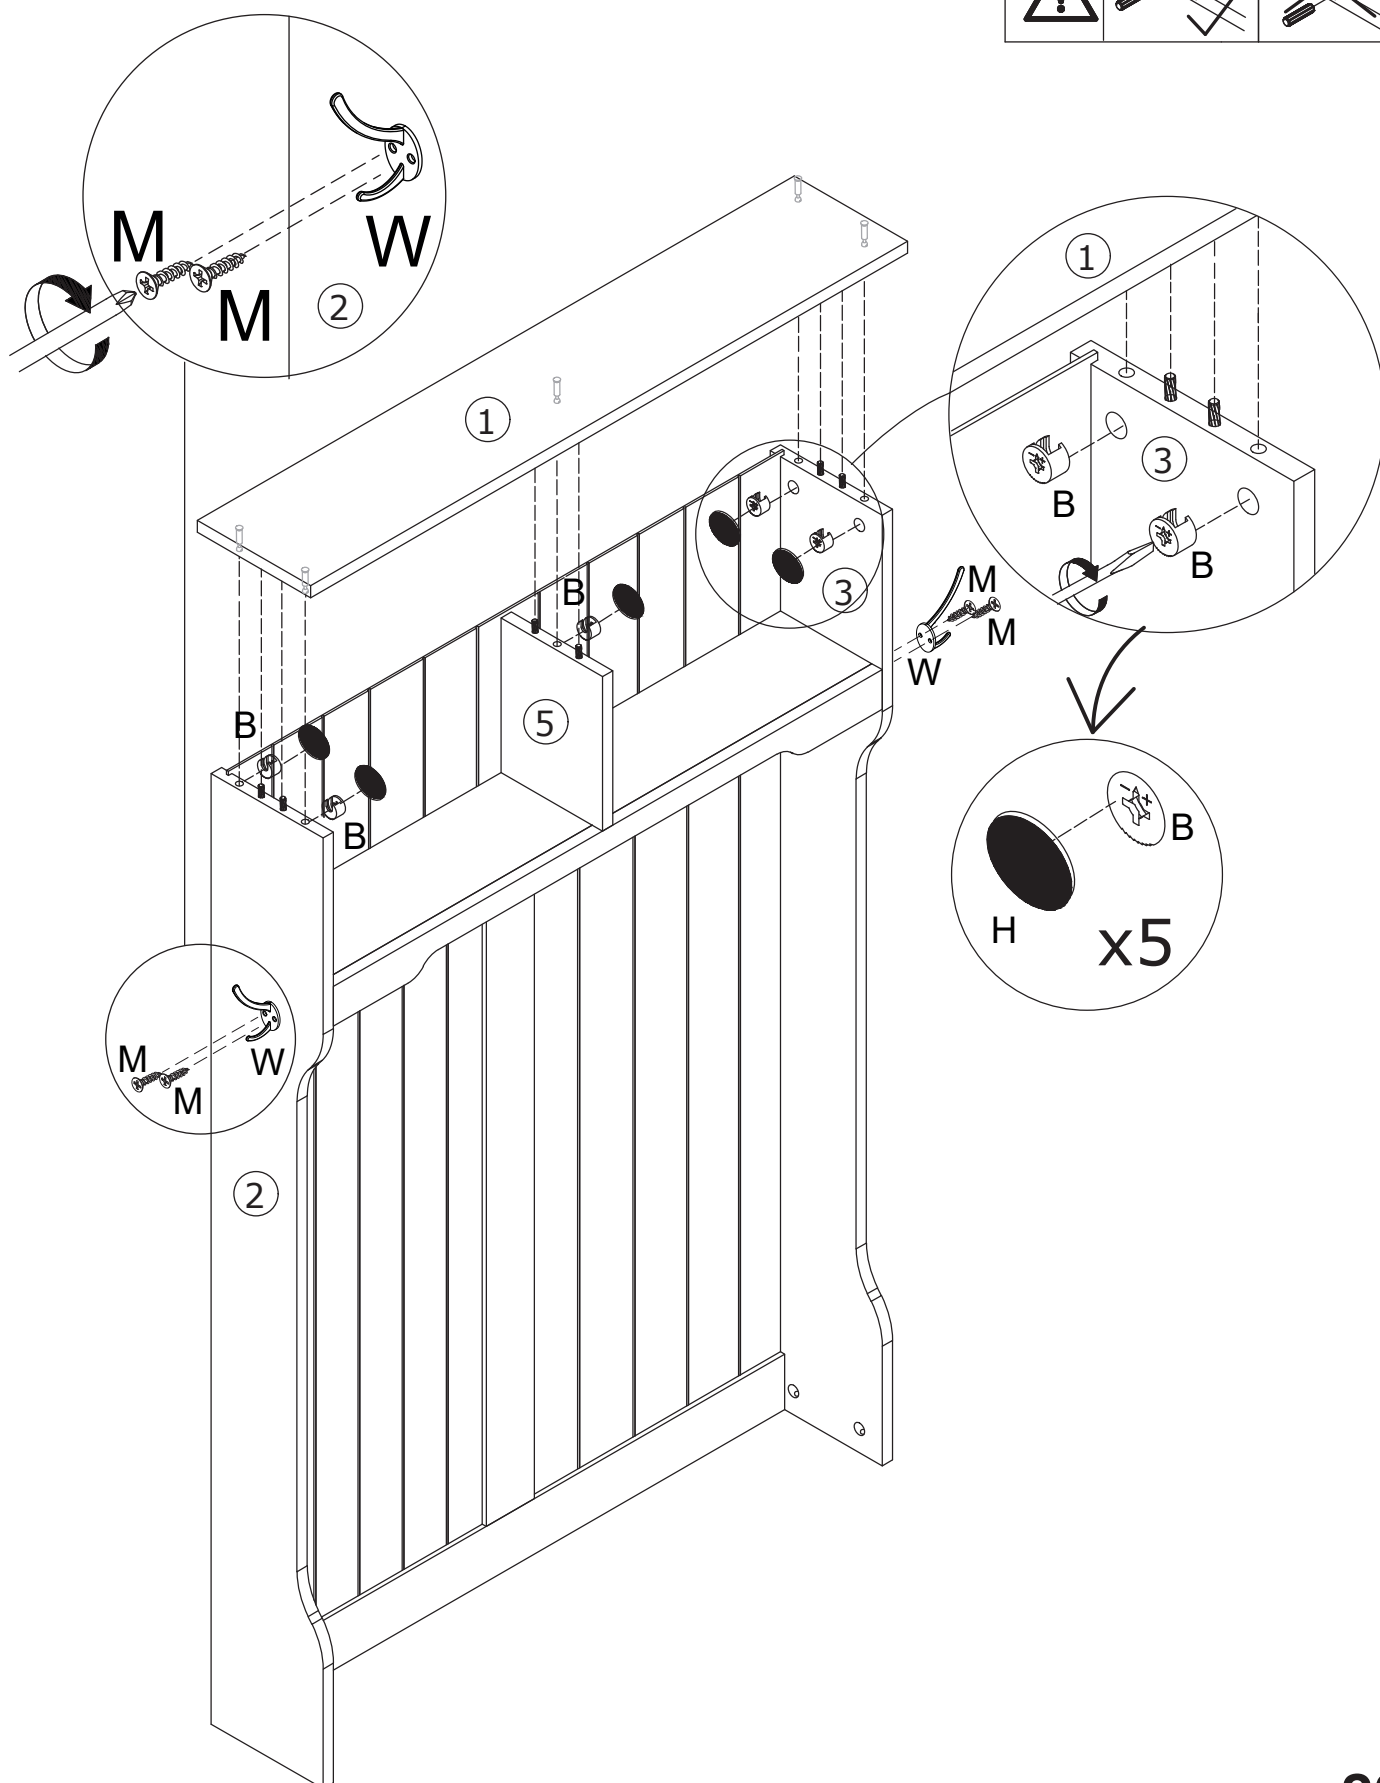Ø20mm







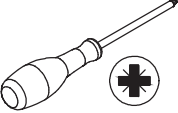


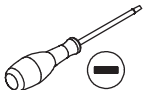
# 30
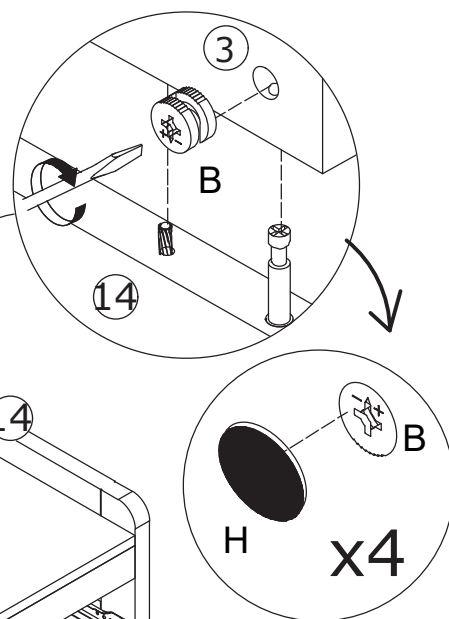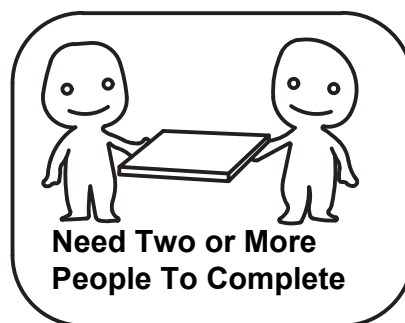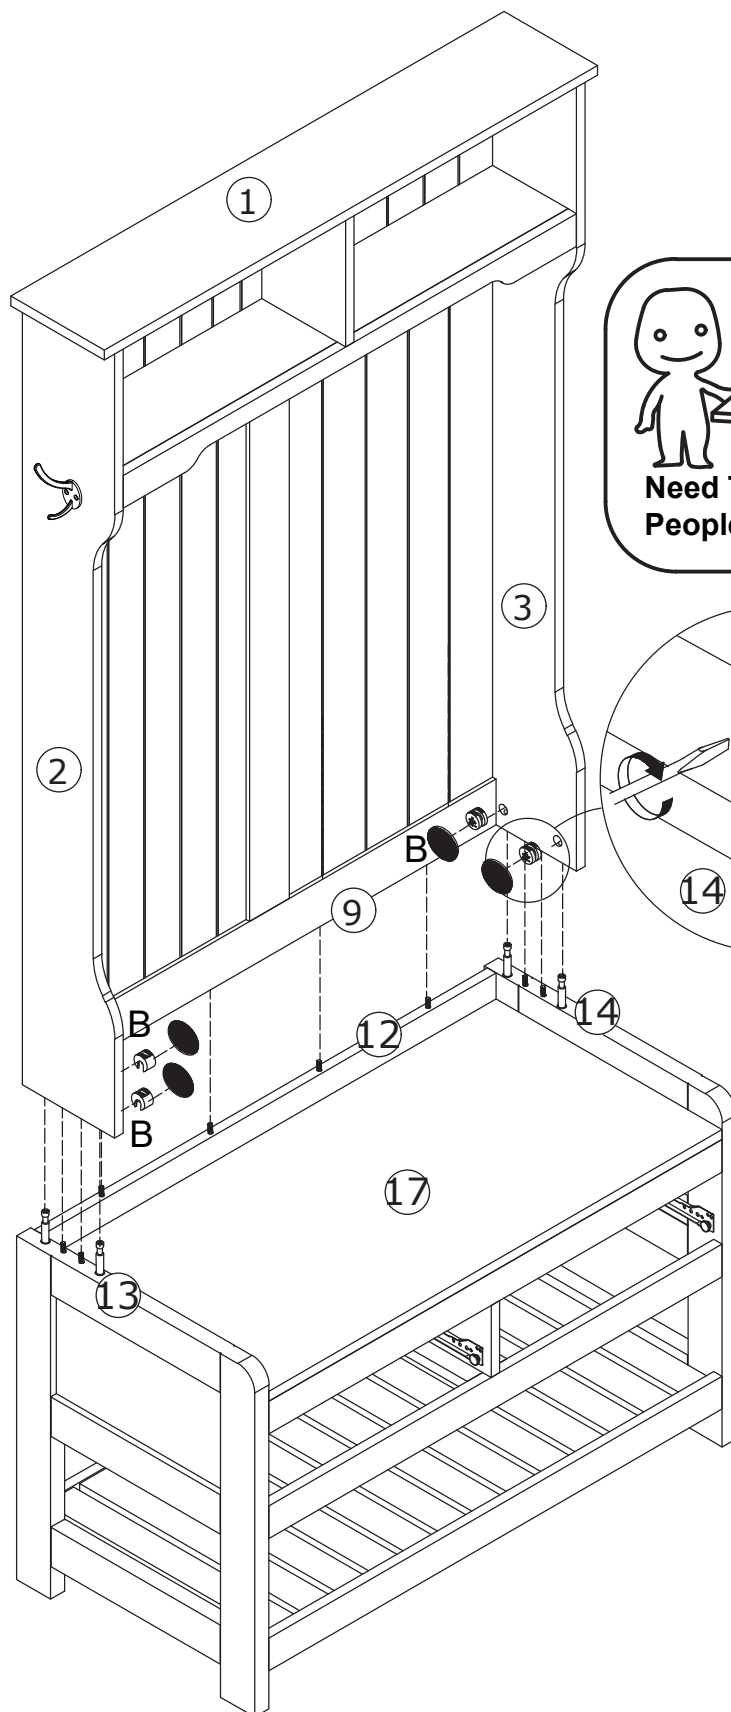
<p>Bx4</p>  <p>Ø15x10mm</p>	<p>Hx4</p>  <p>Ø20mm</p>	
--	---	---







# 31

Nx28 	Ox28  Ø3x16mm	Px3 	Qx8  Ø4x14mm	Rx2 	Sx2 	
---	--	--	---	--	--	---

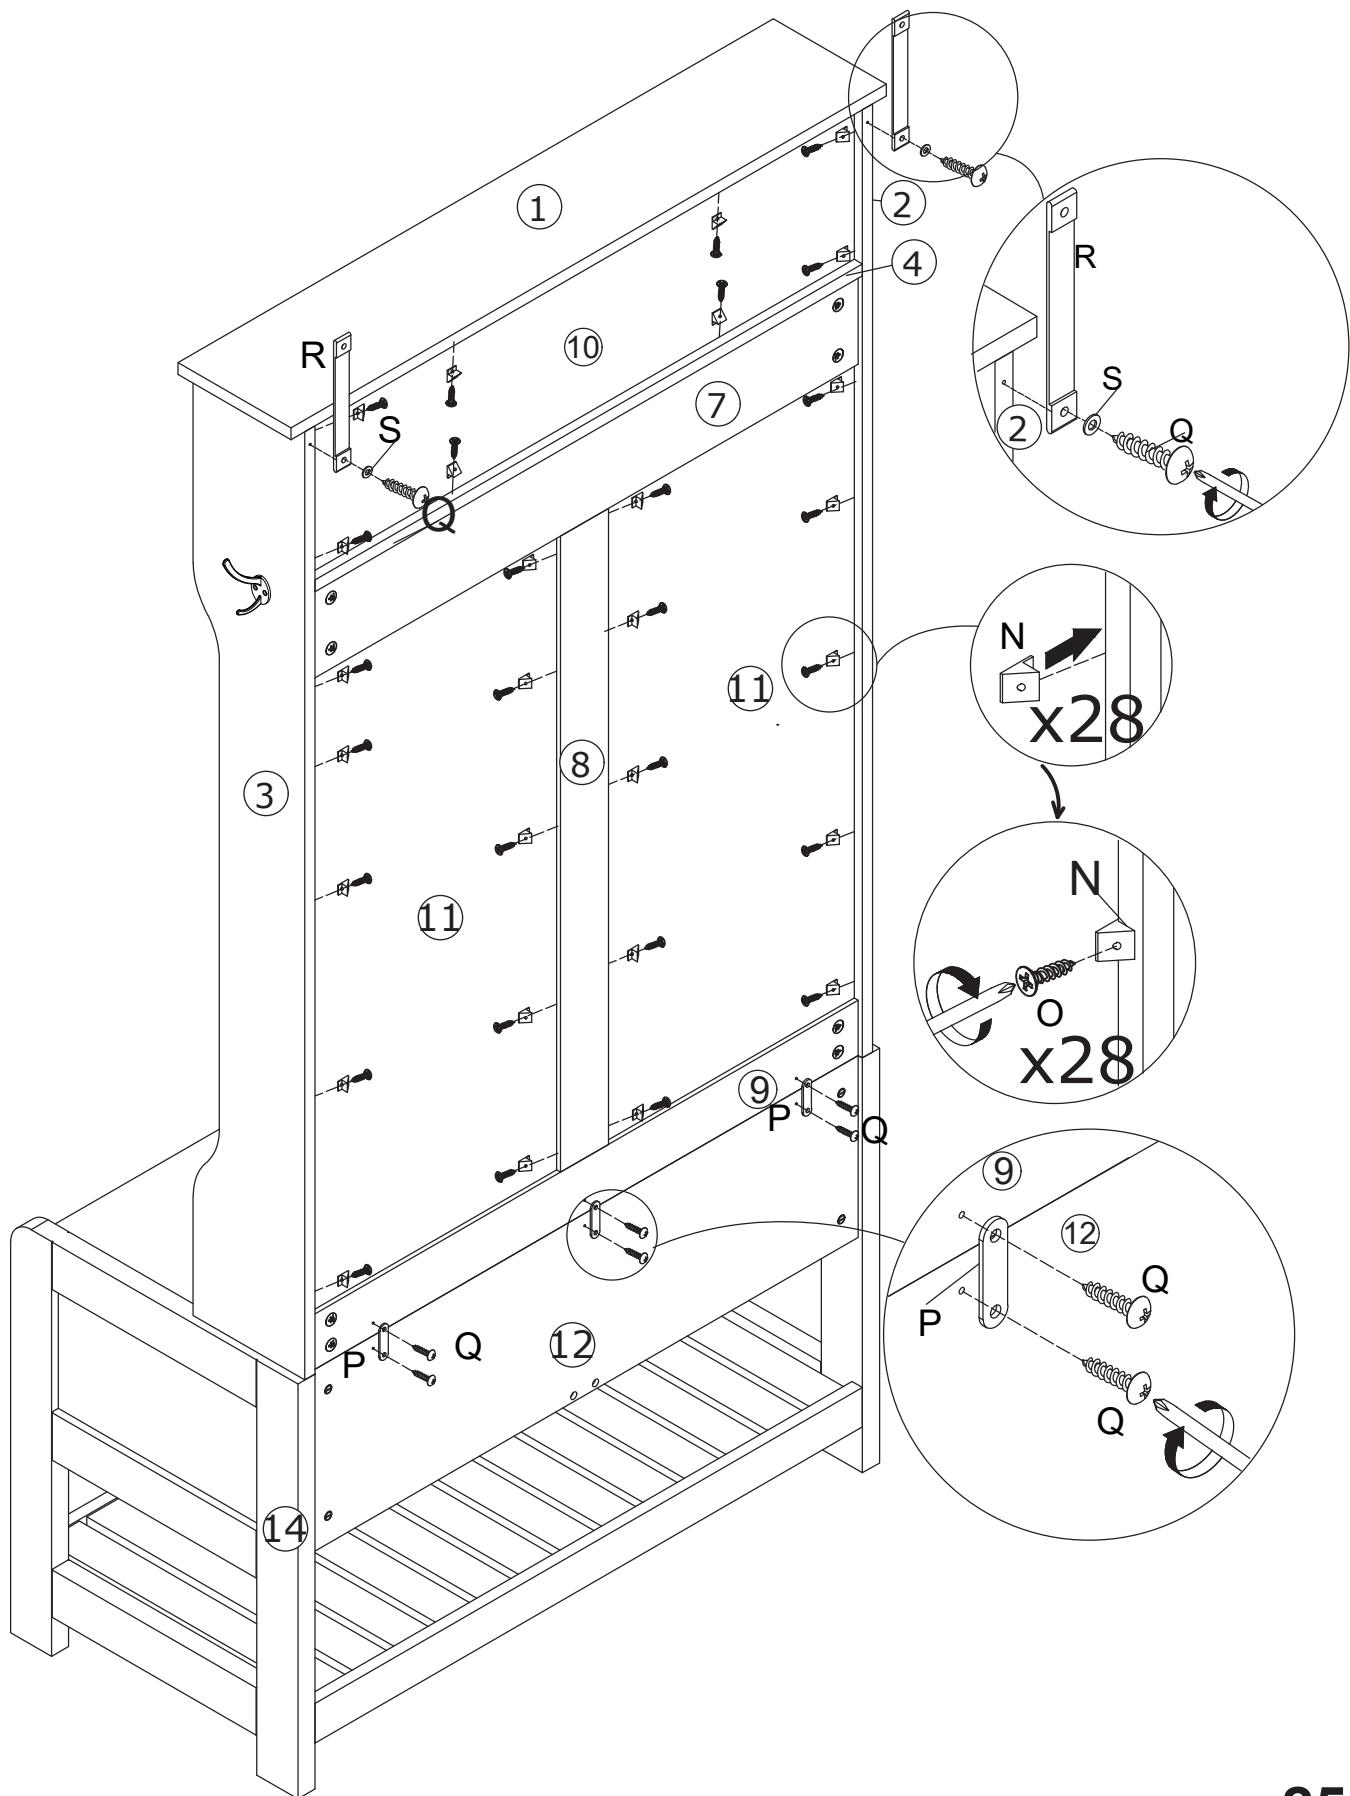


# 32

Ax8  
  
 Ø6x35mm

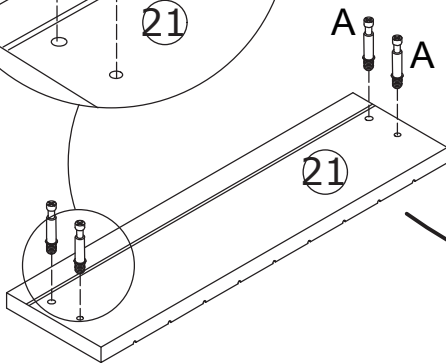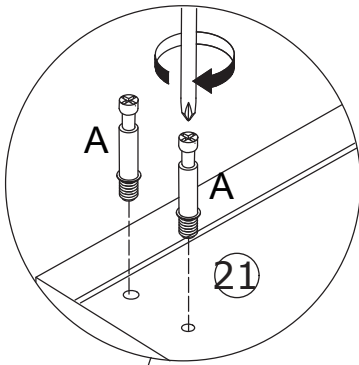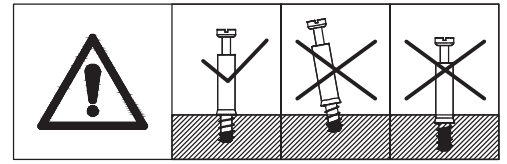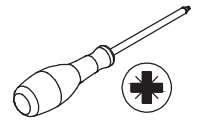


x2




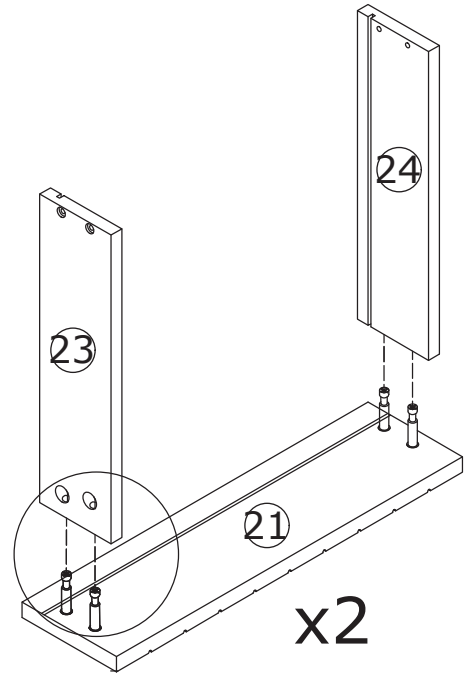


x2


# 33

Dx8  
  
 Ø4x35mm

Bx8  
  
 Ø15x10mm

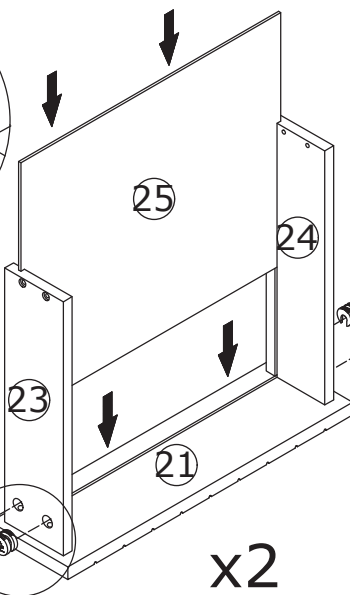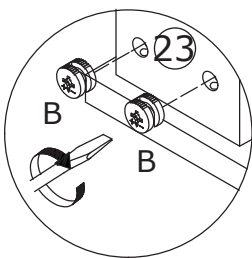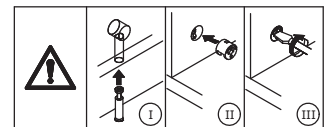

x2

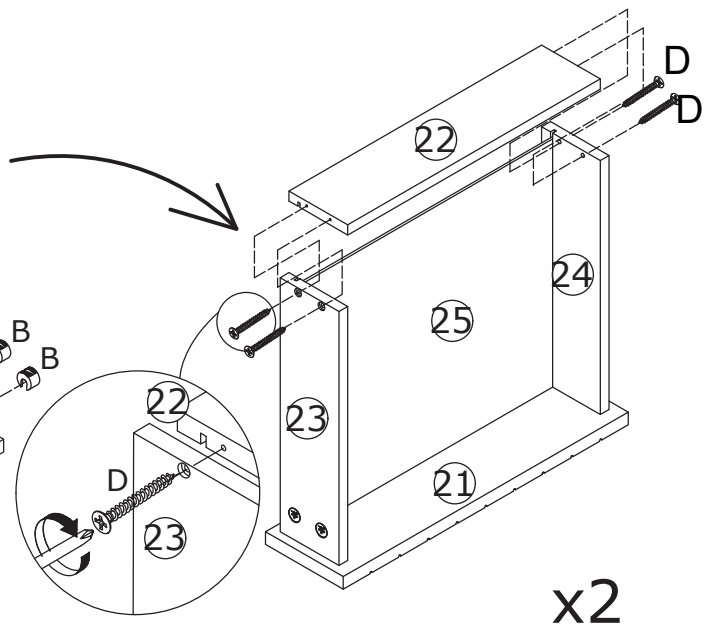

x2



26

# 34

Ux2



Vx4

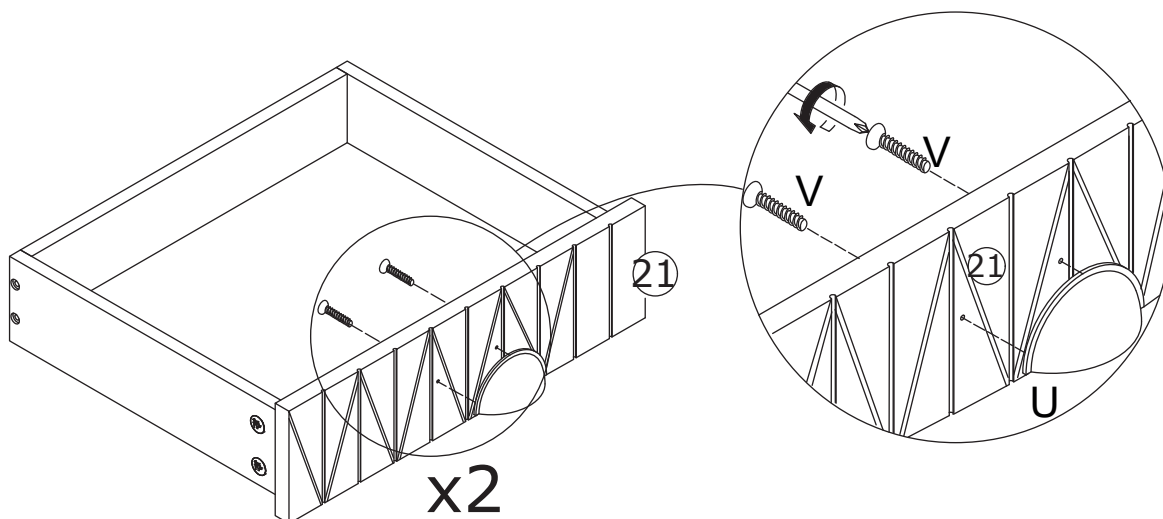

# 35

Ix12



Ø3.5x12mm

DLx2






L300mm

DRx2



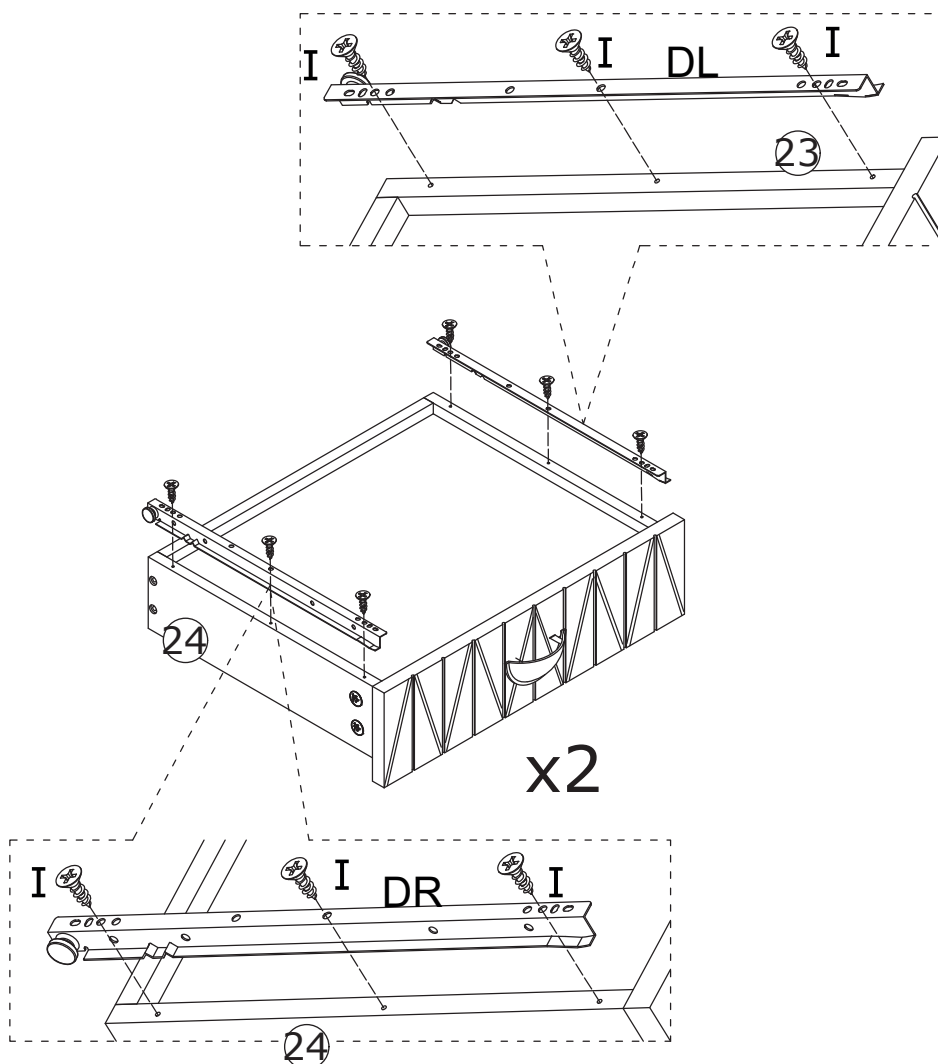



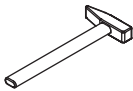
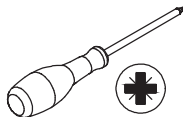
L300mm

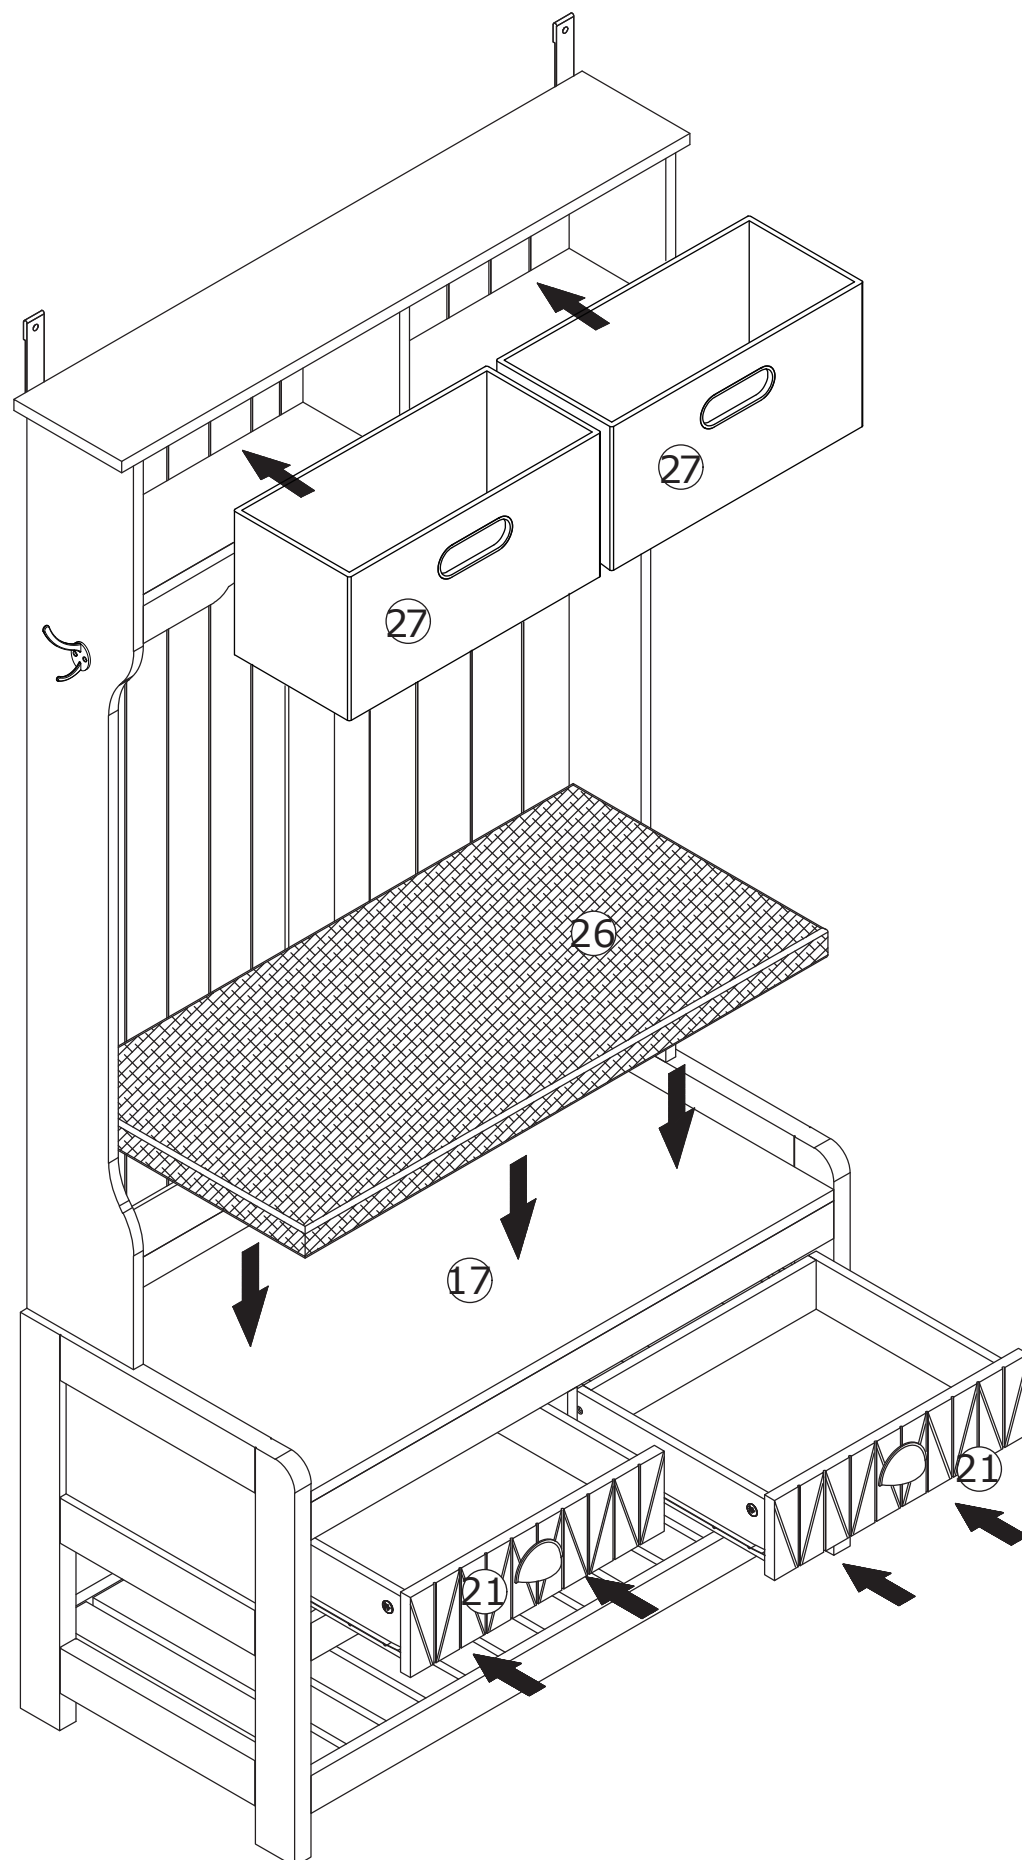








# 37
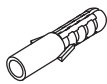
<p>Jx2</p>  <p>Ø4x35mm</p>	<p>Sx2</p> 	<p>Tx2</p>  <p>Ø6x30mm</p>			
---	--	---	--	---	---

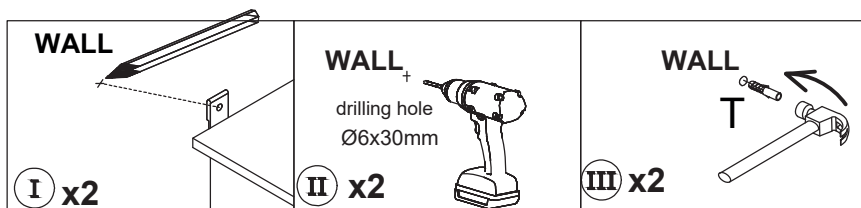

**WALL**

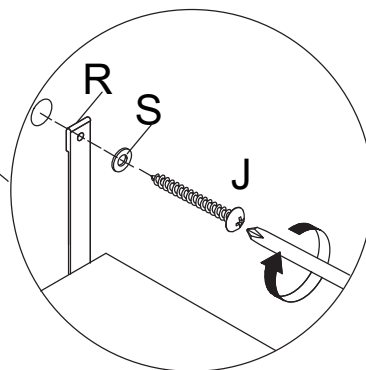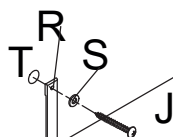

**WALL**

