

Bathroom Vanity with Carrara Natural Marble Top

PLEASE READ THIS INSTALLATION
GUIDE CAREFULLY BEFORE INSTALLING
THIS PRODUCT.

Easy to install with all holes / pilot holes
pre-drilled.



This product contains small items that could be a choking hazard if swallowed. Please keep items away from young children.



Wear Safety Goggles
Refer to the manufacturer's
safety instructions when
operating any tools.

Pack List | Thank you for purchasing our product. In the package, you will find items as listed below.



0

Vanity Door Panel
x2



1

Vanity Bottom Panel
x1



2

Vanity Left Side Panel
x1



3

Vanity Right Side Panel
x1



4

Vanity Top Front Rail
x1



5

Vanity Top Back Rail
x1



6

Vanity Bottom Back Rail
x1



Door Pull
with Screws
x2



7

Shelf Side Frame
with Adjuster
x2



8

Shelf Top/Bottom Rail
x4




9

Shelf Middle Rail
x2




Cam&Cam Dowel
x34

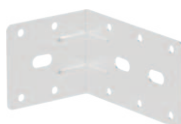

Vanity Corner Bracket
x2



Concealed Hinge
x4

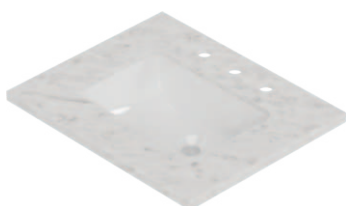

Marble Vanity Top
x1



Shelf Board
x1



Wall-Mount Screw
with Anchor
x2



Bracket & Concealed Hinge Screw
x44



Shelf Fixing Screw
x4



Shelf Rail
Fastener
x24



Allen Key
x1

Assemble the Cabinet


1.1 Assemble the Cabinet



Use the provided Cam Dowels & Cams to connect the Panels and Rails together to build up the cabinet frame as shown.




- Screw all the Cam Dowels into the pre-drilled holes on each Panel (1, 2 and 3) as shown.
- Attach Rail 6 to Bottom Panel 1.
- Connect all the panels and rails together.
- Insert Cams into the pre-drilled holes on each rail and turn counterclockwise to tighten.

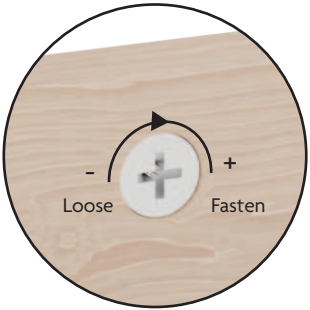

1.2 Attach the Corner Brackets



Attach the corner brackets to connect the top back rail to the side panels with the provided screws.

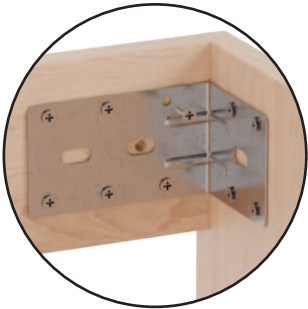


1.3 Attach the Door Panels to Cabinet with Concealed Hinges



*Attach the concealed hinges to the door panels first.
Attach the door panels with concealed hinges to cabinet.*



Adjust the hinges with a screwdriver to ensure proper alignment.

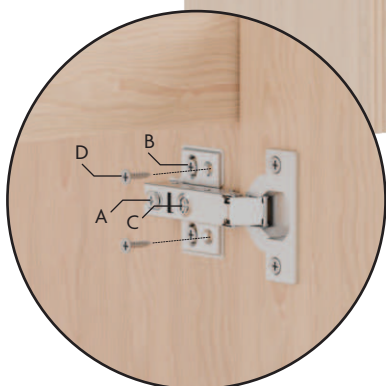

A: DEPTH ADJUSTMENT

Loosen Screw B to move door inward or outward, then retighten.

B: HEIGHT ADJUSTMENT

Loosen Screw A to move the door up or down, then retighten.

C: SIDE ADJUSTMENT

Turn Screw C clockwise or counterclockwise to move the door sideways or level it.

After the Height/Depth/Side Adjustment, tighten the Screws D.

1.4 Assemble the Door Pull



Attach the door pull to the door with matching screws.



Comfortable door pull for easy opening.





Assemble the Shelf


2.1 Assemble the Shelf

Connect the side shelf frames with the rails as shown.

Note: Align the screw holes on the rails with those on the shelf frames.

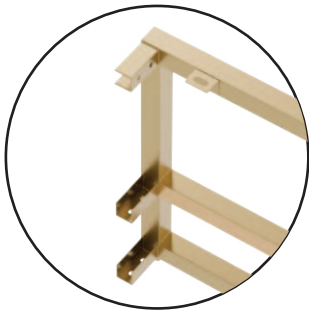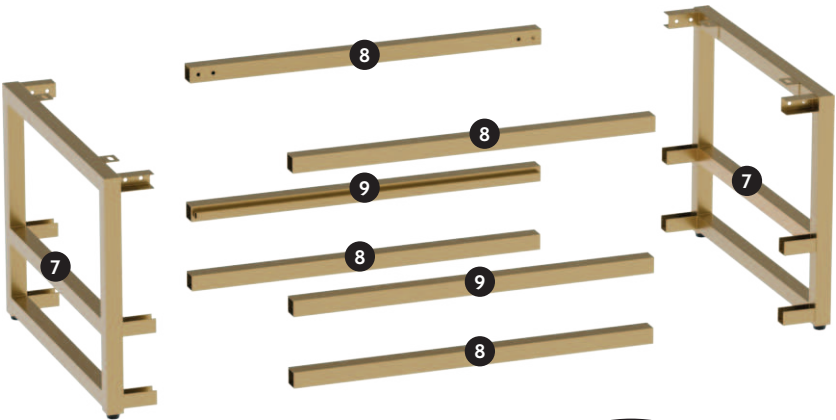

Secure the shelf with the provided screws by using Allen Key.

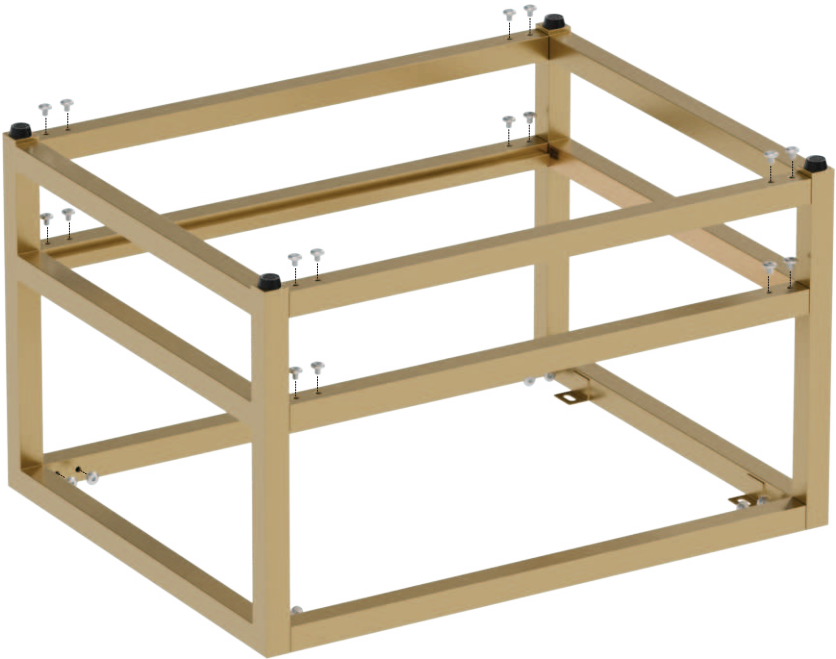

Secure the Cabinet to Wall

3.1 Attach the cabinet to wall



Move the shelf to the desired location and place the cabinet on the shelf. The cabinet should be well aligned to the shelf.

Follow Step 1, Step 2 and Step 3 as listed below.



Mark wall pilot hole locations at the corner brackets when the cabinet is level.

Drill pilot holes at the marked locations.



Step 2



Secure the cabinet to the wall with the provided fasteners.



Step 3



Secure the shelf to the cabinet with the provided screws.



Step 1

Adjust the Base Adjusters at the bottom of the shelf to make the cabinet level.

Secure the Marble Vanity Top to Cabinet



Apply non-acidic silicone to the top of the cabinet.

Place the top onto the cabinet to ensure they are well aligned. Teamwork may be required.



Secure the Vanity to Wall



Apply the non-acidic silicone to the seam between the vanity edge and the wall. Smooth the silicone and allow it to cure before use.



Place the shelf board on the middle rails of the shelf to offer more storage space.

Cleaning & Care

The best method of maintaining the finish is simply to wipe it with a clean, soft cloth. It is important that no abrasive cleaners or wax-based creams are used as this can result in a build-up of deposits/scratches that will detract from the appearance.

Scratches

Avoid contact with hard, sharp objects. If scratches appear on gloss lacquered cabinets, fine marks can be removed using a cutting compound normally used for car refinishing, followed by buffing with a car polish and a clean, soft cloth.

Chemical Damage

Spills of some products such as hair lacquer, after-shave lotion, nail polish and remover, mineral turpentine, white spirit, kerosene, aerosol propellants and insecticides should be removed immediately by cleaning the product with a soft cloth.

Burns

Do not place hot items such as hair straighteners, curling tongs or lit cigarettes on any surface; they can cause discoloration and marks. For minor accidental damage, remove marks using the same method as for scratches.

Discoloration

Hair dye, bleaches, boot polish and similar chemicals will discolor the surface if not removed immediately. Provided the discoloration is not severe, restore the surface as described for scratches.

We're Here to Help

Thank you for choosing our bathroom vanity. We hope you love your purchase, but if something isn't quite right, we're here to make it easy.

If you have any questions about your product, need help with installation, or experience any issues, please don't hesitate to reach out to us via email. Our customer support team is ready to assist you and will respond as quickly as possible.

Hassle-Free Support:

7-Day Returns & Exchanges:

Not satisfied? You may request a return or exchange within 7 days of delivery.

30-Day Free Replacement:

If there's a product-related issue, we'll provide a free replacement within 30 days.

180-Day Limited Warranty:

Your bathroom vanity is backed by a 180-day warranty for added peace of mind.

We are committed to providing a smooth and worry-free shopping experience. Your satisfaction is very important to us, and we'll do our best to resolve any concerns quickly and efficiently.
