


What's in the package.


Handheld Shower Head x 1
Water Regulator x 1



Washer x 1
Bracket x 1

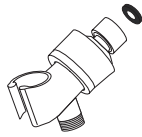

Shower Hose x 1
Washer x 2



Taflon Tape x 1

- ① Remove old showerhead.




- ② Wrap Taflon tape clockwise a few rounds to cover the shower arm threads.



- ③ Ensure a washer is in the ball joint of the bracket.


Screw the bracket to the shower arm clockwise.

After fully tightened, slowly turn the bracket clockwise to the upright position.

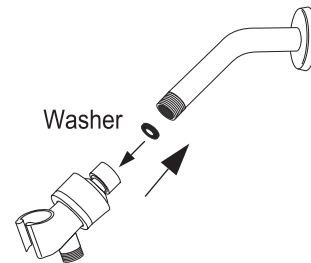


- ④ Ensure a washer is in the hose HEX NUT.

Connect HEX NUT to the BRACKET.

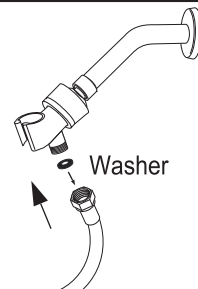

- ⑤ Ensure a washer is in the hose CONICAL NUT.


Connect CONICAL NUT to the HANDHELD SHOWER HEAD.

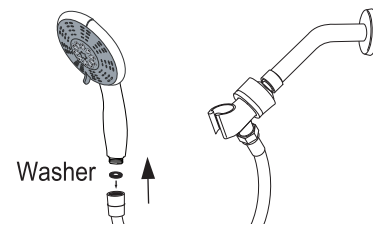


⚠ DO NOT apply BOTH **water regulator and **washer** at the same time for handheld shower head.**

Adjusting the bracket angle gently.

a. Vertically

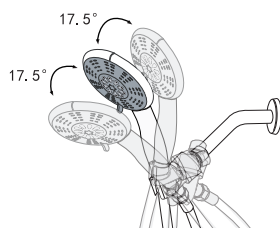

b. Horizontally

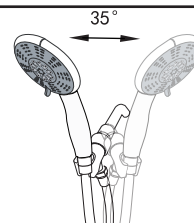

⚠ WARNING: Total adjusting angle CANNOT exceed 35 degrees both vertically and horizontally.