



















Instructions

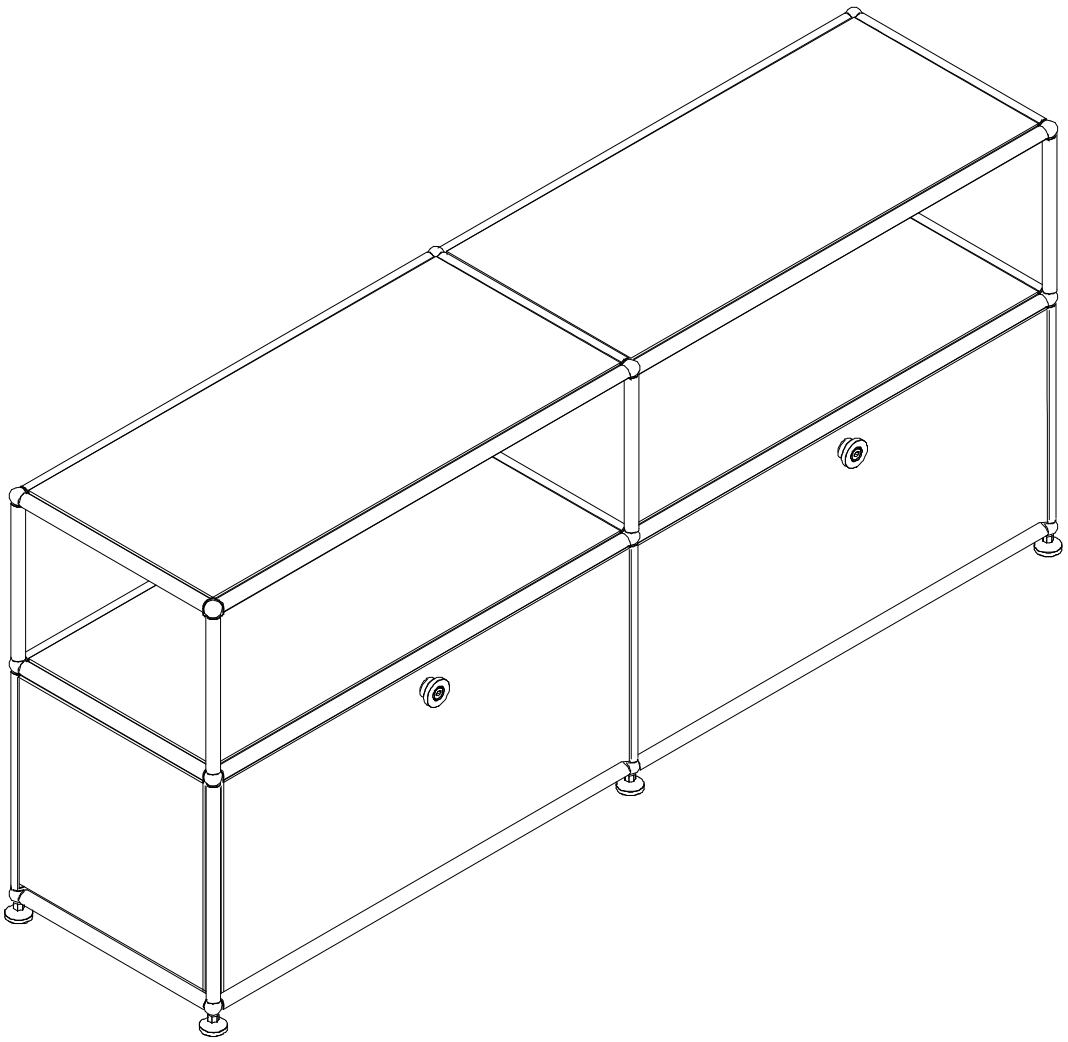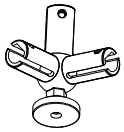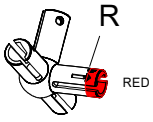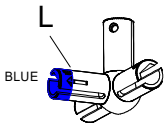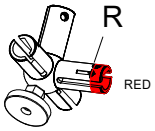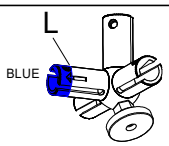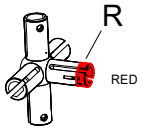
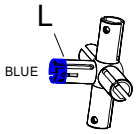


Part List


①	②	③	④	⑤	⑥	⑦	⑧
							
x1	x2	x2	x1	x1	M3x28 x4	M4x25 x3	M4x14 x4

A	B	C	D	E1	E2	E3	F
							
x6	x2	x2	x1	732MM x12	332MM x15	232MM x6	x2

H1	H2	J1	J2	K1	K2	L1	L2
							
x4	x4	x3	x3	x1	x1	x1	x1


M	N	II	W	X	Y
					
x66	x1	x1	x2	x2	x2

Step1

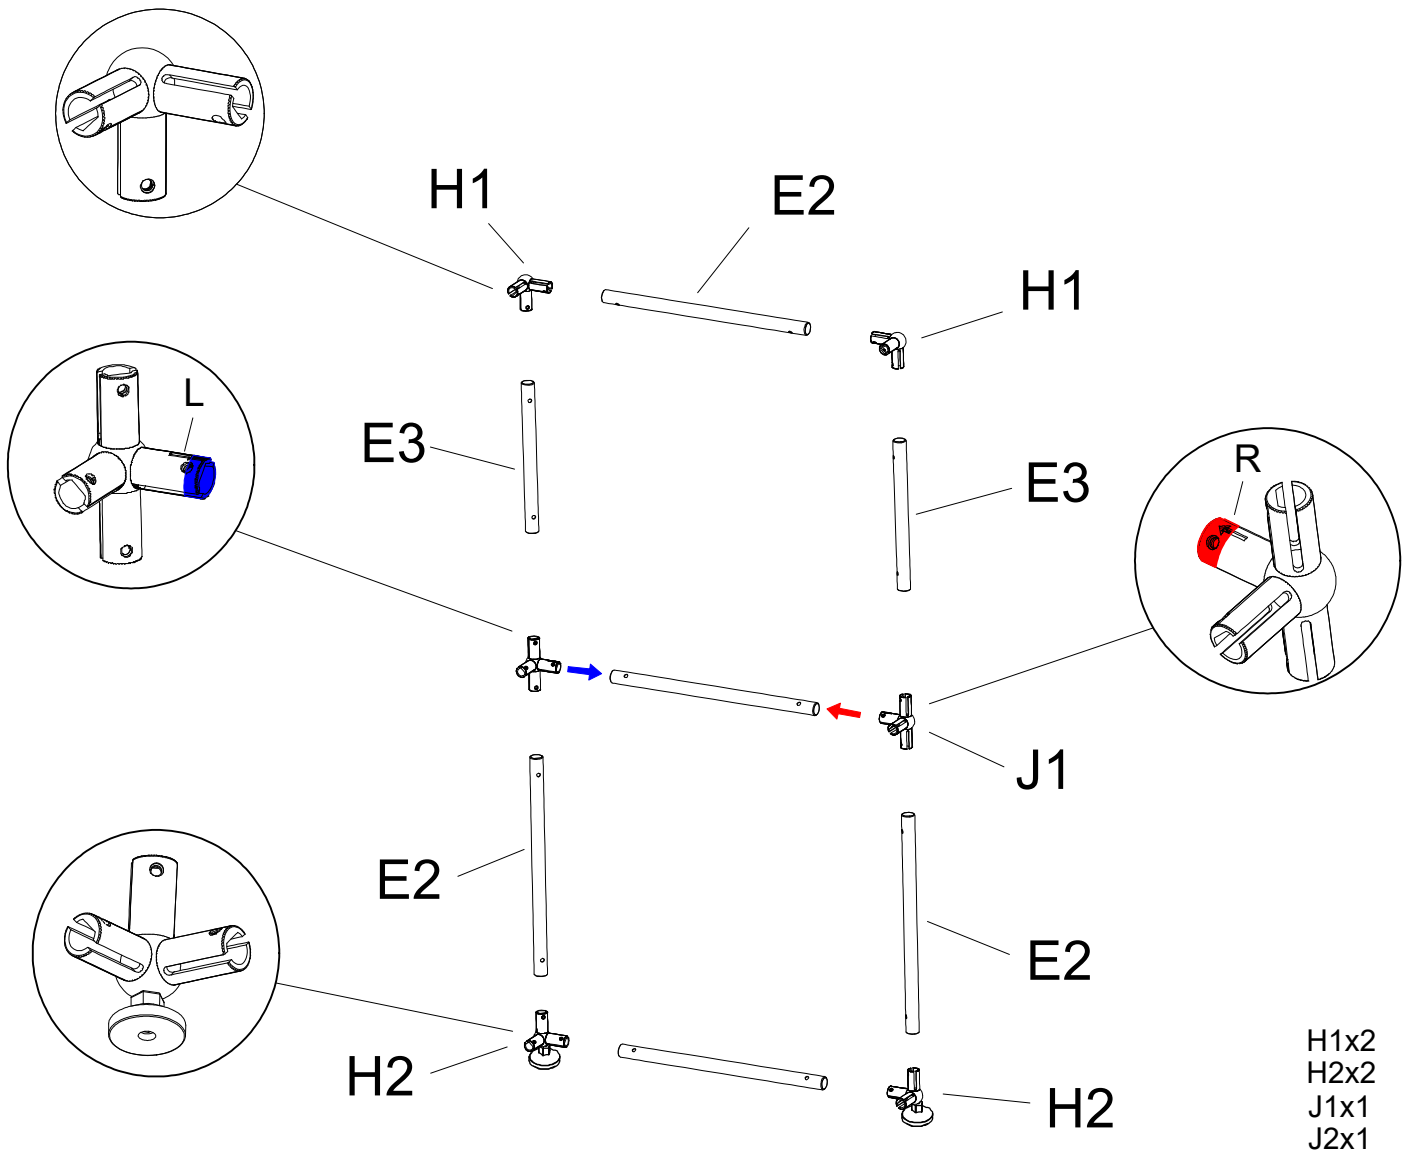

H1x2
H2x2
J1x1
J2x1
E2x5
E3x2


Step2

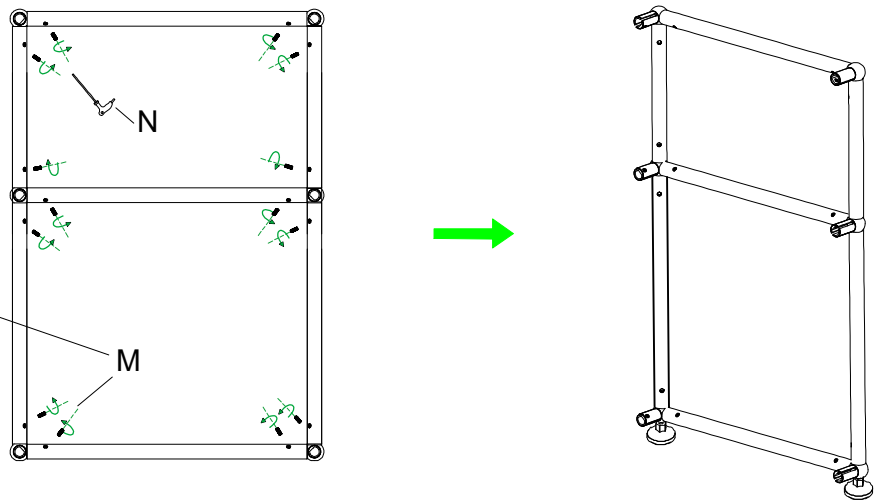

Do not tighten the M screws completely, otherwise it will not be possible to adjust the overall product later.


Mx14
Step2x2

Step3

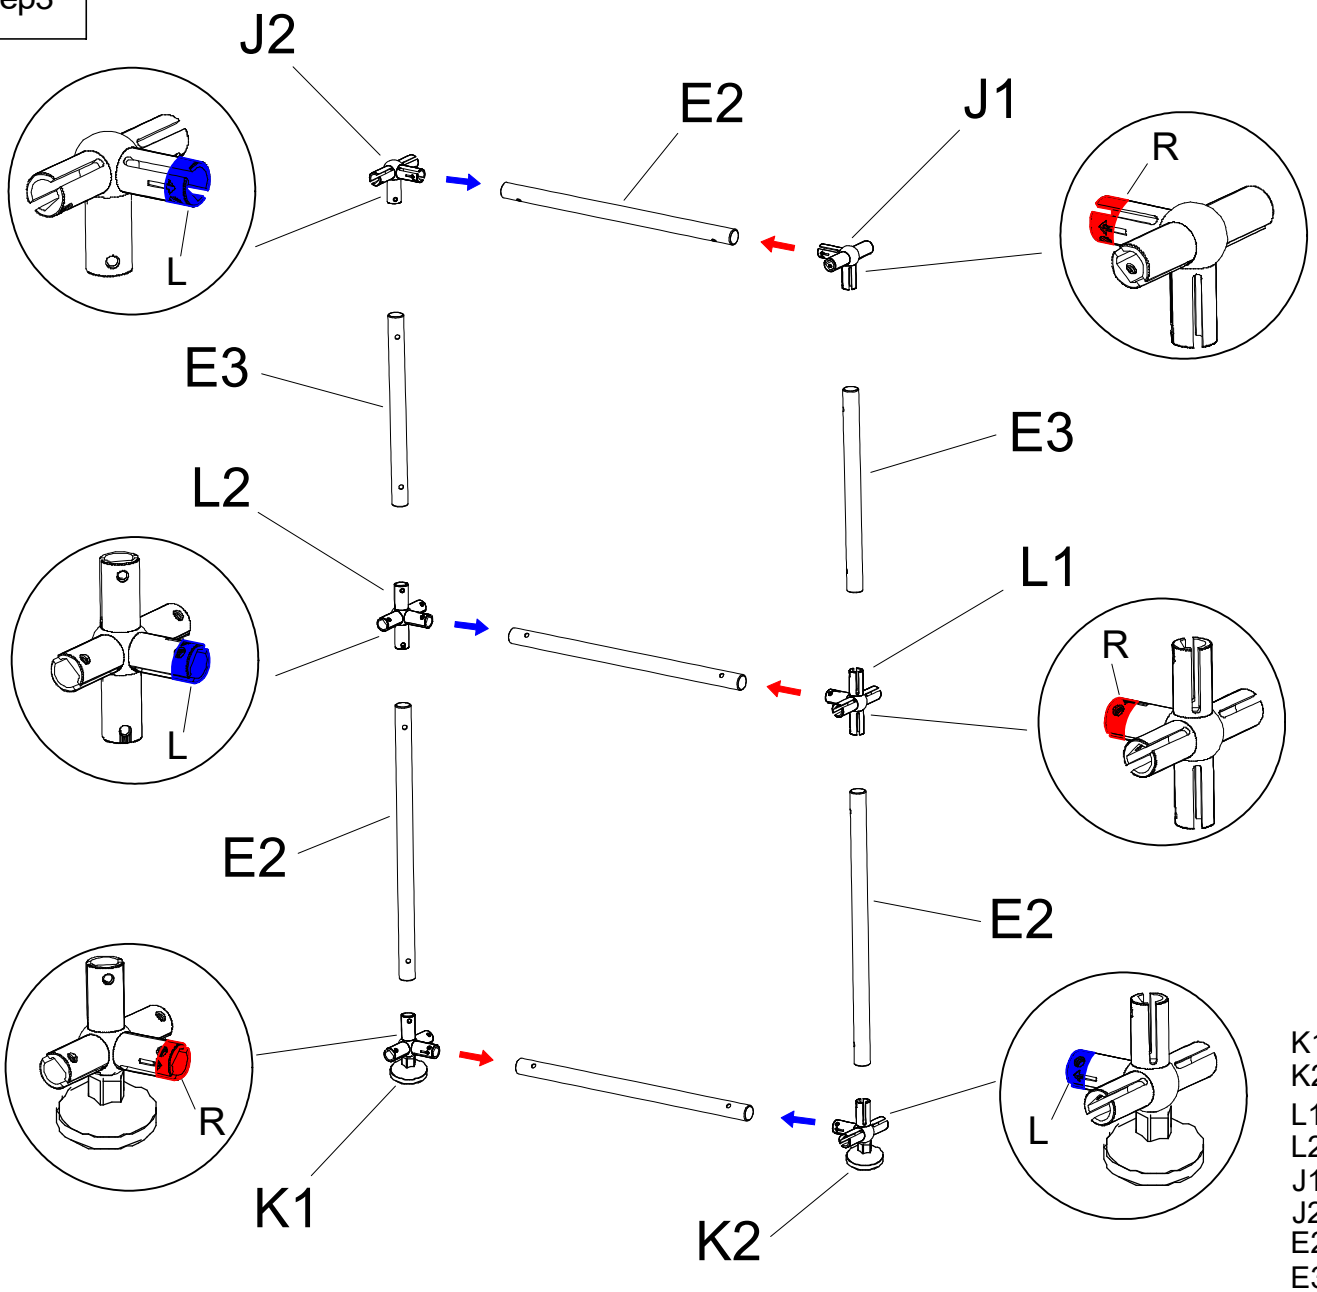


K1x1
K2x1
L1x1
L2x1
J1x1
J2x1
E2x5
E3x2

Step4

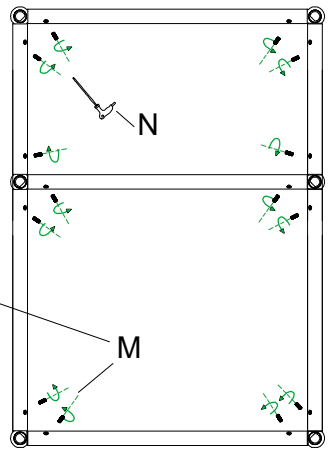


Do not tighten the M screws completely, otherwise it will not be possible to adjust the overall product later.

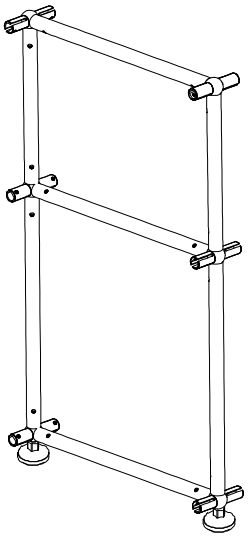

Mx14
Step4x1


Step5

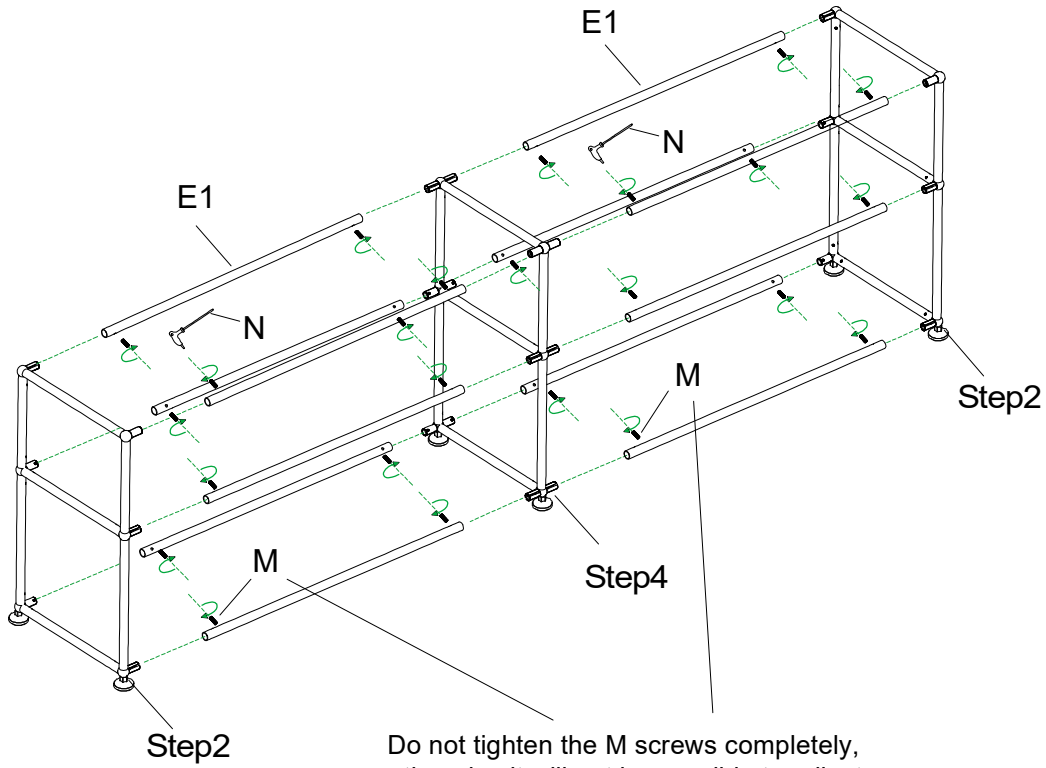

Do not tighten the M screws completely, otherwise it will not be possible to adjust he overall product later.


Mx24
E1x12
Step2 x2
Step4 x1

Step6

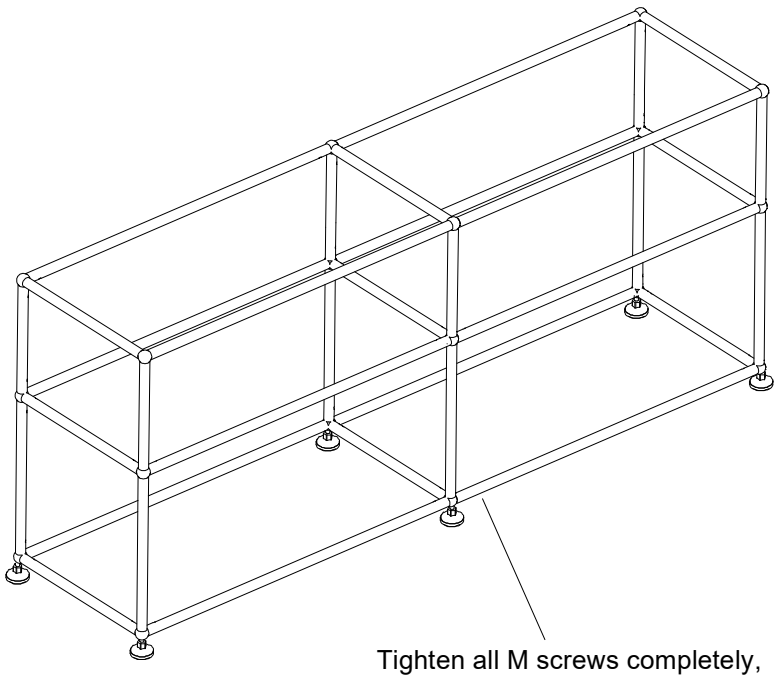


Tighten all M screws completely, when the cube frame is done.

Step7

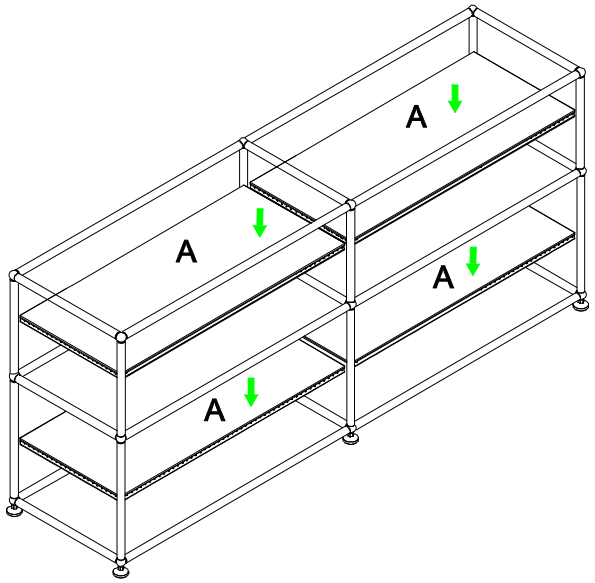

A x4


Step8

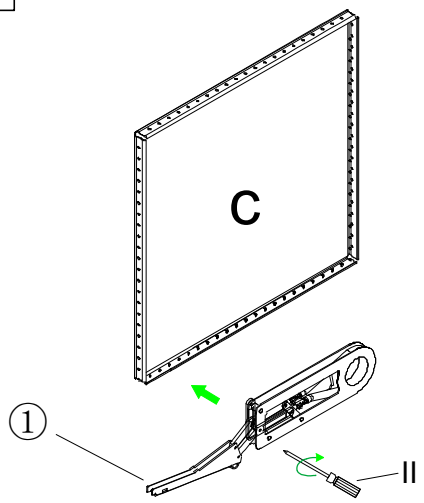

Partially unscrew the three screws in ① before installing it on the metal panel.

Cx1
①x1
Step8x1


Step9

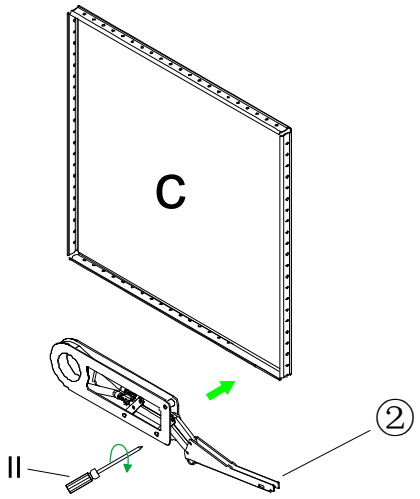

Partially unscrew the three screws in ② before installing it on the metal panel.

Cx1
②x1
Step9x1


Step10

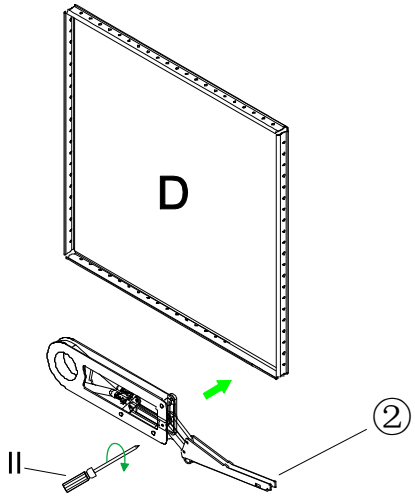

Partially unscrew the three screws in ② before installing it on the metal panel.


Dx1
②x1
Step10x1

Step11

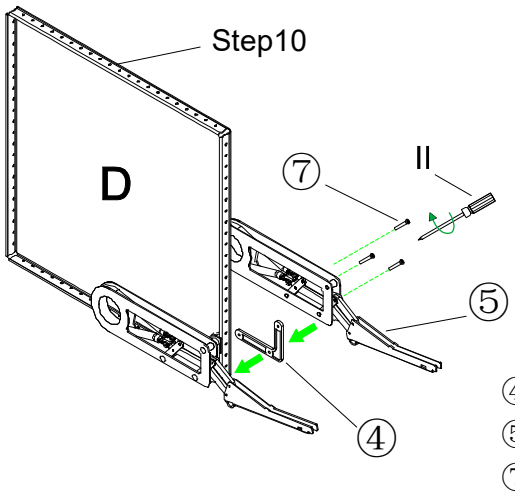


④x1
⑤x1
⑦x3
Step10x1
Step11x1

Step12

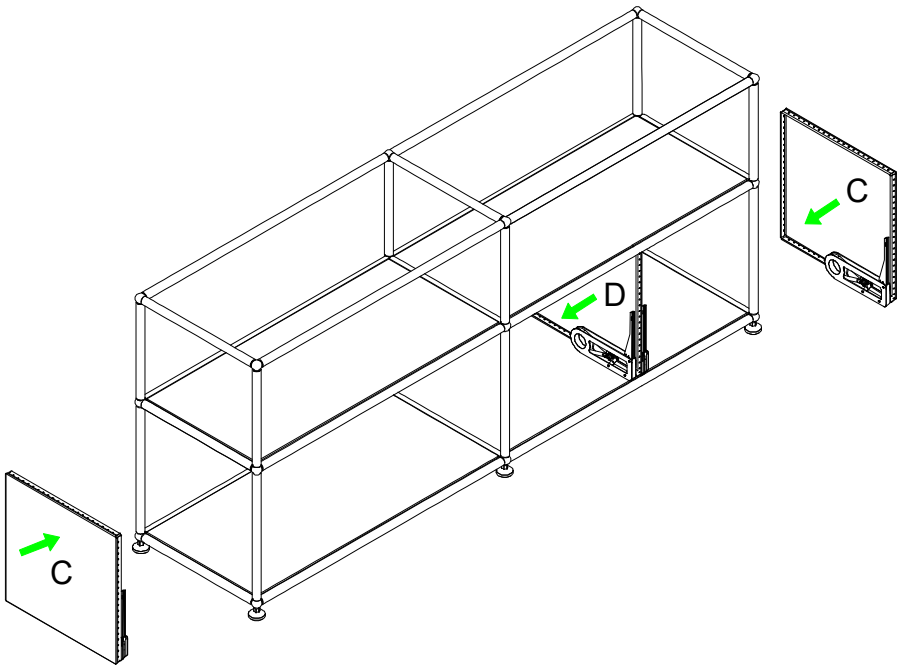


Step8 x1
Step9 x1
Step11x1

Step13

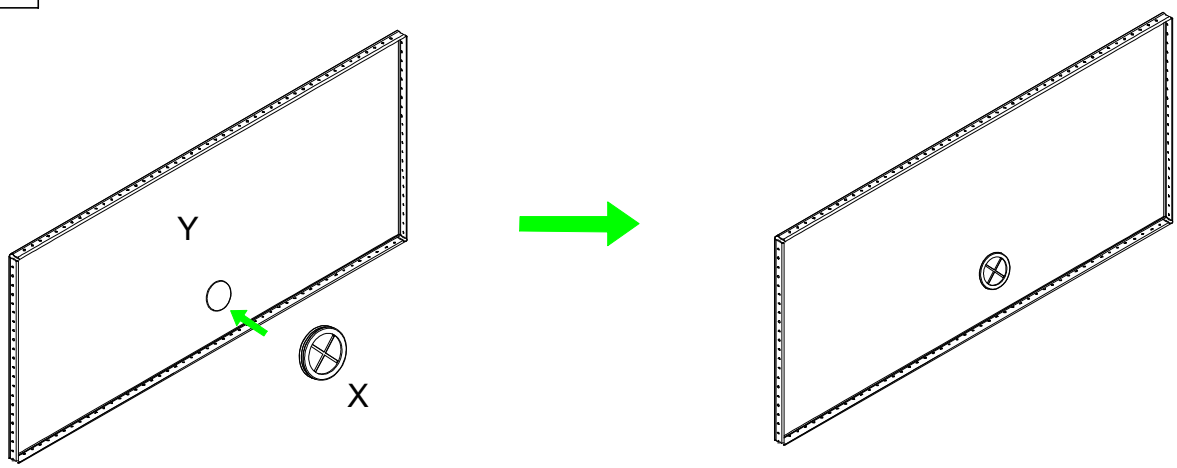


X x1
Y x1
Step13x2

Step14

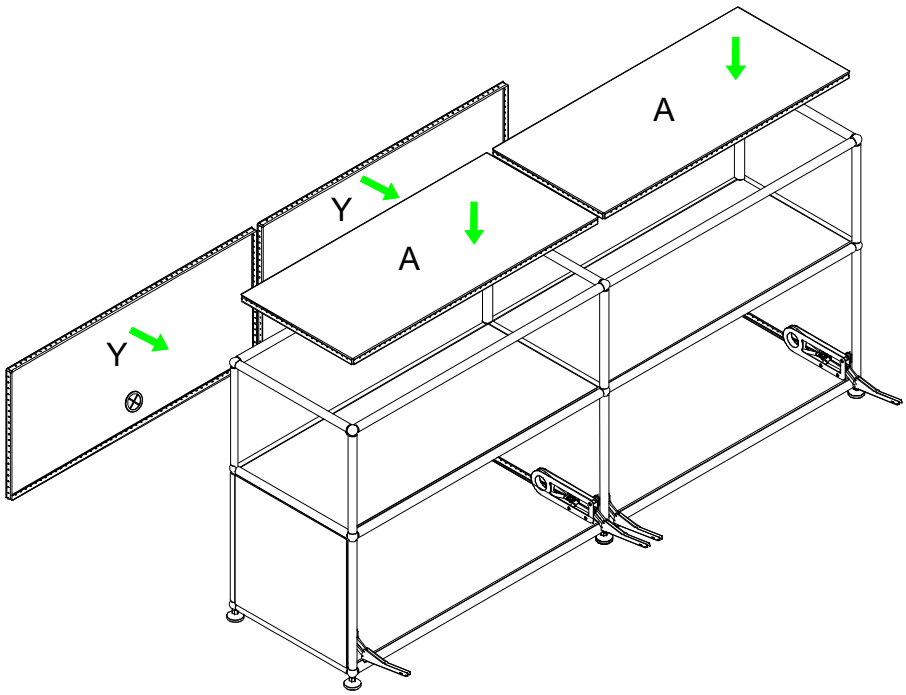

A x2
Y x2


Step15

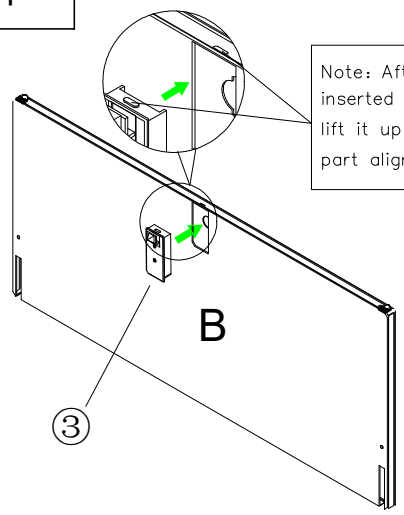

Note: After the lock box is inserted into the square hole, lift it up so that the convex part aligns with the hole.


Bx1
③x1

Step16

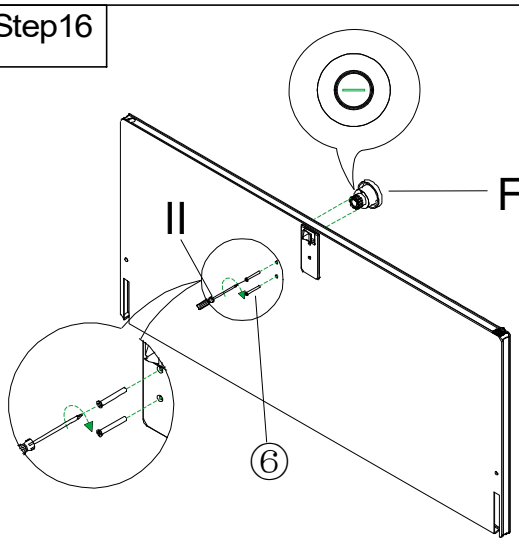


Fx1
⑥x2
Step16x2

Step17

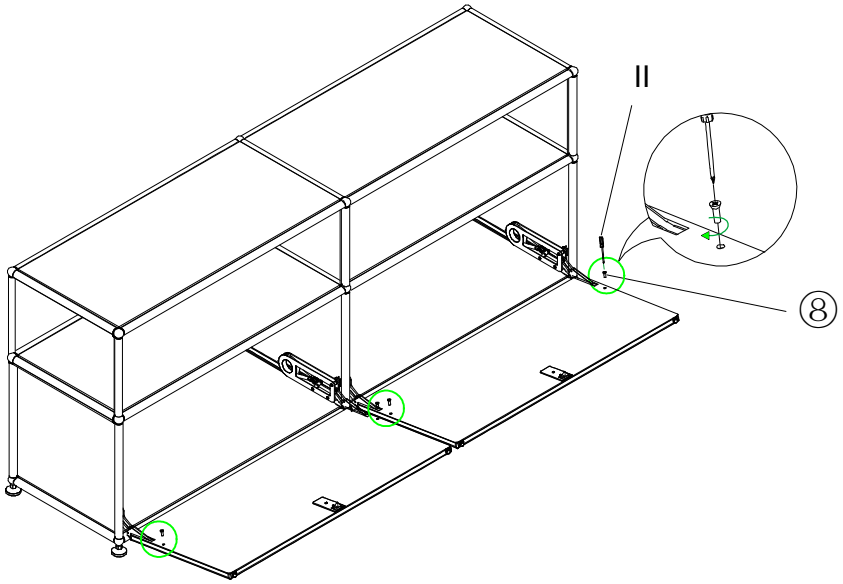


⑧x4


How to use the lock

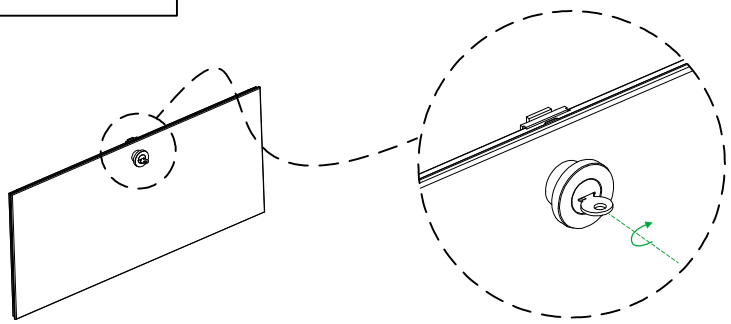

Turn clockwise to unlock

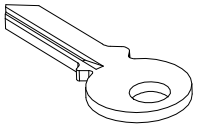

including 2 keys

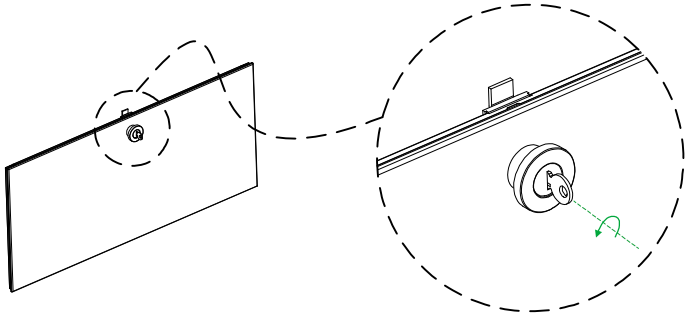

Turn counterclockwise to lock