

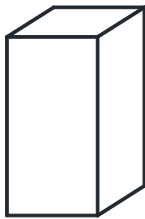



ASSEMBLY INSTRUCTION

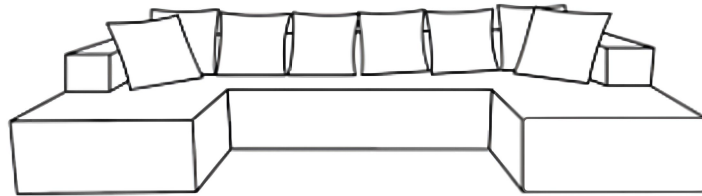




1/3

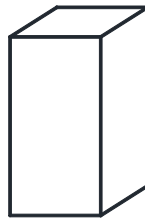


2/3

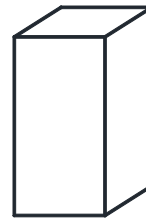

3/3

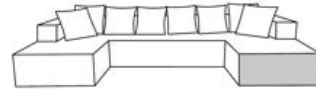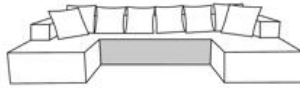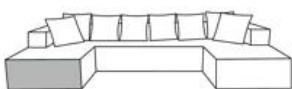


STEP 1 Unpacking the cartons

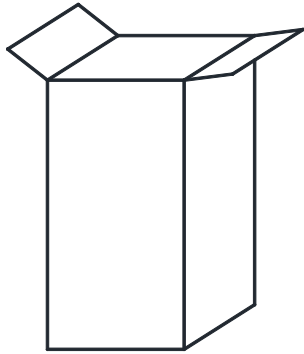


STEP2 Take out the sofa



STEP 3 Cut the PE film carefully

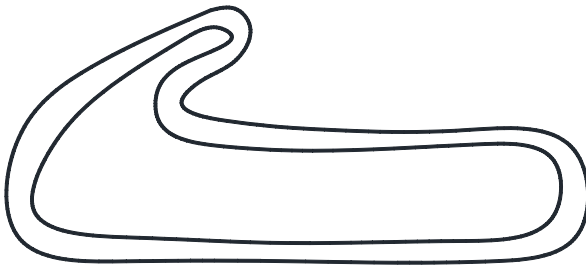

STEP 4 Spread out the couch and wait for the rebound

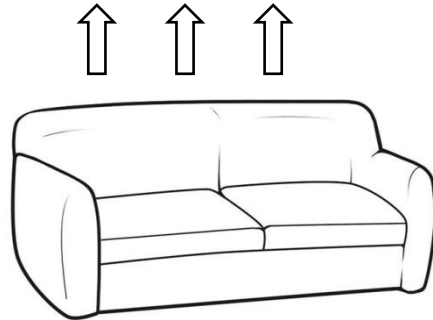

STEP 5 Set up the couch and pillows and pat gently to help it recover (takes 72 hours)

