
ASSEMBLY INSTRUCTIONS

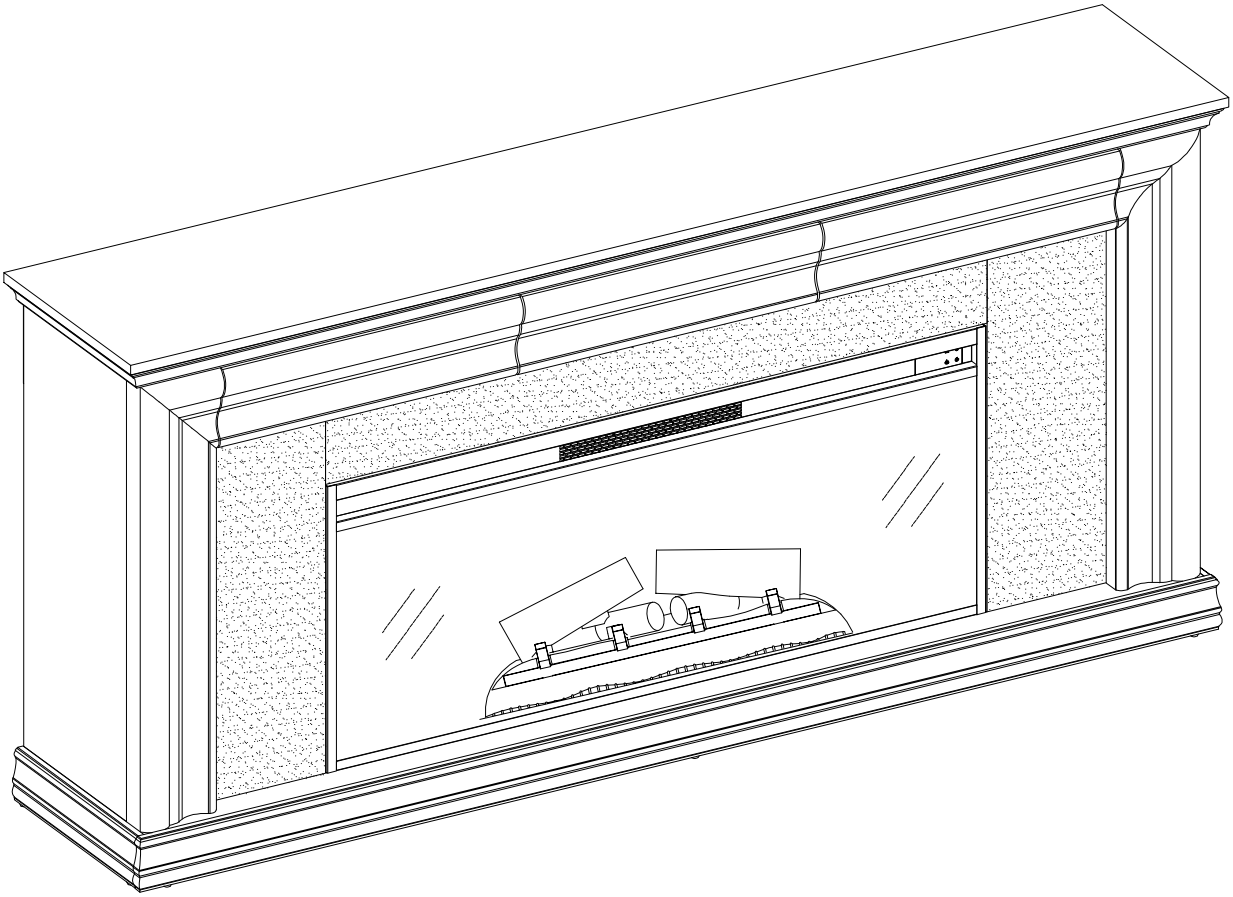

SAFETY TIPS:Static charge may cause dust on foam – clean with a dry or damp cloth.Small foam strands may be present – handle gently and dispose of properly.Do not burn or incinerate. Check local recycling guidelines.

Update 26 OCT 2025 Revison #:01

Before You Start

1.Read through each step carefully and follow the proper order.

2.Separate and count all your parts and hardware.




3.Give yourself enough room for the assembly process.

4.Assembly this product on the empty carton or carpet to avoid scratching.

5.Two people are recommended for ease in the assembly of this product.

6.Keep all small parts of this product away from children. They may cause serious injury.

7.Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

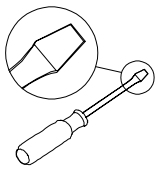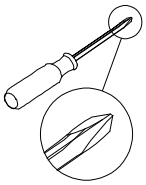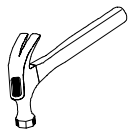8.Note:Power tools should not recommended to assemble this product, If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.









4.Use the sticker to conceal the Cam.

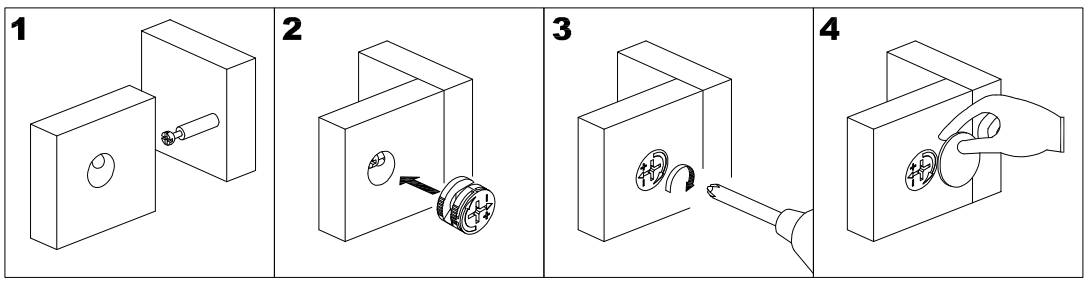


PARTS LIST

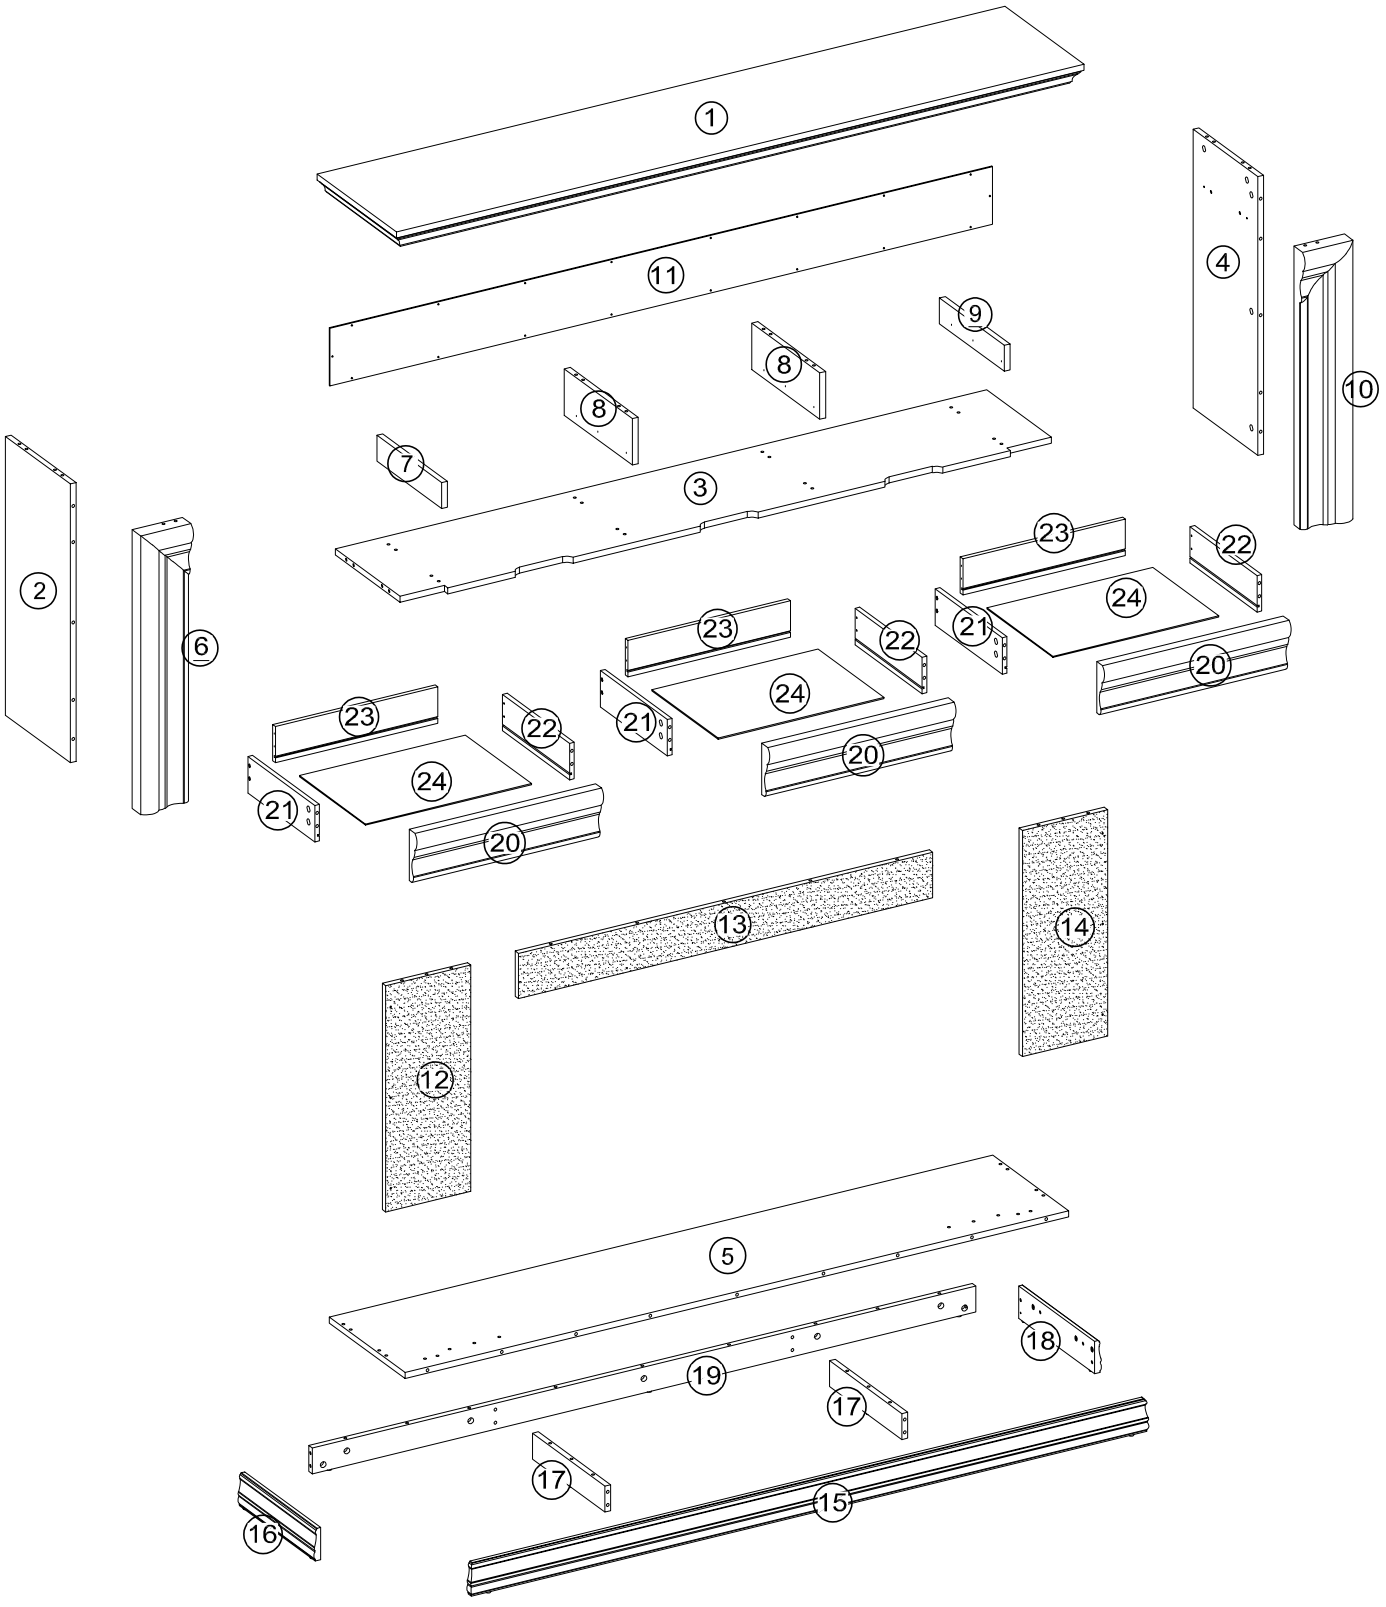
1
11
4
9
10
8
8
7
3
2
6
23
22
24
21
20
23
22
24
21
20
23
22
24
21
20
13
14
12
5
18
19
17
17
16
15


HARDWARE LIST


A		Ø6x35mm	Cam bolt	55	pcs
B		Ø15x9mm	Small Cam lock	12	pcs
C		Ø30mm	Cam cover	55	pcs
D		Ø8x30mm	Wooden dowel	58	pcs
E		57x20x20mm	Plastic connector	6	pcs
F		Ø6x12mm	Bolt	12	pcs
G		Ø4x38mm	Screw	12	pcs
H		M 4	Hex key	1	pc
I		Ø3.5x12mm	Screw	44	pcs
J		Ø6x40mm	Screw	18	pcs
K		12"	Left cabinet member	3	pcs
L		12"	Right cabinet member	3	pcs
M		12"	Left drawer runner	3	pcs
N		12"	Right drawer runner	3	pcs
O		Ø3.5x12mm	Screw	18	pcs
P			Metal plate	4	pcs
Q			Tipping restraint	2	set
R		Ø4x25mm	Screw	6	pcs
S		Ø15x11mm	Cam lock	43	pcs
T		Ø4x12mm	Screw	6	pcs
U		RV42V80L -MT1	Fireplace Insert	1	pc
V			Glue tube	1	pc

STEP 1




Ax27

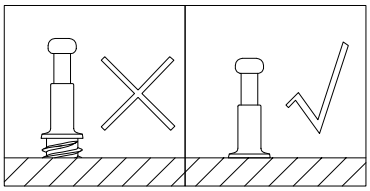


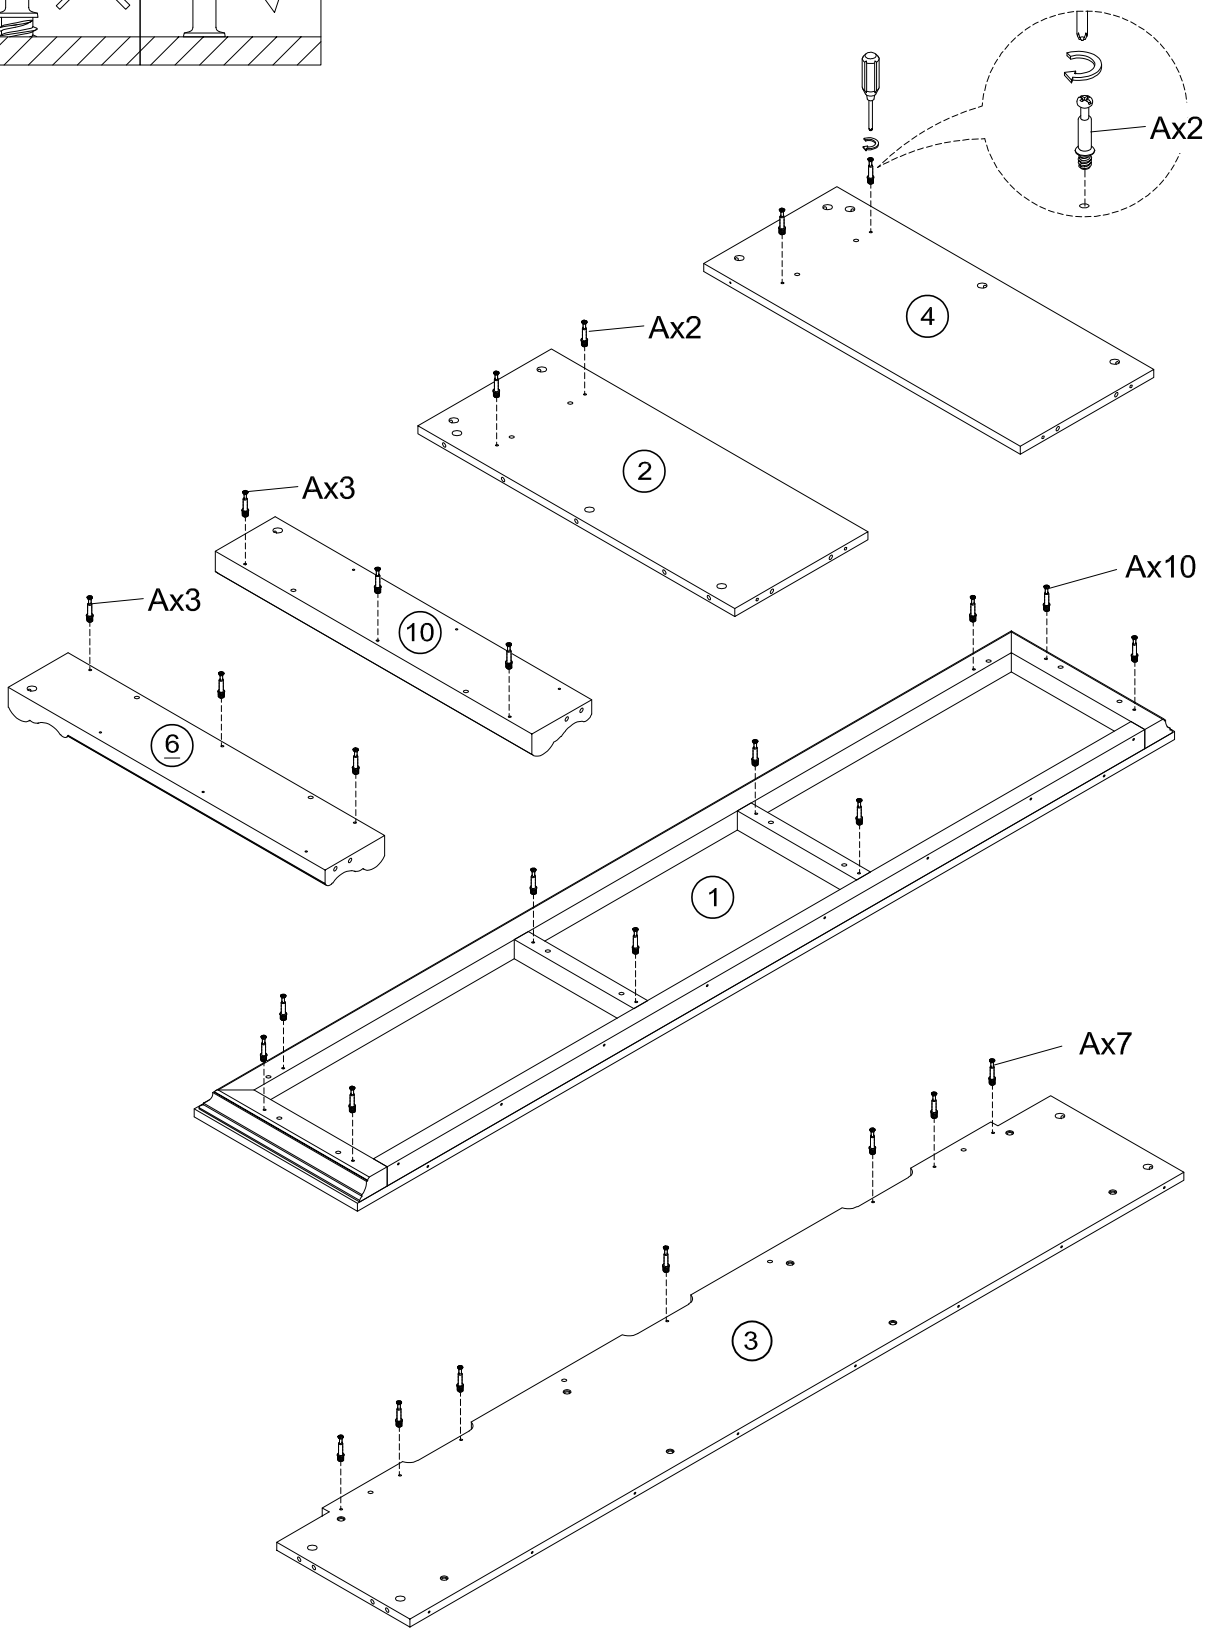


STEP 2

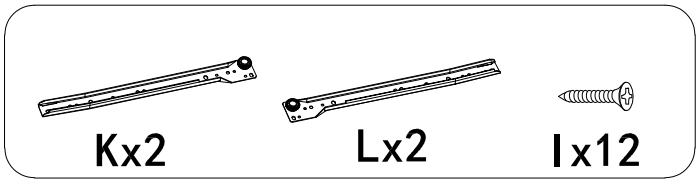


Note the CL or CR stamped label on the track !

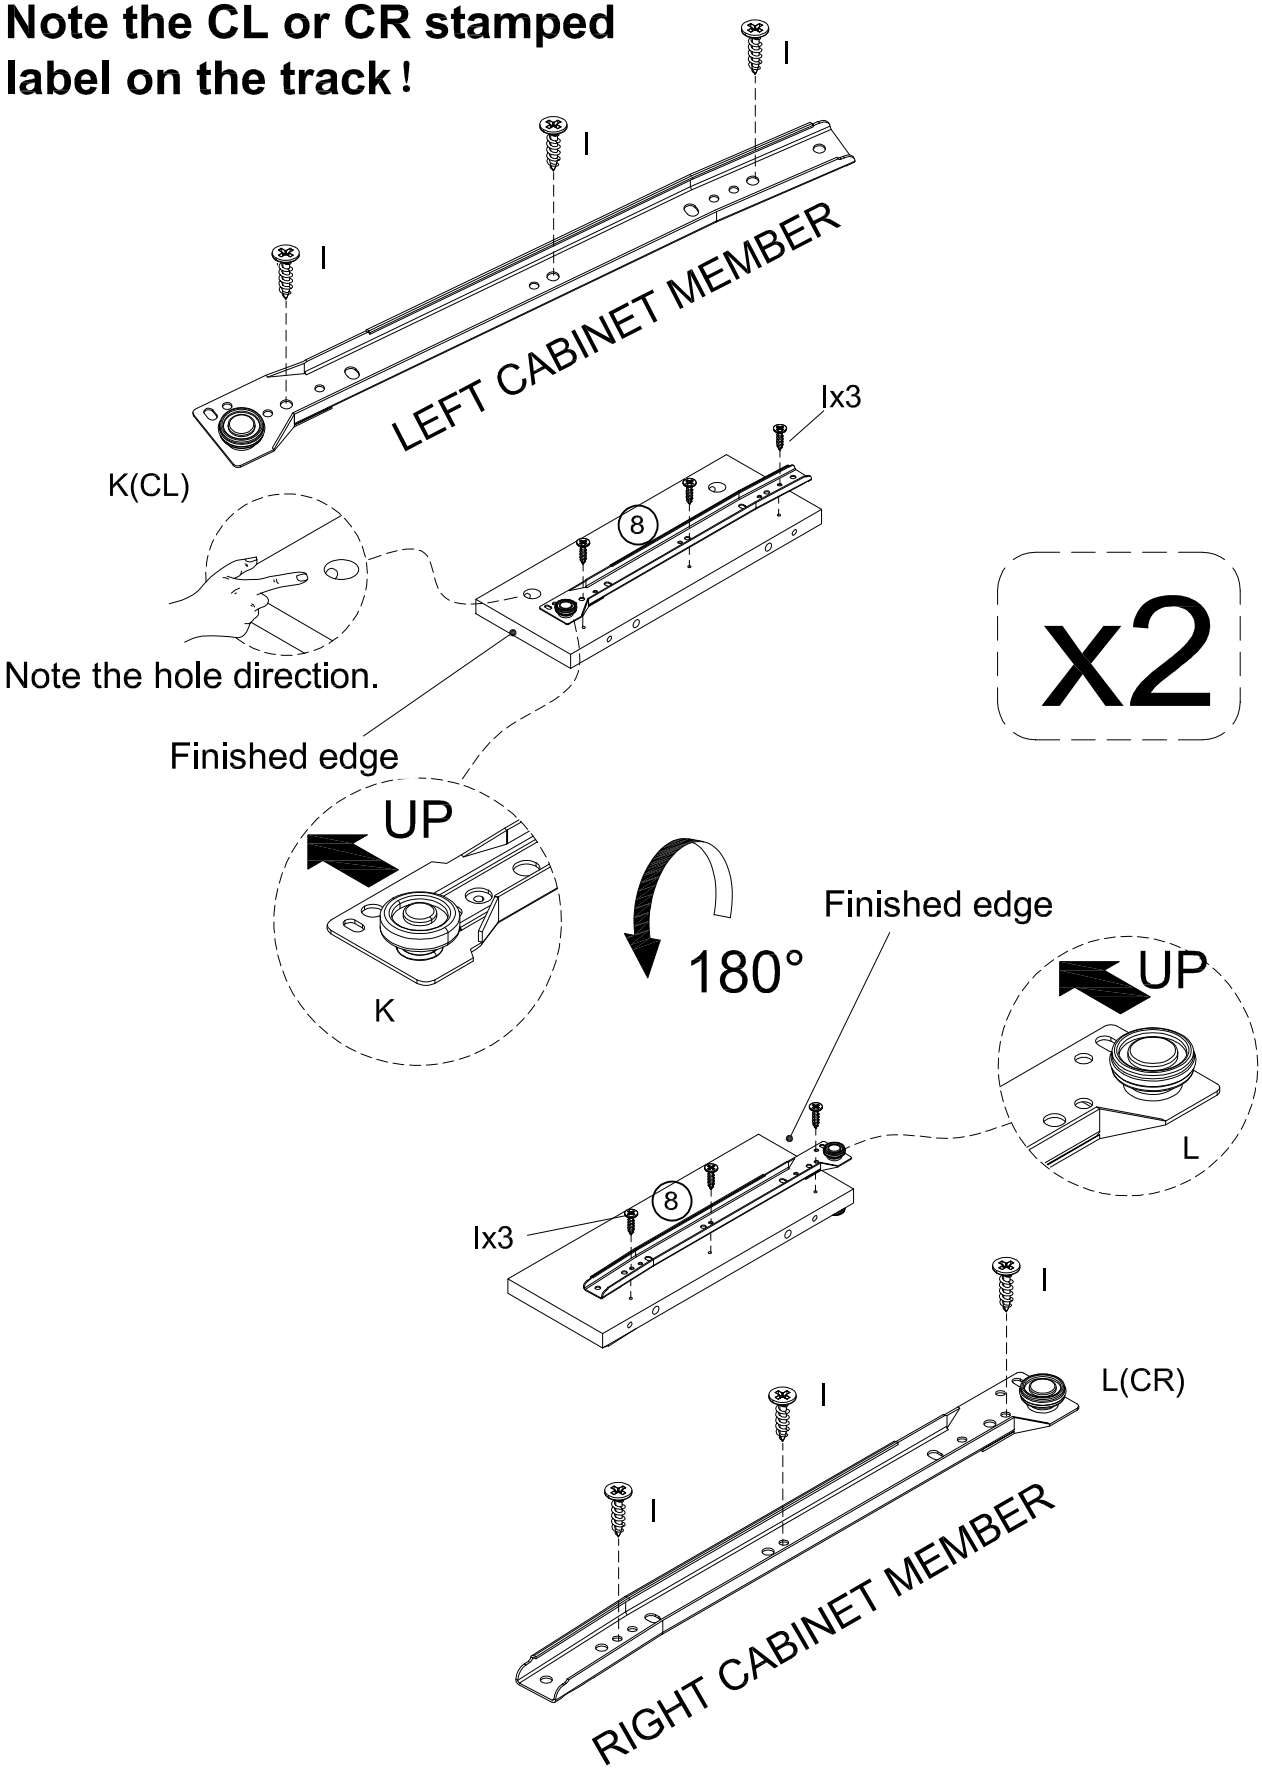


STEP 3

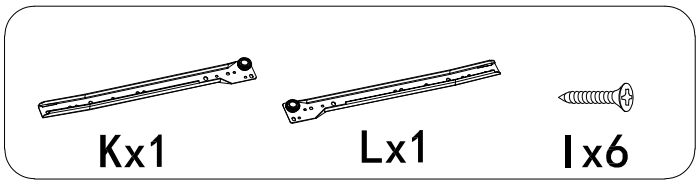



Note the CL or CR stamped label on the track !

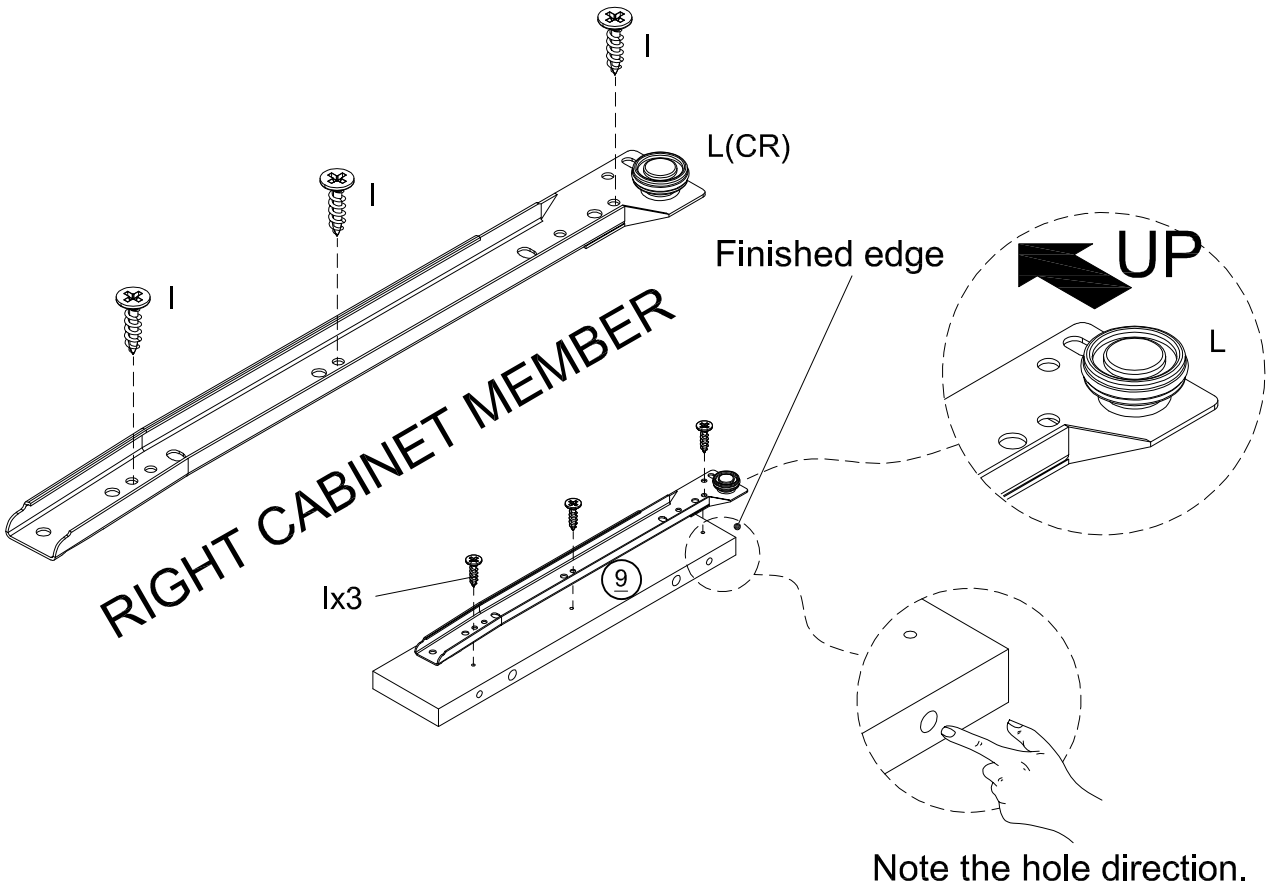


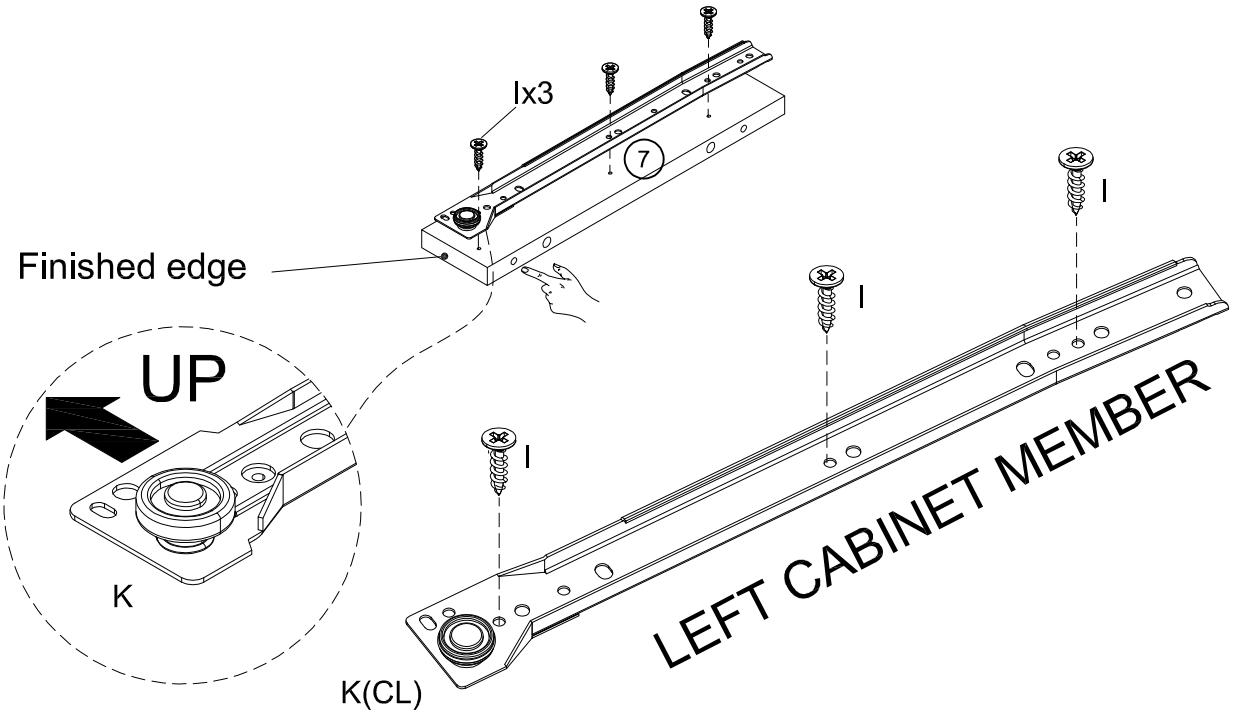


STEP 4

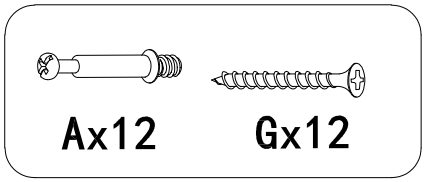

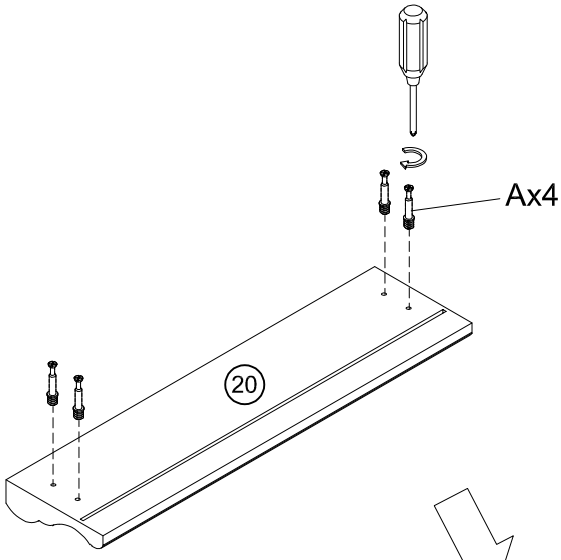


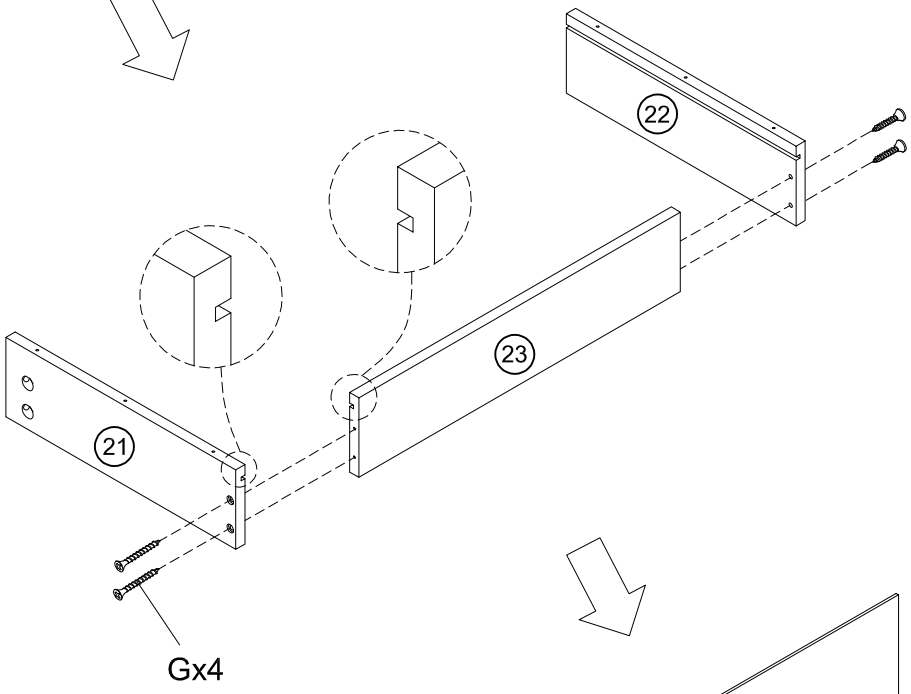



x3

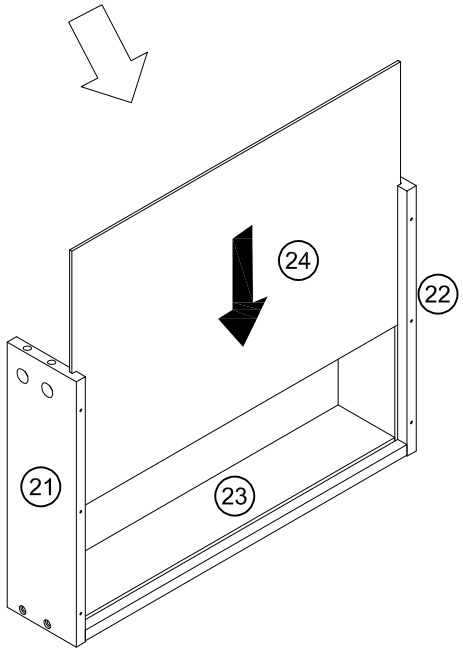


STEP 5

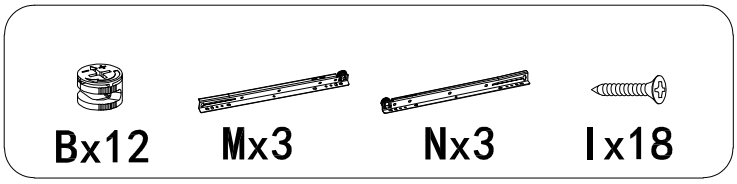

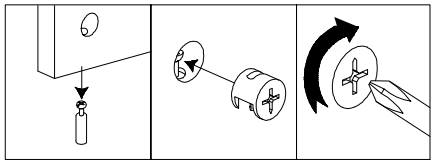


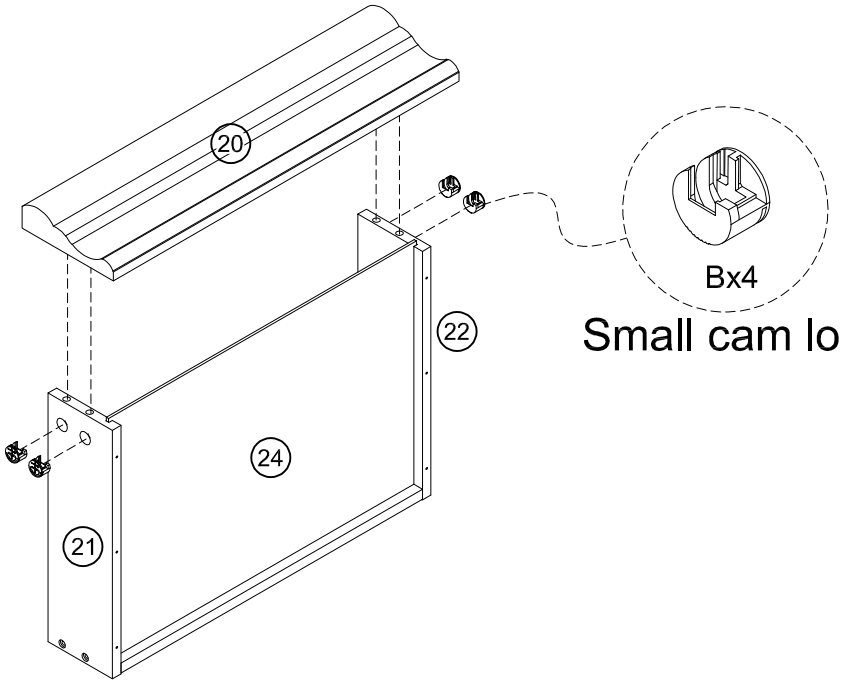


Small cam lock

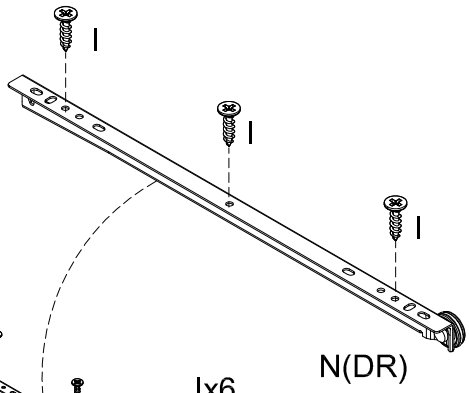

Note the DL or DR stamped label on the track !

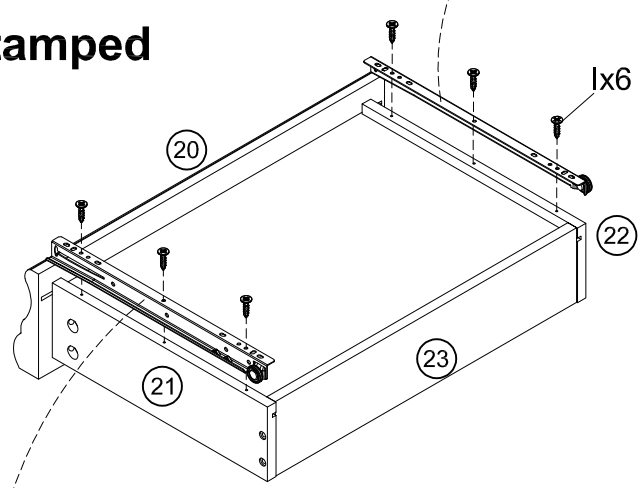


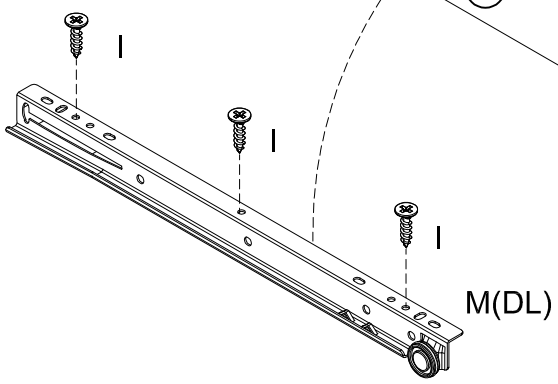



x3

STEP 6


Sx6 Dx4

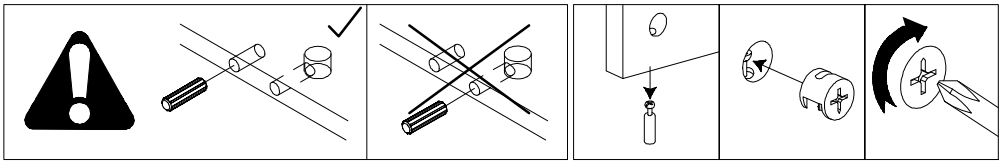


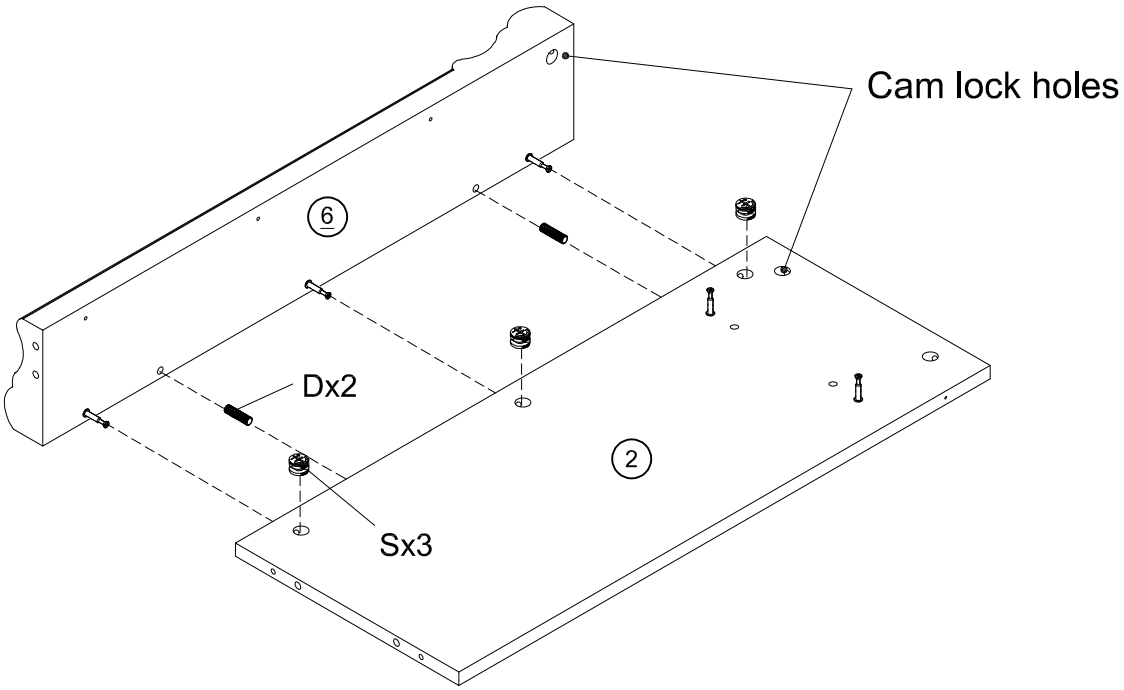


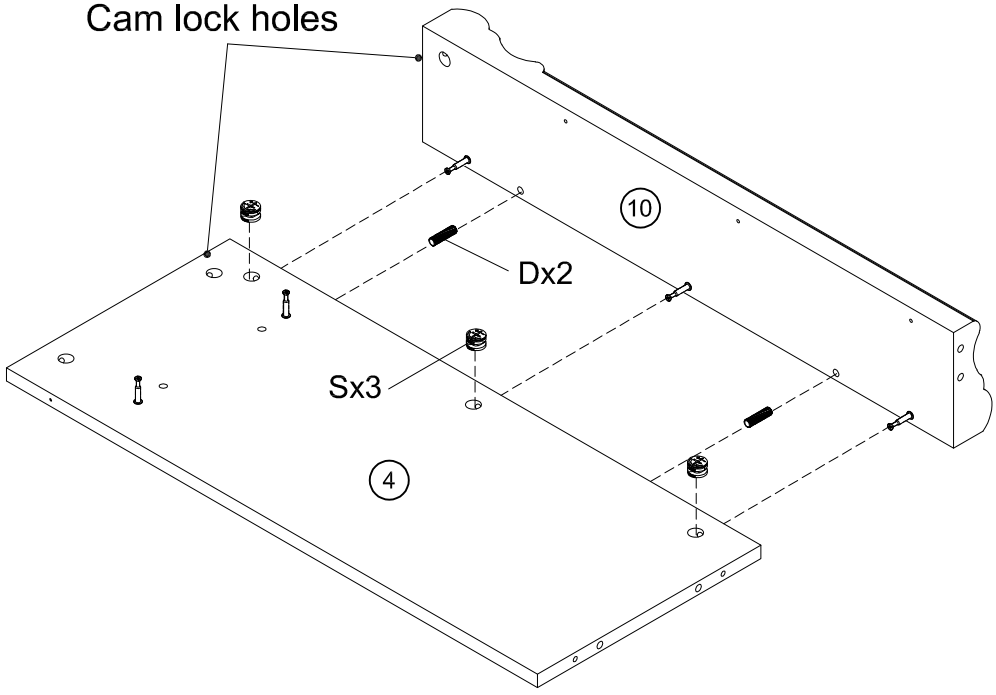


STEP 7

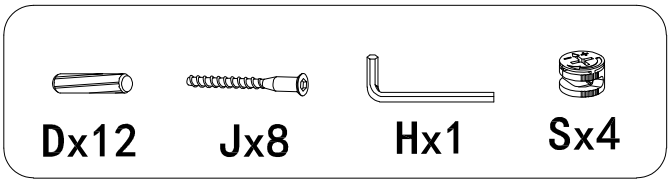

Dx12
Jx8
Hx1
Sx4

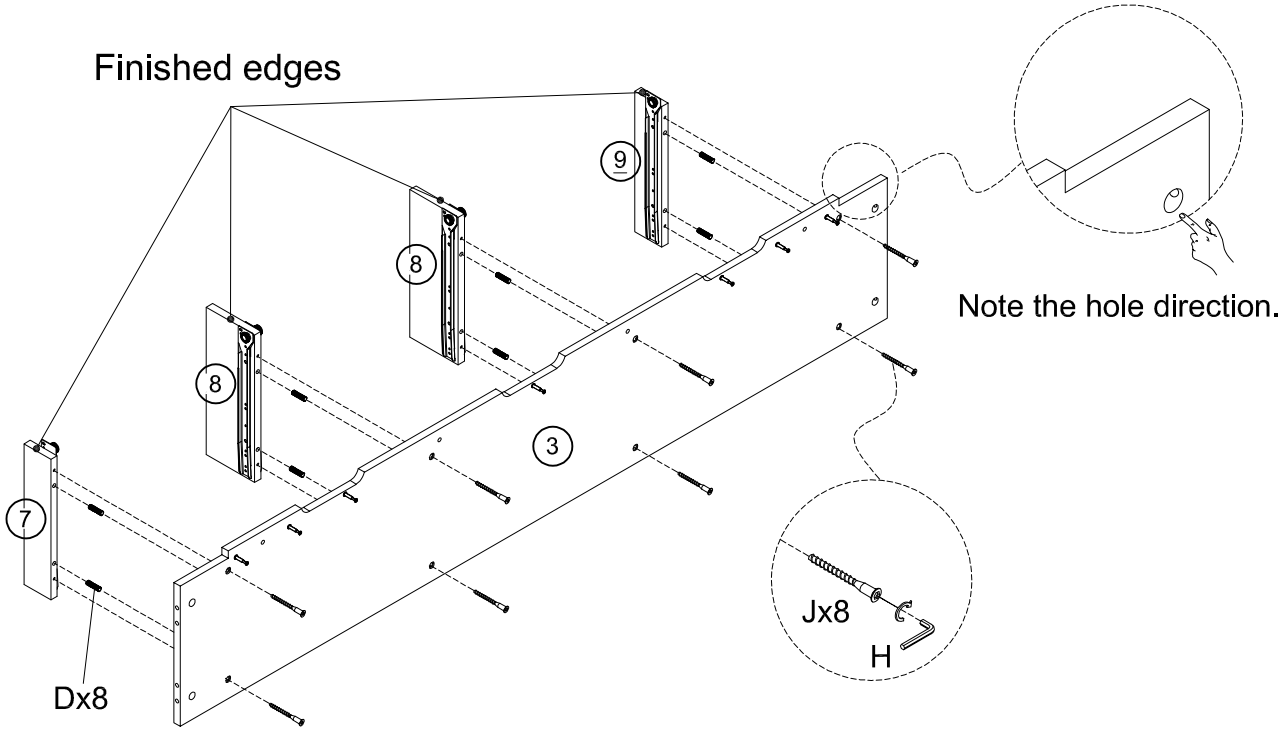

Finished edges
9
8
8
3
7
Dx8
Jx8
H
Note the hole direction.

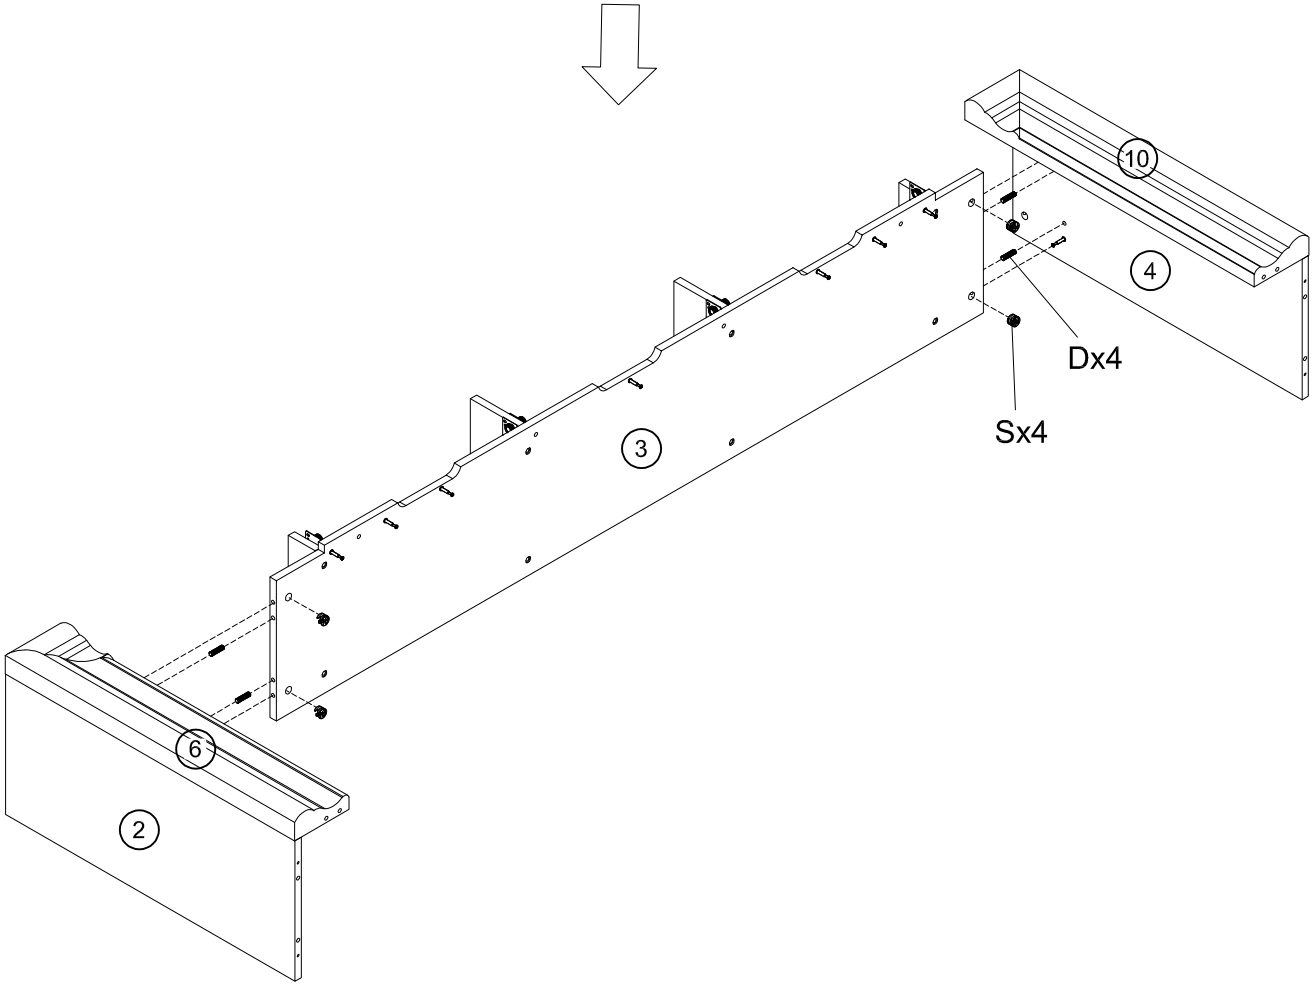
10
4
Dx4
Sx4
3
6
2


STEP 8

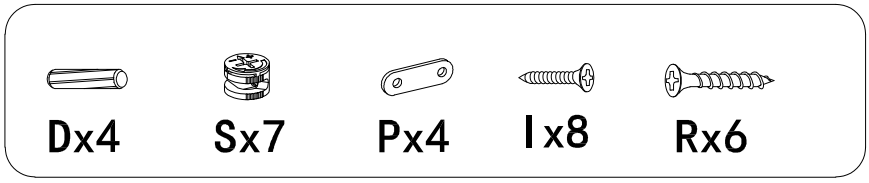

Dx4
Sx7
Px4
Ix8
Rx6

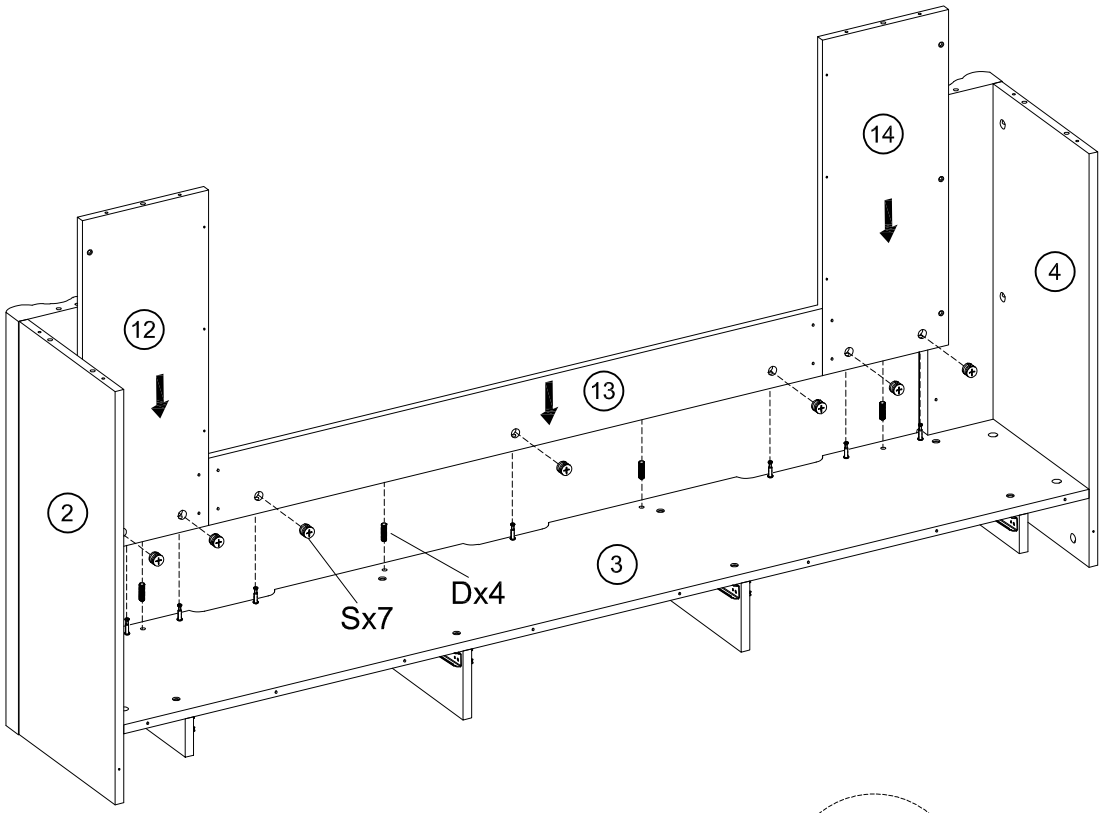
14
4
12
13
2
3
Sx7
Dx4

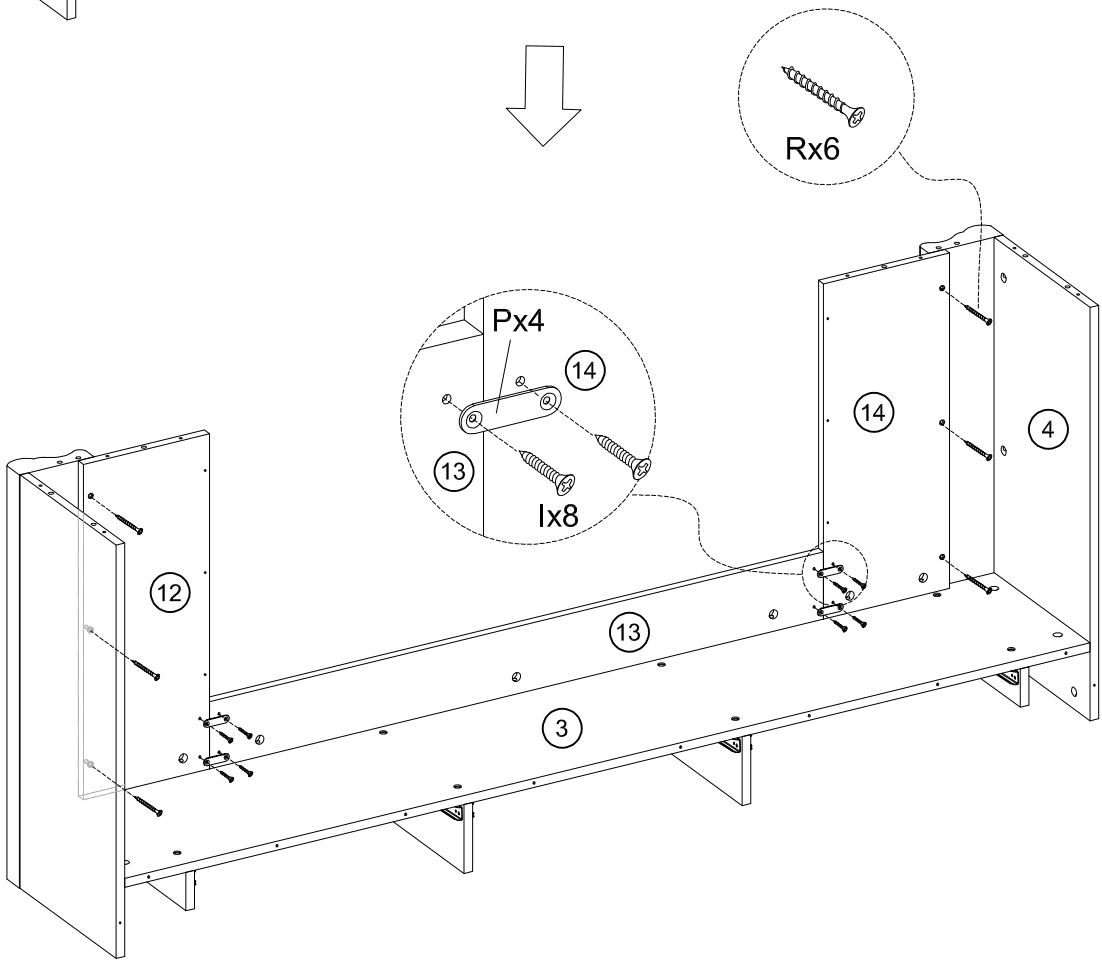

Rx6
Px4
14
13
Ix8
14
4
12
13
3

STEP 9

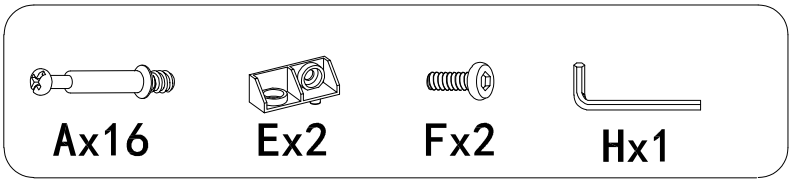


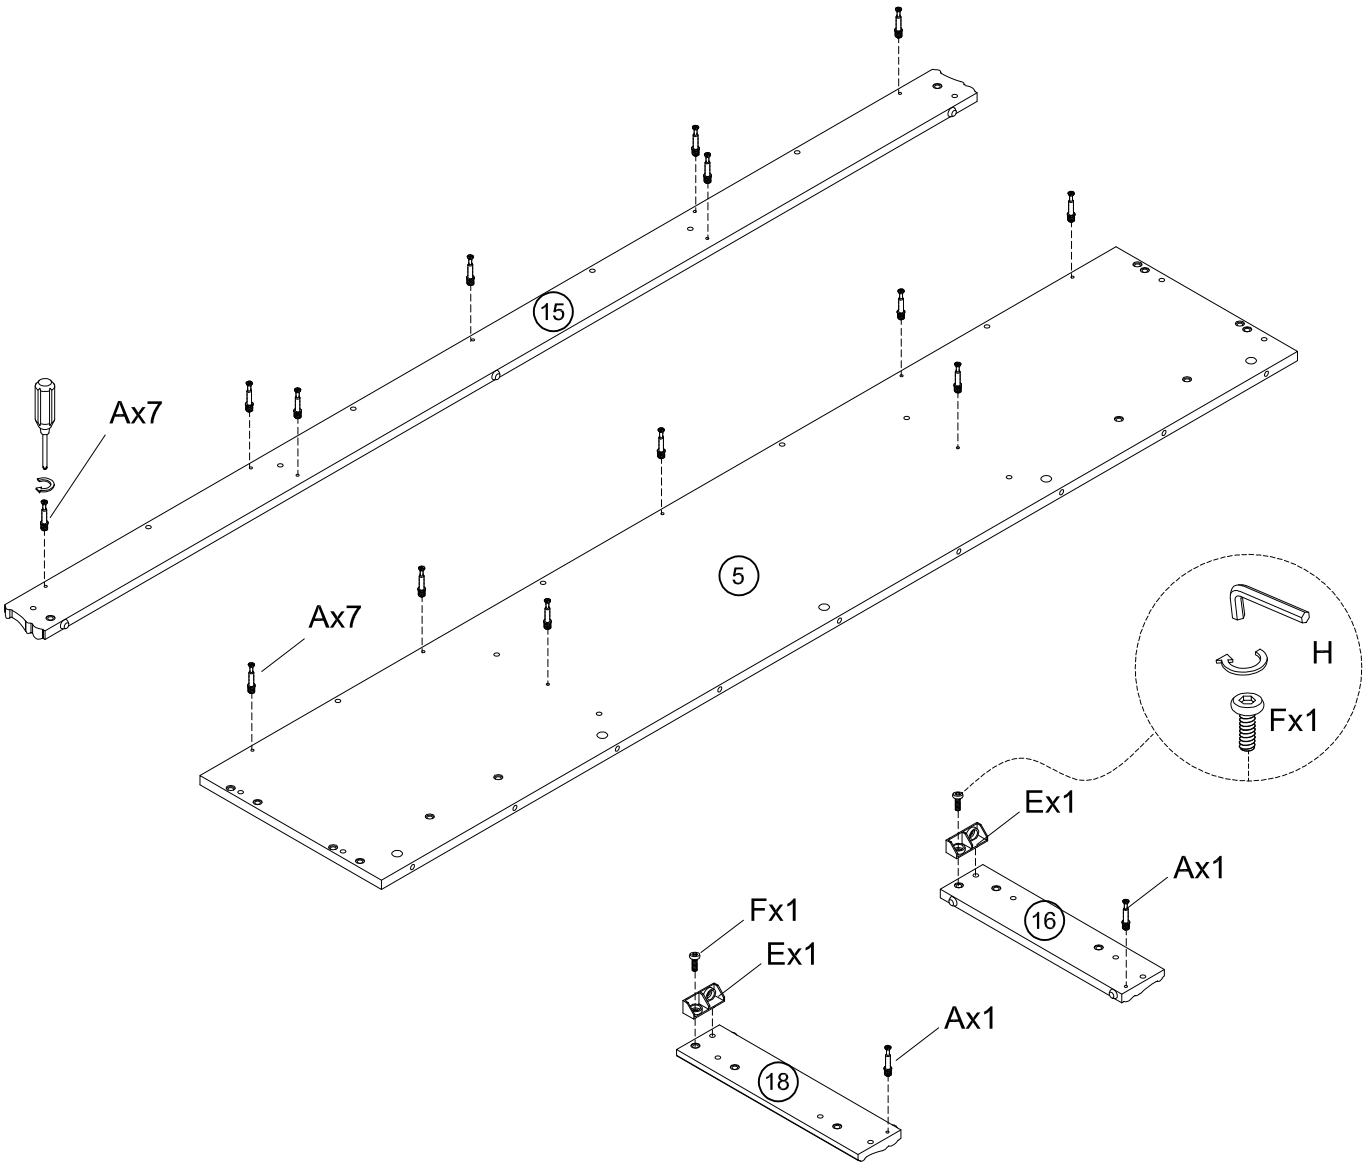


STEP 10

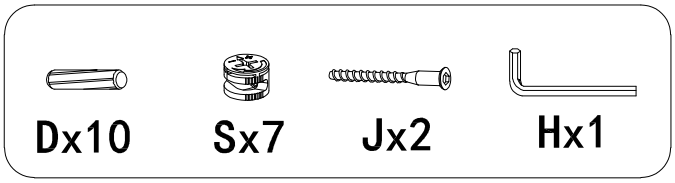


Pay attention to the orientation of the foot.

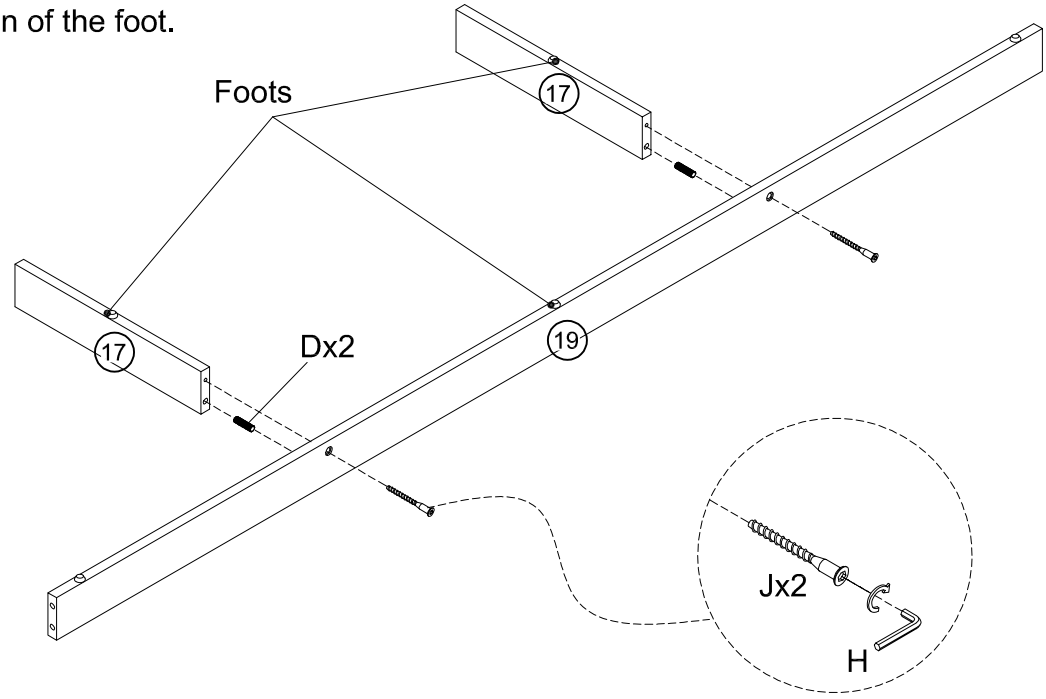


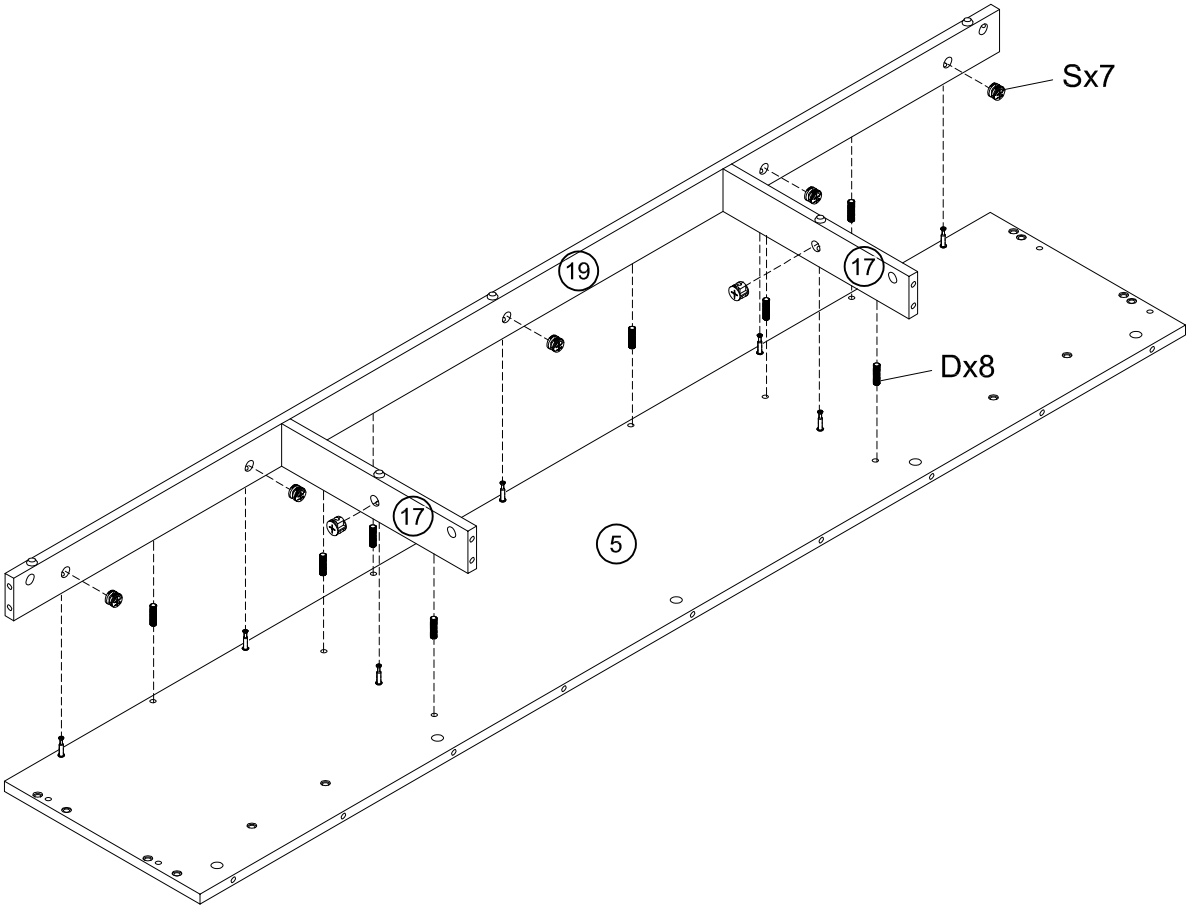


STEP 11

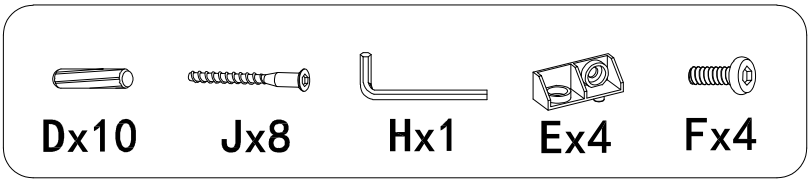


An assistance is required with this step.

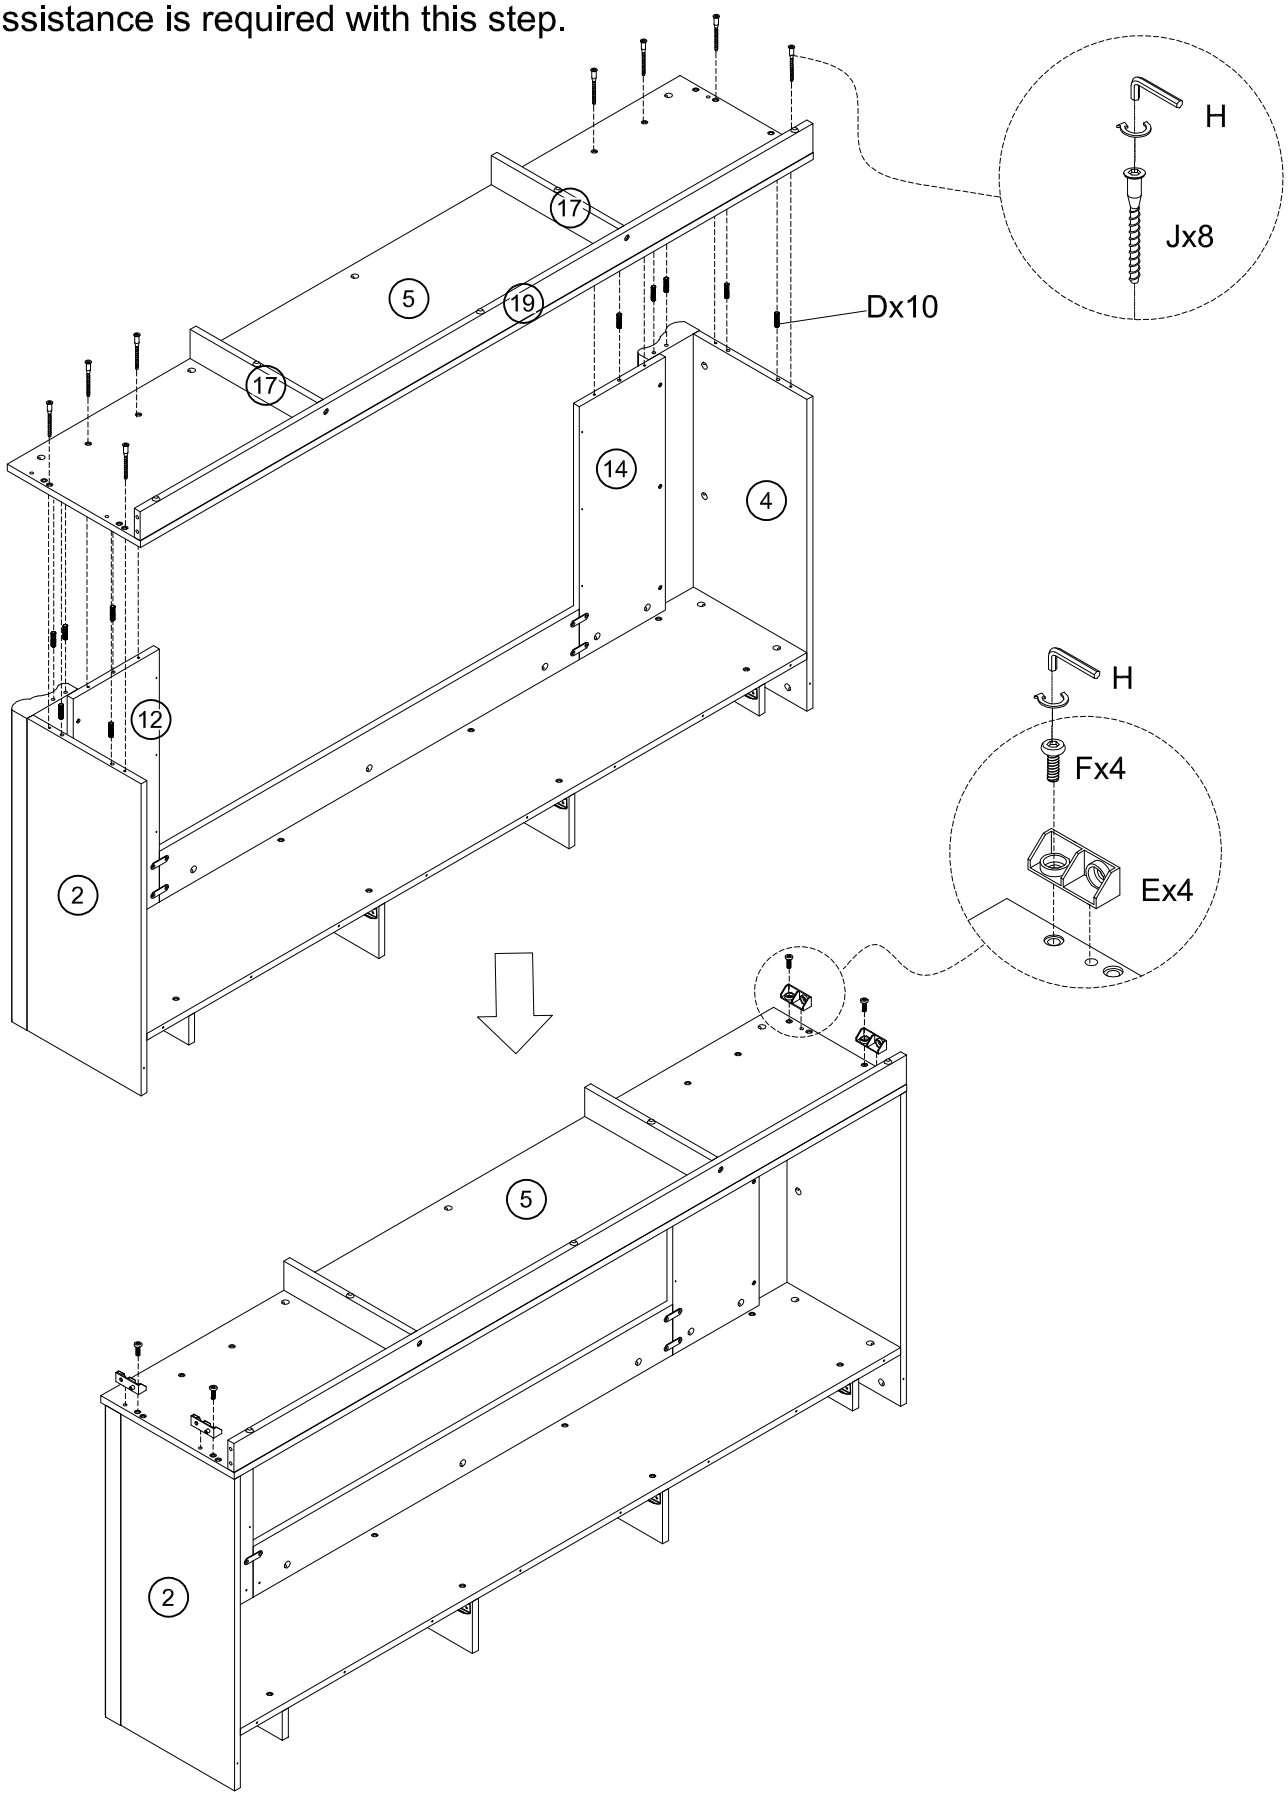


STEP 12

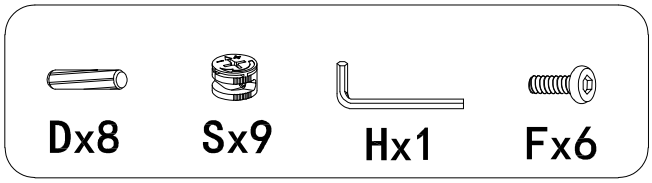

Dx8
Sx9
Hx1
Fx6

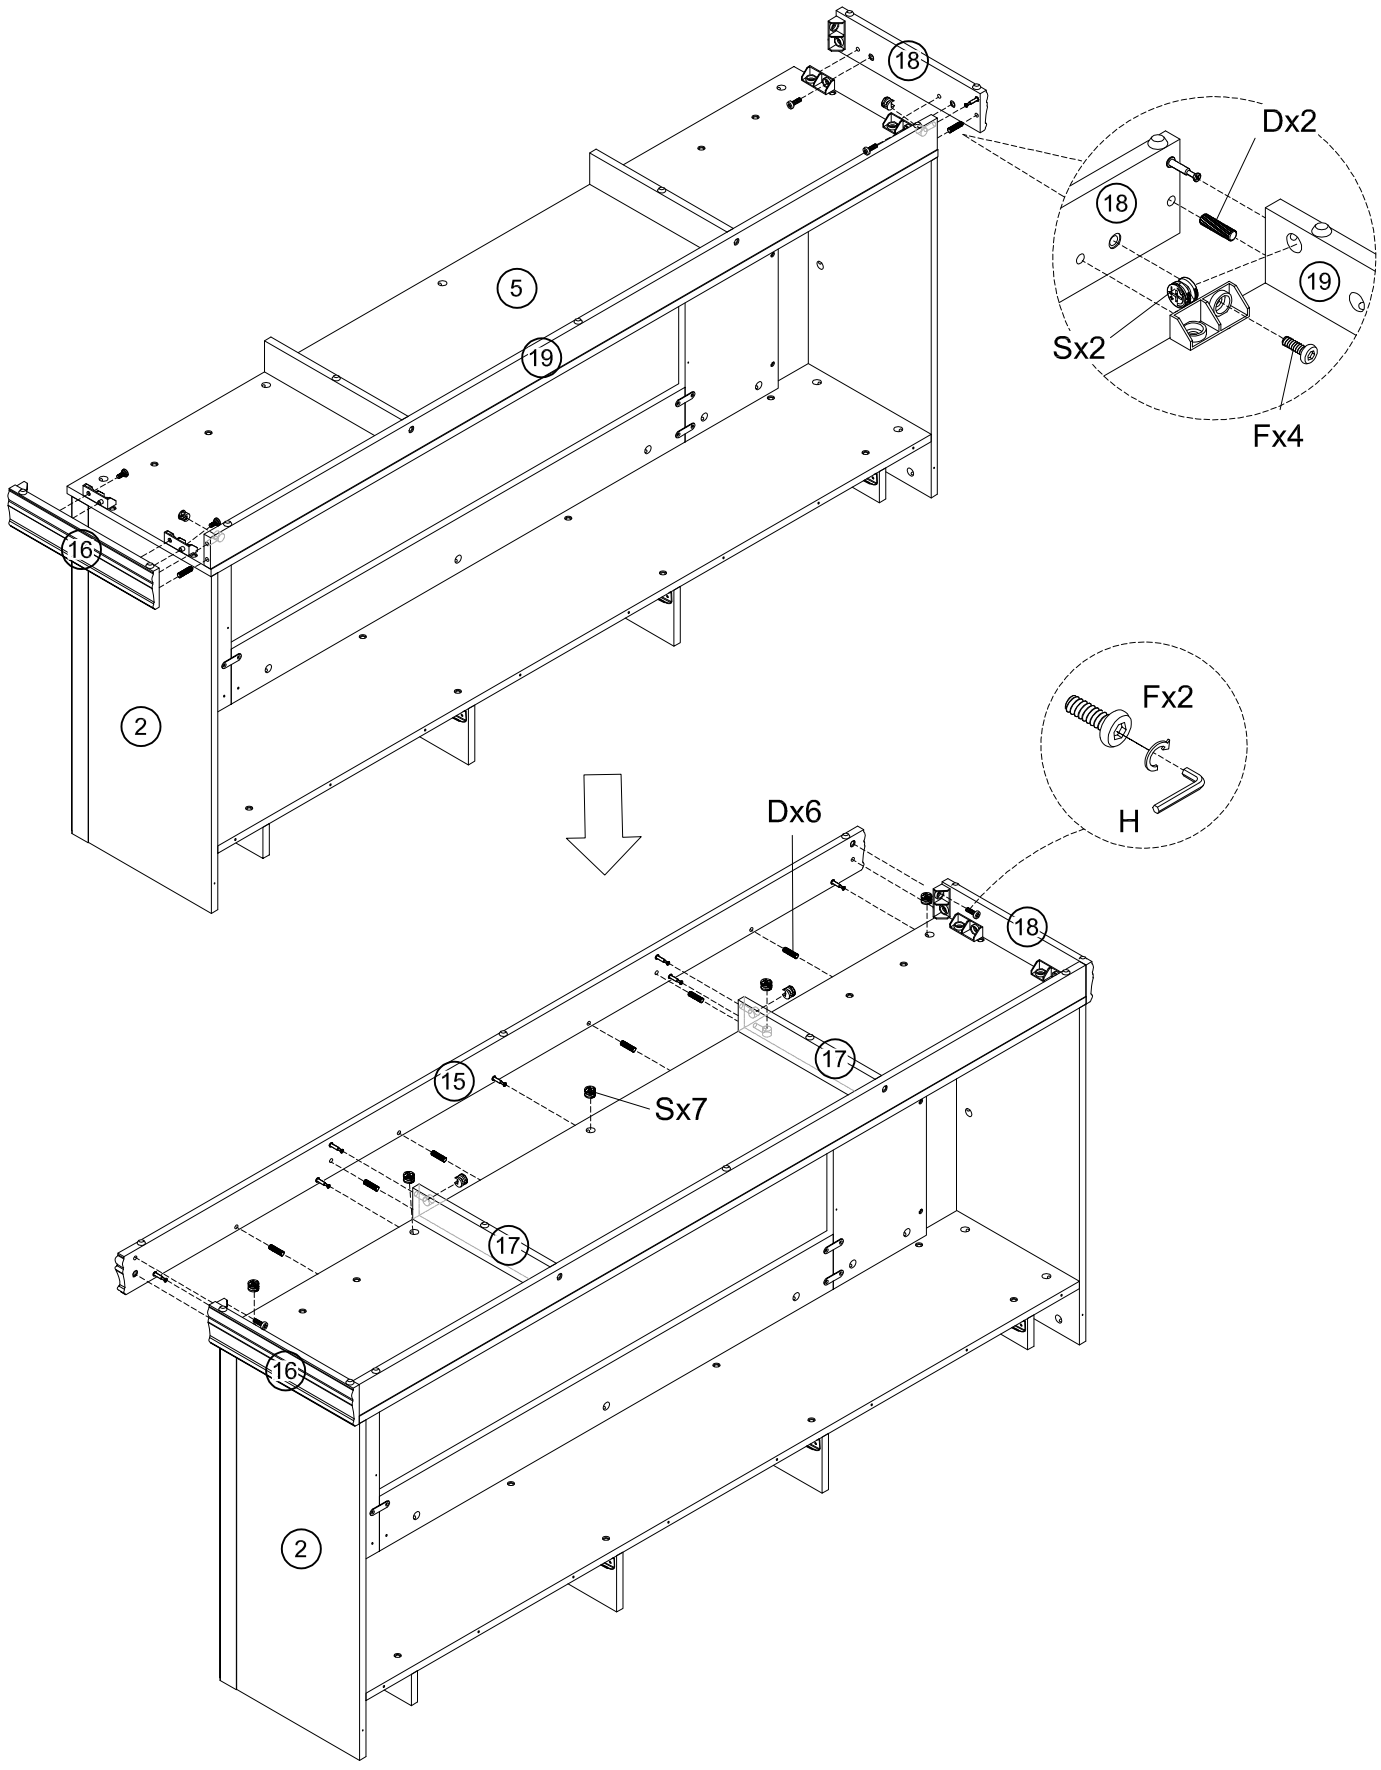
18
Dx2
18
19
Sx2
Fx4
5
19
16
2
Fx2
H
Dx6
18
17
15
Sx7
17
16
2

STEP 13

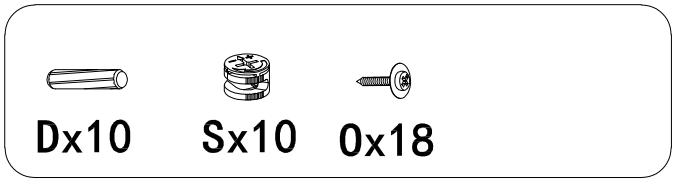


An assistance is required with this step.

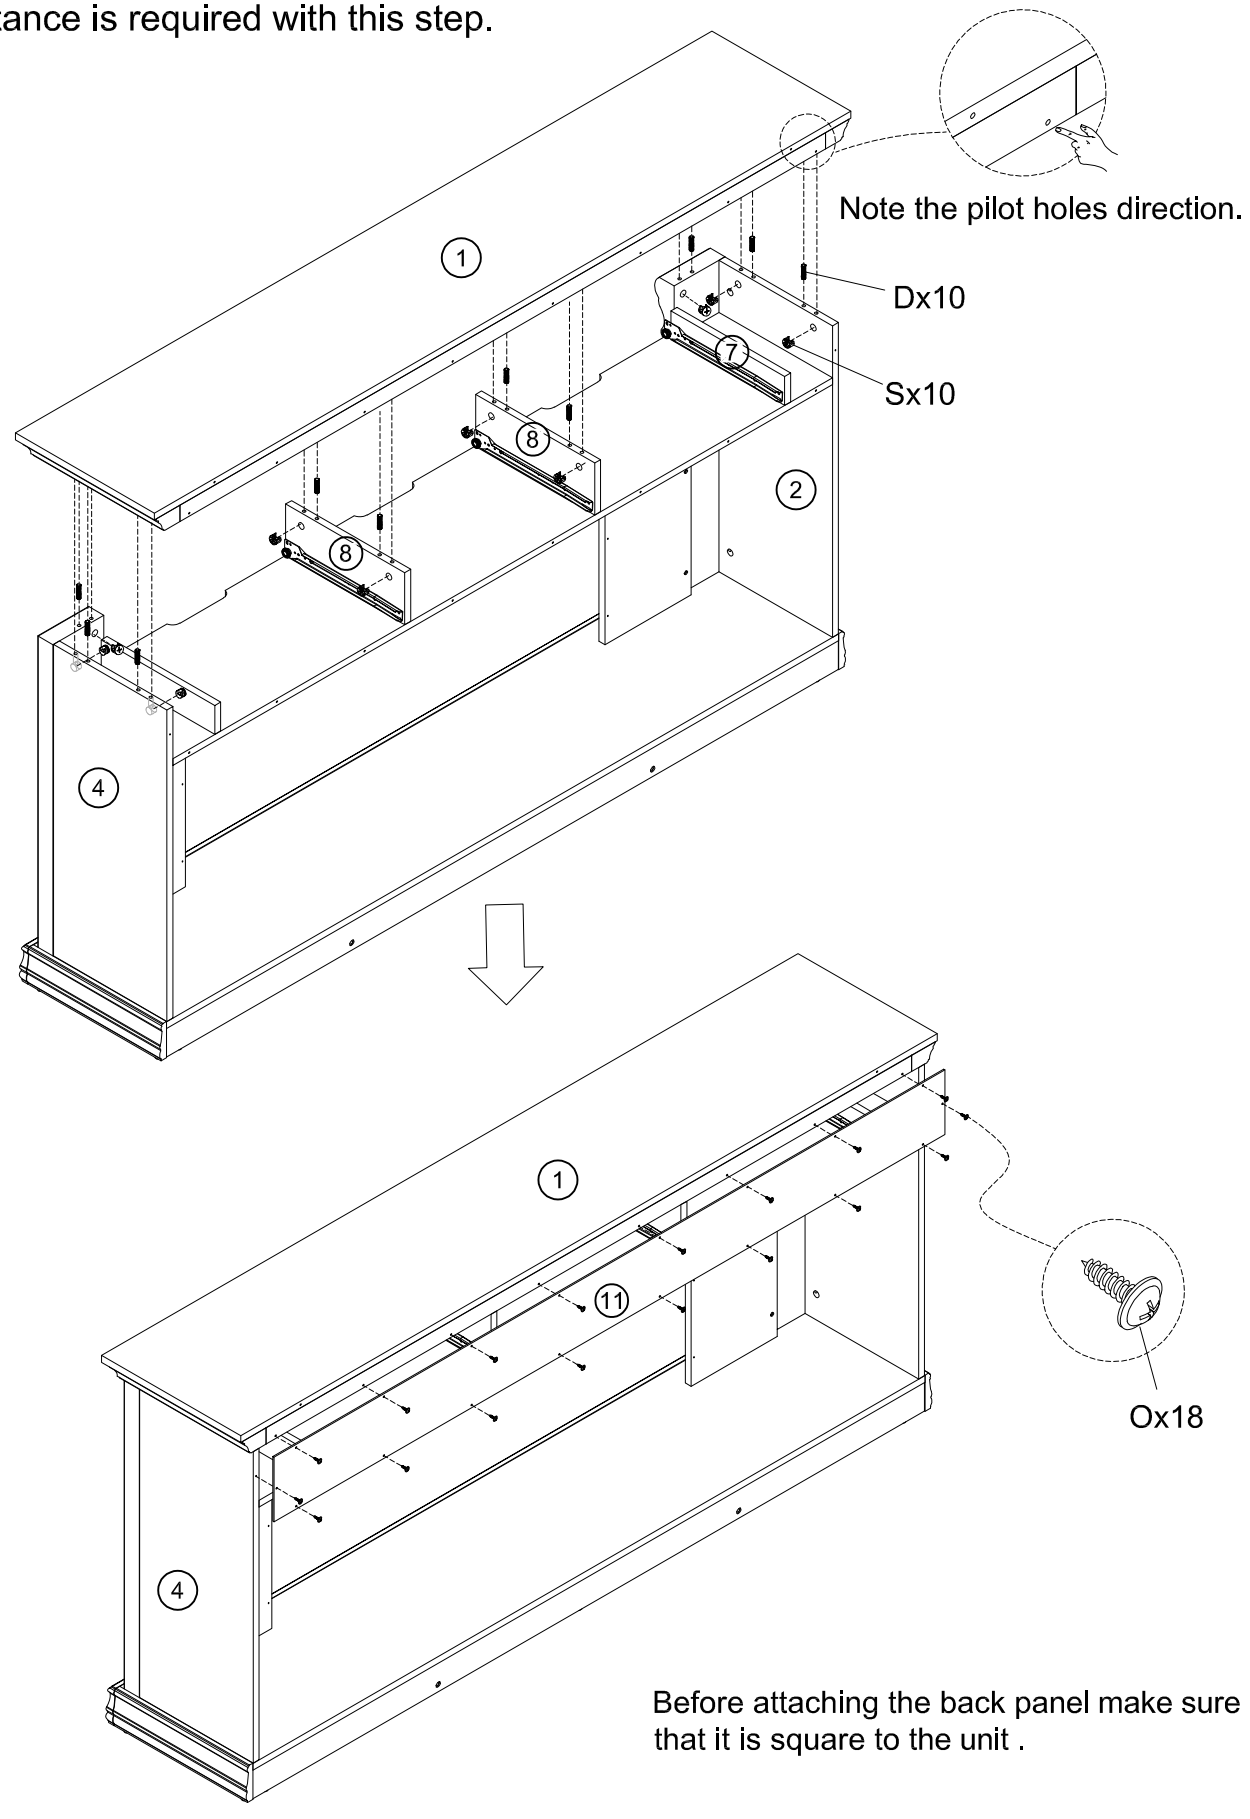


Before attaching the back panel make sure that it is square to the unit .


STEP 14


Tx6

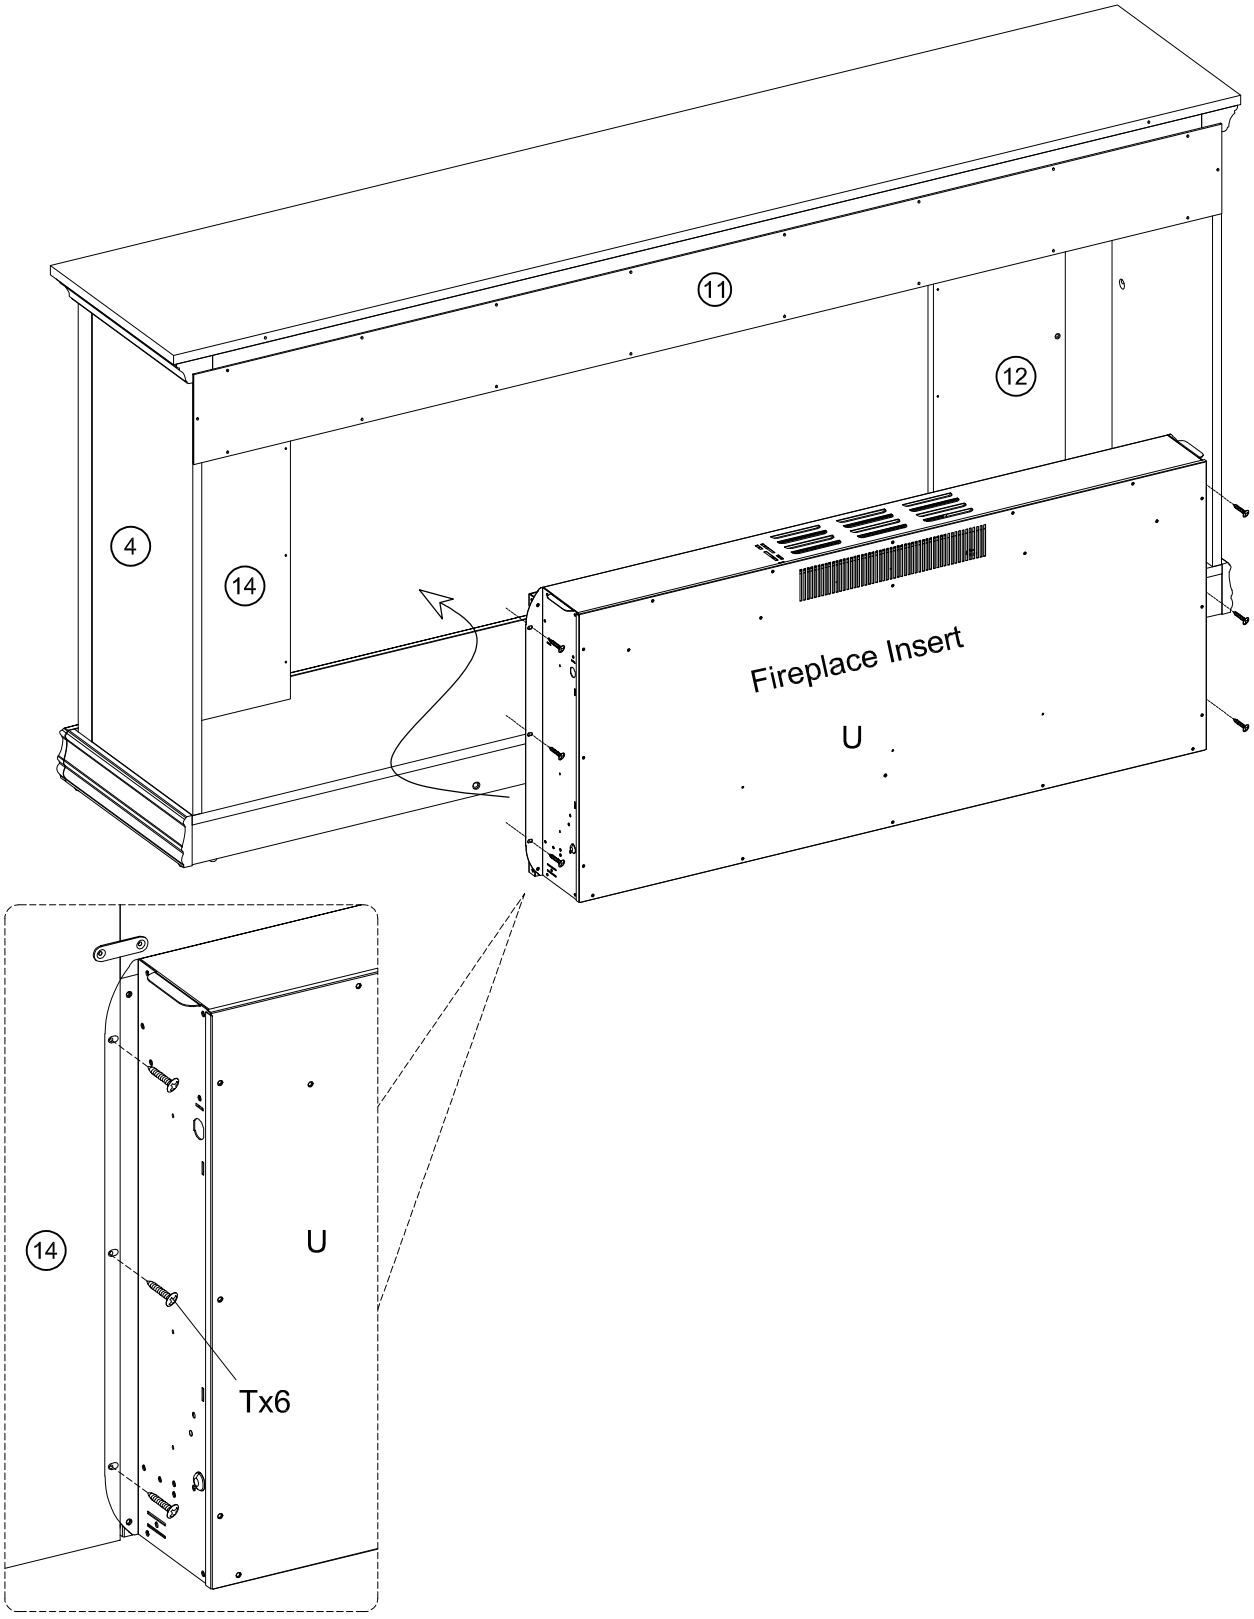



STEP 15

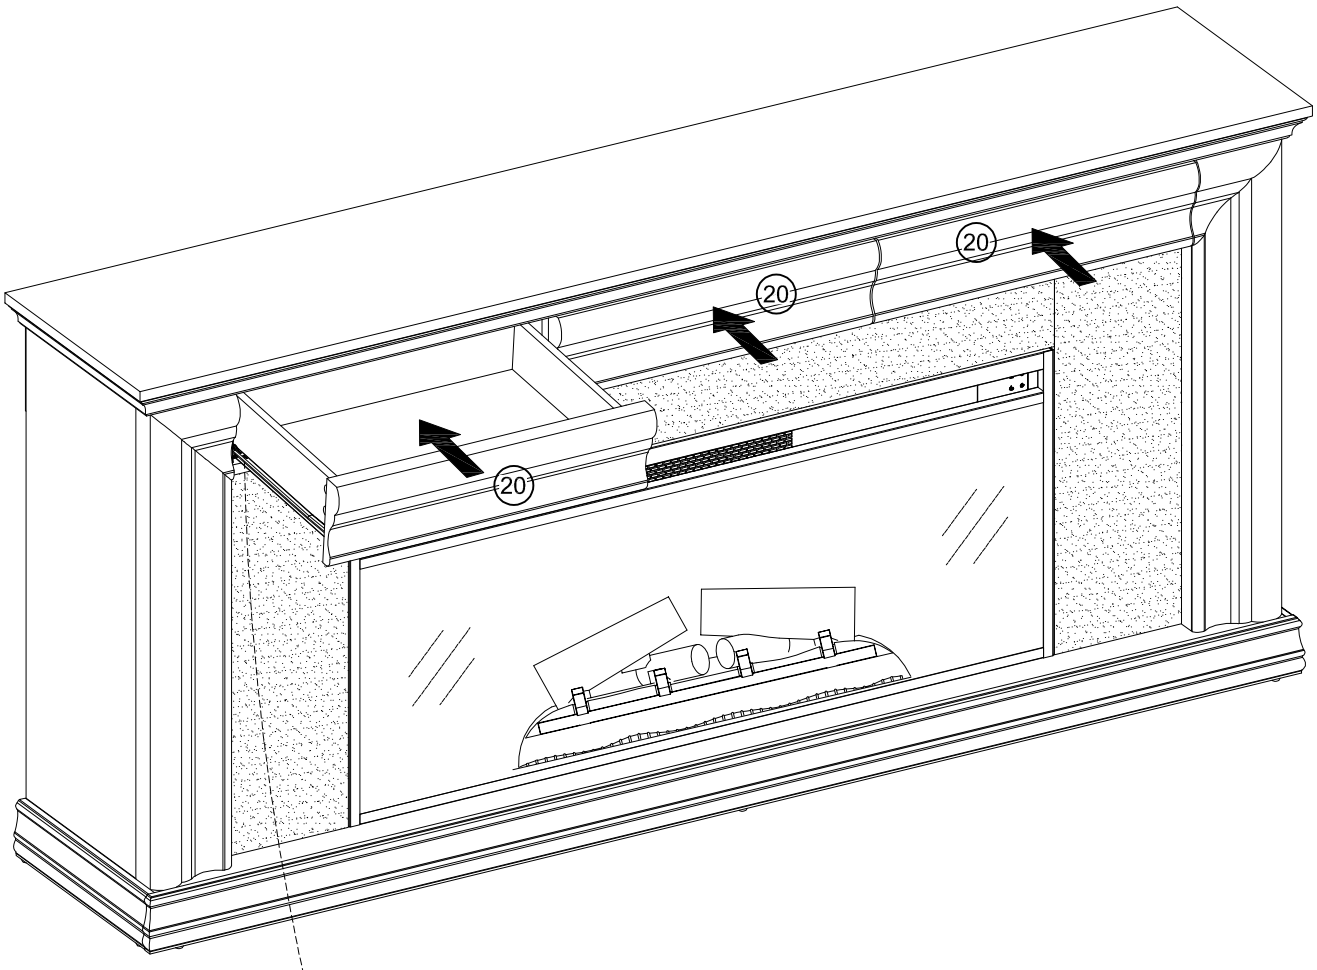

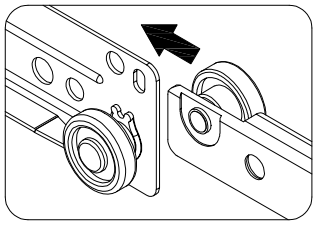


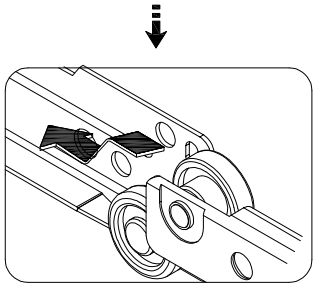

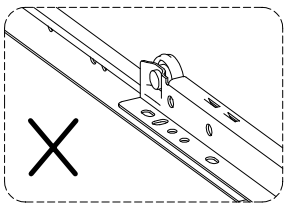

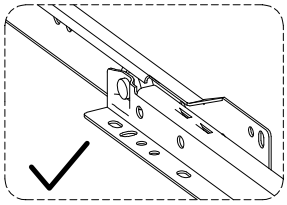



STEP 16

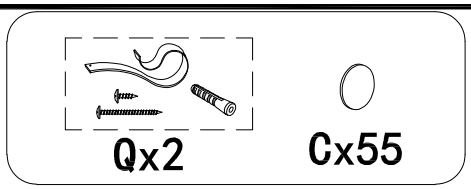


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

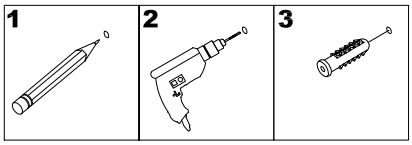

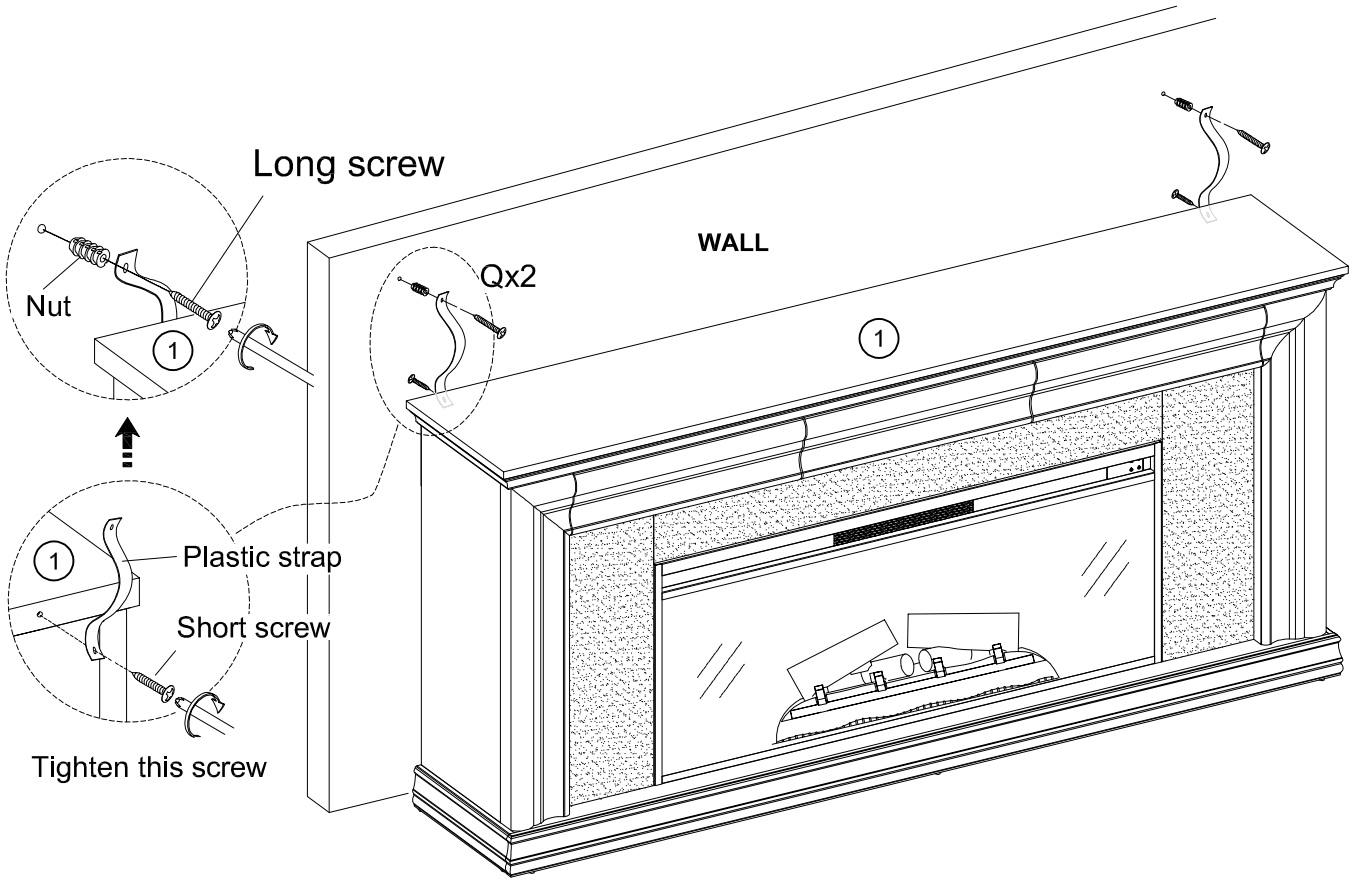

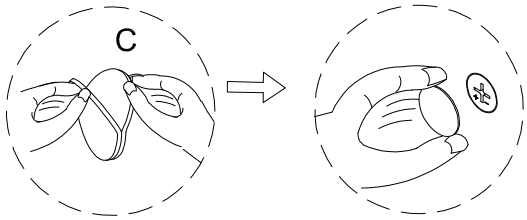

· Stick stickers (C) on cam locks (B)/(S).

Final Assembly