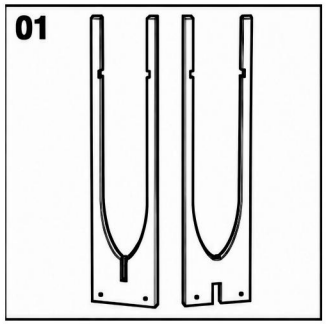
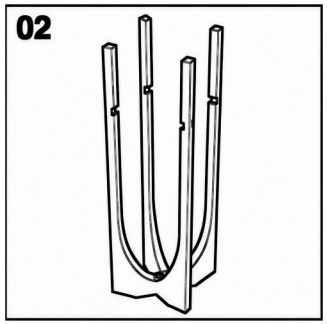
# WOODEN FLOOR LAMP | ASSEMBLY INSTRUCTIONS

## 01 Prepare the frames



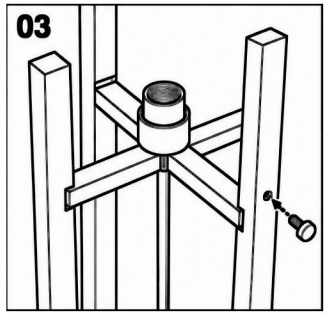

Keep the lamp unplugged. Identify frames A and B and the mating slots at the base. Use a screwdriver that fits the supplied screws.

## 02 Interlock the frames



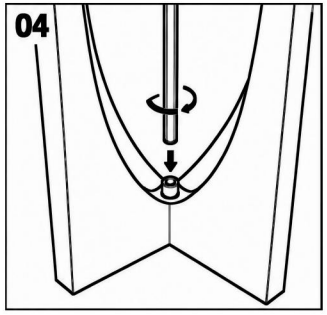

Position the frames at right angles. Align the base slots and slide them fully together. Check that the base is fully seated and the four-post frame is stable.

## 03 Secure the crossbars



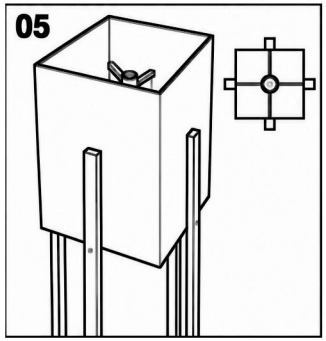

With the socket facing up, seat all four crossbar ends in the inner post slots. Insert and tighten the screws from the outside of all four posts. Do not overtighten.

## 04 Tighten the center rod



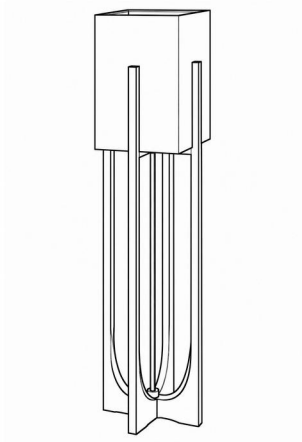

Align the rod with the threaded fitting at the base. Rotate the entire rod to tighten. The cord turns with it: keep the cord loose and free to move. Do not pull, pinch or tangle it.

## 05 Install the shade




Place the shade between the posts and tighten the shade retaining ring. Each post must sit OUTSIDE the shade, at the CENTER of a flat side, not at a corner.

## 06 Complete assembly



Fit a bulb matching the lamp label. Check that the frame is stable, all connections are secure and the cord is not pinched. Then plug in the lamp.

Dry indoor use only. Do not connect to a dimmer. Unplug and let the bulb cool before maintenance.