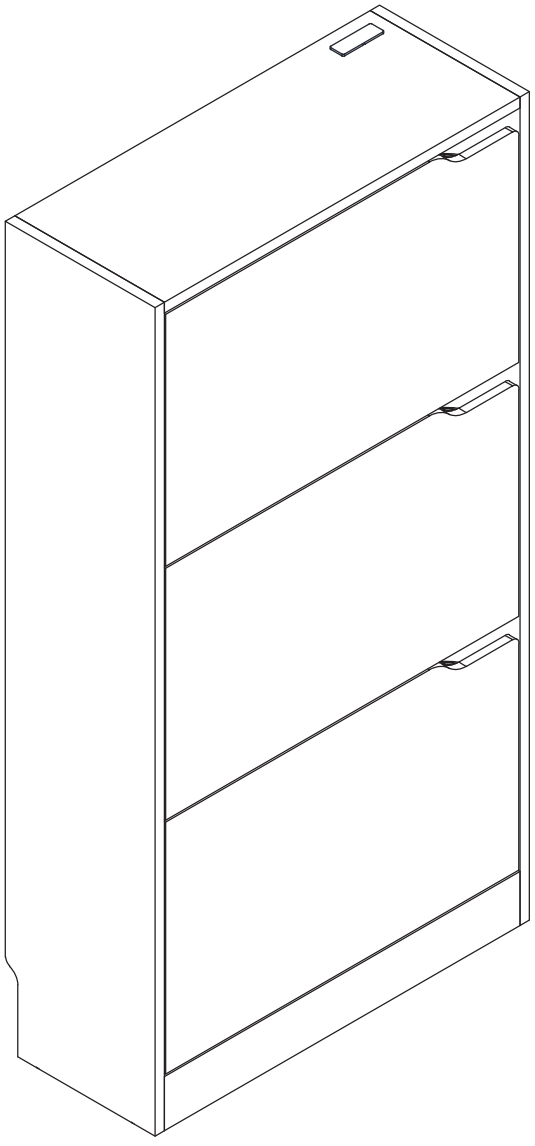
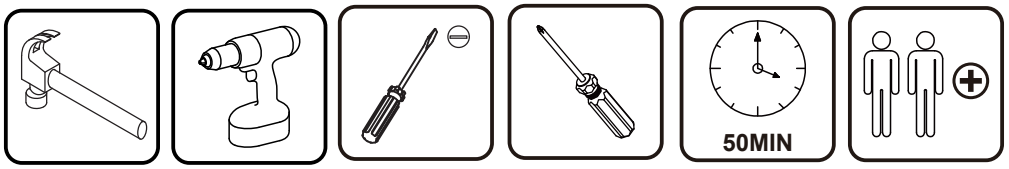
HLG134

Version : 1.3





***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!

---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!

If you're experiencing any issues—whether due to shipping, assembly, or any other reason —we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.

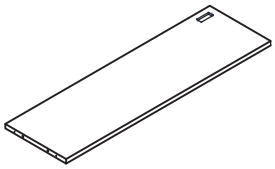
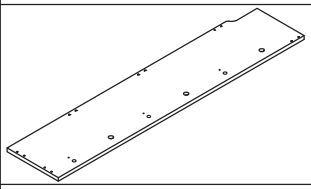
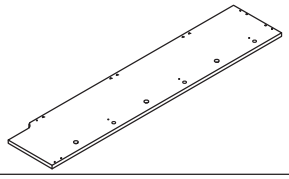



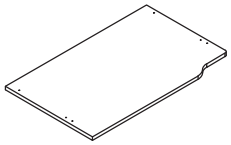
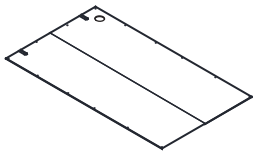

WhatsApp

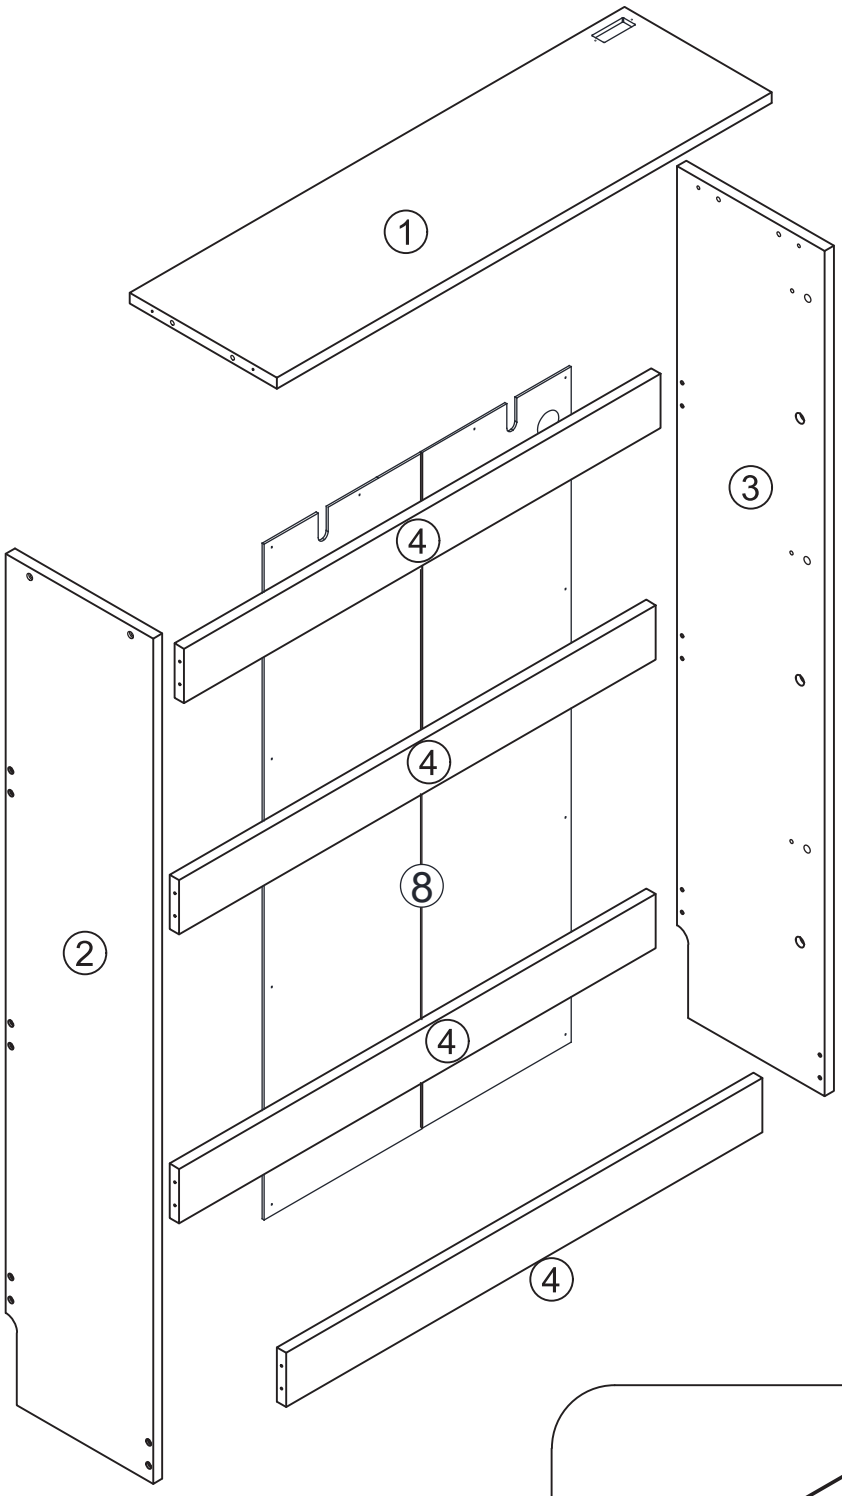
Email: service@furnlog.com

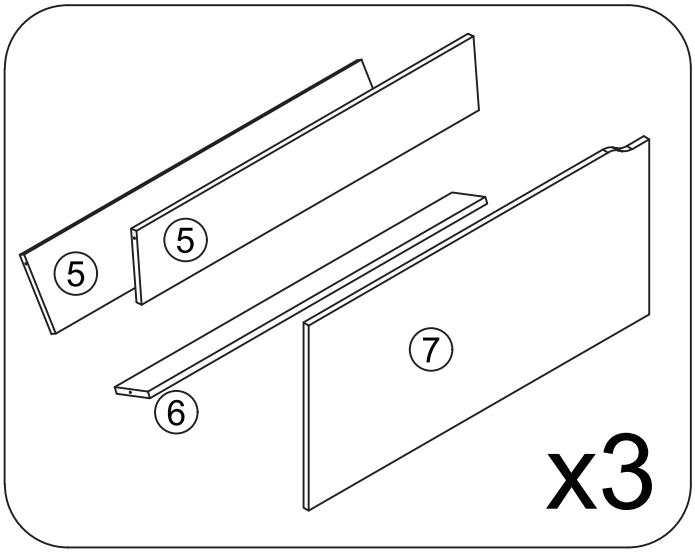
WANT TO CONTACT US THROUGH AMAZON?

- Log in to your Amazon account.
- Go to “Your Orders" and locate your furniture order.
- Click on“Get Help with Order” to send us a message directly.

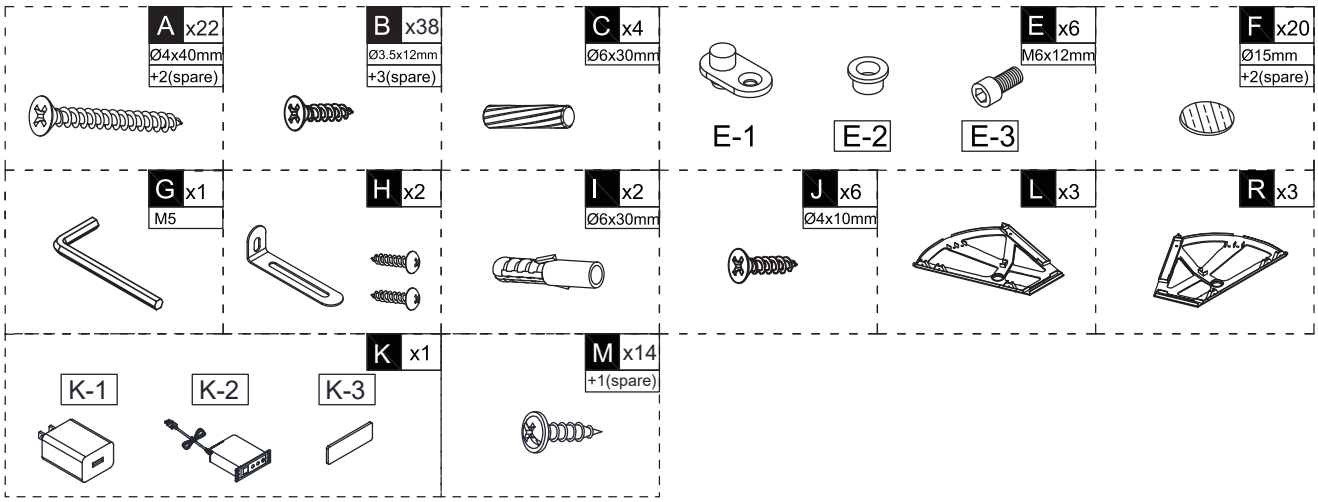
Our customer support team is ready to assist you and we will respond within 12-24 HOURS to resolve your concerns quickly!

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x4	
⑤		x6	
⑥		x3	
⑦		x3	
⑧		x1	
	 Hardware Kit	x1	

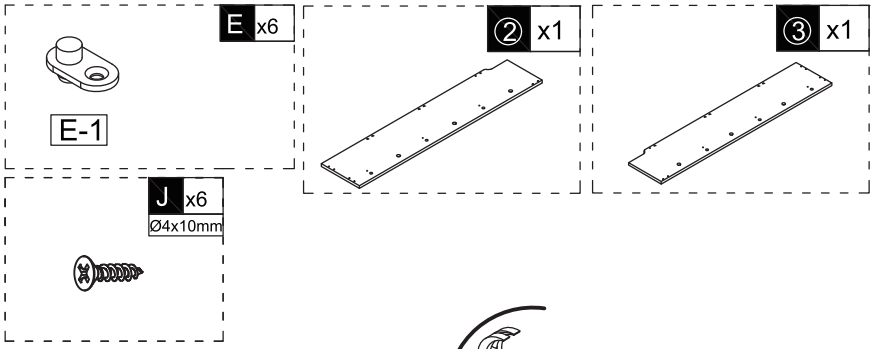

1
3
4
4
8
2
4
4

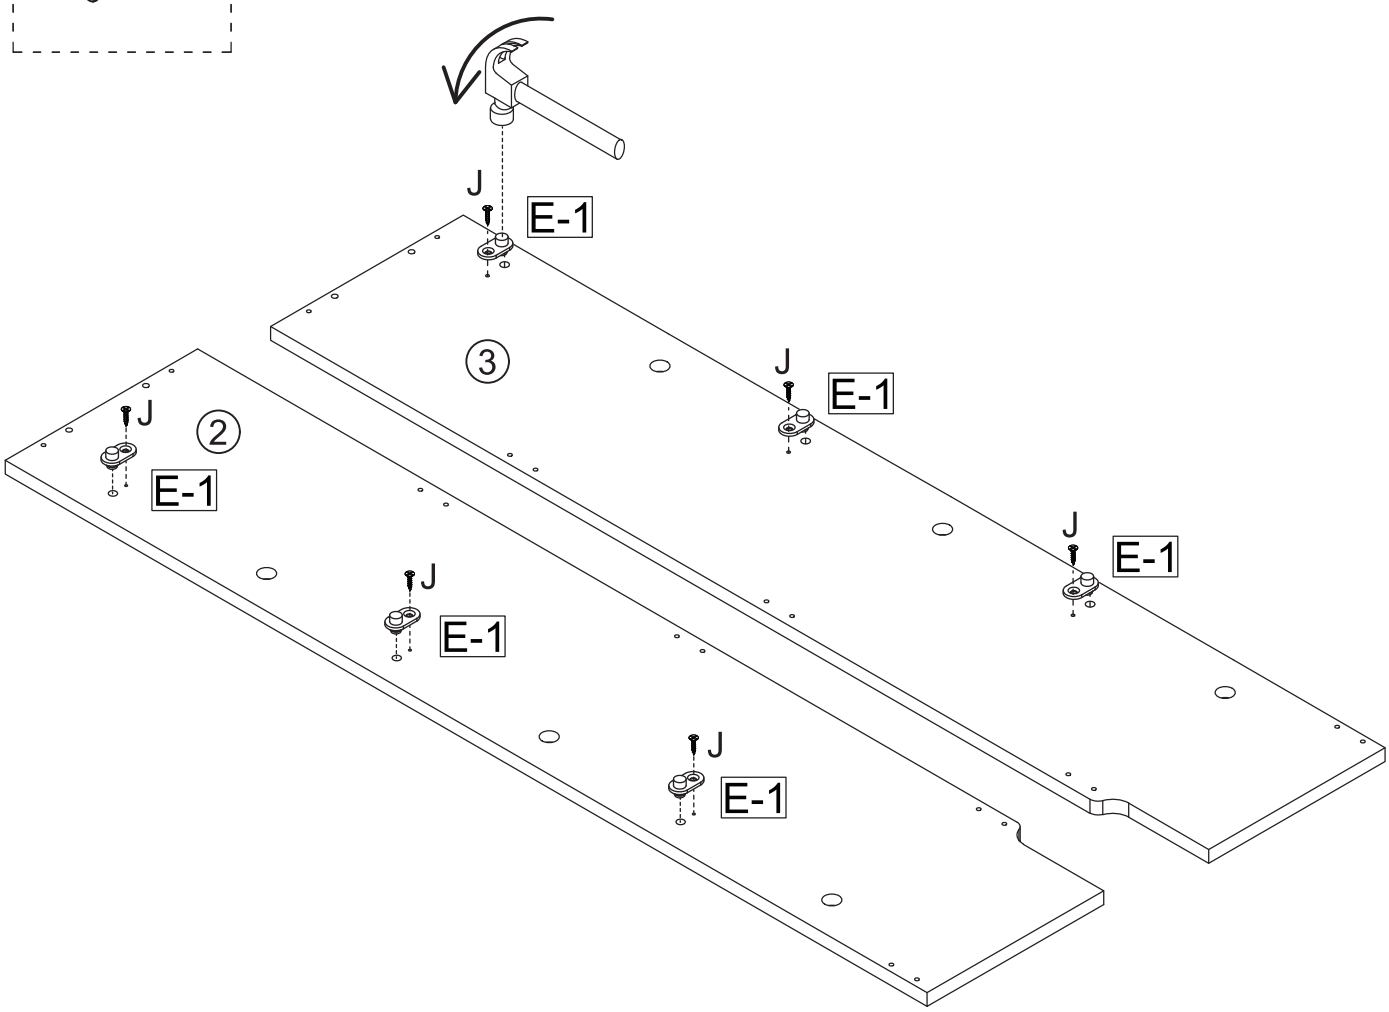

5
5
7
6
x3

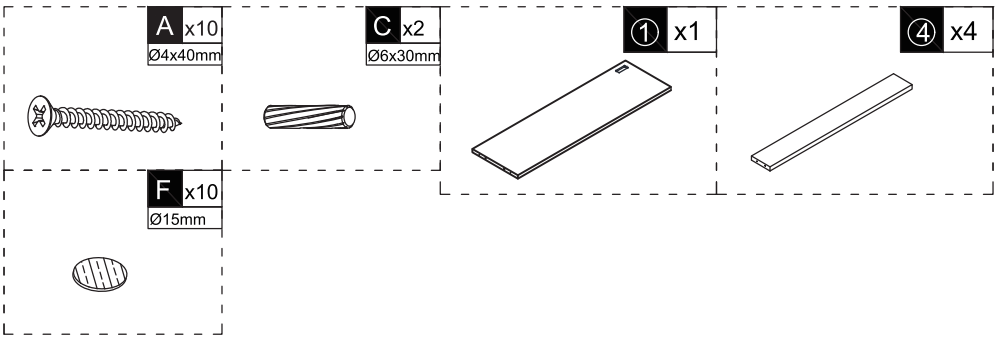
HARDWARE

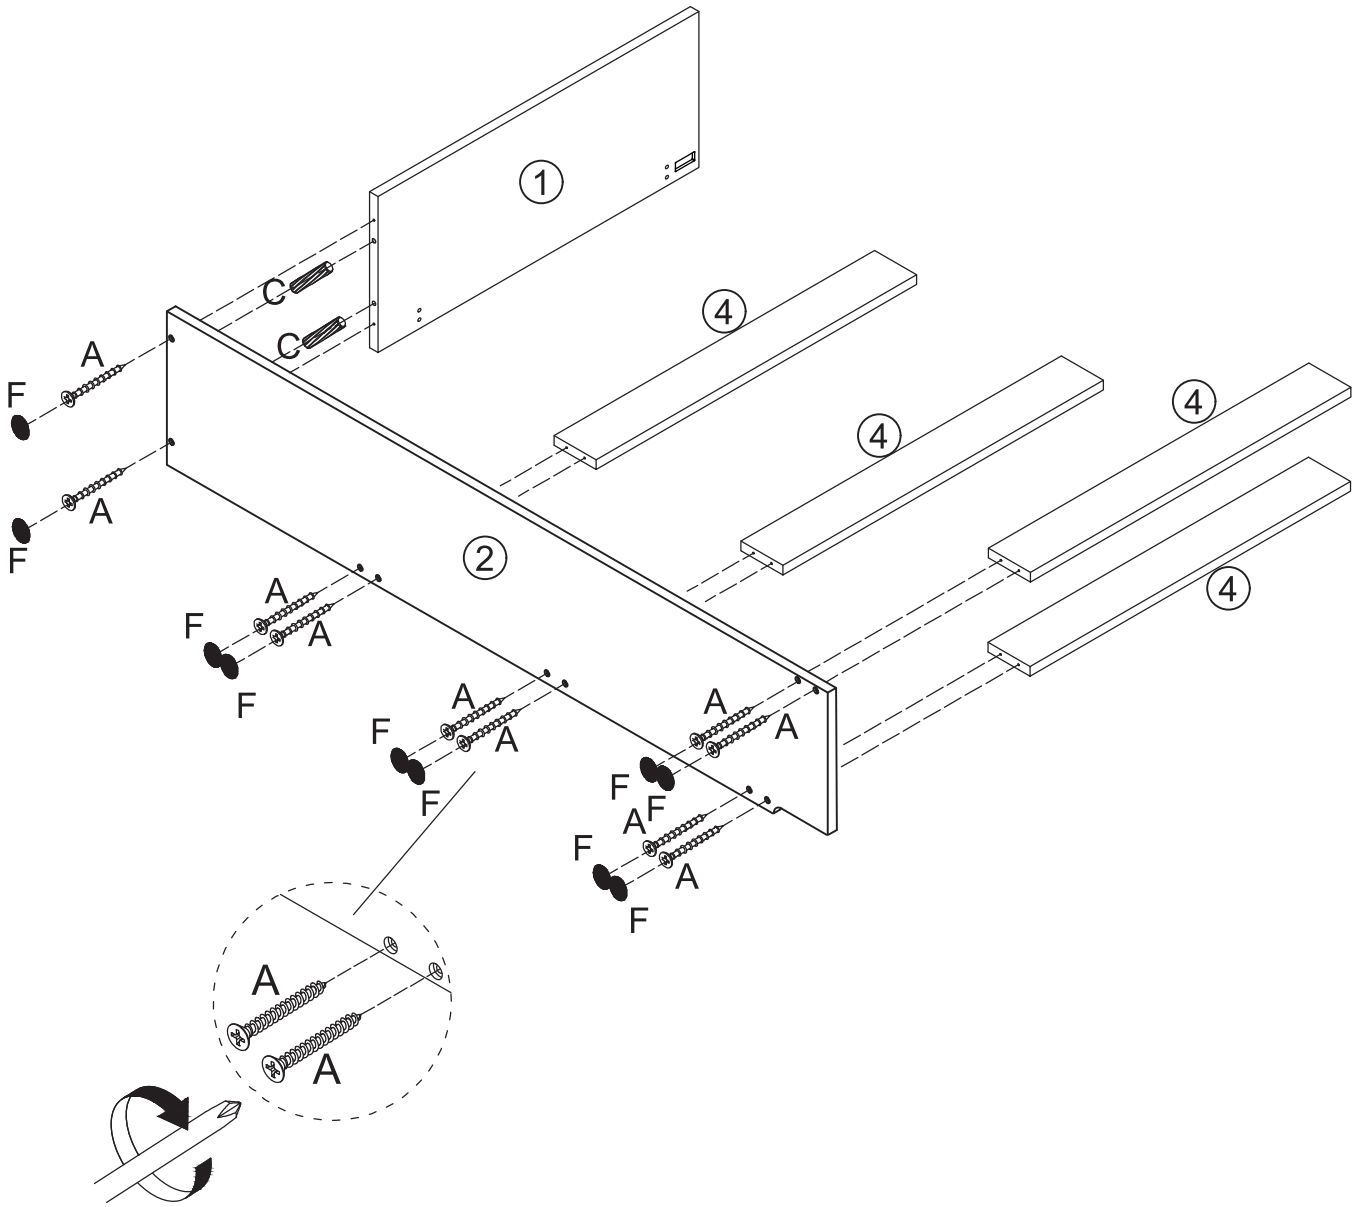

A x22
Ø4x40mm
+2(spare)
B x38
Ø3.5x12mm
+3(spare)
C x4
Ø6x30mm
E x6
M6x12mm
F x20
Ø15mm
+2(spare)
E-1
E-2
E-3
G x1
M5
H x2
I x2
Ø6x30mm
J x6
Ø4x10mm
L x3
R x3
K x1
K-1
K-2
K-3
M x14
+1(spare)

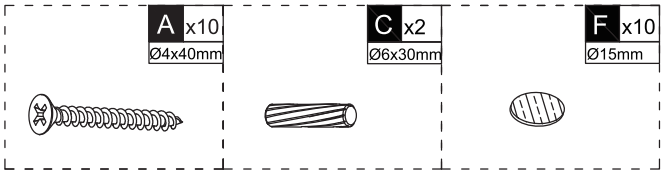
01

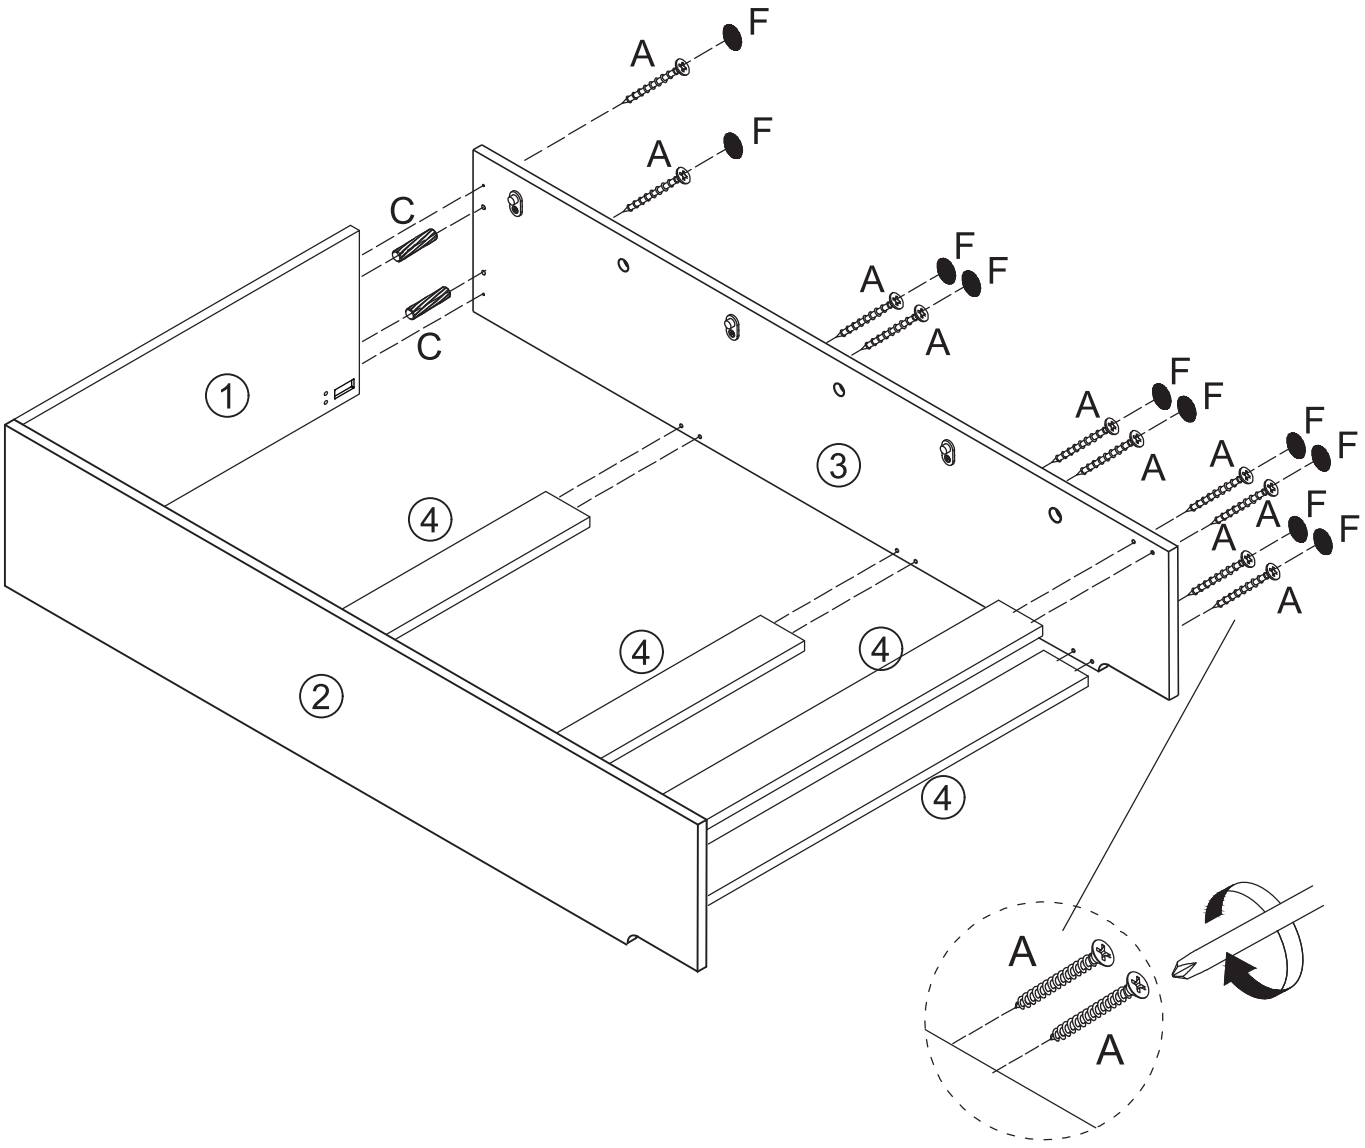

E x6
E-1
② x1
③ x1
J x6
Ø4x10mm

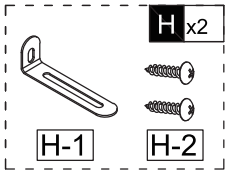

J
E-1
③
②

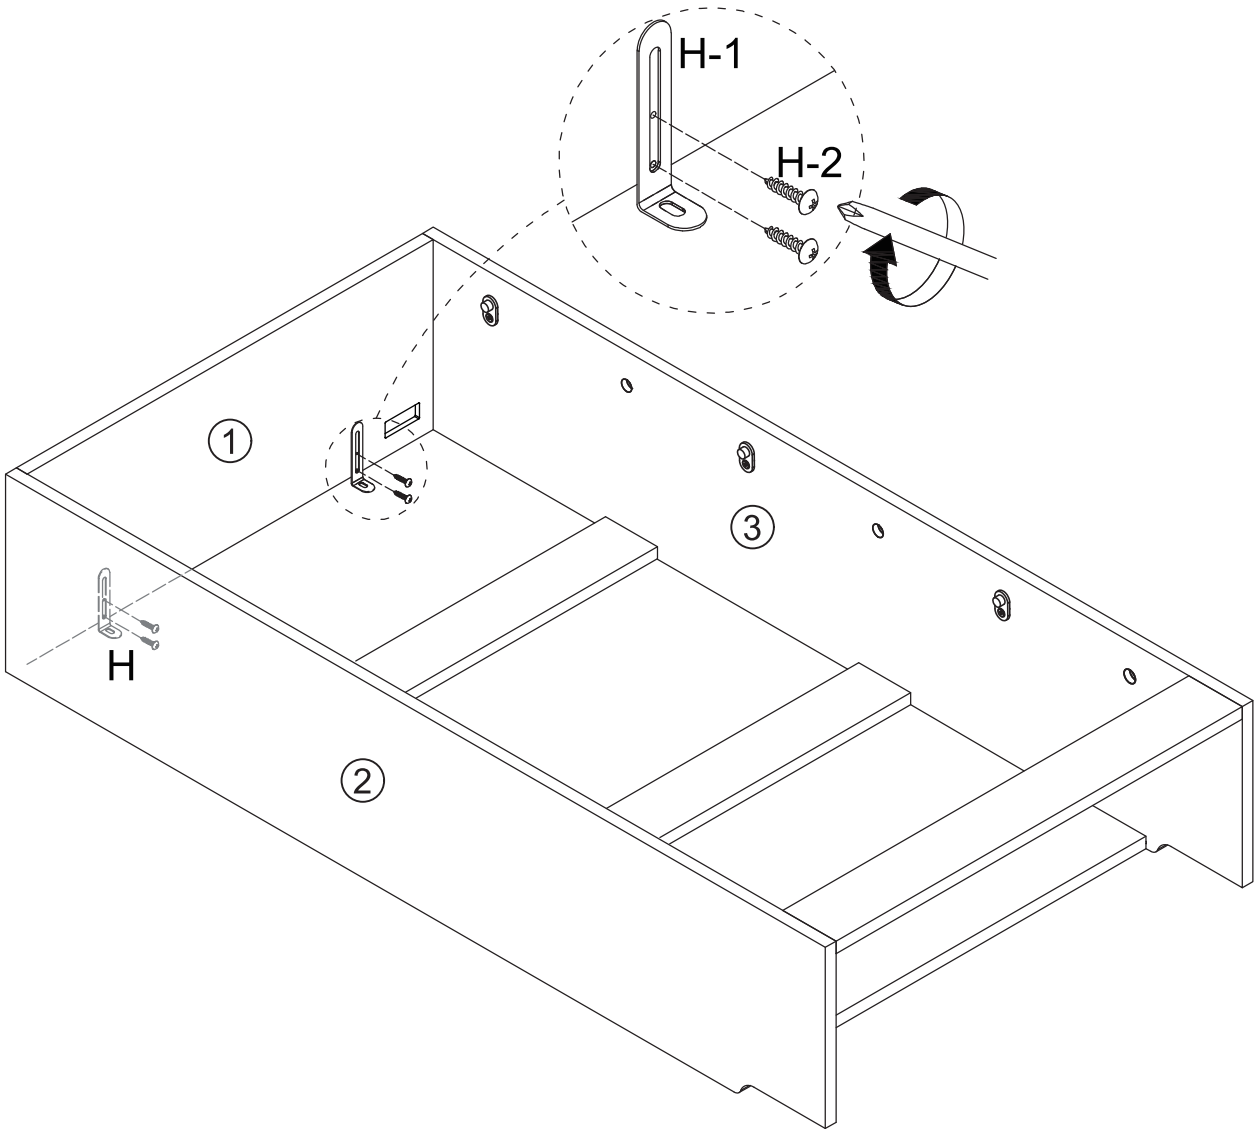

A x10
Ø4x40mm
C x2
Ø6x30mm
① x1
④ x4
F x10
Ø15mm

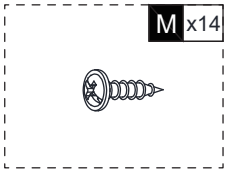

①
C
C
④
④
④
④
A
F
A
F
②
A
F
A
F
A
F
A
F
A
F
A
F
A
F
A
A

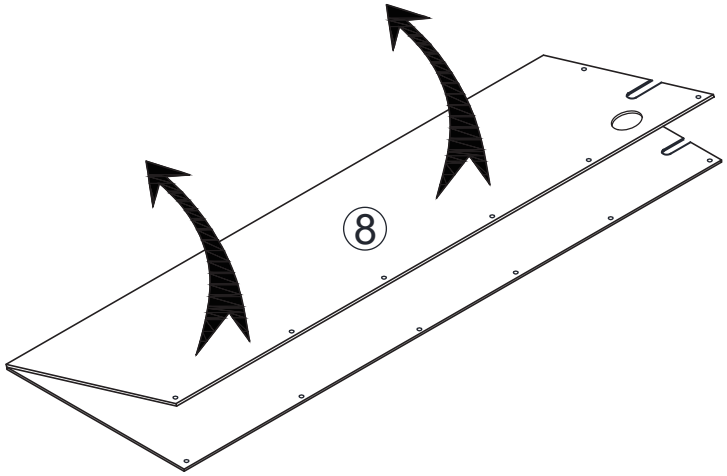

A x10
Ø4x40mm
C x2
Ø6x30mm
F x10
Ø15mm

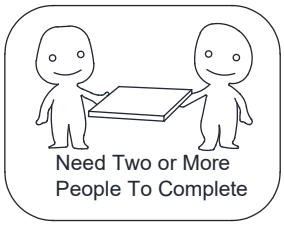

A
F
C
1
2
3
4


H x2
H-1
H-2


H-1
H-2
1
2
3
H

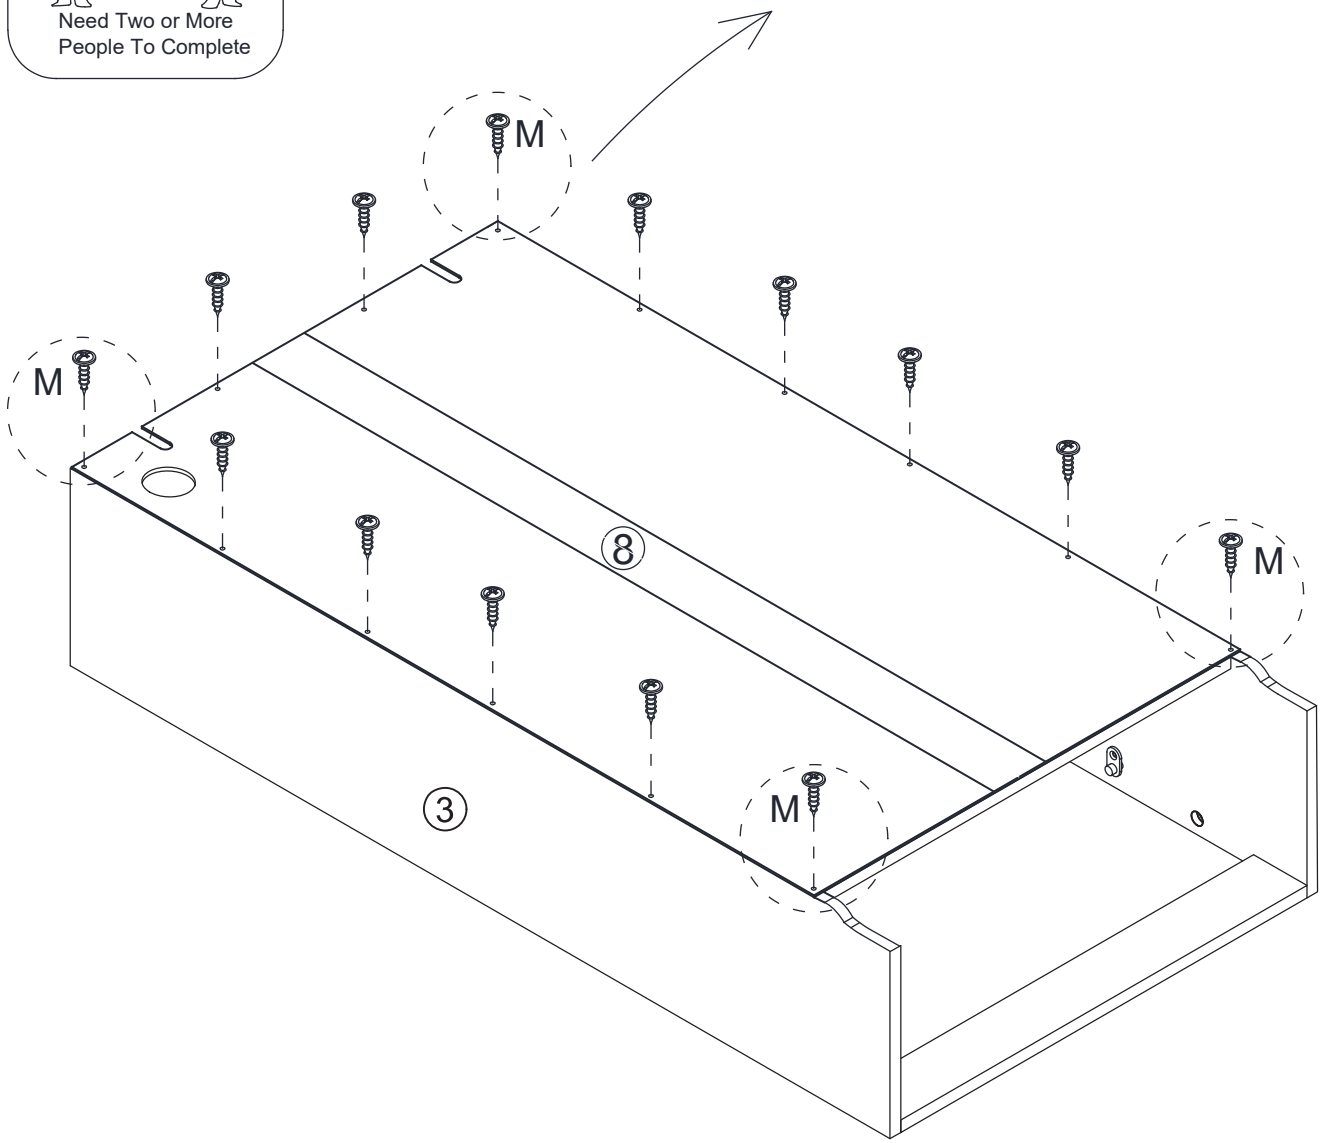


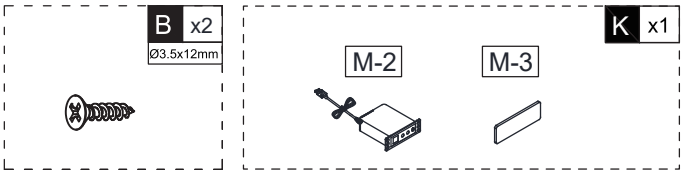


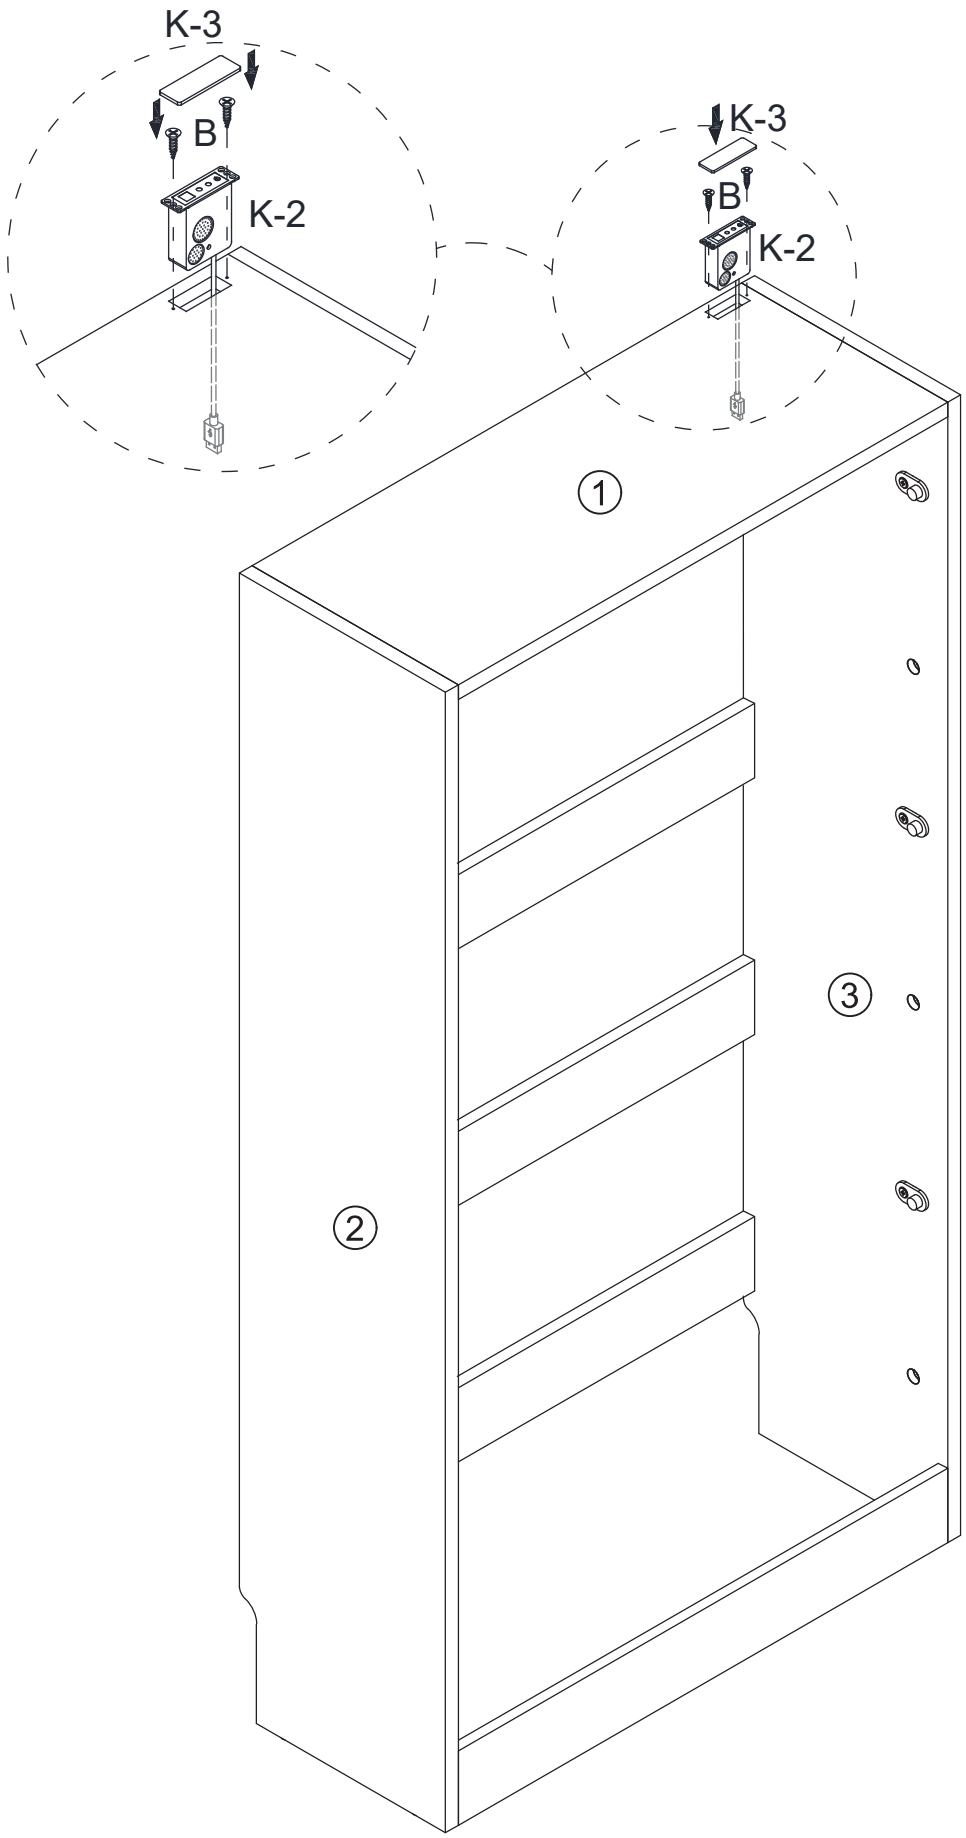




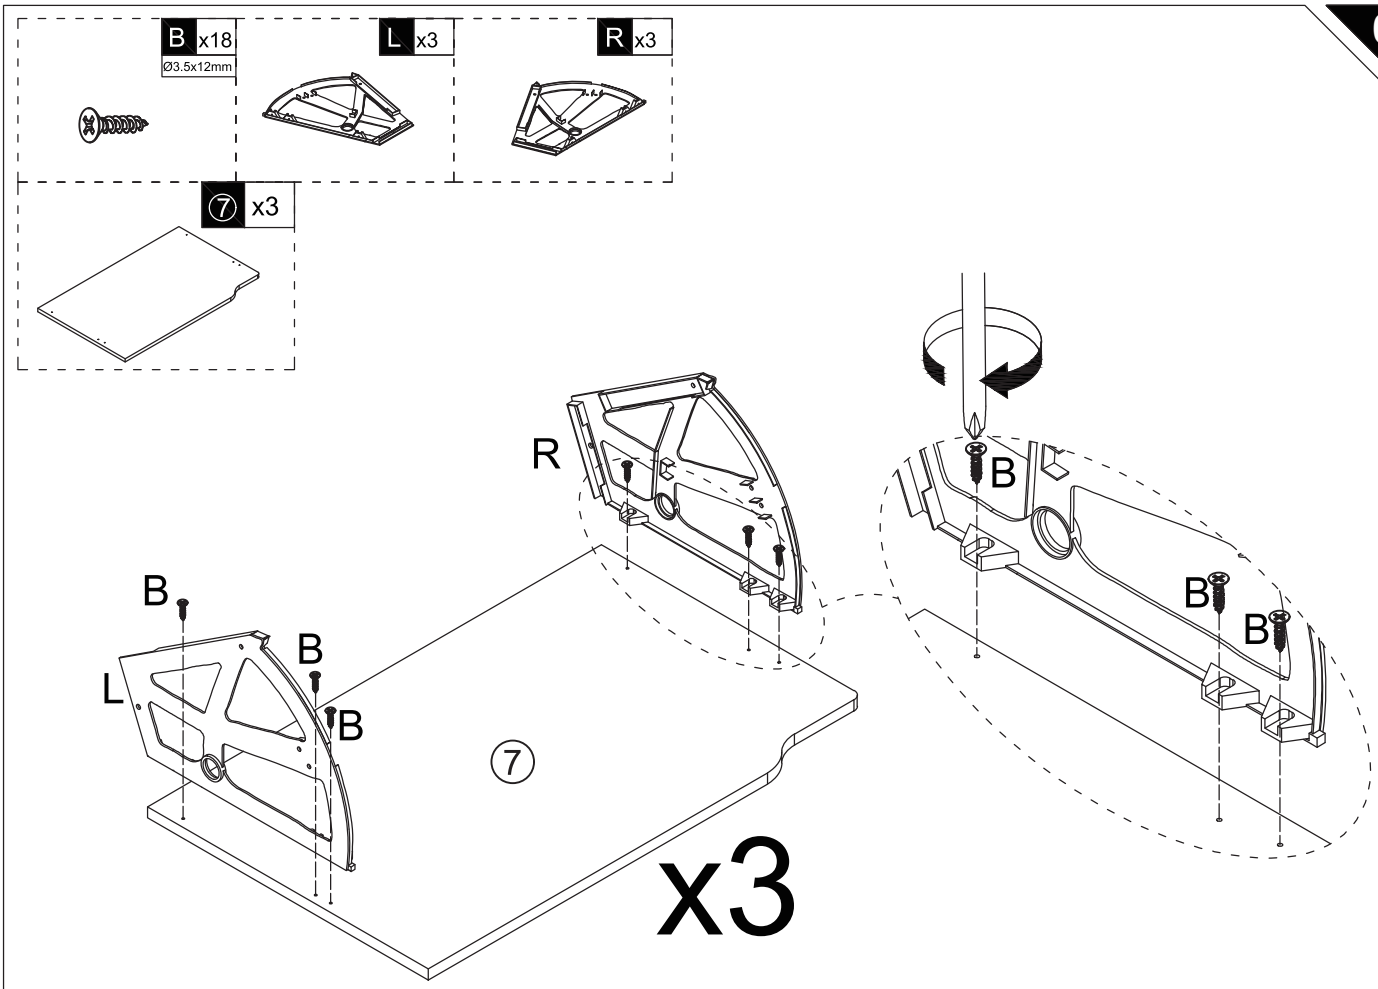
When the diagonals are equal, please first install the screws at the marked positions to fix the backboard, and then proceed to install the remaining screws. Otherwise, installation may cause the backboard to tilt.



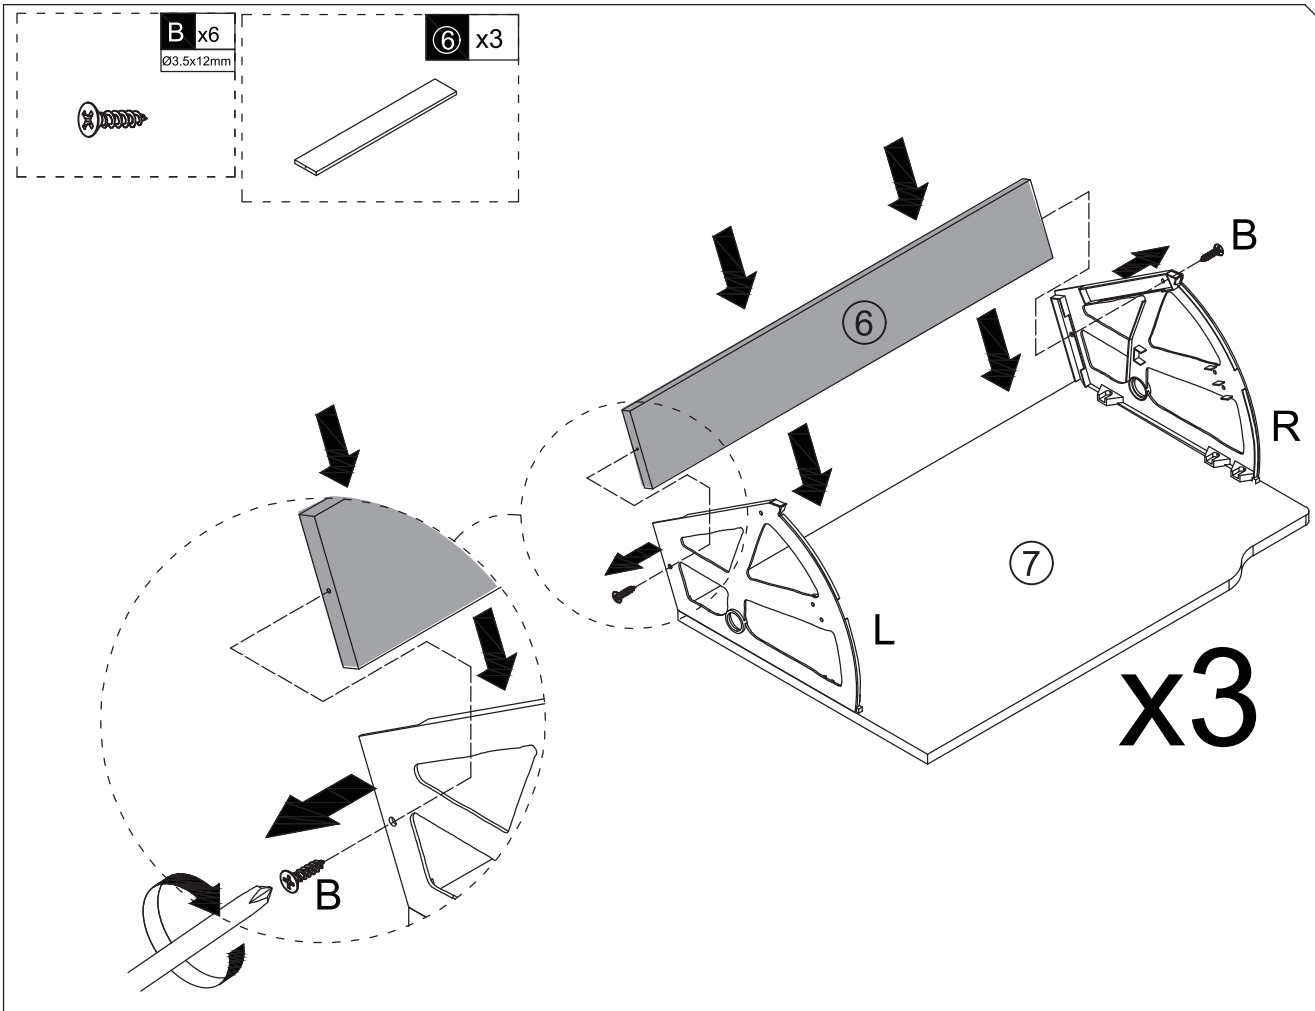

B x2
Ø3.5x12mm
K x1
M-2
M-3


K-3
B
K-2
K-3
B
K-2
1
2
3

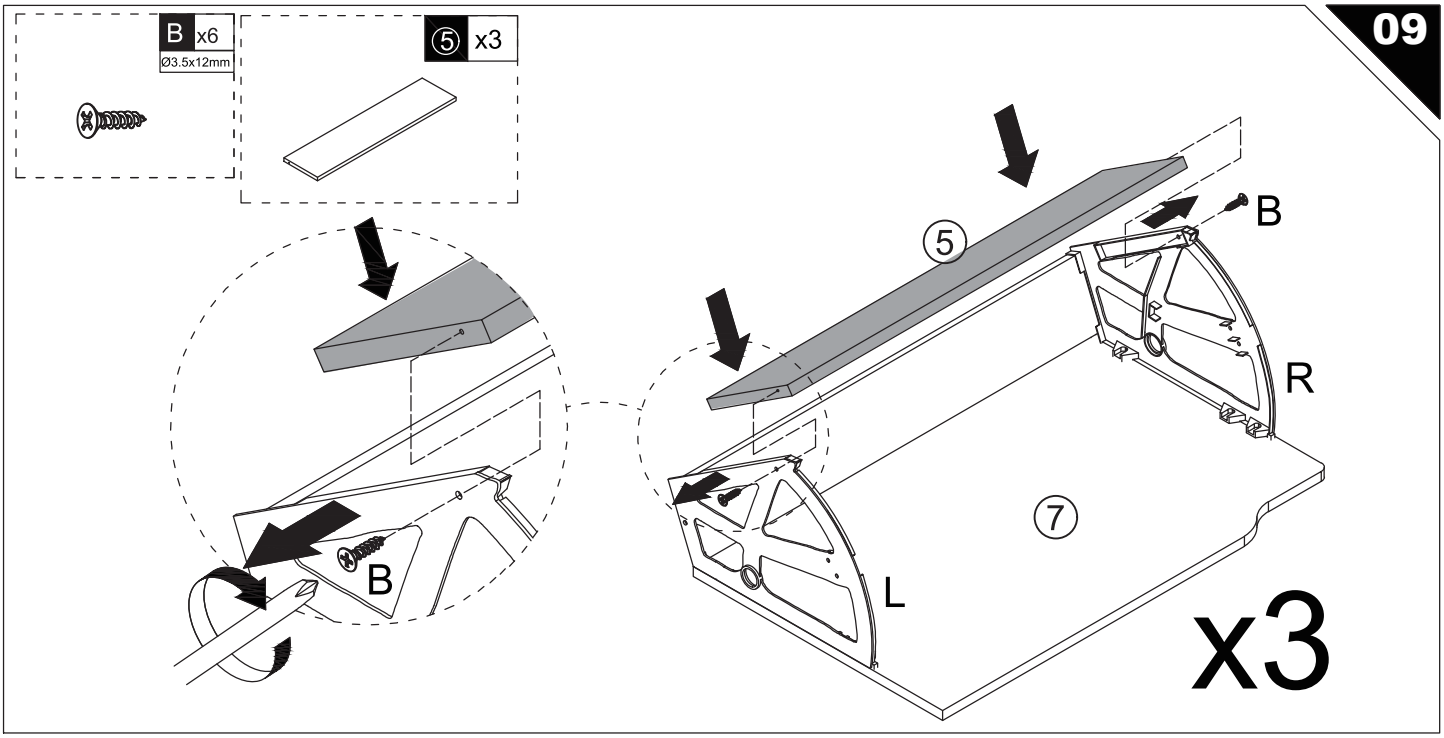
07


B x18
Ø3.5x12mm
L x3
R x3
⑦ x3
R
B
B
B
B
B
L
⑦
x3

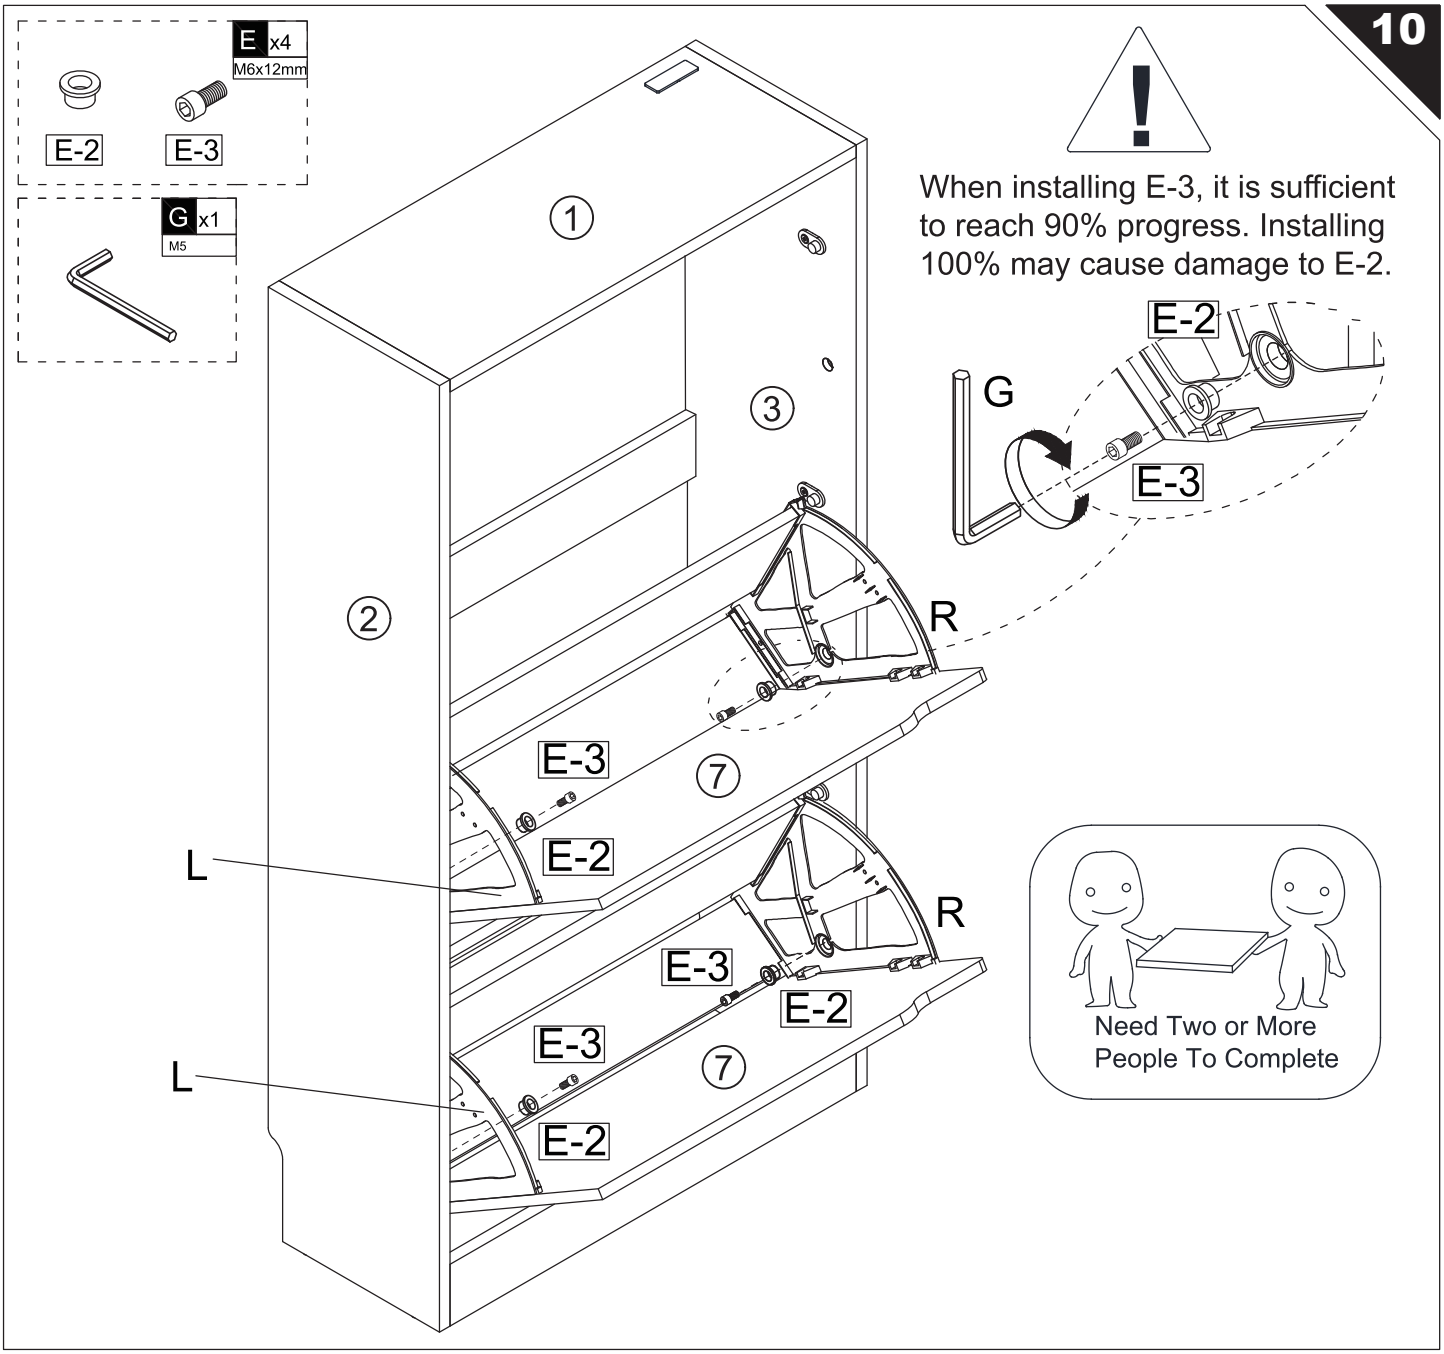
08

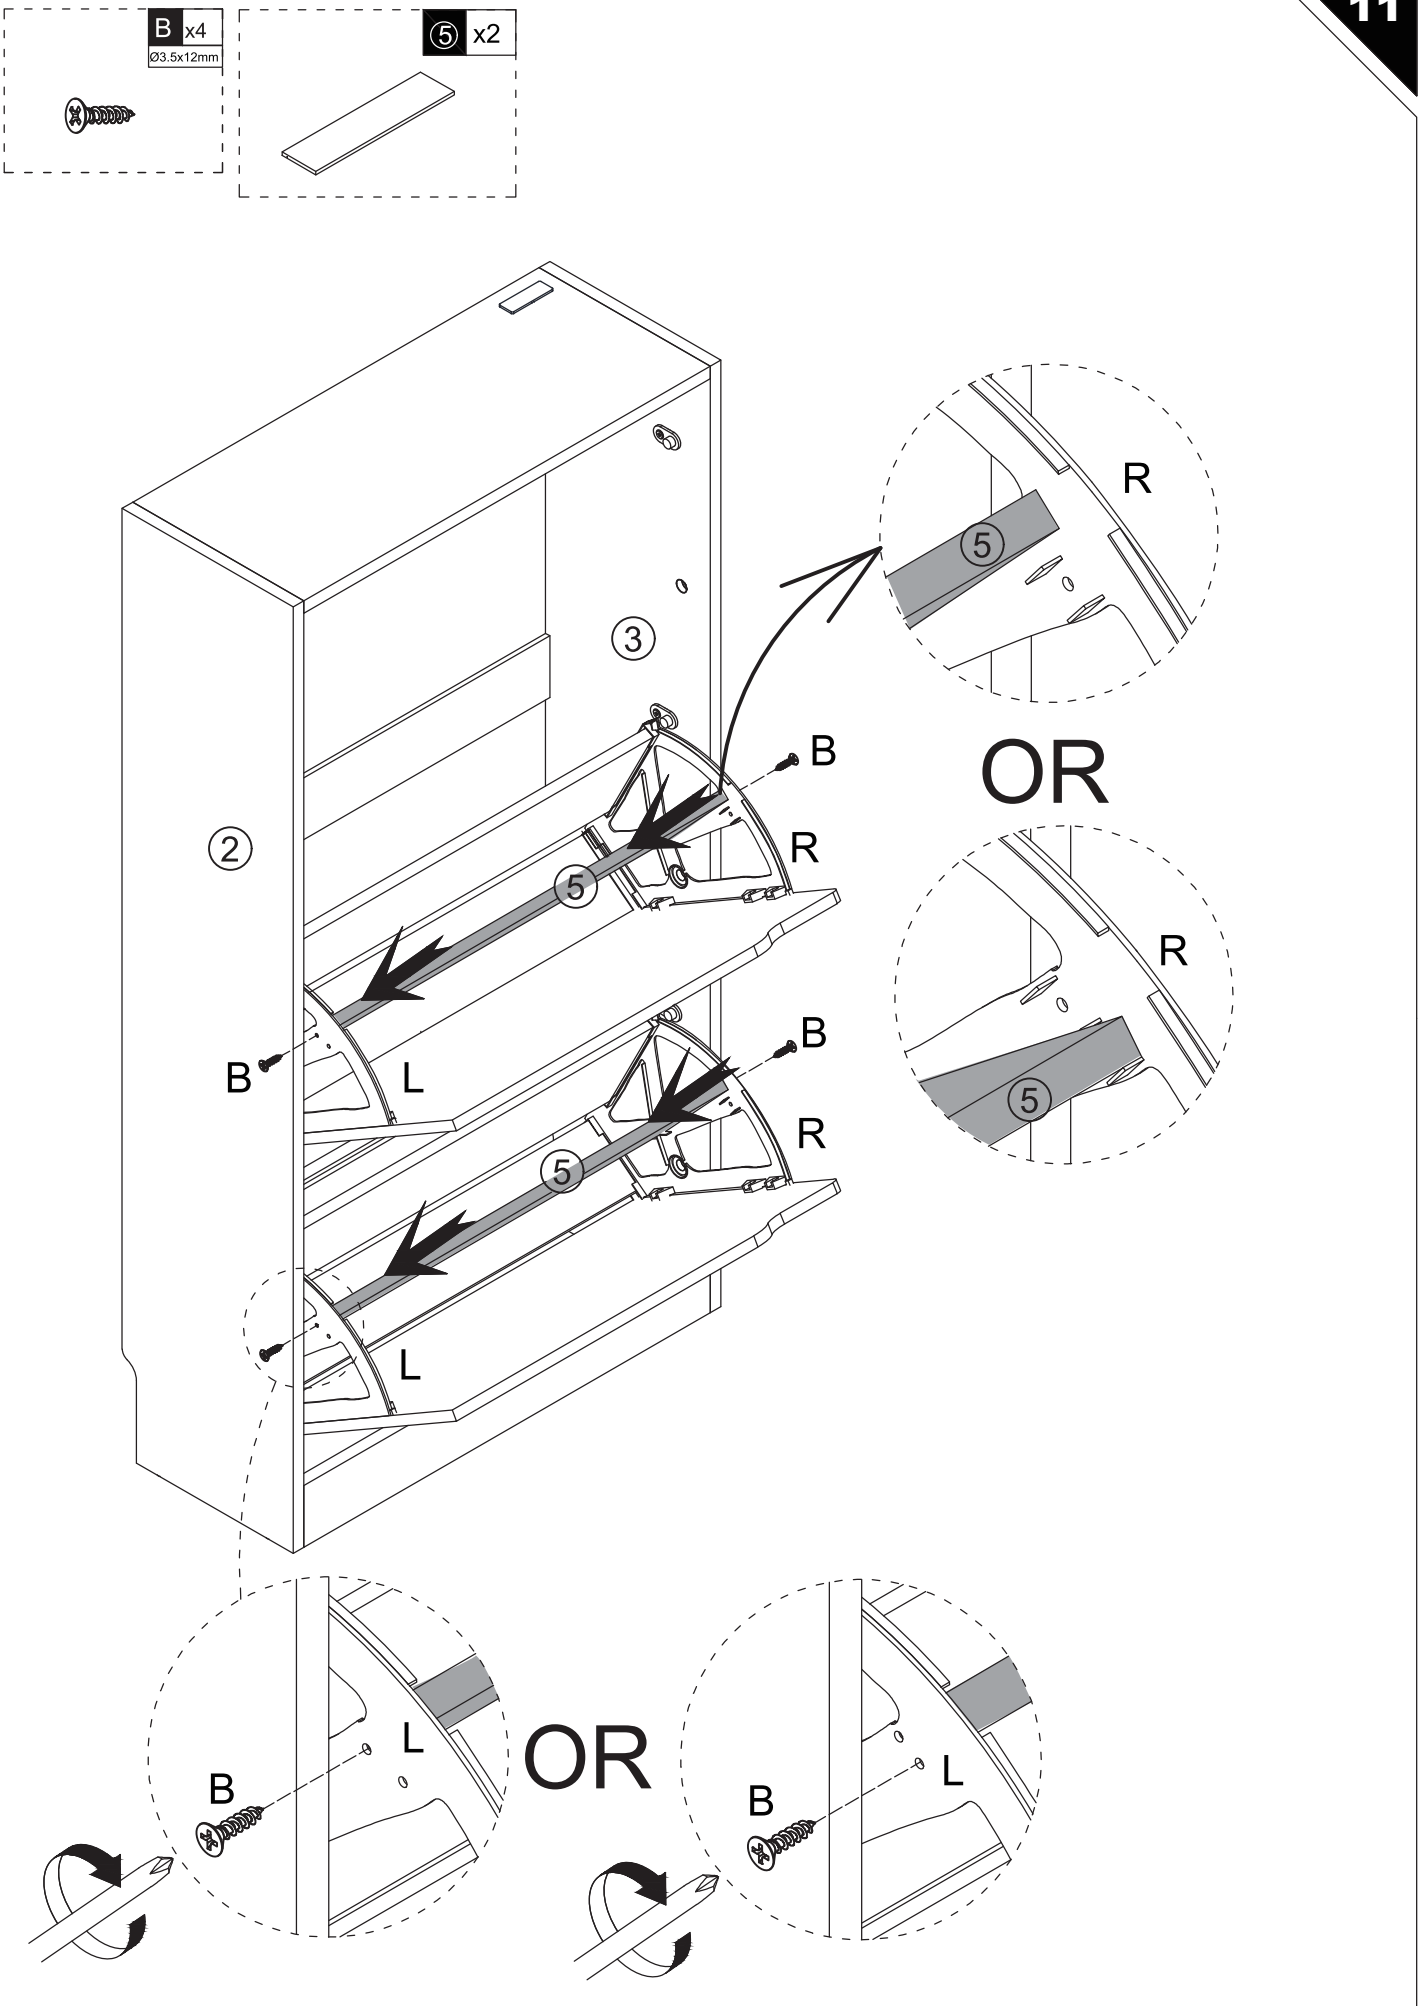

B x6
Ø3.5x12mm
⑥ x3
⑥
B
R
⑦
L
B
x3

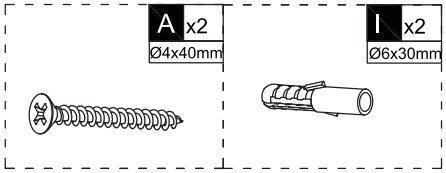
09

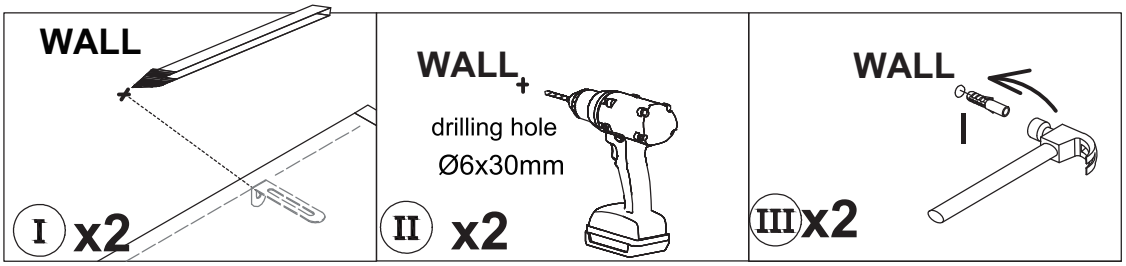

B x6
Ø3.5x12mm
⑤ x3
B
⑤
R
B
⑦
L
x3

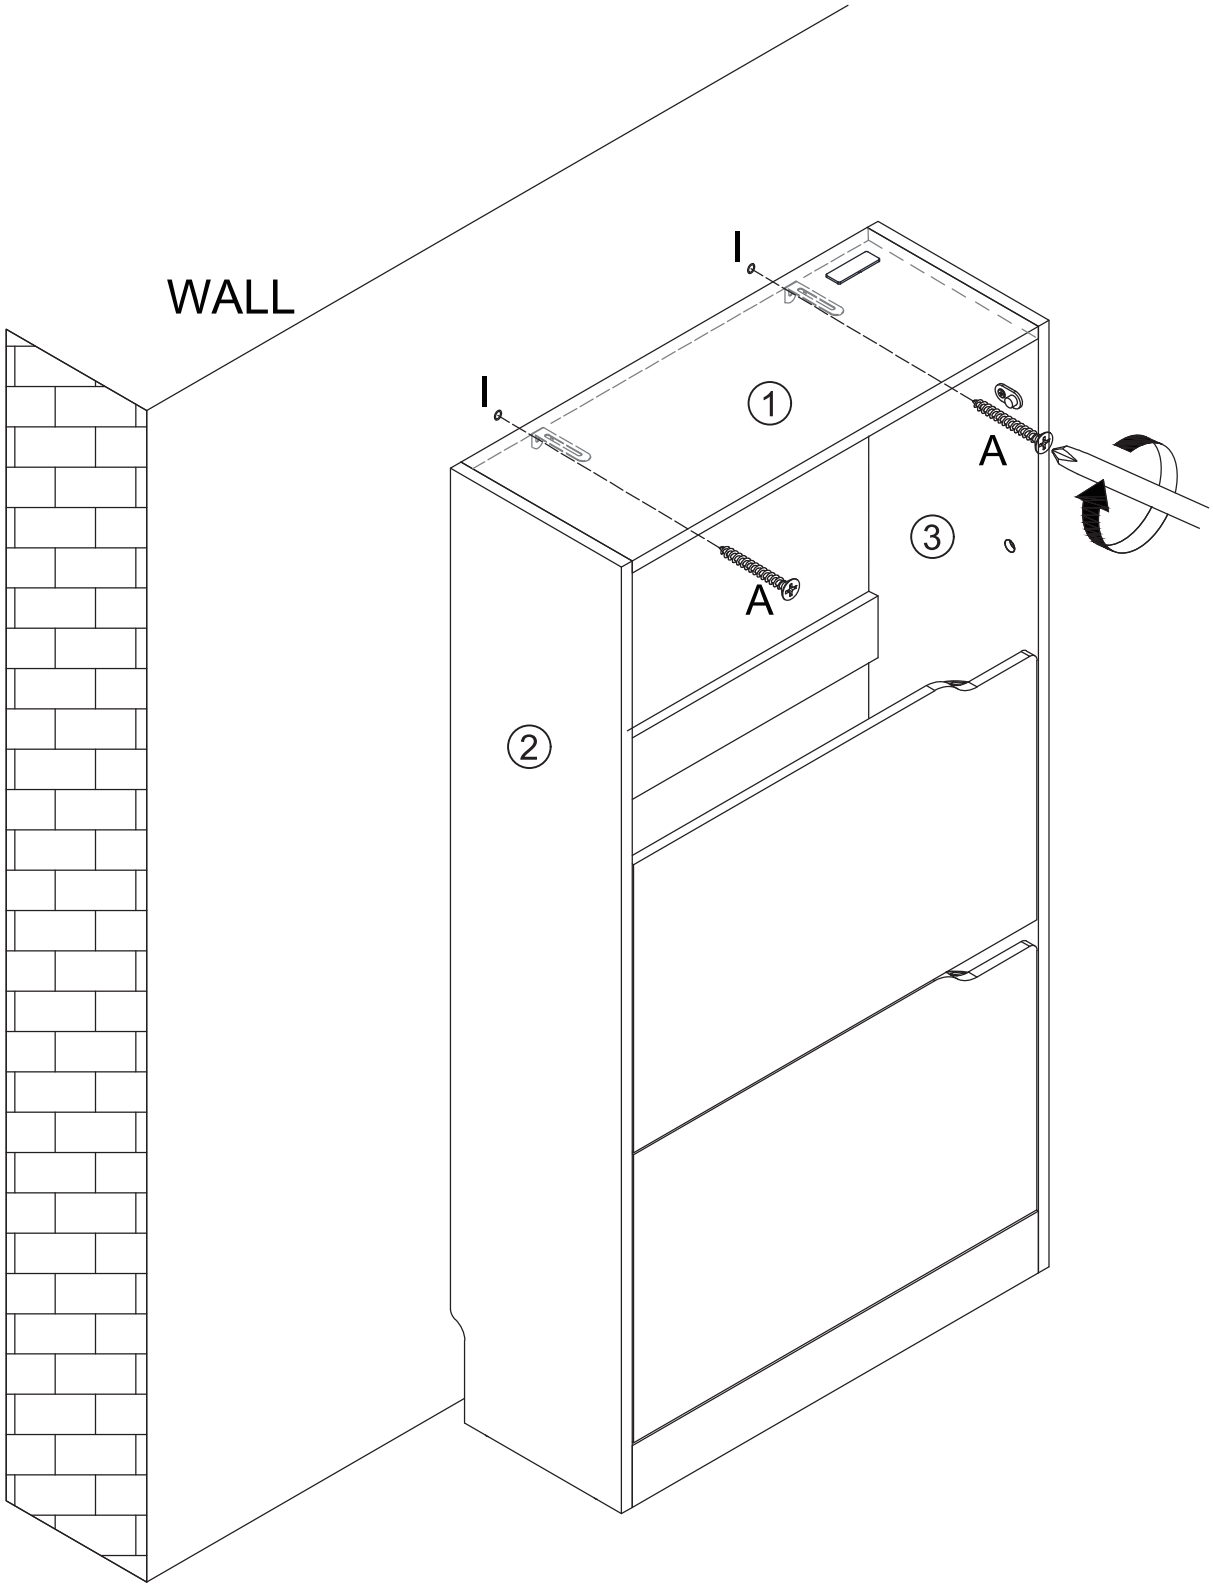
10

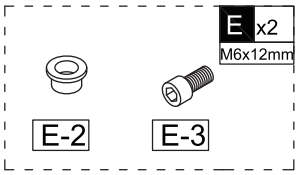

E x4
M6x12mm
E-2
E-3
G x1
M5
When installing E-3, it is sufficient to reach 90% progress. Installing 100% may cause damage to E-2.
E-2
G
E-3
①
③
②
R
E-3
⑦
E-2
L
R
E-3
E-2
E-3
⑦
L
E-2
Need Two or More People To Complete

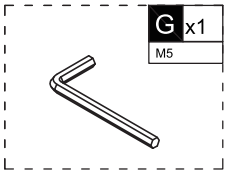

B x4
Ø3.5x12mm
⑤ x2
③
②
B
R
5
B
L
B
R
5
L
R
5
OR
R
5
L
B
OR
L
B


A x2
Ø4x40mm
I x2
Ø6x30mm

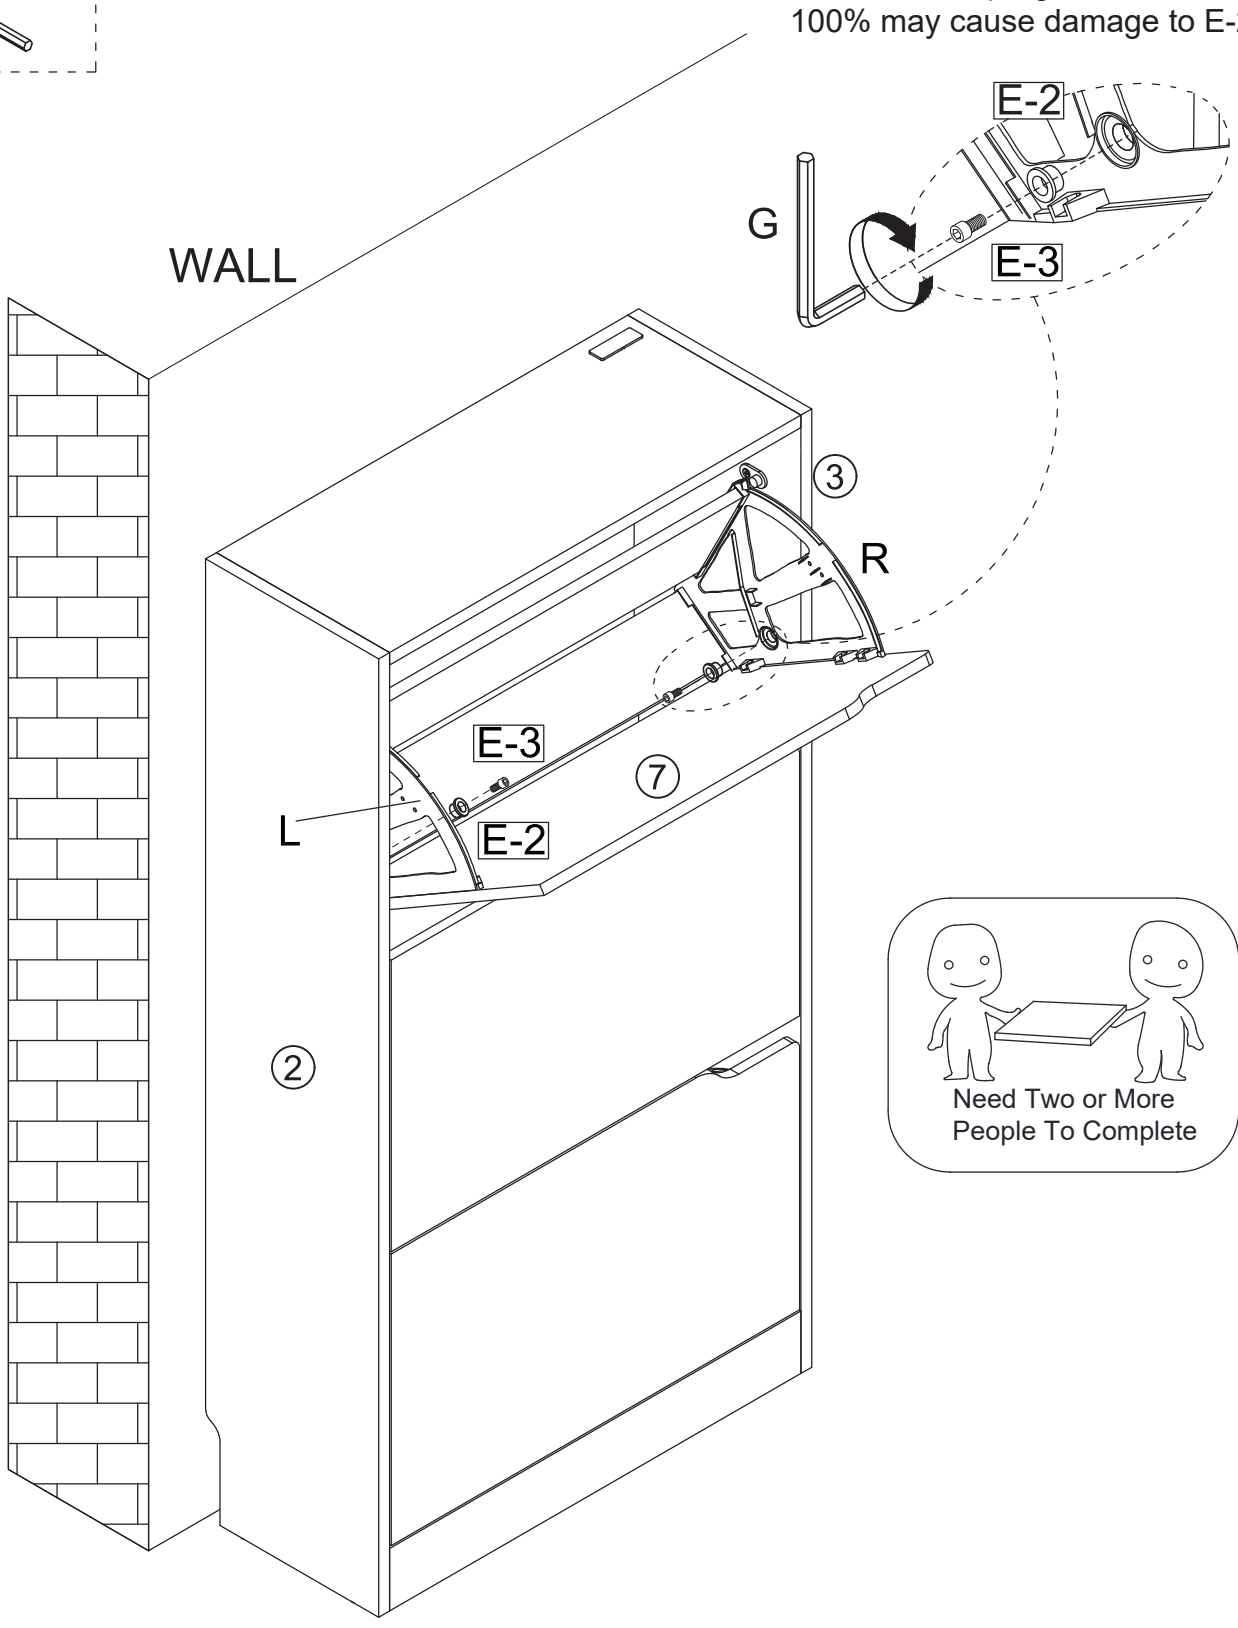

WALL
I x2
WALL
drilling hole
Ø6x30mm
II x2
WALL
I
III x2

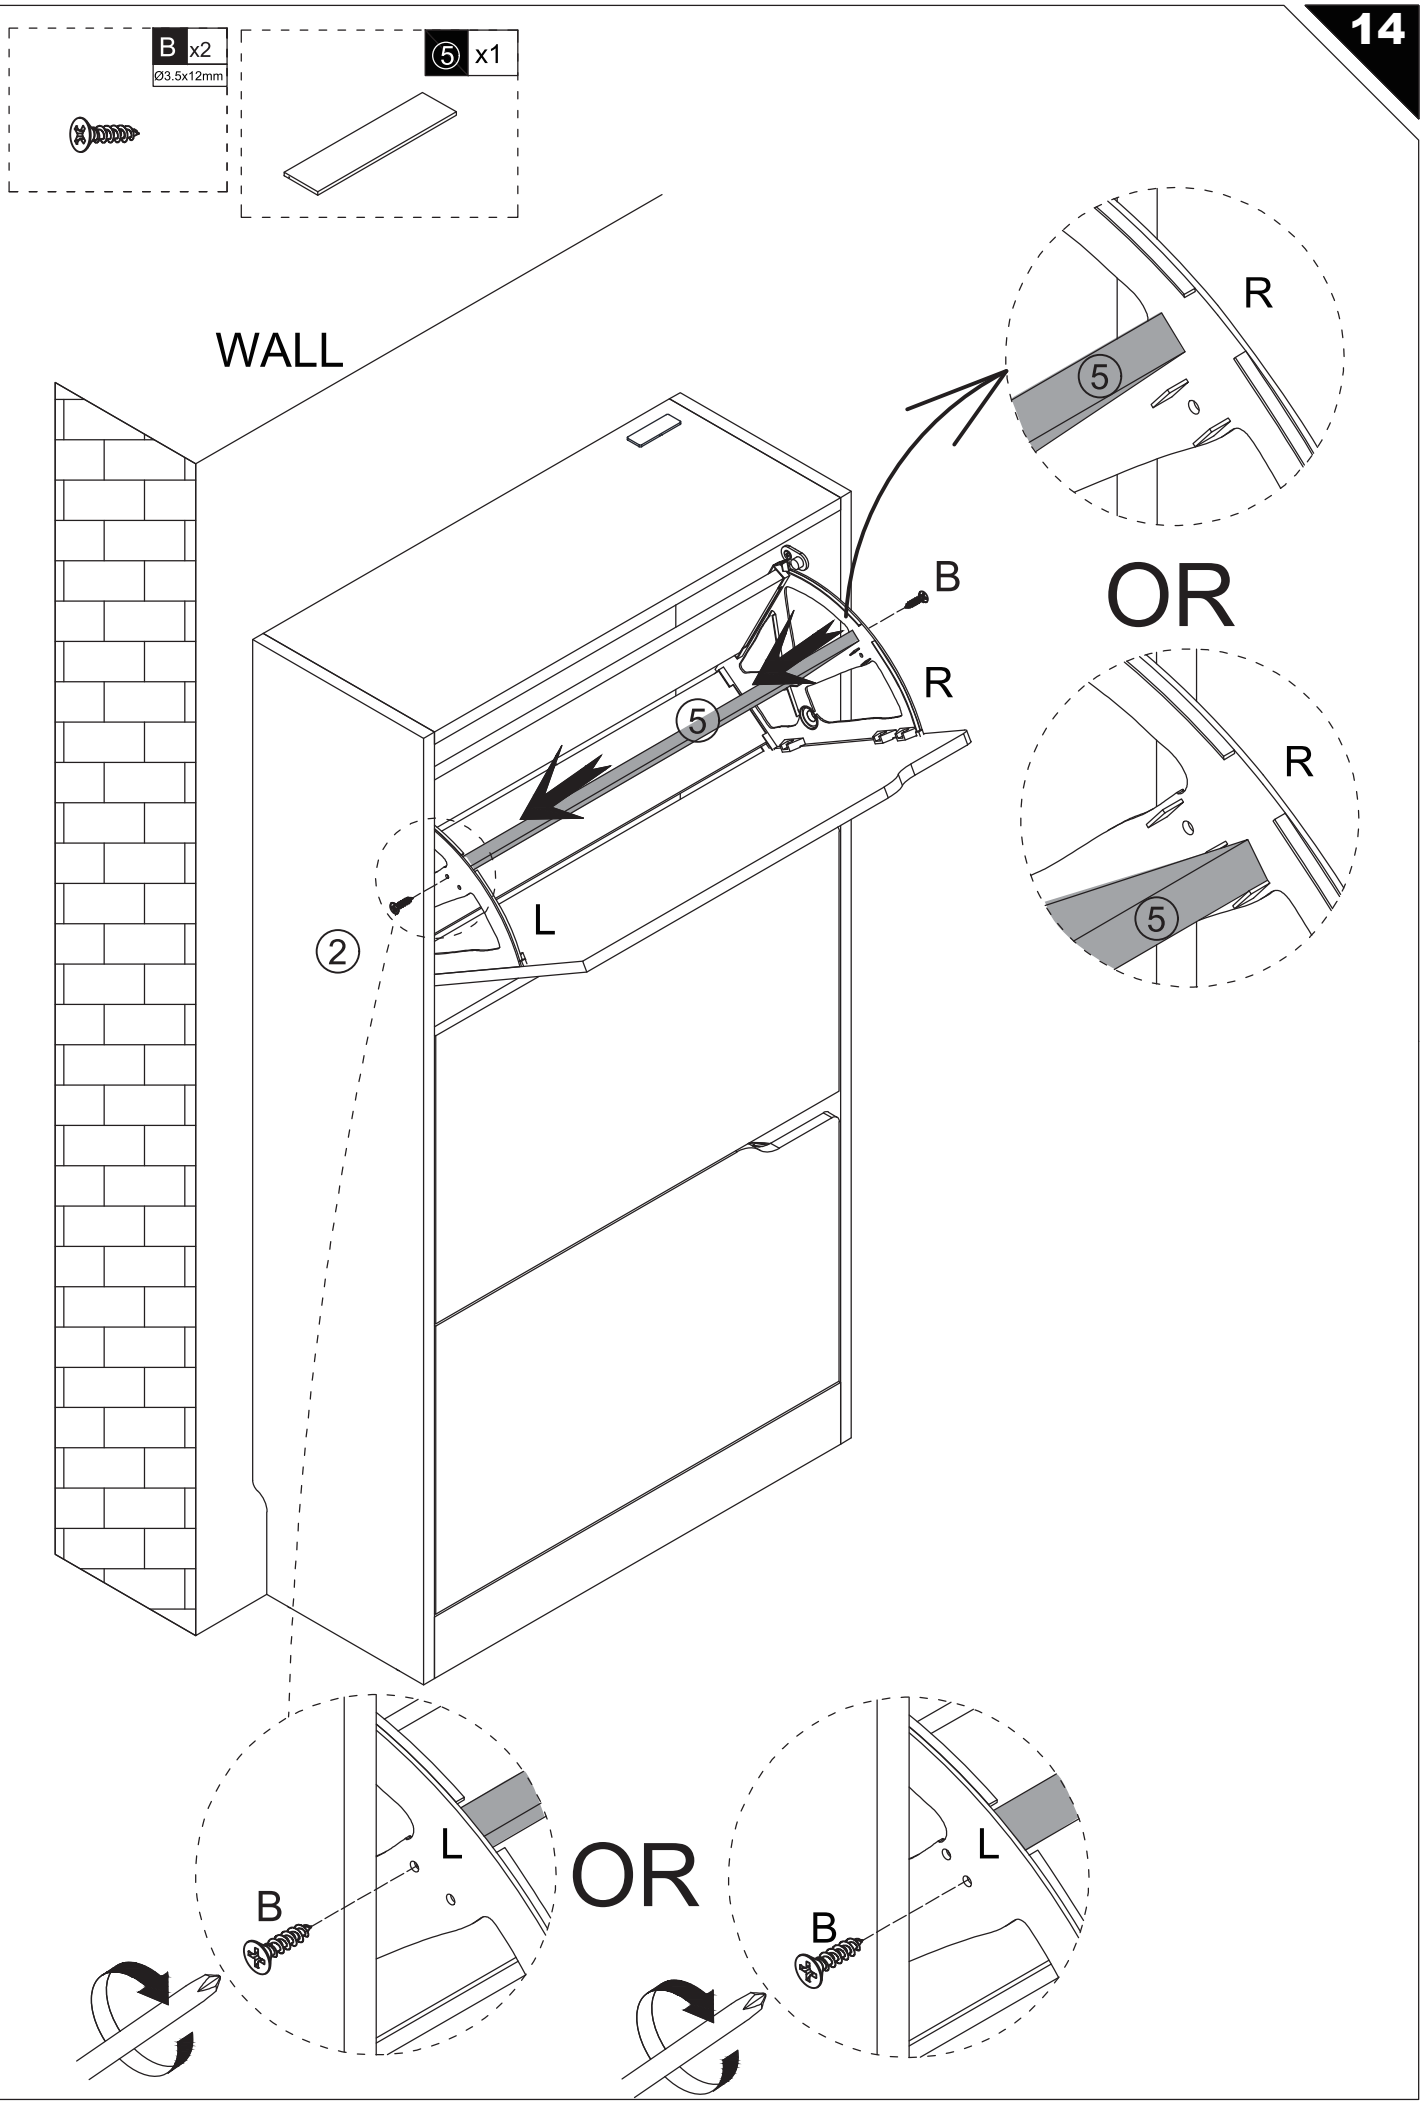

WALL
I
I
1
A
A
3
2

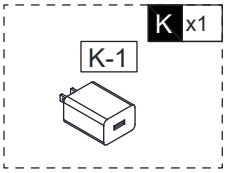




When installing E-3, it is sufficient to reach 90% progress. Installing 100% may cause damage to E-2.




B x2
Ø3.5x12mm
⑤ x1
WALL
R
⑤
OR
B
R
⑤
L
②
R
⑤
L
B
OR
L
B



Done

