



STEP 9 Use Allen Key (N1) to tighten a Crosshead Screw (A17) & button the screw head with Crosshead Cover (Y).

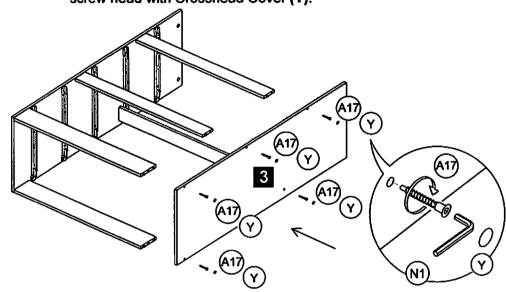

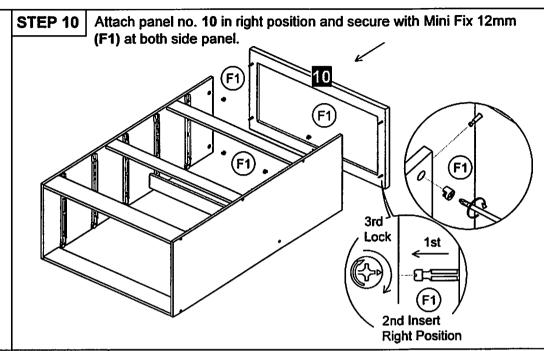


STEP 11 Screw the Plastic Leg L Shape (L2) at between panel no. 5 & both side panel. Assemble the back panel with secure by Nail (N2). Use screw (A2) to secure bottom panel.

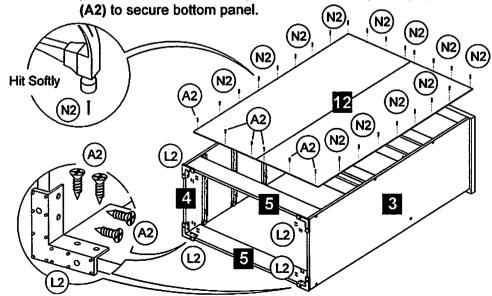

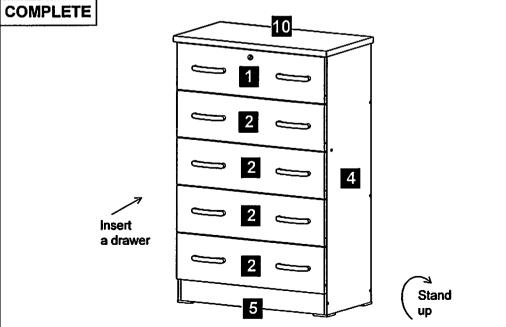


STEP 5

Use Screw (A1) to assemble the Drawer Metal Slide 350mm (M5) at both side drawer panel. Assemble 5 sets of drawer in repeated at step 5.

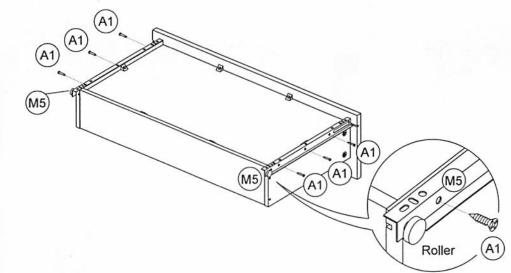

Screw the Mini Fix Bolt (F1) at marking hole panel no. 10 and use Screw (A3) to assemble the Square Lock L Bracket (C8) in right position. Then insert the Wood Dowel (D4) at both side panel

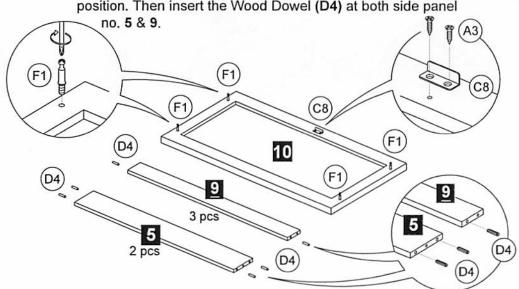

STEP 7 Use Screw (A1) to assemble left & right Drawer Metal Slide 350mm (M5) at marking hole panel no. 3 & 4.

Roller

Roller

M5

Roller


M5

M5

M5


M5

M5

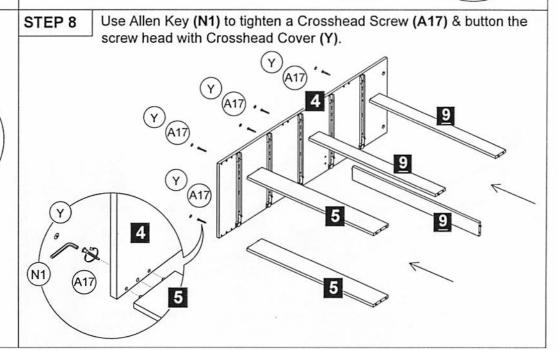


Use Screw (A3) to screw the Square Lock Set (C5) at panel no. 1.


Then fix the Mini Fix Bolt (F1) at panel no. 1 & 2 and use Screw (A7) to assemble the Handle (H6).

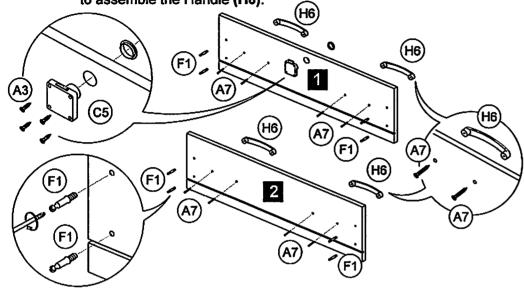


STEP 2 Assemble 5 sets of drawer in repeated at step 2.

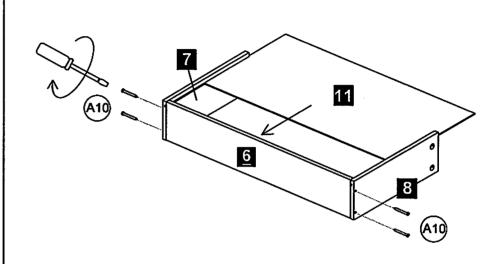

Attach the drawer head with secure by Mini Fix 12mm (F1). Assemble 5 sets of drawer in repeated at step 3.

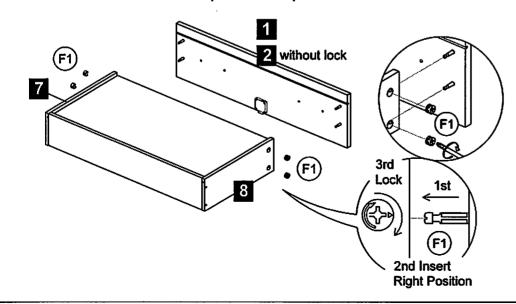



STEP 4 Use Screw (A2) to assemble the Single Plastic Cap (R2) to secure a bottom drawer panel. Assemble 5 sets of drawer in repeated at step

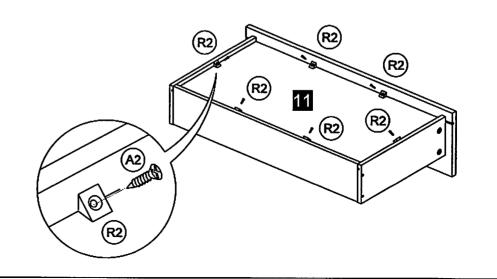



Reference Screw Size.


Place your screw on top to identify the size.














Before you begin, please follow assembly instruction carefully, then follow step by step.

Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

Reminder:


Please ensure that all surface and edges with colours / laminations are facing forward / outward.

| HARDWARE LIST | | | | |
|---------------|------------|-------------------------------|----------|--|
| A1 | Dames | Screw m3.5 x 12mm | 60 | |
| A2 | Dinns | Screw m3.5 x 14mm | 52 | |
| А3 | Cum> | Screw m3.5 x 16mm | 6 | |
| A7 | Dimminute> | Screw m4 x 30mm | 20 | |
| A10 | Dammannin | Screw m4 x 38mm | 20 | |
| A17 | | Crosshead Screw 6.3 x 40mm | 10 | |
| C5 | | Square Lock Set | 1 set | |
| С8 | 63 | Square Lock L Bracket | 1 | |

| Each pack have contain different type hardware and size |
|---------------------------------------------------------|
| of screw for easy assemble. |
| Please refer to page 2, check a screw size |

| D4 | | Wood Dowel 6 x 25mm | 14 |
|----|------------|-----------------------------|------------|
| F1 | | Mini Fix 12mm | 24 sets |
| Н6 | | Handle 128mm (Silver) | 10 |
| L2 | | Plastic Leg L Shape | 4 |
| М5 | · · · · · | Drawer Metal Slide 350mm | 5 sets |
| N1 | | Allen Key | 1 |
| N2 | ⊢ → | Nail | 20 |
| R2 | | Single Plastic Cap | 30 |
| Y | • | Crosshead Cover | 10 |

| 5 pcs | 5 pcs 5 pcs 8 |
|------------|---------------|
| 2 4 pcs | |

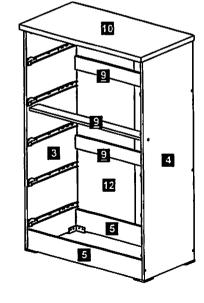

CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.