ASSEMBLY INSTRUCTION



[Scan for Installation Video]

WARRANTY

One-year limited manufacturer's warranty is offered from the date of purchase. The warranty covers manufacturing defects in materials and parts (including armrests, sofa/chair legs, cushions, seat panel, hardware, etc.).
The warranty does not cover damage caused by accidents or any unreasonable use.

This limited warranty is only applicable to the original purchase and is non-transferable. When making a claim, the original receipt is required as proof.

CUSTOMER SERVICE

We are committed to providing quality products and timely customer service. If you have any further questions or need replacement parts, Please see the information below to contact us.

Tel:
1-323-443-1788(Mon-Fri, 9:00 AM – 6:00 PM EST)

Email:
support@ovios-furniture.com

Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process. which typically takes between 72 hours and one week.





Seat Cushion x3

Packaging 1





Back Cushion x3

Cushion 1 x3







Cushion 2 x2

Backrest Cover Cloth x1









Packaging 2








Ottoman Cushion x2


Packaging 1 in BOX2
Packaging 2 in BOX2

Parts List


Part Number	Picture	Description	QTY
①		Sofa Panel	7
②		Sofa Panel	4
③		Hollow Iron Tube 1	4
④		Hollow Iron Tube 2	8
⑤		Slat	30
⑥		Sofa Leg	12
⑦		Ottoman Cushion	2
⑧		Right Armrest	1
⑨		Left Armrest	1
⑩		Backrest	3

Part Number	Picture	Description	QTY
⑪		Seat Frame	3
⑫		Middle Sofa Leg	4
⑬		Sofa Back Supported Leg	2
⑭		Backrest Cover Cloth	1
⑮		Seat Cushion	3
⑯		Back Cushion	3
⑰		Cushion 1	3
⑱		Cushion 2	2


A		Screw(M6*16)	16
B		Screw(M6*35)	38
C		Screw(M6*55)	46
D		Gasket	128
E		Allen Key	1
F		Hexagon Nut	28

G		Nut Wrench	1
H			12
I		Foot Pad	12
J			60
K		L-Shaped Iron Sheet	2
L		Iron Sheet	2

Insert all screws first, but leave them loose until all holes are aligned. Then tighten them evenly.

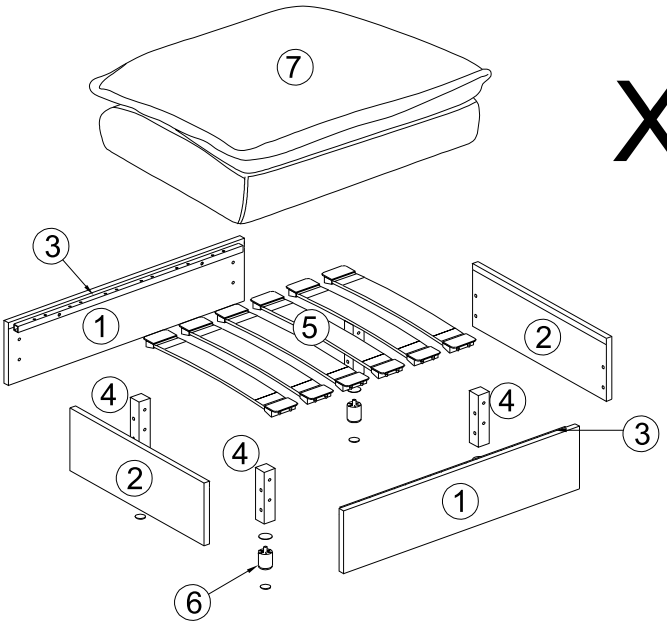


X2

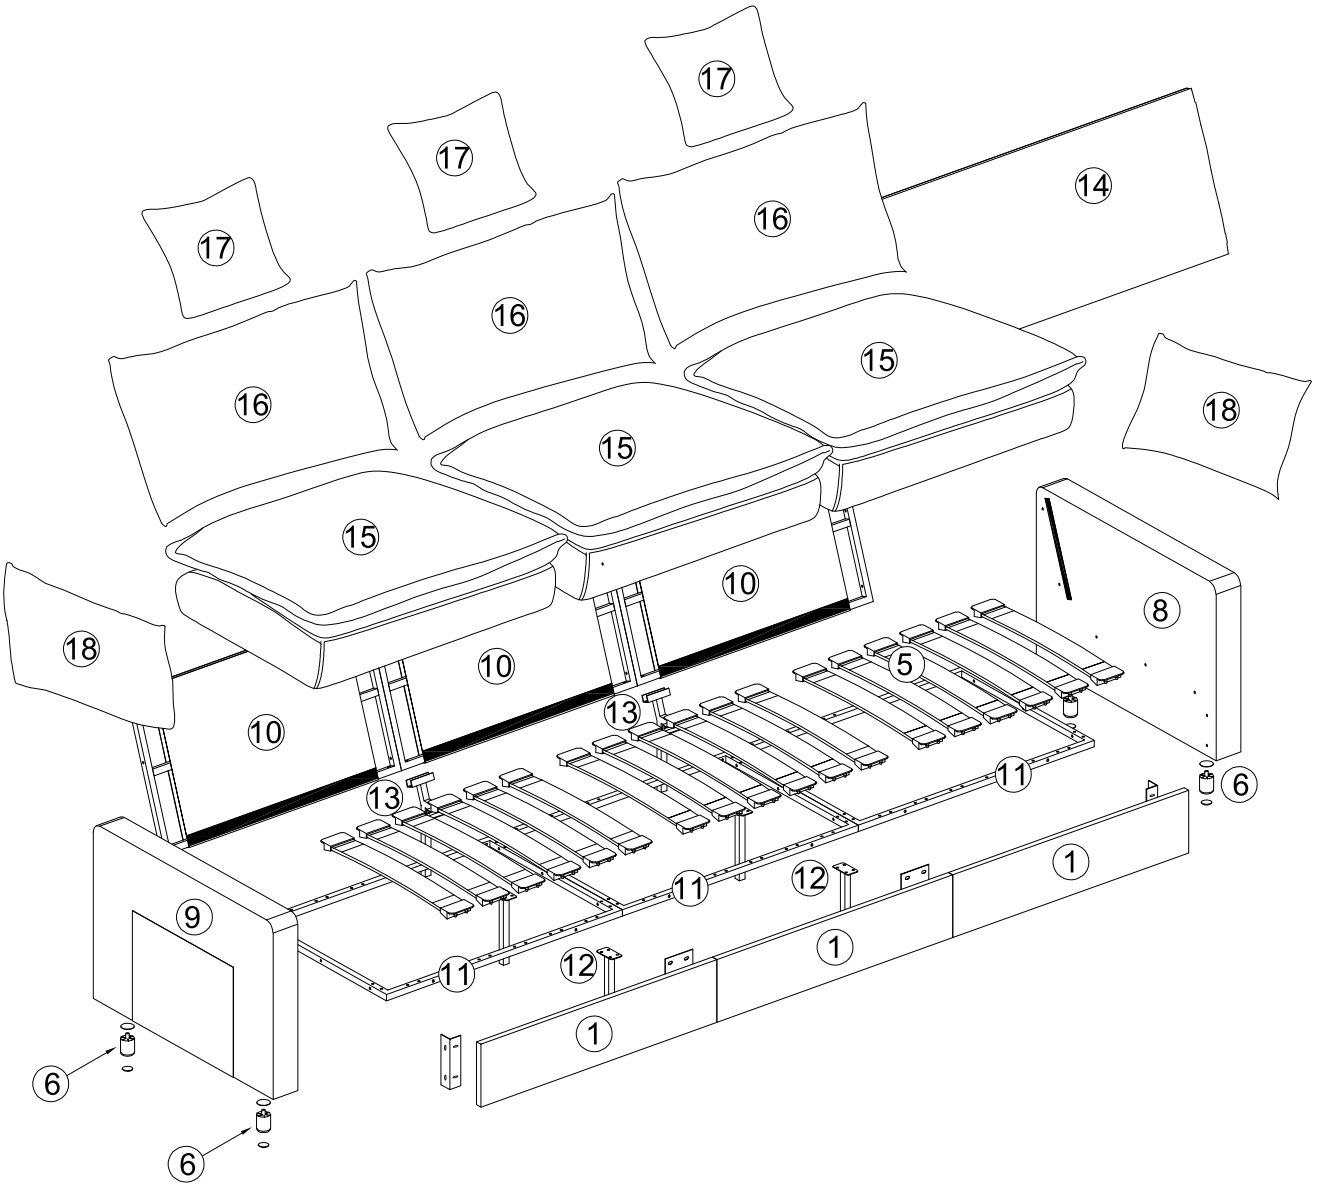

Step 1：

1	3	4
4pcs	4pcs	8pcs
B 6*35	C 6*55	D
8pcs	16pcs	24pcs

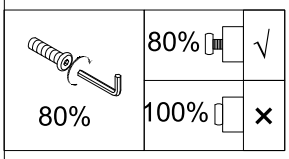



X4

Attach B and C to D, then attach 3 and 4 to 1.
When tightening B and C, leave them loose until all parts are aligned, then fully tighten.


Step 2：

2	C 6*55	D
4pcs	16pcs	16pcs

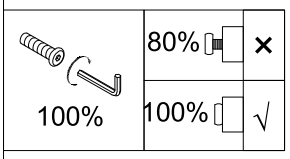

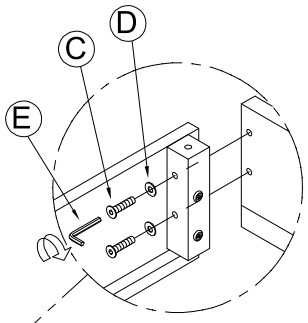


X2

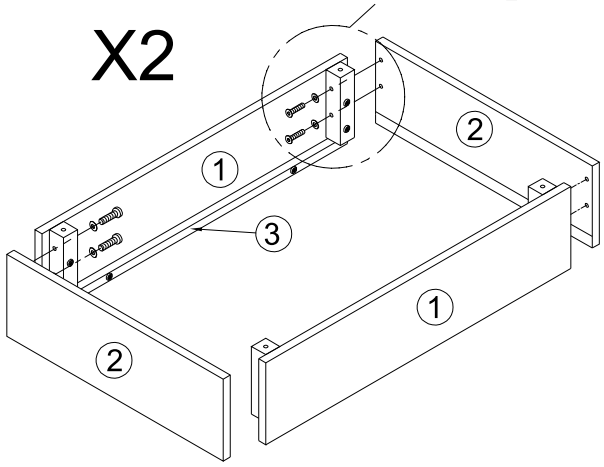

Fit C into D, then connect the pre-assembled pieces.
Fully tighten all screws.

Step 3：

6	H	I
8pcs	8pcs	8pcs

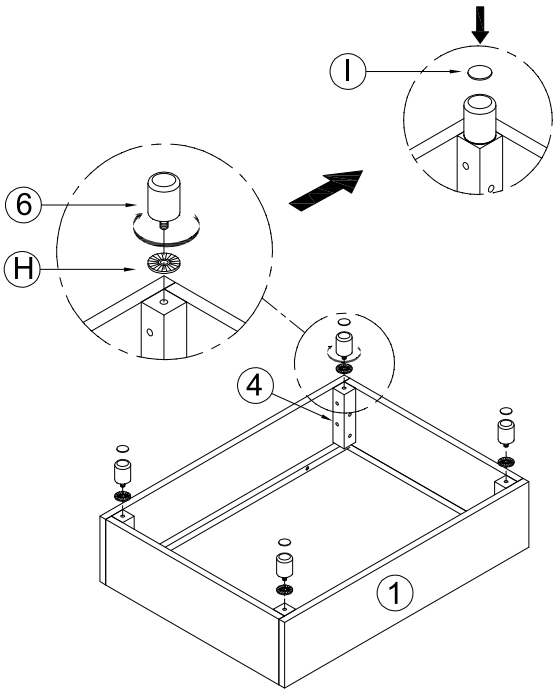


X2

Put part 6 into H, then attach the assembly to part 4.
Last, connect component I to part 6.

Step 4：


5	J
30pcs	60pcs

X30

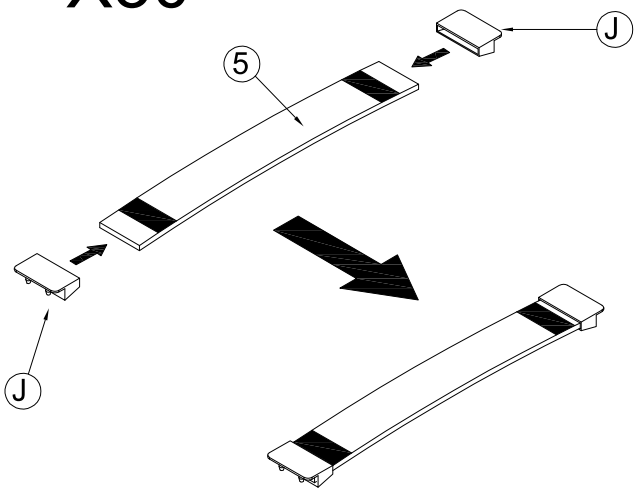


Put part 5 into the slot on J, with the Velcro side up.

Step 5：

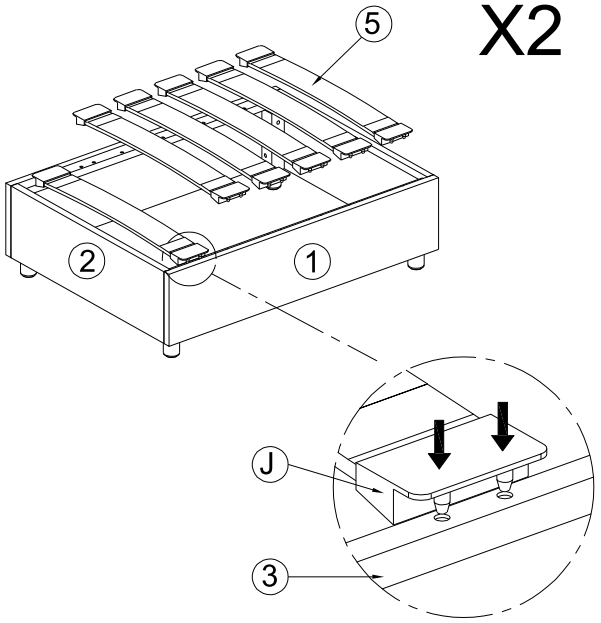

Make sure the Velcro side of part 5 faces up. Line up part J with the hole, insert it, and gently tap it in with a tool.


Step 6：

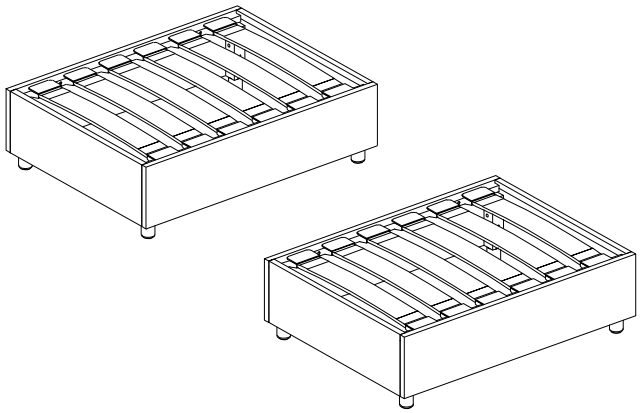

Finish

Step 7：


6	8	9	A 6*16	D	K	H	I
4pcs	1pcs	1pcs	4pcs	4pcs	2pcs	4pcs	4pcs

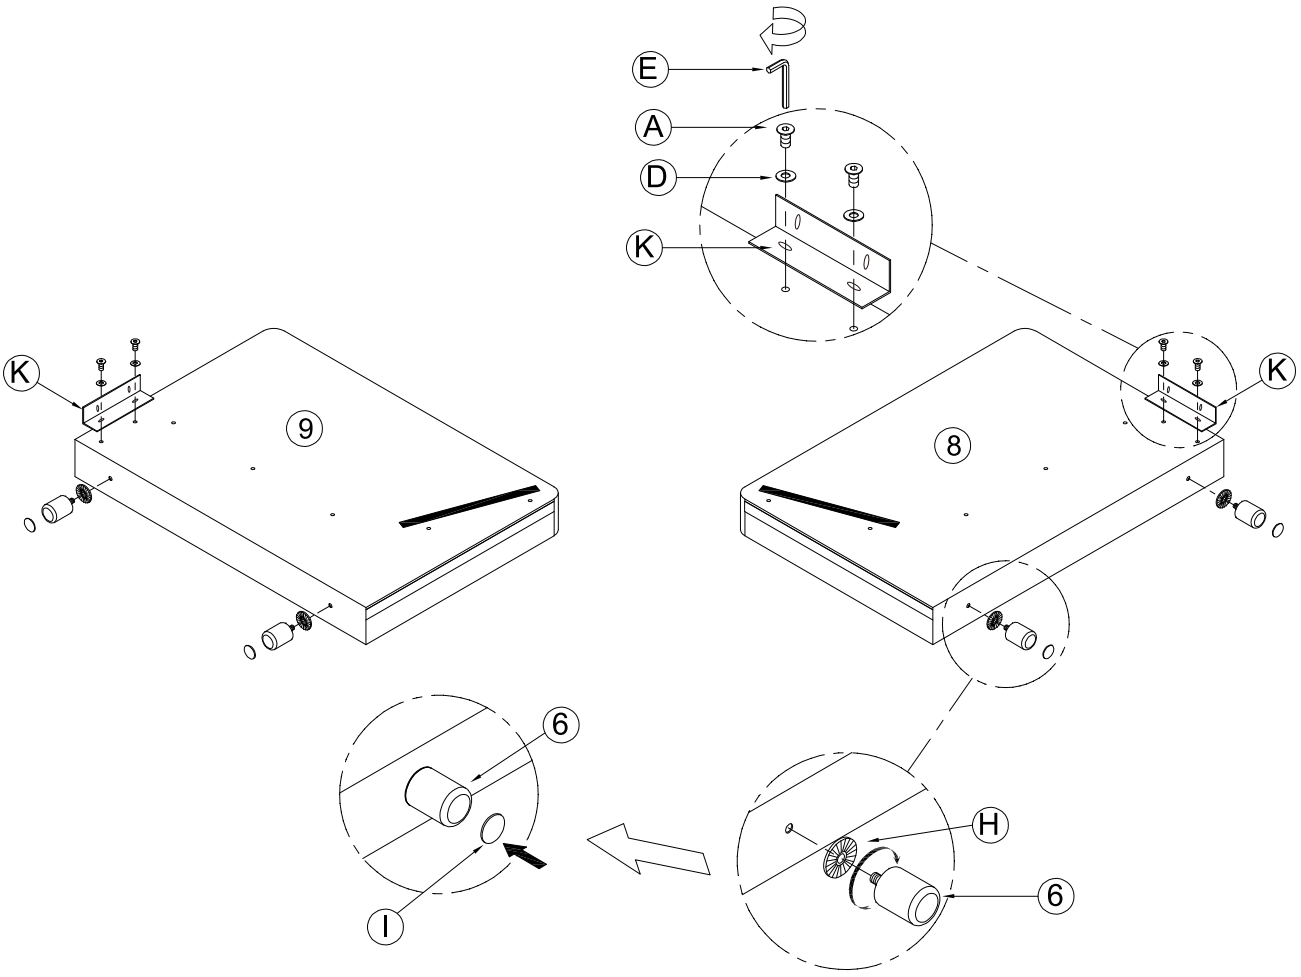

Insert screw A through D, and loosely attach K to 8 and 9. Leave A slightly loose for now — you'll fully tighten it later. Fit part 6 into H, then mount the assembly onto 8 and 9. Attach component I to part 6.

Step 8：

10	C 6*55	D	F
3pcs	4pcs	8pcs	4pcs

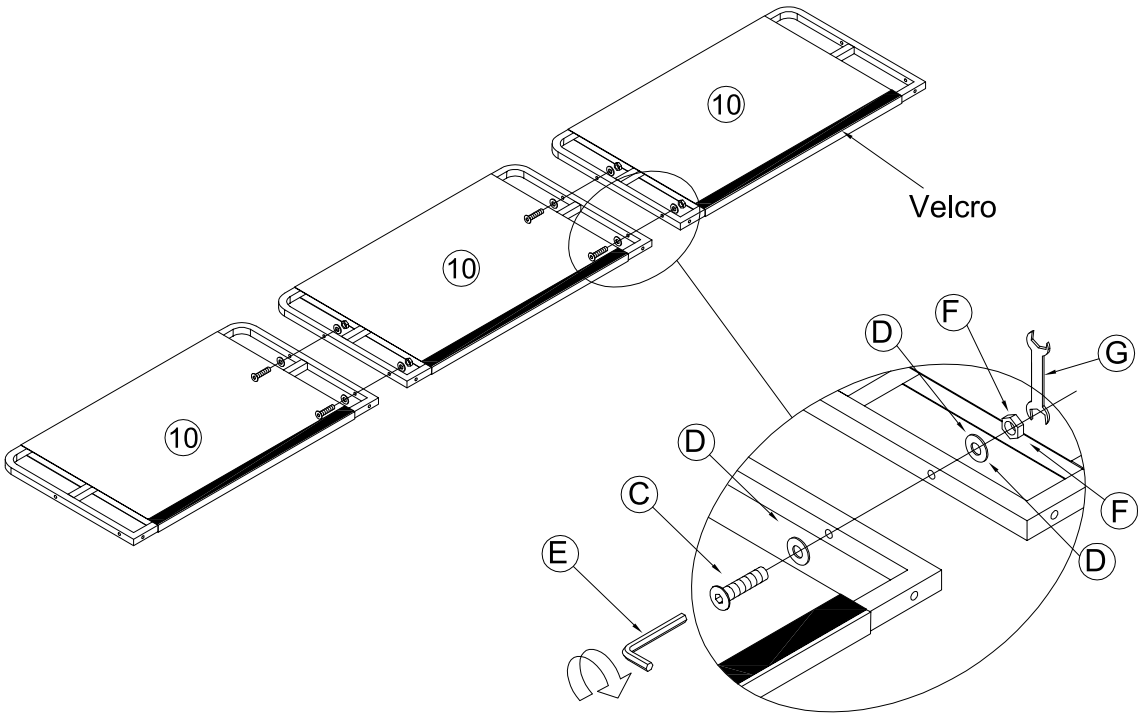


Attach the backrest.
Insert screw C through D, then secure it with F.
Make sure the Velcro side faces forward — you can rotate the fabric to adjust the direction.

Step 9：

11	12	13	B 6*35	D	F
3pcs	4pcs	2pcs	20pcs	40pcs	20pcs


Install with the side that has more holes facing up. Part 12 goes underneath.

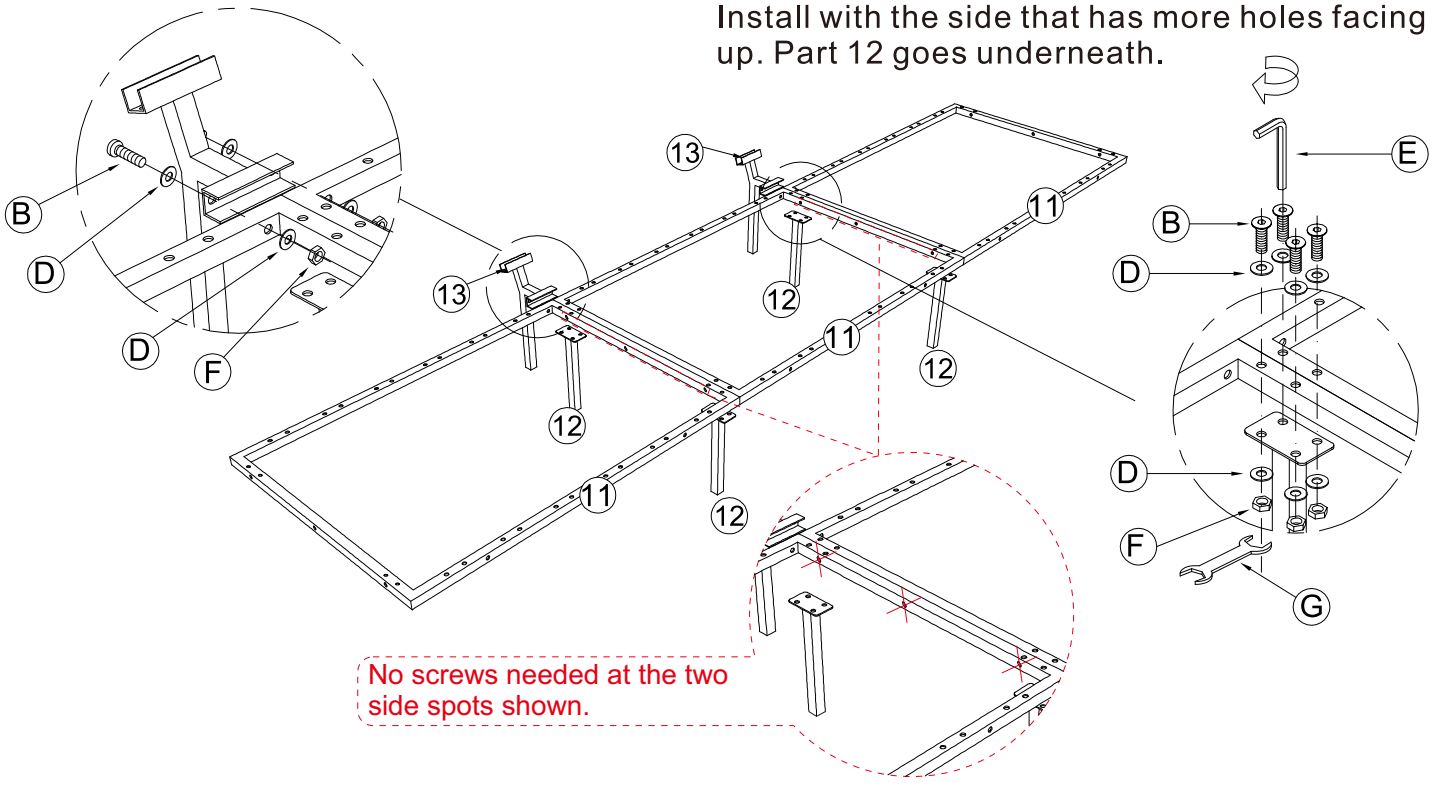

Insert screw B through D, then lock it in place with F — this secures the sofa leg to the seat frame.

Step 10：


C 6*55	D
10pcs	10pcs

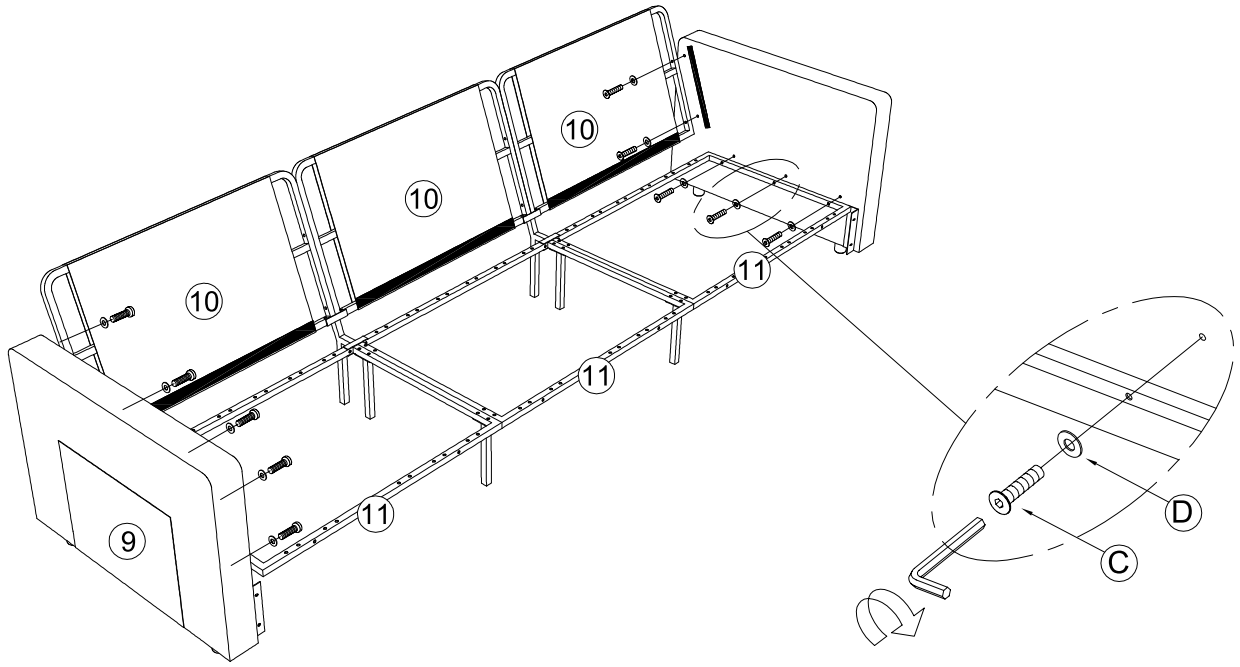

Insert screw C through D to connect the seat frame and backrest to parts 8 and 9.
Leave C slightly loose for now — you'll fully tighten it later.

Step 11：


B 6*35	D	F
4pcs	8pcs	4pcs

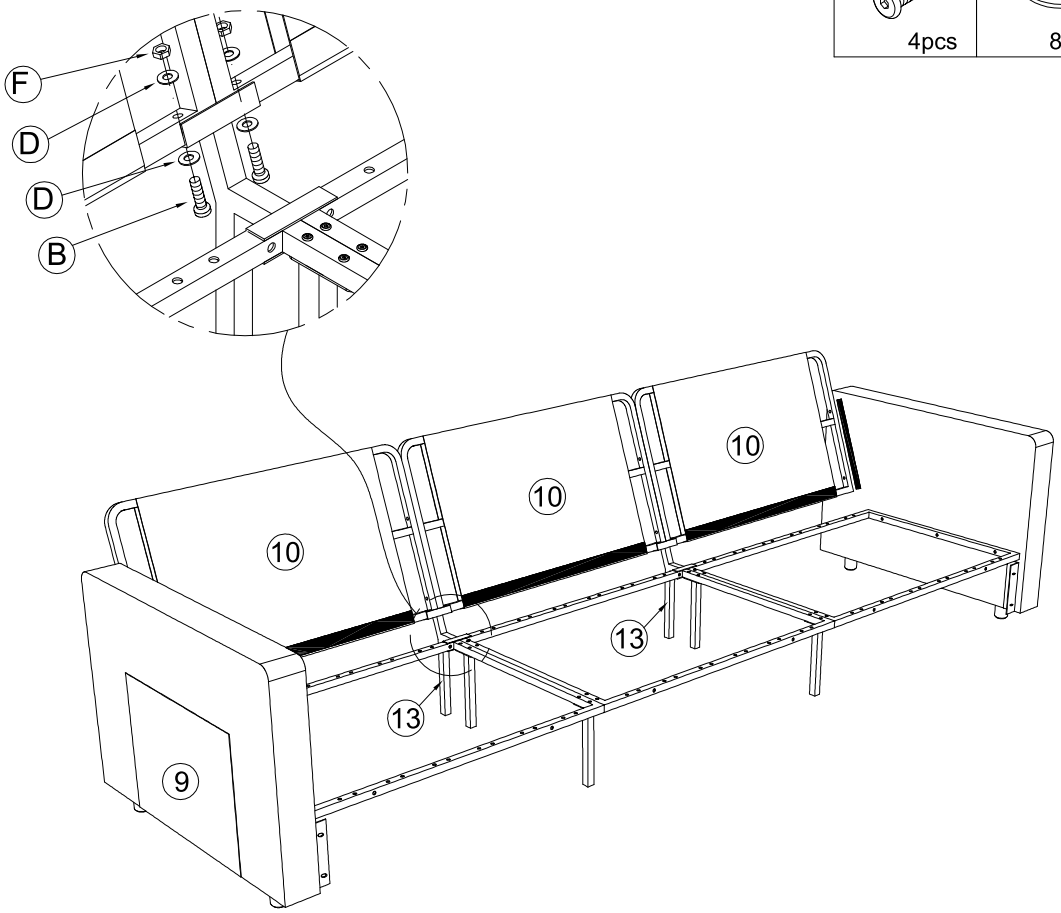

Insert screw B through D and lock it in place with F.
Secure the sofa's back leg to both the seat frame and the backrest.


Step 12：

1	A 6*16	B 6*35	D	L
3pcs	12pcs	6pcs	18pcs	2pcs

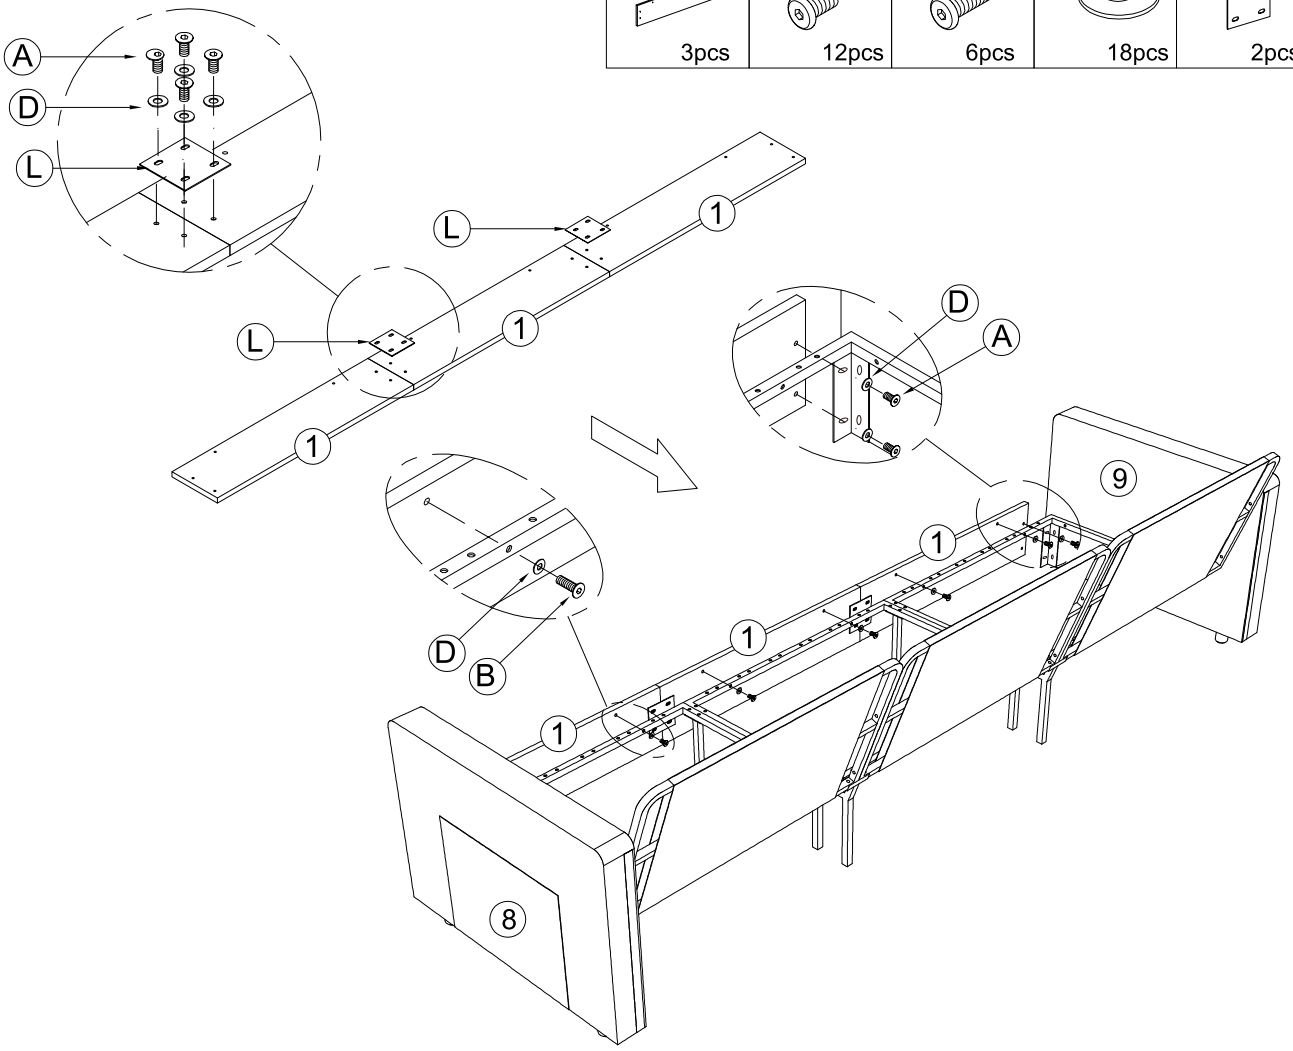


Insert A into D, then attach L to 1.
Pass A and B through D to connect the pre-assembled parts.
Fully tighten all screws.

Step 13：

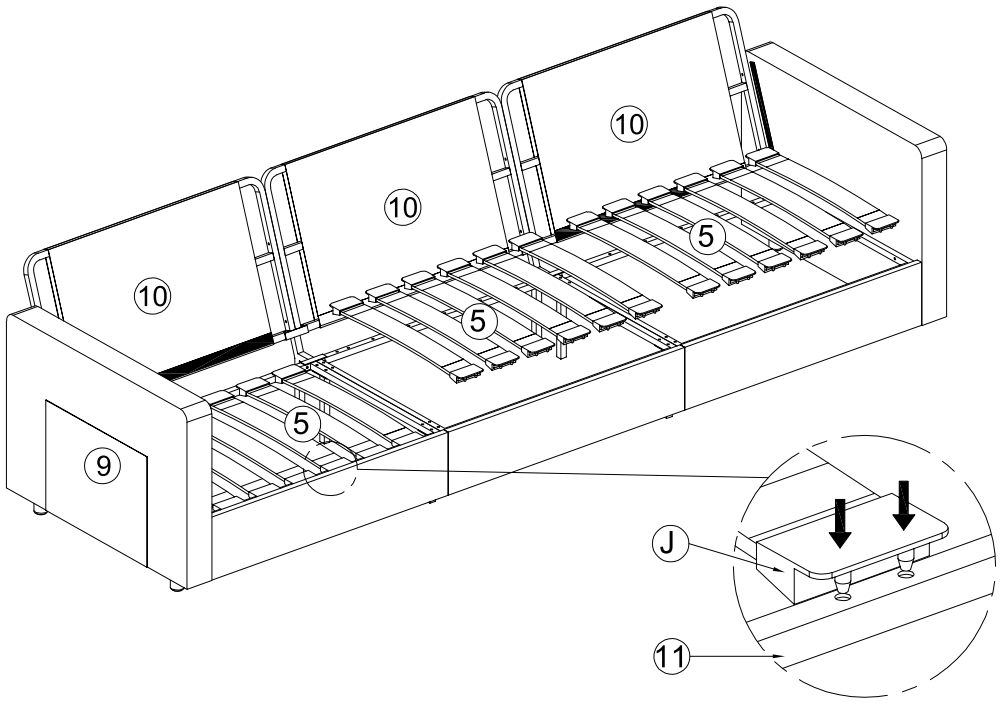


Face the Velcro side of part 5 up. Line up part J with the hole, push it in, and tap it gently with a tool until it's fully in.

Step 14：

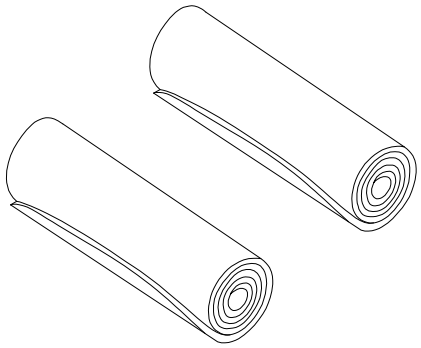


Take out the compressed package from the box.


Step 15：

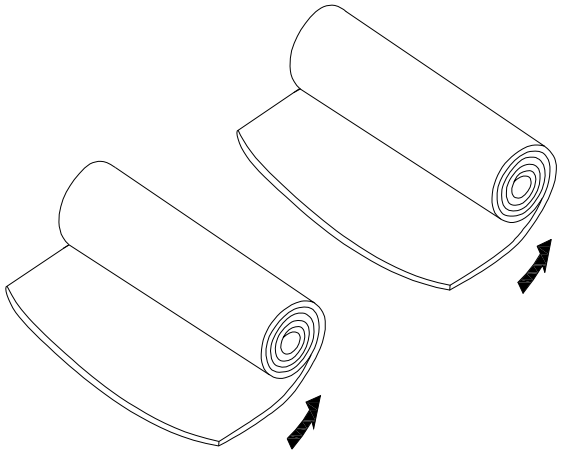


Tear off the outer film and unroll the package until flat.

Step 16：

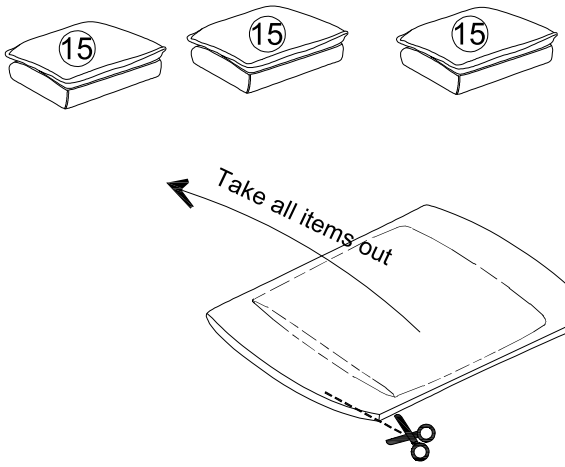

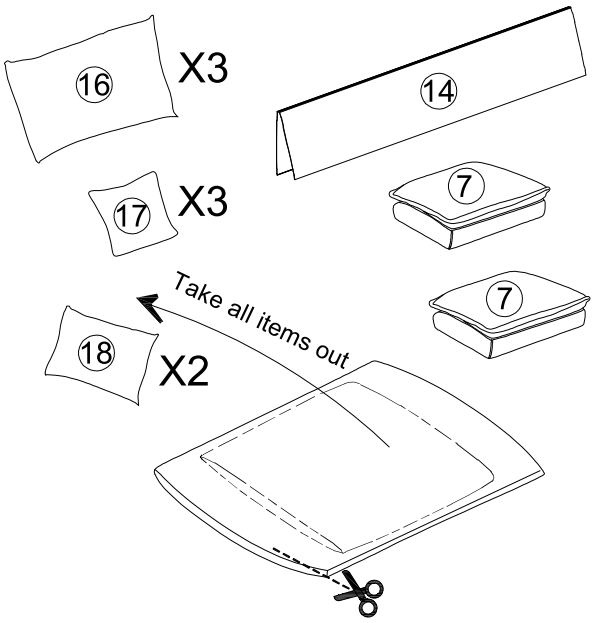


Carefully cut open the plastic bag with scissors.

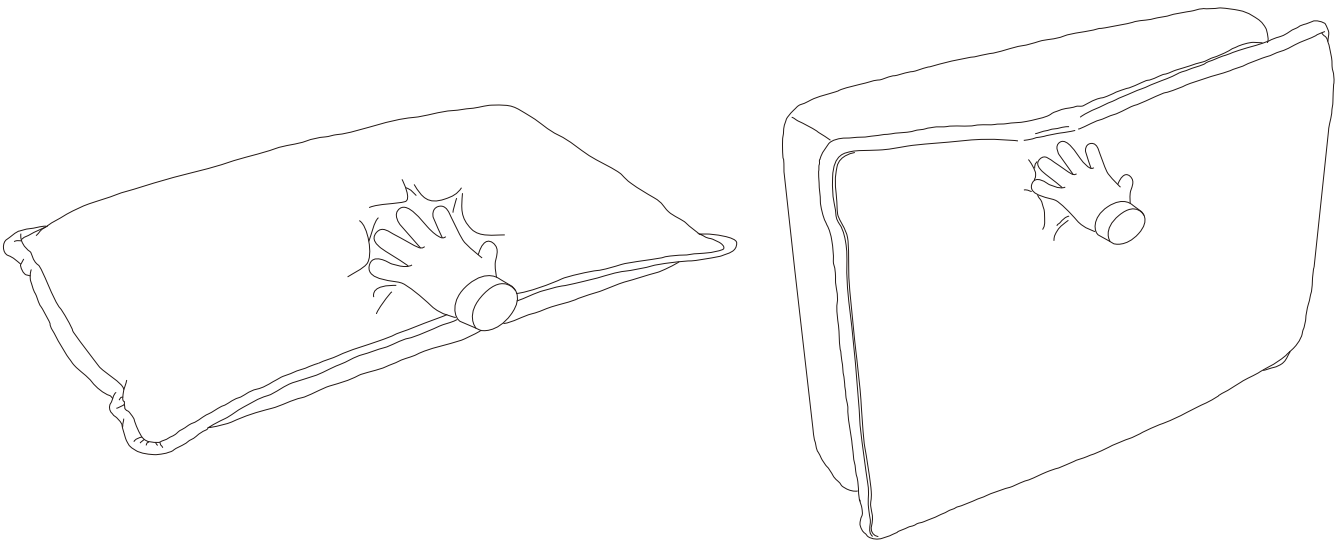


Fluff the cushions after unpacking. Once you take them out of the compressed packaging, gently pat and shape them on all sides. If you see any flat spots, pat the fuller areas until the filling evens out.

Step 17：

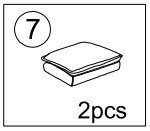


X2

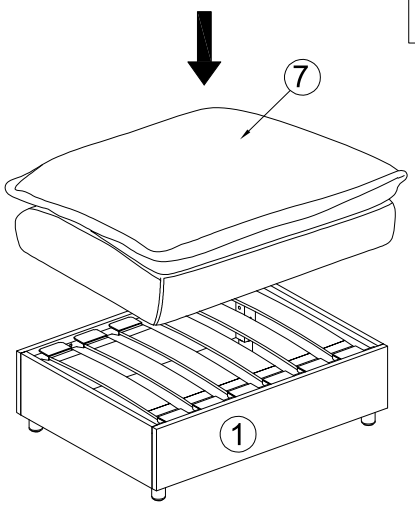



Place the cushion 7 on the Ottoman.

Step 18：

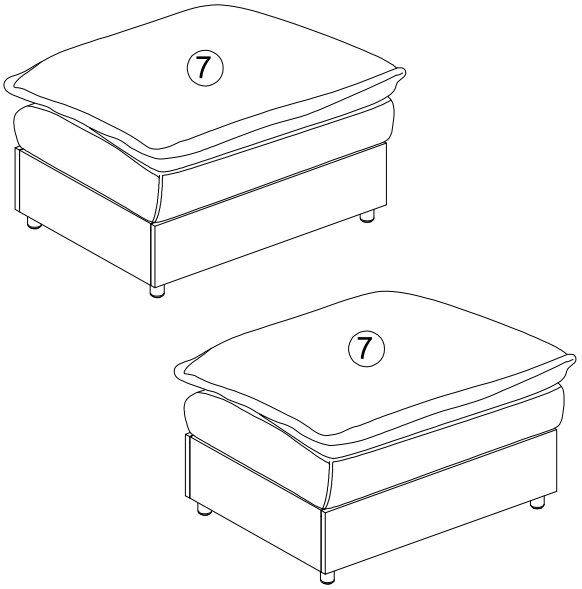


Step 19：

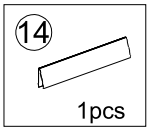


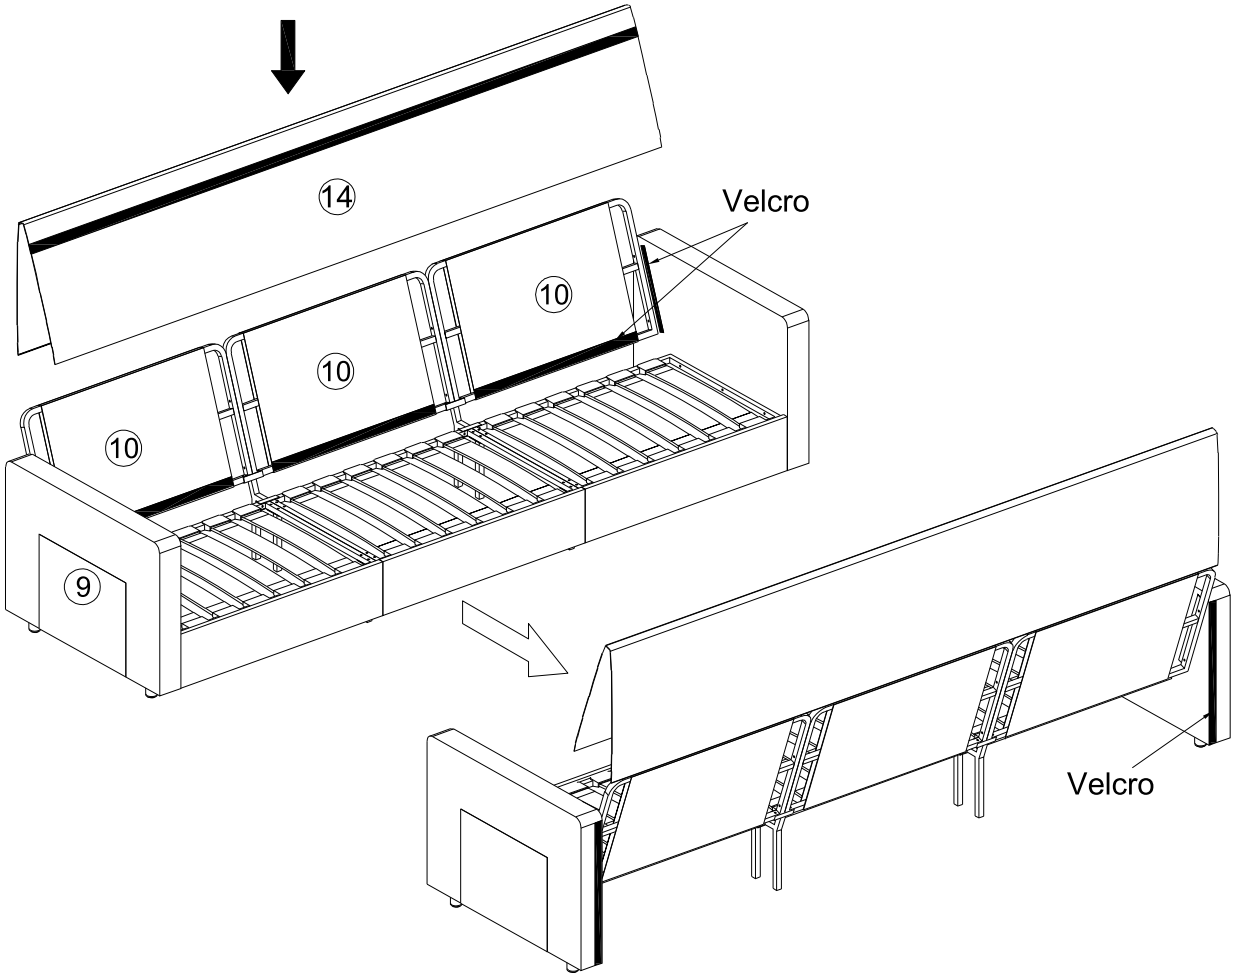

Cover components 10 with part 14, securing it in place with Velcro


Step 20：

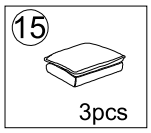


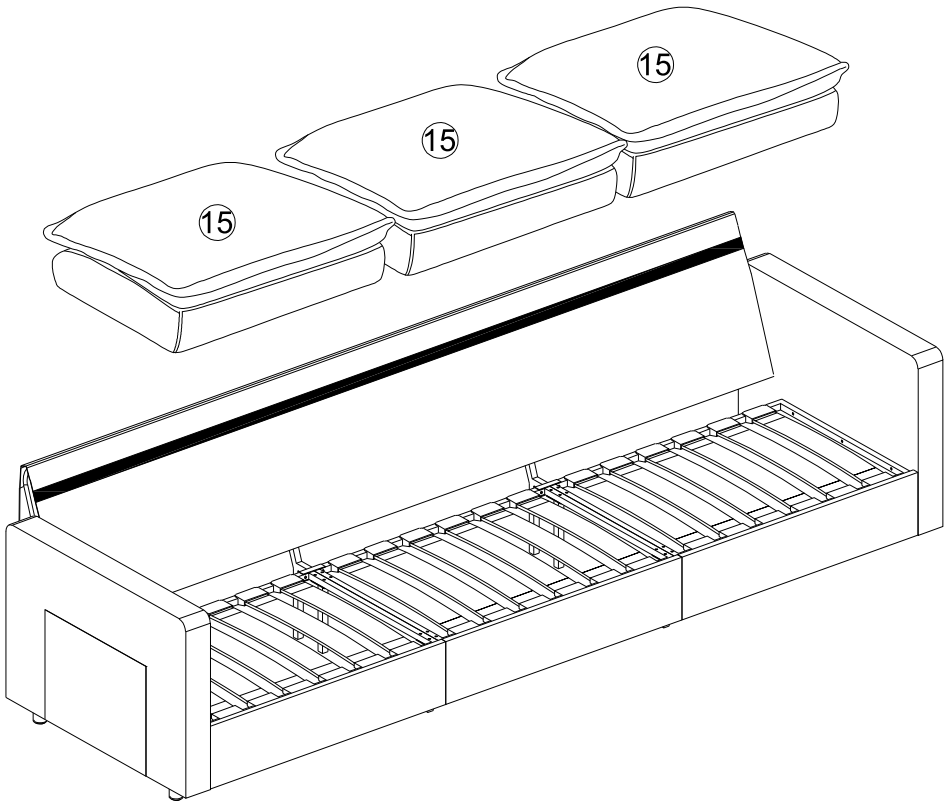

Place the cushion on the sofa with the zipper (located on the bottom) facing the rear.

Step 21：

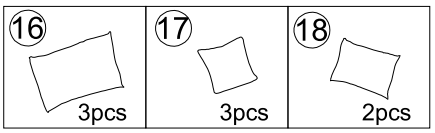

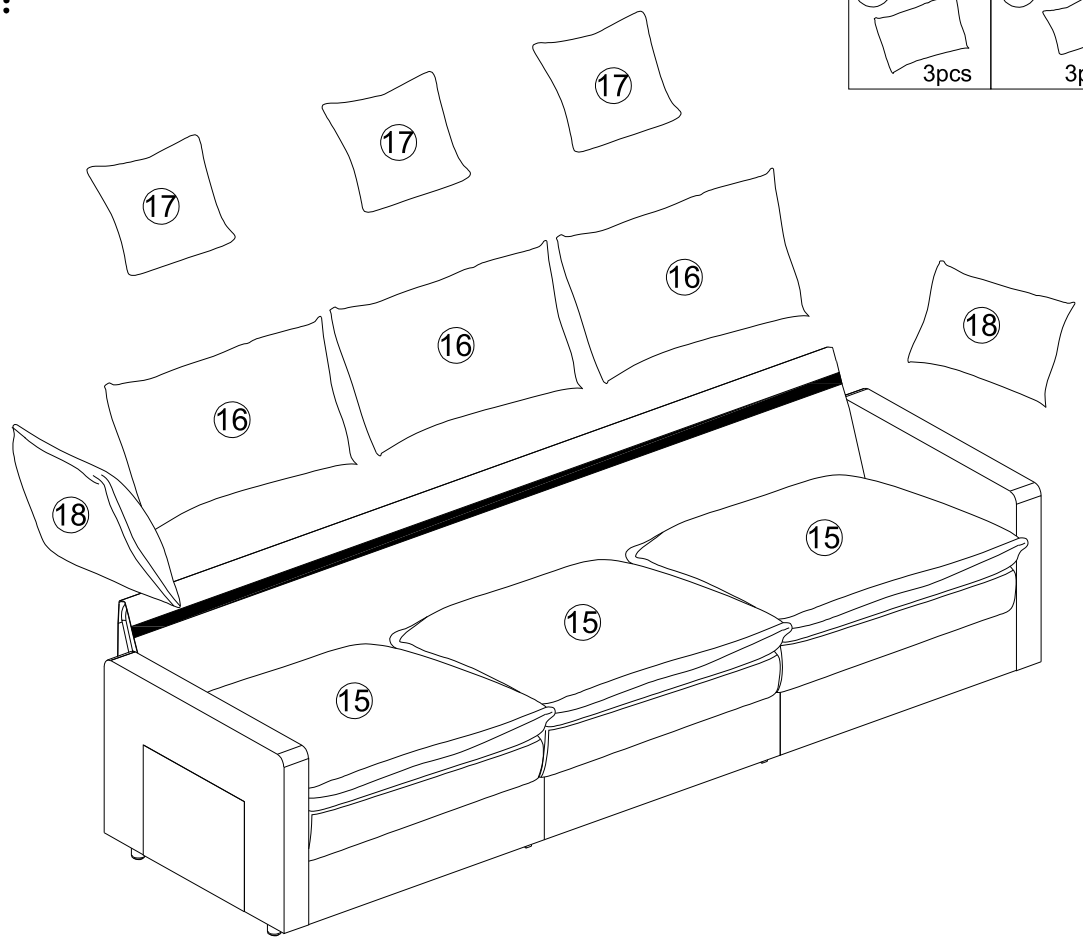

Place the back cushions on the sofa

Step 22：



Finish