


BACKLESS STOOL

HARDWARE LIST

- A (4) Allen Bolts
- B (4) Spring Washers
- C (4) Flat Washers
- D (8) Threaded Rods
- E (4) Wood Screws
- F (1) Allen Wrench

PARTS LIST

- G (1) Seat Base
- H (1) Seat Cushion
- J (1) Stool Base
- K (4) Leg Tops
- L (1) Support Ring
- M (4) Leg Ends

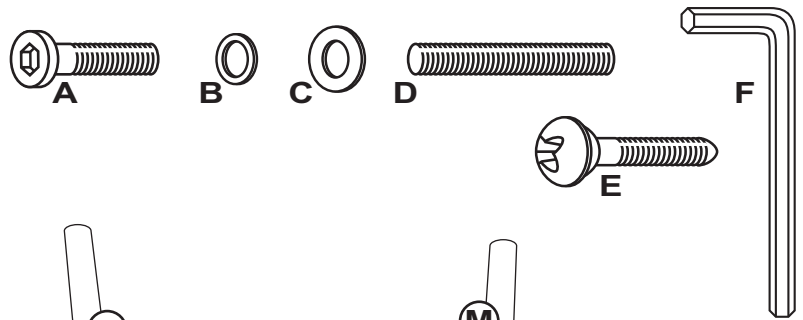

STEP 1

Begin assembly by attaching each Leg Top (K) to the bottom of the Stool Base (J) by inserting each Threaded Rod (D) into place and screwing each piece together. Tighten by hand only.

STEP 2

Next, attach the Support Ring (L) to the bottom of each Leg Top (K) by inserting each Threaded Rod (D) into place and screwing both the Leg Top (K) and the Leg End (M) together. Tighten by hand only.

STEP 3

Attach the Seat Cushion (H) to the Seat Base (G) using 4 Wood Screws to secure in place. Tighten all screws only using a phillips head screwdriver (not included with hardware).

STEP 4

Finally, attach the Seat Base (G) to the Stool Base (J) by inserting 4 Allen Bolts (A), 4 Spring Washers (B) & 4 Flat Washers (C) through the crossbars and into the swivel metal plate. Tighten all bolts using the Allen Wrench (F) provided. The assembly is now complete.

