














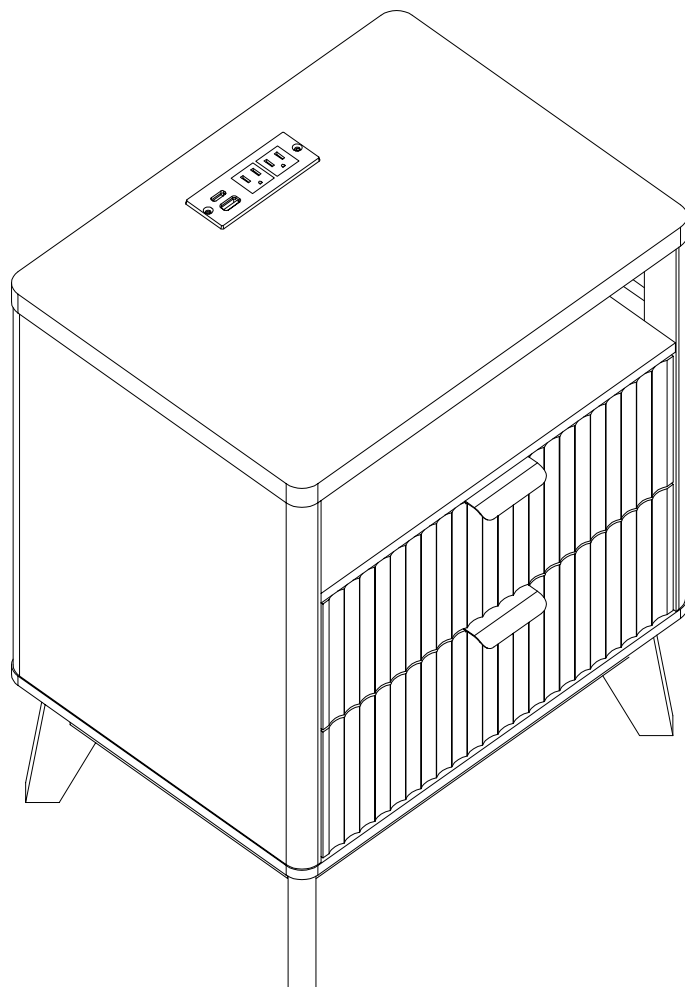



WF-056FNS

WF-056FNS ASSEMBLY INSTRUCTION


THANKS for buying our products,read it carefully before installation(Attention:Don't tighten the screws before all screws are in place.). If the screws and holes don't match.Pls carefully check whether there is an error or loosen some associated screws to rectify.Thanks for your patience!

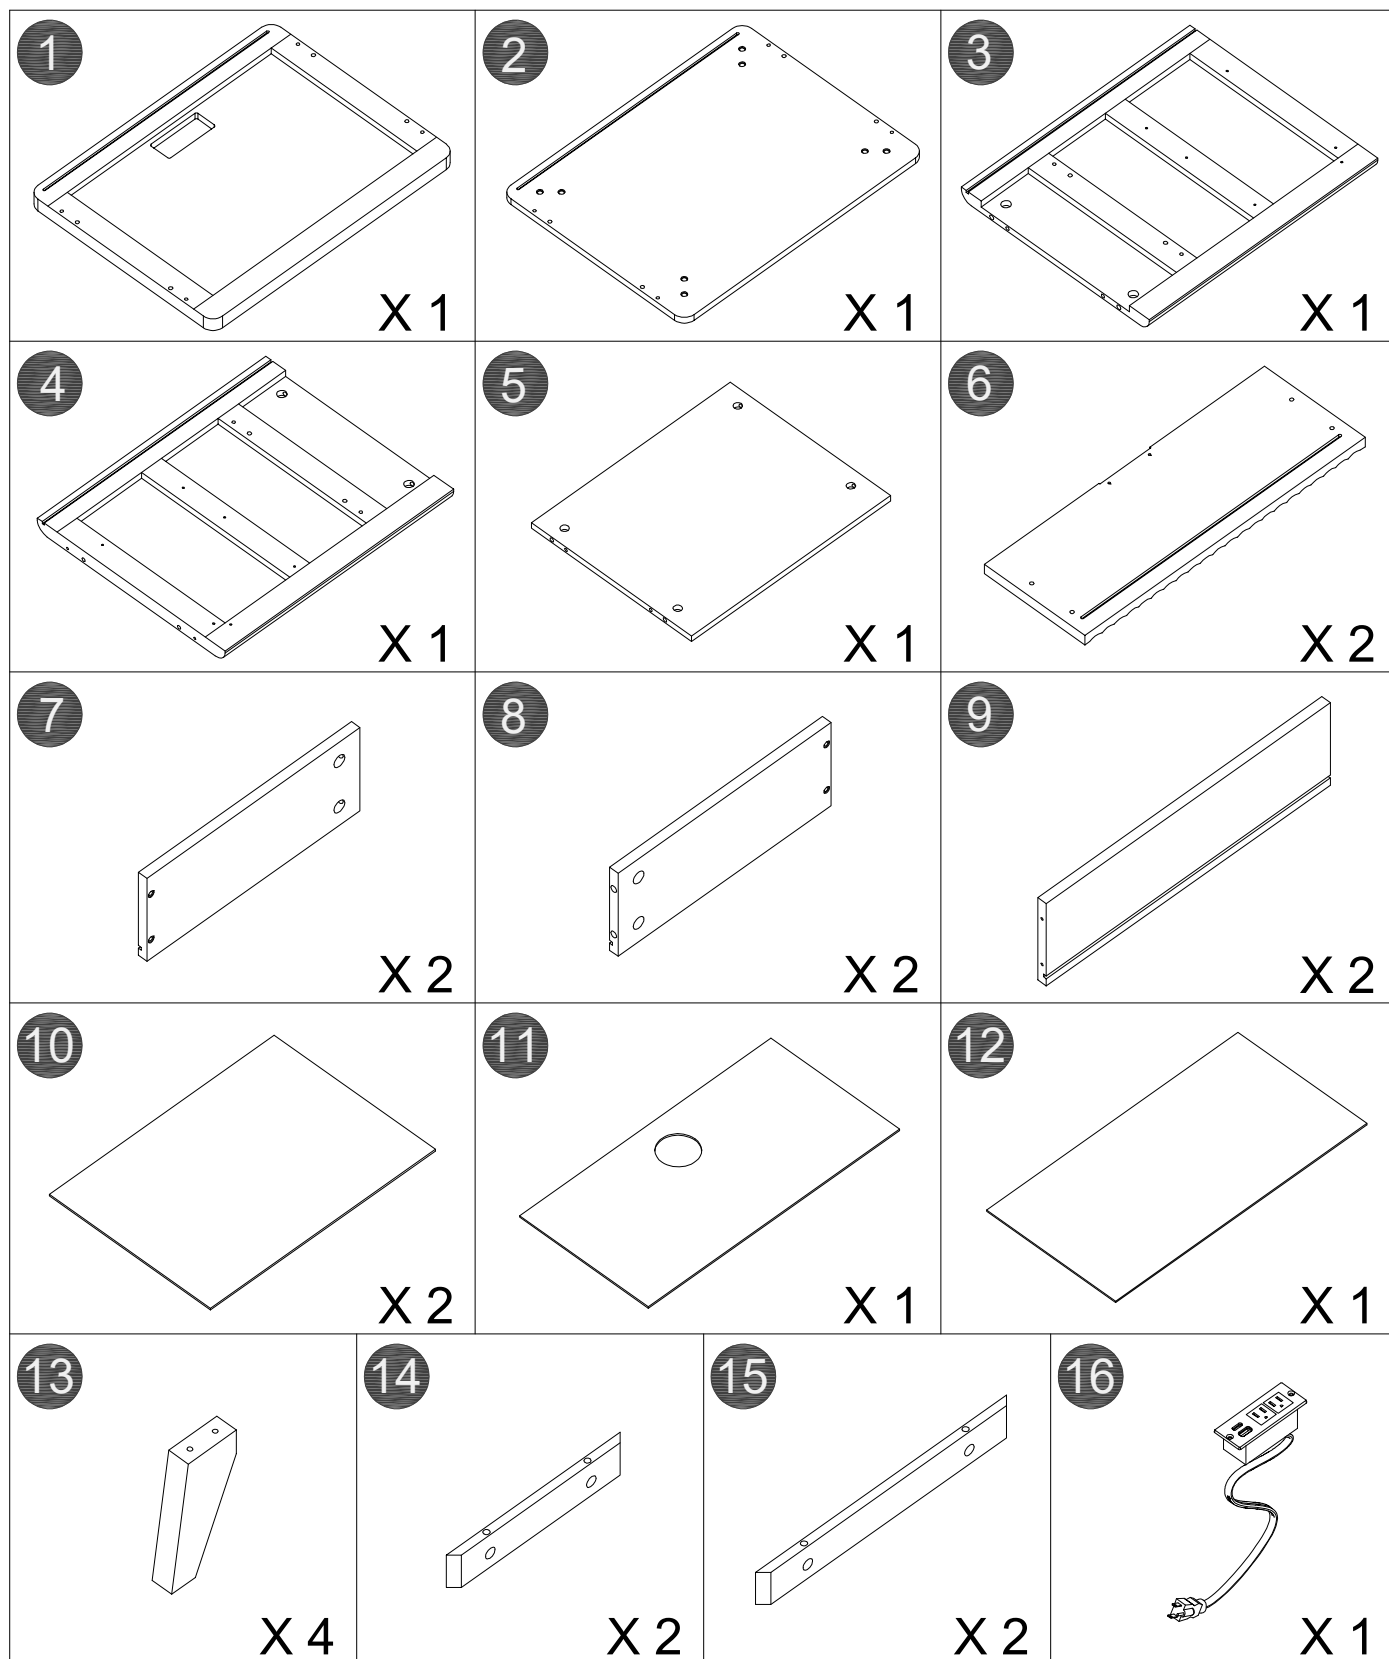

A1 X 2 	A2 X 2 	B1 X 2 
B2 X 2 	C X 36  M3.5x12mm	D X24  M6x35mm
E X 24  Φ15mm	F X 12  Φ6x30mm	G X 8  M7x38mm
H X 4  M5x40mm	I X 4  EVA	J X10  M4x40mm
K X 2 	L X 8 	M X 1  4#
N X 20  Ø20mm	O X 2 	P X 2 

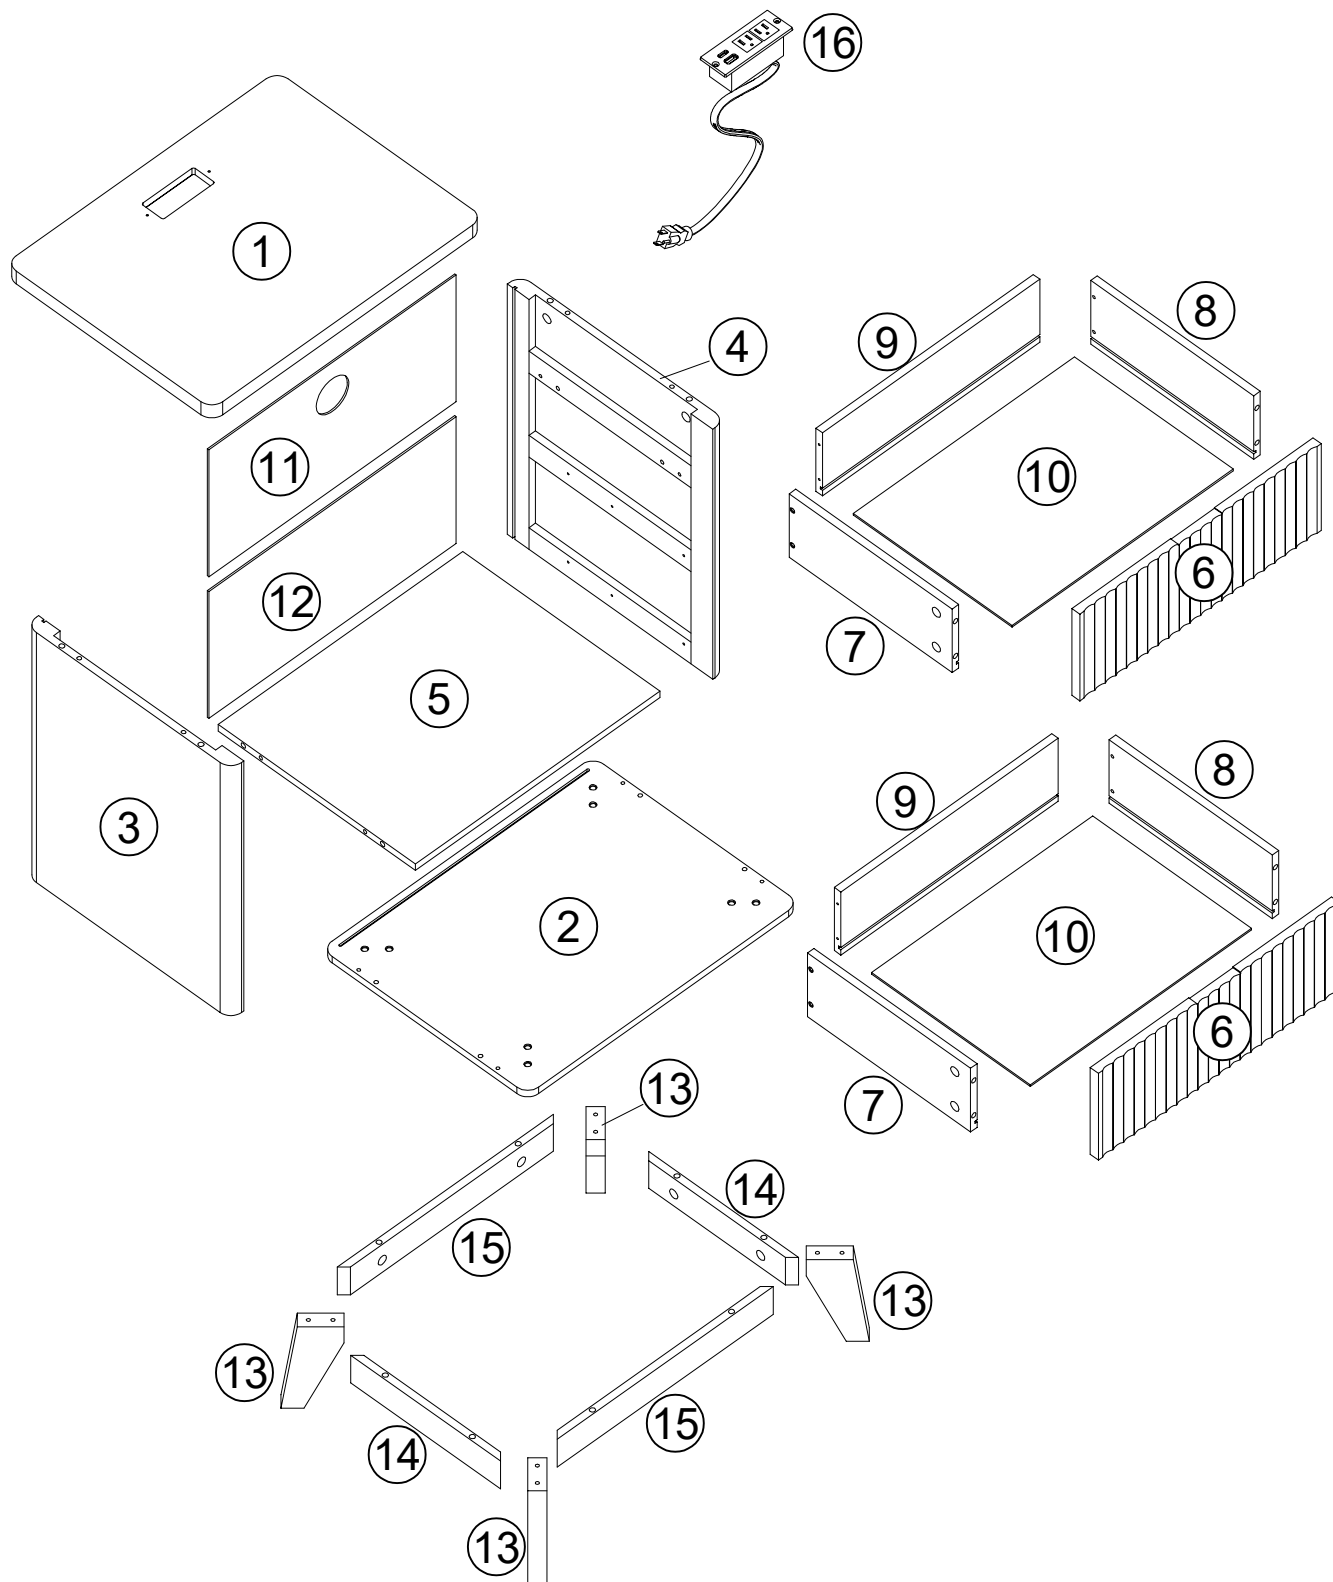


STEP 1

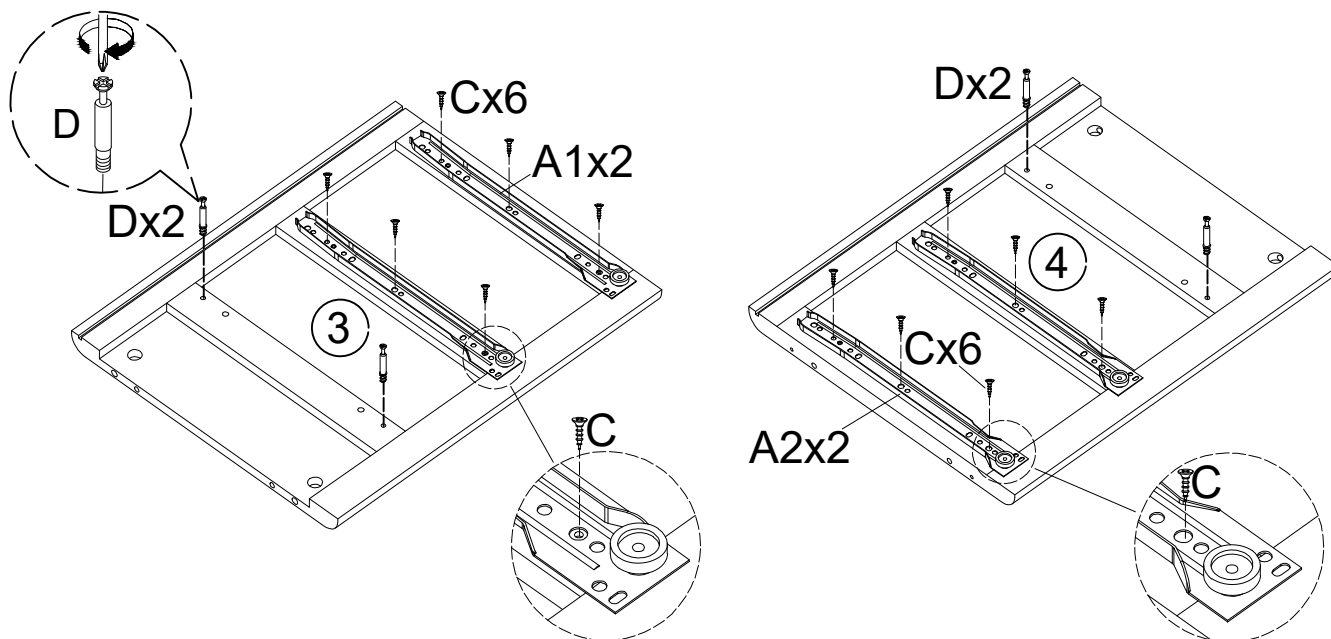

The holes on the 3&4 board are tun nail holes for adding stability.


A1	x2	A2	x2	D	x4	C	x12
				M6x35mm		M3.5x12mm	

STEP 2

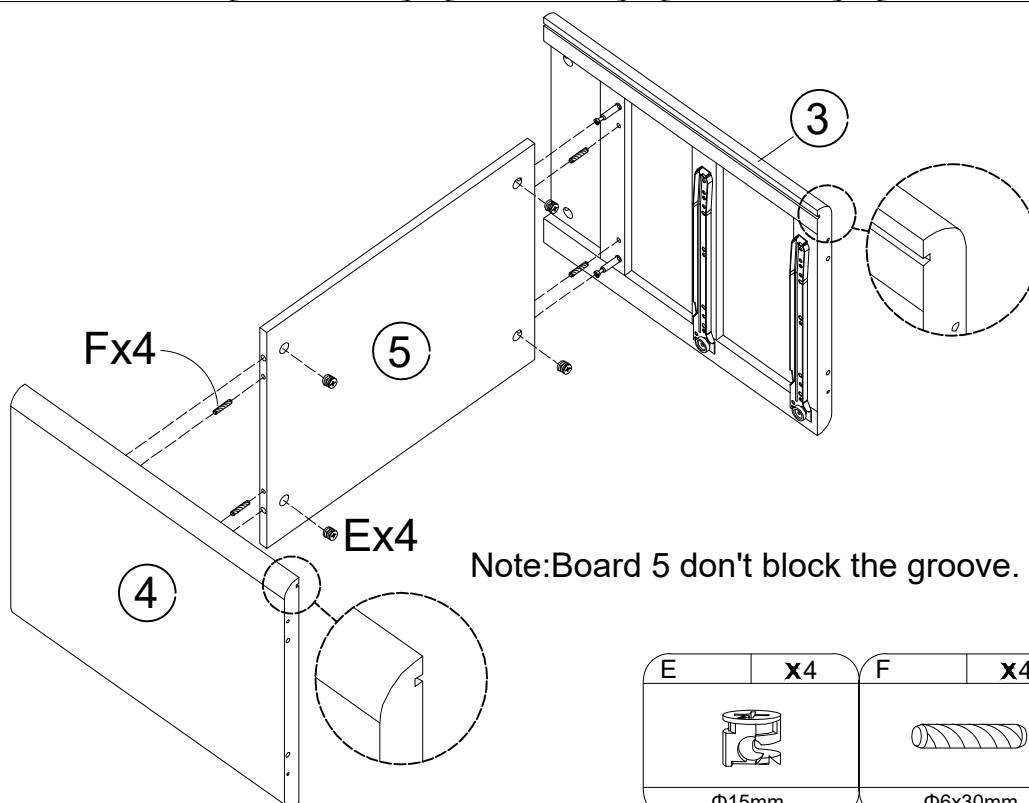


E	x4	F	x4
Φ15mm		Φ6x30mm	

STEP 3

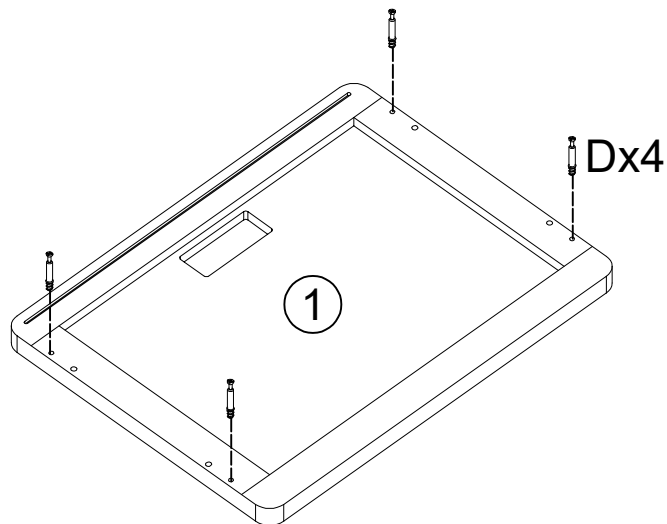


D	x4
M6x35mm	

STEP 4



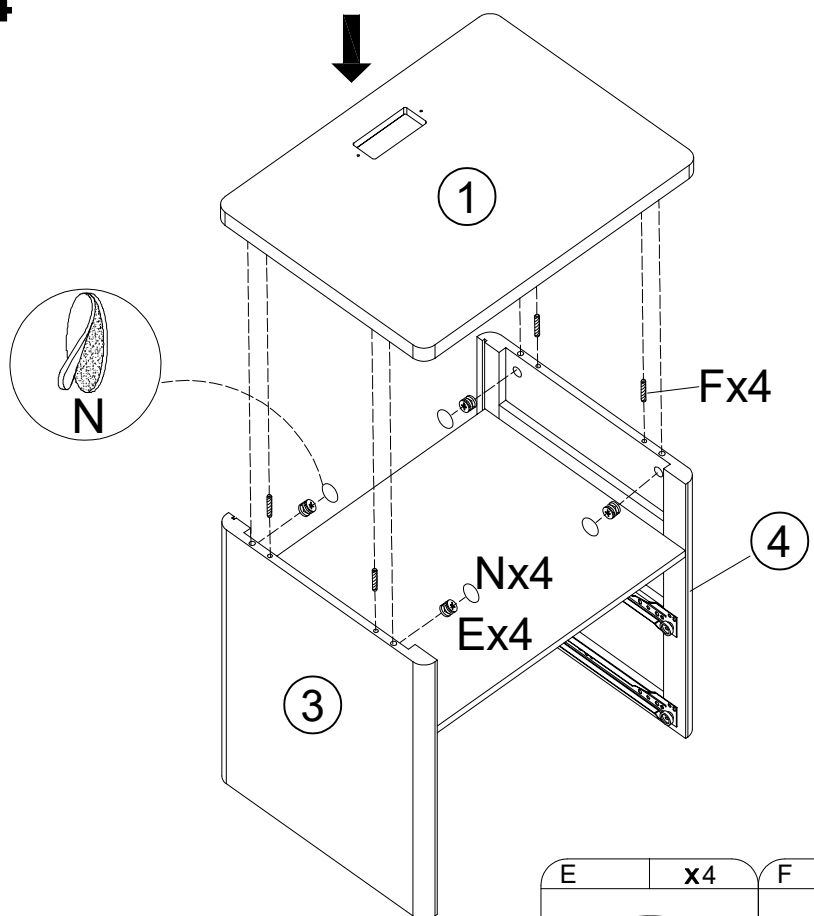


E	x4	F	x4	N	x4
Φ15mm		Φ6x30mm		Φ20mm	

STEP 5

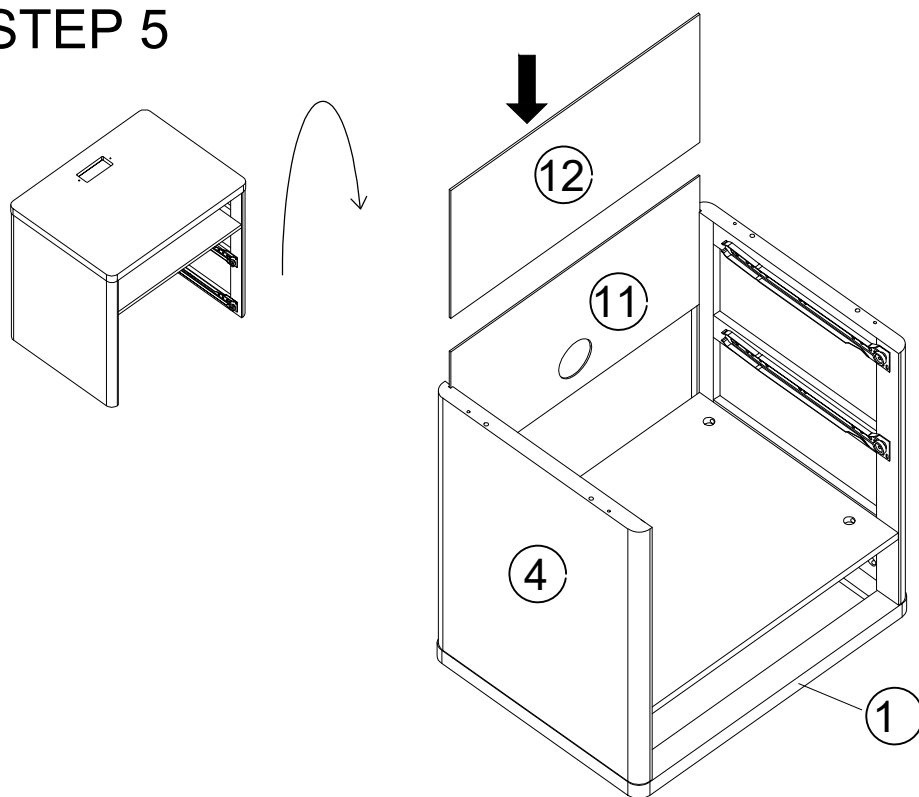


STEP 6

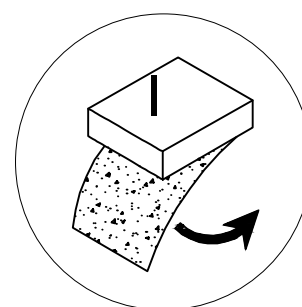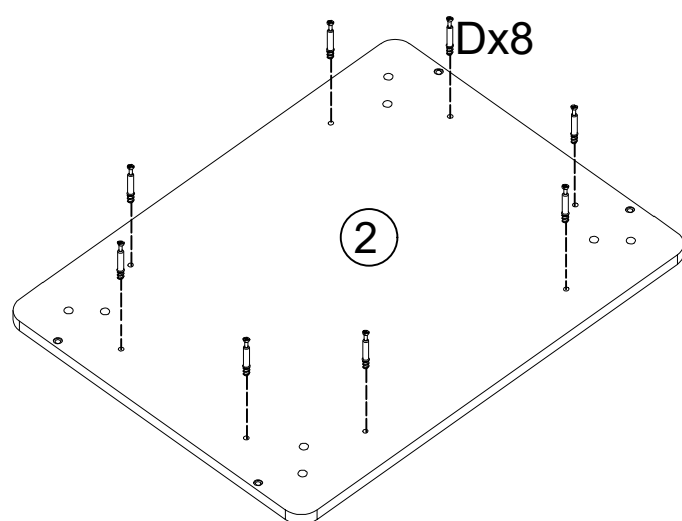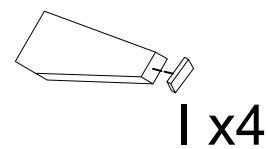
**13 x4****1 x4**

D	x8	I	x4
			
M6x35mm		EVA	


STEP 7

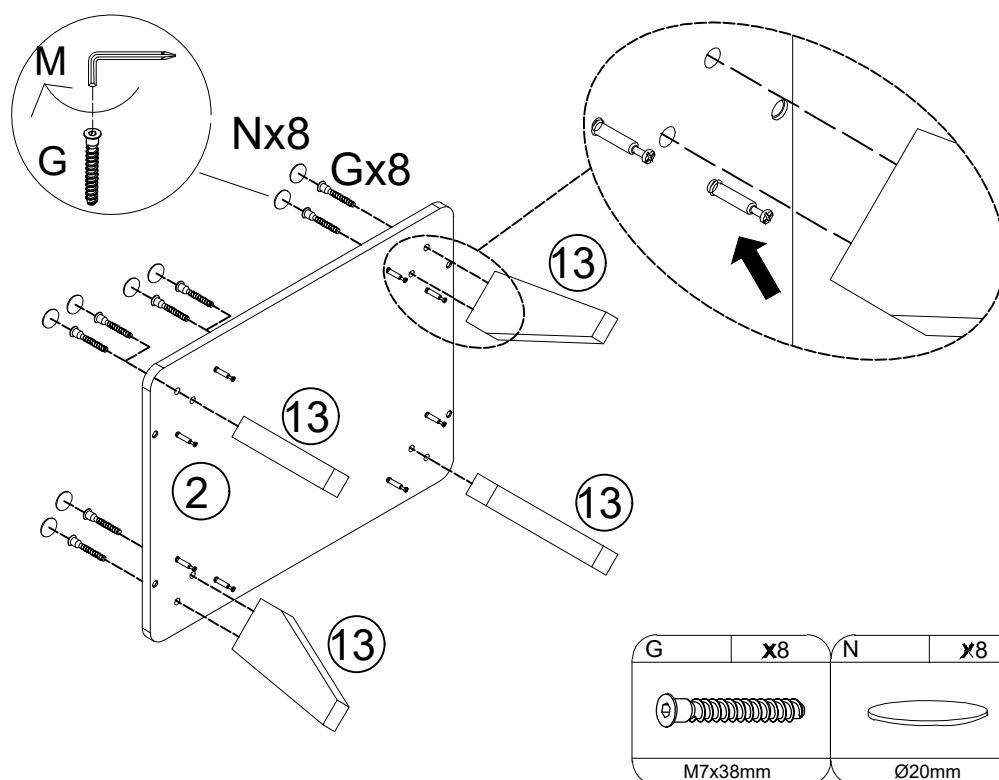

STEP 8

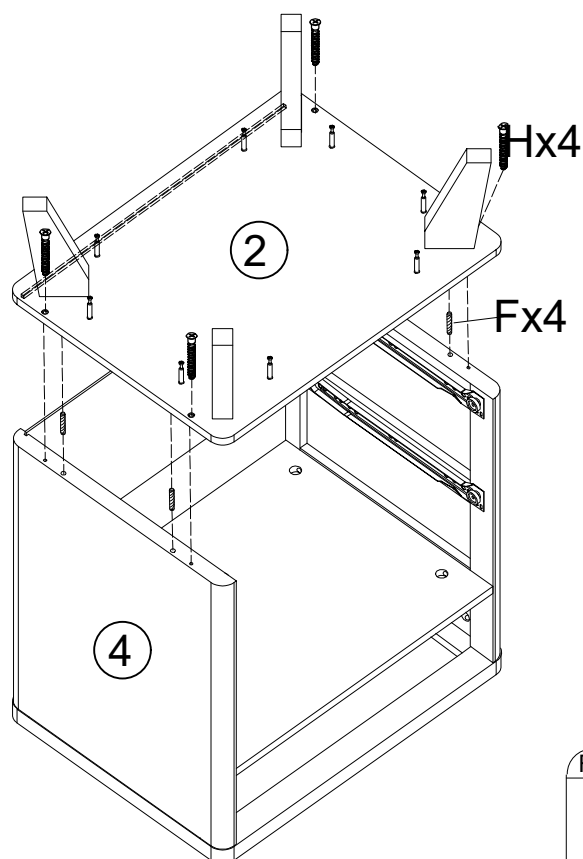


STEP 9

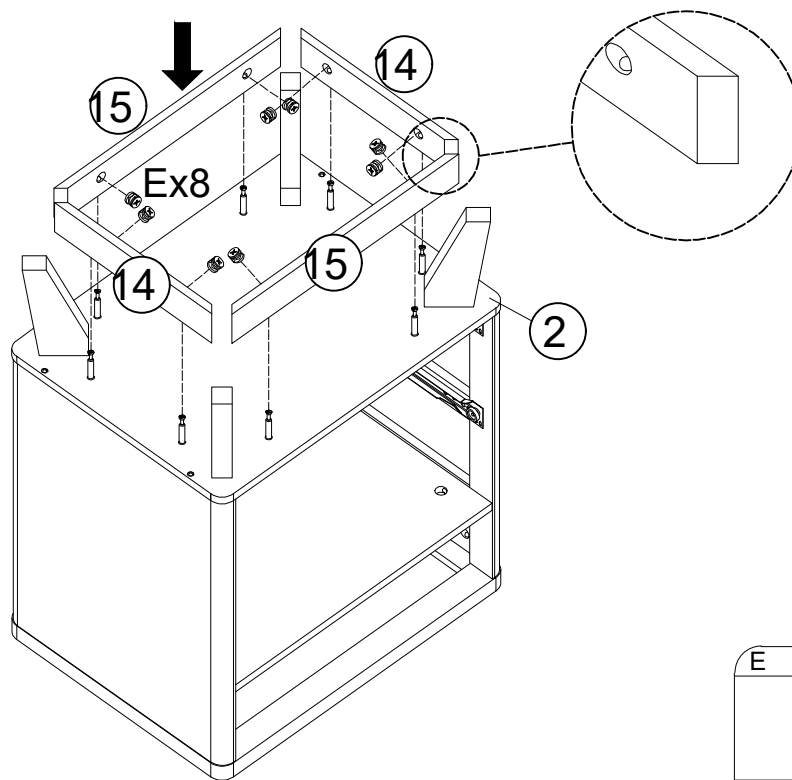


E	x8
Φ15mm	





STEP 10

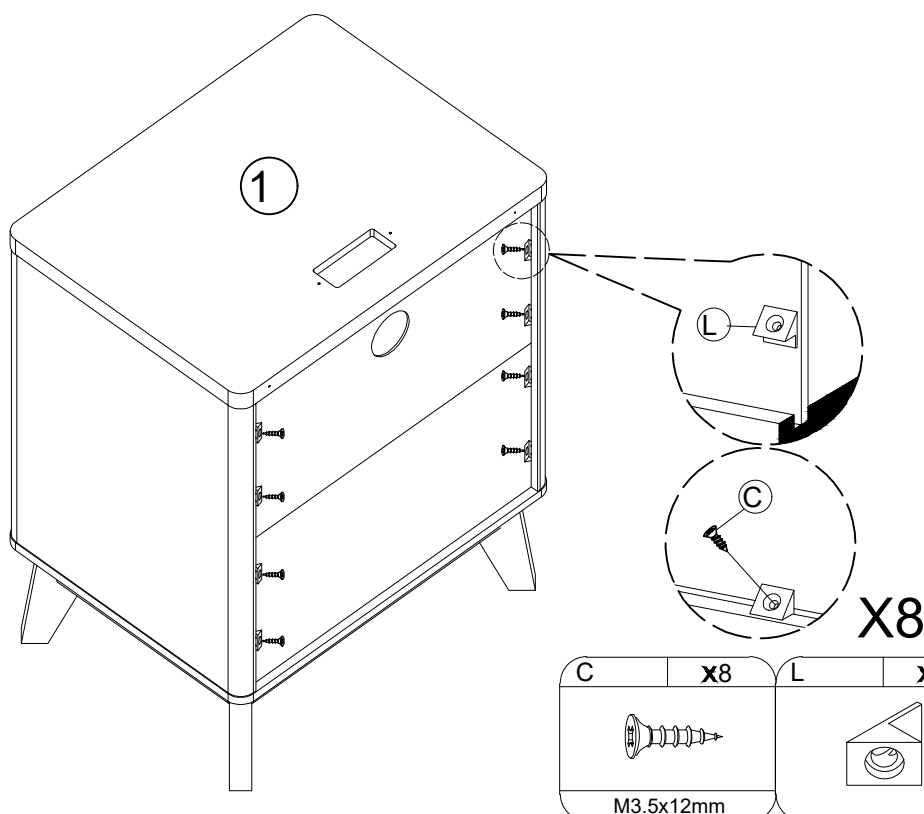


C	x8	L	x8
M3.5x12mm			

STEP 11

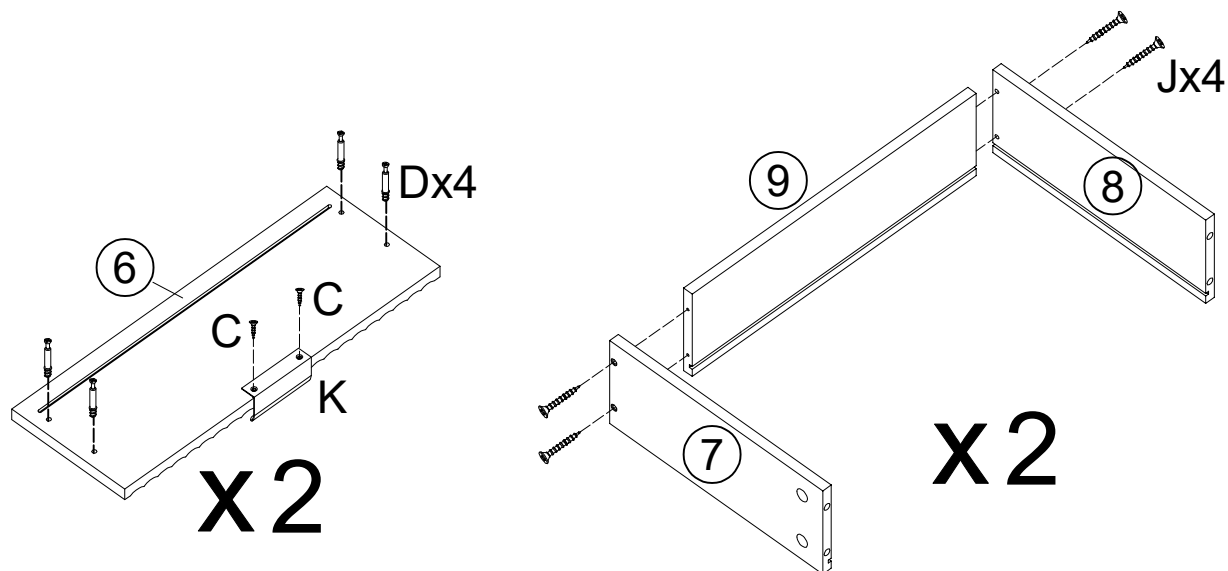


D	x8	C	x4	J	x8	K	x2
							
M6x35mm		M3.5x12mm		M4x40mm			

STEP 12

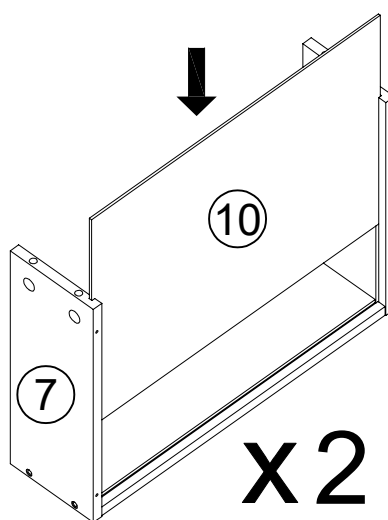



STEP 13

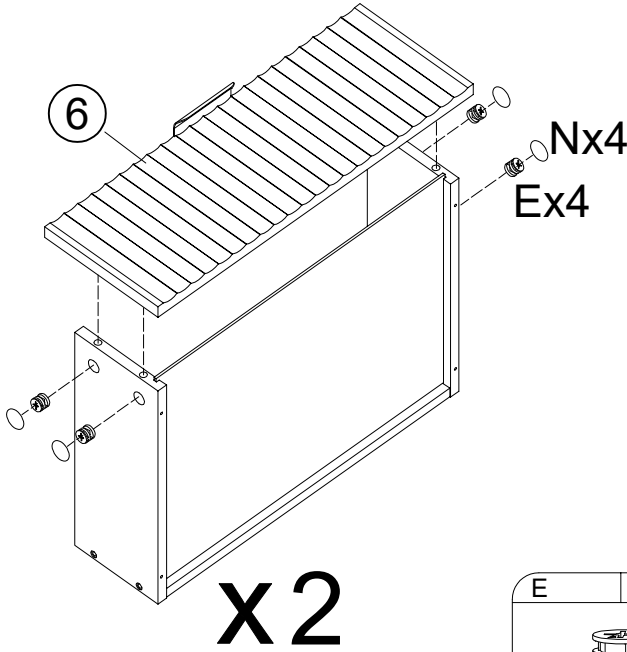


E	x8	N	x8
			
Φ15mm		Φ20mm	

STEP 14


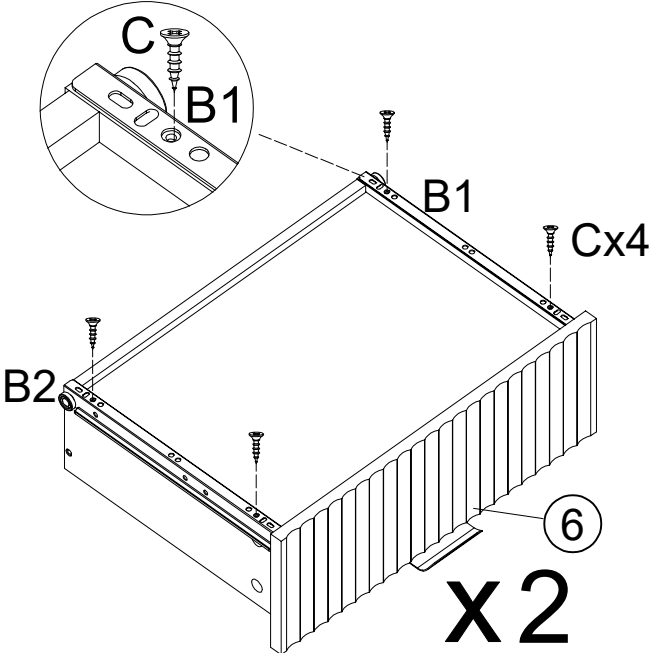


C	x8	B1	x2	B2	x2
					
M3.5x12mm					


STEP 15

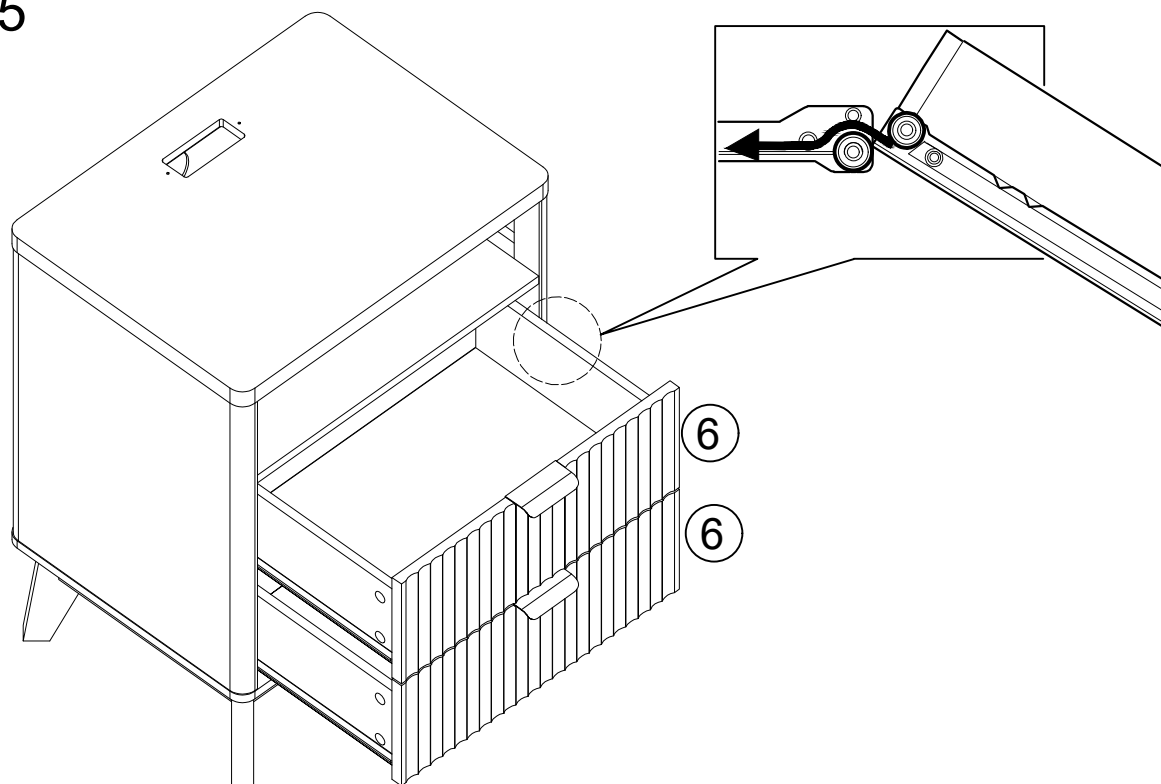


STEP 16

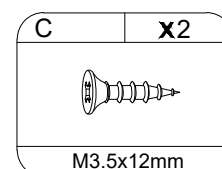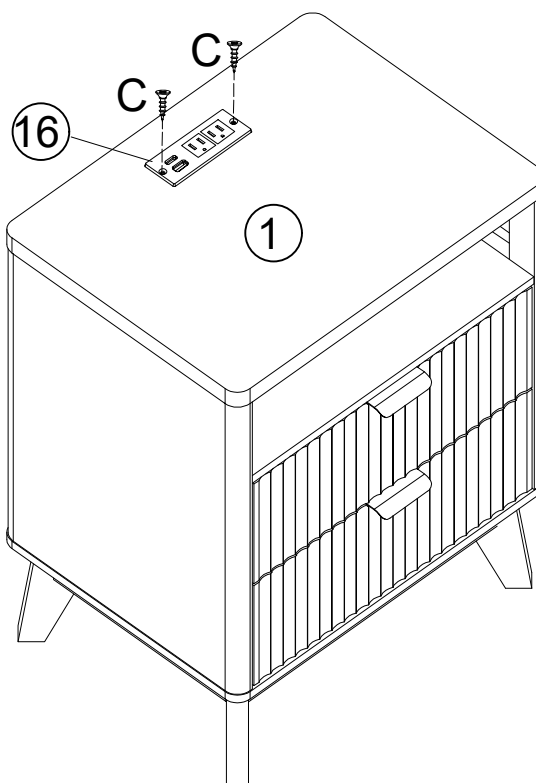


STEP 17

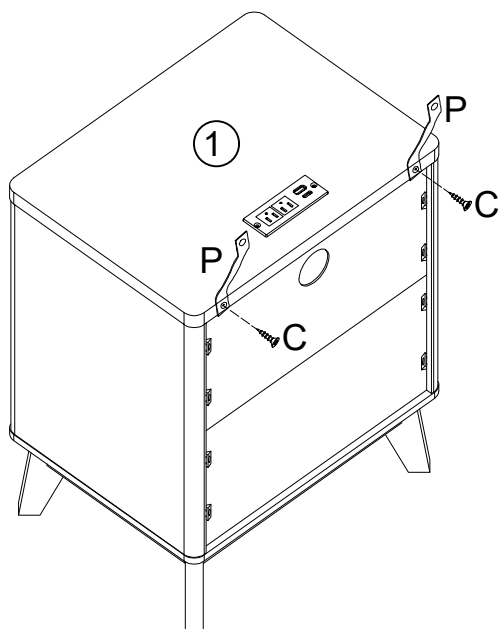

C	x2	P	x2
			
M3.5x12mm			

STEP 18

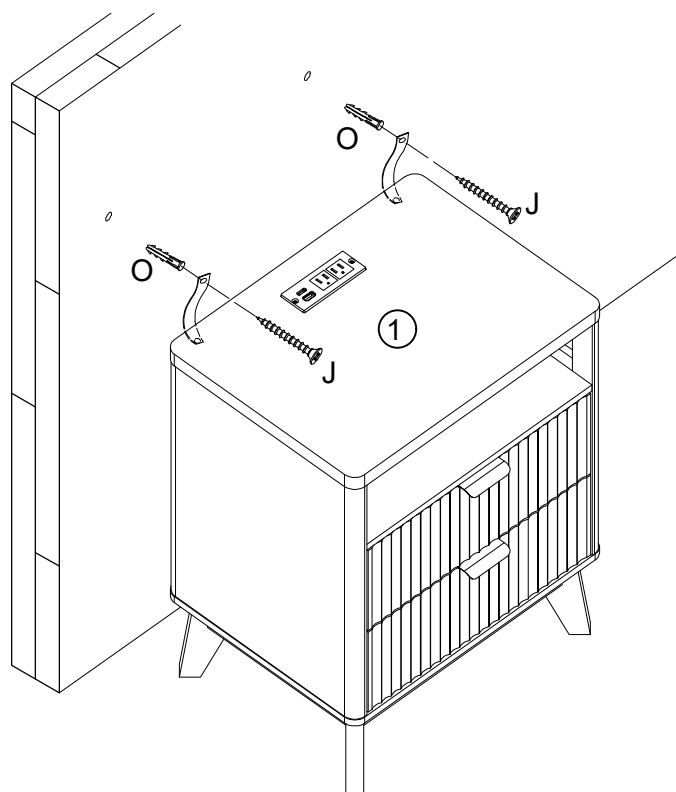

O	x2	J	x2
